

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Video Projector
Manufacturer: Canon
Firmware Version: 00.020100_23552
Model(s): 4K600STZ

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.2.3

Version History

Module Version	Date	Notes
1_0_0_0	2/24/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.connectionCounter = 5

Control Commands, States, and Qualifiers:

AspectRatio	'Auto'	'Real'	
AudioMute	'On'	'Off'	
AutoImage	None		
Freeze	'On'	'Off'	
Input	'HDMI 1' 'DVI 1' 'DVI 4' 'DVI 1x4'	'HDMI 2' 'DVI 2' 'DVI 1x2'	'HDMI 1x2' 'DVI 3' 'DVI 2x2'
Keypad	'0' – '9'		
MenuNavigation	'Menu' 'Left' 'Exit'	'Up' 'Right'	'Down' 'Ok'
Power	'On'	'Off'	
VideoMute	'On'	'Off'	
Volume	0 to 20 in steps of 1		

Status Available:

AspectRatio	'Auto'	'Real'	
AudioMute	'On'	'Off'	
ConnectionStatus	'Connected'	'Disconnected'	
DeviceStatus	'No Error' 'Cooling Fan Error' 'Zoom Error' 'Lens Shift Connector Error'	'Temperature Error' 'Power Supply Error' 'Focus Error'	'Light Error' 'Air Filter Error' 'Lens Shift Error'
Freeze	'On'	'Off'	
Input	'HDMI 1' 'DVI 1' 'DVI 4' 'DVI 1x4'	'HDMI 2' 'DVI 2' 'DVI 1x2'	'HDMI 1x2' 'DVI 3' 'DVI 2x2'
OperationHours	'String'		
Power	'On' 'Cooling Down'	'Off'	'Warming Up'
VideoMute	'On'	'Off'	
Volume	0 to 20 in steps of 1		

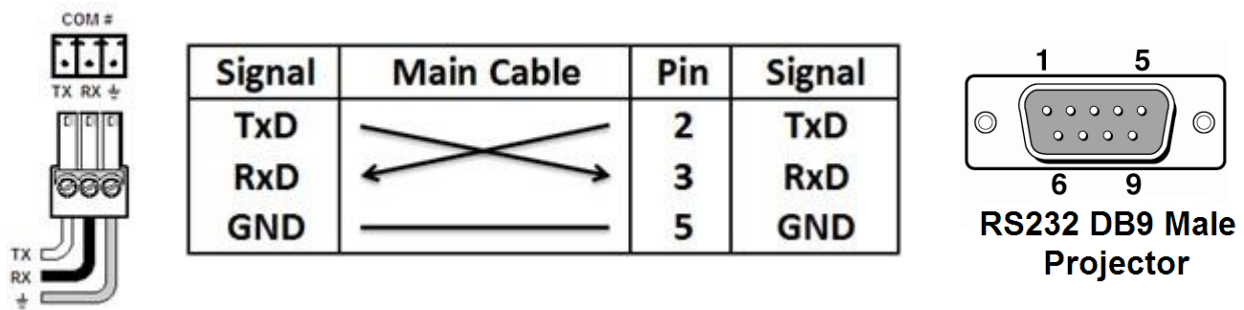
Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device:**Serial communication:**

Port Type: RS-232
Baud Rate: 19200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram**General Notes:**

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type: Ethernet

Default Port: 33336

Logon Credentials No

Supported:

Multi-Connection No

Capabilities:

Port Changeability: No

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device:

For Ethernet control, the network function setting must be On and network standby settings should be set to Normal.

Appendix A. Set Commands

Aspect Ratio Auto	ASPECT=AUTO\x0D
Aspect Ratio Real	ASPECT=TRUE\x0D
Audio Mute Off	MUTE=OFF\x0D
Audio Mute On	MUTE=ON\x0D
Auto Image None	AUTOPC\x0D
Freeze Off	FREEZE=OFF\x0D
Freeze On	FREEZE=ON\x0D
Input DVI 1	INPUT=D-RGB1\x0D
Input DVI 1x2	INPUT=D-RGB1X2\x0D
Input DVI 1x4	INPUT=D-RGB1X4\x0D
Input DVI 2	INPUT=D-RGB2\x0D
Input DVI 2x2	INPUT=D-RGB2X2\x0D
Input DVI 3	INPUT=D-RGB3\x0D
Input DVI 4	INPUT=D-RGB4\x0D
Input HDMI 1	INPUT=HDMI1\x0D
Input HDMI 1x2	INPUT=HDMI1X2\x0D
Input HDMI 2	INPUT=HDMI2\x0D
Keypad 0	RC=NUM_0\x0D
Keypad 1	RC=NUM_1\x0D
Keypad 2	RC=NUM_2\x0D
Keypad 3	RC=NUM_3\x0D
Keypad 4	RC=NUM_4\x0D
Keypad 5	RC=NUM_5\x0D
Keypad 6	RC=NUM_6\x0D
Keypad 7	RC=NUM_7\x0D
Keypad 8	RC=NUM_8\x0D
Keypad 9	RC=NUM_9\x0D
Menu Navigation Down	RC=DOWN\x0D
Menu Navigation Exit	RC=EXIT\x0D
Menu Navigation Left	RC=LEFT\x0D
Menu Navigation Menu	RC=MENU\x0D
Menu Navigation Ok	RC=OK\x0D
Menu Navigation Right	RC=RIGHT\x0D
Menu Navigation Up	RC=UP\x0D
Power On	POWER=ON\x0D
Video Mute Off	BLANK=OFF\x0D
Video Mute On	BLANK=ON\x0D
Volume 0	AVOL=0\x0D
Volume 20	AVOL=20\x0D

Appendix B. Query Commands

Aspect Ratio	GET=ASPECT\x0D
Audio Mute	GET=MUTE\x0D
Device Status	GET=ERR\x0D
Freeze	GET=FREEZE\x0D
Input	GET=INPUT\x0D
Operation Hours	GET=PJUSGT\x0D
Power	GET=POWER\x0D
Video Mute	GET=BLANK\x0D
Volume	GET=AVOL\x0D