

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Video Projector
Manufacturer: Canon
Firmware Version: 01.020000
Model(s): WUX6010

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.1.1

Version History

Module Version	Date	Notes
1_0_3_0	12/16/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.connectionCounter = 5

Control Commands, States, and Qualifiers:

AspectRatio	'Auto'	'4:3'	'16:9'
	'16:10'	'Zoom'	'True Size'
AudioMute	'On'	'Off'	
AutoImage	None		
Blank	'On'	'Off'	
FocusContinuous	'Stop'	'Far'	'Near'
FocusStep	'Far'	'Near'	
Freeze	'On'	'Off'	
ImageMode	'Standard'	'Presentation'	'VividPhoto'
	'Photo/sRGB'	'Dynamic'	'Video'
	'Cinema'	'User 1'	'User 2'
	'User 3'	'User 4'	'User 5'
Input	'HDMI'	'Digital PC'	'Analog PC 1'
	'Analog PC 2'	'Component'	'LAN'
	'USB'	'HDBaseT'	
LampMode	'Normal'	'Eco'	
LensPosition	'Load 1'	'Load 2'	'Load 3'
MenuNavigation	'Menu On'	'Menu Off'	'Up'
	'Down'	'Right'	'Left'
	'OK'		
Power	'On'	'Off'	
Volume	0 to 20 in steps of 1		
ZoomContinuous	'Stop'	'Wide'	'Tele'
ZoomStep	'Wide'	'Tele'	

Status Available:

AspectRatio	'Auto'	'4:3'	'16:9'
	'16:10'	'Zoom'	'True Size'
AudioMute	'On'	'Off'	
Blank	'On'	'Off'	
ConnectionStatus	'Connected'	'Disconnected'	
DeviceStatus	'No Error'	'Temperature Error'	'Lamp Error'
	'Lamp Cover Error'	'Cooling Fan Error'	'Power Supply Error'
	'Air Filter Error'		
Freeze	'On'	'Off'	
ImageMode	'Standard'	'Presentation'	'VividPhoto'
	'Photo/sRGB'	'Dynamic'	'Video'
	'Cinema'	'User 1'	'User 2'
	'User 3'	'User 4'	'User 5'
Input	'HDMI'	'Digital PC'	'Analog PC 1'
	'Analog PC 2'	'Component'	'LAN'
	'USB'	'HDBaseT'	
LampMode	'Normal'	'Eco'	
LampUsage	Hours		
Power	'On'	'Off'	'Warming Up'
	'Cooling Down'		
SignalStatus	'No Signal'	'Displaying'	'Setting'
Volume	0 to 20 in steps of 1		

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable


Notes for the Device:

Serial communication:


Port Type: RS-232
Baud Rate: 19200
Data Bits: 8

Parity: None
Stop Bits: Two
Flow Control: None

Pin Assignments Diagram

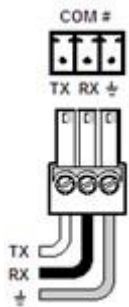

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

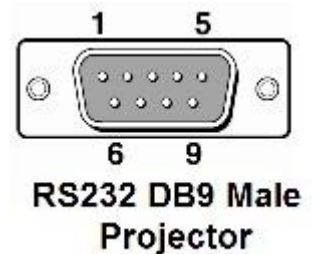

General Notes:

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type:	Ethernet
Default Port:	33336
Logon Credentials Supported:	No
Multi-Connection Capabilities:	No
Port Changeability:	No

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device:

Appendix A. Set Commands

Aspect Ratio 16:10	ASPECT=16:10\x0D
Aspect Ratio 16:9	ASPECT=16:9\x0D
Aspect Ratio 4:3	ASPECT=4:3\x0D
Aspect Ratio Auto	ASPECT=AUTO\x0D
Aspect Ratio True Size	ASPECT=TRUE\x0D
Aspect Ratio Zoom	ASPECT=ZOOM\x0D
Audio Mute Off	MUTE=OFF\x0D
Audio Mute On	MUTE=ON\x0D
Auto Image None	RC=AUTOPC\x0D
Blank Off	BLANK=OFF\x0D
Blank On	BLANK=ON\x0D
Focus Continuous Far	FCONTDRV=FAR\x0D
Focus Continuous Near	FCONTDRV=NEAR\x0D
Focus Continuous Stop	FCONTDRV=STOP\x0D
Focus Step Far	FSTEPDRV=FAR\x0D
Focus Step Near	FSTEPDRV=NEAR\x0D
Freeze Off	FREEZE=OFF\x0D
Freeze On	FREEZE=ON\x0D
Image Mode Cinema	IMAGE=CINEMA\x0D
Image Mode Dynamic	IMAGE=DYNAMIC\x0D
Image Mode Photo/sRGB	IMAGE=PHOTO_SRGB\x0D
Image Mode Presentation	IMAGE=PRESENTATION\x0D
Image Mode Standard	IMAGE=STANDARD\x0D
Image Mode User 1	IMAGE=USER_1\x0D
Image Mode User 2	IMAGE=USER_2\x0D
Image Mode User 3	IMAGE=USER_3\x0D
Image Mode User 4	IMAGE=USER_4\x0D
Image Mode User 5	IMAGE=USER_5\x0D
Image Mode Video	IMAGE=VIDEO\x0D
Image Mode VividPhoto	IMAGE=VIVID_PHOTO\x0D
Input Analog PC 1	INPUT=A-RGB1\x0D
Input Analog PC 2	INPUT=A-RGB2\x0D
Input Component	INPUT=COMP\x0D
Input Digital PC	INPUT=D-RGB\x0D
Input HDBaseT	INPUT=HDBT\x0D
Input HDMI	INPUT=HDMI\x0D
Input LAN	INPUT=LAN\x0D
Input USB	INPUT=USB\x0D
Lamp Mode Eco	LAMP=ECO\x0D
Lamp Mode Normal	LAMP=FULL\x0D
Lens Position Load 1	LPOSLD=1\x0D
Lens Position Load 2	LPOSLD=2\x0D
Lens Position Load 3	LPOSLD=3\x0D
Menu Navigation Down	RC=DOWN\x0D
Menu Navigation Left	RC=LEFT\x0D
Menu Navigation Menu Off	RC=EXIT\x0D
Menu Navigation Menu On	RC=MENU\x0D

Menu Navigation OK	RC=OK\x0D
Menu Navigation Right	RC=RIGHT\x0D
Menu Navigation Up	RC=UP\x0D
Power Off	POWER=OFF\x0D
Power On	POWER=ON\x0D
Volume 0	AVOL=0\x0D
Zoom Continuous Stop	ZCONTDRV=STOP\x0D
Zoom Continuous Tele	ZCONTDRV=TELE\x0D
Zoom Continuous Wide	ZCONTDRV=WIDE\x0D
Zoom Step Tele	ZSTEPDRV=TELE\x0D
Zoom Step Wide	ZSTEPDRV=WIDE\x0D

Appendix B. Query Commands

Aspect Ratio None	GET=ASPECT\x0D
Audio Mute None	GET=MUTE\x0D
Blank None	GET=BLANK\x0D
Device Status None	GET=ERR\x0D
Freeze None	GET=FREEZE\x0D
Image Mode None	GET=IMAGE\x0D
Input None	GET=INPUT\x0D
Lamp Mode None	GET=LAMP\x0D
Lamp Usage None	GET=LMPT\x0D
Power None	GET=POWER\x0D
Signal Status None	GET=SIGNALSTATUS\x0D
Volume None	GET=AVOL\x0D