

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Video Projector
Manufacturer: Canon
Firmware Version: 01.070300
Model(s): WUX5000, WUX4000, WX6000, SX6000, WUX6000

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.06.0000-b010	2.01.0002-b005	1.4.0

Version History

Module Version	Date	Notes
1_3_1_0	6/28/2017	Updated firmware notes. Based on firmware 01.070300 Stop bit is now 2.
1_3_0_0	2/7/2017	Added Input states: Analog-PC2, LAN, and USB for model WUX6000. Removed Aspect Ratio state: 'Full' from model WUX6000.
1_2_2_1	7/25/2016	Update to standard.
1_2_2_0	2/26/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.connectionCounter = 5
- This driver requires the firmware (01.070300) listed above to work properly. Contact the Canon customer service center at 1-800-OKCANON for information about upgrading to the latest firmware.

Control Commands, States, and Qualifiers:

AspectRatio	'Auto' '16:10' ¹ 'Full' ²	'4:3' 'Zoom'	'16:9' 'True'
AudioMute	'On'	'Off'	
AutoImage	None		
ControlMode	'Local'	'Remote'	
ExecutiveMode	'KeyPad'	'Remote'	'Off'
Freeze	'On'	'Off'	
ImageMode	'Photo/sRGB' 'Video' 'User 2' 'User 5' 'Vivid Photo'	'DICOM Sim' 'Cinema' 'User 3' 'Standard'	'Dynamic' 'User 1' 'User 4' 'Presentation'
Input	'Digital PC' 'Analog PC-2' ¹ 'LAN' ³	'Analog PC' ² 'Component' 'USB' ³	'Analog PC-1' ¹ 'HDMI'
LampMode	'Normal'	'Silent'	
MenuNavigation	'Menu' 'Left'	'Up' 'Right'	'Down' 'Enter'
Power	'On'	'Off'	
VideoMute	'On'	'Off'	
Volume	0 to 20 in steps of 1		

¹ Only available for SX6000, WX6000, and WUX6000.

² Only available for WUX4000 and WUX5000.

³ Only available for WUX6000.

Status Available:

AspectRatio	'Auto' '16:10' ¹ 'Full' ²	'4:3' 'Zoom'	'16:9' 'True'
AudioMute	'On'	'Off'	
ConnectionStatus	'Connected'	'Disconnected'	
ControlMode	'Local'	'Remote'	
DeviceStatus	'Normal' 'Lamp Cover Error' 'Air Filter Error' 'Lens Shift Error'	'Temperature Error' 'Cooling Fan Error' 'Zoom Error' 'Lens Connector Error'	'Lamp Error' 'Power Supply Error' 'Focus Error'
ExecutiveMode	'KeyPad'	'Remote'	'Off'
Freeze	'On'	'Off'	
ImageMode	'Photo/sRGB' 'Video' 'User 2' 'User 5' 'Vivid Photo'	'DICOM Sim' 'Cinema' 'User 3' 'Standard'	'Dynamic' 'User 1' 'User 4' 'Presentation'
Input	'Digital PC' 'Analog PC-2' ¹ 'LAN' ³	'Analog PC' ² 'Component' 'USB' ³	'Analog PC-1' ¹ 'HDMI'
LampMode	'Normal'	'Silent'	
LampUsage	Hours		
Power	'On' 'Cooling'	'Off' 'Standby'	'Warming'
SignalStatus	'No Signal'	'Displaying Signal'	'Processing'
VideoMute	'On'	'Off'	
Volume	0 to 20 in steps of 1		

¹ Only available for SX6000, WX6000, and WUX6000.

² Only available for WUX4000 and WUX5000.

³ Only available for WUX6000.

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable


Notes for the Device:

Serial communication:


Port Type: RS-232
Baud Rate: 19200
Data Bits: 8

Parity: None
Stop Bits: Two
Flow Control: None

Pin Assignments Diagram

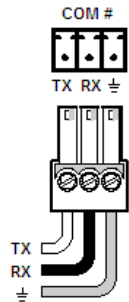

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	—	5	GND

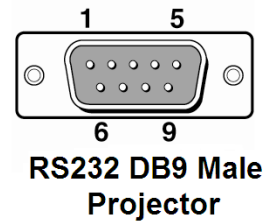

General Notes:

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type: Ethernet

Default Port: 33336

Logon Credentials No

Supported:

Multi-Connection No

Capabilities:

Port Changeability: No

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device:

Appendix A. Set Commands

Aspect Ratio 16:9	ASPECT=16:9\x0D
Aspect Ratio 16:10	ASPECT=16:10\x0D
Aspect Ratio 4:3	ASPECT=4:3\x0D
Aspect Ratio Auto	ASPECT=AUTO\x0D
Aspect Ratio Full	ASPECT=FULL\x0D
Aspect Ratio True	ASPECT=TRUE\x0D
Aspect Ratio Zoom	ASPECT=ZOOM\x0D
Audio Mute Off	MUTE=OFF\x0D
Audio Mute On	MUTE=ON\x0D
Auto Image None	AUTOPC\x0D
Control Mode Local	MODE=LOCAL\x0D
Control Mode Remote	MODE=REMOTE\x0D
Executive Mode KeyPad	KEYLOCK=MAIN\x0D
Executive Mode Off	KEYLOCK=OFF\x0D
Executive Mode Remote	KEYLOCK=RC\x0D
Freeze Off	FREEZE=OFF\x0D
Freeze On	FREEZE=ON\x0D
Image Mode Cinema	IMAGE=CINEMA\x0D
Image Mode DICOM Sim	IMAGE=DCM_SIM\x0D
Image Mode Dynamic	IMAGE=DYNAMIC\x0D
Image Mode Photo/sRGB	IMAGE=PHOTO_SRGB\x0D
Image Mode Presentation	IMAGE=PRESENTATION\x0D
Image Mode Standard	IMAGE=STANDARD\x0D
Image Mode User 1	IMAGE=USER_1\x0D
Image Mode User 2	IMAGE=USER_2\x0D
Image Mode User 3	IMAGE=USER_3\x0D
Image Mode User 4	IMAGE=USER_4\x0D
Image Mode User 5	IMAGE=USER_5\x0D
Image Mode Video	IMAGE=VIDEO\x0D
Image Mode Vivid Photo	IMAGE=VIVID_PHOTO\x0D
Input Analog PC	INPUT=A-RGB\x0D
Input Analog PC-1	INPUT=A-RGB1\x0D
Input Analog PC-2	INPUT=A-RGB2\x0D
Input Component	INPUT=COMP\x0D
Input Digital PC	INPUT=D-RGB\x0D
Input HDMI	INPUT=HDMI\x0D
Input LAN	INPUT=LAN\x0D
Input USB	INPUT=USB\x0D
Lamp Mode Normal	LAMP=NORMAL\x0D
Lamp Mode Silent	LAMP=SILENT\x0D
Menu Navigation Down	RC DOWN\x0D
Menu Navigation Enter	RC OK\x0D
Menu Navigation Left	RC LEFT\x0D
Menu Navigation Menu	RC MENU\x0D
Menu Navigation Right	RC RIGHT\x0D
Menu Navigation Up	RC UP\x0D
Power Off	POWER OFF\x0D

Power On	POWER ON\x0D
Video Mute Off	BLANK=OFF\x0D
Video Mute On	BLANK=ON\x0D
Volume 0	AVOL=0\x0D
Volume 20	AVOL=20\x0D

Appendix B. Query Commands

Aspect Ratio	GET ASPECT\x0D
Audio Mute	GET MUTE\x0D
Control Mode	GET MODE\x0D
Device Status	GET ERR\x0D
Executive Mode	GET KEYLOCK\x0D
Freeze	GET FREEZE\x0D
Image Mode	GET IMAGE\x0D
Input	GET INPUT\x0D
Lamp Mode	GET LAMP\x0D
Lamp Usage	GET LMPT\x0D
Power	GET POWER\x0D
Signal Status	GET SIGNALSTATUS\x0D
Video Mute	GET BLANK\x0D
Volume	GET AVOL\x0D