

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Canon
Firmware Version: N/A
Model(s): WUX7500, WUX5800, WUX6700, WUX5800Z, WUX6600Z, WUX7000Z

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0002-b002	1.4.2

Version History

Module Version	Date	Notes
1_0_0_0	2/28/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='WUX7500')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='WUX7500')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 33336, Model='WUX7500')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
AspectRatio	'Auto'	'4:3'	'16:9'
	'16:10'	'Zoom'	'True'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Auto')			
Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command	Value		
AutoImage	None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command	Value	Value	Value
ExecutiveMode	'Keypad Lock'	'Remote Lock'	'Off'
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'Keypad Lock')			
Command	Value	Value	
Freeze	'On'	'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command	Value	Value	Value
Input	'HDMI'	'DVI'	'USB'
	'Component'	'Analog RGB 1'	'Analog RGB 2'
	'LAN'	'HDBaseT'	'DisplayPort'
# Input example InterfaceName.Set('Input', 'HDMI')			
Command	Value	Value	Value
LampMode	'Eco 1'	'Eco 2'	'Full'
# LampMode example InterfaceName.Set('LampMode', 'Eco 1')			
Command	Value	Value	Value
MenuNavigation	'Up'	'Down'	'Left'
	'Right'	'Ok'	'Menu'

Global Scripter Module Communication Sheet

# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')		
Command Power	Value 'On'	Value 'Off'
# Power example InterfaceName.Set('Power', 'On')		
Command VideoMute	Value 'On'	Value 'Off'
# VideoMute example InterfaceName.Set('VideoMute', 'On')		
Command Volume	Value 0 to 20 in steps of 1	
# Volume example InterfaceName.Set('Volume', 20)		

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
AspectRatio	'Auto'	'4:3'	'16:9'
	'16:10'	'Zoom'	'True'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
DeviceStatus	'Normal'	'Abnormal Temperature'	'Lamp Error'
	'Lamp Cover Error'	'Fan Error'	'Power Supply Error'
	'Filter Error'	'Zoom Error'	'Focus Error'
	'Lens Shift Error'	'Lens Connector Error'	
# DeviceStatus examples InterfaceName.Update('DeviceStatus') Value = InterfaceName.ReadStatus('DeviceStatus') InterfaceName.SubscribeStatus('DeviceStatus', None, FeedbackHandler)			
Command	Value	Value	Value

Global Scripter Module
Communication Sheet

ExecutiveMode	'Keypad Lock'	'Remote Lock'	'Off'
<pre># ExecutiveMode examples InterfaceName.Update('ExecutiveMode') Value = InterfaceName.ReadStatus('ExecutiveMode') InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)</pre>			
Command Freeze	Value 'On'	Value 'Off'	
<pre># Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)</pre>			
Command Input	Value 'HDMI' 'Component' 'LAN'	Value 'DVI' 'Analog RGB 1' 'HDBaseT'	Value 'USB' 'Analog RGB 2' 'DisplayPort'
<pre># Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)</pre>			
Command LampMode	Value 'Eco 1'	Value 'Eco 2'	Value 'Full'
<pre># LampMode examples InterfaceName.Update('LampMode') Value = InterfaceName.ReadStatus('LampMode') InterfaceName.SubscribeStatus('LampMode', None, FeedbackHandler)</pre>			
Command LampUsage	Value 0 –		
<pre># LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)</pre>			
Command Power	Value 'On' 'Cooling Down'	Value 'Off'	Value 'Warming Up'
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command VideoMute	Value 'On'	Value 'Off'	
<pre># VideoMute examples InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)</pre>			
Command	Value		

Volume	0 to 20 in steps of 1
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>	

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 19200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

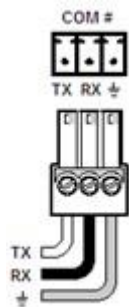

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	33336
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 16:10	ASPECT=16:10\x0D
Aspect Ratio 16:9	ASPECT=16:9\x0D
Aspect Ratio 4:3	ASPECT=4:3\x0D
Aspect Ratio Auto	ASPECT=AUTO\x0D
Aspect Ratio True	ASPECT=TRUE\x0D
Aspect Ratio Zoom	ASPECT=ZOOM\x0D
Audio Mute Off	MUTE=OFF\x0D
Audio Mute On	MUTE=ON\x0D
Auto Image None	RC=AUTOPC\x0D
Executive Mode Keypad Lock	KEYLOCK=MAIN\x0D
Executive Mode Off	KEYLOCK=OFF\x0D
Executive Mode Remote Lock	KEYLOCK=RC\x0D
Freeze Off	FREEZE=OFF\x0D
Freeze On	FREEZE=ON\x0D
Input Analog RGB 1	INPUT=A- RGB1\x0D
Input Analog RGB 2	INPUT=A- RGB2\x0D
Input Component	INPUT=COMP\x0D
Input DVI	INPUT=D- RGB\x0D
Input DisplayPort	INPUT=DP\x0D
Input HDBaseT	INPUT=HDBT\x0D
Input HDMI	INPUT=HDMI\x0D
Input LAN	INPUT=LAN\x0D
Input USB	INPUT=USB\x0D
Lamp Mode Eco 1	LAMP=ECO1\x0D
Lamp Mode Eco 2	LAMP=ECO2\x0D
Lamp Mode Full	LAMP=FULL\x0D
Menu Navigation Down	RC DOWN\x0D
Menu Navigation Left	RC LEFT\x0D
Menu Navigation Menu	RC MENU\x0D
Menu Navigation Ok	RC OK\x0D
Menu Navigation Right	RC RIGHT\x0D
Menu Navigation Up	RC UP\x0D
Power Off	POWER=OFF\x0D
Power On	POWER=ON\x0D
Video Mute Off	BLANK=OFF\x0D
Video Mute On	BLANK=ON\x0D

Volume 0	AVOL=0\x0D
Volume 20	AVOL=20\x0D

Appendix B. Update Commands

Aspect Ratio	GET ASPECT\x0D
Audio Mute	GET MUTE\x0D
Device Status	GET ERR\x0D
Executive Mode	GET KEYLOCK\x0D
Freeze	GET FREEZE\x0D
Input	GET INPUT\x0D
Lamp Mode	GET LAMP\x0D
Lamp Usage	GET LMPT\x0D
Power	GET POWER\x0D
Volume	GET AVOL\x0D