

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
Manufacturer: CommBox
Firmware Version: N/A
Model(s): CB3080L-4NG, CB3090L-4NG, CB30103L-4NG, CB3060L-4NG, CB3070L-4NG, CB3075L-4NG, CB3060L-4NG4K, CB3070L-4NG4K, CB3080L-4NG4K, CB3090L-4NG4K, CB30103L-4NG4K

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0001-b006	1.4.2

Version History

Module Version	Date	Notes
1_1_0_0	3/21/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='CB3080L-4NG')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='CB3080L-4NG')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Input	Value 'VGA' 'HDMI 1' 'USB'	Value 'Composite' 'HDMI 2'	Value 'Component' 'HDMI 3'
# Input example InterfaceName.Set('Input', 'VGA')			
Command Keypad	Value '0' – '9'		
# Keypad example InterfaceName.Set('Keypad', '0')			
Command MenuNavigation	Value 'Up' 'Right' 'Exit'	Value 'Down' 'OK'	Value 'Left' 'Menu'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Transport	Value 'Previous' 'Next'	Value 'Rewind' 'Stop'	Value 'Fast Forward'
# Transport example InterfaceName.Set('Transport', 'Previous')			

Command	Value
Volume	0 to 100 in steps of 1
# Volume example InterfaceName.Set('Volume', 100)	

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command Input	Value 'VGA' 'HDMI 1' 'USB'	Value 'Composite' 'HDMI 2'	Value 'Component' 'HDMI 3'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command Power	Value 'On'	Value 'Off'	
# Power examples InterfaceName.Update('Power')			

<pre>Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>	
Command Volume	Value 0 to 100 in steps of 1
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>	

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Device's firmware version must be 5 and above for the module to work

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

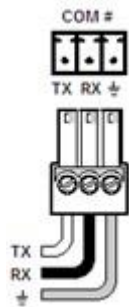

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

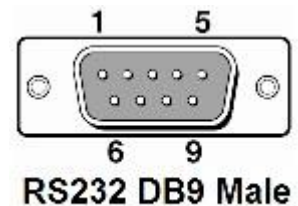

Appendix A. Set Commands

Audio Mute Off	!1MUTE 0\x0D
Audio Mute On	!1MUTE 1\x0D
Freeze Off	!1FREZ 0\x0D
Freeze On	!1FREZ 1\x0D
Input Component	!1INPT 151\x0D
Input Composite	!1INPT 131\x0D
Input HDMI 1	!1INPT 211\x0D
Input HDMI 2	!1INPT 212\x0D
Input HDMI 3	!1INPT 213\x0D
Input USB	!1INPT 311\x0D
Input VGA	!1INPT 111\x0D
Keypad 0	!1REMO 20\x0D
Keypad 9	!1REMO 19\x0D
Menu Navigation Down	!1REMO 26\x0D
Menu Navigation Exit	!1REMO 31\x0D
Menu Navigation Left	!1REMO 27\x0D
Menu Navigation Menu	!1REMO 30\x0D
Menu Navigation OK	!1REMO 29\x0D
Menu Navigation Right	!1REMO 28\x0D
Menu Navigation Up	!1REMO 25\x0D
Power Off	!1POWR 0\x0D
Power On	!1POWR 1\x0D
Transport Fast Forward	!1REMO 47\x0D
Transport Next	!1REMO 48\x0D
Transport Previous	!1REMO 45\x0D
Transport Rewind	!1REMO 46\x0D
Transport Stop	!1REMO 51\x0D
Volume 0	!1VOLM 0\x0D
Volume 100	!1VOLM 100\x0D

Appendix B. Update Commands

Audio Mute	!1MUTE ?\x0D
Freeze	!1FREZ ?\x0D
Input	!1INPT ?\x0D
Volume	!1VOLM ?\x0D