

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scripter Modules, refer to the "[Guide to Using Scripter Modules](#)" document.

Device Specifications

Device Type: Controller
Manufacturer: CommandFusion
Firmware Version: N/A
Model(s): DIN-RY8-N, DIN-RY4-N

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scripter Version
3.01.0000-b010	2.2.0

Version History

Module Version	Date	Notes
1_0_1_0	2/26/2019	Fixed DeviceID format representation to HEX.
1_0_0_0	8/14/2018	Initial Version

Module Notes

- DeviceID variable must be set accordingly. Default value is '02'. DeviceID ranges from '02' to 'EF' and Broadcast. Example: InterfaceName.DeviceID = '02'

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='DIN-RY8-N')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='DIN-RY8-N')

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command SwitchRelay	Value 'On'	Value 'Off'
Qualifier Key 'Relay'	Qualifier Value '1' – '8'	
# SwitchRelay example InterfaceName.Set('SwitchRelay', 'On', {'Relay': '1'})		

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, DryContactStatus, and SwitchRelay do not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command DryContactStatus	Value 'Open'	Value 'Close'
Qualifier Key 'Port'	Qualifier Value '1' – '8'	
# DryContactStatus examples Value = InterfaceName.ReadStatus('DryContactStatus', {'Port': '1'}) InterfaceName.SubscribeStatus('DryContactStatus', None, FeedbackHandler)		
Command SwitchRelay	Value 'On'	Value 'Off'
Qualifier Key 'Relay'	Qualifier Value '1' – '8'	
# SwitchRelay examples Value = InterfaceName.ReadStatus('SwitchRelay', {'Relay': '1'}) InterfaceName.SubscribeStatus('SwitchRelay', None, FeedbackHandler)		

Cable and Adapter Requirements

Please contact the manufacturer, or reference the user manual, for Pin Assignments Diagram and Connector type.

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

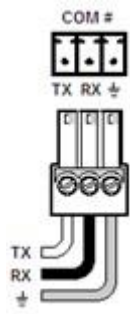

Please contact the manufacturer, or reference the user manual, for Pin Assignments Diagram and Connector type.

Appendix A. Set Commands

Switch Relay Off Relay 1	\xF2\x02\xF3TRLYSET\xF4P01:0\xF5\xF5
Switch Relay Off Relay 4	\xF2\x02\xF3TRLYSET\xF4P04:0\xF5\xF5
Switch Relay Off Relay 8	\xF2\x02\xF3TRLYSET\xF4P08:0\xF5\xF5
Switch Relay On Relay 1	\xF2\x02\xF3TRLYSET\xF4P01:1\xF5\xF5
Switch Relay On Relay 4	\xF2\x02\xF3TRLYSET\xF4P04:1\xF5\xF5
Switch Relay On Relay 8	\xF2\x02\xF3TRLYSET\xF4P08:1\xF5\xF5