

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Christie
Firmware Version: N/A
Model(s): SUHD653-L, SUHD753-L, SUHD863-L, SUHD983-P

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.13.0000-b006	2.9.0

Version History

Module Version	Date	Notes
1_0_3_0	5/11/2021	Added models: • SUHD653-L • SUHD753-L • SUHD863-L
1_0_2_0	4/29/2021	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SUHD983-P')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SUHD983-P')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 5000, Model='SUHD983-P')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioInput	Value 'DisplayPort 1' 'HDMI 2' 'DVI'	Value 'DisplayPort 2' 'HDMI 3' 'OPS/HDMI'	Value 'HDMI 1' 'HDMI 4' 'OPS/DP'
# AudioInput example InterfaceName.Set('AudioInput', 'DisplayPort 1')			
Command Input	Value 'DisplayPort 1' 'HDMI 2' 'DVI'	Value 'DisplayPort 2' 'HDMI 3' 'OPS/HDMI'	Value 'HDMI 1' 'HDMI 4' 'OPS/DP'
# Input example InterfaceName.Set('Input', 'DisplayPort 1')			
Command MenuNavigation	Value 'Menu' 'Left'	Value 'Up' 'Right'	Value 'Down' 'Enter'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command MultiWindowMode ¹	Value 'Off' 'Dual 2' 'Triple 1' 'Triple 4'	Value 'Single' 'Dual 3' 'Triple 2' 'Quad'	Value 'Dual 1' 'Dual 4' 'Triple 3'
# MultiWindowMode example InterfaceName.Set('MultiWindowMode', 'Off')			
Command Mute	Value 'On'	Value 'Off'	
# Mute example InterfaceName.Set('Mute', 'On')			
Command PictureMode	Value 'Standard'	Value 'Dynamic'	Value 'User'
# PictureMode example InterfaceName.Set('PictureMode', 'Standard')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command PresetMode ²	Value '1' – '20'	Value 'Off'	
# PresetMode example InterfaceName.Set('PresetMode', '1')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

Global Scripter Module Communication Sheet

Command WindowInput	Value 'DisplayPort 1' 'HDMI 2' 'DVI'	Value 'DisplayPort 2' 'HDMI 3' 'OPS/HDMI'	Value 'HDMI 1' 'HDMI 4' 'OPS/DP'
Qualifier Key 'Window'	Qualifier Value '1' – '4'		
# WindowInput example InterfaceName.Set('WindowInput', 'DisplayPort 1', {'Window': '1'})			
Command WindowMode	Value 'Window 1' 'Window 4'	Value 'Window 2'	Value 'Window 3'
# WindowMode example InterfaceName.Set('WindowMode', 'Window 1')			

¹ Preset Mode should be selected before using this command.

² When this command is not Off, some commands in the module will not work.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})  
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})  
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},  
FeedbackHandler)
```

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)  
Value = InterfaceName.ReadStatus(Command)  
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)  
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
AudioInput	'DisplayPort 1'	'DisplayPort 2'	'HDMI 1'
	'HDMI 2'	'HDMI 3'	'HDMI 4'
	'DVI'	'OPS/HDMI'	'OPS/DP'
# AudioInput example InterfaceName.Update('AudioInput') Value = InterfaceName.ReadStatus('AudioInput') InterfaceName.SubscribeStatus('AudioInput', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'DisplayPort 1'	'DisplayPort 2'	'HDMI 1'
	'HDMI 2'	'HDMI 3'	'HDMI 4'
	'DVI'	'OPS/HDMI'	'OPS/DP'
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	Value
MultiWindowMode ¹	'Off'	'Single'	'Dual 1'
	'Dual 2'	'Dual 3'	'Dual 4'
	'Triple 1'	'Triple 2'	'Triple 3'
	'Triple 4'	'Quad'	
# MultiWindowMode example InterfaceName.Update('MultiWindowMode') Value = InterfaceName.ReadStatus('MultiWindowMode') InterfaceName.SubscribeStatus('MultiWindowMode', None, FeedbackHandler)			
Command	Value	Value	
Mute	'On'	'Off'	
# Mute example InterfaceName.Update('Mute') Value = InterfaceName.ReadStatus('Mute') InterfaceName.SubscribeStatus('Mute', None, FeedbackHandler)			

Global Scriptor Module Communication Sheet

Command PictureMode ²	Value 'Standard'	Value 'Dynamic'	Value 'User'
<pre># PictureMode example InterfaceName.Update('PictureMode') Value = InterfaceName.ReadStatus('PictureMode') InterfaceName.SubscribeStatus('PictureMode', None, FeedbackHandler)</pre>			
Command Power	Value 'On'	Value 'Off'	
<pre># Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command PresetMode	Value '1' – '20'	Value 'Off'	
<pre># PresetMode example InterfaceName.Update('PresetMode') Value = InterfaceName.ReadStatus('PresetMode') InterfaceName.SubscribeStatus('PresetMode', None, FeedbackHandler)</pre>			
Command Volume	Value 0 to 100 in steps of 1		
<pre># Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>			
Command WindowInput	Value 'DisplayPort 1' 'HDMI 2' 'DVI'	Value 'DisplayPort 2' 'HDMI 3' 'OPS/HDMI'	Value 'HDMI 1' 'HDMI 4' 'OPS/DP'
Qualifier Key 'Window'	Qualifier Value '1' – '4'		
<pre># WindowInput example InterfaceName.Update('WindowInput', {'Window': '1'}) Value = InterfaceName.ReadStatus('WindowInput', {'Window': '1'}) InterfaceName.SubscribeStatus('WindowInput', None, FeedbackHandler)</pre>			

¹ Preset Mode should be selected before using this command.

² When this command is not Off, some commands in the module will not work.

Cable and Adapter Requirements

Captive Screw to 3.5mm Stereo Serial Cable

Notes for the Device

For the module to work, ensure the “Power Off Mode” setting within the display menu is set to either “Standby” or “Sleep”.

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

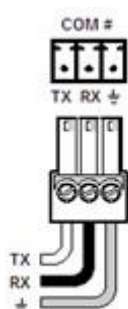

Signal	Main Cable	Pin	Signal
RxD	←	1	TxD
TxD	→	2	RxD
GND	→	3	GND

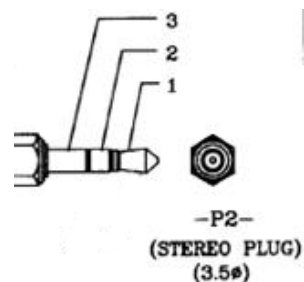

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet (TCP)

Default Port: 5000

Logon Credentials No

Supported:

Multi-Connection No

Capabilities:

Port Changeability: No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

For the module to work, ensure the “Power Off Mode” setting within the display menu is set to “Standby”.

Appendix A. Set Commands

Audio Input DisplayPort 1	K:ALLAI0.
Audio Input DisplayPort 2	K:ALLAI1.
Audio Input DVI	K:ALLAI6.
Audio Input HDMI 1	K:ALLAI2.
Audio Input HDMI 2	K:ALLAI3.
Audio Input HDMI 3	K:ALLAI4.
Audio Input HDMI 4	K:ALLAI5.
Audio Input OPS/DP	K:ALLAI8.
Audio Input OPS/HDMI	K:ALLAI7.
Input DisplayPort 1	K:ALLSH0.
Input DisplayPort 2	K:ALLSH1.
Input DVI	K:ALLSH6.
Input HDMI 1	K:ALLSH2.
Input HDMI 2	K:ALLSH3.
Input HDMI 3	K:ALLSH4.
Input HDMI 4	K:ALLSH5.
Input OPS/DP	K:ALLSH8.
Input OPS/HDMI	K:ALLSH7.
Menu Navigation Down	K:ALLRDN.
Menu Navigation Enter	K:ALLREN.
Menu Navigation Left	K:ALLRLT.
Menu Navigation Menu	K:ALLRMN.
Menu Navigation Right	K:ALLRRT.
Menu Navigation Up	K:ALLRUP.
Multi Window Mode Dual 1	K:ALLWM1.
Multi Window Mode Dual 2	K:ALLWM2.
Multi Window Mode Dual 3	K:ALLWM3.
Multi Window Mode Dual 4	K:ALLWM4.
Multi Window Mode Quad	K:ALLWM9.
Multi Window Mode Single	K:ALLWM0.
Multi Window Mode Triple 1	K:ALLWM5.
Multi Window Mode Triple 2	K:ALLWM6.
Multi Window Mode Triple 3	K:ALLWM7.
Multi Window Mode Triple 4	K:ALLWM8.
Mute Off	K:ALLMOF.
Mute On	K:ALLMON.
Picture Mode Dynamic	K:ALLPM1.
Picture Mode Standard	K:ALLPM0.
Picture Mode User	K:ALLPM2.
Power Off	K:ALLPOF.
Power On	K:ALLPON.
Preset Mode 1	K:ALLPRS001.

Global Scriptor Module Communication Sheet

Preset Mode 20	K:ALLPRS020.
Preset Mode Off	K:ALLPRS000.
Volume 0	K:ALLVOL000.
Volume 100	K:ALLVOL100.
Window Input DisplayPort 1 Window 1	K:ALLW10.
Window Input DisplayPort 1 Window 4	K:ALLW40.
Window Input DisplayPort 2 Window 1	K:ALLW11.
Window Input DisplayPort 2 Window 4	K:ALLW41.
Window Input DVI Window 1	K:ALLW16.
Window Input DVI Window 4	K:ALLW46.
Window Input HDMI 1 Window 1	K:ALLW12.
Window Input HDMI 1 Window 4	K:ALLW42.
Window Input HDMI 2 Window 1	K:ALLW13.
Window Input HDMI 2 Window 4	K:ALLW43.
Window Input HDMI 3 Window 1	K:ALLW14.
Window Input HDMI 3 Window 4	K:ALLW44.
Window Input HDMI 4 Window 1	K:ALLW15.
Window Input HDMI 4 Window 4	K:ALLW45.
Window Input OPS/DP Window 1	K:ALLW18.
Window Input OPS/DP Window 4	K:ALLW48.
Window Input OPS/HDMI Window 1	K:ALLW17.
Window Input OPS/HDMI Window 4	K:ALLW47.
Window Mode Window 1	K:ALLWN1.
Window Mode Window 2	K:ALLWN2.
Window Mode Window 3	K:ALLWN3.
Window Mode Window 4	K:ALLWN4.

Appendix B. Update Commands

Audio Input	K:ALLAUT?
Input	K:ALLSRC?
Multi Window Mode	K:ALLWMT?
Mute	K:ALLMUT?
Picture Mode	K:ALLPMT?
Power	K:ALLPWR?
Preset Mode	K:ALLPRS?
Volume	K:ALLVOL?
Window Input Window 1	K:ALLW1S?
Window Input Window 4	K:ALLW4S?