

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Christie
Firmware Version: N/A
Model(s): UHD982-P

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.11.0000-b007	2.7.0

Version History

Module Version	Date	Notes
1_0_1_0	12/4/2020	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword must be set accordingly.
Example: `InterfaceName.devicePassword = 'extron'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='UHD982-P')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='UHD982-P')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 1986, Model='UHD982-P')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Auto' '14:9' 'Full'	Value '16:9' '14:9 Zoom' 'Cinema'	Value 'Subtitle' '4:3'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Auto')			
Command AutoImage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command HeadphoneVolume	Value 0 to 100 in steps of 1		
# HeadphoneVolume example InterfaceName.Set('HeadphoneVolume', 100)			
Command Input	Value 'HDMI 1' 'VGA'	Value 'HDMI 2' 'OPS'	Value 'DisplayPort'
# Input example InterfaceName.Set('Input', 'HDMI 1')			
Command Mute	Value 'Toggle'		
# Mute example InterfaceName.Set('Mute', 'Toggle')			
Command PictureMode	Value 'Dynamic' 'Game'	Value 'Natural' 'Sport'	Value 'Cinema'
# PictureMode example InterfaceName.Set('PictureMode', 'Dynamic')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value		
HeadphoneVolume	0 to 100 in steps of 1		
# HeadphoneVolume example InterfaceName.Update('HeadphoneVolume') Value = InterfaceName.ReadStatus('HeadphoneVolume') InterfaceName.SubscribeStatus('HeadphoneVolume', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'HDMI 1'	'HDMI 2'	'DisplayPort'
	'VGA'	'OPS'	
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	Value
Mute	'Toggle'	'On'	'Off'
# Mute example InterfaceName.Update('Mute') Value = InterfaceName.ReadStatus('Mute') InterfaceName.SubscribeStatus('Mute', None, FeedbackHandler)			
Command	Value	Value	Value
PictureMode	'Dynamic'	'Natural'	'Cinema'
	'Game'	'Sport'	
# PictureMode example InterfaceName.Update('PictureMode') Value = InterfaceName.ReadStatus('PictureMode') InterfaceName.SubscribeStatus('PictureMode', None, FeedbackHandler)			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command	Value		
Volume	0 to 100 in steps of 1		

```
# Volume example
InterfaceName.Update('Volume')
Value = InterfaceName.ReadStatus('Volume')
InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)
```

Cable and Adapter Requirements

Please contact manufacturer for cable and adapter requirements.

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

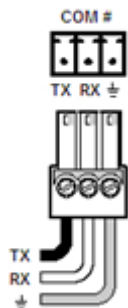

Please contact manufacturer for pin assignments diagram and connector type.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	1986
Logon Credentials Supported:	Yes
Default Password:	0000
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 14:9	PICTUREZOOM 14:9\x0D\x0A
Aspect Ratio 14:9 Zoom	PICTUREZOOM 14:9zoom\x0D\x0A
Aspect Ratio 16:9	PICTUREZOOM 16:9\x0D\x0A
Aspect Ratio 4:3	PICTUREZOOM 4:3\x0D\x0A
Aspect Ratio Auto	PICTUREZOOM auto\x0D\x0A
Aspect Ratio Cinema	PICTUREZOOM cinema\x0D\x0A
Aspect Ratio Full	PICTUREZOOM full\x0D\x0A
Aspect Ratio Subtitle	PICTUREZOOM subtitle\x0D\x0A
Auto Image None	AUTOPOS\x0D\x0A
Headphone Volume 0	HEADPHONEVOLUME 0\x0D\x0A
Headphone Volume 100	HEADPHONEVOLUME 100\x0D\x0A
Input DisplayPort	SELECTSOURCE 19\x0D\x0A
Input HDMI 1	SELECTSOURCE 7\x0D\x0A
Input HDMI 2	SELECTSOURCE 8\x0D\x0A
Input OPS	SELECTSOURCE 20\x0D\x0A
Input VGA	SELECTSOURCE 12\x0D\x0A
Mute Toggle	SETMUTE\x0D\x0A
Picture Mode Cinema	PICTUREMODE 3\x0D\x0A
Picture Mode Dynamic	PICTUREMODE 1\x0D\x0A
Picture Mode Game	PICTUREMODE 4\x0D\x0A
Picture Mode Natural	PICTUREMODE 2\x0D\x0A
Picture Mode Sport	PICTUREMODE 5\x0D\x0A
Power Off	SETQUICKSTANDBY on\x0D\x0A
Power On	SETQUICKSTANDBY off\x0D\x0A
Volume 0	STV 0\x0D\x0A
Volume 100	STV 100\x0D\x0A

Appendix B. Update Commands

Headphone Volume	GETHEADPHONEVOLUME\x0D\x0A
Input	GETSOURCE\x0D\x0A
Mute	GETMUTE\x0D\x0A
Picture Mode	GETPICTUREMODE\x0D\x0A
Volume	GETVOLUME\x0D\x0A