

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

## Device Specifications

Device Type: Display  
Manufacturer: Christie  
Firmware Version: N/A  
Model(s): UHD751-P, UHD861-P, UHD551-L, UHD651-L

## Tested on the Following Software and Firmware Versions

| IP Link Pro Control Processor Firmware | Global Scriptor Version |
|----------------------------------------|-------------------------|
| 2.08.0002-b001                         | 1.4.2                   |

## Version History

| Module Version | Date       | Notes                              |
|----------------|------------|------------------------------------|
| 1_0_5_0        | 12/27/2018 | Added HeadphoneVolume command      |
| 1_0_4_0        | 4/24/2018  | Fixed status for Ethernet control. |
| 1_0_3_0        | 3/20/2018  | Updated command strings syntax.    |
| 1_0_1_0        | 12/1/2017  | Fixed Power command syntax.        |
| 1_0_0_0        | 10/16/2017 | Initial Version                    |

---

## Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.  
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.  
Example: `InterfaceName.connectionCounter = 5`

## Supported Classes and Examples

|                                                                                                            |
|------------------------------------------------------------------------------------------------------------|
| <b>SerialClass</b>                                                                                         |
| <code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='UHD751-P')</code>               |
| <b>SerialOverEthernetClass</b>                                                                             |
| <code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='UHD751-P')</code> |
| <b>EthernetClass</b>                                                                                       |
| <code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 1986, Model='UHD751-P')</code>           |

## Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

|                                                                      |                                 |                    |                     |
|----------------------------------------------------------------------|---------------------------------|--------------------|---------------------|
| Command<br><b>AspectRatio</b>                                        | Value<br>'Auto'                 | Value<br>'16:9'    | Value<br>'Subtitle' |
|                                                                      | '14:9'                          | 'Zoom'             | '4:3'               |
|                                                                      | 'Full'                          | 'Panoramic'        | 'Cinema'            |
| # AspectRatio example<br>InterfaceName.Set('AspectRatio', 'Auto')    |                                 |                    |                     |
| Command<br><b>AutoImage</b>                                          | Value<br>None                   |                    |                     |
| # AutoImage example<br>InterfaceName.Set('AutoImage', None)          |                                 |                    |                     |
| Command<br><b>HeadphoneVolume</b>                                    | Value<br>0 to 100 in steps of 1 |                    |                     |
| # Volume example<br>InterfaceName.Set('HeadphoneVolume', 100)        |                                 |                    |                     |
| Command<br><b>Input</b>                                              | Value<br>'FAV'                  | Value<br>'HDMI 1'  | Value<br>'HDMI 2'   |
|                                                                      | 'YPbPr'                         | 'VGA'              | 'DVI'               |
|                                                                      | 'DP'                            | 'OPS'              |                     |
| # Input example<br>InterfaceName.Set('Input', 'FAV')                 |                                 |                    |                     |
| Command<br><b>Mute</b>                                               | Value<br>None                   |                    |                     |
| # Mute example<br>InterfaceName.Set('Mute', None)                    |                                 |                    |                     |
| Command<br><b>PictureMode</b>                                        | Value<br>'Dynamic'              | Value<br>'Natural' | Value<br>'Cinema'   |
|                                                                      | 'Game'                          |                    |                     |
| # PictureMode example<br>InterfaceName.Set('PictureMode', 'Dynamic') |                                 |                    |                     |
| Command<br><b>Power</b>                                              | Value<br>'On'                   | Value<br>'Off'     |                     |
| # Power example<br>InterfaceName.Set('Power', 'On')                  |                                 |                    |                     |
| Command                                                              | Value                           | Value              | Value               |

|                                                               |                        |             |              |
|---------------------------------------------------------------|------------------------|-------------|--------------|
| SoundMode                                                     | 'Mono'                 | 'Stereo'    | 'Dual I'     |
|                                                               | 'Dual II'              | 'Mono Left' | 'Mono Right' |
| # SoundMode example<br>InterfaceName.Set('SoundMode', 'Mono') |                        |             |              |
| Command                                                       | Value                  |             |              |
| Volume                                                        | 0 to 100 in steps of 1 |             |              |
| # Volume example<br>InterfaceName.Set('Volume', 100)          |                        |             |              |

## Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

|                                                                                                                                                                                                        |                        |                |          |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|----------------|----------|
| Command                                                                                                                                                                                                | Value                  | Value          |          |
| ConnectionStatus                                                                                                                                                                                       | 'Connected'            | 'Disconnected' |          |
| # ConnectionStatus examples<br>Value = InterfaceName.ReadStatus('ConnectionStatus')<br>InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)                                        |                        |                |          |
| Command                                                                                                                                                                                                | Value                  |                |          |
| HeadphoneVolume                                                                                                                                                                                        | 0 to 100 in steps of 1 |                |          |
| # HeadphoneVolumeexamples<br>InterfaceName.Update('HeadphoneVolume')<br>Value = InterfaceName.ReadStatus('HeadphoneVolume')<br>InterfaceName.SubscribeStatus('HeadphoneVolume', None, FeedbackHandler) |                        |                |          |
| Command                                                                                                                                                                                                | Value                  | Value          | Value    |
| Input                                                                                                                                                                                                  | 'FAV'                  | 'HDMI 1'       | 'HDMI 2' |
|                                                                                                                                                                                                        | 'YPbPr'                | 'VGA'          | 'DVI'    |
|                                                                                                                                                                                                        | 'DP'                   | 'OPS'          |          |
| # Input examples<br>InterfaceName.Update('Input')<br>Value = InterfaceName.ReadStatus('Input')<br>InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)                                        |                        |                |          |
| Command                                                                                                                                                                                                | Value                  | Value          |          |
| MuteStatus                                                                                                                                                                                             | 'On'                   | 'Off'          |          |
| # MuteStatus examples<br>InterfaceName.Update('MuteStatus')<br>Value = InterfaceName.ReadStatus('MuteStatus')<br>InterfaceName.SubscribeStatus('MuteStatus', None, FeedbackHandler)                    |                        |                |          |
| Command                                                                                                                                                                                                | Value                  | Value          | Value    |
| PictureMode                                                                                                                                                                                            | 'Dynamic'              | 'Natural'      | 'Cinema' |
|                                                                                                                                                                                                        | 'Game'                 |                |          |

|                                                                                                                                                                                           |                        |       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|-------|
| <pre># PictureMode examples InterfaceName.Update('PictureMode') Value = InterfaceName.ReadStatus('PictureMode') InterfaceName.SubscribeStatus('PictureMode', None, FeedbackHandler)</pre> |                        |       |
| <b>Command</b>                                                                                                                                                                            | Value                  | Value |
| <b>Power</b>                                                                                                                                                                              | 'On'                   | 'Off' |
| <pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>                         |                        |       |
| <b>Command</b>                                                                                                                                                                            | Value                  |       |
| <b>Volume</b>                                                                                                                                                                             | 0 to 100 in steps of 1 |       |
| <pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>                     |                        |       |

## Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

## Notes for the Device

### Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

### Pin Assignments Diagram

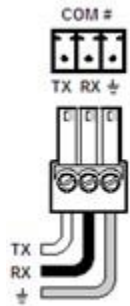

| Signal | Main Cable | Pin | Signal |
|--------|------------|-----|--------|
| TxD    |            | 2   | TxD    |
| RxD    |            | 3   | RxD    |
| GND    |            | 5   | GND    |

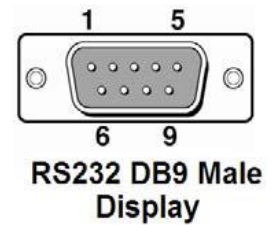

---

---

## Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

|                                       |              |
|---------------------------------------|--------------|
| <b>Port Type:</b>                     | Ethernet     |
| <b>Default Port:</b>                  | 1986         |
| <b>Logon Credentials Supported:</b>   | No           |
| <b>Multi-Connection Capabilities:</b> | Undetermined |
| <b>Port Changeability:</b>            | Undetermined |

---

---

## Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

## Notes for the Device



**Appendix A. Set Commands**

|                               |                               |
|-------------------------------|-------------------------------|
| <b>Aspect Ratio 14:9</b>      | PICTUREZOOM 14:9\x0D\x0A      |
| <b>Aspect Ratio 16:9</b>      | PICTUREZOOM 16:9\x0D\x0A      |
| <b>Aspect Ratio 4:3</b>       | PICTUREZOOM 4:3\x0D\x0A       |
| <b>Aspect Ratio Auto</b>      | PICTUREZOOM auto\x0D\x0A      |
| <b>Aspect Ratio Cinema</b>    | PICTUREZOOM cinema\x0D\x0A    |
| <b>Aspect Ratio Full</b>      | PICTUREZOOM full\x0D\x0A      |
| <b>Aspect Ratio Panoramic</b> | PICTUREZOOM panoramic\x0D\x0A |
| <b>Aspect Ratio Subtitle</b>  | PICTUREZOOM subtitle\x0D\x0A  |
| <b>Aspect Ratio Zoom</b>      | PICTUREZOOM 14:9zoom\x0D\x0A  |
| <b>Auto Image None</b>        | AUTOPOS\x0D\x0A               |
| <b>Headphone Volume</b>       | HEADPHONEVOLUME 10\r\n        |
| <b>Headphone Volume</b>       | HEADPHONEVOLUME 50\r\n        |
| <b>Headphone Volume</b>       | HEADPHONEVOLUME 100\r\n       |
| <b>Input DP</b>               | SELECTSOURCE 19\x0D\x0A       |
| <b>Input DVI</b>              | SELECTSOURCE 18\x0D\x0A       |
| <b>Input FAV</b>              | SELECTSOURCE 5\x0D\x0A        |
| <b>Input HDMI 1</b>           | SELECTSOURCE 7\x0D\x0A        |
| <b>Input HDMI 2</b>           | SELECTSOURCE 8\x0D\x0A        |
| <b>Input OPS</b>              | SELECTSOURCE 20\x0D\x0A       |
| <b>Input VGA</b>              | SELECTSOURCE 12\x0D\x0A       |
| <b>Input YPbPr</b>            | SELECTSOURCE 11\x0D\x0A       |
| <b>Mute None</b>              | SETMUTE\x0D\x0A               |
| <b>Picture Mode Cinema</b>    | PICTUREMODE 3\x0D\x0A         |
| <b>Picture Mode Dynamic</b>   | PICTUREMODE 1\x0D\x0A         |
| <b>Picture Mode Game</b>      | PICTUREMODE 4\x0D\x0A         |
| <b>Picture Mode Natural</b>   | PICTUREMODE 2\x0D\x0A         |
| <b>Power Off</b>              | SETQUICKSTANDBY on\x0D\x0A    |
| <b>Power On</b>               | SETQUICKSTANDBY off\x0D\x0A   |
| <b>Sound Mode Dual I</b>      | SETSOUNDMODE 2\x0D\x0A        |
| <b>Sound Mode Dual II</b>     | SETSOUNDMODE 3\x0D\x0A        |
| <b>Sound Mode Mono</b>        | SETSOUNDMODE 0\x0D\x0A        |
| <b>Sound Mode Mono Left</b>   | SETSOUNDMODE 4\x0D\x0A        |
| <b>Sound Mode Mono Right</b>  | SETSOUNDMODE 5\x0D\x0A        |
| <b>Sound Mode Stereo</b>      | SETSOUNDMODE 1\x0D\x0A        |
| <b>Volume 0</b>               | STV 0\x0D\x0A                 |
| <b>Volume 100</b>             | STV 100\x0D\x0A               |

---

## Appendix B. Update Commands

|                         |                         |
|-------------------------|-------------------------|
| <b>Headphone Volume</b> | HEADPHONEVOLUME\r\n     |
| <b>Input</b>            | GETSOURCE\x0D\x0A       |
| <b>Mute Status</b>      | GETMUTE\x0D\x0A         |
| <b>Picture Mode</b>     | GETPICTUREMODE\x0D\x0A  |
| <b>Power</b>            | GETQUICKSTANDBY\x0D\x0A |
| <b>Volume</b>           | GETVOLUME\x0D\x0A       |