

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Christie
Firmware Version: N/A
Model(s): CP4230, CP4220

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0001-b003	1.4.1

Version History

Module Version	Date	Notes
1_0_0_0	11/15/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='CP4230')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='CP4230')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 3002, Model='CP4230')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command Autolmage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command Channel	Value '1' – '64'		
# Channel example InterfaceName.Set('Channel', '1')			
Command Focus	Value 'Far'	Value 'Near'	Value 'Stop'
# Focus example InterfaceName.Set('Focus', 'Far')			
Command Input	Value '292-A' 'DVI-A'	Value '292-B' 'DVI-B'	Value '292-Dual' 'DVI-Dual/Twin'
Qualifier Key 'Channel'	Qualifier Value 1 to 64		
# Input example InterfaceName.Set('Input', '292-A', {Channel:1})			
Command LensShiftHorizontal	Value 'Right'	Value 'Left'	Value 'Stop'
# LensShiftHorizontal example InterfaceName.Set('LensShiftHorizontal', 'Right')			
Command LensShiftVertical	Value 'Up'	Value 'Down'	Value 'Stop'
# LensShiftVertical example InterfaceName.Set('LensShiftVertical', 'Up')			
Command Power	Value 'On'	Value 'Off'	Value 'Full Power Mode'
# Power example InterfaceName.Set('Power', 'On')			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute example InterfaceName.Set('VideoMute', 'On')			

Global Scripter Module Communication Sheet

Command	Value	Value	Value
Zoom	'Tele'	'Wide'	'Stop'
# Zoom example InterfaceName.Set('Zoom', 'Tele')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command Channel	Value '1' – '64'		
# Channel examples InterfaceName.Update('Channel') Value = InterfaceName.ReadStatus('Channel') InterfaceName.SubscribeStatus('Channel', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value '292-A' 'DVI-A'	Value '292-B' 'DVI-B'	Value '292-Dual' 'DVI-Dual/Twin'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command LampUsage	Value Hours		
# LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)			
Command Power	Value 'On' 'Cooling Down'	Value 'Off' 'Full Power Mode'	Value 'Warming Up'
# Power examples InterfaceName.Update('Power')			

Global Scripter Module Communication Sheet

Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)		
Command	Value	Value
VideoMute	'On'	'Off'
# VideoMute examples InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)		

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

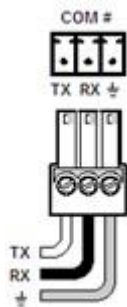

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	3002
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Auto Image None	(LLM+AUTO 1)
Channel 1	(CHA 101)
Channel 64	(CHA 164)
Focus Far	(FCS+STRT 1)
Focus Near	(FCS+STRT -1)
Focus Stop	(FCS+STOP)
Input 292-A Channel 1	(SIN+C101 1)
Input 292-A Channel 64	(SIN+C164 1)
Lens Shift Horizontal Left	(LHO+STRT -1)
Lens Shift Horizontal Right	(LHO+STRT 1)
Lens Shift Horizontal Stop	(LHO+STOP)
Lens Shift Vertical Down	(LVO+STRT -1)
Lens Shift Vertical Stop	(LVO+STOP)
Lens Shift Vertical Up	(LVO+STRT 1)
Power Full Power Mode	(PWR0)
Power Off	(PWR3)
Power On	(PWR1)
Video Mute Off	(SHU 1)
Video Mute On	(SHU 0)
Zoom Stop	(ZOM+STOP)
Zoom Tele	(ZOM+STRT 1)
Zoom Wide	(ZOM+STRT -1)

Appendix B. Query Commands

Channel	(CHA?)
Input	(SIN?)
Lamp Usage	(LPH?)
Power	(PWR?)
Video Mute	(SHU?)