
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Christie
Firmware Version: N/A
Model(s): Crimson WU25

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0002-b001	1.4.2

Version History

Module Version	Date	Notes
1_0_0_0	7/30/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- List of inputs is dynamic and subject to change. Not all may be available. Run SIN?L to retrieve the currently available list.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='Crimson WU25')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='Crimson WU25')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 3002, Model='Crimson WU25')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Default' 'Full Width'	Value 'None' 'Full Height'	Value 'Full Size'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Default')			
Command AutoImage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command ExecutiveMode	Value 'On'	Value 'Off'	
Qualifier Key 'Sensor'	Qualifier Value 'Front IR Keypad' 'IR over HDBaseT'	Qualifier Value 'Rear IR Keypad'	Qualifier Value 'Wired Keypad'
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'On', {'Sensor': 'Front IR Keypad'})			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Input ¹	Value '1' – '20'		
# Input example InterfaceName.Set('Input', '1')			
Command InputPortConfiguration	Value 'One-Port' 'Four-Port Quadrants'	Value 'Two-Port'	Value 'Four-Port Columns'
# InputPortConfiguration example InterfaceName.Set('InputPortConfiguration', 'One-Port')			
Command LensMove	Value 'Left / Down'	Value 'Stop'	Value 'Right / Up'
Qualifier Key 'Direction'	Qualifier Value 'Horizontal'	Qualifier Value 'Vertical'	
# LensMove example			

Global Scripter Module Communication Sheet

InterfaceName.Set('LensMove', 'Left / Down', {'Direction': 'Horizontal'})		
Command OnScreenDisplay	Value 'On'	Value 'Off'
# OnScreenDisplay example InterfaceName.Set('OnScreenDisplay', 'On')		
Command Power	Value 'On'	Value 'Off'
# Power example InterfaceName.Set('Power', 'On')		
Command Shutter	Value 'Open'	Value 'Close'
# Shutter example InterfaceName.Set('Shutter', 'Open')		

¹ List of inputs is dynamic and subject to change. Not all may be available.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value		
AirIntakeTemperature	Integer (°Celsius)		
# AirIntakeTemperature examples InterfaceName.Update('AirIntakeTemperature') Value = InterfaceName.ReadStatus('AirIntakeTemperature') InterfaceName.SubscribeStatus('AirIntakeTemperature', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	
ExecutiveMode	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Sensor'	'Front IR Keypad'	'Rear IR Keypad'	'Wired Keypad'
	'IR over HDBaseT'		
# ExecutiveMode examples InterfaceName.Update('ExecutiveMode', {'Sensor': 'Front IR Keypad'}) Value = InterfaceName.ReadStatus('ExecutiveMode', {'Sensor': 'Front IR Keypad'}) InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)			
Command	Value	Value	
Freeze	'On'	'Off'	
# Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command	Value		

Input ¹	'1' – '20'		
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command LampHours	Value Integer (Hours)		
# LampHours examples InterfaceName.Update('LampHours') Value = InterfaceName.ReadStatus('LampHours') InterfaceName.SubscribeStatus('LampHours', None, FeedbackHandler)			
Command Power	Value 'On' 'Cooling Down'	Value 'Off'	Value 'Warming Up'
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command Shutter	Value 'Open'	Value 'Close'	
# Shutter examples InterfaceName.Update('Shutter') Value = InterfaceName.ReadStatus('Shutter') InterfaceName.SubscribeStatus('Shutter', None, FeedbackHandler)			

¹ List of inputs is dynamic and subject to change. Not all may be available.

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

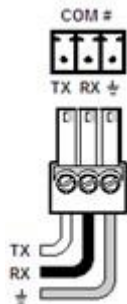

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	3002
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio Default	(SZP 0)
Aspect Ratio Full Height	(SZP 4)
Aspect Ratio Full Size	(SZP 2)
Aspect Ratio Full Width	(SZP 3)
Aspect Ratio None	(SZP 1)
Auto Image None	(ASU)
Executive Mode Off Sensor Front IR Keypad	(KEN+FRNT 0)
Executive Mode On Sensor Front IR Keypad	(KEN+FRNT 1)
Executive Mode Off Sensor IR over HDBaseT	(KEN+HDBT 0)
Executive Mode On Sensor IR over HDBaseT	(KEN+HDBT 1)
Executive Mode Off Sensor Rear IR Keypad	(KEN+REAR 0)
Executive Mode On Sensor Rear IR Keypad	(KEN+REAR 1)
Executive Mode Off Sensor Wired Keypad	(KEN+WIRE 0)
Executive Mode On Sensor Wired Keypad	(KEN+WIRE 1)
Freeze Off	(FRZ 0)
Freeze On	(FRZ 1)
Input 1	SIN 1
Input 20	SIN 20
Input Port Configuration Four-Port Columns	(SIN+PORT 3)
Input Port Configuration Four-Port Quadrants	(SIN+PORT 4)
Input Port Configuration One-Port	(SIN+PORT 1)
Input Port Configuration Two-Port	(SIN+PORT 2)
Lens Move Left / Down Direction Horizontal	(LMV+HRUN -1)
Lens Move Right / Up Direction Horizontal	(LMV+HRUN 1)
Lens Move Stop Direction Horizontal	(LMV+HRUN 0)
Lens Move Left / Down Direction Vertical	(LMV+VRUN -1)
Lens Move Right / Up Direction Vertical	(LMV+VRUN 1)
Lens Move Stop Direction Vertical	(LMV+VRUN 0)
On Screen Display Off	(OSD 0)
On Screen Display On	(OSD 1)
Power Off	(PWR 0)
Power On	(PWR 1)
Shutter Close	(SHU 1)
Shutter Open	(SHU 0)

Appendix B. Update Commands

Air Intake Temperature	(SST+TEMP?2)
Executive Mode Sensor Front IR Keypad	(KEN+FRNT?)
Executive Mode Sensor IR over HDBaseT	(KEN+HDBT?)
Executive Mode Sensor Rear IR Keypad	(KEN+REAR?)
Executive Mode Sensor Wired Keypad	(KEN+WIRE?)
Freeze	(FRZ?)
Input	(SIN?)
Lamp Hours	(HIS+LMP1?)
Power	(PWR?)
Shutter	(SHU?)