

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Christie
Firmware Version: N/A
Model(s): D4K2560, D4K3560

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0002-b002	1.4.2

Version History

Module Version	Date	Notes
1_2_2_0	5/31/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: InterfaceName.connectionCounter = 5

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='D4K2560')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='D4K2560')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 3002, Model='D4K2560')

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command Autolmage	Value 'String'		
# AutoImage example InterfaceName.Set('AutoImage', 'String')			
Command Focus	Value -2000 to 2800 in steps of 1		
# Focus example InterfaceName.Set('Focus', 2800)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command LampMode	Value 'Constant Power Mode'	Value 'Constant Intensity Mode'	
# LampMode example InterfaceName.Set('LampMode', 'Constant Power Mode')			
Command LampPower	Value 1000 to 6600 in steps of 1		
Qualifier Key 'Lamp Type'	Qualifier Value 'CDXL-20' 'CDXL-60'	Qualifier Value 'CDXL-30'	Qualifier Value 'CDXL-45'
# LampPower example InterfaceName.Set('LampPower', 6600, {'Lamp Type': 'CDXL-20'})			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command ScreenOrientation	Value 'Front Projection' 'Rear Projection Inverted'	Value 'Rear Projection'	Value 'Front Projection Inverted'
# ScreenOrientation example InterfaceName.Set('ScreenOrientation', 'Front Projection')			
Command Sharpness	Value 0 to 100 in steps of 1		

Global Scripter Module Communication Sheet

# Sharpness example InterfaceName.Set('Sharpness', 100)		
Command Shutter	Value 'Open'	Value 'Close'
# Shutter example InterfaceName.Set('Shutter', 'Open')		

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command IntegratorRodTemperature	Value 'String'		
# IntegratorRodTemperature examples InterfaceName.Update('IntegratorRodTemperature') Value = InterfaceName.ReadStatus('IntegratorRodTemperature') InterfaceName.SubscribeStatus('IntegratorRodTemperature', None, FeedbackHandler)			
Command LampPower	Value 1000 to 6600 in steps of 1		
Qualifier Key 'Lamp Type'	Qualifier Value 'CDXL-20'	Qualifier Value 'CDXL-30'	Qualifier Value 'CDXL-45'
	'CDXL-60'		
# LampPower examples InterfaceName.Update('LampPower', {'Lamp Type': 'CDXL-20'}) Value = InterfaceName.ReadStatus('LampPower', {'Lamp Type': 'CDXL-20'}) InterfaceName.SubscribeStatus('LampPower', None, FeedbackHandler)			
Command LampUsage	Value —		
# LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)			
Command Power	Value 'On'	Value 'Off'	Value 'Warming Up'

Global Scripter Module Communication Sheet

	'Cooling Down'	
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>		
Command	Value	
Sharpness	0 to 100 in steps of 1	
<pre># Sharpness examples InterfaceName.Update('Sharpness') Value = InterfaceName.ReadStatus('Sharpness') InterfaceName.SubscribeStatus('Sharpness', None, FeedbackHandler)</pre>		
Command	Value	Value
Shutter	'Open'	'Close'
<pre># Shutter examples InterfaceName.Update('Shutter') Value = InterfaceName.ReadStatus('Shutter') InterfaceName.SubscribeStatus('Shutter', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

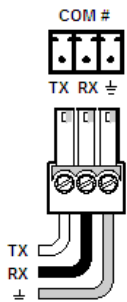

Contact Manufacturer for Information

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	3002
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Auto Image None	(ASU)
Focus -2000.0	(FCS -2000.0)
Focus 2800.0	(FCS 2800.0)
Freeze Off	(FRZ 0)
Freeze On	(FRZ 1)
Lamp Mode Constant Intensity Mode	(LPM 1)
Lamp Mode Constant Power Mode	(LPM 0)
Lamp Power 1000.0 Lamp Type CDXL-20	(LPP 1000.0)
Lamp Power 6600.0 Lamp Type CDXL-60	(LPP 6600.0)
Power Off	(PWR 0)
Power On	(PWR 1)
Screen Orientation Front Projection	(SOR 0)
Screen Orientation Front Projection Inverted	(SOR 2)
Screen Orientation Rear Projection	(SOR 1)
Screen Orientation Rear Projection Inverted	(SOR 3)
Sharpness 0.0	(DTL 0.0)
Sharpness 100.0	(DTL 100.0)
Shutter Close	(SHU 1)
Shutter Open	(SHU 0)

Appendix B. Update Commands

Integrator Rod Temperature	(SST+TEMP!000?)
Lamp Power Lamp Type CDXL-20	(LPP?)
Lamp Power Lamp Type CDXL-30	(LPP?)
Lamp Power Lamp Type CDXL-45	(LPP?)
Lamp Power Lamp Type CDXL-60	(LPP?)
Lamp Usage	(HIS?)
Shutter	(SHU?)