

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Christie
Firmware Version: N/A
Model(s): DWX600-G, DHD600-G, DWU600-G

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0002-b002	1.4.1

Version History

Module Version	Date	Notes
1_0_3_0	11/30/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='DWX600-G')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='DWX600-G')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 3002, Model='DWX600-G')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Auto' 'LetterBox' 'Full Height'	Value 'Native' 'Full Size' 'Custom'	Value '4:3' 'Full Width'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Auto')			
Command AutoImage¹	Value 'Normal'	Value 'Wide'	
# AutoImage example InterfaceName.Set('AutoImage', 'Normal')			
Command ClosedCaption	Value 'CC1'	Value 'CC2'	Value 'Off'
# ClosedCaption example InterfaceName.Set('ClosedCaption', 'CC1')			
Command Input	Value 'VGA' 'DisplayPort' 'Composite' 'Mini USB'	Value 'HDMI' 'Component' 'Christie Presenter'	Value 'DVI-D' 'S-Video' 'Card Reader'
# Input example InterfaceName.Set('Input', 'VGA')			
Command LampMode	Value 'Normal'	Value 'Eco'	Value 'Auto'
# LampMode example InterfaceName.Set('LampMode', 'Normal')			
Command OnScreenDisplay	Value 'On'	Value 'Off'	
# OnScreenDisplay example InterfaceName.Set('OnScreenDisplay', 'On')			
Command PIPMODE	Value 'On'	Value 'Off'	
# PIPMode example InterfaceName.Set('PIPMODE', 'On')			

Global Scripter Module Communication Sheet

Command PIPPosition	Value 'Left' 'Bottom' 'Top Left'	Value 'Top' 'Bottom Right' 'Top Right'	Value 'Right' 'Bottom Left'
# PIPPosition example InterfaceName.Set('PIPPosition', 'Left')			
Command PIPSize	Value 'Small'	Value 'Medium'	Value 'Large'
# PIPSize example InterfaceName.Set('PIPSize', 'Small')			
Command PIPSwap	Value None		
# PIPSwap example InterfaceName.Set('PIPSwap', None)			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Shutter	Value 'On'	Value 'Off'	

¹ Normal mode supports all 4:3 input sources. Wide mode supports all 16:9 input sources and most 4:3 input sources.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Auto'	Value 'Native'	Value '4:3'
	'LetterBox'	'Full Size'	'Full Width'
	'Full Height'	'Custom'	
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ClosedCaption	Value 'CC1'	Value 'CC2'	Value 'Off'
# ClosedCaption examples InterfaceName.Update('ClosedCaption') Value = InterfaceName.ReadStatus('ClosedCaption') InterfaceName.SubscribeStatus('ClosedCaption', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value 'VGA'	Value 'HDMI'	Value 'DVI-D'
	'DisplayPort'	'Component'	'S-Video'
	'Composite'	'Christie Presenter'	'Card Reader'
	'Mini USB'		
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 11/30/2017

Command LampMode	Value 'Normal'	Value 'Eco'	Value 'Auto'
<pre># LampMode examples InterfaceName.Update('LampMode') Value = InterfaceName.ReadStatus('LampMode') InterfaceName.SubscribeStatus('LampMode', None, FeedbackHandler)</pre>			
Command LampUsage	Value 0 –		
<pre># LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)</pre>			
Command OnScreenDisplay	Value 'On'	Value 'Off'	
<pre># OnScreenDisplay examples InterfaceName.Update('OnScreenDisplay') Value = InterfaceName.ReadStatus('OnScreenDisplay') InterfaceName.SubscribeStatus('OnScreenDisplay', None, FeedbackHandler)</pre>			
Command PIPMODE	Value 'On'	Value 'Off'	
<pre># PIPMode examples InterfaceName.Update('PIPMODE') Value = InterfaceName.ReadStatus('PIPMODE') InterfaceName.SubscribeStatus('PIPMODE', None, FeedbackHandler)</pre>			
Command PIPPosition	Value 'Left' 'Bottom' 'Top Left'	Value 'Top' 'Bottom Right' 'Top Right'	Value 'Right' 'Bottom Left'
<pre># PIPPosition examples InterfaceName.Update('PIPPosition') Value = InterfaceName.ReadStatus('PIPPosition') InterfaceName.SubscribeStatus('PIPPosition', None, FeedbackHandler)</pre>			
Command PIPSize	Value 'Small'	Value 'Medium'	Value 'Large'
<pre># PIPSize examples InterfaceName.Update('PIPSize') Value = InterfaceName.ReadStatus('PIPSize') InterfaceName.SubscribeStatus('PIPSize', None, FeedbackHandler)</pre>			
Command Power	Value 'On' 'Cooling Down'	Value 'Off'	Value 'Warming Up'
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			

Global Scripter Module Communication Sheet

Command	Value	Value
Shutter	'On'	'Off'
<pre># Shutter examples InterfaceName.Update('Shutter') Value = InterfaceName.ReadStatus('Shutter') InterfaceName.SubscribeStatus('Shutter', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

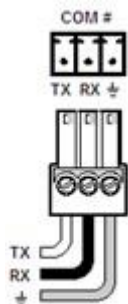

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND		5	GND

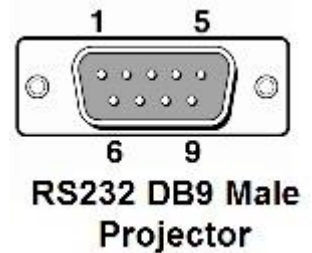

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	3002
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio Auto	(SZP0)
Aspect Ratio Custom	(SZP7)
Aspect Ratio Full Height	(SZP6)
Aspect Ratio Full Size	(SZP4)
Aspect Ratio Full Width	(SZP5)
Aspect Ratio LetterBox	(SZP3)
Aspect Ratio Native	(SZP1)
Auto Image Normal	(AIM0)
Auto Image Wide	(AIM1)
Closed Caption CC1	(CLC1)
Closed Caption CC2	(CLC2)
Closed Caption Off	(CLC0)
Input Card Reader	(SIN11)
Input Christie Presenter	(SIN10)
Input Component	(SIN7)
Input Composite	(SIN9)
Input DVI-D	(SIN5)
Input DisplayPort	(SIN6)
Input HDMI	(SIN4)
Input Mini USB	(SIN12)
Input S-Video	(SIN8)
Input VGA	(SIN1)
Lamp Mode Auto	(LPM1)
Lamp Mode Eco	(LPM2)
Lamp Mode Normal	(LPM0)
On Screen Display Off	(OSD0)
On Screen Display On	(OSD1)
PIP Mode Off	(PIP 0)
PIP Mode On	(PIP 1)
PIP Position Bottom	(PPP3)
PIP Position Bottom Left	(PPP5)
PIP Position Bottom Right	(PPP4)
PIP Position Left	(PPP0)
PIP Position Right	(PPP2)
PIP Position Top	(PPP1)
PIP Position Top Left	(PPP6)
PIP Position Top Right	(PPP7)
PIP Size Large	(PHS2)
PIP Size Medium	(PHS1)

Global Scripter Module Communication Sheet

PIP Size Small	(PHS0)
PIP Swap None	(PPS1)
Power Off	(PWR0)
Power On	(PWR1)
Shutter Off	(SHU0)
Shutter On	(SHU1)

Appendix B. Update Commands

Closed Caption	(CLC?)
Input	(SIN?)
Lamp Mode	(LPM?)
Lamp Usage	(LIF+LP1H?)
On Screen Display	(OSD?)
PIP Mode	(PIP?)
PIP Position	(PPP?)
PIP Size	(PHS?)
Power	(PWR?)
Shutter	(SHU?)