

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Camera
Manufacturer: ClearOne
Firmware Version: N/A
Model(s): UNITE 200, UNITE 100

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_1_0_0	9/8/2017	Added Auto Focus to Ethernet protocol. Added Image Flip to Serial and Ethernet. Changed Preset range to 0-254.
1_0_1_0	8/15/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. Device ID ranges from '1' to '7'.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='UNITE 200')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='UNITE 200')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 5678, Model='UNITE 200')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AutoExposure	Value 'Full Auto' 'Iris Priority'	Value 'Manual' 'Bright'	Value 'Shutter Priority'
# AutoExposure example InterfaceName.Set('AutoExposure', 'Full Auto')			
Command AutoFocus	Value 'Auto'	Value 'Manual'	
# AutoFocus example InterfaceName.Set('AutoFocus', 'Auto')			
Command Focus	Value 'Far'	Value 'Near'	Value 'Stop'
# Focus example InterfaceName.Set('Focus', 'Far')			
Command Home	Value None		
# Home example InterfaceName.Set('Home', None)			
Command ImageFlip	Value 'On'	Value 'Off'	
Qualifier Key 'Type'	Qualifier Value 'Horizontal'	Qualifier Value 'Vertical'	
# ImageFlip example InterfaceName.Set('ImageFlip', 'On', {'Type': 'Horizontal'})			
Command Iris	Value 'Reset'	Value 'Up'	Value 'Down'
# Iris example InterfaceName.Set('Iris', 'Reset')			
Command PanTilt	Value 'Up' 'Right' 'Down Left'	Value 'Down' 'Up Left' 'Down Right'	Value 'Left' 'Up Right' 'Stop'
Qualifier Key 'Tilt Speed'	Qualifier Value '1' – '20'		

Global Scripter Module Communication Sheet

Qualifier Key 'Pan Speed'	Qualifier Value '1' – '24'		
# PanTilt example InterfaceName.Set('PanTilt', 'Up', {'Tilt Speed': '1', 'Pan Speed': '1'})			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Preset	Value '0' – '254'		
Qualifier Key 'Action'	Qualifier Value 'Reset'	Qualifier Value 'Save'	Qualifier Value 'Recall'
# Preset example InterfaceName.Set('Preset', '0', {'Action': 'Reset'})			
Command ResetPanTilt	Value None		
# ResetPanTilt example InterfaceName.Set('ResetPanTilt', None)			
Command Shutter	Value 'Reset'	Value 'Up'	Value 'Down'
# Shutter example InterfaceName.Set('Shutter', 'Reset')			
Command Zoom	Value 'Tele'	Value 'Wide'	Value 'Stop'
Qualifier Key 'Zoom Speed'	Qualifier Value '0' – '7'		
# Zoom example InterfaceName.Set('Zoom', 'Tele', {'Zoom Speed': '0'})			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AutoExposure	Value 'Full Auto' 'Iris Priority'	Value 'Manual' 'Bright'	Value 'Shutter Priority'
# AutoExposure examples InterfaceName.Update('AutoExposure') Value = InterfaceName.ReadStatus('AutoExposure') InterfaceName.SubscribeStatus('AutoExposure', None, FeedbackHandler)			
Command AutoFocus	Value 'Auto'	Value 'Manual'	
# AutoFocus examples InterfaceName.Update('AutoFocus') Value = InterfaceName.ReadStatus('AutoFocus') InterfaceName.SubscribeStatus('AutoFocus', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Power	Value 'On'	Value 'Off'	
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to DIN-8 VISCA Serial Cable.

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

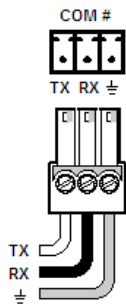

Signal	Main Cable	Pin	Signal
TxD	→	5	RxD
RxD	←	3	TxD
GND	→	4	GND

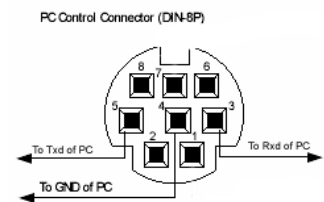

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	5678
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Auto Exposure Bright	\x80\x01\x049\x0D\xFF
Auto Exposure Full Auto	\x80\x01\x049\x00\xFF
Auto Exposure Iris Priority	\x80\x01\x049\x0B\xFF
Auto Exposure Manual	\x80\x01\x049\x03\xFF
Auto Exposure Shutter Priority	\x80\x01\x049\x0A\xFF
Auto Focus Auto	\x80\x01\x048\x02\xFF
Auto Focus Manual	\x80\x01\x048\x03\xFF
Focus Far	\x80\x01\x04\x08\x03\xFF
Focus Near	\x80\x01\x04\x08\x02\xFF
Focus Stop	\x80\x01\x04\x08\x00\xFF
Home None	\x80\x01\x06\x04\xFF
Image Flip Off Type Horizontal	\x80\x01\x04a\x03\xFF
Image Flip Off Type Vertical	\x80\x01\x04f\x03\xFF
Image Flip On Type Horizontal	\x80\x01\x04a\x02\xFF
Image Flip On Type Vertical	\x80\x01\x04f\x02\xFF
Iris Down	\x80\x01\x04\x0B\x03\xFF
Iris Reset	\x80\x01\x04\x0B\x00\xFF
Iris Up	\x80\x01\x04\x0B\x02\xFF
Pan-Tilt Down Left Pan Speed 1 Tilt Speed 1	\x80\x01\x06\x01\x01\x01\x02\xFF
Pan-Tilt Down Left Pan Speed 1 Tilt Speed 20	\x80\x01\x06\x01\x01\x14\x02\xFF
Pan-Tilt Down Left Pan Speed 24 Tilt Speed 1	\x80\x01\x06\x01\x18\x01\x02\xFF
Pan-Tilt Down Left Pan Speed 24 Tilt Speed 20	\x80\x01\x06\x01\x18\x14\x02\xFF
Pan-Tilt Down Pan Speed 1 Tilt Speed 1	\x80\x01\x06\x01\x01\x03\x02\xFF
Pan-Tilt Down Pan Speed 1 Tilt Speed 20	\x80\x01\x06\x01\x01\x14\x03\x02\xFF
Pan-Tilt Down Pan Speed 24 Tilt Speed 1	\x80\x01\x06\x01\x18\x01\x03\x02\xFF
Pan-Tilt Down Pan Speed 24 Tilt Speed 20	\x80\x01\x06\x01\x18\x14\x03\x02\xFF
Pan-Tilt Down Right Pan Speed 1 Tilt Speed 1	\x80\x01\x06\x01\x01\x01\x02\x02\xFF
Pan-Tilt Down Right Pan Speed 1 Tilt Speed 20	\x80\x01\x06\x01\x01\x14\x02\x02\xFF
Pan-Tilt Down Right Pan Speed 24 Tilt Speed 1	\x80\x01\x06\x01\x18\x01\x02\x02\xFF
Pan-Tilt Down Right Pan Speed 24 Tilt Speed 20	\x80\x01\x06\x01\x18\x14\x02\x02\xFF
Pan-Tilt Left Pan Speed 1 Tilt Speed 1	\x80\x01\x06\x01\x01\x01\x03\xFF
Pan-Tilt Left Pan Speed 1 Tilt Speed 20	\x80\x01\x06\x01\x01\x14\x01\x03\xFF
Pan-Tilt Left Pan Speed 24 Tilt Speed 1	\x80\x01\x06\x01\x18\x01\x01\x03\xFF
Pan-Tilt Left Pan Speed 24 Tilt Speed 20	\x80\x01\x06\x01\x18\x14\x01\x03\xFF
Pan-Tilt Right Pan Speed 1 Tilt Speed 1	\x80\x01\x06\x01\x01\x01\x02\x03\xFF
Pan-Tilt Right Pan Speed 1 Tilt Speed 20	\x80\x01\x06\x01\x01\x14\x02\x03\xFF
Pan-Tilt Right Pan Speed 24 Tilt Speed 1	\x80\x01\x06\x01\x18\x01\x02\x03\xFF
Pan-Tilt Right Pan Speed 24 Tilt Speed 20	\x80\x01\x06\x01\x18\x14\x02\x03\xFF
Pan-Tilt Stop Pan Speed 1 Tilt Speed 1	\x80\x01\x06\x01\x01\x01\x03\x03\xFF
Pan-Tilt Stop Pan Speed 1 Tilt Speed 20	\x80\x01\x06\x01\x01\x14\x03\x03\xFF
Pan-Tilt Stop Pan Speed 24 Tilt Speed 1	\x80\x01\x06\x01\x18\x01\x03\x03\xFF
Pan-Tilt Stop Pan Speed 24 Tilt Speed 20	\x80\x01\x06\x01\x18\x14\x03\x03\xFF

Global Scripter Module Communication Sheet

Pan-Tilt Up Left Pan Speed 1 Tilt Speed 1	\x80\x01\x06\x01\x01\x01\x01\xFF
Pan-Tilt Up Left Pan Speed 1 Tilt Speed 20	\x80\x01\x06\x01\x01\x14\x01\x01\xFF
Pan-Tilt Up Left Pan Speed 24 Tilt Speed 1	\x80\x01\x06\x01\x18\x01\x01\x01\xFF
Pan-Tilt Up Left Pan Speed 24 Tilt Speed 20	\x80\x01\x06\x01\x18\x14\x01\x01\xFF
Pan-Tilt Up Pan Speed 1 Tilt Speed 1	\x80\x01\x06\x01\x01\x01\x03\x01\xFF
Pan-Tilt Up Pan Speed 1 Tilt Speed 20	\x80\x01\x06\x01\x01\x14\x03\x01\xFF
Pan-Tilt Up Pan Speed 24 Tilt Speed 1	\x80\x01\x06\x01\x18\x01\x03\x01\xFF
Pan-Tilt Up Pan Speed 24 Tilt Speed 20	\x80\x01\x06\x01\x18\x14\x03\x01\xFF
Pan-Tilt Up Right Pan Speed 1 Tilt Speed 1	\x80\x01\x06\x01\x01\x01\x02\x01\xFF
Pan-Tilt Up Right Pan Speed 1 Tilt Speed 20	\x80\x01\x06\x01\x01\x14\x02\x01\xFF
Pan-Tilt Up Right Pan Speed 24 Tilt Speed 1	\x80\x01\x06\x01\x18\x01\x02\x01\xFF
Pan-Tilt Up Right Pan Speed 24 Tilt Speed 20	\x80\x01\x06\x01\x18\x14\x02\x01\xFF
Power Off	\x80\x01\x04\x00\x03\xFF
Power On	\x80\x01\x04\x00\x02\xFF
Preset 0 Action Recall	\x80\x01\x04?\x02\x00\xFF
Preset 0 Action Reset	\x80\x01\x04?\x00\x00\xFF
Preset 0 Action Save	\x80\x01\x04?\x01\x00\xFF
Preset 254 Action Recall	\x80\x01\x04?\x02\xFE\xFF
Preset 254 Action Reset	\x80\x01\x04?\x00\xFE\xFF
Preset 254 Action Save	\x80\x01\x04?\x01\xFE\xFF
Reset Pan-Tilt None	\x80\x01\x06\x05\xFF
Shutter Down	\x80\x01\x04\x0A\x03\xFF
Shutter Reset	\x80\x01\x04\x0A\x00\xFF
Shutter Up	\x80\x01\x04\x0A\x02\xFF
Zoom Stop Zoom Speed 0	\x80\x01\x04\x07\x00\xFF
Zoom Stop Zoom Speed 7	\x80\x01\x04\x07\x00\xFF
Zoom Tele Zoom Speed 0	\x80\x01\x04\x07 \xFF
Zoom Tele Zoom Speed 7	\x80\x01\x04\x07" \xFF
Zoom Wide Zoom Speed 0	\x80\x01\x04\x070\xFF
Zoom Wide Zoom Speed 7	\x80\x01\x04\x077\xFF

Appendix B. Query Commands

Auto Exposure	\x80\x09\x049\xFF
Auto Focus	\x80\x09\x048\xFF
Power	\x80\x09\x04\x00\xFF
Zoom Position	\x80\x09\x04G\xFF