

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type:	Video Conference
Manufacturer:	ClearOne
Firmware Version:	N/A
Model(s):	COLLABORATE Room Pro 500, COLLABORATE Room Pro 600, COLLABORATE Room Pro 900, COLLABORATE Room Pro 300

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.03.0000-b006	2.3.0

Version History

Module Version	Date	Notes
1_2_1_0	6/18/2019	Added model COLLABORATE Room Pro 300. Updated Keypad command: - Removed unsupported '#' value. - Renamed '.' To 'Dot'. - Added 'Clear' value. Updated DTMF command: - Removed unsupported '.' value. - Added '#' and '*' values.
1_1_5_0	7/20/2018	Added Local Contact List functionality. Added CameraNearFar command.
1_1_2_0	2/21/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly.
Example: `InterfaceName.deviceUsername = 'admin'`
`InterfaceName.devicePassword = 'extron'`
- LocalContactListDisplayCount variable must be set accordingly. Default value is '5'.
LocalContactListDisplayCount ranges from '1' to '10'.
Example: `InterfaceName.LocalContactListDisplayCount = '5'`

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='COLLABORATE Room Pro 500')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='COLLABORATE Room Pro 500')
```

EthernetClass

```
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='COLLABORATE Room Pro 500')
```

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	
AutoAnswer	'On'	'Off'	
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command	Value		
CameraNearFar	None		
# CameraNearFar example InterfaceName.Set('CameraNearFar', None)			
Command	Value		
CameraSelect ⁴	'1' – '9'		
# CameraSelect example InterfaceName.Set('CameraSelect', '1')			
Command	Value	Value	
DoNotDisturb	'Enable'	'Disable'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Enable')			
Command	Value	Value	Value
DTMF	'0' – '9'	'#'	'*'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command	Value	Value	Value
Hook	'Accept' 'Reject'	'Dial'	'On'
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Call Type'	'LAN' 'None'	'ISDN'	'Audio'
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Bandwidth'	'64' '384' '1532' '3072' '4608' '6144'	'128' '512' '2048' '3584' '5120' 'None'	'256' '1024' '2560' '4096' '5632'
Qualifier Key	Qualifier Value		
'Number'	String		
# Hook example (Dial) InterfaceName.Set('Hook', 'Dial', {'Call Type': 'LAN', 'Bandwidth': '64', 'Number': 'String'}) # Hook example (Accept/On/Reject) InterfaceName.Set('Hook', 'Accept')			
Command	Value	Value	Value
Keypad	'0' – '9'	'Dot'	'Clear'
# Keypad example InterfaceName.Set('Keypad', '0')			
Command	Value	Value	Value

Global Scripter Module Communication Sheet

Revision: 6/18/2019

LocalContactListNavigation	'Up'	'Down'	'Page Up'
	'Page Down'		
# LocalContactListNavigation example InterfaceName.Set('LocalContactListNavigation', 'Up')			
Command LocalContactListResultSet ²	Value None		
Qualifier Key 'Position'	Qualifier Value '1' – '10'		
Qualifier Key 'Call Type'	Qualifier Value 'LAN' 'None'	Qualifier Value 'ISDN'	Qualifier Value 'Audio'
Qualifier Key 'Bandwidth'	Qualifier Value '64' '384' '1532' '3072' '4608' '6144'	Qualifier Value '128' '512' '2048' '3584' '5120' 'None'	Qualifier Value '256' '1024' '2560' '4096' '5632'
# LocalContactListResultSet example InterfaceName.Set('LocalContactListResultSet', None, {'Position': '1', 'Call Type': 'LAN', 'Bandwidth': '64'})			
Command LocalContactListUpdate	Value None		
# LocalContactListUpdate example InterfaceName.Set('LocalContactListUpdate', None)			
Command MenuNavigation	Value 'Up' 'Right' 'Menu'	Value 'Down' 'Enter'	Value 'Left' 'Cancel'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command Microphone	Value 'On'	Value 'Off'	
# Microphone example InterfaceName.Set('Microphone', 'On')			
Command Multicast ⁴	Value 'Start'	Value 'Stop'	
# Multicast example InterfaceName.Set('Multicast', 'Start')			
Command PanTilt	Value 'Up' 'Right' 'Down-Left'	Value 'Down' 'Up-Left' 'Down-Right'	Value 'Left' 'Up-Right' 'Stop'
# PanTilt example InterfaceName.Set('PanTilt', 'Up')			
Command PhoneBook	Value None		
# PhoneBook example InterfaceName.Set('PhoneBook', None)			
Command PresetRestore	Value '1' – '9'	Value '10' – '18' ³	
# PresetRestore example InterfaceName.Set('PresetRestore', '1')			

Global Scripter Module Communication Sheet

Command	Value	Value	
PresetSave	'1' – '9'	'10' – '18' ³	
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command	Value	Value	
Recording ⁴	'Start'	'Stop'	
# Recording example InterfaceName.Set('Recording', 'Start')			
Command	Value	Value	
RiseException	'On'	'Off'	
# RiseException example InterfaceName.Set('RiseException', 'On')			
Command	Value	Value	
SecurityMode	'Auto'	'None'	
# SecurityMode example InterfaceName.Set('SecurityMode', 'Auto')			
Command	Value	Value	
ShareHDMI	'Start'	'Stop'	
Qualifier Key	Qualifier Value	Qualifier Value	
'Input'	'HDMI 1'	'HDMI 2'	
# ShareHDMI example InterfaceName.Set('ShareHDMI', 'Start', {'Input': 'HDMI 1'})			
Command	Value	Value	
ShareLaptop	'Start'	'Stop'	
# ShareLaptop example InterfaceName.Set('ShareLaptop', 'Start')			
Command	Value	Value	
ShareWireless	'Start'	'Stop'	
# ShareWireless example InterfaceName.Set('ShareWireless', 'Start')			
Command	Value	Value	
Shutdown	'Shutdown'	'Restart'	
# Shutdown example InterfaceName.Set('Shutdown', 'Shutdown')			
Command	Value	Value	
Speaker	'On'	'Off'	
# Speaker example InterfaceName.Set('Speaker', 'On')			
Command	Value		
Status	None		
# Status example InterfaceName.Set('Status', None)			
Command	Value	Value	
Streaming	'Start'	'Stop'	
# Streaming example InterfaceName.Set('Streaming', 'Start')			
Command	Value		
Volume	0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			
Command	Value	Value	Value
Zoom	'Tele'	'Wide'	'Stop'
# Zoom example InterfaceName.Set('Zoom', 'Tele')			

¹ Only Hook 'Dial' command requires 'Call Type', 'Bandwidth', and 'Number' qualifiers

² LocalContactListResultSet sends the Hook 'Dial' command so 'Call Type' and 'Bandwidth' is required.

³ Only supported on model COLLABORATE Room Pro 300.

⁴ Not supported on model COLLABORATE Room Pro 300.

Status Available

For all commands except HookStatus and LocalContactListResults, call Update to receive the latest status. ConnectionStatus, HookStatus, and LocalContactListResults do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls. HookStatus is based off unsolicited responses.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
AutoAnswer	'On'	'Off'
# AutoAnswer example InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)		
Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	Value
HookStatus	'Ringing'	'Connected'
	'Connecting'	'Idling'
Value = InterfaceName.ReadStatus('HookStatus') InterfaceName.SubscribeStatus('HookStatus', None, FeedbackHandler)		
Command	Value	Value
LocalContactListResults	'String'	
Qualifier Key	Qualifier Value	
'Position'	'1' – '10'	
Value = InterfaceName.ReadStatus('LocalContactListResults', {'Position': '1'}) InterfaceName.SubscribeStatus('LocalContactListResults', None, FeedbackHandler)		
Command	Value	Value
Microphone	'On'	'Off'
# Microphone example InterfaceName.Update('Microphone') Value = InterfaceName.ReadStatus('Microphone') InterfaceName.SubscribeStatus('Microphone', None, FeedbackHandler)		
Command	Value	Value
RiseException	'On'	'Off'
# RiseException example InterfaceName.Update('RiseException') Value = InterfaceName.ReadStatus('RiseException') InterfaceName.SubscribeStatus('RiseException', None, FeedbackHandler)		
Command	Value	Value
SecurityMode	'Auto'	'None'
# SecurityMode example		

Global Scripter Module Communication Sheet

Revision: 6/18/2019

<pre>InterfaceName.Update('SecurityMode') Value = InterfaceName.ReadStatus('SecurityMode') InterfaceName.SubscribeStatus('SecurityMode', None, FeedbackHandler)</pre>		
Command Speaker	Value 'On'	Value 'Off'
<pre># Speaker example InterfaceName.Update('Speaker') Value = InterfaceName.ReadStatus('Speaker') InterfaceName.SubscribeStatus('Speaker', None, FeedbackHandler)</pre>		
Command Volume	Value 0 to 100 in steps of 1	
<pre># Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Contact manufacturer for information regarding device cable and adapter requirements.

Notes for the Device

Only COM Port 2 of the device can be used for RS-232 control.

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

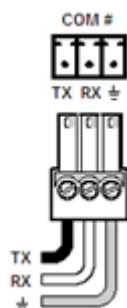

Contact manufacturer for information regarding the pin assignments diagram.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	Yes
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Auto Answer Off	set autoanswer off\x0D\x0A
Auto Answer On	set autoanswer on\x0D\x0A
Camera Near Far None	remotecontrol 5\x0D\x0A
Camera Select 1	change_camera 1\x0D\x0A
Camera Select 9	change_camera 9\x0D\x0A
Do Not Disturb Disable	donotdisturb disable\x0D\x0A
Do Not Disturb Enable	donotdisturb enable\x0D\x0A
DTMF #	dtmf #\x0D\x0A
DTMF *	dtmf *\x0D\x0A
DTMF 0	dtmf 0\x0D\x0A
DTMF 9	dtmf 9\x0D\x0A
Hook Accept	accept\x0D\x0A
Hook On	hangup\x0D\x0A
Hook Reject	reject\x0D\x0A
Hook Dial Call Type Audio Bandwidth 128 Number String	dial string audio 128\x0D\x0A
Hook Dial Call Type ISDN Bandwidth 256 Number String	dial string isdn 256\x0D\x0A
Hook Dial Call Type lan Bandwidth 512 Number String	dial string lan 512\x0D\x0A
Keypad 0	remotecontrol 38\x0D\x0A
Keypad 1	remotecontrol 29\x0D\x0A
Keypad 2	remotecontrol 30\x0D\x0A
Keypad 3	remotecontrol 31\x0D\x0A
Keypad 4	remotecontrol 32\x0D\x0A
Keypad 5	remotecontrol 33\x0D\x0A
Keypad 6	remotecontrol 34\x0D\x0A
Keypad 7	remotecontrol 35\x0D\x0A
Keypad 8	remotecontrol 36\x0D\x0A
Keypad 9	remotecontrol 37\x0D\x0A
Keypad Clear	remotecontrol 40\x0D\x0A
Keypad Dot	remotecontrol 39\x0D\x0A
Menu Navigation Cancel	remotecontrol 22\x0D\x0A
Menu Navigation Down	remotecontrol 21\x0D\x0A
Menu Navigation Enter	remotecontrol 17\x0D\x0A
Menu Navigation Left	remotecontrol 19\x0D\x0A
Menu Navigation Menu	remotecontrol 14\x0D\x0A
Menu Navigation Right	remotecontrol 18\x0D\x0A
Menu Navigation Up	remotecontrol 20\x0D\x0A
Microphone Off	set mic off\x0D\x0A
Microphone On	set mic on\x0D\x0A
Multicast Start	multicast start\x0D\x0A
Multicast Stop	multicast stop\x0D\x0A

Global Scripter Module Communication Sheet

Pan Tilt Down	camerastart d\x0D\x0A
Pan Tilt Down-Left	camerastart dl\x0D\x0A
Pan Tilt Down-Right	camerastart dr\x0D\x0A
Pan Tilt Left	camerastart l\x0D\x0A
Pan Tilt Right	camerastart r\x0D\x0A
Pan Tilt Stop	camerastop spt\x0D\x0A
Pan Tilt Up	camerastart u\x0D\x0A
Pan Tilt Up-Left	camerastart ul\x0D\x0A
Pan Tilt Up-Right	camerastart ur\x0D\x0A
Phone Book None	remotecontrol 3\x0D\x0A
Preset Restore 1	camerapos restore 1\x0D\x0A
Preset Restore 18	camerapos restore 18\x0D\x0A
Preset Restore 9	camerapos restore 9\x0D\x0A
Preset Save 1	camerapos save 1\x0D\x0A
Preset Save 18	camerapos save 18\x0D\x0A
Preset Save 9	camerapos save 9\x0D\x0A
Recording Start	recording start\x0D\x0A
Recording Stop	recording stop\x0D\x0A
Rise Exception Off	set rise_exception off\x0D\x0A
Rise Exception On	set rise_exception on\x0D\x0A
Security Mode Auto	set security_mode auto\x0D\x0A
Security Mode None	set security_mode none\x0D\x0A
Share HDMI Start Input HDMI 1	sharehdm1 start\x0D\x0A
Share HDMI Start Input HDMI 2	sharehdm2 start\x0D\x0A
Share HDMI Stop Input HDMI 1	sharehdm1 stop\x0D\x0A
Share HDMI Stop Input HDMI 2	sharehdm2 stop\x0D\x0A
Share Laptop Start	sharelaptop start\x0D\x0A
Share Laptop Stop	sharelaptop stop\x0D\x0A
Share Wireless Start	sharewireless start\x0D\x0A
Share Wireless Stop	sharewireless stop\x0D\x0A
Shutdown Restart	restart\x0D\x0A
Shutdown Shutdown	shutdown\x0D\x0A
Speaker Off	set speaker off\x0D\x0A
Speaker On	set speaker on\x0D\x0A
Status None	remotecontrol 1\x0D\x0A
Streaming Start	streaming start\x0D\x0A
Streaming Stop	streaming stop\x0D\x0A
Volume 0	set volume 0\x0D\x0A
Volume 100	set volume 100\x0D\x0A
Zoom Stop	camerastop sz\x0D\x0A
Zoom Tele	camerastart zi\x0D\x0A
Zoom Wide	camerastart zo\x0D\x0A

Appendix B. Update Commands

Auto Answer	get autoanswer\x0D\x0A
Microphone	get mic\x0D\x0A
Rise Exception	get rise_exception\x0D\x0A
Security Mode	get security_mode\x0D\x0A
Speaker	get speaker\x0D\x0A
Volume	get volume\x0D\x0A