

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
Manufacturer: Clear Touch
Firmware Version: N/A
Model(s): 6086H+UH20, 6075H+UH20, 6070H+UH20, 6065H+UH20, 6055H+UH20

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0001-b003	1.4.1

Version History

Module Version	Date	Notes
1_0_0_0	11/9/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='6086H+UH20')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='6086H+UH20')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value '16:9'	Value '4:3'	Value 'PTP'
# AspectRatio example InterfaceName.Set('AspectRatio', '16:9')			
Command Input	Value 'VGA 1' 'HDMI 3' 'Android+'	Value 'HDMI 1' 'PC'	Value 'HDMI 2' 'Android'
# Input example InterfaceName.Set('Input', 'VGA 1')			
Command Keypad	Value '1' – '9'		
# Keypad example InterfaceName.Set('Keypad', '1')			
Command MenuNavigation	Value 'Up' 'Right' 'Menu'	Value 'Down' 'Enter'	Value 'Left' 'Back'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command Mute	Value 'On'	Value 'Off'	
# Mute example InterfaceName.Set('Mute', 'On')			
Command PCPower	Value 'On'	Value 'Off'	
# PCPower example InterfaceName.Set('PCPower', 'On')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command TVChannelCommand	Value 0 to 99 in steps of 1		

Global Scripter Module Communication Sheet

# TVChannelCommand example InterfaceName.Set('TVChannelCommand', 'String')	
Command Volume	Value 0 to 100 in steps of 1
# Volume example InterfaceName.Set('Volume', 100)	

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'VGA 1'	'HDMI 1'	'HDMI 2'
	'HDMI 3'	'PC'	'Android'
	'Android+'		
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	
Mute	'On'	'Off'	
# Mute examples InterfaceName.Update('Mute') Value = InterfaceName.ReadStatus('Mute') InterfaceName.SubscribeStatus('Mute', None, FeedbackHandler)			
Command	Value	Value	Value
PCPower	'On'	'Off'	'Sleep'
	'Hibernate'		
# PCPower examples InterfaceName.Update('PCPower') Value = InterfaceName.ReadStatus('PCPower') InterfaceName.SubscribeStatus('PCPower', None, FeedbackHandler)			
Command	Value	Value	
Power	'On'	'Off'	

Global Scripter Module Communication Sheet

```
# Power examples
InterfaceName.Update('Power')
Value = InterfaceName.ReadStatus('Power')
InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)
```

Command

Value

Volume

0 to 100 in steps of 1

```
# Volume examples
InterfaceName.Update('Volume')
Value = InterfaceName.ReadStatus('Volume')
InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)
```

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

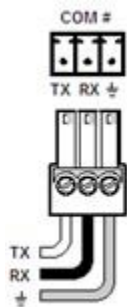

Signal	Main Cable	Pin	Signal
TxD	→	3	RxD
RxD	←	2	TxD
GND	→	5	GND

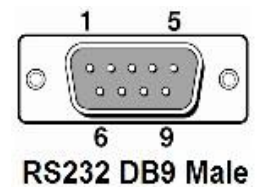

Appendix A. Set Commands

Aspect Ratio 16:9	\xAA\xBB\xCC\x08\x00\x00\x08\xDD\xEE\xFF
Aspect Ratio 4:3	\xAA\xBB\xCC\x08\x01\x00\x09\xDD\xEE\xFF
Aspect Ratio PTP	\xAA\xBB\xCC\x08\x07\x00\x0F\xDD\xEE\xFF
Input Android	\xAA\xBB\xCC\x02\x0A\x00\x0C\xDD\xEE\xFF
Input Android+	\xAA\xBB\xCC\x02\x0E\x00\x10\xDD\xEE\xFF
Input HDMI 1	\xAA\xBB\xCC\x02\x06\x00\x08\xDD\xEE\xFF
Input HDMI 2	\xAA\xBB\xCC\x02\x07\x00\x09\xDD\xEE\xFF
Input HDMI 3	\xAA\xBB\xCC\x02\x05\x00\x07\xDD\xEE\xFF
Input PC	\xAA\xBB\xCC\x02\x08\x00\x0A\xDD\xEE\xFF
Input VGA 1	\xAA\xBB\xCC\x02\x03\x00\x05\xDD\xEE\xFF
Keypad 0	\xAA\xBB\xCC\x07\x1B\x00"\xDD\xEE\xFF
Keypad 9	\xAA\xBB\xCC\x07\x19\x00 \xDD\xEE\xFF
Menu Navigation Back	\xAA\xBB\xCC\x07\x0A\x00\x11\xDD\xEE\xFF
Menu Navigation Down	\xAA\xBB\xCC\x07M\x00T\xDD\xEE\xFF
Menu Navigation Enter	\xAA\xBB\xCC\x07J\x00Q\xDD\xEE\xFF
Menu Navigation Left	\xAA\xBB\xCC\x07I\x00P\xDD\xEE\xFF
Menu Navigation Menu	\xAA\xBB\xCC\x07\x0D\x00\x14\xDD\xEE\xFF
Menu Navigation Right	\xAA\xBB\xCC\x07K\x00R\xDD\xEE\xFF
Menu Navigation Up	\xAA\xBB\xCC\x07G\x00N\xDD\xEE\xFF
Mute Off	\xAA\xBB\xCC\x03\x01\x01\x05\xDD\xEE\xFF
Mute On	\xAA\xBB\xCC\x03\x01\x00\x04\xDD\xEE\xFF
PC Power Off	\xAA\xBB\xCC\x09\x00\x00\x09\xDD\xEE\xFF
PC Power On	\xAA\xBB\xCC\x09\x01\x00\x0A\xDD\xEE\xFF
Power Off	\xAA\xBB\xCC\x01\x01\x00\x02\xDD\xEE\xFF
Power On	\xAA\xBB\xCC\x01\x00\x00\x01\xDD\xEE\xFF
Volume 0	\xAA\xBB\xCC\x03\x00\x00\x03\xDD\xEE\xFF
Volume 100	\xAA\xBB\xCC\x03\x00dg\xDD\xEE\xFF

Appendix B. Query Commands

Input	\xAA\xBB\xCC\x02\x00\x00\x02\xDD\xEE\xFF
Mute	\xAA\xBB\xCC\x03\x03\x00\x06\xDD\xEE\xFF
PC Power	\xAA\xBB\xCC\x09\x02\x00\x0B\xDD\xEE\xFF
Power	\xAA\xBB\xCC\x01\x02\x00\x03\xDD\xEE\xFF
Volume	\xAA\xBB\xCC\x03\x02\x00\x05\xDD\xEE\xFF