

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Touch Display
Manufacturer: Clary Icon
Firmware Version: N/A
Model(s): OneScreen h3-84, OneScreen h3-70, OneScreen h3-65, OneScreen Canvas c3-65,
OneScreen Canvas c3-70, OneScreen Canvas c3-84

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.2.3

Version History

Module Version	Date	Notes
1_0_0_0	3/24/2017	Initial Version

Module Notes

- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

AspectRatio	None		
AutoImage	None		
Channel	'Up'	'Down'	
EnergySaving	None		
EPG	None		
Input	'HDMI 1' 'VGA 1' 'PC' 'YPbPr'	'HDMI 2' 'VGA 2' 'AV 1' 'DTV'	'HDMI 3' 'VGA 3' 'AV 2' 'ATV'
MenuNavigation	'Up' 'Right' 'Exit'	'Down' 'Enter' 'Home'	'Left' 'Menu'
Multimedia	None		
Mute	None		
PictureMode	None		
Power	None		
ScreenDisplay	None		
Screenshot	None		
SeparateListening	None		
Sleep	None		
SoundMode	None		
Volume	'Up'	'Down'	

Status Available:

N/A

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable


Notes for the Device:

Serial communication:


Port Type: RS-232
Baud Rate: 115200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

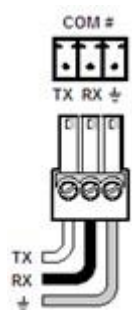

Signal	Main Cable	Pin	Signal
RxD	←	2	TxD
TxD	→	3	RxD
GND	→	5	GND

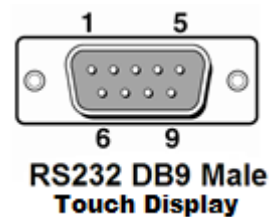

General Notes:

Appendix A. Set Commands

Aspect Ratio None	\x99\x01\x1E\x01\xE1\xAA
Auto Image None	\x99\x01\x1F\x01\xE0\xAA
Channel Down	\x99\x01\x1A\x01\xE5\xAA
Channel Up	\x99\x01\x19\x01\xE6\xAA
Energy Saving None	\x99\x01\x15\x01\xEA\xAA
EPG None	\x99\x01!\x01\xDE\xAA
Input ATV	\x99\x01\x07\x01\xF8\xAA
Input AV 1	\x99\x01\x08\x01\xF7\xAA
Input AV 2	\x99\x01\x09\x01\xF6\xAA
Input DTV	\x99\x01\x06\x01\xF9\xAA
Input HDMI 1	\x99\x01\x0E\x01\xF1\xAA
Input HDMI 2	\x99\x01\x0F\x01\xF0\xAA
Input HDMI 3	\x99\x01\x10\x01\xEF\xAA
Input PC	\x99\x01\x11\x01\xEE\xAA
Input VGA 1	\x99\x01\x0B\x01\xF4\xAA
Input VGA 2	\x99\x01\x0C\x01\xF3\xAA
Input VGA 3	\x99\x01\x0D\x01\xF2\xAA
Input YPbPr	\x99\x01\x0A\x01\xF5\xAA
Menu Navigation Down	\x99\x01#\x01\xDC\xAA
Menu Navigation Enter	\x99\x01&\x01\xD9\xAA
Menu Navigation Exit	\x99\x01\x14\x01\xEB\xAA
Menu Navigation Home	\x99\x01\x00\x01\xFF\xAA
Menu Navigation Left	\x99\x01\$\x01\xDB\xAA
Menu Navigation Menu	\x99\x01\x12\x01\xED\xAA
Menu Navigation Right	\x99\x01%\x01\xDA\xAA
Menu Navigation Up	\x99\x01"\x01\xDD\xAA
Multimedia None	\x99\x01'\x01\xD8\xAA
Mute None	\x99\x01\x02\x01\xFD\xAA
Picture Mode None	\x99\x01\x04\x01\xFB\xAA
Power None	\x99\xA2\x01\x01\xAA\xAA\xAA
Screen Display None	\x99\x01\x1C\x01\xE3\xAA
Screenshot None	\x99\x01\x1B\x01\xE4\xAA
Separate Listening None	\x99\x01\x16\x01\xE9\xAA
Sleep None	\x99\x01\x1D\x01\xE2\xAA
Sound Mode None	\x99\x01\x03\x01\xFC\xAA
Volume Down	\x99\x01\x18\x01\xE7\xAA
Volume Up	\x99\x01\x17\x01\xE8\xAA