

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
Manufacturer: Clevertouch
Firmware Version: N/A
Model(s): UX Pro 55" 4K, UX Pro 65" 4K, UX Pro 75" 4K, UX Pro 86" 4K

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.13.0000-b006	2.9.0

Version History

Module Version	Date	Notes
1_0_0_0	6/14/2021	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from 1 to '99'.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='UX Pro 55" 4K')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='UX Pro 55" 4K')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 4664, Model='UX Pro 55" 4K')</code>

Control Commands

Format with Qualifier:

InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})

Format without Qualifier:

InterfaceName.Set(Command, Value)

Command	Value	Value	Value
AspectRatio	'16:9'	'4:3'	'PTP'
# AspectRatio example InterfaceName.Set('AspectRatio', '16:9')			
Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command	Value		
Freeze	None		
# Freeze example InterfaceName.Set('Freeze', None)			
Command	Value	Value	Value
Input	'VGA'	'HDMI 1'	'HDMI 2'
	'HDMI 3'	'DisplayPort'	'Android'
	'PC Slot'	'USB-C 1'	'USB-C 2'
# Input example InterfaceName.Set('Input', 'VGA')			
Command	Value	Value	
IRLock	'On'	'Off'	
# IRLock example InterfaceName.Set('IRLock', 'On')			
Command	Value	Value	Value
MenuNavigation	'Up'	'Down'	'Left'
	'Right'	'OK'	'Menu'
	'Exit'		
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command	Value	Value	Value
PictureMode	'Standard'	'Bright'	'Soft'
	'Customer'		
# PictureMode example InterfaceName.Set('PictureMode', 'Standard')			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value		
VideoMute	None		
# VideoMute example InterfaceName.Set('VideoMute', None)			
Command	Value		
Volume	0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value '16:9'	Value '4:3'	Value 'PTP'
# AspectRatio example InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value 'VGA' 'HDMI 3' 'PC Slot'	Value 'HDMI 1' 'DisplayPort' 'USB-C 1'	Value 'HDMI 2' 'Android' 'USB-C 2'
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command IRLock	Value 'On'	Value 'Off'	
# IRLock example InterfaceName.Update('IRLock') Value = InterfaceName.ReadStatus('IRLock') InterfaceName.SubscribeStatus('IRLock', None, FeedbackHandler)			
Command PictureMode	Value 'Standard' 'Customer'	Value 'Bright'	Value 'Soft'
# PictureMode example InterfaceName.Update('PictureMode') Value = InterfaceName.ReadStatus('PictureMode') InterfaceName.SubscribeStatus('PictureMode', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command Power	Value 'On'	Value 'Off'
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)		
Command Volume	Value 0 to 100 in steps of 1	
# Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)		

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

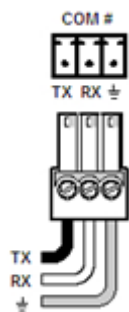

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

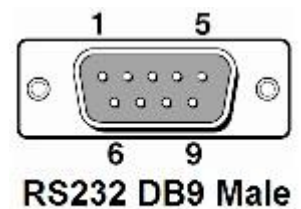

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet (TCP)

Default Port: 4664

Logon Credentials Supported: No

Multi-Connection Capabilities: Undetermined

Port Changeability: Undetermined

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

- “Active Standby” under Settings must be set to On in order to work with Ethernet module.

Appendix A. Set Commands

Aspect Ratio 16:9	:01S;000\x0D
Aspect Ratio 4:3	:01S;001\x0D
Aspect Ratio PTP	:01S;002\x0D
Audio Mute Off	:01S9000\x0D
Audio Mute On	:01S9001\x0D
Freeze None	:01SA032\x0D
Input Android	:01S:101\x0D
Input DisplayPort	:01S:007\x0D
Input HDMI 1	:01S:001\x0D
Input HDMI 2	:01S:002\x0D
Input HDMI 3	:01S:021\x0D
Input PC Slot	:01S:103\x0D
Input USB-C 1	:01S:104\x0D
Input USB-C 2	:01S:105\x0D
Input VGA	:01S:000\x0D
IR Lock Off	:01SB000\x0D
IR Lock On	:01SB001\x0D
Menu Navigation Down	:01SA011\x0D
Menu Navigation Exit	:01SA022\x0D
Menu Navigation Left	:01SA012\x0D
Menu Navigation Menu	:01SA020\x0D
Menu Navigation OK	:01SA014\x0D
Menu Navigation Right	:01SA013\x0D
Menu Navigation Up	:01SA010\x0D
Picture Mode Bright	:01S=001\x0D
Picture Mode Customer	:01S=003\x0D
Picture Mode Soft	:01S=002\x0D
Picture Mode Standard	:01S=000\x0D
Power Off	:01S0002\x0D
Power On (Serial)	:01S0003\x0D
Power On (Ethernet)	:01S0001\x0D
Video Mute None	:01SA031\x0D
Volume 0	:01S8000\x0D
Volume 100	:01S8100\x0D

Appendix B. Update Commands

Aspect Ratio	:01G;000\x0D
Audio Mute	:01G9000\x0D
Input	:01G:000\x0D
IR Lock	:01GB000\x0D
Picture Mode	:01G=000\x0D
Power	:01G0000\x0D
Volume	:01G8000\x0D