

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Controller
Manufacturer: CP Electronics
Firmware Version: N/A
Model(s): AR-DN-RS232

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.2.2

Version History

Module Version	Date	Notes
1_0_0_0	12/22/2016	Initial Version

Module Notes

- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

CircuitLevel	0 to 100 in steps of 1%
['Local Code']	0 – 999
['Circuit']	0 – 999
['Fade Time']	0 – 59
CircuitLower	0 to 100 in steps of 1%
['Local Code']	0 – 999
['Circuit']	0 – 999
CircuitRaise	0 to 100 in steps of 1%
['Local Code']	0 – 999
['Circuit']	0 – 999
Override	'On' 'Off'
['Type']	'Area' 'Local'
['Area/Local Code']	0 – 999
['Scene']	0 – 999
OverrideRelease	'On' 'Off'
['Type']	'Area' 'Local'
['Area/Local Code']	0 – 999
['Scene']	0 – 999
SceneLower	0 to 100 in steps of 1%
['Type']	'Area' 'Local'
['Area/Local Code']	0 – 999
['Scene']	0 – 999
SceneRaise	0 to 100 in steps of 1%
['Type']	'Area' 'Local'
['Area/Local Code']	0 – 999
['Scene']	0 – 999
SceneSave	0 to 999 in steps of 1
['Type']	'Area' 'Local'
['Area/Local Code']	0 – 999
SceneSelect	0 to 999 in steps of 1
['Type']	'Area' 'Local'
['Area/Local Code']	0 – 999
['Fade Time']	0 – 59

StopCircuitFade	0 to 999 in steps of 1	
['Type']	'Area'	'Local'
['Area/Local Code']	0 – 999	
StopSceneFade	0 to 999 in steps of 1	
['Type']	'Area'	'Local'
['Area/Local Code']	0 – 999	

Status Available:

N/A

Cable and Adapter Requirements:

Captive Screw to 3 bare wires.


Notes for the Device:

Serial communication:

Port Type: RS-232
Baud Rate: 9600
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

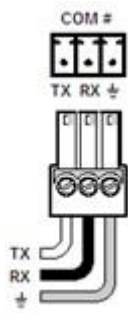

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND		5	GND



General Notes:

Appendix A. Set Commands (Serial)

Circuit Level 0 Local Code 0 Circuit 0 Fade Time 0	#SC-L0.0-C0.0-V000-F00.0S.
Circuit Level 0 Local Code 999 Circuit 999 Fade Time 59	#SC-L999.0-C999.0-V000-F59.0S.
Circuit Level 100 Local Code 0 Circuit 0 Fade Time 0	#SC-L0.0-C0.0-V100-F00.0S.
Circuit Level 100 Local Code 999 Circuit 999 Fade Time 59	#SC-L999.0-C999.0-V100-F59.0S.
Circuit Lower 0 Circuit 0	#CL-L000-C000-V0.0.
Circuit Lower 0 Circuit 999	#CL-L000-C999-V0.0.
Circuit Lower 100 Circuit 0	#CL-L000-C000-V100.0.
Circuit Lower 100 Circuit 999	#CL-L000-C999-V100.0.
Circuit Raise 0 Circuit 0	#CR-L000-C000-V0.0.
Circuit Raise 0 Circuit 999	#CR-L000-C999-V0.0.
Circuit Raise 100 Circuit 0	#CR-L000-C000-V100.0.
Circuit Raise 100 Circuit 999	#CR-L000-C999-V100.0.
Override Off Type Area Area/Local Code 0 Scene 0	#OF-A0.0-S0.0.
Override Off Type Local Area/Local Code 999 Scene 999	#OF-L999.0-S999.0.
Override On Type Area Area/Local Code 0 Scene 0	#ON-A0.0.
Override On Type Local Area/Local Code 999 Scene 999	#ON-L999.0.
Override Release Off Type Area Area/Local Code 0 Scene 0	#OFR-A0.0-S0.0.
Override Release Off Type Local Area/Local Code 999 Scene 999	#OFR-L999.0-S999.0.
Override Release On Type Area Area/Local Code 0 Scene 0	#ONR-A0.0-S0.0.
Override Release On Type Local Area/Local Code 999 Scene 999	#ONR-L999.0-S999.0.
Scene Lower 0 Type Area Area/Local Code 0 Scene 0	#SL-A0.0-S0.0-V000.
Scene Lower 0 Type Local Area/Local Code 999 Scene 999	#SL-L999.0-S999.0-V000.
Scene Lower 100 Type Area Area/Local Code 0 Scene 0	#SL-A0.0-S0.0-V100.
Scene Lower 100 Type Local Area/Local Code 999 Scene 999	#SL-L999.0-S999.0-V100.
Scene Raise 0 Type Area Area/Local Code 0 Scene 0	#SR-A0.0-S0.0-V000.
Scene Raise 0 Type Local Area/Local Code 999 Scene 999	#SR-L999.0-S999.0-V000.
Scene Raise 100 Type Area Area/Local Code 0 Scene 0	#SR-A0.0-S0.0-V100.
Scene Raise 100 Type Local Area/Local Code 999 Scene 999	#SR-L999.0-S999.0-V100.
Scene Save 0 Area/Local Code 0	#SA-A000-S0.0.
Scene Save 0 Area/Local Code 999	#SA-A999-S0.0.
Scene Save 999 Area/Local Code 0	#SA-A000-S999.0.
Scene Save 999 Area/Local Code 999	#SA-A999-S999.0.
Scene Select 0 Type Area Area/Local Code 0 Fade Time 0	#SS-A0.0-S000-F00.0S.
Scene Select 0 Type Local Area/Local Code 999 Fade Time 59	#SS-L999.0-S000-F59.0S.
Scene Select 999 Type Area Area/Local Code 0 Fade Time 0	#SS-A0.0-S999-F00.0S.
Scene Select 999 Type Local Area/Local Code 999 Fade Time 59	#SS-L999.0-S999-F59.0S.
Stop Circuit Fade 0 Area/Local Code 0	#SF-A000-C0.0.
Stop Circuit Fade 0 Area/Local Code 999	#SF-A999-C0.0.
Stop Circuit Fade 999 Area/Local Code 0	#SF-A000-C999.0.
Stop Circuit Fade 999 Area/Local Code 999	#SF-A999-C999.0.
Stop Scene Fade 0 Area/Local Code 0	#SF-A000-S0.0.
Stop Scene Fade 0 Area/Local Code 999	#SF-A999-S0.0.
Stop Scene Fade 999 Area/Local Code 0	#SF-A000-S999.0.
Stop Scene Fade 999 Area/Local Code 999	#SF-A999-S999.0.