
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: KVM Switch
Manufacturer: ConnectPRO
Firmware Version: N/A
Model(s): UD-112+

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.03.0000-b006	2.3.0

Version History

Module Version	Date	Notes
1_0_0_0	6/5/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='UD-112+')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='UD-112+')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	
Buzzer	'On'	'Off'	
# Buzzer example InterfaceName.Set('Buzzer', 'On')			
Command	Value	Value	Value
HotKey	'Ctrl'	'Shift'	'Scroll'
	'Caps'		
# HotKey example InterfaceName.Set('HotKey', 'Ctrl')			
Command	Value	Value	Value
JumptoConsoleChannel	'1' – '6'	'A'	'B'
	'C'	'D'	'E'
	'F'		
# JumptoConsoleChannel example InterfaceName.Set('JumptoConsoleChannel', '1')			
Command	Value	Value	Value
SYNCJumptoConsoleChannel	'1' – '6'	'A'	'B'
nel	'C'	'D'	'E'
	'F'		
# SYNCJumptoConsoleChannel example InterfaceName.Set('SYNCJumptoConsoleChannel', '1')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
Buzzer ¹	'On'	'Off'	
# Buzzer example InterfaceName.Update('Buzzer') Value = InterfaceName.ReadStatus('Buzzer') InterfaceName.SubscribeStatus('Buzzer', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
HotKey ¹	'Ctrl'	'Shift'	'Scroll'
	'Caps'		
# HotKey example InterfaceName.Update('HotKey') Value = InterfaceName.ReadStatus('HotKey') InterfaceName.SubscribeStatus('HotKey', None, FeedbackHandler)			

¹ Any of these command update will provide status for all the commands under this superscript.

Cable and Adapter Requirements

Captive Screw to Male RJ45 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One


Flow Control: None

Pin Assignments Diagram

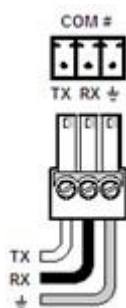

Signal	Main Cable	Pin	Signal
TxD	→	3	RxD
RxD	←	6	TxD
GND	→	4 & 5	GND

1 2 3 4 5 6 7 8

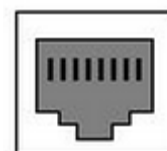

Switcher

Appendix A. Set Commands

Buzzer Off	bzoff\x0D
Buzzer On	bzon\x0D
Hot Key Caps	CAPS\x0D
Hot Key Ctrl	CTRL\x0D
Hot Key Scroll	SCROLL\x0D
Hot Key Shift	SHIFT\x0D
Jump to Console Channel 1	k1p1\x0D
Jump to Console Channel 6	k1p6\x0D
Jump to Console Channel A	k1p7\x0D
Jump to Console Channel B	k1p8\x0D
Jump to Console Channel C	k1p9\x0D
Jump to Console Channel D	k1pA\x0D
Jump to Console Channel E	k1pB\x0D
Jump to Console Channel F	k1pC\x0D
SYNC Jump to Console Channel 1	CH1\x0D
SYNC Jump to Console Channel 6	CH6\x0D
SYNC Jump to Console Channel A	CH7\x0D
SYNC Jump to Console Channel B	CH8\x0D
SYNC Jump to Console Channel C	CH9\x0D
SYNC Jump to Console Channel D	CHA\x0D
SYNC Jump to Console Channel E	CHB\x0D
SYNC Jump to Console Channel F	CHC\x0D

Appendix B. Update Commands

Buzzer	k1p0\x0D
Hotkey	k1p0\x0D