
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Other
Manufacturer: Cisco
Firmware Version: N/A
Model(s): SG300

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0.820

Version History

Module Version	Date	Notes
1_1_1_0	10/11/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly.
devicePassword and deviceUsername default values are cisco and cisco respectively. Example:
`InterfaceName.devicePassword = 'extron'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SG300')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SG300')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='SG300')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command PowerInlineMode ¹	Value 'Auto'	Value 'Never'
Qualifier Key 'Port Number'	Qualifier Value 1 to 65535 in steps of 1	
Qualifier Key 'Time Range Name'	Qualifier Value 'String'	
# PowerInlineMode example InterfaceName.Set('PowerInlineMode', 'Auto', {'Port Number': 65535, 'Time Range Name': 'String'})		

¹ Optional Time Range Name parameter can be set for Auto state only and not applicable for Never state.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	
Clock	'String'	
<pre># Clock examples InterfaceName.Update('Clock') Value = InterfaceName.ReadStatus('Clock') InterfaceName.SubscribeStatus('Clock', None, FeedbackHandler)</pre>		
Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
<pre># ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

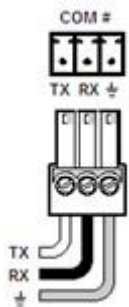

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

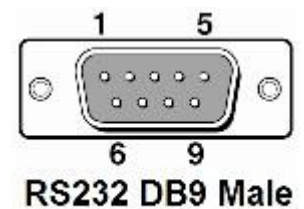

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	Yes
Default Username:	cisco
Default Password:	cisco
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Power Inline Mode Auto Port Number 1 Time Range Name testString	configure\x0Dinterface gi1\x0Dpower inline auto time-range testString\x0Dexit\x0D
Power Inline Mode Auto Port Number 65535 Time Range Name testString	configure\x0Dinterface gi65535\x0Dpower inline auto time-range testString\x0Dexit\x0D
Power Inline Mode Never Port Number 1 Time Range Name testString	configure\x0Dinterface gi1\x0Dpower inline never time-range testString\x0Dexit\x0D
Power Inline Mode Never Port Number 65535 Time Range Name testString	configure\x0Dinterface gi65535\x0Dpower inline never time-range testString\x0Dexit\x0D

Appendix B. Update Commands

Clock	show clock\x0D
-------	----------------