

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: Cisco
Firmware Version: TC7.2
Model(s): C20 TC7.2.X, C40 TC7.2.X, C60 TC7.2.X, C90 TC7.2.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_0_3_1	9/8/2017	Updated status example.
1_0_3_0	8/7/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- NumberofPhonebookSearch variable must be set accordingly. Default value is '1'. Number of Phonebook Search ranges from '1' – '10'.
Example: `InterfaceName.NumberofPhonebookSearch = '1'`
- NumberofPhonebookFolderSearch variable must be set accordingly. Default value is '1'. Number of Phonebook Folder Search ranges from '1' – '10'.
Example: `InterfaceName.NumberofPhonebookFolderSearch = '1'`
- CallHistoryOccurrenceType variable must be set accordingly. Default value is 'Time'.
CallHistoryOccurrenceType options are 'Time' and 'Frequency'.
Example: `InterfaceName.CallHistoryOccurrenceType = 'Time'`
- NumberofCallHistory variable must be set accordingly. Default value is '5'. NumberofCallHistory Range is '1' – '20'.
Example: `InterfaceName.NumberofCallHistory = '5'`

Phonebook commands:

- PhonebookSearchResult
This is where the search results will be saved to when phonebook is searched. The number of results are set by a driver parameter Number of Phonebook Search, this is initialized to 5 results by default. Simply call SetText with the returned result to display the search result on a button or label object.
- PhonebookSearchSet
When the number selected in this command is triggered, it will dial the number with the xCommand Dial Number command.
- PhonebookNavigation
This command is used for navigating through the search results. The navigation commands scroll through the results when there are more results than NumberofPhonebookSearch variable.
- PhonebookUpdate
This is used to trigger the Phonebook search.

- **PhonebookFolderIDUpdate**
This is used to trigger the Folder search within the Phonebook.
- **PhonebookFolderIDSearchSet**
When the Folder Name selected in this command is triggered, it will store the Folder Name in a class variable, FolderIDNumber, and that variable can be accessed and used in the 'FolderID' qualifier in the PhonebookUpdate command.
- **PhonebookFolderIDSearchResult**
This is where the search results are saved when PhonebookFolderIDUpdate is called. The number of results displayed is set to 5 by default. Simply call SetText with the returned results to display the results on a button or label object.

Call History commands:

- **CallHistoryRefresh**
This is used to trigger the search for recent Call History based on the CallHistoryOccuranceType class variable.
- **CallHistoryNavigation**
This command is used for navigating through the CallHistory results.
- **CallHistorySelect**
When the CallHistorySelect is triggered, it will store the call history results' Callback Number into a class variable name, number. It can be accessed and use in the 'Number' qualifier for the Hook Dial command.
- **CallHistory**
This is where the search results are saved when CallHistoryRefresh is called. The number of results displayed is set to 5 by default. Simply call SetText to display the results on a button or label object.

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='C20 TC7.2.X')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='C20 TC7.2.X')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='C20 TC7.2.X')

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AssignLocalOutput	Value None
Qualifier Key 'Layout ID'	Qualifier Value 1 to 2147483647 in steps of 1
Qualifier Key 'Output ID'	Qualifier Value 1 to 65534 in steps of 1
# AssignLocalOutput example InterfaceName.Set('AssignLocalOutput', None, {'Layout ID': 2.147484E+09, 'Output ID': 65534})	
Command AudioOutput	Value 'On'
Qualifier Key 'Output'	Value 'Off'
Qualifier Key 'Output'	Qualifier Value 'Line 1' – 'Line 6'
# AudioOutput example InterfaceName.Set('AudioOutput', 'On', {'Output': 'Line 1'})	
Command AutoAnswer	Value 'On'
Qualifier Key 'Output'	Value 'Off'
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')	
Command CallHistoryNavigation	Value 'Up'
Qualifier Key 'Output'	Value 'Down'
Qualifier Key 'Output'	Value 'Page Up'
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')	
Command CallHistoryRefresh	Value None
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)	
Command CallHistorySelect	Value None
Qualifier Key 'Button'	Qualifier Value '1' – '20'
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', None, {'Button': '1'})	

Global Scripter Module Communication Sheet

Command	Value	Value
CallSetupMode	'Gatekeeper'	'Direct'
# CallSetupMode example InterfaceName.Set('CallSetupMode', 'Gatekeeper')		
Command	Value	Value
CameraFocus	'Near'	'Far'
	'Auto'	'Stop'
Qualifier Key	Qualifier Value	
'Camera'	'1' – '7'	
# CameraFocus example InterfaceName.Set('CameraFocus', 'Near', {'Camera': '1'})		
Command	Value	Value
CameraFocusC20	'Near'	'Far'
	'Auto'	'Stop'
# CameraFocusC20 example InterfaceName.Set('CameraFocusC20', 'Near', None)		
Command	Value	Value
CameraPan	'Left'	'Right'
		'Stop'
Qualifier Key	Qualifier Value	
'Camera'	'1' – '7'	
Qualifier Key	Qualifier Value	
'Speed'	1 to 15 in steps of 1	
# CameraPan example InterfaceName.Set('CameraPan', 'Left', {'Camera': '1', 'Speed': 15})		
Command	Value	Value
CameraPanC20	'Left'	'Right'
		'Stop'
Qualifier Key	Qualifier Value	
'Speed'	1 to 15 in steps of 1	
# CameraPanC20 example InterfaceName.Set('CameraPan', 'Left', {'Speed': 15})		
Command	Value	
CameraPresetRecall	'1' – '35'	
# CameraPresetRecall example InterfaceName.Set('CameraPresetRecall', '1')		
Command	Value	
CameraPresetSave	'1' – '35'	
Qualifier Key	Qualifier Value	
'Camera'	'1' – '7'	
# CameraPresetSave example InterfaceName.Set('CameraPresetSave', '1', {'Camera': '1'})		

Global Scripter Module Communication Sheet

Command CameraTilt	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraTilt example InterfaceName.Set('CameraTilt', 'Up', {'Camera': '1', 'Speed': 15})			
Command CameraTiltC20	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraTilt example InterfaceName.Set('CameraTilt', 'Up', {'Speed': 15})			
Command CameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoom example InterfaceName.Set('CameraZoom', 'In', {'Camera': '1', 'Speed': 15})			
Command CameraZoomC20	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoomC20 example InterfaceName.Set('CameraZoom', 'In', {'Speed': 15})			
Command CloseMenu	Value None		
# CloseMenu example InterfaceName.Set('CloseMenu', None)			
Command DisplayMode	Value 'Dual'	Value 'Single'	Value 'Dual Presentation Only'
	'Quadruple'	'Triple'	
# DisplayMode example InterfaceName.Set('DisplayMode', 'Dual')			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Active')			

Global Scripter Module Communication Sheet

Command DTMF	Value '0' – '9'	Value '*'	Value '#'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command FarEndCameraPanTilt	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
# FarEndCameraPanTilt example InterfaceName.Set('FarEndCameraPanTilt', 'Up')			
Command FarEndCameraPresetRecall	Value '1' – '15'		
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')			
Command FarEndCameraPresetSave	Value '1' – '15'		
# FarEndCameraPresetSave example InterfaceName.Set('FarEndCameraPresetSave', '1')			
Command FarEndCameraSource	Value '0' – '15'		
# FarEndCameraSource example InterfaceName.Set('FarEndCameraSource', '0')			
Command FarEndCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
# FarEndCameraZoom example InterfaceName.Set('FarEndCameraZoom', 'In')			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Set('FarEndControl', 'On')			
Command Hook	Value 'Dial' 'Accept' 'Resume 1' – 'Resume 5'	Value 'Disconnect All' 'Reject' 'Disconnect 1' – 'Disconnect 5'	Value 'Join 1' – 'Join 5' 'Hold 1' – 'Hold 5'
Qualifier Key 'Number'	Qualifier Value 'String'		
Qualifier Key 'Protocol'	Qualifier Value 'H320' 'Auto'	Qualifier Value 'H323'	Qualifier Value 'SIP'
# Hook example InterfaceName.Set('Hook', 'Accept', {'Number': '', 'Protocol': 'Auto'}) InterfaceName.Set('Hook', 'Dial', {'Number': '192.168.1.1', 'Protocol': 'H323'})			

Command Input	Value '1' – '5'		
# Input example InterfaceName.Set('Input', '1')			
Command InputLevel	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' - 'Microphone 8'	Qualifier Value 'Line 1' - 'Line 4'	
# InputLevel example InterfaceName.Set('InputLevel', 24, {'Input': 'Microphone 1'})			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' - 'Microphone 8'	Qualifier Value 'Line 1' - 'Line 4'	
# InputMute example InterfaceName.Set('InputMute', 'On', {'Input': 'Microphone 1'})			
Command IREmulation	Value '0' – '9' 'Disconnect' 'Grab' 'Mute' 'Phonebook' 'Aux' 'PC' 'Volume Down' '*' 'Down'	Value 'Delete' 'F1' – 'F5' 'Home' 'Mute Mic' 'Presentation' 'Camera' 'VCR' 'Zoom In' '#' 'Left'	Value 'Call' 'Right' 'Layout' 'Ok' 'Selfview' 'Doc Camera' 'Volume Up' 'Zoom Out' 'Up'
Qualifier Key 'Press Type'	Qualifier Value 'Click'	Qualifier Value 'Press'	Qualifier Value 'Release'
# IREmulation example InterfaceName.Set('IREmulation', '0', {'Press Type': 'Click'})			
Command Layout	Value 'Add' 'Reset'	Value 'Remove'	Value 'Remove All'
Qualifier Key 'Layout ID'	Qualifier Value 1 to 65535 in steps of 1		
# Layout example InterfaceName.Set('Layout', 'Add', {'Layout ID': 65535})			

Global Scripter Module Communication Sheet

Command LayoutSet	Value 'Auto' 'Fullscreen' 'Presentation Small Speaker' 'Speaker Full'	Value 'Custom' 'Overlay' 'Prominent'	Value 'Equal' 'Presentation Large Speaker' 'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute example InterfaceName.Set('MicrophonesMute', 'On')			
Command MissedCallNotification	Value 'On'	Value 'Off'	
# MissedCallNotification example InterfaceName.Set('MissedCallNotification', 'On')			
Command OutputLevel	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value 'Line 1' – 'Line 6'		
# OutputLevel example InterfaceName.Set('OutputLevel', 0, {'Output': 'Line 1'})			
Command PhonebookFolderIDNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up', None)			
Command PhonebookFolderIDSearchSet	Value 1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command PhonebookFolderIDUpdate	Value None		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Corporate'})			

Global Scripter Module Communication Sheet

Command PhonebookNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Local'})			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 1)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': 'John', 'FolderID': '', 'Phonebook Type': 'Local'}) InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Local'})			
Command PictureInPicture	Value 'On'	Value 'Off'	
# PictureInPicture example InterfaceName.Set('PictureInPicture', 'On')			
Command Presentation	Value '1' – '5'	Value 'Stop'	
# Presentation example InterfaceName.Set('Presentation', '1')			
Command PresentationSendingMode	Value 'Local and Remote'	Value 'Local Only'	
# PresentationSendingMode example InterfaceName.Set('PresentationSendingMode', 'Local and Remote')			
Command PresetRecall	Value '1' – '15'		
# PresetRecall example			

InterfaceName.Set('PresetRecall', '1')			
Command PresetSave	Value '1' – '15'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command Reboot	Value None		
# Reboot example InterfaceName.Set('Reboot', None)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')			
Command SleepTimer	Value 1 – 480		
# SleepTimer example InterfaceName.Set('SleepTimer', 480)			
Command Standby	Value 'Activate'	Value 'Deactivate'	
# Standby example InterfaceName.Set('Standby', 'Activate')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

Status Available

For all commands excluding CallHistory, PhonebookFolderIDSearchResult, PhonebookSearchResult, CallStatusType, RemoteNumber, and DisplayName, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
AudioOutput	'On'	'Off'
Qualifier Key	Qualifier Value	
'Output'	'Line 1' – 'Line 6'	
# AudioOutput examples InterfaceName.Update('AudioOutput', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('AudioOutput', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('AudioOutput', None, FeedbackHandler)		
Command	Value	Value
AutoAnswer	'On'	'Off'
# AutoAnswer examples InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)		
Command	Value	
CallHistory	'String'	
Qualifier Key	Qualifier Value	
'Button'	'1' – '20'	
Qualifier Key	Qualifier Value	Qualifier Value
'Detail Type'	'Display Name'	'Last Occurrence Time'
	'Occurrence Count'	'Occurrence Type'
# CallHistory examples Value = InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)		
Command	Value	Value
CallSetupMode	'Gatekeeper'	'Direct'
# CallSetupMode examples		

Global Scripter Module Communication Sheet

<pre>InterfaceName.Update('CallSetupMode') Value = InterfaceName.ReadStatus('CallSetupMode') InterfaceName.SubscribeStatus('CallSetupMode', None, FeedbackHandler)</pre>			
Command CallStatus	Value 'Dialing' 'Ringing' 'On Hold' 'Remote Preserved'	Value 'Connecting' 'Idle' 'Early Media'	Value 'Connected' 'Disconnecting' 'Preserved'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
<pre># CallStatus examples InterfaceName.Update('CallStatus', None) Value = InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)</pre>			
Command CallStatusType	Value 'Video' 'Forward All Call'	Value 'Audio' 'Unknown'	Value 'Audio Can Escalate'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
<pre># CallStatusType examples InterfaceName.Update('CallStatusType', None) Value = InterfaceName.ReadStatus('CallStatusType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)</pre>			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
<pre># ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)</pre>			
Command DisplayMode	Value 'Dual' 'Quadruple'	Value 'Single' 'Triple'	Value 'Dual Presentation Only'
<pre># DisplayMode examples InterfaceName.Update('DisplayMode') Value = InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)</pre>			
Command DisplayName	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
<pre># DisplayName examples InterfaceName.Update('DisplayName', None) Value = InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)</pre>			

Command	Value	
DNSServerAddress	'String'	
Qualifier Key	Qualifier Value	
'Server'	'1' – '3'	
<pre># DNSServerAddress examples InterfaceName.Update('DNSServerAddress', {'Server': '1'}) Value = InterfaceName.ReadStatus('DNSServerAddress', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddress', None, FeedbackHandler)</pre>		
Command	Value	Value
DoNotDisturb	'Active'	'Inactive'
<pre># DoNotDisturb examples InterfaceName.Update('DoNotDisturb') Value = InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)</pre>		
Command	Value	Value
FarEndControl	'On'	'Off'
<pre># FarEndControl examples InterfaceName.Update('FarEndControl') Value = InterfaceName.ReadStatus('FarEndControl') InterfaceName.SubscribeStatus('FarEndControl', None, FeedbackHandler)</pre>		
Command	Value	
FirmwareVersion	'String'	
<pre># FirmwareVersion examples InterfaceName.Update('FirmwareVersion') Value = InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)</pre>		
Command	Value	
GatewayAddress	'String'	
<pre># GatewayAddress examples InterfaceName.Update('GatewayAddress') Value = InterfaceName.ReadStatus('GatewayAddress') InterfaceName.SubscribeStatus('GatewayAddress', None, FeedbackHandler)</pre>		
Command	Value	
Input	'1' – '5'	
<pre># Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)</pre>		
Command	Value	
InputLevel	0 to 24 in steps of 1	
Qualifier Key	Qualifier Value	Qualifier Value
'Input'	'Microphone 1' – 'Microphone 8'	'Line 1' – 'Line 4'
<pre># InputLevel examples InterfaceName.Update('InputLevel', {'Input': 'Microphone 1'})</pre>		

Global Scripter Module Communication Sheet

<pre>Value = InterfaceName.ReadStatus('InputLevel', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputLevel', None, FeedbackHandler)</pre>		
Command InputMute	Value 'On'	Value 'Off'
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' – 'Microphone 8'	Qualifier Value 'Line 1' – 'Line 4'
<pre># InputMute examples InterfaceName.Update('InputMute', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMute', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMute', None, FeedbackHandler)</pre>		
Command IPAddress	Value 'String'	
<pre># IPAddress examples InterfaceName.Update('IPAddress') Value = InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)</pre>		
Command MACAddress	Value 'String'	
<pre># MACAddress examples InterfaceName.Update('MACAddress') Value = InterfaceName.ReadStatus('MACAddress') InterfaceName.SubscribeStatus('MACAddress', None, FeedbackHandler)</pre>		
Command MicrophonesMute	Value 'On'	Value 'Off'
<pre># MicrophonesMute examples InterfaceName.Update('MicrophonesMute') Value = InterfaceName.ReadStatus('MicrophonesMute') InterfaceName.SubscribeStatus('MicrophonesMute', None, FeedbackHandler)</pre>		
Command MissedCallNotification	Value 'On'	Value 'Off'
<pre># MissedCallNotification examples InterfaceName.Update('MissedCallNotification') Value = InterfaceName.ReadStatus('MissedCallNotification') InterfaceName.SubscribeStatus('MissedCallNotification', None, FeedbackHandler)</pre>		
Command NetworkAssignment	Value 'Static'	Value 'DHCP'
<pre># NetworkAssignment examples InterfaceName.Update('NetworkAssignment') Value = InterfaceName.ReadStatus('NetworkAssignment') InterfaceName.SubscribeStatus('NetworkAssignment', None, FeedbackHandler)</pre>		
Command OutputLevel	Value -24 to 0 in steps of 1	
Qualifier Key 'Output'	Qualifier Value 'Line 1' – 'Line 6'	

Global Scripter Module Communication Sheet

<pre># OutputLevel examples InterfaceName.Update('OutputLevel', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('OutputLevel', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('OutputLevel', None, FeedbackHandler)</pre>			
Command	Value		
PhonebookFolderIDSearchResult	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 to 10 in steps of 1		
<pre># PhonebookFolderIDSearchResult examples Value = InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)</pre>			
Command	Value		
PhonebookSearchResult	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 to 10 in steps of 1		
<pre># PhonebookSearchResult examples Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)</pre>			
Command	Value	Value	
Presentation	'1' – '5'	'Stop'	
<pre># Presentation examples InterfaceName.Update('Presentation') Value = InterfaceName.ReadStatus('Presentation') InterfaceName.SubscribeStatus('Presentation', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
PresentationMode	'Off'	'Sending'	'Receiving'
<pre># PresentationMode examples InterfaceName.Update('PresentationMode') Value = InterfaceName.ReadStatus('PresentationMode') InterfaceName.SubscribeStatus('PresentationMode', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
PresentationSendingMode	'Local and Remote'	'Local Only'	'Off'
<pre># PresentationSendingMode examples InterfaceName.Update('PresentationSendingMode') Value = InterfaceName.ReadStatus('PresentationSendingMode') InterfaceName.SubscribeStatus('PresentationSendingMode', None, FeedbackHandler)</pre>			
Command	Value		
RemoteNumber	'String'		
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
<pre># RemoteNumber examples InterfaceName.Update('RemoteNumber', None) Value = InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'}) InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)</pre>			
Command	Value		

SelfView	'On'	'Off'
<pre># SelfView examples InterfaceName.Update('SelfView') Value = InterfaceName.ReadStatus('SelfView') InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)</pre>		
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right' 'Lower Left'
<pre># SelfViewPosition examples InterfaceName.Update('SelfViewPosition') Value = InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)</pre>		
Command Standby	Value 'Activate'	Value 'Deactivate'
<pre># Standby examples InterfaceName.Update('Standby') Value = InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)</pre>		
Command SubnetMask	Value 'String'	
<pre># SubnetMask examples InterfaceName.Update('SubnetMask') Value = InterfaceName.ReadStatus('SubnetMask') InterfaceName.SubscribeStatus('SubnetMask', None, FeedbackHandler)</pre>		
Command Volume	Value 0 to 100 in steps of 1	
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements C40, C60, C90

Captive Screw to Male DB9 RS-232 Serial Cable

Cable and Adapter Requirements C20

Captive Screw to USB Type-A RS-232 Serial Cable adapter

Notes for the Device

Serial communication

Port Type: RS-232

Parity: None

Baud Rate: 115200


Stop Bits: One

Data Bits: 8

Flow Control: None


Pin Assignments Diagram

C20:

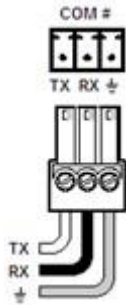

Contact manufacturer for pinout diagram

C40, C60, C90:

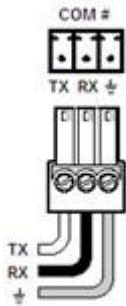

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	Yes
Default Username:	admin
Default Password:	TANDBERG
Multi-Connection Capabilities:	Yes
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Telnet mode must be set to 'On' by an admin to have open communication with the driver

Appendix A. Set Commands

Assign Local Output None Layout ID 1 Output ID 1	xCommand Video Layout AssignLocalOutput OutputId:1 LayoutId:1\x0D
Assign Local Output None Layout ID 1 Output ID 65534	xCommand Video Layout AssignLocalOutput OutputId:65534 LayoutId:1\x0D
Assign Local Output None Layout ID 2147483647 Output ID 1	xCommand Video Layout AssignLocalOutput OutputId:1 LayoutId:2147483647\x0D
Assign Local Output None Layout ID 2147483647 Output ID 65534	xCommand Video Layout AssignLocalOutput OutputId:65534 LayoutId:2147483647\x0D
Audio Output Off Output Line 1	xConfiguration Audio Output Line 1 Mode:Off\x0D
Audio Output Off Output Line 2	xConfiguration Audio Output Line 2 Mode:Off\x0D
Audio Output Off Output Line 3	xConfiguration Audio Output Line 3 Mode:Off\x0D
Audio Output Off Output Line 4	xConfiguration Audio Output Line 4 Mode:Off\x0D
Audio Output Off Output Line 5	xConfiguration Audio Output Line 5 Mode:Off\x0D
Audio Output Off Output Line 6	xConfiguration Audio Output Line 6 Mode:Off\x0D
Audio Output On Output Line 1	xConfiguration Audio Output Line 1 Mode:On\x0D
Audio Output On Output Line 2	xConfiguration Audio Output Line 2 Mode:On\x0D
Audio Output On Output Line 3	xConfiguration Audio Output Line 3 Mode:On\x0D
Audio Output On Output Line 4	xConfiguration Audio Output Line 4 Mode:On\x0D
Audio Output On Output Line 5	xConfiguration Audio Output Line 5 Mode:On\x0D
Audio Output On Output Line 6	xConfiguration Audio Output Line 6 Mode:On\x0D
Auto Answer Off	xConfiguration Conference 1 AutoAnswer Mode: Off\x0D
Auto Answer On	xConfiguration Conference 1 AutoAnswer Mode: On\x0D
Call Setup Mode Direct	xConfiguration H323 Profile 1 CallSetup Mode: Direct\x0D
Call Setup Mode Gatekeeper	xConfiguration H323 Profile 1 CallSetup Mode: Gatekeeper\x0D
Camera Focus Far	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 1	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 7	xCommand Camera Ramp CameraId:7 Focus:Far\x0D
Camera Focus Near	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 1	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 7	xCommand Camera Ramp CameraId:7 Focus:Near\x0D
Camera Focus Stop	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 1	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 7	xCommand Camera Ramp CameraId:7 Focus:Stop\x0D
Camera Pan Left Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Left Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:15\x0D
Camera Pan Left Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Right Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Right Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:15\x0D
Camera Pan Right Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D

Global Scripter Module Communication Sheet

Camera Pan Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Preset Recall 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset Recall 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Save 1	xCommand Camera Preset Store PresetId: 1 CameraId: 1\x0D
Camera Preset Save 1 Camera 1	xCommand Camera Preset Store PresetId: 1 CameraId: 1\x0D
Camera Preset Save 1 Camera 7	xCommand Camera Preset Store PresetId: 1 CameraId: 7\x0D
Camera Preset Save 35	xCommand Camera Preset Store PresetId: 35 CameraId: 1\x0D
Camera Preset Save 35 Camera 1	xCommand Camera Preset Store PresetId: 35 CameraId: 1\x0D
Camera Preset Save 35 Camera 7	xCommand Camera Preset Store PresetId: 35 CameraId: 7\x0D
Camera Tilt Down Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Speed 15	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Up Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Zoom In Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom Out Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:1\x0D

Global Scripter Module Communication Sheet

Camera Zoom Out Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom: Stop\x0D
Camera Zoom Stop Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Close Menu None	xCommand UserInterface OSD Close Element: Menu\x0D
Display Mode Dual	xConfiguration Video Monitors: Dual\x0D
Display Mode Dual Presentation Only	xConfiguration Video Monitors: DualPresentationOnly\x0D
Display Mode Quadruple	xConfiguration Video Monitors: Quadruple\x0D
Display Mode Single	xConfiguration Video Monitors: Single\x0D
Display Mode Triple	xConfiguration Video Monitors: Triple\x0D
Do Not Disturb Active	xCommand Conference DoNotDisturb Activate\x0D
Do Not Disturb Inactive	xCommand Conference DoNotDisturb Deactivate\x0D
DTMF #	xCommand DTMFSend DTMFString:#\x0D
DTMF *	xCommand DTMFSend DTMFString:*\x0D
DTMF 0	xCommand DTMFSend DTMFString:0\x0D
DTMF 9	xCommand DTMFSend DTMFString:9\x0D
Far End Camera Pan/Tilt Down	xCommand FarEndControl Camera Move:Down\x0D
Far End Camera Pan/Tilt Left	xCommand FarEndControl Camera Move:Left\x0D
Far End Camera Pan/Tilt Right	xCommand FarEndControl Camera Move:Right\x0D
Far End Camera Pan/Tilt Stop	xCommand FarEndControl Camera Move Stop\x0D
Far End Camera Pan/Tilt Up	xCommand FarEndControl Camera Move:Up\x0D
Far End Camera Preset Recall 1	xCommand FarEndControl Preset Activate PresetId:1\x0D
Far End Camera Preset Recall 15	xCommand FarEndControl Preset Activate PresetId:15\x0D
Far End Camera Preset Save 1	xCommand FarEndControl Preset Store PresetId: 1\x0D
Far End Camera Preset Save 15	xCommand FarEndControl Preset Store PresetId: 15\x0D
Far End Camera Source 0	xCommand FarEndControl Source Select SourceId:0\x0D
Far End Camera Source 15	xCommand FarEndControl Source Select SourceId:15\x0D
Far End Camera Zoom In	xCommand FarEndControl Camera Move Value:ZoomIn\x0D
Far End Camera Zoom Out	xCommand FarEndControl Camera Move Value:ZoomOut\x0D
Far End Camera Zoom Stop	xCommand FarEndControl Camera Stop\x0D
Far End Control Off	xConfiguration Conference 1 FarEndControl Mode: Off
Far End Control On	xConfiguration Conference 1 FarEndControl Mode: On
Hook Accept Protocol Auto	xCommand Call Accept\x0D
Hook Accept Protocol H320	xCommand Call Accept\x0D
Hook Accept Protocol H323	xCommand Call Accept\x0D
Hook Accept Protocol SIP	xCommand Call Accept\x0D
Hook Disconnect All Protocol Auto	xCommand Call DisconnectAll\x0D
Hook Disconnect All Protocol H320	xCommand Call DisconnectAll\x0D
Hook Disconnect All Protocol H323	xCommand Call DisconnectAll\x0D

Global Scripter Module Communication Sheet

Hook Disconnect All Protocol SIP	xCommand Call DisconnectAll\x0D
Hook Hold All Protocol Auto	xCommand Call HoldAll\x0D
Hook Hold All Protocol H320	xCommand Call HoldAll\x0D
Hook Hold All Protocol H323	xCommand Call HoldAll\x0D
Hook Hold All Protocol SIP	xCommand Call HoldAll\x0D
Hook Reject Protocol Auto	xCommand Call Reject\x0D
Hook Reject Protocol H320	xCommand Call Reject\x0D
Hook Reject Protocol H323	xCommand Call Reject\x0D
Hook Reject Protocol SIP	xCommand Call Reject\x0D
Input 1	xConfiguration Video MainVideoSource: 1\x0D
Input 2	xConfiguration Video MainVideoSource: 2\x0D
Input 3	xConfiguration Video MainVideoSource: 3\x0D
Input 5	xConfiguration Video MainVideoSource: 5\x0D
Input Level 0 Input Line 1	xConfiguration Audio Input Line 1 Level:0\x0D
Input Level 0 Input Line 2	xConfiguration Audio Input Line 2 Level:0\x0D
Input Level 0 Input Line 3	xConfiguration Audio Input Line 3 Level:0\x0D
Input Level 0 Input Line 4	xConfiguration Audio Input Line 4 Level:0\x0D
Input Level 0 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:0\x0D
Input Level 0 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:0\x0D
Input Level 0 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:0\x0D
Input Level 0 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:0\x0D
Input Level 0 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:0\x0D
Input Level 0 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:0\x0D
Input Level 0 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:0\x0D
Input Level 0 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:0\x0D
Input Level 24 Input Line 1	xConfiguration Audio Input Line 1 Level:24\x0D
Input Level 24 Input Line 2	xConfiguration Audio Input Line 2 Level:24\x0D
Input Level 24 Input Line 3	xConfiguration Audio Input Line 3 Level:24\x0D
Input Level 24 Input Line 4	xConfiguration Audio Input Line 4 Level:24\x0D
Input Level 24 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:24\x0D
Input Level 24 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:24\x0D
Input Level 24 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:24\x0D
Input Level 24 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:24\x0D
Input Level 24 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:24\x0D
Input Level 24 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:24\x0D
Input Level 24 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:24\x0D
Input Level 24 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:24\x0D
Input Mute Off Input Line 1	xConfiguration Audio Input Line 1 Mode:Off\x0D
Input Mute Off Input Line 2	xConfiguration Audio Input Line 2 Mode:Off\x0D
Input Mute Off Input Line 3	xConfiguration Audio Input Line 3 Mode:Off\x0D
Input Mute Off Input Line 4	xConfiguration Audio Input Line 4 Mode:Off\x0D
Input Mute Off Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:Off\x0D
Input Mute Off Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:Off\x0D
Input Mute Off Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:Off\x0D
Input Mute Off Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:Off\x0D
Input Mute Off Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:Off\x0D
Input Mute Off Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:Off\x0D

Global Scripter Module Communication Sheet

Input Mute Off Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:Off\x0D
Input Mute Off Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:Off\x0D
Input Mute On Input Line 1	xConfiguration Audio Input Line 1 Mode:On\x0D
Input Mute On Input Line 2	xConfiguration Audio Input Line 2 Mode:On\x0D
Input Mute On Input Line 3	xConfiguration Audio Input Line 3 Mode:On\x0D
Input Mute On Input Line 4	xConfiguration Audio Input Line 4 Mode:On\x0D
Input Mute On Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:On\x0D
Input Mute On Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:On\x0D
Input Mute On Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:On\x0D
Input Mute On Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:On\x0D
Input Mute On Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:On\x0D
Input Mute On Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:On\x0D
Input Mute On Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:On\x0D
Input Mute On Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:On\x0D
IR Emulation 0 Press Type Click	xCommand Key Click Key: 0\x0D
IR Emulation 0 Press Type Press	xCommand Key Press Key: 0\x0D
IR Emulation 0 Press Type Release	xCommand Key Release Key: 0\x0D
IR Emulation 9 Press Type Click	xCommand Key Click Key: 9\x0D
IR Emulation 9 Press Type Press	xCommand Key Press Key: 9\x0D
IR Emulation 9 Press Type Release	xCommand Key Release Key: 9\x0D
IR Emulation Aux Press Type Click	xCommand Key Click Key: SrcAux\x0D
IR Emulation Aux Press Type Press	xCommand Key Press Key: SrcAux\x0D
IR Emulation Aux Press Type Release	xCommand Key Release Key: SrcAux\x0D
IR Emulation Call Press Type Click	xCommand Key Click Key: Call\x0D
IR Emulation Call Press Type Press	xCommand Key Press Key: Call\x0D
IR Emulation Call Press Type Release	xCommand Key Release Key: Call\x0D
IR Emulation Camera Press Type Click	xCommand Key Click Key: SrcCamera\x0D
IR Emulation Camera Press Type Press	xCommand Key Press Key: SrcCamera\x0D
IR Emulation Camera Press Type Release	xCommand Key Release Key: SrcCamera\x0D
IR Emulation Disconnect Press Type Click	xCommand Key Click Key: Disconnect\x0D
IR Emulation Disconnect Press Type Press	xCommand Key Press Key: Disconnect\x0D
IR Emulation Disconnect Press Type Release	xCommand Key Release Key: Disconnect\x0D
IR Emulation Down Press Type Click	xCommand Key Click Key: Down\x0D
IR Emulation Down Press Type Press	xCommand Key Press Key: Down\x0D
IR Emulation Down Press Type Release	xCommand Key Release Key: Down\x0D
IR Emulation F1 Press Type Click	xCommand Key Click Key: F1\x0D
IR Emulation F1 Press Type Press	xCommand Key Press Key: F1\x0D
IR Emulation F1 Press Type Release	xCommand Key Release Key: F1\x0D
IR Emulation F2 Press Type Click	xCommand Key Click Key: F2\x0D
IR Emulation F2 Press Type Press	xCommand Key Press Key: F2\x0D
IR Emulation F2 Press Type Release	xCommand Key Release Key: F2\x0D
IR Emulation F3 Press Type Click	xCommand Key Click Key: F3\x0D
IR Emulation F3 Press Type Press	xCommand Key Press Key: F3\x0D
IR Emulation F3 Press Type Release	xCommand Key Release Key: F3\x0D

Global Scripter Module Communication Sheet

IR Emulation F4 Press Type Click	xCommand Key Click Key: F4\x0D
IR Emulation F4 Press Type Press	xCommand Key Press Key: F4\x0D
IR Emulation F4 Press Type Release	xCommand Key Release Key: F4\x0D
IR Emulation F5 Press Type Click	xCommand Key Click Key: F5\x0D
IR Emulation F5 Press Type Press	xCommand Key Press Key: F5\x0D
IR Emulation F5 Press Type Release	xCommand Key Release Key: F5\x0D
IR Emulation Grab Press Type Click	xCommand Key Click Key: Grab\x0D
IR Emulation Grab Press Type Press	xCommand Key Press Key: Grab\x0D
IR Emulation Grab Press Type Release	xCommand Key Release Key: Grab\x0D
IR Emulation Home Press Type Click	xCommand Key Click Key: Home\x0D
IR Emulation Home Press Type Press	xCommand Key Press Key: Home\x0D
IR Emulation Home Press Type Release	xCommand Key Release Key: Home\x0D
IR Emulation Layout Press Type Click	xCommand Key Click Key: Layout\x0D
IR Emulation Layout Press Type Press	xCommand Key Press Key: Layout\x0D
IR Emulation Layout Press Type Release	xCommand Key Release Key: Layout\x0D
IR Emulation Left Press Type Click	xCommand Key Click Key: Left\x0D
IR Emulation Left Press Type Press	xCommand Key Press Key: Left\x0D
IR Emulation Left Press Type Release	xCommand Key Release Key: Left\x0D
IR Emulation Mute Mic Press Type Click	xCommand Key Click Key: MuteMic\x0D
IR Emulation Mute Mic Press Type Press	xCommand Key Press Key: MuteMic\x0D
IR Emulation Mute Mic Press Type Release	xCommand Key Release Key: MuteMic\x0D
IR Emulation Mute Press Type Click	xCommand Key Click Key: Mute\x0D
IR Emulation Mute Press Type Press	xCommand Key Press Key: Mute\x0D
IR Emulation Mute Press Type Release	xCommand Key Release Key: Mute\x0D
IR Emulation Ok Press Type Click	xCommand Key Click Key: Ok\x0D
IR Emulation Ok Press Type Press	xCommand Key Press Key: Ok\x0D
IR Emulation Ok Press Type Release	xCommand Key Release Key: Ok\x0D
IR Emulation PC Press Type Click	xCommand Key Click Key: SrcPc\x0D
IR Emulation PC Press Type Press	xCommand Key Press Key: SrcPc\x0D
IR Emulation PC Press Type Release	xCommand Key Release Key: SrcPc\x0D
IR Emulation Presentation Press Type Click	xCommand Key Click Key: Presentation\x0D
IR Emulation Presentation Press Type Press	xCommand Key Press Key: Presentation\x0D
IR Emulation Presentation Press Type Release	xCommand Key Release Key: Presentation\x0D
IR Emulation Right Press Type Click	xCommand Key Click Key: Right\x0D
IR Emulation Right Press Type Press	xCommand Key Press Key: Right\x0D
IR Emulation Right Press Type Release	xCommand Key Release Key: Right\x0D
IR Emulation Selfview Press Type Click	xCommand Key Click Key: Selfview\x0D
IR Emulation Selfview Press Type Press	xCommand Key Press Key: Selfview\x0D
IR Emulation Selfview Press Type Release	xCommand Key Release Key: Selfview\x0D
IR Emulation Up Press Type Click	xCommand Key Click Key: Up\x0D
IR Emulation Up Press Type Press	xCommand Key Press Key: Up\x0D
IR Emulation Up Press Type Release	xCommand Key Release Key: Up\x0D

Global Scripter Module Communication Sheet

IR Emulation VCR Press Type Click	xCommand Key Click Key: SrcVcr\x0D
IR Emulation VCR Press Type Press	xCommand Key Press Key: SrcVcr\x0D
IR Emulation VCR Press Type Release	xCommand Key Release Key: SrcVcr\x0D
IR Emulation Volume Down Press Type Click	xCommand Key Click Key: VolumeDown\x0D
IR Emulation Volume Down Press Type Press	xCommand Key Press Key: VolumeDown\x0D
IR Emulation Volume Down Press Type Release	xCommand Key Release Key: VolumeDown\x0D
IR Emulation Volume Up Press Type Click	xCommand Key Click Key: VolumeUp\x0D
IR Emulation Volume Up Press Type Press	xCommand Key Press Key: VolumeUp\x0D
IR Emulation Volume Up Press Type Release	xCommand Key Release Key: VolumeUp\x0D
IR Emulation Zoom In Press Type Click	xCommand Key Click Key: ZoomIn\x0D
IR Emulation Zoom In Press Type Press	xCommand Key Press Key: ZoomIn\x0D
IR Emulation Zoom In Press Type Release	xCommand Key Release Key: ZoomIn\x0D
IR Emulation Zoom Out Press Type Click	xCommand Key Click Key: ZoomOut\x0D
IR Emulation Zoom Out Press Type Press	xCommand Key Press Key: ZoomOut\x0D
IR Emulation Zoom Out Press Type Release	xCommand Key Release Key: ZoomOut\x0D
Layout Add Layout ID 1	xCommand Video Layout Add LayoutId: 1\x0D
Layout Add Layout ID 65535	xCommand Video Layout Add LayoutId: 65535\x0D
Layout Remove Layout ID 1	xCommand Video Layout Remove LayoutId: 1\x0D
Layout Remove Layout ID 65535	xCommand Video Layout Remove LayoutId: 65535\x0D
Layout Set Auto Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Auto\x0D
Layout Set Auto Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Auto\x0D
Layout Set Custom Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Custom\x0D
Layout Set Custom Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Custom\x0D
Layout Set Equal Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Equal\x0D
Layout Set Equal Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Equal\x0D
Layout Set Fullscreen Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Fullscreen\x0D
Layout Set Fullscreen Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Fullscreen\x0D
Layout Set Overlay Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Overlay\x0D

Global Scripter Module Communication Sheet

Layout Set Overlay Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Overlay\x0D
Layout Set Presentation Large Speaker Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: PresentationLargeSpeaker\x0D
Layout Set Presentation Large Speaker Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: PresentationLargeSpeaker\x0D
Layout Set Presentation Small Speaker Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: PresentationSmallSpeaker\x0D
Layout Set Presentation Small Speaker Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: PresentationSmallSpeaker\x0D
Layout Set Prominent Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Prominent\x0D
Layout Set Prominent Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Prominent\x0D
Layout Set Single Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Single\x0D
Layout Set Single Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Single\x0D
Microphones Mute Off	xCommand Audio Microphones UnMute\x0D
Microphones Mute On	xCommand Audio Microphones Mute\x0D
Missed Call Notification Off	xConfiguration Video OSD MissedCallsNotification: Off\x0D
Missed Call Notification On	xConfiguration Video OSD MissedCallsNotification: On\x0D
Output Level 0 Output Line 1	xConfiguration Audio Output Line 1 Level:0\x0D
Output Level 0 Output Line 2	xConfiguration Audio Output Line 2 Level:0\x0D
Output Level 0 Output Line 3	xConfiguration Audio Output Line 3 Level:0\x0D
Output Level 0 Output Line 4	xConfiguration Audio Output Line 4 Level:0\x0D
Output Level 0 Output Line 5	xConfiguration Audio Output Line 5 Level:0\x0D
Output Level 0 Output Line 6	xConfiguration Audio Output Line 6 Level:0\x0D
Output Level -24 Output Line 1	xConfiguration Audio Output Line 1 Level:-24\x0D
Output Level -24 Output Line 2	xConfiguration Audio Output Line 2 Level:-24\x0D
Output Level -24 Output Line 3	xConfiguration Audio Output Line 3 Level:-24\x0D
Output Level -24 Output Line 4	xConfiguration Audio Output Line 4 Level:-24\x0D
Output Level -24 Output Line 5	xConfiguration Audio Output Line 5 Level:-24\x0D
Output Level -24 Output Line 6	xConfiguration Audio Output Line 6 Level:-24\x0D
Phonebook Folder ID Update None Phonebook Type Corporate	xCommand Phonebook Search PhonebookType:Corporate ContactType: Folder Offset: 0 Limit: 50\x0D
Phonebook Folder ID Update None Phonebook Type Local	xCommand Phonebook Search PhonebookType:Local ContactType: Folder Offset: 0 Limit: 50\x0D
Picture In Picture Off	xCommand CamCtrlPip Mode:Off\x0D
Picture In Picture On	xCommand CamCtrlPip Mode:On\x0D
Presentation 1	xCommand Presentation Start PresentationSource: 1\x0D
Presentation 2	xCommand Presentation Start PresentationSource: 2\x0D
Presentation 3	xCommand Presentation Start PresentationSource: 3\x0D
Presentation 5	xCommand Presentation Start PresentationSource: 5\x0D
Presentation Sending Mode Local and Remote	xCommand Presentation Start SendingMode: LocalRemote\x0D
Presentation Sending Mode Local Only	xCommand Presentation Start SendingMode: LocalOnly\x0D

Presentation Stop	xCommand Presentation Stop\x0D
Preset Recall 1	xCommand Preset Activate PresetId:1\x0D
Preset Recall 15	xCommand Preset Activate PresetId:15\x0D
Preset Save 1	xCommand Preset Store PresetId:1 Type:All\x0D
Preset Save 15	xCommand Preset Store PresetId:15 Type:All\x0D
Reboot None	xCommand Boot\x0D
Self View Off	xCommand Video Selfview Set Mode:Off\x0D
Self View On	xCommand Video Selfview Set Mode:On\x0D
Self View Position Center Left	xCommand Video Selfview Set PIPPosition:CenterLeft\x0D
Self View Position Center Right	xCommand Video Selfview Set PIPPosition:CenterRight\x0D
Self View Position Lower Left	xCommand Video Selfview Set PIPPosition:LowerLeft\x0D
Self View Position Lower Right	xCommand Video Selfview Set PIPPosition:LowerRight\x0D
Self View Position Upper Center	xCommand Video Selfview Set PIPPosition:UpperCenter\x0D
Self View Position Upper Left	xCommand Video Selfview Set PIPPosition:UpperLeft\x0D
Self View Position Upper Right	xCommand Video Selfview Set PIPPosition:UpperRight\x0D
Sleep Timer 1	xCommand Standby ResetTimer Delay:1\x0D
Sleep Timer 480	xCommand Standby ResetTimer Delay:480\x0D
Standby Activate	xCommand Standby Activate\x0D
Standby Deactivate	xCommand Standby Deactivate\x0D
Volume 0	xCommand Audio Volume Set Level:0\x0D
Volume 100	xCommand Audio Volume Set Level:100\x0D

Appendix B. Query Commands

Audio Output Output Line 1	xConfiguration Audio Output Line 1 Mode\x0D
Audio Output Output Line 2	xConfiguration Audio Output Line 2 Mode\x0D
Audio Output Output Line 3	xConfiguration Audio Output Line 3 Mode\x0D
Audio Output Output Line 4	xConfiguration Audio Output Line 4 Mode\x0D
Audio Output Output Line 5	xConfiguration Audio Output Line 5 Mode\x0D
Audio Output Output Line 6	xConfiguration Audio Output Line 6 Mode\x0D
Auto Answer	xConfiguration Conference 1 AutoAnswer Mode\x0D
Call Setup Mode	xConfiguration H323 Profile 1 CallSetup Mode\x0D
Display Mode	xConfiguration Video Monitors\x0D
DNS Server Address Server 1	xStatus Network DNS Server 1 Address\x0D
DNS Server Address Server 3	xStatus Network DNS Server 3 Address\x0D
Do Not Disturb	xStatus Conference DoNotDisturb\x0D
Far End Control	xConfiguration Conference 1 FarEndControl Mode\x0D
Firmware Version	xStatus SystemUnit Software Version\x0D
Gateway Address	xStatus Network 1 IPv4 Gateway\x0D
Input	xConfiguration Video MainVideoSource\x0D
Input Level Input Line 1	xConfiguration Audio Input Line 1 Level\x0D
Input Level Input Line 2	xConfiguration Audio Input Line 2 Level\x0D
Input Level Input Line 3	xConfiguration Audio Input Line 3 Level\x0D
Input Level Input Line 4	xConfiguration Audio Input Line 4 Level\x0D
Input Level Input Microphone 1	xConfiguration Audio Input Microphone 1 Level\x0D
Input Level Input Microphone 2	xConfiguration Audio Input Microphone 2 Level\x0D
Input Level Input Microphone 3	xConfiguration Audio Input Microphone 3 Level\x0D

Global Scripter Module Communication Sheet

Input Level Input Microphone 4	xConfiguration Audio Input Microphone 4 Level\x0D
Input Level Input Microphone 5	xConfiguration Audio Input Microphone 5 Level\x0D
Input Level Input Microphone 6	xConfiguration Audio Input Microphone 6 Level\x0D
Input Level Input Microphone 7	xConfiguration Audio Input Microphone 7 Level\x0D
Input Level Input Microphone 8	xConfiguration Audio Input Microphone 8 Level\x0D
Input Mute Input Line 1	xConfiguration Audio Input Line 1 Mode\x0D
Input Mute Input Line 2	xConfiguration Audio Input Line 2 Mode\x0D
Input Mute Input Line 3	xConfiguration Audio Input Line 3 Mode\x0D
Input Mute Input Line 4	xConfiguration Audio Input Line 4 Mode\x0D
Input Mute Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode\x0D
Input Mute Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode\x0D
Input Mute Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode\x0D
Input Mute Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode\x0D
Input Mute Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode\x0D
Input Mute Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode\x0D
Input Mute Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode\x0D
Input Mute Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode\x0D
IP Address	xStatus Network 1 IPv4 Address\x0D
MAC Address	xStatus Network 1 Ethernet MacAddress\x0D
Microphones Mute	xStatus Audio Microphones\x0D
Missed Call Notification	xConfiguration Video OSD MissedCallsNotification\x0D
Network Assignment	xConfiguration Network 1 IPv4 Assignment\x0D
Output Level Output Line 1	xConfiguration Audio Output Line 1 Level\x0D
Output Level Output Line 2	xConfiguration Audio Output Line 2 Level\x0D
Output Level Output Line 3	xConfiguration Audio Output Line 3 Level\x0D
Output Level Output Line 4	xConfiguration Audio Output Line 4 Level\x0D
Output Level Output Line 5	xConfiguration Audio Output Line 5 Level\x0D
Output Level Output Line 6	xConfiguration Audio Output Line 6 Level\x0D
Presentation	xStatus Conference Presentation LocalSource\x0D
Presentation Mode	xStatus Conference Presentation Mode\x0D
Presentation Sending Mode	xStatus Conference Presentation LocalSendingMode\x0D
Self View	xStatus Video Selfview Mode\x0D
Self View Position	xStatus Video Selfview PIPPosition\x0D
Standby	xStatus Standby\x0D
Subnet Mask	xStatus Network 1 IPv4 SubnetMask\x0D
Volume	xStatus Audio Volume\x0D