

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: Cisco
Firmware Version: CE8.3
Model(s): MX200 CE8.3.X, MX300 CE8.3.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_0_0_1	9/8/2007	Updated status example.
1_0_0_0	8/28/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- NumberOfPhonebookSearch variable must be set accordingly. Default value is 1. Number of Phonebook Search ranges from 1 – 10.
Example: `InterfaceName.NumberofPhonebookSearch = 1`
- NumberOfPhonebookFolderSearch variable must be set accordingly. Default value is 1. Number of Phonebook Folder Search ranges from 1 – 10.
Example: `InterfaceName.NumberofPhonebookFolderSearch = 1`
- CallHistoryOccurrenceType variable must be set accordingly. Default value is 'Time'.
CallHistoryOccurrenceType options are 'Time' and 'Frequency'.
Example: `InterfaceName.CallHistoryOccurrenceType = 'Time'`
- NumberOfCallHistory variable must be set accordingly. Default value is 5. NumberOfCallHistory Range is 1 – 20.
Example: `InterfaceName.NumberofCallHistory = 5`
- NumberOfPeripheral variable must be set accordingly. Default value is 5. NumberOfPeripheral Range is 1 – 10.
Example: `InterfaceName.NumberofPeripheral = 5`

Call History Commands

- CallHistoryRefresh
This is used to trigger the search for recent Call History based on the CallHistoryOccuranceType class variable.
- CallHistoryNavigation
This command is used for navigating through the CallHistory results.
- CallHistorySelect
When the CallHistorySelect is triggered, it will store the call history results' Callback Number into a class variable name, number. It can be accessed and use in the Dial String qualifier for the Hook Dial command.
- CallHistory

This is where the search results are saved when CallHistoryRefresh is called. The number of results displayed is set to 5 by default. Simply call SetText to display the results on a button or label object.

Phonebook commands

- **PhonebookSearchResult**
This is where the search results will be saved to when phonebook is searched. The number of results are set by a driver parameter Number of Phonebook Search, this is initialized to 5 results by default. Simply call SetText with the returned result to display the search result on a button or label object.
- **PhonebookSearchSet**
When the number selected in this command is triggered, it will dial the number with the xCommand Dial Number command.
- **PhonebookNavigation**
This command is used for navigating through the search results. The navigation commands scroll through the results when there are more results than NumberofPhonebookSearch variable.
- **PhonebookUpdate**
This is used to trigger the Phonebook search.
- **PhonebookFolderIDUpdate**
This is used to trigger the Folder search within the Phonebook.
- **PhonebookFolderIDSearchSet**
When the Folder Name selected in this command is triggered, it will store the Folder Name in a class variable, FolderIDNumber, and that variable can be accessed and used in the 'FolderID' qualifier in the PhonebookUpdate command.
- **PhonebookFolderIDSearchResult**
This is where the search results are saved when PhonebookFolderIDUpdate is called. The number of results displayed is set to 5 by default. Simply call SetText with the returned results to display the results on a button or label object.

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='MX200 CE8.3.X')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='MX200 CE8.3.X')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='MX200 CE8.3.X')

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command CallHistoryNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')			
Command CallHistoryRefresh	Value None		
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)			
Command CallHistorySelect	Value '1' – '20'		
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', '1')			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode example InterfaceName.Set('CallSetupMode', 'Gatekeeper')			
Command CameraFocus	Value 'Near' 'Auto'	Value 'Far'	Value 'Stop'
# CameraFocus example InterfaceName.Set('CameraFocus', 'Near')			
Command CameraPan	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraPan example InterfaceName.Set('CameraPan', 'Left', {'Speed': 15})			
Command CameraPresetRecall	Value '1' – '35'		

Global Scripter Module Communication Sheet

Revision: 8/28/2017

# CameraPresetRecall example InterfaceName.Set('CameraPresetRecall', '1')			
Command CameraPresetSave	Value '1' – '35'		
# CameraPresetSave example InterfaceName.Set('CameraPresetSave', '1')			
Command CameraTilt	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraTilt example InterfaceName.Set('CameraTilt', 'Up', {'Speed': 15})			
Command CameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoom example InterfaceName.Set('CameraZoom', 'In', {'Speed': 15})			
Command ConnectedDeviceNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# ConnectedDeviceNavigation example InterfaceName.Set('ConnectedDeviceNavigation', 'Up')			
Command ConnectedDeviceUpdate	Value None		
# ConnectedDeviceUpdate example InterfaceName.Set('ConnectedDeviceUpdate', None)			
Command DisplayMode	Value 'Dual Presentation Only'	Value 'Auto'	
# DisplayMode example InterfaceName.Set('DisplayMode', 'Dual Presentation Only')			
Command DNSDomainNameCommand	Value 'String'		
# DNSDomainNameCommand example InterfaceName.Set('DNSDomainNameCommand', 'String')			
Command DNSServerAddressCommand	Value 'String'		
Qualifier Key 'Server'	Qualifier Value '1' – '3'		
# DNSServerAddressCommand example InterfaceName.Set('DNSServerAddressCommand', 'String', {'Server': '1'})			

Global Scripter Module Communication Sheet

Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Active')			
Command DTMF	Value '0' – '9'	Value '*'	Value '#'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command FarEndCameraPanTilt	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
# FarEndCameraPanTilt example InterfaceName.Set('FarEndCameraPanTilt', 'Up')			
Command FarEndCameraPresetRecall	Value '1' – '15'		
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')			
Command FarEndCameraSource	Value '0' – '15'		
# FarEndCameraSource example InterfaceName.Set('FarEndCameraSource', '0')			
Command FarEndCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
# FarEndCameraZoom example InterfaceName.Set('FarEndCameraZoom', 'In')			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Set('FarEndControl', 'On')			
Command H323GatekeeperAddressCommand	Value 'String'		
# H323GatekeeperAddressCommand example InterfaceName.Set('H323GatekeeperAddressCommand', 'String')			
Command H323AliasE164Command	Value 'String'		
# H323AliasE164Command example InterfaceName.Set('H323AliasE164Command', 'String')			
Command H323AliasIDCommand	Value 'String'		
# H323AliasIDCommand example InterfaceName.Set('H323AliasIDCommand', 'String')			
Command	Value		

Global Scripter Module Communication Sheet

Revision: 8/28/2017

H323ProfileAuthenticationLoginNameCommand		'String'	
# H323ProfileAuthenticationLoginNameCommand example InterfaceName.Set('H323ProfileAuthenticationLoginNameCommand', 'String')			
Command H323ProfileAuthenticationPasswordCommand	Value 'String'		
# H323ProfileAuthenticationPasswordCommand example InterfaceName.Set('H323ProfileAuthenticationPasswordCommand', 'String')			
Command Hook	Value 'Accept'	Value 'Dial'	Value 'Disconnect 1'
	'Disconnect 2'	'Disconnect 3'	'Hold 1'
	'Hold 2'	'Hold 3'	'Join 1'
	'Join 2'	'Join 3'	'Reject'
	'Resume 1'	'Resume 2'	'Resume 3'
Qualifier Key 'Number'	Qualifier Value 'String'		
Qualifier Key 'Protocol'	Qualifier Value 'Auto'	Qualifier Value 'SIP'	Qualifier Value 'H323'
	'H320'		
# Hook example InterfaceName.Set('Hook', 'Accept', {'Number': '', 'Protocol': 'Auto'}) InterfaceName.Set('Hook', 'Dial', {'Number': '192.168.1.1', 'Protocol': 'H323'})			
Command Input	Value '1' – '5'		
# Input example InterfaceName.Set('Input', '1')			
Command InputMicLevel	Value 0 to 24 in steps of 1		
Qualifier Key 'Microphone'	Qualifier Value '2' – '3'		
# InputMicLevel example InterfaceName.Set('InputMicLevel', 24, {'Microphone': '2'})			
Command InputMute	Value 'On'	Value 'Off'	
# InputMute example InterfaceName.Set('InputMute', 'On')			
Command IPv4AddressCommand	Value 'String'		
# IPv4AddressCommand example InterfaceName.Set('IPv4AddressCommand', 'String')			
Command IPv4GatewayCommand	Value 'String'		

Global Scripter Module Communication Sheet

Revision: 8/28/2017

# IPv4GatewayCommand example InterfaceName.Set('IPv4GatewayCommand', 'String')			
Command IPv4SubnetMaskCommand	Value 'String'		
# IPv4SubnetMaskCommand example InterfaceName.Set('IPv4SubnetMaskCommand', 'String')			
Command LayoutSet	Value 'Auto'	Value 'Custom'	Value 'Equal'
	'Overlay'	'Prominent'	'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute example InterfaceName.Set('MicrophonesMute', 'On')			
Command PhonebookFolderIDNavigation	Value 'Up'	Value 'Down'	Value 'Page Up'
	'Page Down'		
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up')			
Command PhonebookFolderIDSearchSet	Value 1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command PhonebookFolderIDUpdate	Value None		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Corporate'})			
Command PhonebookNavigation	Value 'Up'	Value 'Down'	Value 'Page Up'
	'Page Down'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up', {'Phonebook Type': 'Corporate'})			
Qualifier Key 'Contact'	Qualifier Value 'String'		

Global Scripter Module Communication Sheet

Revision: 8/28/2017

Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
Qualifier Key 'Contact'	Qualifier Value 'String'		
# PhonebookSearch example InterfaceName.Set('PhonebookNavigation', 'Up', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Local'})			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': 'John', 'FolderID': '', 'Phonebook Type': 'Local'}) InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Local'})			
Command Presentation	Value '1' - '4'	Value 'Stop'	
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# Presentation example InterfaceName.Set('Presentation', '1', {'Instance': '1'})			
Command PresentationExternalSourceSelectCommand	Value 'String'		
# PresentationExternalSourceSelectCommand example InterfaceName.Set('PresentationExternalSourceSelectCommand', 'String')			
Command PresentationSendingMode	Value 'Local and Remote'	Value 'Local Only'	
Qualifier Key 'Connector ID'	Qualifier Value '1' – '2'		
# PresentationSendingMode example InterfaceName.Set('PresentationSendingMode', 'Local and Remote', {'Connector ID': '1'})			
Command	Value		

Global Scripter Module Communication Sheet

Revision: 8/28/2017

PresetRecall		'1' – '15'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1')				
Command PresetSave		Value '1' – '15'		
# PresetSave example InterfaceName.Set('PresetSave', '1')				
Command Reboot		Value None		
# Reboot example InterfaceName.Set('Reboot', None)				
Command SelfView		Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')				
Command SelfViewDefaultFullscreenMode		Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Set('SelfViewDefaultFullscreenMode', 'On')				
Command SelfViewPosition		Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')				
Command SleepTimer		Value 1 – 480		
# SleepTimer example InterfaceName.Set('SleepTimer', 480)				
Command Standby		Value 'Activate'	Value 'Deactivate'	
# Standby example InterfaceName.Set('Standby', 'Activate')				
Command Volume		Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)				

Status Available

For all commands excluding CallHistory, PhonebookFolderIDSearchResult, PhonebookSearchResult, CallStatusType, RemoteNumber, DisplayName, ConnectedDeviceName, ConnectedDeviceType, and ConnectedDeviceMAC call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer examples InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)			
Command CallHistory	Value 'String'		
Qualifier Key 'Button'	Qualifier Value '1' – '20'		
Qualifier Key 'Detail Type'	Qualifier Value 'Display Name'	Qualifier Value 'Callback Number'	Qualifier Value 'Last Occurrence Time'
	'Occurrence Count'	'Occurrence Type'	
# CallHistory examples Value = InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode examples InterfaceName.Update('CallSetupMode') Value = InterfaceName.ReadStatus('CallSetupMode') InterfaceName.SubscribeStatus('CallSetupMode', None, FeedbackHandler)			
Command CallStatus	Value 'Dialing'	Value 'Connecting'	Value 'Connected'
	'Ringing'	'Idle'	'Disconnecting'

Global Scripter Module Communication Sheet

Revision: 8/28/2017

	'On Hold'	'Early Media'	'Preserved'
	'Remote Preserved'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatus examples InterfaceName.Update('CallStatus', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)			
Command CallStatusType	Value 'Video'	Value 'Audio'	Value 'Audio Can Escalate'
	'Forward All Call'	'Unknown'	
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatusType examples Value = InterfaceName.ReadStatus('CallStatusType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)			
Command ConnectedDeviceMAC	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# ConnectedDeviceMAC examples Value = InterfaceName.ReadStatus('ConnectedDeviceMAC', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceMAC', None, FeedbackHandler)			
Command ConnectedDeviceName	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# ConnectedDeviceName examples Value = InterfaceName.ReadStatus('ConnectedDeviceName', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceName', None, FeedbackHandler)			
Command ConnectedDeviceType	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# ConnectedDeviceType examples Value = InterfaceName.ReadStatus('ConnectedDeviceType', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceType', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command DisplayMode	Value 'Dual Presentation Only'	Value 'Auto'
# DisplayMode examples InterfaceName.Update('DisplayMode') Value = InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)		
Command DisplayName	Value 'String'	
Qualifier Key 'Call'	Qualifier Value '1' – '5'	
# DisplayName examples Value = InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)		
Command DNSDomainName	Value 'String'	
# DNSDomainName examples InterfaceName.Update('DNSDomainName') Value = InterfaceName.ReadStatus('DNSDomainName') InterfaceName.SubscribeStatus('DNSDomainName', None, FeedbackHandler)		
Command DNSServerAddress	Value 'String'	
Qualifier Key 'Server'	Qualifier Value '1' – '3'	
# DNSServerAddress examples InterfaceName.Update('DNSServerAddress', {'Server': '1'}) Value = InterfaceName.ReadStatus('DNSServerAddress', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddress', None, FeedbackHandler)		
Command DoNotDisturb	Value 'Active'	Value 'Inactive'
# DoNotDisturb examples InterfaceName.Update('DoNotDisturb') Value = InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)		
Command FarEndControl	Value 'On'	Value 'Off'
# FarEndControl examples InterfaceName.Update('FarEndControl') Value = InterfaceName.ReadStatus('FarEndControl') InterfaceName.SubscribeStatus('FarEndControl', None, FeedbackHandler)		
Command FirmwareVersion	Value 'String'	
# FirmwareVersion examples InterfaceName.Update('FirmwareVersion') Value = InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)		

Global Scripter Module Communication Sheet

Revision: 8/28/2017

Command	Value		
GatewayAddress	'String'		
# GatewayAddress examples InterfaceName.Update('GatewayAddress') Value = InterfaceName.ReadStatus('GatewayAddress') InterfaceName.SubscribeStatus('GatewayAddress', None, FeedbackHandler)			
Command	Value		
H323GatekeeperAddress	'String'		
# H323GatekeeperAddress examples InterfaceName.Update('H323GatekeeperAddress') Value = InterfaceName.ReadStatus('H323GatekeeperAddress') InterfaceName.SubscribeStatus('H323GatekeeperAddress', None, FeedbackHandler)			
Command	Value	Value	Value
H323GatekeeperStatus	'Required'	'Discovering'	'Discovered'
	'Authenticating'	'Authenticated'	'Registering'
	'Registered'	'Inactive'	'Rejected'
# H323GatekeeperStatus examples InterfaceName.Update('H323GatekeeperStatus') Value = InterfaceName.ReadStatus('H323GatekeeperStatus') InterfaceName.SubscribeStatus('H323GatekeeperStatus', None, FeedbackHandler)			
Command	Value		
Input	'1' – '5'		
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value		
InputMicLevel	0 to 24 in steps of 1		
Qualifier Key	Qualifier Value		
'Microphone'	'2' – '3'		
# InputMicLevel examples InterfaceName.Update('InputMicLevel', {'Microphone': '2'}) Value = InterfaceName.ReadStatus('InputMicLevel', {'Microphone': '2'}) InterfaceName.SubscribeStatus('InputMicLevel', None, FeedbackHandler)			
Command	Value	Value	
InputMute	'On'	'Off'	
# InputMute examples InterfaceName.Update('InputMute') Value = InterfaceName.ReadStatus('InputMute') InterfaceName.SubscribeStatus('InputMute', None, FeedbackHandler)			
Command	Value	Value	Value
InputSignal	'True'	'False'	'Unknown'
Qualifier Key	Qualifier Value		
'Input'	'1' – '2'		

<pre># InputSignal examples InterfaceName.Update('InputSignal', {'Input': '1'}) Value = InterfaceName.ReadStatus('InputSignal', {'Input': '1'}) InterfaceName.SubscribeStatus('InputSignal', None, FeedbackHandler)</pre>		
Command IPAddress	Value 'String'	
<pre># IPAddress examples InterfaceName.Update('IPAddress') Value = InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)</pre>		
Command MACAddress	Value 'String'	
<pre># MACAddress examples InterfaceName.Update('MACAddress') Value = InterfaceName.ReadStatus('MACAddress') InterfaceName.SubscribeStatus('MACAddress', None, FeedbackHandler)</pre>		
Command MicrophonesMute	Value 'On'	Value 'Off'
<pre># MicrophonesMute examples InterfaceName.Update('MicrophonesMute') Value = InterfaceName.ReadStatus('MicrophonesMute') InterfaceName.SubscribeStatus('MicrophonesMute', None, FeedbackHandler)</pre>		
Command NetworkAssignment	Value 'Static'	Value 'DHCP'
<pre># NetworkAssignment examples InterfaceName.Update('NetworkAssignment') Value = InterfaceName.ReadStatus('NetworkAssignment') InterfaceName.SubscribeStatus('NetworkAssignment', None, FeedbackHandler)</pre>		
Command PhonebookFolderIDSearchResult	Value 'String'	
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1	
<pre># PhonebookFolderIDSearchResult examples Value = InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)</pre>		
Command PhonebookSearchResult	Value 'String'	
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1	
<pre># PhonebookSearchResult examples Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)</pre>		
Command Presentation	Value '1' – '4'	Value 'Stop'
Qualifier Key	Qualifier Value	

Global Scripter Module Communication Sheet

'Instance'	'1' – '6'		
# Presentation examples InterfaceName.Update('Presentation', {'Instance': '1'}) Value = InterfaceName.ReadStatus('Presentation', {'Instance': '1'}) InterfaceName.SubscribeStatus('Presentation', None, FeedbackHandler)			
Command PresentationMode	Value 'Off'	Value 'Sending'	Value 'Receiving'
# PresentationMode examples InterfaceName.Update('PresentationMode') Value = InterfaceName.ReadStatus('PresentationMode') InterfaceName.SubscribeStatus('PresentationMode', None, FeedbackHandler)			
Command PresentationSendingModeStatus	Value 'Local and Remote'	Value 'Local Only'	Value 'Off'
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# PresentationSendingModeStatus examples InterfaceName.Update('PresentationSendingModeStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSendingModeStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSendingModeStatus', None, FeedbackHandler)			
Command RemoteNumber	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# RemoteNumber examples Value = InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'}) InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView examples InterfaceName.Update('SelfView') Value = InterfaceName.ReadStatus('SelfView') InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)			
Command SelfViewDefaultFullscreenMode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode examples InterfaceName.Update('SelfViewDefaultFullscreenMode') Value = InterfaceName.ReadStatus('SelfViewDefaultFullscreenMode') InterfaceName.SubscribeStatus('SelfViewDefaultFullscreenMode', None, FeedbackHandler)			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition examples InterfaceName.Update('SelfViewPosition')			

Global Scripter Module Communication Sheet

Revision: 8/28/2017

Value = InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)			
Command SIPRegistrationStatus	Value 'Deregistering' 'Registered'	Value 'Failed' 'Registering'	Value 'Inactive'
# SIPRegistrationStatus examples InterfaceName.Update('SIPRegistrationStatus') Value = InterfaceName.ReadStatus('SIPRegistrationStatus') InterfaceName.SubscribeStatus('SIPRegistrationStatus', None, FeedbackHandler)			
Command Standby	Value 'Activate'	Value 'Deactivate'	
# Standby examples InterfaceName.Update('Standby') Value = InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)			
Command SubnetMask	Value 'String'		
# SubnetMask examples InterfaceName.Update('SubnetMask') Value = InterfaceName.ReadStatus('SubnetMask') InterfaceName.SubscribeStatus('SubnetMask', None, FeedbackHandler)			
Command Volume	Value 0 to 100 in steps of 1		
# Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

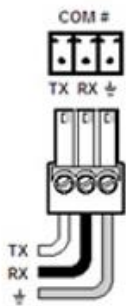

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	Yes
Multi-Connection Capabilities:	Yes
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Telnet mode must be set to 'On' by an admin to have open communication with the driver.

Appendix A. Set Commands

Auto Answer Off	xConfiguration Conference AutoAnswer Mode: Off\x0D
Auto Answer On	xConfiguration Conference AutoAnswer Mode: On\x0D
Call Setup Mode Direct	xConfiguration H323 CallSetup Mode: Direct\x0D
Call Setup Mode Gatekeeper	xConfiguration H323 CallSetup Mode: Gatekeeper\x0D
Camera Focus Auto	xCommand Camera TriggerAutoFocus Camerald:1\x0D
Camera Focus Far	xCommand Camera Ramp Camerald:1 Focus:Far\x0D
Camera Focus Near	xCommand Camera Ramp Camerald:1 Focus:Near\x0D
Camera Focus Stop	xCommand Camera Ramp Camerald:1 Focus:Stop\x0D
Camera Pan Left Speed 1	xCommand Camera Ramp Camerald:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 15	xCommand Camera Ramp Camerald:1 Pan:Left PanSpeed:15\x0D
Camera Pan Right Speed 1	xCommand Camera Ramp Camerald:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Speed 15	xCommand Camera Ramp Camerald:1 Pan:Right PanSpeed:15\x0D
Camera Pan Stop Speed 1	xCommand Camera Ramp Camerald:1 Pan: Stop\x0D
Camera Pan Stop Speed 15	xCommand Camera Ramp Camerald:1 Pan: Stop\x0D
Camera Preset Recall 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset Recall 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Save 1	xCommand Camera Preset Store PresetId:1 Camerald:1\x0D
Camera Preset Save 35	xCommand Camera Preset Store PresetId:35 Camerald:1\x0D
Camera Tilt Down Speed 1	xCommand Camera Ramp Camerald:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 15	xCommand Camera Ramp Camerald:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Stop Speed 1	xCommand Camera Ramp Camerald:1 Tilt:Stop\x0D
Camera Tilt Stop Speed 15	xCommand Camera Ramp Camerald:1 Tilt:Stop\x0D
Camera Tilt Up Speed 1	xCommand Camera Ramp Camerald:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 15	xCommand Camera Ramp Camerald:1 Tilt:Up TiltSpeed:15\x0D
Camera Zoom In Speed 1	xCommand Camera Ramp Camerald:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 15	xCommand Camera Ramp Camerald:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom Out Speed 1	xCommand Camera Ramp Camerald:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 15	xCommand Camera Ramp Camerald:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Stop Speed 1	xCommand Camera Ramp Camerald:1 Zoom: Stop\x0D
Camera Zoom Stop Speed 15	xCommand Camera Ramp Camerald:1 Zoom: Stop\x0D
Connected Device Update None	xStatus Peripherals ConnectedDevice\x0D
Display Mode Auto	xConfiguration Video Monitors: Auto\x0D
Display Mode Dual Presentation Only	xConfiguration Video Monitors: DualPresentationOnly\x0D
Do Not Disturb Active	xCommand Conference DoNotDisturb Activate\x0D
Do Not Disturb Inactive	xCommand Conference DoNotDisturb Deactivate\x0D
DTMF #	xCommand Call DTMFSend DTMFString:#\x0D
DTMF *	xCommand Call DTMFSend DTMFString:*\x0D
DTMF 0	xCommand Call DTMFSend DTMFString:0\x0D
DTMF 9	xCommand Call DTMFSend DTMFString:9\x0D
Far End Camera Pan/Tilt Down	xCommand Call FarEndControl Camera Move Value:Down\x0D
Far End Camera Pan/Tilt Left	xCommand Call FarEndControl Camera Move Value:Left\x0D

Global Scripter Module Communication Sheet

Far End Camera Pan/Tilt Right	xCommand Call FarEndControl Camera Move Value:Right\x0D
Far End Camera Pan/Tilt Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Camera Pan/Tilt Up	xCommand Call FarEndControl Camera Move Value:Up\x0D
Far End Camera Preset Recall 1	xCommand Call FarEndControl RoomPreset Activate:1\x0D
Far End Camera Preset Recall 15	xCommand Call FarEndControl RoomPreset Activate:15\x0D
Far End Camera Source 0	xCommand Call FarEndControl Source Select SourceId:0\x0D
Far End Camera Source 15	xCommand Call FarEndControl Source Select SourceId:15\x0D
Far End Camera Zoom In	xCommand Call FarEndControl Camera Move Value:ZoomIn\x0D
Far End Camera Zoom Out	xCommand Call FarEndControl Camera Move Value:ZoomOut\x0D
Far End Control Off	xConfiguration Conference FarEndControl Mode: Off\x0D
Far End Control On	xConfiguration Conference FarEndControl Mode: On\x0D
Hook Accept Protocol Auto	xCommand Call Accept\x0D
Hook Accept Protocol H320	xCommand Call Accept\x0D
Hook Accept Protocol H323	xCommand Call Accept\x0D
Hook Accept Protocol SIP	xCommand Call Accept\x0D
Hook Reject Protocol Auto	xCommand Call Reject\x0D
Hook Reject Protocol H320	xCommand Call Reject\x0D
Hook Reject Protocol H323	xCommand Call Reject\x0D
Hook Reject Protocol SIP	xCommand Call Reject\x0D
Input 1	xCommand Video Input SetMainVideoSource ConnectorId: 1\x0D
Input 5	xCommand Video Input SetMainVideoSource ConnectorId: 5\x0D
Input Mic Level 0 Microphone 2	xConfiguration Audio Input Microphone 2 Level:0\x0D
Input Mic Level 0 Microphone 3	xConfiguration Audio Input Microphone 3 Level:0\x0D
Input Mic Level 24 Microphone 2	xConfiguration Audio Input Microphone 2 Level:24\x0D
Input Mic Level 24 Microphone 3	xConfiguration Audio Input Microphone 3 Level:24\x0D
Input Mute Off	xConfiguration Audio Input 1 Mode:Off\x0D
Input Mute On	xConfiguration Audio Input 1 Mode:On\x0D
Layout Set Auto Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:auto\x0D
Layout Set Auto Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:auto\x0D
Layout Set Custom Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:custom\x0D
Layout Set Custom Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:custom\x0D
Layout Set Equal Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:equal\x0D
Layout Set Equal Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:equal\x0D
Layout Set Overlay Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:overlay\x0D
Layout Set Overlay Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:overlay\x0D
Layout Set Prominent Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:prominent\x0D

Global Scriptor Module Communication Sheet

Revision: 8/28/2017

Layout Set Prominent Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:prominent\x0D
Layout Set Single Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:single\x0D
Layout Set Single Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:single\x0D
Microphones Mute Off	xCommand Audio Microphones UnMute\x0D
Microphones Mute On	xCommand Audio Microphones Mute\x0D
Phonebook Folder ID Update None Phonebook Type Corporate	xCommand Phonebook Search PhonebookType:Corporate ContactType: Folder Offset: 0 Limit: 50\x0D
Phonebook Folder ID Update None Phonebook Type Local	xCommand Phonebook Search PhonebookType:Local ContactType: Folder Offset: 0 Limit: 50\x0D
Presentation 1 Instance 1	xCommand Presentation Start ConnectorId:1 Instance:1\x0D
Presentation 1 Instance 6	xCommand Presentation Start ConnectorId:1 Instance:6\x0D
Presentation 4 Instance 1	xCommand Presentation Start ConnectorId:4 Instance:1\x0D
Presentation 4 Instance 6	xCommand Presentation Start ConnectorId:4 Instance:6\x0D
Presentation Sending Mode Local and Remote Connector ID 1	xCommand Presentation Start SendingMode: LocalRemote connectorID: 1\x0D
Presentation Sending Mode Local and Remote Connector ID 2	xCommand Presentation Start SendingMode: LocalRemote connectorID: 2\x0D
Presentation Sending Mode Local Only Connector ID 1	xCommand Presentation Start SendingMode: LocalOnly connectorID: 1\x0D
Presentation Sending Mode Local Only Connector ID 2	xCommand Presentation Start SendingMode: LocalOnly connectorID: 2\x0D
Presentation Stop Instance 1	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Instance 6	xCommand Presentation Stop Instance:6\x0D
Preset Recall 1	xCommand RoomPreset Activate PresetId:1\x0D
Preset Recall 15	xCommand RoomPreset Activate PresetId:15\x0D
Preset Save 1	xCommand RoomPreset Store PresetId:1 Type:All\x0D
Preset Save 15	xCommand RoomPreset Store PresetId:15 Type:All\x0D
Reboot None	xCommand SystemUnit Boot Action:Restart\x0D
Self View Default Fullscreen Mode Current	xConfiguration Video Selfview Default FullscreenMode:Current\x0D
Self View Default Fullscreen Mode Off	xConfiguration Video Selfview Default FullscreenMode:Off\x0D
Self View Default Fullscreen Mode On	xConfiguration Video Selfview Default FullscreenMode:On\x0D
Self View Off	xCommand Video Selfview Set Mode:Off\x0D
Self View On	xCommand Video Selfview Set Mode:On\x0D
Self View Position Center Left	xCommand Video Selfview Set PIPPosition:CenterLeft\x0D
Self View Position Center Right	xCommand Video Selfview Set PIPPosition:CenterRight\x0D
Self View Position Lower Left	xCommand Video Selfview Set PIPPosition:LowerLeft\x0D
Self View Position Lower Right	xCommand Video Selfview Set PIPPosition:LowerRight\x0D
Self View Position Upper Center	xCommand Video Selfview Set PIPPosition:UpperCenter\x0D
Self View Position Upper Left	xCommand Video Selfview Set PIPPosition:UpperLeft\x0D
Self View Position Upper Right	xCommand Video Selfview Set PIPPosition:UpperRight\x0D
Sleep Timer 1	xCommand Standby ResetTimer Delay:1\x0D

Sleep Timer 480	xCommand Standby ResetTimer Delay:480\x0D
Standby Deactivate	xCommand Standby Deactivate\x0D
Volume 0	xCommand Audio Volume Set Level:0\x0D
Volume 100	xCommand Audio Volume Set Level:100\x0D

Appendix B. Query Commands

Auto Answer	xConfiguration Conference AutoAnswer Mode\x0D
Call Setup Mode	xConfiguration H323 CallSetup Mode\x0D
Call Status Call 1	xstatus call\x0D
Call Status Call 5	xstatus call\x0D
Display Mode	xConfiguration Video Monitors\x0D
DNS Domain Name	xStatus Network 1 DNS Domain Name\x0D
DNS Server Address Server 1	xStatus Network 1 DNS Server 1 Address\x0D
DNS Server Address Server 3	xStatus Network 1 DNS Server 3 Address\x0D
Do Not Disturb	xStatus Conference DoNotDisturb\x0D
Far End Control	xConfiguration Conference FarEndControl Mode\x0D
Firmware Version	xStatus SystemUnit Software Version\x0D
Gateway Address	xStatus Network 1 IPv4 Gateway\x0D
H323 Gatekeeper Address	xStatus H323 Gatekeeper Address\x0D
H323 Gatekeeper Status	xStatus H323 Gatekeeper Status\x0D
Input	xStatus Video Input MainVideoSource\x0D
Input Mic Level Microphone 2	xConfiguration Audio Input Microphone 2 Level\x0D
Input Mic Level Microphone 3	xConfiguration Audio Input Microphone 3 Level\x0D
Input Mute	xConfiguration Audio Input 1 Mode\x0D
Input Signal Input 1	xStatus Video Input Connector 1 Connected\x0D
Input Signal Input 2	xStatus Video Input Connector 2 Connected\x0D
IP Address	xStatus Network 1 IPv4 Address\x0D
MAC Address	xStatus Network 1 Ethernet MacAddress\x0D
Microphones Mute	xStatus Audio Microphones\x0D
Network Assignment	xConfiguration Network 1 IPv4 Assignment\x0D
Presentation Instance 1	xStatus Conference Presentation LocalInstance 1 Source\x0D
Presentation Instance 6	xStatus Conference Presentation LocalInstance 6 Source\x0D
Presentation Mode	xStatus Conference Presentation Mode\x0D
Presentation Sending Mode Status Instance 1	xStatus Conference Presentation LocalInstance 1 SendingMode\x0D
Presentation Sending Mode Status Instance 6	xStatus Conference Presentation LocalInstance 6 SendingMode\x0D
Self View	xStatus Video Selfview Mode\x0D
Self View Default Fullscreen Mode	xConfiguration Video Selfview Default FullscreenMode\x0D
Self View Position	xStatus Video Selfview PIPPosition\x0D
SIP Registration Status	xStatus SIP Registration 1 Status\x0D

Global Scripter Module Communication Sheet

Standby	xStatus Standby State\x0D
Subnet Mask	xStatus Network 1 IPv4 SubnetMask\x0D
Volume	xStatus Audio Volume\x0D