

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: Cisco
Firmware Version: CE9.5
Model(s): MX700 CE9.5.X, MX800 CE9.5.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.03.0000-b006	2.3.0

Version History

Module Version	Date	Notes
1_0_0_0	6/11/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- Use highest baud rate for better performance when using a serial connection.
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly. devicePassword and deviceUsername default values are Cisco and admin respectively.
Example: `InterfaceName.devicePassword = 'extron'`
- CallHistoryOccurrenceType variable must be set accordingly. Default value is 'Time'.
Example: `InterfaceName.CallHistoryOccurrenceType = 'Time'`
- NumberOfCallHistory variable must be set accordingly. Default value is '5'. NumberOfCallHistory ranges from 1 to 20.
Example: `InterfaceName.NumberofCallHistory = '5'`
- NumberOfPhonebookFolderSearch variable must be set accordingly. Default value is '5'. NumberOfPhonebookFolderSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookFolderSearch = '5'`
- NumberOfPhonebookSearch variable must be set accordingly. Default value is '5'. NumberOfPhonebookSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookSearch = '5'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='MX700 CE9.5.X')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='MX700 CE9.5.X')</code>
SSHClass
#Password Required <code>InterfaceName = ModuleName.SSHClass('192.168.254.254', 22, Credentials={'admin', 'Cisco'}, Model='MX700 CE9.5.X')</code>
#No Password Required <code>InterfaceName = ModuleName.SSHClass('192.168.254.254', 22, Credentials={'admin', ''}, Model='MX700 CE9.5.X')</code>

Phonebook commands:

- **PhonebookUpdate**
This is used to trigger the Phonebook search.
- **PhonebookSearchResult**
This is where the search results will be saved to when phonebook is searched. The number of results is set by a module variable `NumberOfPhonebookSearch`, this is initialized to 5 results by default.
- **PhonebookNavigation**
This command is used for navigating through the search results. The navigation commands scroll through the results when there are more results than `NumberOfPhonebookSearch` variable.
- **PhonebookSearchSet**
When the number selected in this command is triggered, it will dial the number with the `xCommand Dial Number` command.
- **PhonebookFolderIDUpdate**
This is used to trigger the Folder search within the Phonebook.
- **PhonebookFolderIDSearchResult**
This is where the search results are saved when `PhonebookFolderIDUpdate` is called. The number of results displayed is set to 5 by default. Simply call `SetText` with the returned results to display the results on a button or label object.
- **PhonebookFolderIDSearchSet**
When the Folder Name is selected using this command, it will store the Folder Name in a class variable named `FolderIDNumber`. This variable can be used in the 'FolderID' qualifier in the `PhonebookUpdate` command.
Example: `InterfaceName.Set('PhonebookUpdate','Refresh', {'Contact':'','FolderID':
InterfaceName.FolderIDNumber, 'PhonebookType':'Local'})`

Call History commands:

- **CallHistoryRefresh**
This is used to trigger the search for recent Call History based on the CallHistoryOccuranceType class variable.
- **CallHistory**
This is where the search results are saved when CallHistoryRefresh is called. The number of results displayed is set to 5 by default. Simply call SetText to display the results on a button or label object.
- **CallHistoryNavigation**
This command is used for navigating through the CallHistory results.
- **CallHistorySelect**
When the CallHistorySelect is triggered, it will dial the number selected.

Control Commands

Format with Qualifier:

InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})

Format with Qualifier:

InterfaceName.Set(Command, Value)

Command ActiveSpeakerPIPPosition	Value 'Center Left' 'Lower Right' 'Upper Right'	Value 'Center Right' 'Upper Center'	Value 'Lower Left' 'Upper Left'
# ActiveSpeakerPIPPosition example InterfaceName.Set('ActiveSpeakerPIPPosition', 'Center Left')			
Command AudioInputLineChannel	Value 'Left'	Value 'Mono'	Value 'Right'
Qualifier Key 'Input'	Qualifier Value '1' – '4'		
# AudioInputLineChannel example InterfaceName.Set('AudioInputLineChannel', 'Left', {'Input': '1'})			
Command AudioInputLineLevel	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value '1' – '4'		
# AudioInputLineLevel example InterfaceName.Set('AudioInputLineLevel', 24, {'Input': '1'})			
Command AudioInputLineMode	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value '1' – '4'		
# AudioInputLineMode example InterfaceName.Set('AudioInputLineMode', 'On', {'Input': '1'})			
Command AudioInputLineSource	Value '1' – '5'		
Qualifier Key 'Input'	Qualifier Value '1' – '4'		
# AudioInputLineSource example InterfaceName.Set('AudioInputLineSource', '1', {'Input': '1'})			
Command AudioOutputLineChannel	Value 'Left'	Value 'Mono'	Value 'Right'
Qualifier Key 'Output'	Qualifier Value '1' – '6'		
# AudioOutputLineChannel example InterfaceName.Set('AudioOutputLineChannel', 'Left', {'Output': '1'})			
Command AudioOutputLineLevel	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value '1' – '6'		
# AudioOutputLineLevel example InterfaceName.Set('AudioOutputLineLevel', 0, {'Output': '1'})			

Global Scriptor Module Communication Sheet

Command	Value	Value	
AudioOutputLineMode	'On'	'Off'	
Qualifier Key	Qualifier Value		
'Output'	'1' – '6'		
# AudioOutputLineMode example InterfaceName.Set('AudioOutputLineMode', 'On', {'Output': '1'})			
Command	Value		
AudioVolume	0 to 100 in steps of 1		
# AudioVolume example InterfaceName.Set('AudioVolume', 100)			
Command	Value	Value	
AudioVolumeMute	'On'	'Off'	
# AudioVolumeMute example InterfaceName.Set('AudioVolumeMute', 'On')			
Command	Value		
CallHistoryAcknowledgeAllMissedCalls	'None'		
# CallHistoryAcknowledgeAllMissedCalls example InterfaceName.Set('CallHistoryAcknowledgeAllMissedCalls', None)			
Command	Value		
CallHistoryAcknowledgeMissedCall	'None'		
Qualifier Key	Qualifier Value		
'Missed Call Number'	1 – 2147483648		
# CallHistoryAcknowledgeMissedCall example InterfaceName.Set('CallHistoryAcknowledgeMissedCall', None, {'Missed Call Number': 2147483648})			
Command	Value	Value	Value
CallHistoryNavigation	'Up'	'Down'	'Page Up'
	'Page Down'		
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')			
Command	Value		
CallHistoryRefresh	'None'		
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)			
Command	Value		
CallHistorySelect	'None'		
Qualifier Key	Qualifier Value		
'Button'	'1' – '20'		
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', None, {'Button': '1'})			
Command	Value		
CameraAssignedSerialNumberCommand	'String'		
Qualifier Key	Qualifier Value		
'Camera ID'	'1' – '7'		
# CameraAssignedSerialNumberCommand example InterfaceName.Set('CameraAssignedSerialNumberCommand', 'String', {'Camera ID': '1'})			

Global Scripter Module Communication Sheet

Revision: 6/11/2019

Command CameraAutofocusCommand	Value 'None'		
Qualifier Key 'Camera ID'	Qualifier Value '1' – '7'		
# CameraAutofocusCommand example InterfaceName.Set('CameraAutofocusCommand', None, {'Camera ID': '1'})			
Command CameraAutofocusMode	Value 'Auto'	Value 'Manual'	
Qualifier Key 'Camera ID'	Qualifier Value '2' – '7'		
# CameraAutofocusMode example InterfaceName.Set('CameraAutofocusMode', 'Auto', {'Camera ID': '2'})			
Command CameraFocus	Value 'Far'	Value 'Near'	Value 'Stop'
Qualifier Key 'Camera ID'	Qualifier Value '1' – '7'		
# CameraFocus example InterfaceName.Set('CameraFocus', 'Far', {'Camera ID': '1'})			
Command CameraPan	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Camera ID'	Qualifier Value '1' – '7'		
Qualifier Key 'Pan Speed'	Qualifier Value '1' – '15'		
# CameraPan example InterfaceName.Set('CameraPan', 'Left', {'Camera ID': '1', 'Pan Speed': '1'})			
Command CameraPreset	Value '1' – '35'		
# CameraPreset example InterfaceName.Set('CameraPreset', '1')			
Command CameraPresetStore	Value '1' – '35'		
Qualifier Key 'Camera ID'	Qualifier Value '1' – '7'		
Qualifier Key 'Default Position'	Qualifier Value 'False'	Qualifier Value 'True'	
# CameraPresetStore example InterfaceName.Set('CameraPresetStore', '1', {'Camera ID': '1', 'Default Position': 'False'})			
Command CameraSpeakerTrack	Value 'Activate'	Value 'Deactivate'	
# CameraSpeakerTrack example InterfaceName.Set('CameraSpeakerTrack', 'Activate')			
Command CameraSpeakerTrackTrackingMode	Value 'Auto'	Value 'Conservative'	
# CameraSpeakerTrackTrackingMode example InterfaceName.Set('CameraSpeakerTrackTrackingMode', 'Auto')			

Global Scripter Module Communication Sheet

Revision: 6/11/2019

Command	Value	Value	Value
CameraTilt	'Down'	'Up'	'Stop'
Qualifier Key	Qualifier Value		
'Camera ID'	'1' – '7'		
Qualifier Key	Qualifier Value		
'Tilt Speed'	'1' – '15'		
# CameraTilt example InterfaceName.Set('CameraTilt', 'Down', {'Camera ID': '1', 'Tilt Speed': '1'})			
Command	Value	Value	Value
CameraZoom	'In'	'Out'	'Stop'
Qualifier Key	Qualifier Value		
'Camera ID'	'1' – '7'		
Qualifier Key	Qualifier Value		
'Zoom Speed'	'1' – '15'		
# CameraZoom example InterfaceName.Set('CameraZoom', 'In', {'Camera ID': '1', 'Zoom Speed': '1'})			
Command	Value		
ConferenceAutoAnswerDelay	0 to 50 in steps of 1		
# ConferenceAutoAnswerDelay example InterfaceName.Set('ConferenceAutoAnswerDelay', 50)			
Command	Value	Value	
ConferenceAutoAnswerMode	'On'	'Off'	
# ConferenceAutoAnswerMode example InterfaceName.Set('ConferenceAutoAnswerMode', 'On')			
Command	Value	Value	
ConferenceAutoAnswerMute	'On'	'Off'	
# ConferenceAutoAnswerMute example InterfaceName.Set('ConferenceAutoAnswerMute', 'On')			
Command	Value	Value	Value
ConferenceDefaultCallProtocol	'Auto'	'H323'	'Sip'
	'H320'		
# ConferenceDefaultCallProtocol example InterfaceName.Set('ConferenceDefaultCallProtocol', 'Auto')			
Command	Value		
ConferenceDefaultCallRate	64 to 6000 in steps of 1		
# ConferenceDefaultCallRate example InterfaceName.Set('ConferenceDefaultCallRate', 6000)			
Command	Value	Value	
ConferenceDoNotDisturb	'On'	'Off'	
# ConferenceDoNotDisturb example InterfaceName.Set('ConferenceDoNotDisturb', 'On')			
Command	Value	Value	Value
ConferenceEncryptionMode	'On'	'Off'	'Best Effort'
# ConferenceEncryptionMode example InterfaceName.Set('ConferenceEncryptionMode', 'On')			

Global Scripter Module Communication Sheet

Revision: 6/11/2019

Command ConferenceFarEndControlMode	Value 'On'	Value 'Off'
# ConferenceFarEndControlMode example InterfaceName.Set('ConferenceFarEndControlMode', 'On')		
Command ConferenceSpeakerLock	Value 'On'	Value 'Off'
Qualifier Key 'Speaker'	Qualifier Value 'Local'	Qualifier Value 'Remote'
# ConferenceSpeakerLock example InterfaceName.Set('ConferenceSpeakerLock', 'On', {'Speaker': 'Local'})		
Command DNSDomainNameCommand	Value 'String'	
# DNSDomainNameCommand example InterfaceName.Set('DNSDomainNameCommand', 'String')		
Command DNSServerAddressCommand	Value 'String'	
Qualifier Key 'Server'	Qualifier Value '1' – '3'	
# DNSServerAddressCommand example InterfaceName.Set('DNSServerAddressCommand', 'String', {'Server': '1'})		
Command DTMF	Value '0' – '9'	Value '*' Value '#'
# DTMF example InterfaceName.Set('DTMF', '0')		
Command FarEndCameraPresetRecall	Value '1' – '15'	
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')		
Command FarEndCameraPTZ	Value 'Left' 'Down' 'Stop'	Value 'Right' 'Zoom In' Value 'Up' 'Zoom Out'
# FarEndCameraPTZ example InterfaceName.Set('FarEndCameraPTZ', 'Left')		
Command FarEndCameraSourceSelect	Value '0' – '15'	
# FarEndCameraSourceSelect example InterfaceName.Set('FarEndCameraSourceSelect', '0')		
Command H323AliasE164Command	Value 'String'	
# H323AliasE164Command example InterfaceName.Set('H323AliasE164Command', 'String')		
Command H323AliasIDCommand	Value 'String'	
# H323AliasIDCommand example InterfaceName.Set('H323AliasIDCommand', 'String')		

Global Scripter Module Communication Sheet

Revision: 6/11/2019

Command H323AuthenticationMode	Value 'On'	Value 'Off'	
# H323AuthenticationMode example InterfaceName.Set('H323AuthenticationMode', 'On')			
Command H323CallSetupMode	Value 'Direct'	Value 'Gatekeeper'	
# H323CallSetupMode example InterfaceName.Set('H323CallSetupMode', 'Direct')			
Command H323GatekeeperAddressC ommand	Value 'String'		
# H323GatekeeperAddressCommand example InterfaceName.Set('H323GatekeeperAddressCommand', 'String')			
Command H323LoginNameComman d	Value 'String'		
# H323LoginNameCommand example InterfaceName.Set('H323LoginNameCommand', 'String')			
Command H323PasswordCommand	Value 'String'		
# H323PasswordCommand example InterfaceName.Set('H323PasswordCommand', 'String')			
Command Hook	Value 'Dial' 'Reject' 'Disconnect 1' 'Resume 2' 'Disconnect 3' 'Join 4' 'Hold 5' 'Resume 4'	Value 'Join 1' 'Hold 1' 'Hold 2' 'Resume 3' 'Join 2' 'Join 5' 'Disconnect 4' 'Resume 5'	Value 'Accept' 'Resume 1' 'Hold 3' 'Disconnect 2' 'Join 3' 'Hold 4' 'Disconnect 5'
Qualifier Key 'Number'	Qualifier Value 'String'		
Qualifier Key 'Protocol'	Qualifier Value 'H320' 'Auto'	Qualifier Value 'H323'	Qualifier Value 'SIP'
# Hook example InterfaceName.Set('Hook', 'Dial', {'Number': 'String', 'Protocol': 'H320'})			
Command IPv4AddressCommand	Value 'String'		
# IPv4AddressCommand example InterfaceName.Set('IPv4AddressCommand', 'String')			
Command IPv4GatewayCommand	Value 'String'		
# IPv4GatewayCommand example InterfaceName.Set('IPv4GatewayCommand', 'String')			
Command IPv4SubnetMaskComman d	Value 'String'		
# IPv4SubnetMaskCommand example InterfaceName.Set('IPv4SubnetMaskCommand', String')			

Command LayoutSet	Value 'Auto' 'Overlay'	Value 'Custom' 'Prominent'	Value 'Equal' 'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command MicrophoneLevel	Value 0 to 70 in steps of 1		
Qualifier Key 'Microphone'	Qualifier Value '1' – '8'		
# MicrophoneLevel example InterfaceName.Set('MicrophoneLevel', 70, {'Microphone': '1'})			
Command MicrophoneMode	Value 'On'	Value 'Off'	
Qualifier Key 'Microphone'	Qualifier Value '1' – '8'		
# MicrophoneMode example InterfaceName.Set('MicrophoneMode', 'On', {'Microphone': '1'})			
Command MuteAllMicrophones	Value 'On'	Value 'Off'	
# MuteAllMicrophones example InterfaceName.Set('MuteAllMicrophones', 'On')			
Command PhonebookFolderIDNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up', {'Phonebook Type': 'Corporate'})			
Command PhonebookFolderIDSearchSet	Value 1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command PhonebookFolderIDUpdate	Value 'None'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Corporate'})			

Global Scriptor Module
Communication Sheet

Revision: 6/11/2019

Command PhonebookNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Corporate'})			
Command PhonebookSearch	Value 'String'		
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookSearch example InterfaceName.Set('PhonebookSearch', 'String', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Corporate'})			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Corporate'})			
Command Presentation	Value '1' – '5'	Value 'Stop'	
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# Presentation example InterfaceName.Set('Presentation', '1', {'Instance': '1'})			
Command PresentationDefaultSource	Value '1' – '4'		
# PresentationDefaultSource example InterfaceName.Set('PresentationDefaultSource', '1')			

Global Scripter Module Communication Sheet

Revision: 6/11/2019

Command PresentationPIPPosition	Value 'Center Left' 'Lower Right' 'Upper Right'	Value 'Center Right' 'Upper Center'	Value 'Lower Left' 'Upper Left'
# PresentationPIPPosition example InterfaceName.Set('PresentationPIPPosition', 'Center Left')			
Command PresentationSendingMode	Value 'Local and Remote'	Value 'Local Only'	
Qualifier Key 'Connector ID'	Qualifier Value '1' – '5'		
# PresentationSendingMode example InterfaceName.Set('PresentationSendingMode', 'Local and Remote', {'Connector ID': '1'})			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')			
Command SelfViewDefaultFullscreenMode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Set('SelfViewDefaultFullscreenMode', 'On')			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')			
Command Standby	Value 'On'	Value 'Off'	Value 'Halfwake'
# Standby example InterfaceName.Set('Standby', 'On')			
Command VideoSetMainVideoSource	Value 'None'		
Qualifier Key 'Connector ID'	Qualifier Value '1' – '5'		
# VideoSetMainVideoSource example InterfaceName.Set('VideoSetMainVideoSource', None, {'Connector ID': '1'})			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, CallHistory, PhonebookFolderIDSearchResult and PhonebookSearchResult do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command ActiveSpeakerPIPPosition	Value 'Center Left' 'Lower Right' 'Upper Right'	Value 'Center Right' 'Upper Center'	Value 'Lower Left' 'Upper Left'
# ActiveSpeakerPIPPosition example InterfaceName.Update('ActiveSpeakerPIPPosition') Value = InterfaceName.ReadStatus('ActiveSpeakerPIPPosition') InterfaceName.SubscribeStatus('ActiveSpeakerPIPPosition', None, FeedbackHandler)			
Command AudioVolume	Value 0 to 100 in steps of 1		
# AudioVolume example InterfaceName.Update('AudioVolume') Value = InterfaceName.ReadStatus('AudioVolume') InterfaceName.SubscribeStatus('AudioVolume', None, FeedbackHandler)			
Command AudioVolumeMute	Value 'On'	Value 'Off'	
# AudioVolumeMute example InterfaceName.Update('AudioVolumeMute') Value = InterfaceName.ReadStatus('AudioVolumeMute') InterfaceName.SubscribeStatus('AudioVolumeMute', None, FeedbackHandler)			
Command CallHistory	Value 'String'		
Qualifier Key 'Button'	Qualifier Value '1' – '20'		
Qualifier Key 'Detail Type'	Qualifier Value 'Display Name' 'Occurrence Count'	Qualifier Value 'Callback Number' 'Occurrence Type'	Qualifier Value 'Last Occurrence Time'
# CallHistory example Value = InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 6/11/2019

Command CallStatus ¹	Value 'Dialing' 'Ringing' 'On Hold' 'Remote Preserved'	Value 'Connecting' 'Idle' 'Early Media'	Value 'Connected' 'Disconnecting' 'Preserved'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatus example InterfaceName.Update('CallStatus') Value = InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)			
Command CallStatusType ¹	Value 'Video' 'Forward All Calls'	Value 'Audio' 'Unknown'	Value 'Audio Can Escalate'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatusType example InterfaceName.Update('CallStatusType') Value = InterfaceName.ReadStatus('CallStatusType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)			
Command ConferenceDoNotDisturb	Value 'On'	Value 'Off'	
# ConferenceDoNotDisturb example InterfaceName.Update('ConferenceDoNotDisturb') Value = InterfaceName.ReadStatus('ConferenceDoNotDisturb') InterfaceName.SubscribeStatus('ConferenceDoNotDisturb', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command DisplayName ¹	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# DisplayName example InterfaceName.Update('DisplayName') Value = InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)			
Command DNSServerAddressStatus	Value 'String'		
Qualifier Key 'Server'	Qualifier Value '1' – '3'		
# DNSServerAddressStatus example InterfaceName.Update('DNSServerAddressStatus', {'Server': '1'}) Value = InterfaceName.ReadStatus('DNSServerAddressStatus', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddressStatus', None, FeedbackHandler)			
Command H323GatekeeperAddressStatus	Value 'String'		
# H323GatekeeperAddressStatus example InterfaceName.Update('H323GatekeeperAddressStatus') Value = InterfaceName.ReadStatus('H323GatekeeperAddressStatus') InterfaceName.SubscribeStatus('H323GatekeeperAddressStatus', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 6/11/2019

Command H323GatekeeperStatus	Value 'Required' 'Authenticating' 'Registered'	Value 'Discovering' 'Authenticated' 'Inactive'	Value 'Discovered' 'Registering' 'Rejected'
# H323GatekeeperStatus example InterfaceName.Update('H323GatekeeperStatus') Value = InterfaceName.ReadStatus('H323GatekeeperStatus') InterfaceName.SubscribeStatus('H323GatekeeperStatus', None, FeedbackHandler)			
Command IPv4AddressStatus	Value 'String'		
# IPv4AddressStatus example InterfaceName.Update('IPv4AddressStatus') Value = InterfaceName.ReadStatus('IPv4AddressStatus') InterfaceName.SubscribeStatus('IPv4AddressStatus', None, FeedbackHandler)			
Command IPv4GatewayStatus	Value 'String'		
# IPv4GatewayStatus example InterfaceName.Update('IPv4GatewayStatus') Value = InterfaceName.ReadStatus('IPv4GatewayStatus') InterfaceName.SubscribeStatus('IPv4GatewayStatus', None, FeedbackHandler)			
Command IPv4SubnetMaskStatus	Value 'String'		
# IPv4SubnetMaskStatus example InterfaceName.Update('IPv4SubnetMaskStatus') Value = InterfaceName.ReadStatus('IPv4SubnetMaskStatus') InterfaceName.SubscribeStatus('IPv4SubnetMaskStatus', None, FeedbackHandler)			
Command MuteAllMicrophones	Value 'On'	Value 'Off'	
# MuteAllMicrophones example InterfaceName.Update('MuteAllMicrophones') Value = InterfaceName.ReadStatus('MuteAllMicrophones') InterfaceName.SubscribeStatus('MuteAllMicrophones', None, FeedbackHandler)			
Command PhonebookFolderIDSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# PhonebookFolderIDSearch example Value = InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)			
Command PhonebookSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# PhonebookSearchResult example Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)			
Command Presentation	Value '1' – '5'	Value 'Stop'	
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# Presentation example InterfaceName.Update('Presentation', {'Instance': '1'}) Value = InterfaceName.ReadStatus('Presentation', {'Instance': '1'}) InterfaceName.SubscribeStatus('Presentation', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 6/11/2019

Command PresentationMode	Value 'Off'	Value 'Sending'	Value 'Receiving'
# PresentationMode example InterfaceName.Update('PresentationMode') Value = InterfaceName.ReadStatus('PresentationMode') InterfaceName.SubscribeStatus('PresentationMode', None, FeedbackHandler)			
Command PresentationSendingModeStatus	Value 'Local and Remote'	Value 'Local Only'	Value 'Off'
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# PresentationSendingModeStatus example InterfaceName.Update('PresentationSendingModeStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSendingModeStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSendingModeStatus', None, FeedbackHandler)			
Command PresentationSourceStatus	Value '1' – '5'	Value 'Off'	
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# PresentationSourceStatus example InterfaceName.Update('PresentationSourceStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSourceStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSourceStatus', None, FeedbackHandler)			
Command RemoteNumber ¹	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# RemoteNumber example InterfaceName.Update('RemoteNumber') Value = InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'}) InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Update('SelfView') Value = InterfaceName.ReadStatus('SelfView') InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)			
Command SelfViewDefaultFullscreenMode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Update('SelfViewDefaultFullscreenMode') Value = InterfaceName.ReadStatus('SelfViewDefaultFullscreenMode') InterfaceName.SubscribeStatus('SelfViewDefaultFullscreenMode', None, FeedbackHandler)			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Update('SelfViewPosition') Value = InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command	Value	Value	Value
Standby	'On'	'Off'	'Halfwake'
# Standby example InterfaceName.Update('Standby') Value = InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)			

¹Single command gets status for the following commands: CallStatus, DisplayName, RemoteNumber and CallStatusType

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

For the module to work, the “Require passphrase change on next user sign in” must be unchecked within the devices embedded webpage. checkbox under Security → Users → <USERNAME>.

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

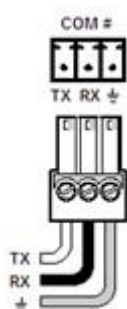

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	SSH
Default Port:	22
Logon Credentials Supported:	Yes
Default Username:	admin
Default Password:	Cisco
Multi-Connection	Yes
Capabilities:	
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

- For the driver to work, the “Require passphrase change on next user sign in” must be unchecked within the devices embedded webpage. checkbox under Security → Users → <USERNAME>.
- Password is required for SSH communication to work.
- SSH mode must be set to ‘On’ by an admin to have open communication with the driver.

Appendix A. Set Commands

Active Speaker PIP Position Center Left	xCommand Video ActiveSpeakerPIP Set Position: CenterLeft\x0D
Active Speaker PIP Position Center Right	xCommand Video ActiveSpeakerPIP Set Position: CenterRight\x0D
Active Speaker PIP Position Lower Left	xCommand Video ActiveSpeakerPIP Set Position: LowerLeft\x0D
Active Speaker PIP Position Lower Right	xCommand Video ActiveSpeakerPIP Set Position: LowerRight\x0D
Active Speaker PIP Position Upper Center	xCommand Video ActiveSpeakerPIP Set Position: UpperCenter\x0D
Active Speaker PIP Position Upper Left	xCommand Video ActiveSpeakerPIP Set Position: UpperLeft\x0D
Active Speaker PIP Position Upper Right	xCommand Video ActiveSpeakerPIP Set Position: UpperRight\x0D
Audio Input Line Channel Left Input 1	xConfiguration Audio Input Line 1 Channel: Left\x0D
Audio Input Line Channel Left Input 4	xConfiguration Audio Input Line 4 Channel: Left\x0D
Audio Input Line Channel Mono Input 1	xConfiguration Audio Input Line 1 Channel: Mono\x0D
Audio Input Line Channel Mono Input 4	xConfiguration Audio Input Line 4 Channel: Mono\x0D
Audio Input Line Channel Right Input 1	xConfiguration Audio Input Line 1 Channel: Right\x0D
Audio Input Line Channel Right Input 4	xConfiguration Audio Input Line 4 Channel: Right\x0D
Audio Input Line Level 0 Input 1	xConfiguration Audio Input Line 1 Level: 0\x0D
Audio Input Line Level 0 Input 4	xConfiguration Audio Input Line 4 Level: 0\x0D
Audio Input Line Level 24 Input 1	xConfiguration Audio Input Line 1 Level: 24\x0D
Audio Input Line Level 24 Input 4	xConfiguration Audio Input Line 4 Level: 24\x0D
Audio Input Line Mode Off Input 1	xConfiguration Audio Input Line 1 Mode: Off\x0D
Audio Input Line Mode Off Input 4	xConfiguration Audio Input Line 4 Mode: Off\x0D
Audio Input Line Mode On Input 1	xConfiguration Audio Input Line 1 Mode: On\x0D
Audio Input Line Mode On Input 4	xConfiguration Audio Input Line 4 Mode: On\x0D
Audio Input Line Source 1 Input 1	xConfiguration Audio Input Line 1 VideoAssociation VideoInputSource: 1\x0D
Audio Input Line Source 1 Input 4	xConfiguration Audio Input Line 4 VideoAssociation VideoInputSource: 1\x0D
Audio Input Line Source 5 Input 1	xConfiguration Audio Input Line 1 VideoAssociation VideoInputSource: 5\x0D
Audio Input Line Source 5 Input 4	xConfiguration Audio Input Line 4 VideoAssociation VideoInputSource: 5\x0D
Audio Output Line Channel Left Output 1	xConfiguration Audio Output Line 1 Channel: Left\x0D
Audio Output Line Channel Left Output 6	xConfiguration Audio Output Line 6 Channel: Left\x0D
Audio Output Line Channel Mono Output 1	xConfiguration Audio Output Line 1 Channel: Mono\x0D
Audio Output Line Channel Mono Output 6	xConfiguration Audio Output Line 6 Channel: Mono\x0D
Audio Output Line Channel Right Output 1	xConfiguration Audio Output Line 1 Channel: Right\x0D
Audio Output Line Channel Right Output 6	xConfiguration Audio Output Line 6 Channel: Right\x0D

Global Scripter Module Communication Sheet

Revision: 6/11/2019

Audio Output Line Level 0 Output 1	xConfiguration Audio Output Line 1 Level: 0\x0D
Audio Output Line Level 0 Output 6	xConfiguration Audio Output Line 6 Level: 0\x0D
Audio Output Line Level -24 Output 1	xConfiguration Audio Output Line 1 Level: -24\x0D
Audio Output Line Level -24 Output 6	xConfiguration Audio Output Line 6 Level: -24\x0D
Audio Output Line Mode Off Output 1	xConfiguration Audio Output Line 1 Mode: Off\x0D
Audio Output Line Mode Off Output 6	xConfiguration Audio Output Line 6 Mode: Off\x0D
Audio Output Line Mode On Output 1	xConfiguration Audio Output Line 1 Mode: On\x0D
Audio Output Line Mode On Output 6	xConfiguration Audio Output Line 6 Mode: On\x0D
Audio Volume 0	xCommand Audio Volume Set Level: 0\x0D
Audio Volume 100	xCommand Audio Volume Set Level: 100\x0D
Audio Volume Mute Off	xCommand Audio Volume Unmute\x0D
Audio Volume Mute On	xCommand Audio Volume Mute\x0D
Call History Acknowledge All Missed Calls None	xCommand CallHistory AcknowledgeAllMissedCalls\x0D
Call History Acknowledge Missed Call None Missed Call Number 1	xCommand CallHistory AcknowledgeMissedCall CallHistoryID: 1\x0D
Call History Acknowledge Missed Call None Missed Call Number 2147483647	xCommand CallHistory AcknowledgeMissedCall CallHistoryID: 2147483647\x0D
Call History Refresh None	xCommand CallHistory Recents Filter: All Offset: 0 Limit: 10 Order: OccurrenceTime\x0D
Camera Assigned Serial Number Command None Camera ID 1	xConfiguration Cameras Camera 1 AssignedSerialNumber: "string"\x0D
Camera Assigned Serial Number Command None Camera ID 7	xConfiguration Cameras Camera 7 AssignedSerialNumber: "string"\x0D
Camera Autofocus Command None Camera ID 1	xCommand Camera TriggerAutofocus CameraId: 1\x0D
Camera Autofocus Command None Camera ID 7	xCommand Camera TriggerAutofocus CameraId: 7\x0D
Camera Autofocus Mode Auto Camera ID 2	xConfiguration Cameras Camera 2 Focus Mode: Auto\x0D
Camera Autofocus Mode Auto Camera ID 7	xConfiguration Cameras Camera 7 Focus Mode: Auto\x0D
Camera Autofocus Mode Manual Camera ID 2	xConfiguration Cameras Camera 2 Focus Mode: Manual\x0D
Camera Autofocus Mode Manual Camera ID 7	xConfiguration Cameras Camera 7 Focus Mode: Manual\x0D
Camera Focus Far Camera ID 1	xCommand Camera Ramp CameraId: 1 Focus: Far\x0D
Camera Focus Far Camera ID 7	xCommand Camera Ramp CameraId: 7 Focus: Far\x0D
Camera Focus Near Camera ID 1	xCommand Camera Ramp CameraId: 1 Focus: Near\x0D
Camera Focus Near Camera ID 7	xCommand Camera Ramp CameraId: 7 Focus: Near\x0D
Camera Focus Stop Camera ID 1	xCommand Camera Ramp CameraId: 1 Focus: Stop\x0D
Camera Focus Stop Camera ID 7	xCommand Camera Ramp CameraId: 7 Focus: Stop\x0D
Camera Pan Left Camera ID 1 Pan Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera ID 1 Pan Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Left Camera ID 7 Pan Speed 1	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera ID 7 Pan Speed 15	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:15\x0D
Camera Pan Right Camera ID 1 Pan Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right

Global Scripter Module Communication Sheet

Revision: 6/11/2019

	PanSpeed:1\x0D
Camera Pan Right Camera ID 1 Pan Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Right Camera ID 7 Pan Speed 1	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera ID 7 Pan Speed 15	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:15\x0D
Camera Pan Stop Camera ID 1 Pan Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera ID 1 Pan Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera ID 7 Pan Speed 1	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Camera ID 7 Pan Speed 15	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Preset 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Store 1 Camera ID 1 Default Position False	xCommand Camera Preset Store PresetId: 1 CameraId: 1 DefaultPosition: False\x0D
Camera Preset Store 1 Camera ID 1 Default Position True	xCommand Camera Preset Store PresetId: 1 CameraId: 1 DefaultPosition: True\x0D
Camera Preset Store 1 Camera ID 7 Default Position False	xCommand Camera Preset Store PresetId: 1 CameraId: 7 DefaultPosition: False\x0D
Camera Preset Store 1 Camera ID 7 Default Position True	xCommand Camera Preset Store PresetId: 1 CameraId: 7 DefaultPosition: True\x0D
Camera Preset Store 35 Camera ID 1 Default Position False	xCommand Camera Preset Store PresetId: 35 CameraId: 1 DefaultPosition: False\x0D
Camera Preset Store 35 Camera ID 1 Default Position True	xCommand Camera Preset Store PresetId: 35 CameraId: 1 DefaultPosition: True\x0D
Camera Preset Store 35 Camera ID 7 Default Position False	xCommand Camera Preset Store PresetId: 35 CameraId: 7 DefaultPosition: False\x0D
Camera Preset Store 35 Camera ID 7 Default Position True	xCommand Camera Preset Store PresetId: 35 CameraId: 7 DefaultPosition: True\x0D
Camera Speaker Track Activate	xCommand Cameras SpeakerTrack Activate\x0D
Camera Speaker Track Deactivate	xCommand Cameras SpeakerTrack Deactivate\x0D
Camera Speaker Track Tracking Mode Auto	xConfiguration Cameras SpeakerTrack TrackingMode: Auto\x0D
Camera Speaker Track Tracking Mode Conservative	xConfiguration Cameras SpeakerTrack TrackingMode: Conservative\x0D
Camera Tilt Down Camera ID 1 Tilt Speed 1	xCommand Camera Ramp CameraId: 1 Tilt: Down TiltSpeed: 1\x0D
Camera Tilt Down Camera ID 1 Tilt Speed 15	xCommand Camera Ramp CameraId: 1 Tilt: Down TiltSpeed: 15\x0D
Camera Tilt Down Camera ID 7 Tilt Speed 1	xCommand Camera Ramp CameraId: 7 Tilt: Down TiltSpeed: 1\x0D
Camera Tilt Down Camera ID 7 Tilt Speed 15	xCommand Camera Ramp CameraId: 7 Tilt: Down TiltSpeed: 15\x0D
Camera Tilt Stop Camera ID 1 Tilt Speed 1	xCommand Camera Ramp CameraId: 1 Tilt: Stop\x0D
Camera Tilt Stop Camera ID 1 Tilt Speed 15	xCommand Camera Ramp CameraId: 1 Tilt: Stop\x0D
Camera Tilt Stop Camera ID 7 Tilt Speed 1	xCommand Camera Ramp CameraId: 7 Tilt: Stop\x0D
Camera Tilt Stop Camera ID 7 Tilt Speed 15	xCommand Camera Ramp CameraId: 7 Tilt: Stop\x0D
Camera Tilt Up Camera ID 1 Tilt Speed 1	xCommand Camera Ramp CameraId: 1 Tilt: Up TiltSpeed: 1\x0D
Camera Tilt Up Camera ID 1 Tilt Speed 15	xCommand Camera Ramp CameraId: 1 Tilt: Up TiltSpeed: 15\x0D

Global Scripter Module Communication Sheet

Revision: 6/11/2019

Camera Tilt Up Camera ID 7 Tilt Speed 1	xCommand Camera Ramp CameraId: 7 Tilt: Up TiltSpeed: 1\x0D
Camera Tilt Up Camera ID 7 Tilt Speed 15	xCommand Camera Ramp CameraId: 7 Tilt: Up TiltSpeed: 15\x0D
Camera Zoom In Camera ID 1 Zoom Speed 1	xCommand Camera Ramp CameraId: 1 Zoom: In ZoomSpeed: 1\x0D
Camera Zoom In Camera ID 1 Zoom Speed 15	xCommand Camera Ramp CameraId: 1 Zoom: In ZoomSpeed: 15\x0D
Camera Zoom In Camera ID 7 Zoom Speed 1	xCommand Camera Ramp CameraId: 7 Zoom: In ZoomSpeed: 1\x0D
Camera Zoom In Camera ID 7 Zoom Speed 15	xCommand Camera Ramp CameraId: 7 Zoom: In ZoomSpeed: 15\x0D
Camera Zoom Out Camera ID 1 Zoom Speed 1	xCommand Camera Ramp CameraId: 1 Zoom: Out ZoomSpeed: 1\x0D
Camera Zoom Out Camera ID 1 Zoom Speed 15	xCommand Camera Ramp CameraId: 1 Zoom: Out ZoomSpeed: 15\x0D
Camera Zoom Out Camera ID 7 Zoom Speed 1	xCommand Camera Ramp CameraId: 7 Zoom: Out ZoomSpeed: 1\x0D
Camera Zoom Out Camera ID 7 Zoom Speed 15	xCommand Camera Ramp CameraId: 7 Zoom: Out ZoomSpeed: 15\x0D
Camera Zoom Stop Camera ID 1 Zoom Speed 1	xCommand Camera Ramp CameraId: 1\x0D
Camera Zoom Stop Camera ID 1 Zoom Speed 15	xCommand Camera Ramp CameraId: 1\x0D
Camera Zoom Stop Camera ID 7 Zoom Speed 1	xCommand Camera Ramp CameraId: 7\x0D
Camera Zoom Stop Camera ID 7 Zoom Speed 15	xCommand Camera Ramp CameraId: 7\x0D
Conference AutoAnswer Delay 0	xConfiguration Conference AutoAnswer Delay: 0\x0D
Conference AutoAnswer Delay 50	xConfiguration Conference AutoAnswer Delay: 50\x0D
Conference AutoAnswer Mode Off	xConfiguration Conference AutoAnswer Mode: Off\x0D
Conference AutoAnswer Mode On	xConfiguration Conference AutoAnswer Mode: On\x0D
Conference AutoAnswer Mute Off	xConfiguration Conference AutoAnswer Mute: Off\x0D
Conference AutoAnswer Mute On	xConfiguration Conference AutoAnswer Mute: On\x0D
Conference Default Call Protocol Auto	xConfiguration Conference DefaultCall Protocol: Auto\x0D
Conference Default Call Protocol H320	xConfiguration Conference DefaultCall Protocol: H320\x0D
Conference Default Call Protocol H323	xConfiguration Conference DefaultCall Protocol: H323\x0D
Conference Default Call Protocol Sip	xConfiguration Conference DefaultCall Protocol: Sip\x0D
Conference Default Call Rate 6000	xConfiguration Conference DefaultCall Rate: 6000\x0D
Conference Default Call Rate 64	xConfiguration Conference DefaultCall Rate: 64\x0D
Conference Do Not Disturb Off	xCommand Conference DoNotDisturb Deactivate\x0D
Conference Do Not Disturb On	xCommand Conference DoNotDisturb Activate\x0D
Conference Encryption Mode Best Effort	xConfiguration Conference Encryption Mode: BestEffort\x0D
Conference Encryption Mode Off	xConfiguration Conference Encryption Mode: Off\x0D
Conference Encryption Mode On	xConfiguration Conference Encryption Mode: On\x0D
Conference Far End Control Mode Off	xConfiguration Conference FarEndControl Mode:

Global Scripter Module Communication Sheet

Revision: 6/11/2019

	Off\x0D
Conference Far End Control Mode On	xConfiguration Conference FarEndControl Mode: On\x0D
Conference Speaker Lock Off Speaker Local	xCommand Conference SpeakerLock Release\x0D
Conference Speaker Lock Off Speaker Remote	xCommand Conference SpeakerLock Release\x0D
Conference Speaker Lock On Speaker Local	xCommand Conference SpeakerLock Set Target: local\x0D
Conference Speaker Lock On Speaker Remote	xCommand Conference SpeakerLock Set Target: remote\x0D
DNS Domain Name Command None	xConfiguration Network 1 DNS Domain Name: "string"\x0D
DNS Server Address Command None Server 1	xConfiguration Network 1 DNS Server 1 Address: "string"\x0D
DNS Server Address Command None Server 3	xConfiguration Network 1 DNS Server 3 Address: "string"\x0D
DTMF #	xCommand Call DTMFSend DTMFString: "#"\x0D
DTMF *	xCommand Call DTMFSend DTMFString: "*" \x0D
DTMF 0	xCommand Call DTMFSend DTMFString: "0"\x0D
DTMF 9	xCommand Call DTMFSend DTMFString: "9"\x0D
Far End Camera Preset Recall 1	xCommand Call FarEndControl RoomPreset Activate PresetId: 1\x0D
Far End Camera Preset Recall 15	xCommand Call FarEndControl RoomPreset Activate PresetId: 15\x0D
Far End Camera PTZ Down	xCommand Call FarEndControl Camera Move Value: Down\x0D
Far End Camera PTZ Left	xCommand Call FarEndControl Camera Move Value: Left\x0D
Far End Camera PTZ Right	xCommand Call FarEndControl Camera Move Value: Right\x0D
Far End Camera PTZ Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Camera PTZ Up	xCommand Call FarEndControl Camera Move Value: Up\x0D
Far End Camera PTZ Zoom In	xCommand Call FarEndControl Camera Move Value: ZoomIn\x0D
Far End Camera PTZ Zoom Out	xCommand Call FarEndControl Camera Move Value: ZoomOut\x0D
Far End Camera Source Select 0	xCommand Call FarEndControl Source Select SourceId: 0\x0D
Far End Camera Source Select 15	xCommand Call FarEndControl Source Select SourceId: 15\x0D
H323 Alias E164 Command None	xConfiguration H323 H323Alias E164: "string"\x0D
H323 Alias ID Command None	xConfiguration H323 H323Alias ID: "string"\x0D
H323 Authentication Mode Off	xConfiguration H323 Authentication Mode: Off\x0D
H323 Authentication Mode On	xConfiguration H323 Authentication Mode: On\x0D
H323 Call Setup Mode Direct	xConfiguration H323 CallSetup Mode: Direct\x0D
H323 Call Setup Mode Gatekeeper	xConfiguration H323 CallSetup Mode: Gatekeeper\x0D
H323 Gatekeeper Address Command None	xConfiguration H323 Gatekeeper Address: "string"\x0D
H323 Login Name Command None	xConfiguration H323 Authentication LoginName: "string"\x0D
H323 Password Command None	xConfiguration H323 Authentication Password: "string"\x0D
Hook Accept Protocol Auto	xCommand Call Accept\x0D

Global Scripter Module Communication Sheet

Hook Accept Protocol H320	xCommand Call Accept\x0D
Hook Accept Protocol H323	xCommand Call Accept\x0D
Hook Accept Protocol SIP	xCommand Call Accept\x0D
Hook Disconnect 1 Protocol Auto	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 1 Protocol H320	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 1 Protocol H323	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 1 Protocol SIP	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 2 Protocol Auto	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 2 Protocol H320	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 2 Protocol H323	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 2 Protocol SIP	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 3 Protocol Auto	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 3 Protocol H320	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 3 Protocol H323	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 3 Protocol SIP	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 4 Protocol Auto	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 4 Protocol H320	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 4 Protocol H323	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 4 Protocol SIP	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 5 Protocol Auto	xCommand Call Disconnect CallId: 5\x0D
Hook Disconnect 5 Protocol H320	xCommand Call Disconnect CallId: 5\x0D
Hook Disconnect 5 Protocol H323	xCommand Call Disconnect CallId: 5\x0D
Hook Disconnect 5 Protocol SIP	xCommand Call Disconnect CallId: 5\x0D
Hook Hold 1 Protocol Auto	xCommand Call Hold CallId: 1\x0D
Hook Hold 1 Protocol H320	xCommand Call Hold CallId: 1\x0D
Hook Hold 1 Protocol H323	xCommand Call Hold CallId: 1\x0D
Hook Hold 1 Protocol SIP	xCommand Call Hold CallId: 1\x0D
Hook Hold 2 Protocol Auto	xCommand Call Hold CallId: 2\x0D
Hook Hold 2 Protocol H320	xCommand Call Hold CallId: 2\x0D
Hook Hold 2 Protocol H323	xCommand Call Hold CallId: 2\x0D
Hook Hold 2 Protocol SIP	xCommand Call Hold CallId: 2\x0D
Hook Hold 3 Protocol Auto	xCommand Call Hold CallId: 3\x0D
Hook Hold 3 Protocol H320	xCommand Call Hold CallId: 3\x0D
Hook Hold 3 Protocol H323	xCommand Call Hold CallId: 3\x0D
Hook Hold 3 Protocol SIP	xCommand Call Hold CallId: 3\x0D
Hook Hold 4 Protocol Auto	xCommand Call Hold CallId: 4\x0D
Hook Hold 4 Protocol H320	xCommand Call Hold CallId: 4\x0D
Hook Hold 4 Protocol H323	xCommand Call Hold CallId: 4\x0D
Hook Hold 4 Protocol SIP	xCommand Call Hold CallId: 4\x0D
Hook Hold 5 Protocol Auto	xCommand Call Hold CallId: 5\x0D
Hook Hold 5 Protocol H320	xCommand Call Hold CallId: 5\x0D
Hook Hold 5 Protocol H323	xCommand Call Hold CallId: 5\x0D
Hook Hold 5 Protocol SIP	xCommand Call Hold CallId: 5\x0D
Hook Join 1 Protocol Auto	xCommand Call Join CallId: 1\x0D

Global Scripter Module Communication Sheet

Hook Join 1 Protocol H320	xCommand Call Join CallId: 1\x0D
Hook Join 1 Protocol H323	xCommand Call Join CallId: 1\x0D
Hook Join 1 Protocol SIP	xCommand Call Join CallId: 1\x0D
Hook Join 2 Protocol Auto	xCommand Call Join CallId: 2\x0D
Hook Join 2 Protocol H320	xCommand Call Join CallId: 2\x0D
Hook Join 2 Protocol H323	xCommand Call Join CallId: 2\x0D
Hook Join 2 Protocol SIP	xCommand Call Join CallId: 2\x0D
Hook Join 3 Protocol Auto	xCommand Call Join CallId: 3\x0D
Hook Join 3 Protocol H320	xCommand Call Join CallId: 3\x0D
Hook Join 3 Protocol H323	xCommand Call Join CallId: 3\x0D
Hook Join 3 Protocol SIP	xCommand Call Join CallId: 3\x0D
Hook Join 4 Protocol Auto	xCommand Call Join CallId: 4\x0D
Hook Join 4 Protocol H320	xCommand Call Join CallId: 4\x0D
Hook Join 4 Protocol H323	xCommand Call Join CallId: 4\x0D
Hook Join 4 Protocol SIP	xCommand Call Join CallId: 4\x0D
Hook Join 5 Protocol Auto	xCommand Call Join CallId: 5\x0D
Hook Join 5 Protocol H320	xCommand Call Join CallId: 5\x0D
Hook Join 5 Protocol H323	xCommand Call Join CallId: 5\x0D
Hook Join 5 Protocol SIP	xCommand Call Join CallId: 5\x0D
Hook Reject Protocol Auto	xCommand Call Reject\x0D
Hook Reject Protocol H320	xCommand Call Reject\x0D
Hook Reject Protocol H323	xCommand Call Reject\x0D
Hook Reject Protocol SIP	xCommand Call Reject\x0D
Hook Resume 1 Protocol Auto	xCommand Call Resume CallId: 1\x0D
Hook Resume 1 Protocol H320	xCommand Call Resume CallId: 1\x0D
Hook Resume 1 Protocol H323	xCommand Call Resume CallId: 1\x0D
Hook Resume 1 Protocol SIP	xCommand Call Resume CallId: 1\x0D
Hook Resume 2 Protocol Auto	xCommand Call Resume CallId: 2\x0D
Hook Resume 2 Protocol H320	xCommand Call Resume CallId: 2\x0D
Hook Resume 2 Protocol H323	xCommand Call Resume CallId: 2\x0D
Hook Resume 2 Protocol SIP	xCommand Call Resume CallId: 2\x0D
Hook Resume 3 Protocol Auto	xCommand Call Resume CallId: 3\x0D
Hook Resume 3 Protocol H320	xCommand Call Resume CallId: 3\x0D
Hook Resume 3 Protocol H323	xCommand Call Resume CallId: 3\x0D
Hook Resume 3 Protocol SIP	xCommand Call Resume CallId: 3\x0D
Hook Resume 4 Protocol Auto	xCommand Call Resume CallId: 4\x0D
Hook Resume 4 Protocol H320	xCommand Call Resume CallId: 4\x0D
Hook Resume 4 Protocol H323	xCommand Call Resume CallId: 4\x0D
Hook Resume 4 Protocol SIP	xCommand Call Resume CallId: 4\x0D
Hook Resume 5 Protocol Auto	xCommand Call Resume CallId: 5\x0D
Hook Resume 5 Protocol H320	xCommand Call Resume CallId: 5\x0D
Hook Resume 5 Protocol H323	xCommand Call Resume CallId: 5\x0D
Hook Resume 5 Protocol SIP	xCommand Call Resume CallId: 5\x0D
IPv4 Address Command None	xConfiguration Network 1 IPv4 Address: string\x0D

Global Scripter Module Communication Sheet

Revision: 6/11/2019

IPv4 Gateway Command None	xConfiguration Network 1 IPv4 Gateway: string\x0D
IPv4 Subnet Mask Command None	xConfiguration Network 1 IPv4 SubnetMask: string\x0D
Layout Set Auto Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:auto\x0D
Layout Set Auto Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:auto\x0D
Layout Set Custom Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:custom\x0D
Layout Set Custom Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:custom\x0D
Layout Set Equal Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:equal\x0D
Layout Set Equal Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:equal\x0D
Layout Set Overlay Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:overlay\x0D
Layout Set Overlay Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:overlay\x0D
Layout Set Prominent Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:prominent\x0D
Layout Set Prominent Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:prominent\x0D
Layout Set Single Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:single\x0D
Layout Set Single Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:single\x0D
Microphone Level 0 Microphone 1	xConfiguration Audio Input Microphone 1 Level: 0\x0D
Microphone Level 0 Microphone 8	xConfiguration Audio Input Microphone 8 Level: 0\x0D
Microphone Level 70 Microphone 1	xConfiguration Audio Input Microphone 1 Level: 70\x0D
Microphone Level 70 Microphone 8	xConfiguration Audio Input Microphone 8 Level: 70\x0D
Microphone Mode Off Microphone 1	xConfiguration Audio Input Microphone 1 Mode: Off\x0D
Microphone Mode Off Microphone 8	xConfiguration Audio Input Microphone 8 Mode: Off\x0D
Microphone Mode On Microphone 1	xConfiguration Audio Input Microphone 1 Mode: On\x0D
Microphone Mode On Microphone 8	xConfiguration Audio Input Microphone 8 Mode: On\x0D
Mute All Microphones Off	xCommand Audio Microphones Unmute\x0D
Mute All Microphones On	xCommand Audio Microphones Mute\x0D
Phonebook Folder ID Update None Phonebook Type Corporate	xCommand Phonebook Search PhonebookType:Corporate ContactType: Folder Offset: 0 Limit: 250\x0D
Phonebook Folder ID Update None Phonebook Type Local	xCommand Phonebook Search PhonebookType:Local ContactType: Folder Offset: 0 Limit: 250\x0D
Presentation 1 Instance 1	xCommand Presentation Start ConnectorId:1 Instance:1\x0D
Presentation 1 Instance 6	xCommand Presentation Start ConnectorId:1 Instance:6\x0D
Presentation 5 Instance 1	xCommand Presentation Start ConnectorId:5 Instance:1\x0D
Presentation 5 Instance 6	xCommand Presentation Start ConnectorId:5

Global Scripter Module Communication Sheet

Revision: 6/11/2019

	Instance:6\x0D
Presentation Default Source 1	xConfiguration Video Presentation DefaultSource: 1\x0D
Presentation Default Source 4	xConfiguration Video Presentation DefaultSource: 4\x0D
Presentation PIP Position Center Left	xCommand Video PresentationPIP Set Position: CenterLeft\x0D
Presentation PIP Position Center Right	xCommand Video PresentationPIP Set Position: CenterRight\x0D
Presentation PIP Position Lower Left	xCommand Video PresentationPIP Set Position: LowerLeft\x0D
Presentation PIP Position Lower Right	xCommand Video PresentationPIP Set Position: LowerRight\x0D
Presentation PIP Position Upper Center	xCommand Video PresentationPIP Set Position: UpperCenter\x0D
Presentation PIP Position Upper Left	xCommand Video PresentationPIP Set Position: UpperLeft\x0D
Presentation PIP Position Upper Right	xCommand Video PresentationPIP Set Position: UpperRight\x0D
Presentation Sending Mode Local and Remote Connector ID 1	xCommand Presentation Start SendingMode: LocalRemote connectorID: 1\x0D
Presentation Sending Mode Local and Remote Connector ID 5	xCommand Presentation Start SendingMode: LocalRemote connectorID: 5\x0D
Presentation Sending Mode Local Only Connector ID 1	xCommand Presentation Start SendingMode: LocalOnly connectorID: 1\x0D
Presentation Sending Mode Local Only Connector ID 5	xCommand Presentation Start SendingMode: LocalOnly connectorID: 5\x0D
Presentation Stop Instance 1	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Instance 6	xCommand Presentation Stop Instance:6\x0D
Self View Default Fullscreen Mode Current	xConfiguration Video Selfview Default FullscreenMode: Current\x0D
Self View Default Fullscreen Mode Off	xConfiguration Video Selfview Default FullscreenMode: Off\x0D
Self View Default Fullscreen Mode On	xConfiguration Video Selfview Default FullscreenMode: On\x0D
Self View Off	xCommand Video Selfview Set Mode: Off\x0D
Self View On	xCommand Video Selfview Set Mode: On\x0D
Self View Position Center Left	xConfiguration Video Selfview Default PIPPosition: CenterLeft\x0D
Self View Position Center Right	xConfiguration Video Selfview Default PIPPosition: CenterRight\x0D
Self View Position Lower Left	xConfiguration Video Selfview Default PIPPosition: LowerLeft\x0D
Self View Position Lower Right	xConfiguration Video Selfview Default PIPPosition: LowerRight\x0D
Self View Position Upper Center	xConfiguration Video Selfview Default PIPPosition: UpperCenter\x0D
Self View Position Upper Left	xConfiguration Video Selfview Default PIPPosition: UpperLeft\x0D
Self View Position Upper Right	xConfiguration Video Selfview Default PIPPosition: UpperRight\x0D
Standby Halfwake	xCommand Standby Halfwake\x0D
Standby Off	xCommand Standby Deactivate\x0D
Standby On	xCommand Standby Activate\x0D

Global Scripter Module Communication Sheet

Video Set Main Video Source None Connector ID 1	xCommand Video Input SetMainVideoSource ConnectorID: 1\x0D
Video Set Main Video Source None Connector ID 5	xCommand Video Input SetMainVideoSource ConnectorID: 5\x0D

Appendix B. Update Commands

Active Speaker PIP Position	xStatus Video ActiveSpeaker PIPPosition\x0D
Audio Volume	xStatus Audio Volume\x0D
Audio Volume Mute	xStatus Audio VolumeMute\x0D
Call Status Call 1	xstatus call\x0D
Call Status Call 5	xstatus call\x0D
Conference Do Not Disturb	xStatus Conference DoNotDisturb\x0D
DNS Server Address Status Server 1	xStatus Network 1 DNS Server 1 Address\x0D
DNS Server Address Status Server 3	xStatus Network 1 DNS Server 3 Address\x0D
H323 Gatekeeper Address Status	xStatus H323 Gatekeeper Address\x0D
H323 Gatekeeper Status	xStatus H323 Gatekeeper Status\x0D
IPv4 Address Status	xStatus Network 1 IPv4 Address\x0D
IPv4 Gateway Status	xStatus Network 1 IPv4 Gateway\x0D
IPv4 Subnet Mask Status	xStatus Network 1 IPv4 SubnetMask\x0D
Mute All Microphones	xStatus Audio Microphones Mute\x0D
Presentation Instance 1	xStatus Conference Presentation LocalInstance 1 Source\x0D
Presentation Instance 6	xStatus Conference Presentation LocalInstance 6 Source\x0D
Presentation Mode	xStatus Conference Presentation Mode\x0D
Presentation Sending Mode Status Instance 1	xStatus Conference Presentation LocalInstance 1 SendingMode\x0D
Presentation Sending Mode Status Instance 6	xStatus Conference Presentation LocalInstance 6 SendingMode\x0D
Presentation Source Status Instance 1	xStatus Conference Presentation LocalInstance 1 Source\x0D
Presentation Source Status Instance 6	xStatus Conference Presentation LocalInstance 6 Source\x0D
Self View	xStatus Video Selfview Mode\x0D
Self View Default Fullscreen Mode	xStatus Video Selfview FullscreenMode\x0D
Self View Position	xStatus Video Selfview PIPPosition\x0D
Standby	xStatus Standby State\x0D

