

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: Cisco
Firmware Version: CE8.2.2
Model(s): SX80 CE8.2.X, SX20 CE8.2.X, SX10 CE8.2.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_1_0_3	11/1/2017	Fixed re.search issue. Updated Connected Device Update.
1_1_0_2	9/8/2017	Updated status example.
1_1_0_1	8/15/2017	Updated to Revision B.
1_1_0_0	8/15/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- NumberofPhonebookSearch variable must be set accordingly. Default value is '1'. Number of Phonebook Search ranges from '1' – '10'.
Example: `InterfaceName.NumberofPhonebookSearch = '1'`
- NumberofPhonebookFolderSearch variable must be set accordingly. Default value is '1'. Number of Phonebook Folder Search ranges from '1' – '10'.
Example: `InterfaceName.NumberofPhonebookFolderSearch = '1'`
- CallHistoryOccurrenceType variable must be set accordingly. Default value is 'Time'.
CallHistoryOccurrenceType options are 'Time' and 'Frequency'.
Example: `InterfaceName.CallHistoryOccurrenceType = 'Time'`
- NumberofCallHistory variable must be set accordingly. Default value is '5'. NumberofCallHistory Range is '1' – '20'.
Example: `InterfaceName.NumberofCallHistory = '5'`
- NumberofPeripheral variable must be set accordingly. Default value is '1'. Number of Peripheral ranges from RANGE.
Example: `InterfaceName.NumberofPeripheral = '1'`

Phonebook commands:

- **PhonebookUpdate**
This is used to trigger the Phonebook search.
- **PhonebookSearchResult**
This is where the search results will be saved to when phonebook is searched. The number of results are set by a module parameter Number of Phonebook Search, this is initialized to 5 results by default. Simply call SetText with the returned result to display the search result on a button or label object.
- **PhonebookNavigation**
This command is used for navigating through the search results. The navigation commands scroll through the results when there are more results than NumberofPhonebookSearch variable.
- **PhonebookSearchSet**
When the number selected in this command is triggered, it will dial the number with the xCommand Dial Number command.
- **PhonebookFolderIDUpdate**
This is used to trigger the Folder search within the Phonebook.
- **PhonebookFolderIDNavigation**
This command is used for navigating through the search results. The navigation commands scroll through the results when there are more results than NumberofPhonebookFolderSearch variable.
- **PhonebookFolderIDSearchSet**
When the Folder Name selected in this command is triggered, it will store the Folder Name in a class variable, FolderIDNumber, and that variable can be accessed and used in the 'FolderID' qualifier in the PhonebookUpdate command.
Example: `interfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': '',
'FolderID':interfaceName.FolderIDNumber , 'Phonebook Type': 'Local'})`
- **PhonebookFolderIDSearchResult**
This is where the search results are saved when PhonebookFolderIDUpdate is called. The number of results displayed is set to 5 by default. Simply call SetText with the returned results to display the results on a button or label object.

Call History commands:

- **CallHistoryRefresh**
This is used to trigger the search for recent Call History based on the CallHistoryOccuranceType class variable.
- **CallHistory**
This is where the search results are saved when CallHistoryRefresh is called. The number of results displayed is set to 5 by default. Simply call SetText to display the results on a button or label object.
- **CallHistoryNavigation**
This command is used for navigating through the CallHistory results.
- **CallHistorySelect**
When the CallHistorySelect is triggered, it will dial the call back number associated to call history status.

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SX20 CE8.0.X')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SX20 CE8.0.X')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='SX20 CE8.0.X')

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioOutput ¹	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'Line 1' – 'Line 6'	Qualifier Value 'HDMI 1'	Qualifier Value 'HDMI 2'
# AudioOutput example InterfaceName.Set('AudioOutput', 'On', {'Output': 'Line 1'})			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command CallHistoryNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')			
Command CallHistoryRefresh	Value None		
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)			
Command CallHistorySelect	Value '1' – '20'		
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', '1')			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode example InterfaceName.Set('CallSetupMode', 'Gatekeeper')			
Command CameraFocus	Value 'Near' 'Auto'	Value 'Far'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
# CameraFocus example InterfaceName.Set('CameraFocus', 'Near', {'Camera': '1'})			

Global Scripter Module Communication Sheet

Command CameraFocusSX20 ^{2,3}	Value 'Near'	Value 'Far'	Value 'Stop'
	'Auto'		
# CameraFocusSX20 example InterfaceName.Set('CameraFocusSX20', 'Near')			
Command CameraPanSX20 ^{2,3}	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraPanSX20 example InterfaceName.Set('CameraPanSX20', 'Left', {'Speed': 15})			
Command CameraPan	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraPan example InterfaceName.Set('CameraPan', 'Left', {'Camera': '1', 'Speed': 15})			
Command CameraPresetRecall	Value '1' – '35'		
# CameraPresetRecall example InterfaceName.Set('CameraPresetRecall', '1')			
Command CameraPresetSaveSX20 ^{2,3}	Value '1' – '35'		
# CameraPresetSave example InterfaceName.Set('CameraPresetSaveSX20', '1')			
Command CameraPresetSave	Value '1' – '35'		
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
# CameraPresetSave example InterfaceName.Set('CameraPresetSave', '1', {'Camera': '1'})			
Command CameraTiltSX20 ^{2,3}	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraTiltSX20 example InterfaceName.Set('CameraTiltSX20', 'Up', {'Speed': 15})			
Command CameraTilt	Value 'Up'	Value 'Down'	Value 'Stop'

Global Scripter Module Communication Sheet

Revision: 11/1/2017

Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraTilt example InterfaceName.Set('CameraTilt', 'Up', {'Camera': '1', 'Speed': 15})			
Command CameraZoomSX20 ^{2,3}	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoomSX20 example InterfaceName.Set('CameraZoomSX20', 'In', {'Speed': 15})			
Command CameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoom example InterfaceName.Set('CameraZoom', 'In', {'Camera': '1', 'Speed': 15})			
Command ConnectedDeviceNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# ConnectedDeviceNavigation example InterfaceName.Set('ConnectedDeviceNavigation', 'Up')			
Command ConnectedDeviceUpdate	Value None		
# ConnectedDeviceUpdate example InterfaceName.Set('ConnectedDeviceUpdate', None)			
Command DisplayMode	Value 'Dual' 'Triple Presentation Only'	Value 'Single' 'Triple'	Value 'Dual Presentation Only' 'Auto'
# DisplayMode example InterfaceName.Set('DisplayMode', 'Dual')			
Command DNSDomainNameCommand	Value 'String'		
# DNSDomainNameCommand example InterfaceName.Set('DNSDomainNameCommand', 'String')			
Command	Value		

DNSServerAddressCommand	'String'		
# DNSServerAddressCommand example InterfaceName.Set('DNSServerAddressCommand', 'String')			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Active')			
Command DTMF	Value '0' – '9'	Value '*'	Value '#'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command FarEndCameraPanTilt	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
# FarEndCameraPanTilt example InterfaceName.Set('FarEndCameraPanTilt', 'Up')			
Command FarEndCameraPresetRecall	Value '1' – '15'		
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')			
Command FarEndCameraSource	Value '0' – '15'		
# FarEndCameraSource example InterfaceName.Set('FarEndCameraSource', '0')			
Command FarEndCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
# FarEndCameraZoom example InterfaceName.Set('FarEndCameraZoom', 'In')			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Set('FarEndControl', 'On')			
Command H323GatekeeperAddressCommand	Value 'String'		
# H323GatekeeperAddressCommand example InterfaceName.Set('H323GatekeeperAddressCommand', 'String')			
Command H323AliasE164Command	Value 'String'		
# H323AliasE164Command example InterfaceName.Set('H323AliasE164Command', 'String')			
Command H323AliasIDCommand	Value 'String'		

# H323AliasIDCommand example InterfaceName.Set('H323AliasIDCommand', 'String')			
Command H323ProfileAuthenticationLoginNameCommand	Value 'String'		
# H323ProfileAuthenticationLoginNameCommand example InterfaceName.Set('H323ProfileAuthenticationLoginNameCommand', 'String')			
Command H323ProfileAuthenticationPasswordCommand	Value 'String'		
# H323ProfileAuthenticationPasswordCommand example InterfaceName.Set('H323ProfileAuthenticationPasswordCommand', 'String')			
Command Hook	Value 'Dial' 'Reject' 'Disconnect 1' 'Resume 2' 'Disconnect 3' 'Join 4' 'Hold 5' 'Resume 4'	Value 'Join 1' 'Hold 1' 'Hold 2' 'Resume 3' 'Join 2' 'Join 5' 'Disconnect 4' 'Resume 5'	Value 'Accept' 'Resume 1' 'Hold 3' 'Disconnect 2' 'Join 3' 'Hold 4' 'Disconnect 5'
Qualifier Key 'Number'	Qualifier Value 'String'		
Qualifier Key 'Protocol'	Qualifier Value 'Auto' 'H320'	Qualifier Value 'SIP'	Qualifier Value 'H323'
# Hook example InterfaceName.Set('Hook', 'Accept', {'Protocol': 'Auto'}) InterfaceName.Set('Hook', 'Dial', {'Number': '192.168.1.1', 'Protocol': 'H323'})			
Command Input	Value '1' – '5'		
# Input example InterfaceName.Set('Input', '1')			
Command InputLineLevel	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Line 1' – 'Line 4'		
# InputLineLevel example InterfaceName.Set('InputLineLevel', 24, {'Input': 'Line 1'})			
Command InputMicLevel	Value ¹ 0 to 70 in steps of 1	Value ^{2,3} 0 to 24 in steps of 1	

Global Scripter Module
Communication Sheet

Qualifier Key 'Input'	Qualifier Value ^{2,3} 'Microphone 1' – 'Microphone 2'	Qualifier Value ¹ 'Microphone 1' – 'Microphone 8'	
# InputMicLevel example InterfaceName.Set('InputMicLevel', 70, {'Input': 'Microphone 1'})			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value ¹ 'Line 1' – 'Line 4'	Qualifier Value ¹ 'Microphone 1' – 'Microphone 8'	Qualifier Value ^{2,3} 'Microphone 1' – 'Microphone 2'
# InputMute example InterfaceName.Set('InputMute', 'On', {'Input': 'Line 2'})			
Command IPv4AddressCommand	Value 'String'		
# IPv4AddressCommand example InterfaceName.Set('IPv4AddressCommand', 'String')			
Command IPv4GatewayCommand	Value 'String'		
# IPv4GatewayCommand example InterfaceName.Set('IPv4GatewayCommand', 'String')			
Command IPv4SubnetMaskCommand	Value 'String'		
# IPv4SubnetMaskCommand example InterfaceName.Set('IPv4SubnetMaskCommand', 'String')			
Command IREmulation ^{2,3}	Value '0' – '9' 'Down' 'F3' 'Grab' 'Left' 'Ok' 'Right' 'Aux' 'Pc' 'Up' 'Zoom In' '+' '_'	Value 'C' 'F1' 'F4' 'Home' 'Mute' 'PhoneBook' 'Selfview' 'Camera' 'Vcr' 'Volume Down' 'Zoom Out' '_'	Value 'Call' 'F2' 'F5' 'Layout' 'Mute Mic' 'Presentation' 'Square' 'Doc Cam' 'Star' 'Volume Up' 'Disconnect'
Qualifier Key 'Key'	Qualifier Value 'Click'	Qualifier Value 'Press'	Qualifier Value 'Release'
# IREmulation example			

Global Scripter Module Communication Sheet

InterfaceName.Set('IREmulation', '0', {'Key': 'Click'})			
Command LayoutSet	Value 'Auto' 'Overlay'	Value 'Custom' 'Prominent'	Value 'Equal' 'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute example InterfaceName.Set('MicrophonesMute', 'On')			
Command OutputLevel	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value 'Line 1' – 'Line 6'	Qualifier Value 'HDMI 1'	Qualifier Value 'HDMI 2'
# OutputLevel example InterfaceName.Set('OutputLevel', 0, {'Output': 'Line 1'})			
Command PhonebookFolderIDNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up')			
Command PhonebookFolderIDSearchSet	Value 1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command PhonebookFolderIDUpdate	Value None		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Corporate'})			
Command PhonebookNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key	Qualifier Value		Qualifier Value

'Phonebook Type'	'Corporate'		'Local'
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up', {'Contact':'','FolderID':'','Phonebook Type': 'Local'})			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact':'John','FolderID':'','Phonebook Type': 'Local'}) InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact':'','FolderID':'','Phonebook Type': 'Local'})			
Command Presentation	Value '1' – '5'	Value 'Start'	Value 'Stop'
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# Presentation example InterfaceName.Set('Presentation', 'Start', {'Instance': '1'})			
Command PresentationSendingMode	Value 'Local and Remote'	Value 'Local Only'	
Qualifier Key 'Connector ID'	Qualifier Value '1' – '5'		
# PresentationSendingMode example InterfaceName.Set('PresentationSendingMode', 'Local and Remote', {'Connector ID': '1'})			
Command PresetRecall	Value '1' – '15'		
# PresetRecall example InterfaceName.Set('PresetRecall', '15')			
Command PresetSave	Value '1' – '15'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command Reboot	Value None		
# Reboot example			

InterfaceName.Set('Reboot', None)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')			
Command SelfViewDefaultFullscreenMode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Set('SelfViewDefaultFullscreenMode', 'On')			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')			
Command SleepTimer	Value 1 – 480		
# SleepTimer example InterfaceName.Set('SleepTimer', 480)			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
# SpeakerTrackControl example InterfaceName.Set('SpeakerTrackControl', 'On')			
Command SpeakerTrackMode	Value 'Auto'	Value 'Off'	
# SpeakerTrackMode example InterfaceName.Set('SpeakerTrackMode', 'Auto')			
Command Standby	Value 'Activate'	Value 'Deactivate'	
# Standby example InterfaceName.Set('Standby', 'Activate')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

¹ Supported by SX80

² Supported by SX20

³ Supported by SX10

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, CallHistory, CallStatus, CallStatusType, ConnectedDeviceMAC, ConnectedDeviceName, ConnectedDeviceType, DisplayName, PhonebookFolderIDSearchResult, PhonebookSearchResult, RemoteNumber do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioOutput ¹	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'Line 1' – 'Line 6'	Qualifier Value 'HDMI 1'	Qualifier Value 'HDMI 2'
# AudioOutput examples InterfaceName.Update('AudioOutput', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('AudioOutput', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('AudioOutput', None, FeedbackHandler)			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer examples InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)			
Command CallHistory	Value 'String'		
Qualifier Key 'Button'	Qualifier Value '1' – '20'		
Qualifier Key 'Detail Type'	Qualifier Value 'Display Name'	Qualifier Value 'Callback Number'	Qualifier Value 'Last Occurrence Time'
	'Occurrence Count'	'Occurrence Type'	
# CallHistory examples Value = InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)			
Command	Value	Value	

CallSetupMode	'Gatekeeper'	'Direct'
# CallSetupMode examples InterfaceName.Update('CallSetupMode') Value = InterfaceName.ReadStatus('CallSetupMode') InterfaceName.SubscribeStatus('CallSetupMode', None, FeedbackHandler)		
Command CallStatus	Value 'Dialing' 'Ringing' 'On Hold' 'Remote Preserved'	Value 'Connecting' 'Idle' 'Early Media' 'Preserved'
Qualifier Key 'Call'	Qualifier Value '1' – '5'	
# CallStatus examples Value = InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)		
Command CallStatusType	Value 'Video' 'Forward All Call'	Value 'Audio' 'Unknown' 'Audio Can Escalate'
Qualifier Key 'Call'	Qualifier Value '1' – '5'	
# CallStatusType examples Value = InterfaceName.ReadStatus('CallStatusType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)		
Command ConnectedDeviceMAC	Value 'String'	
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1	
# ConnectedDeviceMAC examples Value = InterfaceName.ReadStatus('ConnectedDeviceMAC', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceMAC', None, FeedbackHandler)		
Command ConnectedDeviceName	Value 'String'	
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1	
# ConnectedDeviceName examples Value = InterfaceName.ReadStatus('ConnectedDeviceName', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceName', None, FeedbackHandler)		
Command ConnectedDeviceType	Value 'String'	
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1	

<pre># ConnectedDeviceType examples Value = InterfaceName.ReadStatus('ConnectedDeviceType', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceType', None, FeedbackHandler)</pre>			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
<pre># ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)</pre>			
Command DisplayMode	Value 'Dual'	Value 'Single'	Value 'Dual Presentation Only'
	'Triple Presentation Only'	'Triple'	'Auto'
<pre># DisplayMode examples InterfaceName.Update('DisplayMode') Value = InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)</pre>			
Command DisplayName	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
<pre># DisplayName examples Value = InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)</pre>			
Command DNSDomainName	Value 'String'		
<pre># DNSDomainName examples InterfaceName.Update('DNSDomainName') Value = InterfaceName.ReadStatus('DNSDomainName') InterfaceName.SubscribeStatus('DNSDomainName', None, FeedbackHandler)</pre>			
Command DNSServerAddress	Value 'String'		
Qualifier Key 'Server'	Qualifier Value '1' – '3'		
<pre># DNSServerAddress examples InterfaceName.Update('DNSServerAddress', {'Server': '1'}) Value = InterfaceName.ReadStatus('DNSServerAddress', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddress', None, FeedbackHandler)</pre>			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
<pre># DoNotDisturb examples InterfaceName.Update('DoNotDisturb') Value = InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)</pre>			
Command	Value	Value	

FarEndControl	'On'			'Off'		
# FarEndControl examples InterfaceName.Update('FarEndControl') Value = InterfaceName.ReadStatus('FarEndControl') InterfaceName.SubscribeStatus('FarEndControl', None, FeedbackHandler)						
Command	Value					
FirmwareVersion	'String'					
# FirmwareVersion examples InterfaceName.Update('FirmwareVersion') Value = InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)						
Command	Value					
GatewayAddress	'String'					
# GatewayAddress examples InterfaceName.Update('GatewayAddress') Value = InterfaceName.ReadStatus('GatewayAddress') InterfaceName.SubscribeStatus('GatewayAddress', None, FeedbackHandler)						
Command	Value					
H323GatekeeperAddress	'String'					
# H323GatekeeperAddress examples InterfaceName.Update('H323GatekeeperAddress') Value = InterfaceName.ReadStatus('H323GatekeeperAddress') InterfaceName.SubscribeStatus('H323GatekeeperAddress', None, FeedbackHandler)						
Command	Value		Value		Value	
H323GatekeeperStatus	'Required'		'Discovering'		'Discovered'	
	'Authenticating'		'Authenticated'		'Registering'	
	'Registered'		'Inactive'		'Rejected'	
# H323GatekeeperStatus examples InterfaceName.Update('H323GatekeeperStatus') Value = InterfaceName.ReadStatus('H323GatekeeperStatus') InterfaceName.SubscribeStatus('H323GatekeeperStatus', None, FeedbackHandler)						
Command	Value					
Input	'1' – '5'					
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)						
Command	Value					
InputLineLevel ¹	0 to 24 in steps of 1					
Qualifier Key	Qualifier Value					
'Input'	'Line 1' - 'Line 4'					
# InputLineLevel examples InterfaceName.Update('InputLineLevel', {'Input': 'Line 1'}) Value = InterfaceName.ReadStatus('InputLineLevel', {'Input': 'Line 1'}) InterfaceName.SubscribeStatus('InputLineLevel', None, FeedbackHandler)						

Command InputMicLevel	Value ¹ 0 to 70 in steps of 1	Value ^{2, 3} 0 to 24 in steps of 1	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' – 'Microphone 8'	Qualifier Value ^{2, 3} 'Microphone 1' – 'Microphone 2'	
<pre># InputMicLevel examples InterfaceName.Update('InputMicLevel', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMicLevel', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMicLevel', None, FeedbackHandler)</pre>			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value ¹ 'Line 1' – 'Line 4'	Qualifier Value ¹ 'Microphone 1' – 'Microphone 8'	Qualifier Value ^{2, 3} 'Microphone 1' – 'Microphone 2'
<pre># InputMute examples InterfaceName.Update('InputMute', {'Input': 'Line 2'}) Value = InterfaceName.ReadStatus('InputMute', {'Input': 'Line 2'}) InterfaceName.SubscribeStatus('InputMute', None, FeedbackHandler)</pre>			
Command InputSignal	Value 'True'	Value 'False'	
Qualifier Key 'Input'	Qualifier Value '1' – '5'		
<pre># InputSignal examples InterfaceName.Update('InputSignal', {'Input': '1'}) Value = InterfaceName.ReadStatus('InputSignal', {'Input': '1'}) InterfaceName.SubscribeStatus('InputSignal', None, FeedbackHandler)</pre>			
Command IPAddress	Value 'String'		
<pre># IPAddress examples InterfaceName.Update('IPAddress') Value = InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)</pre>			
Command MACAddress	Value 'String'		
<pre># MACAddress examples InterfaceName.Update('MACAddress') Value = InterfaceName.ReadStatus('MACAddress') InterfaceName.SubscribeStatus('MACAddress', None, FeedbackHandler)</pre>			
Command MicrophonesMute	Value 'On'	Value 'Off'	
<pre># MicrophonesMute examples InterfaceName.Update('MicrophonesMute') Value = InterfaceName.ReadStatus('MicrophonesMute') InterfaceName.SubscribeStatus('MicrophonesMute', None, FeedbackHandler)</pre>			

Command NetworkAssignment	Value 'Static'	Value 'DHCP'	
# NetworkAssignment examples InterfaceName.Update('NetworkAssignment') Value = InterfaceName.ReadStatus('NetworkAssignment') InterfaceName.SubscribeStatus('NetworkAssignment', None, FeedbackHandler)			
Command OutputLevel ¹	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value 'Line 1' – 'Line 6'	Qualifier Value 'HDMI 1'	Qualifier Value 'HDMI 2'
# OutputLevel examples InterfaceName.Update('OutputLevel', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('OutputLevel', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('OutputLevel', None, FeedbackHandler)			
Command PhonebookFolderIDSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# PhonebookFolderIDSearchResult examples Value = InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)			
Command PhonebookSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# PhonebookSearchResult examples Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)			
Command Presentation	Value '1' – '5'	Value 'Start'	Value 'Stop'
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# Presentation examples InterfaceName.Update('Presentation', {'Instance': '1'}) Value = InterfaceName.ReadStatus('Presentation', {'Instance': '1'}) InterfaceName.SubscribeStatus('Presentation', None, FeedbackHandler)			
Command PresentationMode	Value 'Off'	Value 'Sending'	Value 'Receiving'
# PresentationMode examples InterfaceName.Update('PresentationMode') Value = InterfaceName.ReadStatus('PresentationMode') InterfaceName.SubscribeStatus('PresentationMode', None, FeedbackHandler)			
Command PresentationSendingModeStatus	Value 'Local and Remote'	Value 'Local Only'	Value 'Off'

Global Scripter Module Communication Sheet

Revision: 11/1/2017

Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# PresentationSendingModeStatus examples InterfaceName.Update('PresentationSendingModeStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSendingModeStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSendingModeStatus', None, FeedbackHandler)			
Command RemoteNumber	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# RemoteNumber examples Value = InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'}) InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView examples InterfaceName.Update('SelfView') Value = InterfaceName.ReadStatus('SelfView') InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)			
Command SelfViewDefaultFullscreenMode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode examples InterfaceName.Update('SelfViewDefaultFullscreenMode') Value = InterfaceName.ReadStatus('SelfViewDefaultFullscreenMode') InterfaceName.SubscribeStatus('SelfViewDefaultFullscreenMode', None, FeedbackHandler)			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition examples InterfaceName.Update('SelfViewPosition') Value = InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)			
Command SIPRegistrationStatus	Value 'Deregistering' 'Registered'	Value 'Failed' 'Registering'	Value 'Inactive'
# SIPRegistrationStatus examples InterfaceName.Update('SIPRegistrationStatus') Value = InterfaceName.ReadStatus('SIPRegistrationStatus') InterfaceName.SubscribeStatus('SIPRegistrationStatus', None, FeedbackHandler)			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
# SpeakerTrackControl examples InterfaceName.Update('SpeakerTrackControl')			

<pre>Value = InterfaceName.ReadStatus('SpeakerTrackControl') InterfaceName.SubscribeStatus('SpeakerTrackControl', None, FeedbackHandler)</pre>		
Command SpeakerTrackMode	Value 'Auto'	Value 'Off'
<pre># SpeakerTrackMode examples InterfaceName.Update('SpeakerTrackMode') Value = InterfaceName.ReadStatus('SpeakerTrackMode') InterfaceName.SubscribeStatus('SpeakerTrackMode', None, FeedbackHandler)</pre>		
Command Standby	Value 'Activate'	Value 'Deactivate'
<pre># Standby examples InterfaceName.Update('Standby') Value = InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)</pre>		
Command SubnetMask	Value 'String'	
<pre># SubnetMask examples InterfaceName.Update('SubnetMask') Value = InterfaceName.ReadStatus('SubnetMask') InterfaceName.SubscribeStatus('SubnetMask', None, FeedbackHandler)</pre>		
Command Volume	Value 0 to 100 in steps of 1	
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>		

¹ Supported by SX80

² Supported by SX20

³ Supported by SX10

Cable and Adapter Requirements

SX10: Contact manufacturer for cable requirements

SX20: Captive Screw to USB Type-A RS-232 Serial Cable adapter

SX80: Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200

Data Bits: 8


Parity: None

Stop Bits: One

Flow Control: None


Pin Assignments Diagram

SX10, SX20:

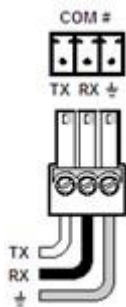

Contact manufacturer for pinout diagram

SX80:

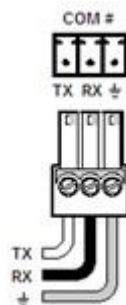

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	Yes
Default Username:	admin
Default Password:	TANDBERG
Multi-Connection Capabilities:	Yes
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Telnet mode must be set to 'On' by an admin to have open communication with the module.

Appendix A. Set Commands

Audio Output Off Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:Off\x0D
Audio Output Off Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:Off\x0D
Audio Output Off Output Line 1	xConfiguration Audio Output Line 1 Mode:Off\x0D
Audio Output Off Output Line 2	xConfiguration Audio Output Line 2 Mode:Off\x0D
Audio Output Off Output Line 3	xConfiguration Audio Output Line 3 Mode:Off\x0D
Audio Output Off Output Line 4	xConfiguration Audio Output Line 4 Mode:Off\x0D
Audio Output Off Output Line 5	xConfiguration Audio Output Line 5 Mode:Off\x0D
Audio Output Off Output Line 6	xConfiguration Audio Output Line 6 Mode:Off\x0D
Audio Output On Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:On\x0D
Audio Output On Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:On\x0D
Audio Output On Output Line 1	xConfiguration Audio Output Line 1 Mode:On\x0D
Audio Output On Output Line 2	xConfiguration Audio Output Line 2 Mode:On\x0D
Audio Output On Output Line 3	xConfiguration Audio Output Line 3 Mode:On\x0D
Audio Output On Output Line 4	xConfiguration Audio Output Line 4 Mode:On\x0D
Audio Output On Output Line 5	xConfiguration Audio Output Line 5 Mode:On\x0D
Audio Output On Output Line 6	xConfiguration Audio Output Line 6 Mode:On\x0D
Auto Answer Off	xConfiguration Conference AutoAnswer Mode: Off\x0D
Auto Answer On	xConfiguration Conference AutoAnswer Mode: On\x0D
Call Setup Mode Direct	xConfiguration H323 CallSetup Mode: Direct\x0D
Call Setup Mode Gatekeeper	xConfiguration H323 CallSetup Mode: Gatekeeper\x0D
Camera Focus Far	xCommand Camera Ramp Camerald:1 Focus:Far\x0D
Camera Focus Far Camera 1	xCommand Camera Ramp Camerald:1 Focus:Far\x0D
Camera Focus Far Camera 2	xCommand Camera Ramp Camerald:2 Focus:Far\x0D
Camera Focus Far Camera 3	xCommand Camera Ramp Camerald:3 Focus:Far\x0D
Camera Focus Far Camera 4	xCommand Camera Ramp Camerald:4 Focus:Far\x0D
Camera Focus Far Camera 5	xCommand Camera Ramp Camerald:5 Focus:Far\x0D
Camera Focus Far Camera 6	xCommand Camera Ramp Camerald:6 Focus:Far\x0D
Camera Focus Far Camera 7	xCommand Camera Ramp Camerald:7 Focus:Far\x0D
Camera Focus Near	xCommand Camera Ramp Camerald:1 Focus:Near\x0D
Camera Focus Near Camera 1	xCommand Camera Ramp Camerald:1 Focus:Near\x0D
Camera Focus Near Camera 2	xCommand Camera Ramp Camerald:2 Focus:Near\x0D
Camera Focus Near Camera 3	xCommand Camera Ramp Camerald:3 Focus:Near\x0D
Camera Focus Near Camera 4	xCommand Camera Ramp Camerald:4 Focus:Near\x0D
Camera Focus Near Camera 5	xCommand Camera Ramp Camerald:5 Focus:Near\x0D
Camera Focus Near Camera 6	xCommand Camera Ramp Camerald:6 Focus:Near\x0D
Camera Focus Near Camera 7	xCommand Camera Ramp Camerald:7 Focus:Near\x0D
Camera Focus Stop	xCommand Camera Ramp Camerald:1 Focus:Stop\x0D
Camera Focus Stop Camera 1	xCommand Camera Ramp Camerald:1 Focus:Stop\x0D
Camera Focus Stop Camera 2	xCommand Camera Ramp Camerald:2 Focus:Stop\x0D

Global Scripter Module Communication Sheet

Camera Focus Stop Camera 3	xCommand Camera Ramp Camerald:3 Focus:Stop\x0D
Camera Focus Stop Camera 4	xCommand Camera Ramp Camerald:4 Focus:Stop\x0D
Camera Focus Stop Camera 5	xCommand Camera Ramp Camerald:5 Focus:Stop\x0D
Camera Focus Stop Camera 6	xCommand Camera Ramp Camerald:6 Focus:Stop\x0D
Camera Focus Stop Camera 7	xCommand Camera Ramp Camerald:7 Focus:Stop\x0D
Camera Pan Left Speed 1	xCommand Camera Ramp Camerald:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 15	xCommand Camera Ramp Camerald:1 Pan:Left PanSpeed:15\x0D
Camera Pan Right Speed 1	xCommand Camera Ramp Camerald:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Speed 15	xCommand Camera Ramp Camerald:1 Pan:Right PanSpeed:15\x0D
Camera Pan Stop Speed 1	xCommand Camera Ramp Camerald:1 Pan: Stop\x0D
Camera Pan Stop Speed 15	xCommand Camera Ramp Camerald:1 Pan: Stop\x0D
Camera Preset Recall 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset Recall 10	xCommand Camera Preset Activate PresetId: 10\x0D
Camera Preset Recall 11	xCommand Camera Preset Activate PresetId: 11\x0D
Camera Preset Recall 12	xCommand Camera Preset Activate PresetId: 12\x0D
Camera Preset Recall 13	xCommand Camera Preset Activate PresetId: 13\x0D
Camera Preset Recall 14	xCommand Camera Preset Activate PresetId: 14\x0D
Camera Preset Recall 15	xCommand Camera Preset Activate PresetId: 15\x0D
Camera Preset Recall 16	xCommand Camera Preset Activate PresetId: 16\x0D
Camera Preset Recall 17	xCommand Camera Preset Activate PresetId: 17\x0D
Camera Preset Recall 18	xCommand Camera Preset Activate PresetId: 18\x0D
Camera Preset Recall 19	xCommand Camera Preset Activate PresetId: 19\x0D
Camera Preset Recall 2	xCommand Camera Preset Activate PresetId: 2\x0D
Camera Preset Recall 20	xCommand Camera Preset Activate PresetId: 20\x0D
Camera Preset Recall 21	xCommand Camera Preset Activate PresetId: 21\x0D
Camera Preset Recall 22	xCommand Camera Preset Activate PresetId: 22\x0D
Camera Preset Recall 23	xCommand Camera Preset Activate PresetId: 23\x0D
Camera Preset Recall 24	xCommand Camera Preset Activate PresetId: 24\x0D
Camera Preset Recall 25	xCommand Camera Preset Activate PresetId: 25\x0D
Camera Preset Recall 26	xCommand Camera Preset Activate PresetId: 26\x0D
Camera Preset Recall 27	xCommand Camera Preset Activate PresetId: 27\x0D
Camera Preset Recall 28	xCommand Camera Preset Activate PresetId: 28\x0D
Camera Preset Recall 29	xCommand Camera Preset Activate PresetId: 29\x0D
Camera Preset Recall 3	xCommand Camera Preset Activate PresetId: 3\x0D
Camera Preset Recall 30	xCommand Camera Preset Activate PresetId: 30\x0D
Camera Preset Recall 31	xCommand Camera Preset Activate PresetId: 31\x0D
Camera Preset Recall 32	xCommand Camera Preset Activate PresetId: 32\x0D
Camera Preset Recall 33	xCommand Camera Preset Activate PresetId: 33\x0D
Camera Preset Recall 34	xCommand Camera Preset Activate PresetId: 34\x0D
Camera Preset Recall 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Recall 4	xCommand Camera Preset Activate PresetId: 4\x0D

Global Scripter Module Communication Sheet

Camera Preset Recall 5	xCommand Camera Preset Activate PresetId: 5\x0D
Camera Preset Recall 6	xCommand Camera Preset Activate PresetId: 6\x0D
Camera Preset Recall 7	xCommand Camera Preset Activate PresetId: 7\x0D
Camera Preset Recall 8	xCommand Camera Preset Activate PresetId: 8\x0D
Camera Preset Recall 9	xCommand Camera Preset Activate PresetId: 9\x0D
Camera Preset Save 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 2	xCommand Camera Preset Store PresetId:1 CameraId:2\x0D
Camera Preset Save 1 Camera 3	xCommand Camera Preset Store PresetId:1 CameraId:3\x0D
Camera Preset Save 1 Camera 4	xCommand Camera Preset Store PresetId:1 CameraId:4\x0D
Camera Preset Save 1 Camera 5	xCommand Camera Preset Store PresetId:1 CameraId:5\x0D
Camera Preset Save 1 Camera 6	xCommand Camera Preset Store PresetId:1 CameraId:6\x0D
Camera Preset Save 1 Camera 7	xCommand Camera Preset Store PresetId:1 CameraId:7\x0D
Camera Preset Save 10	xCommand Camera Preset Store PresetId:10 CameraId:1\x0D
Camera Preset Save 10 Camera 1	xCommand Camera Preset Store PresetId:10 CameraId:1\x0D
Camera Preset Save 10 Camera 2	xCommand Camera Preset Store PresetId:10 CameraId:2\x0D
Camera Preset Save 10 Camera 3	xCommand Camera Preset Store PresetId:10 CameraId:3\x0D
Camera Preset Save 10 Camera 4	xCommand Camera Preset Store PresetId:10 CameraId:4\x0D
Camera Preset Save 10 Camera 5	xCommand Camera Preset Store PresetId:10 CameraId:5\x0D
Camera Preset Save 10 Camera 6	xCommand Camera Preset Store PresetId:10 CameraId:6\x0D
Camera Preset Save 10 Camera 7	xCommand Camera Preset Store PresetId:10 CameraId:7\x0D
Camera Preset Save 11	xCommand Camera Preset Store PresetId:11 CameraId:1\x0D
Camera Preset Save 11 Camera 1	xCommand Camera Preset Store PresetId:11 CameraId:1\x0D
Camera Preset Save 11 Camera 2	xCommand Camera Preset Store PresetId:11 CameraId:2\x0D
Camera Preset Save 11 Camera 3	xCommand Camera Preset Store PresetId:11 CameraId:3\x0D
Camera Preset Save 11 Camera 4	xCommand Camera Preset Store PresetId:11 CameraId:4\x0D
Camera Preset Save 11 Camera 5	xCommand Camera Preset Store PresetId:11 CameraId:5\x0D
Camera Preset Save 11 Camera 6	xCommand Camera Preset Store PresetId:11 CameraId:6\x0D
Camera Preset Save 11 Camera 7	xCommand Camera Preset Store PresetId:11 CameraId:7\x0D
Camera Preset Save 12	xCommand Camera Preset Store PresetId:12 CameraId:1\x0D
Camera Preset Save 12 Camera 1	xCommand Camera Preset Store PresetId:12 CameraId:1\x0D
Camera Preset Save 12 Camera 2	xCommand Camera Preset Store PresetId:12 CameraId:2\x0D
Camera Preset Save 12 Camera 3	xCommand Camera Preset Store PresetId:12 CameraId:3\x0D
Camera Preset Save 12 Camera 4	xCommand Camera Preset Store PresetId:12 CameraId:4\x0D
Camera Preset Save 12 Camera 5	xCommand Camera Preset Store PresetId:12 CameraId:5\x0D
Camera Preset Save 12 Camera 6	xCommand Camera Preset Store PresetId:12 CameraId:6\x0D
Camera Preset Save 12 Camera 7	xCommand Camera Preset Store PresetId:12 CameraId:7\x0D
Camera Preset Save 13	xCommand Camera Preset Store PresetId:13 CameraId:1\x0D
Camera Preset Save 13 Camera 1	xCommand Camera Preset Store PresetId:13 CameraId:1\x0D
Camera Preset Save 13 Camera 2	xCommand Camera Preset Store PresetId:13 CameraId:2\x0D
Camera Preset Save 13 Camera 3	xCommand Camera Preset Store PresetId:13 CameraId:3\x0D

Global Scripter Module Communication Sheet

Camera Preset Save 13 Camera 4	xCommand Camera Preset Store PresetId:13 CameraId:4\x0D
Camera Preset Save 13 Camera 5	xCommand Camera Preset Store PresetId:13 CameraId:5\x0D
Camera Preset Save 13 Camera 6	xCommand Camera Preset Store PresetId:13 CameraId:6\x0D
Camera Preset Save 13 Camera 7	xCommand Camera Preset Store PresetId:13 CameraId:7\x0D
Camera Preset Save 14	xCommand Camera Preset Store PresetId:14 CameraId:1\x0D
Camera Preset Save 14 Camera 1	xCommand Camera Preset Store PresetId:14 CameraId:1\x0D
Camera Preset Save 14 Camera 2	xCommand Camera Preset Store PresetId:14 CameraId:2\x0D
Camera Preset Save 14 Camera 3	xCommand Camera Preset Store PresetId:14 CameraId:3\x0D
Camera Preset Save 14 Camera 4	xCommand Camera Preset Store PresetId:14 CameraId:4\x0D
Camera Preset Save 14 Camera 5	xCommand Camera Preset Store PresetId:14 CameraId:5\x0D
Camera Preset Save 14 Camera 6	xCommand Camera Preset Store PresetId:14 CameraId:6\x0D
Camera Preset Save 14 Camera 7	xCommand Camera Preset Store PresetId:14 CameraId:7\x0D
Camera Preset Save 15	xCommand Camera Preset Store PresetId:15 CameraId:1\x0D
Camera Preset Save 15 Camera 1	xCommand Camera Preset Store PresetId:15 CameraId:1\x0D
Camera Preset Save 15 Camera 2	xCommand Camera Preset Store PresetId:15 CameraId:2\x0D
Camera Preset Save 15 Camera 3	xCommand Camera Preset Store PresetId:15 CameraId:3\x0D
Camera Preset Save 15 Camera 4	xCommand Camera Preset Store PresetId:15 CameraId:4\x0D
Camera Preset Save 15 Camera 5	xCommand Camera Preset Store PresetId:15 CameraId:5\x0D
Camera Preset Save 15 Camera 6	xCommand Camera Preset Store PresetId:15 CameraId:6\x0D
Camera Preset Save 15 Camera 7	xCommand Camera Preset Store PresetId:15 CameraId:7\x0D
Camera Preset Save 16	xCommand Camera Preset Store PresetId:16 CameraId:1\x0D
Camera Preset Save 16 Camera 1	xCommand Camera Preset Store PresetId:16 CameraId:1\x0D
Camera Preset Save 16 Camera 2	xCommand Camera Preset Store PresetId:16 CameraId:2\x0D
Camera Preset Save 16 Camera 3	xCommand Camera Preset Store PresetId:16 CameraId:3\x0D
Camera Preset Save 16 Camera 4	xCommand Camera Preset Store PresetId:16 CameraId:4\x0D
Camera Preset Save 16 Camera 5	xCommand Camera Preset Store PresetId:16 CameraId:5\x0D
Camera Preset Save 16 Camera 6	xCommand Camera Preset Store PresetId:16 CameraId:6\x0D
Camera Preset Save 16 Camera 7	xCommand Camera Preset Store PresetId:16 CameraId:7\x0D
Camera Preset Save 17	xCommand Camera Preset Store PresetId:17 CameraId:1\x0D
Camera Preset Save 17 Camera 1	xCommand Camera Preset Store PresetId:17 CameraId:1\x0D
Camera Preset Save 17 Camera 2	xCommand Camera Preset Store PresetId:17 CameraId:2\x0D
Camera Preset Save 17 Camera 3	xCommand Camera Preset Store PresetId:17 CameraId:3\x0D
Camera Preset Save 17 Camera 4	xCommand Camera Preset Store PresetId:17 CameraId:4\x0D
Camera Preset Save 17 Camera 5	xCommand Camera Preset Store PresetId:17 CameraId:5\x0D
Camera Preset Save 17 Camera 6	xCommand Camera Preset Store PresetId:17 CameraId:6\x0D
Camera Preset Save 17 Camera 7	xCommand Camera Preset Store PresetId:17 CameraId:7\x0D
Camera Preset Save 18	xCommand Camera Preset Store PresetId:18 CameraId:1\x0D
Camera Preset Save 18 Camera 1	xCommand Camera Preset Store PresetId:18 CameraId:1\x0D
Camera Preset Save 18 Camera 2	xCommand Camera Preset Store PresetId:18 CameraId:2\x0D
Camera Preset Save 18 Camera 3	xCommand Camera Preset Store PresetId:18 CameraId:3\x0D
Camera Preset Save 18 Camera 4	xCommand Camera Preset Store PresetId:18 CameraId:4\x0D

Global Scripter Module Communication Sheet

Revision: 11/1/2017

Camera Preset Save 18 Camera 5	xCommand Camera Preset Store PresetId:18 CameraId:5\x0D
Camera Preset Save 18 Camera 6	xCommand Camera Preset Store PresetId:18 CameraId:6\x0D
Camera Preset Save 18 Camera 7	xCommand Camera Preset Store PresetId:18 CameraId:7\x0D
Camera Preset Save 19	xCommand Camera Preset Store PresetId:19 CameraId:1\x0D
Camera Preset Save 19 Camera 1	xCommand Camera Preset Store PresetId:19 CameraId:1\x0D
Camera Preset Save 19 Camera 2	xCommand Camera Preset Store PresetId:19 CameraId:2\x0D
Camera Preset Save 19 Camera 3	xCommand Camera Preset Store PresetId:19 CameraId:3\x0D
Camera Preset Save 19 Camera 4	xCommand Camera Preset Store PresetId:19 CameraId:4\x0D
Camera Preset Save 19 Camera 5	xCommand Camera Preset Store PresetId:19 CameraId:5\x0D
Camera Preset Save 19 Camera 6	xCommand Camera Preset Store PresetId:19 CameraId:6\x0D
Camera Preset Save 19 Camera 7	xCommand Camera Preset Store PresetId:19 CameraId:7\x0D
Camera Preset Save 2	xCommand Camera Preset Store PresetId:2 CameraId:1\x0D
Camera Preset Save 2 Camera 1	xCommand Camera Preset Store PresetId:2 CameraId:1\x0D
Camera Preset Save 2 Camera 2	xCommand Camera Preset Store PresetId:2 CameraId:2\x0D
Camera Preset Save 2 Camera 3	xCommand Camera Preset Store PresetId:2 CameraId:3\x0D
Camera Preset Save 2 Camera 4	xCommand Camera Preset Store PresetId:2 CameraId:4\x0D
Camera Preset Save 2 Camera 5	xCommand Camera Preset Store PresetId:2 CameraId:5\x0D
Camera Preset Save 2 Camera 6	xCommand Camera Preset Store PresetId:2 CameraId:6\x0D
Camera Preset Save 2 Camera 7	xCommand Camera Preset Store PresetId:2 CameraId:7\x0D
Camera Preset Save 20	xCommand Camera Preset Store PresetId:20 CameraId:1\x0D
Camera Preset Save 20 Camera 1	xCommand Camera Preset Store PresetId:20 CameraId:1\x0D
Camera Preset Save 20 Camera 2	xCommand Camera Preset Store PresetId:20 CameraId:2\x0D
Camera Preset Save 20 Camera 3	xCommand Camera Preset Store PresetId:20 CameraId:3\x0D
Camera Preset Save 20 Camera 4	xCommand Camera Preset Store PresetId:20 CameraId:4\x0D
Camera Preset Save 20 Camera 5	xCommand Camera Preset Store PresetId:20 CameraId:5\x0D
Camera Preset Save 20 Camera 6	xCommand Camera Preset Store PresetId:20 CameraId:6\x0D
Camera Preset Save 20 Camera 7	xCommand Camera Preset Store PresetId:20 CameraId:7\x0D
Camera Preset Save 21	xCommand Camera Preset Store PresetId:21 CameraId:1\x0D
Camera Preset Save 21 Camera 1	xCommand Camera Preset Store PresetId:21 CameraId:1\x0D
Camera Preset Save 21 Camera 2	xCommand Camera Preset Store PresetId:21 CameraId:2\x0D
Camera Preset Save 21 Camera 3	xCommand Camera Preset Store PresetId:21 CameraId:3\x0D
Camera Preset Save 21 Camera 4	xCommand Camera Preset Store PresetId:21 CameraId:4\x0D
Camera Preset Save 21 Camera 5	xCommand Camera Preset Store PresetId:21 CameraId:5\x0D
Camera Preset Save 21 Camera 6	xCommand Camera Preset Store PresetId:21 CameraId:6\x0D
Camera Preset Save 21 Camera 7	xCommand Camera Preset Store PresetId:21 CameraId:7\x0D
Camera Preset Save 22	xCommand Camera Preset Store PresetId:22 CameraId:1\x0D
Camera Preset Save 22 Camera 1	xCommand Camera Preset Store PresetId:22 CameraId:1\x0D
Camera Preset Save 22 Camera 2	xCommand Camera Preset Store PresetId:22 CameraId:2\x0D
Camera Preset Save 22 Camera 3	xCommand Camera Preset Store PresetId:22 CameraId:3\x0D
Camera Preset Save 22 Camera 4	xCommand Camera Preset Store PresetId:22 CameraId:4\x0D
Camera Preset Save 22 Camera 5	xCommand Camera Preset Store PresetId:22 CameraId:5\x0D

Global Scripter Module Communication Sheet

Camera Preset Save 22 Camera 6	xCommand Camera Preset Store PresetId:22 CameraId:6\x0D
Camera Preset Save 22 Camera 7	xCommand Camera Preset Store PresetId:22 CameraId:7\x0D
Camera Preset Save 23	xCommand Camera Preset Store PresetId:23 CameraId:1\x0D
Camera Preset Save 23 Camera 1	xCommand Camera Preset Store PresetId:23 CameraId:1\x0D
Camera Preset Save 23 Camera 2	xCommand Camera Preset Store PresetId:23 CameraId:2\x0D
Camera Preset Save 23 Camera 3	xCommand Camera Preset Store PresetId:23 CameraId:3\x0D
Camera Preset Save 23 Camera 4	xCommand Camera Preset Store PresetId:23 CameraId:4\x0D
Camera Preset Save 23 Camera 5	xCommand Camera Preset Store PresetId:23 CameraId:5\x0D
Camera Preset Save 23 Camera 6	xCommand Camera Preset Store PresetId:23 CameraId:6\x0D
Camera Preset Save 23 Camera 7	xCommand Camera Preset Store PresetId:23 CameraId:7\x0D
Camera Preset Save 24	xCommand Camera Preset Store PresetId:24 CameraId:1\x0D
Camera Preset Save 24 Camera 1	xCommand Camera Preset Store PresetId:24 CameraId:1\x0D
Camera Preset Save 24 Camera 2	xCommand Camera Preset Store PresetId:24 CameraId:2\x0D
Camera Preset Save 24 Camera 3	xCommand Camera Preset Store PresetId:24 CameraId:3\x0D
Camera Preset Save 24 Camera 4	xCommand Camera Preset Store PresetId:24 CameraId:4\x0D
Camera Preset Save 24 Camera 5	xCommand Camera Preset Store PresetId:24 CameraId:5\x0D
Camera Preset Save 24 Camera 6	xCommand Camera Preset Store PresetId:24 CameraId:6\x0D
Camera Preset Save 24 Camera 7	xCommand Camera Preset Store PresetId:24 CameraId:7\x0D
Camera Preset Save 25	xCommand Camera Preset Store PresetId:25 CameraId:1\x0D
Camera Preset Save 25 Camera 1	xCommand Camera Preset Store PresetId:25 CameraId:1\x0D
Camera Preset Save 25 Camera 2	xCommand Camera Preset Store PresetId:25 CameraId:2\x0D
Camera Preset Save 25 Camera 3	xCommand Camera Preset Store PresetId:25 CameraId:3\x0D
Camera Preset Save 25 Camera 4	xCommand Camera Preset Store PresetId:25 CameraId:4\x0D
Camera Preset Save 25 Camera 5	xCommand Camera Preset Store PresetId:25 CameraId:5\x0D
Camera Preset Save 25 Camera 6	xCommand Camera Preset Store PresetId:25 CameraId:6\x0D
Camera Preset Save 25 Camera 7	xCommand Camera Preset Store PresetId:25 CameraId:7\x0D
Camera Preset Save 26	xCommand Camera Preset Store PresetId:26 CameraId:1\x0D
Camera Preset Save 26 Camera 1	xCommand Camera Preset Store PresetId:26 CameraId:1\x0D
Camera Preset Save 26 Camera 2	xCommand Camera Preset Store PresetId:26 CameraId:2\x0D
Camera Preset Save 26 Camera 3	xCommand Camera Preset Store PresetId:26 CameraId:3\x0D
Camera Preset Save 26 Camera 4	xCommand Camera Preset Store PresetId:26 CameraId:4\x0D
Camera Preset Save 26 Camera 5	xCommand Camera Preset Store PresetId:26 CameraId:5\x0D
Camera Preset Save 26 Camera 6	xCommand Camera Preset Store PresetId:26 CameraId:6\x0D
Camera Preset Save 26 Camera 7	xCommand Camera Preset Store PresetId:26 CameraId:7\x0D
Camera Preset Save 27	xCommand Camera Preset Store PresetId:27 CameraId:1\x0D
Camera Preset Save 27 Camera 1	xCommand Camera Preset Store PresetId:27 CameraId:1\x0D
Camera Preset Save 27 Camera 2	xCommand Camera Preset Store PresetId:27 CameraId:2\x0D
Camera Preset Save 27 Camera 3	xCommand Camera Preset Store PresetId:27 CameraId:3\x0D
Camera Preset Save 27 Camera 4	xCommand Camera Preset Store PresetId:27 CameraId:4\x0D
Camera Preset Save 27 Camera 5	xCommand Camera Preset Store PresetId:27 CameraId:5\x0D
Camera Preset Save 27 Camera 6	xCommand Camera Preset Store PresetId:27 CameraId:6\x0D

Global Scripter Module Communication Sheet

Revision: 11/1/2017

Camera Preset Save 27 Camera 7	xCommand Camera Preset Store PresetId:27 CameraId:7\x0D
Camera Preset Save 28	xCommand Camera Preset Store PresetId:28 CameraId:1\x0D
Camera Preset Save 28 Camera 1	xCommand Camera Preset Store PresetId:28 CameraId:1\x0D
Camera Preset Save 28 Camera 2	xCommand Camera Preset Store PresetId:28 CameraId:2\x0D
Camera Preset Save 28 Camera 3	xCommand Camera Preset Store PresetId:28 CameraId:3\x0D
Camera Preset Save 28 Camera 4	xCommand Camera Preset Store PresetId:28 CameraId:4\x0D
Camera Preset Save 28 Camera 5	xCommand Camera Preset Store PresetId:28 CameraId:5\x0D
Camera Preset Save 28 Camera 6	xCommand Camera Preset Store PresetId:28 CameraId:6\x0D
Camera Preset Save 28 Camera 7	xCommand Camera Preset Store PresetId:28 CameraId:7\x0D
Camera Preset Save 29	xCommand Camera Preset Store PresetId:29 CameraId:1\x0D
Camera Preset Save 29 Camera 1	xCommand Camera Preset Store PresetId:29 CameraId:1\x0D
Camera Preset Save 29 Camera 2	xCommand Camera Preset Store PresetId:29 CameraId:2\x0D
Camera Preset Save 29 Camera 3	xCommand Camera Preset Store PresetId:29 CameraId:3\x0D
Camera Preset Save 29 Camera 4	xCommand Camera Preset Store PresetId:29 CameraId:4\x0D
Camera Preset Save 29 Camera 5	xCommand Camera Preset Store PresetId:29 CameraId:5\x0D
Camera Preset Save 29 Camera 6	xCommand Camera Preset Store PresetId:29 CameraId:6\x0D
Camera Preset Save 29 Camera 7	xCommand Camera Preset Store PresetId:29 CameraId:7\x0D
Camera Preset Save 3	xCommand Camera Preset Store PresetId:3 CameraId:1\x0D
Camera Preset Save 3 Camera 1	xCommand Camera Preset Store PresetId:3 CameraId:1\x0D
Camera Preset Save 3 Camera 2	xCommand Camera Preset Store PresetId:3 CameraId:2\x0D
Camera Preset Save 3 Camera 3	xCommand Camera Preset Store PresetId:3 CameraId:3\x0D
Camera Preset Save 3 Camera 4	xCommand Camera Preset Store PresetId:3 CameraId:4\x0D
Camera Preset Save 3 Camera 5	xCommand Camera Preset Store PresetId:3 CameraId:5\x0D
Camera Preset Save 3 Camera 6	xCommand Camera Preset Store PresetId:3 CameraId:6\x0D
Camera Preset Save 3 Camera 7	xCommand Camera Preset Store PresetId:3 CameraId:7\x0D
Camera Preset Save 30	xCommand Camera Preset Store PresetId:30 CameraId:1\x0D
Camera Preset Save 30 Camera 1	xCommand Camera Preset Store PresetId:30 CameraId:1\x0D
Camera Preset Save 30 Camera 2	xCommand Camera Preset Store PresetId:30 CameraId:2\x0D
Camera Preset Save 30 Camera 3	xCommand Camera Preset Store PresetId:30 CameraId:3\x0D
Camera Preset Save 30 Camera 4	xCommand Camera Preset Store PresetId:30 CameraId:4\x0D
Camera Preset Save 30 Camera 5	xCommand Camera Preset Store PresetId:30 CameraId:5\x0D
Camera Preset Save 30 Camera 6	xCommand Camera Preset Store PresetId:30 CameraId:6\x0D
Camera Preset Save 30 Camera 7	xCommand Camera Preset Store PresetId:30 CameraId:7\x0D
Camera Preset Save 31	xCommand Camera Preset Store PresetId:31 CameraId:1\x0D
Camera Preset Save 31 Camera 1	xCommand Camera Preset Store PresetId:31 CameraId:1\x0D
Camera Preset Save 31 Camera 2	xCommand Camera Preset Store PresetId:31 CameraId:2\x0D
Camera Preset Save 31 Camera 3	xCommand Camera Preset Store PresetId:31 CameraId:3\x0D
Camera Preset Save 31 Camera 4	xCommand Camera Preset Store PresetId:31 CameraId:4\x0D
Camera Preset Save 31 Camera 5	xCommand Camera Preset Store PresetId:31 CameraId:5\x0D
Camera Preset Save 31 Camera 6	xCommand Camera Preset Store PresetId:31 CameraId:6\x0D
Camera Preset Save 31 Camera 7	xCommand Camera Preset Store PresetId:31 CameraId:7\x0D

Global Scripter Module Communication Sheet

Camera Preset Save 32	xCommand Camera Preset Store PresetId:32 CameraId:1\x0D
Camera Preset Save 32 Camera 1	xCommand Camera Preset Store PresetId:32 CameraId:1\x0D
Camera Preset Save 32 Camera 2	xCommand Camera Preset Store PresetId:32 CameraId:2\x0D
Camera Preset Save 32 Camera 3	xCommand Camera Preset Store PresetId:32 CameraId:3\x0D
Camera Preset Save 32 Camera 4	xCommand Camera Preset Store PresetId:32 CameraId:4\x0D
Camera Preset Save 32 Camera 5	xCommand Camera Preset Store PresetId:32 CameraId:5\x0D
Camera Preset Save 32 Camera 6	xCommand Camera Preset Store PresetId:32 CameraId:6\x0D
Camera Preset Save 32 Camera 7	xCommand Camera Preset Store PresetId:32 CameraId:7\x0D
Camera Preset Save 33	xCommand Camera Preset Store PresetId:33 CameraId:1\x0D
Camera Preset Save 33 Camera 1	xCommand Camera Preset Store PresetId:33 CameraId:1\x0D
Camera Preset Save 33 Camera 2	xCommand Camera Preset Store PresetId:33 CameraId:2\x0D
Camera Preset Save 33 Camera 3	xCommand Camera Preset Store PresetId:33 CameraId:3\x0D
Camera Preset Save 33 Camera 4	xCommand Camera Preset Store PresetId:33 CameraId:4\x0D
Camera Preset Save 33 Camera 5	xCommand Camera Preset Store PresetId:33 CameraId:5\x0D
Camera Preset Save 33 Camera 6	xCommand Camera Preset Store PresetId:33 CameraId:6\x0D
Camera Preset Save 33 Camera 7	xCommand Camera Preset Store PresetId:33 CameraId:7\x0D
Camera Preset Save 34	xCommand Camera Preset Store PresetId:34 CameraId:1\x0D
Camera Preset Save 34 Camera 1	xCommand Camera Preset Store PresetId:34 CameraId:1\x0D
Camera Preset Save 34 Camera 2	xCommand Camera Preset Store PresetId:34 CameraId:2\x0D
Camera Preset Save 34 Camera 3	xCommand Camera Preset Store PresetId:34 CameraId:3\x0D
Camera Preset Save 34 Camera 4	xCommand Camera Preset Store PresetId:34 CameraId:4\x0D
Camera Preset Save 34 Camera 5	xCommand Camera Preset Store PresetId:34 CameraId:5\x0D
Camera Preset Save 34 Camera 6	xCommand Camera Preset Store PresetId:34 CameraId:6\x0D
Camera Preset Save 34 Camera 7	xCommand Camera Preset Store PresetId:34 CameraId:7\x0D
Camera Preset Save 35	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 1	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 2	xCommand Camera Preset Store PresetId:35 CameraId:2\x0D
Camera Preset Save 35 Camera 3	xCommand Camera Preset Store PresetId:35 CameraId:3\x0D
Camera Preset Save 35 Camera 4	xCommand Camera Preset Store PresetId:35 CameraId:4\x0D
Camera Preset Save 35 Camera 5	xCommand Camera Preset Store PresetId:35 CameraId:5\x0D
Camera Preset Save 35 Camera 6	xCommand Camera Preset Store PresetId:35 CameraId:6\x0D
Camera Preset Save 35 Camera 7	xCommand Camera Preset Store PresetId:35 CameraId:7\x0D
Camera Preset Save 4	xCommand Camera Preset Store PresetId:4 CameraId:1\x0D
Camera Preset Save 4 Camera 1	xCommand Camera Preset Store PresetId:4 CameraId:1\x0D
Camera Preset Save 4 Camera 2	xCommand Camera Preset Store PresetId:4 CameraId:2\x0D
Camera Preset Save 4 Camera 3	xCommand Camera Preset Store PresetId:4 CameraId:3\x0D
Camera Preset Save 4 Camera 4	xCommand Camera Preset Store PresetId:4 CameraId:4\x0D
Camera Preset Save 4 Camera 5	xCommand Camera Preset Store PresetId:4 CameraId:5\x0D
Camera Preset Save 4 Camera 6	xCommand Camera Preset Store PresetId:4 CameraId:6\x0D
Camera Preset Save 4 Camera 7	xCommand Camera Preset Store PresetId:4 CameraId:7\x0D
Camera Preset Save 5	xCommand Camera Preset Store PresetId:5 CameraId:1\x0D

Global Scripter Module Communication Sheet

Camera Preset Save 5 Camera 1	xCommand Camera Preset Store PresetId:5 CameraId:1\x0D
Camera Preset Save 5 Camera 2	xCommand Camera Preset Store PresetId:5 CameraId:2\x0D
Camera Preset Save 5 Camera 3	xCommand Camera Preset Store PresetId:5 CameraId:3\x0D
Camera Preset Save 5 Camera 4	xCommand Camera Preset Store PresetId:5 CameraId:4\x0D
Camera Preset Save 5 Camera 5	xCommand Camera Preset Store PresetId:5 CameraId:5\x0D
Camera Preset Save 5 Camera 6	xCommand Camera Preset Store PresetId:5 CameraId:6\x0D
Camera Preset Save 5 Camera 7	xCommand Camera Preset Store PresetId:5 CameraId:7\x0D
Camera Preset Save 6	xCommand Camera Preset Store PresetId:6 CameraId:1\x0D
Camera Preset Save 6 Camera 1	xCommand Camera Preset Store PresetId:6 CameraId:1\x0D
Camera Preset Save 6 Camera 2	xCommand Camera Preset Store PresetId:6 CameraId:2\x0D
Camera Preset Save 6 Camera 3	xCommand Camera Preset Store PresetId:6 CameraId:3\x0D
Camera Preset Save 6 Camera 4	xCommand Camera Preset Store PresetId:6 CameraId:4\x0D
Camera Preset Save 6 Camera 5	xCommand Camera Preset Store PresetId:6 CameraId:5\x0D
Camera Preset Save 6 Camera 6	xCommand Camera Preset Store PresetId:6 CameraId:6\x0D
Camera Preset Save 6 Camera 7	xCommand Camera Preset Store PresetId:6 CameraId:7\x0D
Camera Preset Save 7	xCommand Camera Preset Store PresetId:7 CameraId:1\x0D
Camera Preset Save 7 Camera 1	xCommand Camera Preset Store PresetId:7 CameraId:1\x0D
Camera Preset Save 7 Camera 2	xCommand Camera Preset Store PresetId:7 CameraId:2\x0D
Camera Preset Save 7 Camera 3	xCommand Camera Preset Store PresetId:7 CameraId:3\x0D
Camera Preset Save 7 Camera 4	xCommand Camera Preset Store PresetId:7 CameraId:4\x0D
Camera Preset Save 7 Camera 5	xCommand Camera Preset Store PresetId:7 CameraId:5\x0D
Camera Preset Save 7 Camera 6	xCommand Camera Preset Store PresetId:7 CameraId:6\x0D
Camera Preset Save 7 Camera 7	xCommand Camera Preset Store PresetId:7 CameraId:7\x0D
Camera Preset Save 8	xCommand Camera Preset Store PresetId:8 CameraId:1\x0D
Camera Preset Save 8 Camera 1	xCommand Camera Preset Store PresetId:8 CameraId:1\x0D
Camera Preset Save 8 Camera 2	xCommand Camera Preset Store PresetId:8 CameraId:2\x0D
Camera Preset Save 8 Camera 3	xCommand Camera Preset Store PresetId:8 CameraId:3\x0D
Camera Preset Save 8 Camera 4	xCommand Camera Preset Store PresetId:8 CameraId:4\x0D
Camera Preset Save 8 Camera 5	xCommand Camera Preset Store PresetId:8 CameraId:5\x0D
Camera Preset Save 8 Camera 6	xCommand Camera Preset Store PresetId:8 CameraId:6\x0D
Camera Preset Save 8 Camera 7	xCommand Camera Preset Store PresetId:8 CameraId:7\x0D
Camera Preset Save 9	xCommand Camera Preset Store PresetId:9 CameraId:1\x0D
Camera Preset Save 9 Camera 1	xCommand Camera Preset Store PresetId:9 CameraId:1\x0D
Camera Preset Save 9 Camera 2	xCommand Camera Preset Store PresetId:9 CameraId:2\x0D
Camera Preset Save 9 Camera 3	xCommand Camera Preset Store PresetId:9 CameraId:3\x0D
Camera Preset Save 9 Camera 4	xCommand Camera Preset Store PresetId:9 CameraId:4\x0D
Camera Preset Save 9 Camera 5	xCommand Camera Preset Store PresetId:9 CameraId:5\x0D
Camera Preset Save 9 Camera 6	xCommand Camera Preset Store PresetId:9 CameraId:6\x0D
Camera Preset Save 9 Camera 7	xCommand Camera Preset Store PresetId:9 CameraId:7\x0D
Camera Tilt Down Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D

Global Scripter Module Communication Sheet

Camera Tilt Stop Speed 1	xCommand Camera Ramp Camerald:1 Tilt: Stop\x0D
Camera Tilt Stop Speed 15	xCommand Camera Ramp Camerald:1 Tilt: Stop\x0D
Camera Tilt Up Speed 1	xCommand Camera Ramp Camerald:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 15	xCommand Camera Ramp Camerald:1 Tilt:Up TiltSpeed:15\x0D
Camera Zoom In Speed 1	xCommand Camera Ramp Camerald:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 15	xCommand Camera Ramp Camerald:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom Out Speed 1	xCommand Camera Ramp Camerald:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 15	xCommand Camera Ramp Camerald:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Stop Speed 1	xCommand Camera Ramp Camerald:1 Zoom: Stop\x0D
Camera Zoom Stop Speed 15	xCommand Camera Ramp Camerald:1 Zoom: Stop\x0D
DNS Domain Name Command None	xConfiguration Network 1 DNS Domain Name: Replace text with desired string\x0D
DNS Server Address Command None	xConfiguration Network 1 DNS Server 1 Address: Replace text with desired string\x0D
Do Not Disturb Active	xCommand Conference DoNotDisturb Activate\x0D
Do Not Disturb Inactive	xCommand Conference DoNotDisturb Deactivate\x0D
DTMF #	xCommand Call DTMFSend DTMFString:#\x0D
DTMF *	xCommand Call DTMFSend DTMFString:*\x0D
DTMF 0	xCommand Call DTMFSend DTMFString:0\x0D
DTMF 1	xCommand Call DTMFSend DTMFString:1\x0D
DTMF 2	xCommand Call DTMFSend DTMFString:2\x0D
DTMF 3	xCommand Call DTMFSend DTMFString:3\x0D
DTMF 4	xCommand Call DTMFSend DTMFString:4\x0D
DTMF 5	xCommand Call DTMFSend DTMFString:5\x0D
DTMF 6	xCommand Call DTMFSend DTMFString:6\x0D
DTMF 7	xCommand Call DTMFSend DTMFString:7\x0D
DTMF 8	xCommand Call DTMFSend DTMFString:8\x0D
DTMF 9	xCommand Call DTMFSend DTMFString:9\x0D
Far End Camera Pan/Tilt Down	xCommand Call FarEndControl Camera Move Value:Down\x0D
Far End Camera Pan/Tilt Left	xCommand Call FarEndControl Camera Move Value:Left\x0D
Far End Camera Pan/Tilt Right	xCommand Call FarEndControl Camera Move Value:Right\x0D
Far End Camera Pan/Tilt Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Camera Pan/Tilt Up	xCommand Call FarEndControl Camera Move Value:Up\x0D
Far End Camera Preset Recall 1	xCommand Call FarEndControl RoomPreset Activate:1\x0D
Far End Camera Preset Recall 10	xCommand Call FarEndControl RoomPreset Activate:10\x0D
Far End Camera Preset Recall 11	xCommand Call FarEndControl RoomPreset Activate:11\x0D
Far End Camera Preset Recall 12	xCommand Call FarEndControl RoomPreset Activate:12\x0D
Far End Camera Preset Recall 13	xCommand Call FarEndControl RoomPreset Activate:13\x0D
Far End Camera Preset Recall 14	xCommand Call FarEndControl RoomPreset Activate:14\x0D
Far End Camera Preset Recall 15	xCommand Call FarEndControl RoomPreset Activate:15\x0D

Global Scripter Module Communication Sheet

Far End Camera Preset Recall 2	xCommand Call FarEndControl RoomPreset Activate:2\x0D
Far End Camera Preset Recall 3	xCommand Call FarEndControl RoomPreset Activate:3\x0D
Far End Camera Preset Recall 4	xCommand Call FarEndControl RoomPreset Activate:4\x0D
Far End Camera Preset Recall 5	xCommand Call FarEndControl RoomPreset Activate:5\x0D
Far End Camera Preset Recall 6	xCommand Call FarEndControl RoomPreset Activate:6\x0D
Far End Camera Preset Recall 7	xCommand Call FarEndControl RoomPreset Activate:7\x0D
Far End Camera Preset Recall 8	xCommand Call FarEndControl RoomPreset Activate:8\x0D
Far End Camera Preset Recall 9	xCommand Call FarEndControl RoomPreset Activate:9\x0D
Far End Camera Source 0	xCommand Call FarEndControl Source Select SourceId:0\x0D
Far End Camera Source 1	xCommand Call FarEndControl Source Select SourceId:1\x0D
Far End Camera Source 10	xCommand Call FarEndControl Source Select SourceId:10\x0D
Far End Camera Source 11	xCommand Call FarEndControl Source Select SourceId:11\x0D
Far End Camera Source 12	xCommand Call FarEndControl Source Select SourceId:12\x0D
Far End Camera Source 13	xCommand Call FarEndControl Source Select SourceId:13\x0D
Far End Camera Source 14	xCommand Call FarEndControl Source Select SourceId:14\x0D
Far End Camera Source 15	xCommand Call FarEndControl Source Select SourceId:15\x0D
Far End Camera Source 2	xCommand Call FarEndControl Source Select SourceId:2\x0D
Far End Camera Source 3	xCommand Call FarEndControl Source Select SourceId:3\x0D
Far End Camera Source 4	xCommand Call FarEndControl Source Select SourceId:4\x0D
Far End Camera Source 5	xCommand Call FarEndControl Source Select SourceId:5\x0D
Far End Camera Source 6	xCommand Call FarEndControl Source Select SourceId:6\x0D
Far End Camera Source 7	xCommand Call FarEndControl Source Select SourceId:7\x0D
Far End Camera Source 8	xCommand Call FarEndControl Source Select SourceId:8\x0D
Far End Camera Source 9	xCommand Call FarEndControl Source Select SourceId:9\x0D
Far End Camera Zoom In	xCommand Call FarEndControl Camera Move Value:ZoomIn\x0D
Far End Camera Zoom Out	xCommand Call FarEndControl Camera Move Value:ZoomOut\x0D
Far End Control Off	xConfiguration Conference FarEndControl Mode: Off\x0D
Far End Control On	xConfiguration Conference FarEndControl Mode: On\x0D
H323 Gatekeeper Address Command None	xConfiguration H323 Gatekeeper Address: Replace text with desired string\x0D
H323Alias E164 Command None	xConfiguration H323 H323Alias E164: Replace text with desired string\x0D
H323Alias ID Command None	xConfiguration H323 H323Alias ID: Replace text with desired string\x0D
H323Profile Authentication LoginName Command None	H323 Authentication LoginName: Replace text with desired string\x0D
H323Profile Authentication Password Command None	xConfiguration H323 Authentication Password: Replace text with desired string\x0D
Hook Accept Protocol Auto	xCommand Call Accept\x0D
Hook Accept Protocol H320	xCommand Call Accept\x0D
Hook Accept Protocol H323	xCommand Call Accept\x0D

Global Scripter Module Communication Sheet

Hook Accept Protocol SIP	xCommand Call Accept\x0D
Hook Reject Protocol Auto	xCommand Call Reject\x0D
Hook Reject Protocol H320	xCommand Call Reject\x0D
Hook Reject Protocol H323	xCommand Call Reject\x0D
Hook Reject Protocol SIP	xCommand Call Reject\x0D
Input Line Level 0 Input Line 1	xConfiguration Audio Input Line 1 Level:0.0\x0D
Input Line Level 0 Input Line 2	xConfiguration Audio Input Line 2 Level:0.0\x0D
Input Line Level 0 Input Line 3	xConfiguration Audio Input Line 3 Level:0.0\x0D
Input Line Level 0 Input Line 4	xConfiguration Audio Input Line 4 Level:0.0\x0D
Input Line Level 24 Input Line 1	xConfiguration Audio Input Line 1 Level:24.0\x0D
Input Line Level 24 Input Line 2	xConfiguration Audio Input Line 2 Level:24.0\x0D
Input Line Level 24 Input Line 3	xConfiguration Audio Input Line 3 Level:24.0\x0D
Input Line Level 24 Input Line 4	xConfiguration Audio Input Line 4 Level:24.0\x0D
IPv4 Address Command None	xConfiguration Network 1 IPv4 Address: Replace text with desired string\x0D
IPv4 Gateway Command None	xConfiguration Network 1 IPv4 Gateway: Replace text with desired string\x0D
IPv4 SubnetMask Command None	xConfiguration Network 1 IPv4 SubnetMask: Replace text with desired string\x0D
IR Emulation - Key Click	xCommand UserInterface OSD Key Click Key: -\x0D
IR Emulation - Key Press	xCommand UserInterface OSD Key Press Key: -\x0D
IR Emulation - Key Release	xCommand UserInterface OSD Key Release Key: -\x0D
IR Emulation + Key Click	xCommand UserInterface OSD Key Click Key: +\x0D
IR Emulation + Key Press	xCommand UserInterface OSD Key Press Key: +\x0D
IR Emulation + Key Release	xCommand UserInterface OSD Key Release Key: +\x0D
IR Emulation 0 Key Click	xCommand UserInterface OSD Key Click Key: 0\x0D
IR Emulation 0 Key Press	xCommand UserInterface OSD Key Press Key: 0\x0D
IR Emulation 0 Key Release	xCommand UserInterface OSD Key Release Key: 0\x0D
IR Emulation 1 Key Click	xCommand UserInterface OSD Key Click Key: 1\x0D
IR Emulation 1 Key Press	xCommand UserInterface OSD Key Press Key: 1\x0D
IR Emulation 1 Key Release	xCommand UserInterface OSD Key Release Key: 1\x0D
IR Emulation 2 Key Click	xCommand UserInterface OSD Key Click Key: 2\x0D
IR Emulation 2 Key Press	xCommand UserInterface OSD Key Press Key: 2\x0D
IR Emulation 2 Key Release	xCommand UserInterface OSD Key Release Key: 2\x0D
IR Emulation 3 Key Click	xCommand UserInterface OSD Key Click Key: 3\x0D
IR Emulation 3 Key Press	xCommand UserInterface OSD Key Press Key: 3\x0D
IR Emulation 3 Key Release	xCommand UserInterface OSD Key Release Key: 3\x0D
IR Emulation 4 Key Click	xCommand UserInterface OSD Key Click Key: 4\x0D
IR Emulation 4 Key Press	xCommand UserInterface OSD Key Press Key: 4\x0D
IR Emulation 4 Key Release	xCommand UserInterface OSD Key Release Key: 4\x0D
IR Emulation 5 Key Click	xCommand UserInterface OSD Key Click Key: 5\x0D

**Global Scripter Module
Communication Sheet**

IR Emulation 5 Key Press	xCommand UserInterface OSD Key Press Key: 5\x0D
IR Emulation 5 Key Release	xCommand UserInterface OSD Key Release Key: 5\x0D
IR Emulation 6 Key Click	xCommand UserInterface OSD Key Click Key: 6\x0D
IR Emulation 6 Key Press	xCommand UserInterface OSD Key Press Key: 6\x0D
IR Emulation 6 Key Release	xCommand UserInterface OSD Key Release Key: 6\x0D
IR Emulation 7 Key Click	xCommand UserInterface OSD Key Click Key: 7\x0D
IR Emulation 7 Key Press	xCommand UserInterface OSD Key Press Key: 7\x0D
IR Emulation 7 Key Release	xCommand UserInterface OSD Key Release Key: 7\x0D
IR Emulation 8 Key Click	xCommand UserInterface OSD Key Click Key: 8\x0D
IR Emulation 8 Key Press	xCommand UserInterface OSD Key Press Key: 8\x0D
IR Emulation 8 Key Release	xCommand UserInterface OSD Key Release Key: 8\x0D
IR Emulation 9 Key Click	xCommand UserInterface OSD Key Click Key: 9\x0D
IR Emulation 9 Key Press	xCommand UserInterface OSD Key Press Key: 9\x0D
IR Emulation 9 Key Release	xCommand UserInterface OSD Key Release Key: 9\x0D
IR Emulation Aux Key Click	xCommand UserInterface OSD Key Click Key: SrcAux\x0D
IR Emulation Aux Key Press	xCommand UserInterface OSD Key Press Key: SrcAux\x0D
IR Emulation Aux Key Release	xCommand UserInterface OSD Key Release Key: SrcAux\x0D
IR Emulation C Key Click	xCommand UserInterface OSD Key Click Key: C\x0D
IR Emulation C Key Press	xCommand UserInterface OSD Key Press Key: C\x0D
IR Emulation C Key Release	xCommand UserInterface OSD Key Release Key: C\x0D
IR Emulation Call Key Click	xCommand UserInterface OSD Key Click Key: Call\x0D
IR Emulation Call Key Press	xCommand UserInterface OSD Key Press Key: Call\x0D
IR Emulation Call Key Release	xCommand UserInterface OSD Key Release Key: Call\x0D
IR Emulation Camera Key Click	xCommand UserInterface OSD Key Click Key: SrcCamera\x0D
IR Emulation Camera Key Press	xCommand UserInterface OSD Key Press Key: SrcCamera\x0D
IR Emulation Camera Key Release	xCommand UserInterface OSD Key Release Key: SrcCamera\x0D
IR Emulation Disconnect Key Click	xCommand UserInterface OSD Key Click Key: Disconnect\x0D
IR Emulation Disconnect Key Press	xCommand UserInterface OSD Key Press Key: Disconnect\x0D
IR Emulation Disconnect Key Release	xCommand UserInterface OSD Key Release Key: Disconnect\x0D
IR Emulation Doc Cam Key Click	xCommand UserInterface OSD Key Click Key: SrcDocCam\x0D
IR Emulation Doc Cam Key Press	xCommand UserInterface OSD Key Press Key: SrcDocCam\x0D
IR Emulation Doc Cam Key Release	xCommand UserInterface OSD Key Release Key: SrcDocCam\x0D
IR Emulation Down Key Click	xCommand UserInterface OSD Key Click Key: Down\x0D
IR Emulation Down Key Press	xCommand UserInterface OSD Key Press Key: Down\x0D
IR Emulation Down Key Release	xCommand UserInterface OSD Key Release Key: Down\x0D
IR Emulation F1 Key Click	xCommand UserInterface OSD Key Click Key: F1\x0D
IR Emulation F1 Key Press	xCommand UserInterface OSD Key Press Key: F1\x0D
IR Emulation F1 Key Release	xCommand UserInterface OSD Key Release Key: F1\x0D
IR Emulation F2 Key Click	xCommand UserInterface OSD Key Click Key: F2\x0D
IR Emulation F2 Key Press	xCommand UserInterface OSD Key Press Key: F2\x0D
IR Emulation F2 Key Release	xCommand UserInterface OSD Key Release Key: F2\x0D

Global Scripter Module Communication Sheet

IR Emulation F3 Key Click	xCommand UserInterface OSD Key Click Key: F3\x0D
IR Emulation F3 Key Press	xCommand UserInterface OSD Key Press Key: F3\x0D
IR Emulation F3 Key Release	xCommand UserInterface OSD Key Release Key: F3\x0D
IR Emulation F4 Key Click	xCommand UserInterface OSD Key Click Key: F4\x0D
IR Emulation F4 Key Press	xCommand UserInterface OSD Key Press Key: F4\x0D
IR Emulation F4 Key Release	xCommand UserInterface OSD Key Release Key: F4\x0D
IR Emulation F5 Key Click	xCommand UserInterface OSD Key Click Key: F5\x0D
IR Emulation F5 Key Press	xCommand UserInterface OSD Key Press Key: F5\x0D
IR Emulation F5 Key Release	xCommand UserInterface OSD Key Release Key: F5\x0D
IR Emulation Grab Key Click	xCommand UserInterface OSD Key Click Key: Grab\x0D
IR Emulation Grab Key Press	xCommand UserInterface OSD Key Press Key: Grab\x0D
IR Emulation Grab Key Release	xCommand UserInterface OSD Key Release Key: Grab\x0D
IR Emulation Home Key Click	xCommand UserInterface OSD Key Click Key: Home\x0D
IR Emulation Home Key Press	xCommand UserInterface OSD Key Press Key: Home\x0D
IR Emulation Home Key Release	xCommand UserInterface OSD Key Release Key: Home\x0D
IR Emulation Layout Key Click	xCommand UserInterface OSD Key Click Key: Layout\x0D
IR Emulation Layout Key Press	xCommand UserInterface OSD Key Press Key: Layout\x0D
IR Emulation Layout Key Release	xCommand UserInterface OSD Key Release Key: Layout\x0D
IR Emulation Left Key Click	xCommand UserInterface OSD Key Click Key: Left\x0D
IR Emulation Left Key Press	xCommand UserInterface OSD Key Press Key: Left\x0D
IR Emulation Left Key Release	xCommand UserInterface OSD Key Release Key: Left\x0D
IR Emulation Mute Key Click	xCommand UserInterface OSD Key Click Key: Mute\x0D
IR Emulation Mute Key Press	xCommand UserInterface OSD Key Press Key: Mute\x0D
IR Emulation Mute Key Release	xCommand UserInterface OSD Key Release Key: Mute\x0D
IR Emulation Mute Mic Key Click	xCommand UserInterface OSD Key Click Key: Mute Mic\x0D
IR Emulation Mute Mic Key Press	xCommand UserInterface OSD Key Press Key: Mute Mic\x0D
IR Emulation Mute Mic Key Release	xCommand UserInterface OSD Key Release Key: Mute Mic\x0D
IR Emulation Ok Key Click	xCommand UserInterface OSD Key Click Key: Ok\x0D
IR Emulation Ok Key Press	xCommand UserInterface OSD Key Press Key: Ok\x0D
IR Emulation Ok Key Release	xCommand UserInterface OSD Key Release Key: Ok\x0D
IR Emulation Pc Key Click	xCommand UserInterface OSD Key Click Key: SrcPc\x0D
IR Emulation Pc Key Press	xCommand UserInterface OSD Key Press Key: SrcPc\x0D
IR Emulation Pc Key Release	xCommand UserInterface OSD Key Release Key: SrcPc\x0D
IR Emulation PhoneBook Key Click	xCommand UserInterface OSD Key Click Key: PhoneBook\x0D
IR Emulation PhoneBook Key Press	xCommand UserInterface OSD Key Press Key: PhoneBook\x0D
IR Emulation PhoneBook Key Release	xCommand UserInterface OSD Key Release Key: PhoneBook\x0D
IR Emulation Presentation Key Click	xCommand UserInterface OSD Key Click Key: Presentation\x0D
IR Emulation Presentation Key Press	xCommand UserInterface OSD Key Press Key: Presentation\x0D
IR Emulation Presentation Key Release	xCommand UserInterface OSD Key Release Key: Presentation\x0D
IR Emulation Right Key Click	xCommand UserInterface OSD Key Click Key: Right\x0D
IR Emulation Right Key Press	xCommand UserInterface OSD Key Press Key: Right\x0D

Global Scripter Module Communication Sheet

IR Emulation Right Key Release	xCommand UserInterface OSD Key Release Key: Right\x0D
IR Emulation Selfview Key Click	xCommand UserInterface OSD Key Click Key: Selfview\x0D
IR Emulation Selfview Key Press	xCommand UserInterface OSD Key Press Key: Selfview\x0D
IR Emulation Selfview Key Release	xCommand UserInterface OSD Key Release Key: Selfview\x0D
IR Emulation Square Key Click	xCommand UserInterface OSD Key Click Key: Square\x0D
IR Emulation Square Key Press	xCommand UserInterface OSD Key Press Key: Square\x0D
IR Emulation Square Key Release	xCommand UserInterface OSD Key Release Key: Square\x0D
IR Emulation Star Key Click	xCommand UserInterface OSD Key Click Key: Star\x0D
IR Emulation Star Key Press	xCommand UserInterface OSD Key Press Key: Star\x0D
IR Emulation Star Key Release	xCommand UserInterface OSD Key Release Key: Star\x0D
IR Emulation Up Key Click	xCommand UserInterface OSD Key Click Key: Up\x0D
IR Emulation Up Key Press	xCommand UserInterface OSD Key Press Key: Up\x0D
IR Emulation Up Key Release	xCommand UserInterface OSD Key Release Key: Up\x0D
IR Emulation Vcr Key Click	xCommand UserInterface OSD Key Click Key: SrcVcr\x0D
IR Emulation Vcr Key Press	xCommand UserInterface OSD Key Press Key: SrcVcr\x0D
IR Emulation Vcr Key Release	xCommand UserInterface OSD Key Release Key: SrcVcr\x0D
IR Emulation Volume Down Key Click	xCommand UserInterface OSD Key Click Key: VolumeDown\x0D
IR Emulation Volume Down Key Press	xCommand UserInterface OSD Key Press Key: VolumeDown\x0D
IR Emulation Volume Down Key Release	xCommand UserInterface OSD Key Release Key: VolumeDown\x0D
IR Emulation Volume Up Key Click	xCommand UserInterface OSD Key Click Key: VolumeUp\x0D
IR Emulation Volume Up Key Press	xCommand UserInterface OSD Key Press Key: VolumeUp\x0D
IR Emulation Volume Up Key Release	xCommand UserInterface OSD Key Release Key: VolumeUp\x0D
IR Emulation Zoom In Key Click	xCommand UserInterface OSD Key Click Key: ZoomIn\x0D
IR Emulation Zoom In Key Press	xCommand UserInterface OSD Key Press Key: ZoomIn\x0D
IR Emulation Zoom In Key Release	xCommand UserInterface OSD Key Release Key: ZoomIn\x0D
IR Emulation Zoom Out Key Click	xCommand UserInterface OSD Key Click Key: ZoomOut\x0D
IR Emulation Zoom Out Key Press	xCommand UserInterface OSD Key Press Key: ZoomOut\x0D
IR Emulation Zoom Out Key Release	xCommand UserInterface OSD Key Release Key: ZoomOut\x0D
Layout Set Auto Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:auto\x0D
Layout Set Auto Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:auto\x0D
Layout Set Custom Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:custom\x0D
Layout Set Custom Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:custom\x0D
Layout Set Equal Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:equal\x0D
Layout Set Equal Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:equal\x0D

Global Scripter Module Communication Sheet

Layout Set Overlay Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:overlay\x0D
Layout Set Overlay Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:overlay\x0D
Layout Set Prominent Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:prominent\x0D
Layout Set Prominent Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:prominent\x0D
Layout Set Single Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:single\x0D
Layout Set Single Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:single\x0D
Microphones Mute Off	xCommand Audio Microphones UnMute\x0D
Microphones Mute On	xCommand Audio Microphones Mute\x0D
Output Level 0 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level:0.0\x0D
Output Level 0 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level:0.0\x0D
Output Level 0 Output Line 1	xConfiguration Audio Output Line 1 Level:0.0\x0D
Output Level 0 Output Line 2	xConfiguration Audio Output Line 2 Level:0.0\x0D
Output Level 0 Output Line 3	xConfiguration Audio Output Line 3 Level:0.0\x0D
Output Level 0 Output Line 4	xConfiguration Audio Output Line 4 Level:0.0\x0D
Output Level 0 Output Line 5	xConfiguration Audio Output Line 5 Level:0.0\x0D
Output Level 0 Output Line 6	xConfiguration Audio Output Line 6 Level:0.0\x0D
Output Level -24 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level:-24.0\x0D
Output Level -24 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level:-24.0\x0D
Output Level -24 Output Line 1	xConfiguration Audio Output Line 1 Level:-24.0\x0D
Output Level -24 Output Line 2	xConfiguration Audio Output Line 2 Level:-24.0\x0D
Output Level -24 Output Line 3	xConfiguration Audio Output Line 3 Level:-24.0\x0D
Output Level -24 Output Line 4	xConfiguration Audio Output Line 4 Level:-24.0\x0D
Output Level -24 Output Line 5	xConfiguration Audio Output Line 5 Level:-24.0\x0D
Output Level -24 Output Line 6	xConfiguration Audio Output Line 6 Level:-24.0\x0D
Presentation Start Instance 1	xCommand Presentation Start Instance:1\x0D
Presentation Start Instance 2	xCommand Presentation Start Instance:2\x0D
Presentation Start Instance 3	xCommand Presentation Start Instance:3\x0D
Presentation Start Instance 4	xCommand Presentation Start Instance:4\x0D
Presentation Start Instance 5	xCommand Presentation Start Instance:5\x0D
Presentation Start Instance 6	xCommand Presentation Start Instance:6\x0D
Presentation Stop Instance 1	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Instance 2	xCommand Presentation Stop Instance:2\x0D
Presentation Stop Instance 3	xCommand Presentation Stop Instance:3\x0D
Presentation Stop Instance 4	xCommand Presentation Stop Instance:4\x0D
Presentation Stop Instance 5	xCommand Presentation Stop Instance:5\x0D

**Global Scripter Module
Communication Sheet**

Presentation Stop Instance 6	xCommand Presentation Stop Instance:6\x0D
Preset Recall 1	xCommand RoomPreset Activate PresetId:1\x0D
Preset Recall 10	xCommand RoomPreset Activate PresetId:10\x0D
Preset Recall 11	xCommand RoomPreset Activate PresetId:11\x0D
Preset Recall 12	xCommand RoomPreset Activate PresetId:12\x0D
Preset Recall 13	xCommand RoomPreset Activate PresetId:13\x0D
Preset Recall 14	xCommand RoomPreset Activate PresetId:14\x0D
Preset Recall 15	xCommand RoomPreset Activate PresetId:15\x0D
Preset Recall 2	xCommand RoomPreset Activate PresetId:2\x0D
Preset Recall 3	xCommand RoomPreset Activate PresetId:3\x0D
Preset Recall 4	xCommand RoomPreset Activate PresetId:4\x0D
Preset Recall 5	xCommand RoomPreset Activate PresetId:5\x0D
Preset Recall 6	xCommand RoomPreset Activate PresetId:6\x0D
Preset Recall 7	xCommand RoomPreset Activate PresetId:7\x0D
Preset Recall 8	xCommand RoomPreset Activate PresetId:8\x0D
Preset Recall 9	xCommand RoomPreset Activate PresetId:9\x0D
Preset Save 1	xCommand RoomPreset Store PresetId:1 Type:All\x0D
Preset Save 10	xCommand RoomPreset Store PresetId:10 Type:All\x0D
Preset Save 11	xCommand RoomPreset Store PresetId:11 Type:All\x0D
Preset Save 12	xCommand RoomPreset Store PresetId:12 Type:All\x0D
Preset Save 13	xCommand RoomPreset Store PresetId:13 Type:All\x0D
Preset Save 14	xCommand RoomPreset Store PresetId:14 Type:All\x0D
Preset Save 15	xCommand RoomPreset Store PresetId:15 Type:All\x0D
Preset Save 2	xCommand RoomPreset Store PresetId:2 Type:All\x0D
Preset Save 3	xCommand RoomPreset Store PresetId:3 Type:All\x0D
Preset Save 4	xCommand RoomPreset Store PresetId:4 Type:All\x0D
Preset Save 5	xCommand RoomPreset Store PresetId:5 Type:All\x0D
Preset Save 6	xCommand RoomPreset Store PresetId:6 Type:All\x0D
Preset Save 7	xCommand RoomPreset Store PresetId:7 Type:All\x0D
Preset Save 8	xCommand RoomPreset Store PresetId:8 Type:All\x0D
Preset Save 9	xCommand RoomPreset Store PresetId:9 Type:All\x0D
Reboot None	xCommand SystemUnit Boot Action:Restart\x0D
Self View Default Fullscreen Mode Current	xConfiguration Video Selfview Default FullscreenMode:Current\x0D
Self View Default Fullscreen Mode Off	xConfiguration Video Selfview Default FullscreenMode:Off\x0D
Self View Default Fullscreen Mode On	xConfiguration Video Selfview Default FullscreenMode:On\x0D
Self View Off	xCommand Video Selfview Set Mode:Off\x0D
Self View On	xCommand Video Selfview Set Mode:On\x0D
Self View Position Center Left	xCommand Video Selfview Set PIPPosition:CenterLeft\x0D
Self View Position Center Right	xCommand Video Selfview Set PIPPosition:CenterRight\x0D
Self View Position Lower Left	xCommand Video Selfview Set PIPPosition:LowerLeft\x0D

Self View Position Lower Right	xCommand Video Selfview Set PIPPosition:LowerRight\x0D
Self View Position Upper Center	xCommand Video Selfview Set PIPPosition:UpperCenter\x0D
Self View Position Upper Left	xCommand Video Selfview Set PIPPosition:UpperLeft\x0D
Self View Position Upper Right	xCommand Video Selfview Set PIPPosition:UpperRight\x0D
Sleep Timer 1	xCommand Standby ResetTimer Delay:1\x0D
Sleep Timer 480	xCommand Standby ResetTimer Delay:480\x0D
SpeakerTrack Control Off	xCommand Cameras SpeakerTrack Deactivate\x0D
SpeakerTrack Control On	xCommand Cameras SpeakerTrack Activate\x0D
SpeakerTrack Mode Auto	xConfiguration Cameras SpeakerTrack Mode: Auto\x0D
SpeakerTrack Mode Off	xConfiguration Cameras SpeakerTrack Mode: Off\x0D
Standby Activate	xCommand Standby Activate\x0D
Standby Deactivate	xCommand Standby Deactivate\x0D
Volume 0	xCommand Audio Volume Set Level:0\x0D
Volume 100	xCommand Audio Volume Set Level:100\x0D

Appendix B. Query Commands

Audio Output Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode\x0D
Audio Output Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode\x0D
Audio Output Output Line 1	xConfiguration Audio Output Line 1 Mode\x0D
Audio Output Output Line 2	xConfiguration Audio Output Line 2 Mode\x0D
Audio Output Output Line 3	xConfiguration Audio Output Line 3 Mode\x0D
Audio Output Output Line 4	xConfiguration Audio Output Line 4 Mode\x0D
Audio Output Output Line 5	xConfiguration Audio Output Line 5 Mode\x0D
Audio Output Output Line 6	xConfiguration Audio Output Line 6 Mode\x0D
Auto Answer	xConfiguration Conference AutoAnswer Mode\x0D
Call Setup Mode	xConfiguration H323 CallSetup Mode\x0D
Call Status Call 1	xstatus call\x0D
Call Status Call 2	xstatus call\x0D
Call Status Call 3	xstatus call\x0D
Call Status Call 4	xstatus call\x0D
Call Status Call 5	xstatus call\x0D
Display Mode	xConfiguration Video Monitors\x0D
DNS Domain Name	xStatus Network 1 DNS Domain Name\x0D
DNS Server Address Server 1	xStatus Network 1 DNS Server 1. Address\x0D
DNS Server Address Server 2	xStatus Network 1 DNS Server 2. Address\x0D
DNS Server Address Server 3	xStatus Network 1 DNS Server 3. Address\x0D
Do Not Disturb	xStatus Conference 1 DoNotDisturb\x0D
Far End Control	xConfiguration Conference FarEndControl Mode\x0D
Firmware Version	xStatus SystemUnit Software Version\x0D
Gateway Address	xStatus Network 1 IPv4 Gateway\x0D

Global Scripter Module Communication Sheet

H323 Gatekeeper Address	xStatus H323 Gatekeeper Address\x0D
H323 Gatekeeper Status	xStatus H323 Gatekeeper Status\x0D
Input	xStatus Video Input MainVideoSource\x0D
Input Line Level Input Line 1	xConfiguration Audio Input Line 1 Level\x0D
Input Line Level Input Line 2	xConfiguration Audio Input Line 2 Level\x0D
Input Line Level Input Line 3	xConfiguration Audio Input Line 3 Level\x0D
Input Line Level Input Line 4	xConfiguration Audio Input Line 4 Level\x0D
IP Address	xStatus Network 1 IPv4 Address\x0D
MAC Address	xStatus Network 1 Ethernet MacAddress\x0D
Microphones Mute	xStatus Audio Microphones\x0D
Network Assignment	xConfiguration Network 1 IPv4 Assignment\x0D
Output Level Output HDMI 1	xConfiguration Audio Output HDMI 1 Level\x0D
Output Level Output HDMI 2	xConfiguration Audio Output HDMI 2 Level\x0D
Output Level Output Line 1	xConfiguration Audio Output Line 1 Level\x0D
Output Level Output Line 2	xConfiguration Audio Output Line 2 Level\x0D
Output Level Output Line 3	xConfiguration Audio Output Line 3 Level\x0D
Output Level Output Line 4	xConfiguration Audio Output Line 4 Level\x0D
Output Level Output Line 5	xConfiguration Audio Output Line 5 Level\x0D
Output Level Output Line 6	xConfiguration Audio Output Line 6 Level\x0D
Presentation Instance 1	xStatus Conference Presentation LocalInstance 1 Source\x0D
Presentation Instance 2	xStatus Conference Presentation LocalInstance 2 Source\x0D
Presentation Instance 3	xStatus Conference Presentation LocalInstance 3 Source\x0D
Presentation Instance 4	xStatus Conference Presentation LocalInstance 4 Source\x0D
Presentation Instance 5	xStatus Conference Presentation LocalInstance 5 Source\x0D
Presentation Instance 6	xStatus Conference Presentation LocalInstance 6 Source\x0D
Presentation Mode	xStatus Conference Presentation Mode\x0D
Presentation Sending Mode Status Instance 1	xStatus Conference Presentation LocalInstance 1 SendingMode\x0D
Presentation Sending Mode Status Instance 2	xStatus Conference Presentation LocalInstance 2 SendingMode\x0D
Presentation Sending Mode Status Instance 3	xStatus Conference Presentation LocalInstance 3 SendingMode\x0D
Presentation Sending Mode Status Instance 4	xStatus Conference Presentation LocalInstance 4 SendingMode\x0D
Presentation Sending Mode Status Instance 5	xStatus Conference Presentation LocalInstance 5 SendingMode\x0D
Presentation Sending Mode Status Instance 6	xStatus Conference Presentation LocalInstance 6 SendingMode\x0D
Self View	xStatus Video Selfview Mode\x0D
Self View Default Fullscreen Mode	xConfiguration Video Selfview Default FullscreenMode\x0D
Self View Position	xStatus Video Selfview PIPPosition\x0D

Global Scripter Module Communication Sheet

SIP Registration Status	xStatus SIP Registration 1 Status\x0D
SpeakerTrack Control	xStatus Cameras SpeakerTrack Status\x0D
SpeakerTrack Mode	xConfiguration Cameras SpeakerTrack Mode\x0D
Standby	xStatus Standby State\x0D
Subnet Mask	xStatus Network 1 IPv4 SubnetMask\x0D
Volume	xStatus Audio Volume\x0D