

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: Cisco
Firmware Version: CE9.10
Model(s): SX10 CE9.10.X, SX20 CE9.10.X, SX80 CE9.10.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0002-b003	2.3.1

Version History

Module Version	Date	Notes
1_0_0_0	3/10/2020	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly. devicePassword and deviceUsername default values are Cisco and admin respectively.
Example: `InterfaceName.devicePassword = 'extron'`
- CallHistoryOccurrenceType variable must be set accordingly. Default value is 'Time'.
Example: `InterfaceName.CallHistoryOccurrenceType = 'Time'`
- NumberOfPhonebookSearch variable must be set accordingly. Default value is '5'.
NumberOfPhonebookSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookSearch = '5'`
- NumberOfCallHistory variable must be set accordingly. Default value is '5'. NumberOfCallHistory ranges from 1 to 20.
Example: `InterfaceName.NumberofCallHistory = '5'`
- NumberOfPhonebookFolderSearch variable must be set accordingly. Default value is '5'.
NumberOfPhonebookFolderSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookFolderSearch = '5'`
- PhonebookSearchOffset variable must be set accordingly. Default value is '50'.
PhonebookSearchOffset ranges from 20 to 250.
Example: `InterfaceName.PhonebookSearchOffset = '50'`
- NumberOfPeripheral variable must be set accordingly. Default value is '5'. NumberOfPeripheral ranges from 1 to 10.
Example: `InterfaceName.NumberofPeripheral = '5'`
- Use highest baud rate for better performance when using a serial connection.
- SpeakerTrack: The SpeakerTrack Control command will work only after the SpeakerTrack Mode: Auto command is sent. This command applies only when using a Cisco TelePresence SpeakerTrack 60 camera.

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SX10 CE9.10.X')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SX10  
CE9.10.X')
```

SSHClass

#Password Required

```
InterfaceName = ModuleName.SSHClass('192.168.254.254', 22, Credentials=('admin', 'Cisco'),  
Model='SX10 CE9.10.X')
```

#No Password Required

```
InterfaceName = ModuleName.SSHClass('192.168.254.254', 22, Credentials=('admin', ''),  
Model='SX10 CE9.10.X')
```

Phonebook commands:

- Phonebook Update
 - This is used to trigger the search again.
- Phonebook Search Result

This is where the search results will be saved to when phonebook is searched. The number of results is set by a module parameter Number of Phonebook Search, this is initialized to 5 results by default. Simply drag this onto a Text Feedback object for displaying the search result.
- Phonebook Navigation
 - This command is used for navigating through the search results, it is like scrolling through the results when there are more than the Number of Phonebook Searches that came back from the search.
- Phonebook Search Set
 - When the number selected in this command is triggered, it will copy the name in the corresponding Phonebook Search Result Button over to the Dial String command for dialing.
- Phonebook Folder ID Update
 - This is used to trigger the search again.
- Phonebook Folder ID Search Result
 - This is where the search results will be saved to when Phonebook Folder ID is searched. The number of results is set to 10 results. Simply drag this onto a Text Feedback object for displaying the Phonebook Folder ID Search Result.
- Phonebook Folder ID Navigation
 - This command is used for navigating through the search results, it is like scrolling through the results when there are more than the Number of Phonebook Searches that came back from the search.
- Phonebook Folder ID Search Set
 - When the Folder Name is selected this command is triggered, it will copy the Folder Name in the corresponding Phonebook Folder ID Search Result Button over to the Phonebook Folder ID command.

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioOutput	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# AudioOutput example InterfaceName.Set('AudioOutput', 'On', {'Output': 'Line 1'})			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command CallAuthenticationResponseCommand	Value None		
Qualifier Key 'Call'	Qualifier Value '1' – '5'	Qualifier Value 'Not Specified'	
Qualifier Key 'Participant Role'	Qualifier Value 'Join as host'	Qualifier Value 'Join as panelist'	Qualifier Value 'Join as guest'
Qualifier Key 'Call Authentication Pin'	Qualifier Value 'String'		
# CallAuthenticationResponseCommand example InterfaceName.Set('CallAuthenticationResponseCommand', None, {'Call': '1', 'Participant Role': 'Join as host', 'Call Authentication Pin': '1234'})			
Command CallHistoryNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')			
Command CallHistoryRefresh	Value None		
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)			
Command CallHistorySelect	Value '1' – '20'		
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', '1')			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode example InterfaceName.Set('CallSetupMode', 'Gatekeeper')			
Command CameraFocus	Value 'Near' 'Auto'	Value 'Far'	Value 'Stop'

Global Scripter Module Communication Sheet

Qualifier Key 'Camera' ¹	Qualifier Value '1' – '7'		
# CameraFocus example InterfaceName.Set('CameraFocus', 'Near', {'Camera': '1'})			
Command CameraPresetRecall	Value '1' – '35'		
# CameraPresetRecall example InterfaceName.Set('CameraPresetRecall', '1')			
Command CameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Camera' ¹	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoom example InterfaceName.Set('CameraZoom', 'In', {'Camera': '1', 'Speed': 15})			
Command ConnectedDeviceNavigation	Value 'Up'	Value 'Down'	Value 'Page Up'
	'Page Down'		
# ConnectedDeviceNavigation example InterfaceName.Set('ConnectedDeviceNavigation', 'Up')			
Command ConnectedDeviceUpdate	Value None		
# ConnectedDeviceUpdate example InterfaceName.Set('ConnectedDeviceUpdate', None)			
Command DisplayMode	Value 'Dual'	Value 'Single'	Value 'Dual Presentation Only'
	'Triple Presentation Only'	'Triple'	'Auto'
# DisplayMode example InterfaceName.Set('DisplayMode', 'Dual')			
Command DNSDomainNameCommand	Value 'String'		
# DNSDomainNameCommand example InterfaceName.Set('DNSDomainNameCommand', 'String')			
Command DNSServerAddressCommand	Value 'String'		
# DNSServerAddressCommand example InterfaceName.Set('DNSServerAddressCommand', 'String')			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Active')			
Command DTMF	Value '0' – '9'	Value '*'	Value '#'
# DTMF example InterfaceName.Set('DTMF', '0')			

Global Scriptor Module Communication Sheet

Command FarEndCameraPanTilt	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
# FarEndCameraPanTilt example InterfaceName.Set('FarEndCameraPanTilt', 'Up')			
Command FarEndCameraPresetRecall	Value '1' – '15'		
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')			
Command FarEndCameraSource	Value '0' – '15'		
# FarEndCameraSource example InterfaceName.Set('FarEndCameraSource', '0')			
Command FarEndCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
# FarEndCameraZoom example InterfaceName.Set('FarEndCameraZoom', 'In')			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Set('FarEndControl', 'On')			
Command H323GatekeeperAddressCommand	Value 'String'		
# H323GatekeeperAddressCommand example InterfaceName.Set('H323GatekeeperAddressCommand', 'String')			
Command H323AliasE164Command	Value 'String'		
# H323AliasE164Command example InterfaceName.Set('H323AliasE164Command', 'String')			
Command H323AliasIDCommand	Value 'String'		
# H323AliasIDCommand example InterfaceName.Set('H323AliasIDCommand', 'String')			
Command H323ProfileAuthenticationLoginNameCommand	Value 'String'		
# H323ProfileAuthenticationLoginNameCommand example InterfaceName.Set('H323ProfileAuthenticationLoginNameCommand', 'String')			
Command H323ProfileAuthenticationPasswordCommand	Value 'String'		
# H323ProfileAuthenticationPasswordCommand example InterfaceName.Set('H323ProfileAuthenticationPasswordCommand', 'String')			

Global Scriptor Module Communication Sheet

Command Hook	Value 'Dial' 'Disconnect All' 'Resume 1' 'Hold 2' 'Join 3' 'Disconnect 3' 'Resume 4' 'Hold 5'	Value 'Accept' 'Join 1' 'Disconnect 1' 'Resume 2' 'Hold 3' 'Join 4' 'Disconnect 4' 'Resume 5'	Value 'Reject' 'Hold 1' 'Join 2' 'Disconnect 2' 'Resume 3' 'Hold 4' 'Join 5' 'Disconnect 5'
Qualifier Key 'Number'	Qualifier Value 'String'		
Qualifier Key 'Protocol'	Qualifier Value 'Auto' 'H320'	Qualifier Value 'SIP'	Qualifier Value 'H323'
# Hook example InterfaceName.Set('Hook', 'Dial', {'Protocol': 'Auto', 'Number': '1234'})			
Command Input	Value '1' – '6'		
# Input example InterfaceName.Set('Input', '1')			
Command InputLineLevel	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Line 1' 'Line 4'	Qualifier Value 'Line 2'	Qualifier Value 'Line 3'
# InputLineLevel example InterfaceName.Set('InputLineLevel', 24, {'Input': 'Line 1'})			
Command InputMicLevel	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' 'Microphone 4' 'Microphone 7'	Qualifier Value 'Microphone 2' 'Microphone 5' 'Microphone 8'	Qualifier Value 'Microphone 3' 'Microphone 6'
# InputMicLevel example InterfaceName.Set('InputMicLevel', 24, {'Input': 'Microphone 1'})			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' 'Microphone 4' 'Microphone 7' 'Line 2'	Qualifier Value 'Microphone 2' 'Microphone 5' 'Microphone 8' 'Line 3'	Qualifier Value 'Microphone 3' 'Microphone 6' 'Line 1' 'Line 4'
# InputMute example InterfaceName.Set('InputMute', 'On', {'Input': 'Microphone 1'})			
Command IPv4AddressCommand	Value 'String'		
# IPv4AddressCommand example InterfaceName.Set('IPv4AddressCommand', 'String')			
Command IPv4GatewayCommand	Value 'String'		
# IPv4GatewayCommand example InterfaceName.Set('IPv4GatewayCommand', 'String')			

Command IPv4SubnetMaskCommand	Value 'String'		
# IPv4SubnetMaskCommand example InterfaceName.Set('IPv4SubnetMaskCommand', 'String')			
Command IREmulation ²	Value '0' – '9' 'Down' 'F3' 'Grab' 'Left' 'Ok' 'Right' 'Aux' 'Pc' 'Up' 'Zoom In' '+'	Value 'C' 'F1' 'F4' 'Home' 'Mute' 'PhoneBook' 'Selfview' 'Camera' 'Vcr' 'Volume Down' 'Zoom Out' '_'	Value 'Call' 'F2' 'F5' 'Layout' 'Mute Mic' 'Presentation' 'Square' 'Doc Cam' 'Star' 'Volume Up' 'Disconnect'
Qualifier Key 'Key'	Qualifier Value 'Click'	Qualifier Value 'Press'	Qualifier Value 'Release'
# IREmulation example InterfaceName.Set('IREmulation', '0', {'Key': 'Click'})			
Command LayoutSet	Value 'Auto' 'Overlay'	Value 'Custom' 'Prominent'	Value 'Equal' 'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command Macro	Value 'Activate'	Value 'Deactivate'	
Qualifier Key 'Name'	Qualifier Value 'String'		
# Macro example InterfaceName.Set('Macro', 'Activate', {'Name': 'String'})			
Command MacroAutoStart	Value 'On'	Value 'Off'	
# MacroAutoStart example InterfaceName.Set('MacroAutoStart', 'On')			
Command MacroMode	Value 'On'	Value 'Off'	
# MacroMode example InterfaceName.Set('MacroMode', 'On')			
Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute example InterfaceName.Set('MicrophonesMute', 'On')			

Global Scriptor Module Communication Sheet

Command OutputLevel	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# OutputLevel example InterfaceName.Set('OutputLevel', 0, {'Output': 'Line 1'})			
Command PeopleCountOutOfCall	Value 'On'	Value 'Off'	
# PeopleCountOutOfCall example InterfaceName.Set('PeopleCountOutOfCall', 'On')			
Command PeoplePresenceDetector	Value 'On'	Value 'Off'	
# PeoplePresenceDetector example InterfaceName.Set('PeoplePresenceDetector', 'On')			
Command PhonebookFolderIDNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up')			
Command PhonebookFolderIDSearchSet	Value 1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command PhonebookFolderIDUpdate	Value None		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Corporate'})			
Command PhonebookNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up')			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Phonebook Type': 'Corporate', 'Contact': '', 'FolderID': ''})			

Global Scriptor Module Communication Sheet

Command Presentation	Value 'Start'	Value 'Stop'	
Qualifier Key 'Instance'	Qualifier Value '1' – '6'	Qualifier Value 'Not Specified'	Qualifier Value 'New'
Qualifier Key 'Layout'	Qualifier Value 'Not Specified'	Qualifier Value 'Equal'	Qualifier Value 'Prominent'
Qualifier Key 'Sending Mode'	Qualifier Value 'Not Specified'	Qualifier Value 'Local Only'	Qualifier Value 'Local and Remote'
Qualifier Key 'Video Input Source'	Qualifier Value 'Not Specified' 'Presentation Source 3' 'Connector Id 2' 'Connector Id 5'	Qualifier Value 'Presentation Source 1' 'Presentation Source 4' 'Connector Id 3'	Qualifier Value 'Presentation Source 2' 'Connector Id 1' 'Connector Id 4'
# Presentation example InterfaceName.Set('Presentation', 'Start', {'Instance': '1', 'Layout': 'Not Specified', 'Sending Mode': 'Not Specified', 'Video Input Source': 'Not Specified'})			
Command PresentationExternalSourceSelectCommand	Value None		
# PresentationExternalSourceSelectCommand example InterfaceName.Set('PresentationExternalSourceSelectCommand', None)			
Command PresetRecall	Value '1' – '15'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1')			
Command PresetSave	Value '1' – '15'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command Reboot	Value None		
# Reboot example InterfaceName.Set('Reboot', None)			
Command RestartMacros	Value None		
# RestartMacros example InterfaceName.Set('RestartMacros', None)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')			
Command SelfViewDefaultFullscreen Mode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Set('SelfViewDefaultFullscreenMode', 'On')			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')			

Command SIPURICommand	Value None		
# SIPURICommand example InterfaceName.Set('SIPURICommand', None)			
Command SleepTimer	Value 1 – 480		
# SleepTimer example InterfaceName.Set('SleepTimer', 480)			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
# SpeakerTrackControl example InterfaceName.Set('SpeakerTrackControl', 'On')			
Command SpeakerTrackMode	Value 'Auto'	Value 'Off'	
# SpeakerTrackMode example InterfaceName.Set('SpeakerTrackMode', 'Auto')			
Command Standby	Value 'Activate'	Value 'Deactivate'	Value 'Half Wake'
# Standby example InterfaceName.Set('Standby', 'Activate')			
Command SystemUnitNameCommand	Value None		
# SystemUnitNameCommand example InterfaceName.Set('SystemUnitNameCommand', None)			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

¹ Not Supported on models SX10, SX20² Not Supported on model SX80

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, CallHistory, ConnectedDeviceMAC, ConnectedDeviceName, ConnectedDeviceType, PhonebookFolderIDSearchResult, and PhonebookSearchResult do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioOutput	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# AudioOutput example InterfaceName.Update('AudioOutput', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('AudioOutput', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('AudioOutput', None, FeedbackHandler)			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)			
Command CallHistory	Value 'String'		
Qualifier Key 'Button'	Qualifier Value '1' – '20'		
Qualifier Key 'Detail Type'	Qualifier Value 'Display Name' 'Occurrence Count'	Qualifier Value 'Callback Number' 'Occurrence Type'	Qualifier Value 'Last Occurrence Time'
# CallHistory example Value = InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode example InterfaceName.Update('CallSetupMode') Value = InterfaceName.ReadStatus('CallSetupMode') InterfaceName.SubscribeStatus('CallSetupMode', None, FeedbackHandler)			

Global Scriptor Module Communication Sheet

Command CallStatus	Value 'Dialing' 'Ringing' 'On Hold' 'Remote Preserved'	Value 'Connecting' 'Idle' 'Early Media'	Value 'Connected' 'Disconnecting' 'Preserved'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatus example InterfaceName.Update('CallStatus', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)			
Command CallStatusDeviceType	Value 'Endpoint'	Value 'MCU'	Value 'Unknown'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatusDeviceType example InterfaceName.Update('CallStatusDeviceType', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallStatusDeviceType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusDeviceType', None, FeedbackHandler)			
Command CallStatusType	Value 'Video' 'Forward All Call'	Value 'Audio' 'Unknown'	Value 'Audio Can Escalate'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatusType example InterfaceName.Update('CallStatusType', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallStatusType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)			
Command ConnectedDeviceMAC	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# ConnectedDeviceMAC example Value = InterfaceName.ReadStatus('ConnectedDeviceMAC', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceMAC', None, FeedbackHandler)			
Command ConnectedDeviceName	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# ConnectedDeviceName example Value = InterfaceName.ReadStatus('ConnectedDeviceName', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceName', None, FeedbackHandler)			
Command ConnectedDeviceType	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# ConnectedDeviceType example Value = InterfaceName.ReadStatus('ConnectedDeviceType', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceType', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command DisplayMode	Value 'Dual' 'Triple Presentation Only'	Value 'Single' 'Triple'	Value 'Dual Presentation Only' 'Auto'
# DisplayMode example InterfaceName.Update('DisplayMode') Value = InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)			
Command DisplayName	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# DisplayName example InterfaceName.Update('DisplayName', {'Call': '1'}) Value = InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)			
Command DNSDomainName	Value 'String'		
# DNSDomainName example InterfaceName.Update('DNSDomainName') Value = InterfaceName.ReadStatus('DNSDomainName') InterfaceName.SubscribeStatus('DNSDomainName', None, FeedbackHandler)			
Command DNSServerAddress	Value 'String'		
Qualifier Key 'Server'	Qualifier Value '1' – '5'		
# DNSServerAddress example InterfaceName.Update('DNSServerAddress', {'Server': '1'}) Value = InterfaceName.ReadStatus('DNSServerAddress', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddress', None, FeedbackHandler)			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Update('DoNotDisturb') Value = InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Update('FarEndControl') Value = InterfaceName.ReadStatus('FarEndControl') InterfaceName.SubscribeStatus('FarEndControl', None, FeedbackHandler)			
Command FirmwareVersion	Value 'String'		
# FirmwareVersion example InterfaceName.Update('FirmwareVersion') Value = InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)			
Command GatewayAddress	Value 'String'		
# GatewayAddress example InterfaceName.Update('GatewayAddress') Value = InterfaceName.ReadStatus('GatewayAddress') InterfaceName.SubscribeStatus('GatewayAddress', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command	Value		
H323GatekeeperAddress	'String'		
# H323GatekeeperAddress example InterfaceName.Update('H323GatekeeperAddress') Value = InterfaceName.ReadStatus('H323GatekeeperAddress') InterfaceName.SubscribeStatus('H323GatekeeperAddress', None, FeedbackHandler)			
Command	Value	Value	Value
H323GatekeeperStatus	'Required'	'Discovering'	'Discovered'
	'Authenticating'	'Authenticated'	'Registering'
	'Registered'	'Inactive'	'Rejected'
# H323GatekeeperStatus example InterfaceName.Update('H323GatekeeperStatus') Value = InterfaceName.ReadStatus('H323GatekeeperStatus') InterfaceName.SubscribeStatus('H323GatekeeperStatus', None, FeedbackHandler)			
Command	Value		
H323AliasIDStatus	'String'		
# H323AliasIDStatus example InterfaceName.Update('H323AliasIDStatus') Value = InterfaceName.ReadStatus('H323AliasIDStatus') InterfaceName.SubscribeStatus('H323AliasIDStatus', None, FeedbackHandler)			
Command	Value	Value	
Input	'1' – '6'	'Composed'	
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value		
InputLineLevel	0 to 24 in steps of 1		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Input'	'Line 1'	'Line 2'	'Line 3'
	'Line 4'		
# InputLineLevel example InterfaceName.Update('InputLineLevel', {'Input': 'Line 1'}) Value = InterfaceName.ReadStatus('InputLineLevel', {'Input': 'Line 1'}) InterfaceName.SubscribeStatus('InputLineLevel', None, FeedbackHandler)			
Command	Value		
InputMicLevel	0 to 24 in steps of 1		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Input'	'Microphone 1'	'Microphone 2'	'Microphone 3'
	'Microphone 4'	'Microphone 5'	'Microphone 6'
	'Microphone 7'	'Microphone 8'	
# InputMicLevel example InterfaceName.Update('InputMicLevel', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMicLevel', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMicLevel', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' 'Microphone 4' 'Microphone 7' 'Line 2'	Qualifier Value 'Microphone 2' 'Microphone 5' 'Microphone 8' 'Line 3'	Qualifier Value 'Microphone 3' 'Microphone 6' 'Line 1' 'Line 4'
<pre># InputMute example InterfaceName.Update('InputMute', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMute', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMute', None, FeedbackHandler)</pre>			
Command InputSignal	Value 'True'	Value 'False'	Value 'Unknown'
Qualifier Key 'Input'	Qualifier Value '1' – '5'		
<pre># InputSignal example InterfaceName.Update('InputSignal', {'Input': '1'}) Value = InterfaceName.ReadStatus('InputSignal', {'Input': '1'}) InterfaceName.SubscribeStatus('InputSignal', None, FeedbackHandler)</pre>			
Command IPAddress	Value 'String'		
<pre># IPAddress example InterfaceName.Update('IPAddress') Value = InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)</pre>			
Command LayoutSet	Value 'Auto' 'Overlay'	Value 'Custom' 'Prominent'	Value 'Equal' 'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
<pre># LayoutSet example InterfaceName.Update('LayoutSet', {'Target': 'Local'}) Value = InterfaceName.ReadStatus('LayoutSet', {'Target': 'Local'}) InterfaceName.SubscribeStatus('LayoutSet', None, FeedbackHandler)</pre>			
Command MACAddress	Value 'String'		
<pre># MACAddress example InterfaceName.Update('MACAddress') Value = InterfaceName.ReadStatus('MACAddress') InterfaceName.SubscribeStatus('MACAddress', None, FeedbackHandler)</pre>			
Command MacroAutoStart	Value 'On'	Value 'Off'	
<pre># MacroAutoStart example InterfaceName.Update('MacroAutoStart') Value = InterfaceName.ReadStatus('MacroAutoStart') InterfaceName.SubscribeStatus('MacroAutoStart', None, FeedbackHandler)</pre>			
Command MacroMode	Value 'On'	Value 'Off'	
<pre># MacroMode example InterfaceName.Update('MacroMode') Value = InterfaceName.ReadStatus('MacroMode') InterfaceName.SubscribeStatus('MacroMode', None, FeedbackHandler)</pre>			

Global Scriptor Module Communication Sheet

Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute example InterfaceName.Update('MicrophonesMute') Value = InterfaceName.ReadStatus('MicrophonesMute') InterfaceName.SubscribeStatus('MicrophonesMute', None, FeedbackHandler)			
Command NetworkAssignment	Value 'Static'	Value 'DHCP'	
# NetworkAssignment example InterfaceName.Update('NetworkAssignment') Value = InterfaceName.ReadStatus('NetworkAssignment') InterfaceName.SubscribeStatus('NetworkAssignment', None, FeedbackHandler)			
Command OutputLevel	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# OutputLevel example InterfaceName.Update('OutputLevel', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('OutputLevel', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('OutputLevel', None, FeedbackHandler)			
Command PeopleCountCurrent	Value 'String'		
# PeopleCountCurrent example InterfaceName.Update('PeopleCountCurrent') Value = InterfaceName.ReadStatus('PeopleCountCurrent') InterfaceName.SubscribeStatus('PeopleCountCurrent', None, FeedbackHandler)			
Command PeopleCountOutOfCall	Value 'On'	Value 'Off'	
# PeopleCountOutOfCall example InterfaceName.Update('PeopleCountOutOfCall') Value = InterfaceName.ReadStatus('PeopleCountOutOfCall') InterfaceName.SubscribeStatus('PeopleCountOutOfCall', None, FeedbackHandler)			
Command PeoplePresence	Value 'Yes'	Value 'No'	Value 'Unknown'
# PeoplePresence example InterfaceName.Update('PeoplePresence') Value = InterfaceName.ReadStatus('PeoplePresence') InterfaceName.SubscribeStatus('PeoplePresence', None, FeedbackHandler)			
Command PeoplePresenceDetector	Value 'On'	Value 'Off'	
# PeoplePresenceDetector example InterfaceName.Update('PeoplePresenceDetector') Value = InterfaceName.ReadStatus('PeoplePresenceDetector') InterfaceName.SubscribeStatus('PeoplePresenceDetector', None, FeedbackHandler)			
Command PhonebookFolderIDSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# PhonebookFolderIDSearchResult example Value = InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command	Value		
PhonebookSearchResult	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 to 10 in steps of 1		
# PhonebookSearchResult example Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)			
Command	Value	Value	Value
PresentationModeStatus	'Off'	'Sending'	'Receiving'
	'On'		
# PresentationModeStatus example InterfaceName.Update('PresentationModeStatus') Value = InterfaceName.ReadStatus('PresentationModeStatus') InterfaceName.SubscribeStatus('PresentationModeStatus', None, FeedbackHandler)			
Command	Value	Value	Value
PresentationSendingModeStatus	'Local and Remote'	'Local Only'	'Off'
Qualifier Key	Qualifier Value		
'Instance'	'1' – '6'		
# PresentationSendingModeStatus example InterfaceName.Update('PresentationSendingModeStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSendingModeStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSendingModeStatus', None, FeedbackHandler)			
Command	Value	Value	
PresentationSourceStatus	'1' – '4'	'Off'	
Qualifier Key	Qualifier Value		
'Instance'	'1' – '6'		
# PresentationSourceStatus example InterfaceName.Update('PresentationSourceStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSourceStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSourceStatus', None, FeedbackHandler)			
Command	Value		
RemoteNumber	'String'		
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
# RemoteNumber example InterfaceName.Update('RemoteNumber', {'Call': '1'}) Value = InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'}) InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)			
Command	Value	Value	
SelfView	'On'	'Off'	
# SelfView example InterfaceName.Update('SelfView') Value = InterfaceName.ReadStatus('SelfView') InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)			
Command	Value	Value	Value
SelfViewDefaultFullscreenMode	'On'	'Off'	'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Update('SelfViewDefaultFullscreenMode') Value = InterfaceName.ReadStatus('SelfViewDefaultFullscreenMode') InterfaceName.SubscribeStatus('SelfViewDefaultFullscreenMode', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
<pre># SelfViewPosition example InterfaceName.Update('SelfViewPosition') Value = InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)</pre>			
Command SIPRegistrationStatus	Value 'Deregistering' 'Registered'	Value 'Failed' 'Registering'	Value 'Inactive'
<pre># SIPRegistrationStatus example InterfaceName.Update('SIPRegistrationStatus') Value = InterfaceName.ReadStatus('SIPRegistrationStatus') InterfaceName.SubscribeStatus('SIPRegistrationStatus', None, FeedbackHandler)</pre>			
Command SIPURISatus	Value 'String'		
<pre># SIPURISatus example InterfaceName.Update('SIPURISatus') Value = InterfaceName.ReadStatus('SIPURISatus') InterfaceName.SubscribeStatus('SIPURISatus', None, FeedbackHandler)</pre>			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
<pre># SpeakerTrackControl example InterfaceName.Update('SpeakerTrackControl') Value = InterfaceName.ReadStatus('SpeakerTrackControl') InterfaceName.SubscribeStatus('SpeakerTrackControl', None, FeedbackHandler)</pre>			
Command SpeakerTrackMode	Value 'Auto'	Value 'Off'	
<pre># SpeakerTrackMode example InterfaceName.Update('SpeakerTrackMode') Value = InterfaceName.ReadStatus('SpeakerTrackMode') InterfaceName.SubscribeStatus('SpeakerTrackMode', None, FeedbackHandler)</pre>			
Command Standby	Value 'Activate' 'Half Wake'	Value 'Deactivate'	Value 'Entering Standby'
<pre># Standby example InterfaceName.Update('Standby') Value = InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)</pre>			
Command SubnetMask	Value 'String'		
<pre># SubnetMask example InterfaceName.Update('SubnetMask') Value = InterfaceName.ReadStatus('SubnetMask') InterfaceName.SubscribeStatus('SubnetMask', None, FeedbackHandler)</pre>			
Command SystemUnitNameStatus	Value 'String'		
<pre># SystemUnitNameStatus example InterfaceName.Update('SystemUnitNameStatus') Value = InterfaceName.ReadStatus('SystemUnitNameStatus') InterfaceName.SubscribeStatus('SystemUnitNameStatus', None, FeedbackHandler)</pre>			

Command	Value
Volume	0 to 100 in steps of 1
<pre># Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>	

Cable and Adapter Requirements

SX10: Contact manufacturer for cable requirements

SX20: Captive Screw to USB Type-A RS-232 Serial Cable adapter

SX80: Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

For the module to work, the "Require passphrase change on next user sign in" must be unchecked within the devices embedded webpage. checkbox under Security → Users → <USERNAME>.

Serial communication

Port Type: RS-232

Baud Rate: 115200

Data Bits: 8


Parity: None

Stop Bits: One

Flow Control: None


Pin Assignments Diagram

SX10, SX20:

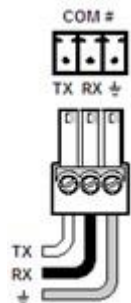


Please contact the manufacturer for the pin assignments diagram and connector type.

SX80:

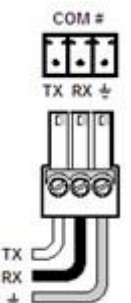

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

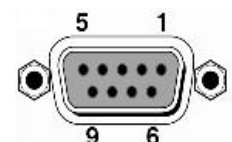

RS232 DB9, Female
Video Conference

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface.

Port Type:	Ethernet
Default Port:	22
Logon Credentials Supported:	Yes
Default Username:	admin
Default Password:	Cisco
Multi-Connection	Yes
Capabilities:	
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

- For the module to work, the “Require passphrase change on next user sign in” must be unchecked within the devices embedded webpage checkbox under Security → Users → <USERNAME>.
- Password is required for SSH communication to work.
- SSH mode must be set to ‘On’ by an admin to have open communication with the module.

Appendix A. Set Commands

Audio Output Off Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:Off\x0D
Audio Output Off Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:Off\x0D
Audio Output Off Output Line 1	xConfiguration Audio Output Line 1 Mode:Off\x0D
Audio Output Off Output Line 2	xConfiguration Audio Output Line 2 Mode:Off\x0D
Audio Output Off Output Line 3	xConfiguration Audio Output Line 3 Mode:Off\x0D
Audio Output Off Output Line 4	xConfiguration Audio Output Line 4 Mode:Off\x0D
Audio Output Off Output Line 5	xConfiguration Audio Output Line 5 Mode:Off\x0D
Audio Output Off Output Line 6	xConfiguration Audio Output Line 6 Mode:Off\x0D
Audio Output On Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:On\x0D
Audio Output On Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:On\x0D
Audio Output On Output Line 1	xConfiguration Audio Output Line 1 Mode:On\x0D
Audio Output On Output Line 2	xConfiguration Audio Output Line 2 Mode:On\x0D
Audio Output On Output Line 3	xConfiguration Audio Output Line 3 Mode:On\x0D
Audio Output On Output Line 4	xConfiguration Audio Output Line 4 Mode:On\x0D
Audio Output On Output Line 5	xConfiguration Audio Output Line 5 Mode:On\x0D
Audio Output On Output Line 6	xConfiguration Audio Output Line 6 Mode:On\x0D
Auto Answer Off	xConfiguration Conference AutoAnswer Mode: Off\x0D
Auto Answer On	xConfiguration Conference AutoAnswer Mode: On\x0D
Call Authentication Response Command None Call Not Specified Participant Role Join as guest	xCommand Conference Call AuthenticationResponse ParticipantRole: Guest Pin: String\x0D
Call Authentication Response Command None Call Not Specified Participant Role Join as host	xCommand Conference Call AuthenticationResponse ParticipantRole: Host Pin: String\x0D
Call Authentication Response Command None Call Not Specified Participant Role Join as panelist	xCommand Conference Call AuthenticationResponse ParticipantRole: Panelist Pin: String\x0D
Call Setup Mode Direct	xConfiguration H323 CallSetup Mode: Direct\x0D
Call Setup Mode Gatekeeper	xConfiguration H323 CallSetup Mode: Gatekeeper\x0D
Camera Focus Auto Camera 1	xCommand Camera TriggerAutoFocus CameraId:1\x0D
Camera Focus Auto Camera 7	xCommand Camera TriggerAutoFocus CameraId:7\x0D
Camera Focus Far Camera 1	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 7	xCommand Camera Ramp CameraId:7 Focus:Far\x0D
Camera Focus Near Camera 1	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 7	xCommand Camera Ramp CameraId:7 Focus:Near\x0D
Camera Focus Stop Camera 1	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 7	xCommand Camera Ramp CameraId:7 Focus:Stop\x0D
Camera Pan Left Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Left Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:15\x0D
Camera Pan Right Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D

Global Scriptor Module Communication Sheet

Camera Pan Right Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Right Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:15\x0D
Camera Pan Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Preset Recall 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset Recall 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Save 1 Camera 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 7	xCommand Camera Preset Store PresetId:1 CameraId:7\x0D
Camera Preset Save 35 Camera 1	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 7	xCommand Camera Preset Store PresetId:35 CameraId:7\x0D
Camera Tilt Down Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Camera 7 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 7 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Up Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Camera 7 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 7 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Zoom In Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Camera 7 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 7 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom Out Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Camera 7 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 7 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D

Global Scriptor Module Communication Sheet

Camera Zoom Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Display Mode Auto	xConfiguration Video Monitors: Auto\x0D
Display Mode Dual	xConfiguration Video Monitors: Dual\x0D
Display Mode Dual Presentation Only	xConfiguration Video Monitors: DualPresentationOnly\x0D
Display Mode Single	xConfiguration Video Monitors: Single\x0D
Display Mode Triple	xConfiguration Video Monitors: Triple\x0D
Display Mode Triple Presentation Only	xConfiguration Video Monitors: TriplePresentationOnly\x0D
DNS Domain Name Command None	xConfiguration Network 1 DNS Domain Name: String\x0D
DNS Server Address Command None	xConfiguration Network 1 DNS Server 1 Address: String\x0D
Do Not Disturb Active	xCommand Conference DoNotDisturb Activate\x0D
Do Not Disturb Inactive	xCommand Conference DoNotDisturb Deactivate\x0D
DTMF #	xCommand Call DTMFSend DTMFString:#\x0D
DTMF *	xCommand Call DTMFSend DTMFString:*\x0D
DTMF 0	xCommand Call DTMFSend DTMFString:0\x0D
DTMF 9	xCommand Call DTMFSend DTMFString:9\x0D
Far End Camera Pan/Tilt Down	xCommand Call FarEndControl Camera Move Value:Down\x0D
Far End Camera Pan/Tilt Left	xCommand Call FarEndControl Camera Move Value:Left\x0D
Far End Camera Pan/Tilt Right	xCommand Call FarEndControl Camera Move Value:Right\x0D
Far End Camera Pan/Tilt Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Camera Pan/Tilt Up	xCommand Call FarEndControl Camera Move Value:Up\x0D
Far End Camera Preset Recall 1	xCommand Call FarEndControl RoomPreset Activate:1\x0D
Far End Camera Preset Recall 15	xCommand Call FarEndControl RoomPreset Activate:15\x0D
Far End Camera Source 0	xCommand Call FarEndControl Source Select SourceId:0\x0D
Far End Camera Source 15	xCommand Call FarEndControl Source Select SourceId:15\x0D
Far End Camera Zoom In	xCommand Call FarEndControl Camera Move Value:ZoomIn\x0D
Far End Camera Zoom Out	xCommand Call FarEndControl Camera Move Value:ZoomOut\x0D
Far End Control Off	xConfiguration Conference FarEndControl Mode: Off\x0D
Far End Control On	xConfiguration Conference FarEndControl Mode: On\x0D
H323 Gatekeeper Address Command None	xConfiguration H323 Gatekeeper Address: String\x0D
H323Alias E164 Command None	xConfiguration H323 H323Alias E164: String\x0D
H323Profile Authentication LoginName Command None	H323 Authentication LoginName: String\x0D
H323Profile Authentication Password Command	xConfiguration H323 Authentication Password:

Global Scriptor Module Communication Sheet

None	String\x0D
Hook Accept Protocol Auto	xCommand Call Accept\x0D
Hook Accept Protocol H320	xCommand Call Accept\x0D
Hook Accept Protocol H323	xCommand Call Accept\x0D
Hook Accept Protocol SIP	xCommand Call Accept\x0D
Hook Disconnect All Protocol Auto	xCommand Call Disconnect \x0D
Hook Disconnect All Protocol H320	xCommand Call Disconnect \x0D
Hook Disconnect All Protocol H323	xCommand Call Disconnect \x0D
Hook Disconnect All Protocol SIP	xCommand Call Disconnect \x0D
Hook Reject Protocol Auto	xCommand Call Reject\x0D
Hook Reject Protocol H320	xCommand Call Reject\x0D
Hook Reject Protocol H323	xCommand Call Reject\x0D
Hook Reject Protocol SIP	xCommand Call Reject\x0D
Input 1	xCommand Video Input SetMainVideoSource ConnectorId: 1\x0D
Input 3	xCommand Video Input SetMainVideoSource ConnectorId: 3\x0D
Input 6	xCommand Video Input SetMainVideoSource ConnectorId: 6\x0D
Input Line Level 0 Input Line 1	xConfiguration Audio Input Line 1 Level:0\x0D
Input Line Level 0 Input Line 2	xConfiguration Audio Input Line 2 Level:0\x0D
Input Line Level 0 Input Line 3	xConfiguration Audio Input Line 3 Level:0\x0D
Input Line Level 0 Input Line 4	xConfiguration Audio Input Line 4 Level:0\x0D
Input Line Level 24 Input Line 1	xConfiguration Audio Input Line 1 Level:24\x0D
Input Line Level 24 Input Line 2	xConfiguration Audio Input Line 2 Level:24\x0D
Input Line Level 24 Input Line 3	xConfiguration Audio Input Line 3 Level:24\x0D
Input Line Level 24 Input Line 4	xConfiguration Audio Input Line 4 Level:24\x0D
Input Mic Level 0 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:0\x0D
Input Mic Level 0 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:0\x0D
Input Mic Level 0 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:0\x0D
Input Mic Level 0 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:0\x0D
Input Mic Level 0 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:0\x0D
Input Mic Level 0 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:0\x0D
Input Mic Level 0 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:0\x0D
Input Mic Level 0 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:0\x0D
Input Mic Level 24 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:24\x0D
Input Mic Level 24 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:24\x0D
Input Mic Level 70 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:70\x0D
Input Mic Level 70 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:70\x0D
Input Mic Level 70 Input Microphone 3	xConfiguration Audio Input Microphone 3

Global Scriptor Module Communication Sheet

	Level:70\x0D
Input Mic Level 70 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:70\x0D
Input Mic Level 70 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:70\x0D
Input Mic Level 70 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:70\x0D
Input Mic Level 70 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:70\x0D
Input Mic Level 70 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:70\x0D
Input Mute Off Input Line 1	xConfiguration Audio Input Line 1 Mode:Off\x0D
Input Mute Off Input Line 2	xConfiguration Audio Input Line 2 Mode:Off\x0D
Input Mute Off Input Line 3	xConfiguration Audio Input Line 3 Mode:Off\x0D
Input Mute Off Input Line 4	xConfiguration Audio Input Line 4 Mode:Off\x0D
Input Mute Off Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:Off\x0D
Input Mute Off Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:Off\x0D
Input Mute Off Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:Off\x0D
Input Mute Off Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:Off\x0D
Input Mute Off Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:Off\x0D
Input Mute Off Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:Off\x0D
Input Mute Off Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:Off\x0D
Input Mute Off Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:Off\x0D
Input Mute On Input Line 1	xConfiguration Audio Input Line 1 Mode:On\x0D
Input Mute On Input Line 2	xConfiguration Audio Input Line 2 Mode:On\x0D
Input Mute On Input Line 3	xConfiguration Audio Input Line 3 Mode:On\x0D
Input Mute On Input Line 4	xConfiguration Audio Input Line 4 Mode:On\x0D
Input Mute On Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:On\x0D
Input Mute On Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:On\x0D
Input Mute On Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:On\x0D
Input Mute On Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:On\x0D
Input Mute On Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:On\x0D
Input Mute On Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:On\x0D
Input Mute On Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:On\x0D
Input Mute On Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:On\x0D
IPv4 Address Command None	xConfiguration Network 1 IPv4 Address: String\x0D
IPv4 Gateway Command None	xConfiguration Network 1 IPv4 Gateway: String\x0D
IPv4 SubnetMask Command None	xConfiguration Network 1 IPv4 SubnetMask:

Global Scriptor Module Communication Sheet

	String\x0D
IR Emulation - Key Click	xCommand UserInterface OSD Key Click Key: -\x0D
IR Emulation - Key Press	xCommand UserInterface OSD Key Press Key: -\x0D
IR Emulation - Key Release	xCommand UserInterface OSD Key Release Key: - \x0D
IR Emulation + Key Click	xCommand UserInterface OSD Key Click Key: +\x0D
IR Emulation + Key Press	xCommand UserInterface OSD Key Press Key: +\x0D
IR Emulation + Key Release	xCommand UserInterface OSD Key Release Key: +\x0D
IR Emulation 0 Key Click	xCommand UserInterface OSD Key Click Key: 0\x0D
IR Emulation 0 Key Press	xCommand UserInterface OSD Key Press Key: 0\x0D
IR Emulation 0 Key Release	xCommand UserInterface OSD Key Release Key: 0\x0D
IR Emulation 9 Key Click	xCommand UserInterface OSD Key Click Key: 9\x0D
IR Emulation 9 Key Press	xCommand UserInterface OSD Key Press Key: 9\x0D
IR Emulation 9 Key Release	xCommand UserInterface OSD Key Release Key: 9\x0D
IR Emulation Aux Key Click	xCommand UserInterface OSD Key Click Key: SrcAux\x0D
IR Emulation Aux Key Press	xCommand UserInterface OSD Key Press Key: SrcAux\x0D
IR Emulation Aux Key Release	xCommand UserInterface OSD Key Release Key: SrcAux\x0D
IR Emulation C Key Click	xCommand UserInterface OSD Key Click Key: C\x0D
IR Emulation C Key Press	xCommand UserInterface OSD Key Press Key: C\x0D
IR Emulation C Key Release	xCommand UserInterface OSD Key Release Key: C\x0D
IR Emulation Call Key Click	xCommand UserInterface OSD Key Click Key: Call\x0D
IR Emulation Call Key Press	xCommand UserInterface OSD Key Press Key: Call\x0D
IR Emulation Call Key Release	xCommand UserInterface OSD Key Release Key: Call\x0D
IR Emulation Camera Key Click	xCommand UserInterface OSD Key Click Key: SrcCamera\x0D
IR Emulation Camera Key Press	xCommand UserInterface OSD Key Press Key: SrcCamera\x0D
IR Emulation Camera Key Release	xCommand UserInterface OSD Key Release Key: SrcCamera\x0D
IR Emulation Disconnect Key Click	xCommand UserInterface OSD Key Click Key: Disconnect\x0D
IR Emulation Disconnect Key Press	xCommand UserInterface OSD Key Press Key: Disconnect\x0D
IR Emulation Disconnect Key Release	xCommand UserInterface OSD Key Release Key: Disconnect\x0D
IR Emulation Doc Cam Key Click	xCommand UserInterface OSD Key Click Key: SrcDocCam\x0D
IR Emulation Doc Cam Key Press	xCommand UserInterface OSD Key Press Key: SrcDocCam\x0D
IR Emulation Doc Cam Key Release	xCommand UserInterface OSD Key Release Key: SrcDocCam\x0D
IR Emulation Down Key Click	xCommand UserInterface OSD Key Click Key: Down\x0D
IR Emulation Down Key Press	xCommand UserInterface OSD Key Press Key: Down\x0D

Global Scriptor Module Communication Sheet

IR Emulation Down Key Release	xCommand UserInterface OSD Key Release Key: Down\x0D
IR Emulation F1 Key Click	xCommand UserInterface OSD Key Click Key: F1\x0D
IR Emulation F1 Key Press	xCommand UserInterface OSD Key Press Key: F1\x0D
IR Emulation F1 Key Release	xCommand UserInterface OSD Key Release Key: F1\x0D
IR Emulation F2 Key Click	xCommand UserInterface OSD Key Click Key: F2\x0D
IR Emulation F2 Key Press	xCommand UserInterface OSD Key Press Key: F2\x0D
IR Emulation F2 Key Release	xCommand UserInterface OSD Key Release Key: F2\x0D
IR Emulation F3 Key Click	xCommand UserInterface OSD Key Click Key: F3\x0D
IR Emulation F3 Key Press	xCommand UserInterface OSD Key Press Key: F3\x0D
IR Emulation F3 Key Release	xCommand UserInterface OSD Key Release Key: F3\x0D
IR Emulation F4 Key Click	xCommand UserInterface OSD Key Click Key: F4\x0D
IR Emulation F4 Key Press	xCommand UserInterface OSD Key Press Key: F4\x0D
IR Emulation F4 Key Release	xCommand UserInterface OSD Key Release Key: F4\x0D
IR Emulation F5 Key Click	xCommand UserInterface OSD Key Click Key: F5\x0D
IR Emulation F5 Key Press	xCommand UserInterface OSD Key Press Key: F5\x0D
IR Emulation F5 Key Release	xCommand UserInterface OSD Key Release Key: F5\x0D
IR Emulation Grab Key Click	xCommand UserInterface OSD Key Click Key: Grab\x0D
IR Emulation Grab Key Press	xCommand UserInterface OSD Key Press Key: Grab\x0D
IR Emulation Grab Key Release	xCommand UserInterface OSD Key Release Key: Grab\x0D
IR Emulation Home Key Click	xCommand UserInterface OSD Key Click Key: Home\x0D
IR Emulation Home Key Press	xCommand UserInterface OSD Key Press Key: Home\x0D
IR Emulation Home Key Release	xCommand UserInterface OSD Key Release Key: Home\x0D
IR Emulation Layout Key Click	xCommand UserInterface OSD Key Click Key: Layout\x0D
IR Emulation Layout Key Press	xCommand UserInterface OSD Key Press Key: Layout\x0D
IR Emulation Layout Key Release	xCommand UserInterface OSD Key Release Key: Layout\x0D
IR Emulation Left Key Click	xCommand UserInterface OSD Key Click Key: Left\x0D
IR Emulation Left Key Press	xCommand UserInterface OSD Key Press Key: Left\x0D
IR Emulation Left Key Release	xCommand UserInterface OSD Key Release Key: Left\x0D
IR Emulation Mute Key Click	xCommand UserInterface OSD Key Click Key: Mute\x0D
IR Emulation Mute Key Press	xCommand UserInterface OSD Key Press Key: Mute\x0D
IR Emulation Mute Key Release	xCommand UserInterface OSD Key Release Key: Mute\x0D
IR Emulation Mute Mic Key Click	xCommand UserInterface OSD Key Click Key: Mute Mic\x0D
IR Emulation Mute Mic Key Press	xCommand UserInterface OSD Key Press Key: Mute Mic\x0D

Global Scripter Module Communication Sheet

IR Emulation Mute Mic Key Release	xCommand UserInterface OSD Key Release Key: Mute Mic\x0D
IR Emulation Ok Key Click	xCommand UserInterface OSD Key Click Key: Ok\x0D
IR Emulation Ok Key Press	xCommand UserInterface OSD Key Press Key: Ok\x0D
IR Emulation Ok Key Release	xCommand UserInterface OSD Key Release Key: Ok\x0D
IR Emulation Pc Key Click	xCommand UserInterface OSD Key Click Key: SrcPc\x0D
IR Emulation Pc Key Press	xCommand UserInterface OSD Key Press Key: SrcPc\x0D
IR Emulation Pc Key Release	xCommand UserInterface OSD Key Release Key: SrcPc\x0D
IR Emulation PhoneBook Key Click	xCommand UserInterface OSD Key Click Key: PhoneBook\x0D
IR Emulation PhoneBook Key Press	xCommand UserInterface OSD Key Press Key: PhoneBook\x0D
IR Emulation PhoneBook Key Release	xCommand UserInterface OSD Key Release Key: PhoneBook\x0D
IR Emulation Presentation Key Click	xCommand UserInterface OSD Key Click Key: Presentation\x0D
IR Emulation Presentation Key Press	xCommand UserInterface OSD Key Press Key: Presentation\x0D
IR Emulation Presentation Key Release	xCommand UserInterface OSD Key Release Key: Presentation\x0D
IR Emulation Right Key Click	xCommand UserInterface OSD Key Click Key: Right\x0D
IR Emulation Right Key Press	xCommand UserInterface OSD Key Press Key: Right\x0D
IR Emulation Right Key Release	xCommand UserInterface OSD Key Release Key: Right\x0D
IR Emulation Selfview Key Click	xCommand UserInterface OSD Key Click Key: Selfview\x0D
IR Emulation Selfview Key Press	xCommand UserInterface OSD Key Press Key: Selfview\x0D
IR Emulation Selfview Key Release	xCommand UserInterface OSD Key Release Key: Selfview\x0D
IR Emulation Square Key Click	xCommand UserInterface OSD Key Click Key: Square\x0D
IR Emulation Square Key Press	xCommand UserInterface OSD Key Press Key: Square\x0D
IR Emulation Square Key Release	xCommand UserInterface OSD Key Release Key: Square\x0D
IR Emulation Star Key Click	xCommand UserInterface OSD Key Click Key: Star\x0D
IR Emulation Star Key Press	xCommand UserInterface OSD Key Press Key: Star\x0D
IR Emulation Star Key Release	xCommand UserInterface OSD Key Release Key: Star\x0D
IR Emulation Up Key Click	xCommand UserInterface OSD Key Click Key: Up\x0D
IR Emulation Up Key Press	xCommand UserInterface OSD Key Press Key: Up\x0D
IR Emulation Up Key Release	xCommand UserInterface OSD Key Release Key: Up\x0D
IR Emulation Vcr Key Click	xCommand UserInterface OSD Key Click Key: SrcVcr\x0D
IR Emulation Vcr Key Press	xCommand UserInterface OSD Key Press Key: SrcVcr\x0D
IR Emulation Vcr Key Release	xCommand UserInterface OSD Key Release Key: SrcVcr\x0D

Global Scriptor Module Communication Sheet

IR Emulation Volume Down Key Click	xCommand UserInterface OSD Key Click Key: VolumeDown\x0D
IR Emulation Volume Down Key Press	xCommand UserInterface OSD Key Press Key: VolumeDown\x0D
IR Emulation Volume Down Key Release	xCommand UserInterface OSD Key Release Key: VolumeDown\x0D
IR Emulation Volume Up Key Click	xCommand UserInterface OSD Key Click Key: VolumeUp\x0D
IR Emulation Volume Up Key Press	xCommand UserInterface OSD Key Press Key: VolumeUp\x0D
IR Emulation Volume Up Key Release	xCommand UserInterface OSD Key Release Key: VolumeUp\x0D
IR Emulation Zoom In Key Click	xCommand UserInterface OSD Key Click Key: ZoomIn\x0D
IR Emulation Zoom In Key Press	xCommand UserInterface OSD Key Press Key: ZoomIn\x0D
IR Emulation Zoom In Key Release	xCommand UserInterface OSD Key Release Key: ZoomIn\x0D
IR Emulation Zoom Out Key Click	xCommand UserInterface OSD Key Click Key: ZoomOut\x0D
IR Emulation Zoom Out Key Press	xCommand UserInterface OSD Key Press Key: ZoomOut\x0D
IR Emulation Zoom Out Key Release	xCommand UserInterface OSD Key Release Key: ZoomOut\x0D
Layout Set Auto Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: auto\x0D
Layout Set Auto Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: auto\x0D
Layout Set Custom Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: custom\x0D
Layout Set Custom Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: custom\x0D
Layout Set Equal Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: equal\x0D
Layout Set Equal Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: equal\x0D
Layout Set Overlay Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: overlay\x0D
Layout Set Overlay Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: overlay\x0D
Layout Set Prominent Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: prominent\x0D
Layout Set Prominent Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: prominent\x0D
Layout Set Single Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: single\x0D
Layout Set Single Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: single\x0D
Macro Activate Name testString	xCommand Macros Macro Activate Name: "testString"\x0D
Macro Auto Start Off	xConfiguration Macros AutoStart: Off\x0D
Macro Auto Start On	xConfiguration Macros AutoStart: On\x0D
Macro Deactivate Name testString	xCommand Macros Macro Deactivate Name: "testString"\x0D
Macro Mode Off	xConfiguration Macros Mode: Off\x0D
Macro Mode On	xConfiguration Macros Mode: On\x0D
Microphones Mute Off	xCommand Audio Microphones UnMute\x0D

Global Scriptor Module Communication Sheet

Microphones Mute On	xCommand Audio Microphones Mute\x0D
Output Level 0 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level:0\x0D
Output Level 0 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level:0\x0D
Output Level 0 Output Line 1	xConfiguration Audio Output Line 1 Level:0\x0D
Output Level 0 Output Line 2	xConfiguration Audio Output Line 2 Level:0\x0D
Output Level 0 Output Line 3	xConfiguration Audio Output Line 3 Level:0\x0D
Output Level 0 Output Line 4	xConfiguration Audio Output Line 4 Level:0\x0D
Output Level 0 Output Line 5	xConfiguration Audio Output Line 5 Level:0\x0D
Output Level 0 Output Line 6	xConfiguration Audio Output Line 6 Level:0\x0D
Output Level -24 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level:-24\x0D
Output Level -24 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level:-24\x0D
Output Level -24 Output Line 1	xConfiguration Audio Output Line 1 Level:-24\x0D
Output Level -24 Output Line 2	xConfiguration Audio Output Line 2 Level:-24\x0D
Output Level -24 Output Line 3	xConfiguration Audio Output Line 3 Level:-24\x0D
Output Level -24 Output Line 4	xConfiguration Audio Output Line 4 Level:-24\x0D
Output Level -24 Output Line 5	xConfiguration Audio Output Line 5 Level:-24\x0D
Output Level -24 Output Line 6	xConfiguration Audio Output Line 6 Level:-24\x0D
People Count Out of Call Off	xConfiguration RoomAnalytics PeopleCountOutOfCall: Off\x0D
People Count Out of Call On	xConfiguration RoomAnalytics PeopleCountOutOfCall: On\x0D
People Presence Detector Off	xConfiguration RoomAnalytics PeoplePresenceDetector: Off\x0D
People Presence Detector On	xConfiguration RoomAnalytics PeoplePresenceDetector: On\x0D
Phonebook Folder ID Update None Phonebook Type Corporate	xCommand Phonebook Search PhonebookType:Corporate ContactType: Folder Offset: 0 Limit: 250\x0D
Phonebook Folder ID Update None Phonebook Type Local	xCommand Phonebook Search PhonebookType:Local ContactType: Folder Offset: 0 Limit: 250\x0D
Presentation ExternalSource Select Command None	xCommand UserInterface Presentation ExternalSource Select SourceIdentifier: "string"\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1

Global Scripter Module Communication Sheet

Sending Mode Local and Remote Instance 6 Layout Prominent	Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D

Global Scriptor Module Communication Sheet

Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1 Layout	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2

Global Scripter Module Communication Sheet

Prominent	Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:2 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Layout Prominent	
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance New Layout	xCommand Presentation Start Instance:New ConnectorId:3 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Prominent	
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4

Global Scripter Module Communication Sheet

	Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6 Layout	xCommand Presentation Start Instance:6 ConnectorId:4 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Prominent	
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5

Global Scripter Module Communication Sheet

Specified Layout Equal	Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5	xCommand Presentation Start Instance:1 ConnectorId:5 Layout:Prominent\x0D

Global Scriptor Module Communication Sheet

Sending Mode Not Specified Instance 1 Layout Prominent	
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote Layout:Equal\x0D

Global Scriptor Module Communication Sheet

Layout Equal	
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified	xCommand Presentation Start SendingMode:LocalOnly Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Sending Mode Local Only Instance Not Specified Layout Prominent	
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D

Global Scriptor Module Communication Sheet

Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1\x0D

Global Scriptor Module Communication Sheet

Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:1 Layout:Prominent\x0D

Global Scriptor Module Communication Sheet

Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D

Global Scriptor Module Communication Sheet

Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:2\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:3 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:4 Layout:Prominent\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop\x0D

Global Scriptor Module Communication Sheet

Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1 Layout	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Not Specified	
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop\x0D

Global Scriptor Module Communication Sheet

Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D

Global Scriptor Module Communication Sheet

Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Sending Mode Local Only Instance 6 Layout Equal	
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Sending Mode Not Specified Instance New Layout Prominent	
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Sending Mode Local Only Instance 1 Layout Equal	
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6 Layout	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Prominent	
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Specified Layout Equal	
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1 Layout	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Prominent	
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Stop\x0D

Global Scriptor Module Communication Sheet

Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D

Global Scriptor Module Communication Sheet

Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Layout Not Specified	
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Layout Prominent	
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Layout Equal	
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Not Specified	
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Layout Prominent	
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Equal	
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Layout Not Specified	
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

New Layout Prominent	
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Layout Equal	
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Preset Recall 1	xCommand RoomPreset Activate PresetId:1\x0D
Preset Recall 15	xCommand RoomPreset Activate PresetId:15\x0D
Preset Save 1	xCommand RoomPreset Store PresetId:1 Type:All\x0D
Preset Save 15	xCommand RoomPreset Store PresetId:15 Type:All\x0D
Reboot None	xCommand SystemUnit Boot Action:Restart\x0D
Restart Macros None	xCommand Macros Runtime Restart\x0D
Self View Default Fullscreen Mode Current	xConfiguration Video Selfview Default FullscreenMode:Current\x0D
Self View Default Fullscreen Mode Off	xConfiguration Video Selfview Default FullscreenMode:Off\x0D
Self View Default Fullscreen Mode On	xConfiguration Video Selfview Default FullscreenMode:On\x0D
Self View Off	xCommand Video Selfview Set Mode:Off\x0D

Global Scripter Module Communication Sheet

Self View On	xCommand Video Selfview Set Mode:On\x0D
Self View Position Center Left	xCommand Video Selfview Set PIPPosition:CenterLeft\x0D
Self View Position Center Right	xCommand Video Selfview Set PIPPosition:CenterRight\x0D
Self View Position Lower Left	xCommand Video Selfview Set PIPPosition:LowerLeft\x0D
Self View Position Lower Right	xCommand Video Selfview Set PIPPosition:LowerRight\x0D
Self View Position Upper Center	xCommand Video Selfview Set PIPPosition:UpperCenter\x0D
Self View Position Upper Left	xCommand Video Selfview Set PIPPosition:UpperLeft\x0D
Self View Position Upper Right	xCommand Video Selfview Set PIPPosition:UpperRight\x0D
SIP URI Command None	xConfiguration SIP URI: String\x0D
Sleep Timer 1	xCommand Standby ResetTimer Delay:1\x0D
Sleep Timer 480	xCommand Standby ResetTimer Delay:480\x0D
SpeakerTrack Control Off	xCommand Cameras SpeakerTrack Deactivate\x0D
SpeakerTrack Control On	xCommand Cameras SpeakerTrack Activate\x0D
SpeakerTrack Mode Auto	xConfiguration Cameras SpeakerTrack Mode: Auto\x0D
SpeakerTrack Mode Off	xConfiguration Cameras SpeakerTrack Mode: Off\x0D
Standby Activate	xCommand Standby Activate\x0D
Standby Deactivate	xCommand Standby Deactivate\x0D
Standby Half Wake	xCommand Standby Halfwake\x0D
System Unit Name Command None	xConfiguration SystemUnit Name: String\x0D
Volume 0	xCommand Audio Volume Set Level:0\x0D
Volume 100	xCommand Audio Volume Set Level:100\x0D

Appendix B. Update Commands

Audio Output Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode\x0D
Audio Output Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode\x0D
Audio Output Output Line 1	xConfiguration Audio Output Line 1 Mode\x0D
Audio Output Output Line 2	xConfiguration Audio Output Line 2 Mode\x0D
Audio Output Output Line 3	xConfiguration Audio Output Line 3 Mode\x0D
Audio Output Output Line 4	xConfiguration Audio Output Line 4 Mode\x0D
Audio Output Output Line 5	xConfiguration Audio Output Line 5 Mode\x0D
Audio Output Output Line 6	xConfiguration Audio Output Line 6 Mode\x0D
Auto Answer	xConfiguration Conference AutoAnswer Mode\x0D
Call Setup Mode	xConfiguration H323 CallSetup Mode\x0D
Call Status Call 1	xFeedback register /Status/Call\x0Dxstatus call\x0D
Call Status Call 5	xFeedback register /Status/Call\x0Dxstatus call\x0D
Display Mode	xConfiguration Video Monitors\x0D
DNS Domain Name	xStatus Network 1 DNS Domain Name\x0D
DNS Server Address Server 1	xStatus Network 1 DNS Server 1 Address\x0D
DNS Server Address Server 5	xStatus Network 1 DNS Server 5 Address\x0D
Do Not Disturb	xStatus Conference 1 DoNotDisturb\x0D
Far End Control	xConfiguration Conference FarEndControl Mode\x0D
Firmware Version	xgetxml /status/standby\x0D
Gateway Address	xStatus Network 1 IPv4 Gateway\x0D
H323 Gatekeeper Address	xStatus H323 Gatekeeper Address\x0D
H323 Gatekeeper Status	xStatus H323 Gatekeeper Status\x0D
H323Alias ID Status	xConfiguration H323 H323Alias ID\x0D
Input	xStatus Video Input MainVideoSource\x0D
Input Line Level Input Line 1	xConfiguration Audio Input Line 1 Level\x0D
Input Line Level Input Line 2	xConfiguration Audio Input Line 2 Level\x0D
Input Line Level Input Line 3	xConfiguration Audio Input Line 3 Level\x0D
Input Line Level Input Line 4	xConfiguration Audio Input Line 4 Level\x0D
Input Mic Level Input Microphone 1	xConfiguration Audio Input Microphone 1 Level\x0D
Input Mic Level Input Microphone 2	xConfiguration Audio Input Microphone 2 Level\x0D
Input Mic Level Input Microphone 3	xConfiguration Audio Input Microphone 3 Level\x0D
Input Mic Level Input Microphone 4	xConfiguration Audio Input Microphone 4 Level\x0D
Input Mic Level Input Microphone 5	xConfiguration Audio Input Microphone 5 Level\x0D
Input Mic Level Input Microphone 6	xConfiguration Audio Input Microphone 6 Level\x0D
Input Mic Level Input Microphone 7	xConfiguration Audio Input Microphone 7 Level\x0D
Input Mic Level Input	xConfiguration Audio Input Microphone 8 Level\x0D

Global Scriptor Module Communication Sheet

Microphone 8	
Input Mute Input Line 1	xConfiguration Audio Input Line 1 Mode\x0D
Input Mute Input Line 2	xConfiguration Audio Input Line 2 Mode\x0D
Input Mute Input Line 3	xConfiguration Audio Input Line 3 Mode\x0D
Input Mute Input Line 4	xConfiguration Audio Input Line 4 Mode\x0D
Input Mute Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode\x0D
Input Mute Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode\x0D
Input Mute Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode\x0D
Input Mute Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode\x0D
Input Mute Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode\x0D
Input Mute Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode\x0D
Input Mute Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode\x0D
Input Mute Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode\x0D
Input Signal Input 1	xFeedback register /Status/Video/Input/Connector/Connected\x0DxStatus Video Input Connector 1 Connected\x0D
Input Signal Input 3	xFeedback register /Status/Video/Input/Connector/Connected\x0DxStatus Video Input Connector 3 Connected\x0D
Input Signal Input 5	xFeedback register /Status/Video/Input/Connector/Connected\x0DxStatus Video Input Connector 5 Connected\x0D
IP Address	xStatus Network 1 IPv4 Address\x0D
Layout Set Target Local	xStatus Video Layout LayoutFamily Local\x0D
Layout Set Target Remote	xStatus Video Layout LayoutFamily Remote\x0D
MAC Address	xStatus Network 1 Ethernet MacAddress\x0D
Macro Auto Start	xConfiguration Macros AutoStart\x0D
Macro Mode	xConfiguration Macros Mode\x0D
Microphones Mute	xFeedback register /Status/Audio/Microphones/Mute\x0DxStatus Audio Microphones Mute\x0D
Network Assignment	xConfiguration Network 1 IPv4 Assignment\x0D
Output Level Output HDMI 1	xConfiguration Audio Output HDMI 1 Level\x0D
Output Level Output HDMI 2	xConfiguration Audio Output HDMI 2 Level\x0D
Output Level Output Line 1	xConfiguration Audio Output Line 1 Level\x0D
Output Level Output Line 2	xConfiguration Audio Output Line 2 Level\x0D
Output Level Output Line 3	xConfiguration Audio Output Line 3 Level\x0D
Output Level Output Line 4	xConfiguration Audio Output Line 4 Level\x0D
Output Level Output Line 5	xConfiguration Audio Output Line 5 Level\x0D
Output Level Output Line 6	xConfiguration Audio Output Line 6 Level\x0D
People Count Current	xFeedback register /Status/RoomAnalytics/PeopleCount/Current\x0DxStatus RoomAnalytics PeopleCount Current\x0D
People Count Out of Call	xConfiguration RoomAnalytics PeopleCountOutOfCall\x0D
People Presence	xFeedback register /Status/RoomAnalytics/PeoplePresence\x0DxStatus RoomAnalytics PeoplePresence\x0D
People Presence Detector	xConfiguration RoomAnalytics PeoplePresenceDetector\x0D
Presentation Mode Status	xFeedback register /Status/Conference/Presentation/Mode\x0DxStatus Conference Presentation Mode\x0D
Presentation Sending Mode	xFeedback register /Status/Conference/Presentation/LocalInstance/SendingMode\x0DxStatus

Global Scripter Module Communication Sheet

Status Instance 1	Conference Presentation LocalInstance 1 SendingMode\x0D
Presentation Sending Mode Status Instance 6	xFeedback register /Status/Conference/Presentation/LocalInstance/SendingMode\x0DxStatus Conference Presentation LocalInstance 6 SendingMode\x0D
Presentation Source Status Instance 1	xFeedback register /Status/Conference/Presentation/LocalInstance/Source\x0DxStatus Conference Presentation LocalInstance 1 Source\x0D
Presentation Source Status Instance 6	xFeedback register /Status/Conference/Presentation/LocalInstance/Source\x0DxStatus Conference Presentation LocalInstance 6 Source\x0D
Self View	xFeedback register /Status/Video/Selfview/Mode\x0DxStatus Video Selfview Mode\x0D
Self View Default Fullscreen Mode	xConfiguration Video Selfview Default FullscreenMode\x0D
Self View Position	xFeedback register /Status/Video/Selfview/PIPPosition\x0DxStatus Video Selfview PIPPosition\x0D
SIP Registration Status	xStatus SIP Registration 1 Status\x0D
SIP URI Status	xConfiguration SIP URI\x0D
SpeakerTrack Control	xStatus Cameras SpeakerTrack Status\x0D
SpeakerTrack Mode	xConfiguration Cameras SpeakerTrack Mode\x0D
Standby	xStatus Standby State\x0D
Subnet Mask	xStatus Network 1 IPv4 SubnetMask\x0D
System Unit Name Status	xConfiguration SystemUnit Name\x0D
Volume	xStatus Audio Volume\x0D

