

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: Cisco
Firmware Version: N/A
Model(s): SX10 CE9.15.X, SX20 CE9.15.X, SX80 CE9.15.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.13.0000-b006	2.13.0

Version History

Module Version	Date	Notes
1_0_0_0	8/26/2021	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly. deviceUsername default value is admin respectively.
Example: `InterfaceName.deviceUsername = 'admin'`
- CallHistoryOccurrenceType variable must be set accordingly.
Example: `InterfaceName.CallHistoryOccurrenceType = 'Time'`
- NumberOfPhonebookSearch variable must be set accordingly. Default value is '5'.
NumberOfPhonebookSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookSearch = '5'`
- NumberOfCallHistory variable must be set accordingly. Default value is '5'. NumberOfCallHistory ranges from 1 to 20.
Example: `InterfaceName.NumberofCallHistory = '5'`
- NumberOfPhonebookFolderSearch variable must be set accordingly. Default value is '5'.
NumberOfPhonebookFolderSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookFolderSearch = '5'`
- PhonebookSearchOffset variable must be set accordingly. Default value is '50'.
PhonebookSearchOffset ranges from 20 to 250.
Example: `InterfaceName.PhonebookSearchOffset = '50'`
- NumberOfPeripheral variable must be set accordingly. Default value is '5'. NumberOfPeripheral ranges from 1 to 10.
Example: `InterfaceName.NumberofPeripheral = '5'`
- Use highest baud rate for most optimal performance when using a serial connection.

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SX10 CE9.15.X')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SX10  
CE9.15.X')
```

SSHClass

#Password Required

```
InterfaceName = ModuleName.SSHClass('192.168.254.254', 22, Credentials=('admin', 'extron'),  
Model='SX10 CE9.15.X')
```

#No Password Required

```
InterfaceName = ModuleName.SSHClass('192.168.254.254', 22, Credentials=('admin', ''),  
Model='SX10 CE9.15.X')
```

Phonebook commands:

- PhonebookUpdate
 - This is used to trigger the search.
- PhonebookSearchResult
 - This is where the search results will be saved to when the phonebook is searched. The number of results is determined by the module parameter NumberOfPhonebookSearch, which is initialized to 5 results by default.
- PhonebookNavigation
 - This command is used for navigating through the search results, it is like scrolling through the results when there are more than the NumberOfPhonebookSearch that came back from the search.
- PhonebookSearchSet
 - When the number selected in this command is triggered, it will be dialed.
- PhonebookFolderIDUpdate
 - This is used to trigger the search.
- PhonebookFolderIDSearchResult
 - This is where the search results will be saved to when the phonebook folder ID is searched. The number of results is determined by the module parameter NumberOfPhonebookFolderSearch, which is initialized to 5 results by default.
- PhonebookFolderIDNavigation
 - This command is used for navigating through the search results, it is like scrolling through the results when there are more than the NumberOfPhonebookFolderSearch that came back from the search.
- PhonebookFolderIDSearchSet
 - When the folder name selected in this command is triggered, it will copy the FolderID and use it as the FolderID command parameter the next time PhonebookUpdate is used.

Query commands:

The following commands trigger a query command and should not be sent at a faster rate than the Command Timeout Duration specified.

Command Name	Command Timeout Duration
CallHistoryRefresh	5 seconds
ConnectedDeviceUpdate	3 seconds
PhonebookFolderIDUpdate	10 seconds
PhonebookUpdate	10 seconds
MeetingRefresh	10 seconds

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioOutput ¹	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# AudioOutput example InterfaceName.Set('AudioOutput', 'On', {'Output': 'Line 1'})			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command CallAuthenticationResponseCommand ¹⁰	Value None		
Qualifier Key 'Call'	Qualifier Value '1' – '5'	Qualifier Value 'Not Specified'	
Qualifier Key 'Participant Role'	Qualifier Value 'Cohost' 'Guest'	Qualifier Value 'Host' 'Presenter'	Qualifier Value 'Panelist'
Qualifier Key 'Pin'	Qualifier Value 'String'		
# CallAuthenticationResponseCommand example InterfaceName.Set('CallAuthenticationResponseCommand', None, {'Call': '1', 'Participant Role': 'Host', 'Pin': '1234'})			
Command CallHistoryNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')			
Command CallHistoryRefresh	Value None		
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)			
Command CallHistorySelect	Value '1' – '20'		
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', '1')			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode example InterfaceName.Set('CallSetupMode', 'Gatekeeper')			
Command CameraFocus	Value 'Near' 'Auto'	Value 'Far'	Value 'Stop'

Global Scriptor Module Communication Sheet

Qualifier Key 'Camera' ¹	Qualifier Value '1' – '7'		
# CameraFocus example InterfaceName.Set('CameraFocus', 'Near', {'Camera': '1'})			
Command CameraPan	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Camera' ¹	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 24 in steps of 1		
# CameraPan example InterfaceName.Set('CameraPan', 'Left', {'Camera': '1', 'Speed': 15})			
Command CameraPresetRecall	Value '1' – '35'		
# CameraPresetRecall example InterfaceName.Set('CameraPresetRecall', '1')			
Command CameraPresetSave	Value '1' – '35'		
Qualifier Key 'Camera' ¹	Qualifier Value '1' – '7'		
# CameraPresetSave example InterfaceName.Set('CameraPresetSave', '1', {'Camera': '1'})			
Command CameraTilt	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Camera' ¹	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 24 in steps of 1		
# CameraTilt example InterfaceName.Set('CameraTilt', 'Up', {'Camera': '1', 'Speed': 15})			
Command CameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Camera' ¹	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoom example InterfaceName.Set('CameraZoom', 'In', {'Camera': '1', 'Speed': 15})			
Command ConnectedDeviceNavigation	Value 'Up'	Value 'Down'	Value 'Page Up'
	'Page Down'		
# ConnectedDeviceNavigation example InterfaceName.Set('ConnectedDeviceNavigation', 'Up')			
Command ConnectedDeviceUpdate	Value None		
# ConnectedDeviceUpdate example InterfaceName.Set('ConnectedDeviceUpdate', None)			
Command DisplayMode ^{1, 2}	Value 'Dual'	Value 'Single'	Value 'Dual Presentation Only'
	'Triple Presentation Only'	'Triple' ¹	'Auto'
	1		
# DisplayMode example			

InterfaceName.Set('DisplayMode', 'Dual')			
Command DNSDomainNameCommand	Value None		
# DNSDomainNameCommand example InterfaceName.Set('DNSDomainNameCommand', None)			
Command DNSServerAddressCommand	Value None		
# DNSServerAddressCommand example InterfaceName.Set('DNSServerAddressCommand', None)			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Active')			
Command DTMF	Value '0' – '9'	Value '*'	Value '#'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command FarEndCameraPanTilt	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
# FarEndCameraPanTilt example InterfaceName.Set('FarEndCameraPanTilt', 'Up')			
Command FarEndCameraPresetRecall	Value '1' – '15'		
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')			
Command FarEndCameraSource	Value '0' – '15'		
# FarEndCameraSource example InterfaceName.Set('FarEndCameraSource', '0')			
Command FarEndCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
# FarEndCameraZoom example InterfaceName.Set('FarEndCameraZoom', 'In')			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Set('FarEndControl', 'On')			
Command H323GatekeeperAddress Command	Value None		
# H323GatekeeperAddressCommand example InterfaceName.Set('H323GatekeeperAddressCommand', None)			
Command H323AliasE164Command	Value None		
# H323AliasE164Command example InterfaceName.Set('H323AliasE164Command', None)			
Command H323AliasIDCommand	Value None		
# H323AliasIDCommand example InterfaceName.Set('H323AliasIDCommand', None)			

Command H323ProfileAuthenticationLoginNameCommand	Value None		
# H323ProfileAuthenticationLoginNameCommand example InterfaceName.Set('H323ProfileAuthenticationLoginNameCommand', None)			
Command H323ProfileAuthenticationPasswordCommand	Value None		
# H323ProfileAuthenticationPasswordCommand example InterfaceName.Set('H323ProfileAuthenticationPasswordCommand', None)			
Command Hook ¹⁰	Value 'Dial' 'Disconnect All' 'Resume 1' 'Hold 2' 'Join 3' 'Disconnect 3' 'Resume 4' 'Hold 5'	Value 'Accept' 'Join 1' 'Disconnect 1' 'Resume 2' 'Hold 3' 'Join 4' 'Disconnect 4' 'Resume 5'	Value 'Reject' 'Hold 1' 'Join 2' 'Disconnect 2' 'Resume 3' 'Hold 4' 'Join 5' 'Disconnect 5'
Qualifier Key 'Protocol'	Qualifier Value 'Auto' 'H320'	Qualifier Value 'SIP' 'Spark'	Qualifier Value 'H323'
Qualifier Key 'Number'	Qualifier Value 'String'		
# Hook example InterfaceName.Set('Hook', 'Dial', {'Protocol': 'Auto', 'Number': '0123456789'})			
Command Input ^{1, 2}	Value '1' – '3' ²	Value '1' – '6' ¹	
# Input example InterfaceName.Set('Input', '1')			
Command InputHDMILevel ¹	Value -24 to 0 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'HDMI 1'	Qualifier Value 'HDMI 2'	Qualifier Value 'HDMI 3'
# InputHDMILevel example InterfaceName.Set('InputHDMILevel', 0, {'Input': 'HDMI 1'})			
Command InputLineLevel ¹	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Line 1' 'Line 4'	Qualifier Value 'Line 2'	Qualifier Value 'Line 3'
# InputLineLevel example InterfaceName.Set('InputLineLevel', 24, {'Input': 'Line 1'})			
Command InputMicLevel	Value 0 to 70 in steps of 1 ¹	0 to 24 in steps of 1 ^{2,3}	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' - 'Microphone 8' ¹	Qualifier Value 'Microphone 1' - 'Microphone 2' ^{2,3}	
# InputMicLevel example InterfaceName.Set('InputMicLevel', 24, {'Input': 'Microphone 1'})			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value

Global Scriptor Module Communication Sheet

'Input'	'Microphone 1' 'Microphone 8' ¹ 'HDMI 1' - 'HDMI 3' ¹	'Line 1' - 'Line 4' ¹	'Microphone 1' - 'Microphone 2' ^{2,3}
# InputMute example InterfaceName.Set('InputMute', 'On', {'Input': 'Microphone 1'})			
Command InputVideoMute	Value 'On'	Value 'Off'	
# InputVideoMute example InterfaceName.Set('InputVideoMute', 'On')			
Command IPv4AddressCommand	Value None		
# IPv4AddressCommand example InterfaceName.Set('IPv4AddressCommand', None)			
Command IPv4GatewayCommand	Value None		
# IPv4GatewayCommand example InterfaceName.Set('IPv4GatewayCommand', None)			
Command IPv4SubnetMaskCommand	Value None		
# IPv4SubnetMaskCommand example InterfaceName.Set('IPv4SubnetMaskCommand', None)			
Command IREmulation ^{2,3}	Value '0' - '9' 'Down' 'F3' 'Grab' 'Left' 'Ok' 'Right' 'Aux' 'Pc' 'Up' 'Zoom In' '+' '-'	Value 'C' 'F1' 'F4' 'Home' 'Mute' 'PhoneBook' 'Selfview' 'Camera' 'Vcr' 'Volume Down' 'Zoom Out' '-'	Value 'Call' 'F2' 'F5' 'Layout' 'Mute Mic' 'Presentation' 'Square' 'Doc Cam' 'Star' 'Volume Up' 'Disconnect'
Qualifier Key 'Key'	Qualifier Value 'Click'	Qualifier Value 'Press'	Qualifier Value 'Release'
# IREmulation example InterfaceName.Set('IREmulation', '0', {'Key': 'Click'})			
Command LayoutSet	Value 'Auto' 'Overlay' 'Single'	Value 'Custom' 'Prominent'	Value 'Equal' 'Prominent L'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command Macro ^{1,2}	Value 'Activate'	Value 'Deactivate'	
Qualifier Key 'Name'	Qualifier Value 'String'		
# Macro example InterfaceName.Set('Macro', 'Activate', {'Name': 'String'})			

Command MacroAutoStart ^{1,2}	Value 'On'	Value 'Off'	
# MacroAutoStart example InterfaceName.Set('MacroAutoStart', 'On')			
Command MacroMode ^{1,2}	Value 'On'	Value 'Off'	
# MacroMode example InterfaceName.Set('MacroMode', 'On')			
Command MeetingJoin ⁷	Value None		
Qualifier Key 'Meeting'	Qualifier Value '1' – '5'		
# MeetingJoin example InterfaceName.Set('MeetingJoin', None, {'Meeting': '1'})			
Command MeetingRefresh	Value None		
# MeetingRefresh example InterfaceName.Set('MeetingRefresh', None)			
Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute example InterfaceName.Set('MicrophonesMute', 'On')			
Command OutputLevel ¹	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# OutputLevel example InterfaceName.Set('OutputLevel', 0, {'Output': 'Line 1'})			
Command PeopleCountOutofCall ¹	Value 'On'	Value 'Off'	
# PeopleCountOutofCall example InterfaceName.Set('PeopleCountOutofCall', 'On')			
Command PeoplePresenceDetector	Value 'On'	Value 'Off'	
# PeoplePresenceDetector example InterfaceName.Set('PeoplePresenceDetector', 'On')			
Command PhonebookFolderIDNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up')			
Command PhonebookFolderIDSearchSet	Value 1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command PhonebookFolderIDUpdate	Value None		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	

Global Scripter Module Communication Sheet

Revision: 8/26/2021

# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Corporate'})			
Command PhonebookNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up')			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Phonebook Type': 'Corporate', 'Contact': '', 'FolderID': ''})			
Command Presentation	Value 'Start' ^{4, 5}	Value 'Stop'	
Qualifier Key 'Instance'	Qualifier Value '1' – '6'	Qualifier Value 'Not Specified'	Qualifier Value 'New'
Qualifier Key 'Layout'	Qualifier Value 'Not Specified'	Qualifier Value 'Equal'	Qualifier Value 'Prominent'
Qualifier Key 'Sending Mode'	Qualifier Value 'Not Specified'	Qualifier Value 'Local Only'	Qualifier Value 'Local and Remote'
Qualifier Key 'Video Input Source'	Qualifier Value 'Not Specified'	Qualifier Value 'Presentation Source 1' ^{1, 2}	Qualifier Value 'Presentation Source 2'
	'Presentation Source 3' ¹	'Presentation Source 4' ¹	'Connector Id 1' ^{1, 2}
	'Connector Id 2'	'Connector Id 3' ^{1, 3}	'Connector Id 4' ¹
	'Connector Id 5' ¹		
# Presentation example InterfaceName.Set('Presentation', 'Start', {'Instance': '1', 'Layout': 'Not Specified', 'Sending Mode': 'Not Specified', 'Video Input Source': 'Not Specified'})			
Command PresentationExternalSourceSelectCommand	Value None		
# PresentationExternalSourceSelectCommand example InterfaceName.Set('PresentationExternalSourceSelectCommand', None)			
Command PresenterTrackControl ¹	Value 'On'	Value 'Off'	
# PresenterTrackControl example InterfaceName.Set('PresenterTrackControl', 'On')			
Command PresenterTrackMode ^{1, 8}	Value 'Off' 'Background'	Value 'Follow' 'Setup'	Value 'Diagnostic' 'Persistent'
# PresenterTrackMode example InterfaceName.Set('PresenterTrackMode', 'Off')			

Command PresetRecall	Value '1' – '15'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1')			
Command PresetSave	Value '1' – '15'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command Reboot	Value None		
# Reboot example InterfaceName.Set('Reboot', None)			
Command RestartMacros ^{1,2}	Value None		
# RestartMacros example InterfaceName.Set('RestartMacros', None)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')			
Command SelfViewDefaultFullscreenMode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Set('SelfViewDefaultFullscreenMode', 'On')			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')			
Command SIPURICommand	Value None		
# SIPURICommand example InterfaceName.Set('SIPURICommand', None)			
Command SleepTimer	Value 1 – 480		
# SleepTimer example InterfaceName.Set('SleepTimer', 480)			
Command SpeakerTrackControl ¹	Value 'On'	Value 'Off'	
# SpeakerTrackControl example InterfaceName.Set('SpeakerTrackControl', 'On')			
Command SpeakerTrackMode ¹	Value 'Auto'	Value 'Off'	
# SpeakerTrackMode example InterfaceName.Set('SpeakerTrackMode', 'Auto')			
Command Standby	Value 'Activate'	Value 'Deactivate'	Value 'Half Wake'
# Standby example InterfaceName.Set('Standby', 'Activate')			
Command SystemUnitNameCommand	Value None		

# SystemUnitNameCommand example InterfaceName.Set('SystemUnitNameCommand', None)	
Command	Value
Volume	0 to 100 in steps of 1
# Volume example InterfaceName.Set('Volume', 100)	

¹ Only supported for SX80

² Only supported for SX20

³ Only supported for SX10

⁴ Optional parameters: "Video Input Source", "Sending Mode", "Instance", and "Layout" (all parameters set to "Not Specified" by default)

⁵ Must be in an active call for command to work properly.

⁶ Optional parameters: "Video Input Source" (except "Connector Id" states) and "Instance" (except "New" state). "Sending Mode" and "Layout" parameters should be set to "Not Specified".

⁷ Requires "MeetingRefresh" command before using.

⁸ Requires "PresenterTrackControl" command to be "On" before using.

⁹ Requires "SpeakerTrackMode" command to be "Auto" before using.

¹⁰ Requires "CallStatus" command to work properly.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, CallHistory, ConnectedDeviceMAC, ConnectedDeviceName, ConnectedDeviceType, MeetingAgenda, MeetingDialMode, MeetingDialNumber, MeetingEndTime, MeetingOrganizer, MeetingStartTime, MeetingTitle, PhonebookFolderIDSearchResult, and PhonebookSearchResult do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioOutput ¹	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# AudioOutput example InterfaceName.Update('AudioOutput', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('AudioOutput', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('AudioOutput', None, FeedbackHandler)			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)			
Command CallAuthenticationRequest Status ⁵	Value 'None' 'Panelist Pin'	Value 'Host Pin or Guest'	Value 'Host Pin or Guest Pin'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallAuthenticationRequestStatus example InterfaceName.Update('CallAuthenticationRequestStatus', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallAuthenticationRequestStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallAuthenticationRequestStatus', None, FeedbackHandler)			
Command CallHistory	Value 'String'		
Qualifier Key 'Button'	Qualifier Value '1' – '20'		
Qualifier Key 'Detail Type'	Qualifier Value 'Display Name' 'Occurrence Count'	Qualifier Value 'Callback Number' 'Occurrence Type'	Qualifier Value 'Last Occurrence Time'
# CallHistory example			

Global Scriptor Module Communication Sheet

<pre>Value = InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)</pre>			
Command	Value	Value	
CallSetupMode	'Gatekeeper'	'Direct'	
<pre># CallSetupMode example InterfaceName.Update('CallSetupMode') Value = InterfaceName.ReadStatus('CallSetupMode') InterfaceName.SubscribeStatus('CallSetupMode', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
CallStatus	'Dialing'	'Connecting'	'Connected'
	'Ringing'	'Idle'	'Disconnecting'
	'On Hold'	'Early Media'	'Preserved'
	'Remote Preserved'		
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
<pre># CallStatus example InterfaceName.Update('CallStatus', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
CallStatusDeviceType	'Endpoint'	'MCU'	'Unknown'
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
<pre># CallStatusDeviceType example InterfaceName.Update('CallStatusDeviceType', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallStatusDeviceType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusDeviceType', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
CallStatusType	'Video'	'Audio'	'Audio Can Escalate'
	'Forward All Call'	'Unknown'	
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
<pre># CallStatusType example InterfaceName.Update('CallStatusType', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallStatusType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)</pre>			
Command	Value		
ConnectedDeviceMAC	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 to 10 in steps of 1		
<pre># ConnectedDeviceMAC example Value = InterfaceName.ReadStatus('ConnectedDeviceMAC', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceMAC', None, FeedbackHandler)</pre>			
Command	Value		
ConnectedDeviceName	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 to 10 in steps of 1		
<pre># ConnectedDeviceName example Value = InterfaceName.ReadStatus('ConnectedDeviceName', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceName', None, FeedbackHandler)</pre>			
Command	Value		
ConnectedDeviceType	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 to 10 in steps of 1		

Global Scripter Module Communication Sheet

Revision: 8/26/2021

<pre># ConnectedDeviceType example Value = InterfaceName.ReadStatus('ConnectedDeviceType', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceType', None, FeedbackHandler)</pre>			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
<pre># ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
DisplayMode ^{1,2}	'Dual'	'Single'	'Dual Presentation Only'
	'Triple Presentation Only' ¹	'Triple' ¹	'Auto'
<pre># DisplayMode example InterfaceName.Update('DisplayMode') Value = InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)</pre>			
Command	Value		
DisplayName	'String'		
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
<pre># DisplayName example InterfaceName.Update('DisplayName', {'Call': '1'}) Value = InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)</pre>			
Command	Value		
DNSDomainName	'String'		
<pre># DNSDomainName example InterfaceName.Update('DNSDomainName') Value = InterfaceName.ReadStatus('DNSDomainName') InterfaceName.SubscribeStatus('DNSDomainName', None, FeedbackHandler)</pre>			
Command	Value		
DNSServerAddress	'String'		
Qualifier Key	Qualifier Value		
'Server'	'1' – '5'		
<pre># DNSServerAddress example InterfaceName.Update('DNSServerAddress', {'Server': '1'}) Value = InterfaceName.ReadStatus('DNSServerAddress', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddress', None, FeedbackHandler)</pre>			
Command	Value	Value	
DoNotDisturb	'Active'	'Inactive'	
<pre># DoNotDisturb example InterfaceName.Update('DoNotDisturb') Value = InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)</pre>			
Command	Value	Value	
FarEndControl	'On'	'Off'	
<pre># FarEndControl example InterfaceName.Update('FarEndControl') Value = InterfaceName.ReadStatus('FarEndControl') InterfaceName.SubscribeStatus('FarEndControl', None, FeedbackHandler)</pre>			
Command	Value		
FirmwareVersion	'String'		
<pre># FirmwareVersion example InterfaceName.Update('FirmwareVersion') Value = InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)</pre>			

Command GatewayAddress	Value 'String'		
# GatewayAddress example InterfaceName.Update('GatewayAddress') Value = InterfaceName.ReadStatus('GatewayAddress') InterfaceName.SubscribeStatus('GatewayAddress', None, FeedbackHandler)			
Command H323GatekeeperAddress	Value 'String'		
# H323GatekeeperAddress example InterfaceName.Update('H323GatekeeperAddress') Value = InterfaceName.ReadStatus('H323GatekeeperAddress') InterfaceName.SubscribeStatus('H323GatekeeperAddress', None, FeedbackHandler)			
Command H323GatekeeperStatus	Value 'Required' 'Authenticating' 'Registered'	Value 'Discovering' 'Authenticated' 'Inactive'	Value 'Discovered' 'Registering' 'Rejected'
# H323GatekeeperStatus example InterfaceName.Update('H323GatekeeperStatus') Value = InterfaceName.ReadStatus('H323GatekeeperStatus') InterfaceName.SubscribeStatus('H323GatekeeperStatus', None, FeedbackHandler)			
Command H323AliasE164Status	Value 'String'		
# H323AliasE164Status example InterfaceName.Update('H323AliasE164Status') Value = InterfaceName.ReadStatus('H323AliasE164Status') InterfaceName.SubscribeStatus('H323AliasE164Status', None, FeedbackHandler)			
Command H323AliasIDStatus	Value 'String'		
# H323AliasIDStatus example InterfaceName.Update('H323AliasIDStatus') Value = InterfaceName.ReadStatus('H323AliasIDStatus') InterfaceName.SubscribeStatus('H323AliasIDStatus', None, FeedbackHandler)			
Command Input ^{1, 2}	Value '1' – '3' ²	Value '1' – '4' ¹	Value 'Composed'
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command InputHDMILevel ¹	Value -24 to 0 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'HDMI 1'	Qualifier Value 'HDMI 2'	Qualifier Value 'HDMI 3'
# InputHDMILevel example InterfaceName.Update('InputHDMILevel', {'Input': 'HDMI 1'}) Value = InterfaceName.ReadStatus('InputHDMILevel', {'Input': 'HDMI 1'}) InterfaceName.SubscribeStatus('InputHDMILevel', None, FeedbackHandler)			
Command InputLineLevel ¹	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Line 1' 'Line 4'	Qualifier Value 'Line 2'	Qualifier Value 'Line 3'
# InputLineLevel example InterfaceName.Update('InputLineLevel', {'Input': 'Line 1'}) Value = InterfaceName.ReadStatus('InputLineLevel', {'Input': 'Line 1'}) InterfaceName.SubscribeStatus('InputLineLevel', None, FeedbackHandler)			
Command	Value Value		

Global Scripter Module Communication Sheet

Revision: 8/26/2021

InputMicLevel	0 to 70 in steps of 1 ¹	0 to 24 in steps of 1 ^{2,3}	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' - 'Microphone 8' ¹	Qualifier Value 'Microphone 1' - 'Microphone 2' ^{2,3}	
# InputMicLevel example InterfaceName.Update('InputMicLevel', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMicLevel', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMicLevel', None, FeedbackHandler)			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' 'Microphone 8' ¹ 'HDMI 1' - 'HDMI 3' ¹	Qualifier Value 'Line 1' - 'Line 4' ¹	Qualifier Value 'Microphone 1' - 'Microphone 2' ^{2,3}
# InputMute example InterfaceName.Update('InputMute', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMute', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMute', None, FeedbackHandler)			
Command InputSignal	Value 'True'	Value 'False'	Value 'Unknown'
Qualifier Key 'Input'	Qualifier Value '1' - '5' ¹	Qualifier Value '1' - '3' ²	
# InputSignal example InterfaceName.Update('InputSignal', {'Input': '1'}) Value = InterfaceName.ReadStatus('InputSignal', {'Input': '1'}) InterfaceName.SubscribeStatus('InputSignal', None, FeedbackHandler)			
Command InputVideoMute	Value 'On'	Value 'Off'	
# InputVideoMute example InterfaceName.Update('InputVideoMute') Value = InterfaceName.ReadStatus('InputVideoMute') InterfaceName.SubscribeStatus('InputVideoMute', None, FeedbackHandler)			
Command IPAddress	Value 'String'		
# IPAddress example InterfaceName.Update('IPAddress') Value = InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)			
Command LayoutSet	Value 'Auto' 'Overlay' 'Single'	Value 'Custom' 'Prominent'	Value 'Equal' 'Prominent L'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Update('LayoutSet', {'Target': 'Local'}) Value = InterfaceName.ReadStatus('LayoutSet', {'Target': 'Local'}) InterfaceName.SubscribeStatus('LayoutSet', None, FeedbackHandler)			
Command MACAddress	Value 'String'		
# MACAddress example InterfaceName.Update('MACAddress') Value = InterfaceName.ReadStatus('MACAddress') InterfaceName.SubscribeStatus('MACAddress', None, FeedbackHandler)			
Command	Value	Value	

Global Scripter Module Communication Sheet

MacroAutoStart ^{1,2}	'On'	'Off'
# MacroAutoStart example InterfaceName.Update('MacroAutoStart') Value = InterfaceName.ReadStatus('MacroAutoStart') InterfaceName.SubscribeStatus('MacroAutoStart', None, FeedbackHandler)		
Command	Value	Value
MacroMode ^{1,2}	'On'	'Off'
# MacroMode example InterfaceName.Update('MacroMode') Value = InterfaceName.ReadStatus('MacroMode') InterfaceName.SubscribeStatus('MacroMode', None, FeedbackHandler)		
Command	Value	
MeetingAgenda ⁴	'String'	
Qualifier Key	Qualifier Value	
'Meeting'	'1' – '5'	
# MeetingAgenda example Value = InterfaceName.ReadStatus('MeetingAgenda', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingAgenda', None, FeedbackHandler)		
Command	Value	
MeetingDialMode ⁴	'String'	
Qualifier Key	Qualifier Value	
'Meeting'	'1' – '5'	
# MeetingDialMode example Value = InterfaceName.ReadStatus('MeetingDialMode', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingDialMode', None, FeedbackHandler)		
Command	Value	
MeetingDialNumber ⁴	'String'	
Qualifier Key	Qualifier Value	
'Meeting'	'1' – '5'	
# MeetingDialNumber example Value = InterfaceName.ReadStatus('MeetingDialNumber', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingDialNumber', None, FeedbackHandler)		
Command	Value	
MeetingEndTime ⁴	'String'	
Qualifier Key	Qualifier Value	
'Meeting'	'1' – '5'	
# MeetingEndTime example Value = InterfaceName.ReadStatus('MeetingEndTime', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingEndTime', None, FeedbackHandler)		
Command	Value	
MeetingOrganizer ⁴	'String'	
Qualifier Key	Qualifier Value	
'Meeting'	'1' – '5'	
# MeetingOrganizer example Value = InterfaceName.ReadStatus('MeetingOrganizer', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingOrganizer', None, FeedbackHandler)		
Command	Value	
MeetingStartTime ⁴	'String'	
Qualifier Key	Qualifier Value	
'Meeting'	'1' – '5'	
# MeetingStartTime example Value = InterfaceName.ReadStatus('MeetingStartTime', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingStartTime', None, FeedbackHandler)		
Command	Value	
MeetingTitle ⁴	'String'	

Global Scriptor Module Communication Sheet

Qualifier Key 'Meeting'	Qualifier Value '1' – '5'		
# MeetingTitle example Value = InterfaceName.ReadStatus('MeetingTitle', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingTitle', None, FeedbackHandler)			
Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute example InterfaceName.Update('MicrophonesMute') Value = InterfaceName.ReadStatus('MicrophonesMute') InterfaceName.SubscribeStatus('MicrophonesMute', None, FeedbackHandler)			
Command NetworkAssignment	Value 'Static'	Value 'DHCP'	
# NetworkAssignment example InterfaceName.Update('NetworkAssignment') Value = InterfaceName.ReadStatus('NetworkAssignment') InterfaceName.SubscribeStatus('NetworkAssignment', None, FeedbackHandler)			
Command OutputLevel ¹	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# OutputLevel example InterfaceName.Update('OutputLevel', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('OutputLevel', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('OutputLevel', None, FeedbackHandler)			
Command PeopleCountCurrent ¹	Value 'String'		
# PeopleCountCurrent example InterfaceName.Update('PeopleCountCurrent') Value = InterfaceName.ReadStatus('PeopleCountCurrent') InterfaceName.SubscribeStatus('PeopleCountCurrent', None, FeedbackHandler)			
Command PeopleCountOutOfCall ¹	Value 'On'	Value 'Off'	
# PeopleCountOutOfCall example InterfaceName.Update('PeopleCountOutOfCall') Value = InterfaceName.ReadStatus('PeopleCountOutOfCall') InterfaceName.SubscribeStatus('PeopleCountOutOfCall', None, FeedbackHandler)			
Command PeoplePresence ^{1, 2}	Value 'Yes'	Value 'No'	Value 'Unknown'
# PeoplePresence example InterfaceName.Update('PeoplePresence') Value = InterfaceName.ReadStatus('PeoplePresence') InterfaceName.SubscribeStatus('PeoplePresence', None, FeedbackHandler)			
Command PeoplePresenceDetector	Value 'On'	Value 'Off'	
# PeoplePresenceDetector example InterfaceName.Update('PeoplePresenceDetector') Value = InterfaceName.ReadStatus('PeoplePresenceDetector') InterfaceName.SubscribeStatus('PeoplePresenceDetector', None, FeedbackHandler)			
Command PhonebookFolderIDSearch Result	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		

# PhonebookFolderIDSearchResult example Value = InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)			
Command	Value		
PhonebookSearchResult	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 to 10 in steps of 1		
# PhonebookSearchResult example Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)			
Command	Value	Value	Value
PresentationModeStatus	'Off'	'Sending'	'Receiving'
# PresentationModeStatus example InterfaceName.Update('PresentationModeStatus') Value = InterfaceName.ReadStatus('PresentationModeStatus') InterfaceName.SubscribeStatus('PresentationModeStatus', None, FeedbackHandler)			
Command	Value	Value	Value
PresentationSendingMode Status	'Local and Remote'	'Local Only'	'Off'
Qualifier Key	Qualifier Value		
'Instance'	'1' – '6'		
# PresentationSendingModeStatus example InterfaceName.Update('PresentationSendingModeStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSendingModeStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSendingModeStatus', None, FeedbackHandler)			
Command	Value	Value	Value
PresentationSourceStatus	'1' ³ Value 'Off'	'1' – '2' ²	'1' – '4' ¹
Qualifier Key	Qualifier Value		
'Instance'	'1' – '6'		
# PresentationSourceStatus example InterfaceName.Update('PresentationSourceStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSourceStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSourceStatus', None, FeedbackHandler)			
Command	Value	Value	
PresenterTrackControl ¹	'On'	'Off'	
# PresenterTrackControl example InterfaceName.Update('PresenterTrackControl') Value = InterfaceName.ReadStatus('PresenterTrackControl') InterfaceName.SubscribeStatus('PresenterTrackControl', None, FeedbackHandler)			
Command	Value	Value	Value
PresenterTrackMode ¹	'Off' 'Background'	'Follow' 'Setup'	'Diagnostic' 'Persistent'
# PresenterTrackMode example InterfaceName.Update('PresenterTrackMode') Value = InterfaceName.ReadStatus('PresenterTrackMode') InterfaceName.SubscribeStatus('PresenterTrackMode', None, FeedbackHandler)			
Command	Value		
RemoteNumber	'String'		
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
# RemoteNumber example InterfaceName.Update('RemoteNumber', {'Call': '1'}) Value = InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'}) InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)			

Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Update('SelfView') Value = InterfaceName.ReadStatus('SelfView') InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)			
Command SelfViewDefaultFullscreen Mode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Update('SelfViewDefaultFullscreenMode') Value = InterfaceName.ReadStatus('SelfViewDefaultFullscreenMode') InterfaceName.SubscribeStatus('SelfViewDefaultFullscreenMode', None, FeedbackHandler)			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Update('SelfViewPosition') Value = InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)			
Command SIPRegistrationStatus	Value 'Deregistering' 'Registered'	Value 'Failed' 'Registering'	Value 'Inactive'
# SIPRegistrationStatus example InterfaceName.Update('SIPRegistrationStatus') Value = InterfaceName.ReadStatus('SIPRegistrationStatus') InterfaceName.SubscribeStatus('SIPRegistrationStatus', None, FeedbackHandler)			
Command SIPURIStatus	Value 'String'		
# SIPURIStatus example InterfaceName.Update('SIPURIStatus') Value = InterfaceName.ReadStatus('SIPURIStatus') InterfaceName.SubscribeStatus('SIPURIStatus', None, FeedbackHandler)			
Command SpeakerTrackControl ¹	Value 'On'	Value 'Off'	
# SpeakerTrackControl example InterfaceName.Update('SpeakerTrackControl') Value = InterfaceName.ReadStatus('SpeakerTrackControl') InterfaceName.SubscribeStatus('SpeakerTrackControl', None, FeedbackHandler)			
Command SpeakerTrackMode ¹	Value 'Auto'	Value 'Off'	
# SpeakerTrackMode example InterfaceName.Update('SpeakerTrackMode') Value = InterfaceName.ReadStatus('SpeakerTrackMode') InterfaceName.SubscribeStatus('SpeakerTrackMode', None, FeedbackHandler)			
Command Standby	Value 'Activate' 'Half Wake'	Value 'Deactivate'	Value 'Entering Standby'
# Standby example InterfaceName.Update('Standby') Value = InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)			
Command SubnetMask	Value 'String'		
# SubnetMask example			

Global Scripter Module Communication Sheet

<pre>InterfaceName.Update('SubnetMask') Value = InterfaceName.ReadStatus('SubnetMask') InterfaceName.SubscribeStatus('SubnetMask', None, FeedbackHandler)</pre>	
Command SystemTimeStatus	Value 'String'
Qualifier Key 'Type'	Qualifier Value 'Date'
<pre># SystemTimeStatus example InterfaceName.Update('SystemTimeStatus', {'Type': 'Date'}) Value = InterfaceName.ReadStatus('SystemTimeStatus', {'Type': 'Date'}) InterfaceName.SubscribeStatus('SystemTimeStatus', None, FeedbackHandler)</pre>	
Command SystemUnitNameStatus	Value 'String'
<pre># SystemUnitNameStatus example InterfaceName.Update('SystemUnitNameStatus') Value = InterfaceName.ReadStatus('SystemUnitNameStatus') InterfaceName.SubscribeStatus('SystemUnitNameStatus', None, FeedbackHandler)</pre>	
Command Volume	Value 0 to 100 in steps of 1
<pre># Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>	

¹ Only supported for SX80

² Only supported for SX20

³ Only supported for SX10

⁴ Requires "MeetingRefresh" command to populate.

⁵ Requires "CallStatus" command to work properly.

Cable and Adapter Requirements

SX10: Contact manufacturer for cable requirements

SX20: Captive Screw to USB Type-A RS-232 Serial Cable adapter

SX80: Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

For the driver to work, the "Require passphrase change on next user sign in" checkbox under Security → Users → <USERNAME> must be unchecked within the devices embedded webpage.


Serial communication

Port Type: RS-232
Baud Rate: 115200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None


Pin Assignments Diagram

SX10, SX20:

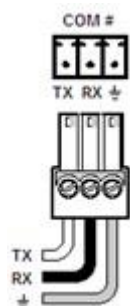


Please contact the manufacturer for the pin assignments diagram and connector type.

SX80:

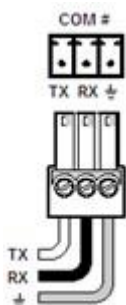

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

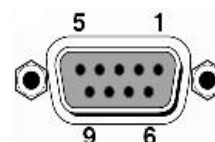

RS232 DB9, Female
Video Conference

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface.

Port Type: Ethernet (SSH)

Default Port: 22

Logon Credentials Supported: Yes

Default Username: admin

Default Password:

Multi-Connection: Yes

Capabilities:

Port Changeability: No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication parameters such as: Username and Password.

Notes for the Device

- Password is required for SSH communication to work. "SSH Mode" must be set to "On" by an admin to have open communication with the driver.
- For the driver to work, the "Require passphrase change on next user sign in" checkbox under Security → Users → <USERNAME> must be unchecked within the devices embedded webpage.

Appendix A. Set Commands

Audio Output Off Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:Off\x0D
Audio Output Off Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:Off\x0D
Audio Output Off Output Line 1	xConfiguration Audio Output Line 1 Mode:Off\x0D
Audio Output Off Output Line 2	xConfiguration Audio Output Line 2 Mode:Off\x0D
Audio Output Off Output Line 3	xConfiguration Audio Output Line 3 Mode:Off\x0D
Audio Output Off Output Line 4	xConfiguration Audio Output Line 4 Mode:Off\x0D
Audio Output Off Output Line 5	xConfiguration Audio Output Line 5 Mode:Off\x0D
Audio Output Off Output Line 6	xConfiguration Audio Output Line 6 Mode:Off\x0D
Audio Output On Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:On\x0D
Audio Output On Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:On\x0D
Audio Output On Output Line 1	xConfiguration Audio Output Line 1 Mode:On\x0D
Audio Output On Output Line 2	xConfiguration Audio Output Line 2 Mode:On\x0D
Audio Output On Output Line 3	xConfiguration Audio Output Line 3 Mode:On\x0D
Audio Output On Output Line 4	xConfiguration Audio Output Line 4 Mode:On\x0D
Audio Output On Output Line 5	xConfiguration Audio Output Line 5 Mode:On\x0D
Audio Output On Output Line 6	xConfiguration Audio Output Line 6 Mode:On\x0D
Auto Answer Off	xConfiguration Conference AutoAnswer Mode:Off\x0D
Auto Answer On	xConfiguration Conference AutoAnswer Mode:On\x0D
Call Authentication Response Command None Call Not Specified Participant Role Cohost Pin 1234	xCommand Conference Call AuthenticationResponse ParticipantRole: Cohost Pin: 1234\x0D
Call Authentication Response Command None Call Not Specified Participant Role Guest No Pin	xCommand Conference Call AuthenticationResponse ParticipantRole: Guest\x0D
Call Authentication Response Command None Call Not Specified Participant Role Host Pin 1234	xCommand Conference Call AuthenticationResponse ParticipantRole: Host Pin: 1234\x0D
Call Authentication Response Command None Call Not Specified Participant Role Panelist No Pin	xCommand Conference Call AuthenticationResponse ParticipantRole: Panelist\x0D
Call Authentication Response Command None Call Not Specified Participant Role Presenter Pin 1234	xCommand Conference Call AuthenticationResponse ParticipantRole: Presenter Pin: 1234\x0D
Call Setup Mode Direct	xConfiguration H323 CallSetup Mode: Direct\x0D
Call Setup Mode Gatekeeper	xConfiguration H323 CallSetup Mode: Gatekeeper\x0D
Camera Focus Auto	xCommand Camera TriggerAutoFocus CameraId:1\x0D
Camera Focus Auto Camera 1	xCommand Camera TriggerAutoFocus CameraId:1\x0D
Camera Focus Auto Camera 7	xCommand Camera TriggerAutoFocus CameraId:7\x0D
Camera Focus Far	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 1	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 7	xCommand Camera Ramp CameraId:7 Focus:Far\x0D
Camera Focus Near	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 1	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 7	xCommand Camera Ramp CameraId:7 Focus:Near\x0D
Camera Focus Stop	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 1	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Camera Focus Stop Camera 7	xCommand Camera Ramp CameraId:7 Focus:Stop\x0D
Camera Pan Left Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 1 Speed 24	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:24\x0D
Camera Pan Left Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 7 Speed 24	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:24\x0D
Camera Pan Left Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 24	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:24\x0D
Camera Pan Right Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 1 Speed 24	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:24\x0D
Camera Pan Right Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 7 Speed 24	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:24\x0D
Camera Pan Right Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Speed 24	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:24\x0D
Camera Pan Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 1 Speed 24	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 24	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Speed 24	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Preset Recall 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset Recall 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Save 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 7	xCommand Camera Preset Store PresetId:1 CameraId:7\x0D
Camera Preset Save 35	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 1	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 7	xCommand Camera Preset Store PresetId:35 CameraId:7\x0D
Camera Tilt Down Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 1 Speed 24	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:24\x0D
Camera Tilt Down Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 7 Speed 24	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:24\x0D
Camera Tilt Down Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 24	xCommand Camera Ramp CameraId:1 Tilt:Down

Global Scripter Module Communication Sheet

Revision: 8/26/2021

	TiltSpeed:24\x0D
Camera Tilt Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 1 Speed 24	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 24	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Stop\x0D
Camera Tilt Stop Speed 24	xCommand Camera Ramp CameraId:1 Tilt:Stop\x0D
Camera Tilt Up Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 1 Speed 24	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:24\x0D
Camera Tilt Up Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 7 Speed 24	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:24\x0D
Camera Tilt Up Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 24	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:24\x0D
Camera Zoom In Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom Out Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom: Stop\x0D
Camera Zoom Stop Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Display Mode Auto	xConfiguration Video Monitors: Auto\x0D
Display Mode Dual	xConfiguration Video Monitors: Dual\x0D
Display Mode Dual Presentation Only	xConfiguration Video Monitors: DualPresentationOnly\x0D
Display Mode Single	xConfiguration Video Monitors: Single\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Display Mode Triple	xConfiguration Video Monitors: Triple\x0D
Display Mode Triple Presentation Only	xConfiguration Video Monitors: TriplePresentationOnly\x0D
DNS Domain Name Command None	xConfiguration Network 1 DNS Domain Name: DNS\x0D
DNS Server Address Command None	xConfiguration Network 1 DNS Server 1 Address: DNS\x0D
Do Not Disturb Active	xCommand Conference DoNotDisturb Activate\x0D
Do Not Disturb Inactive	xCommand Conference DoNotDisturb Deactivate\x0D
DTMF #	xCommand Call DTMFSend DTMFString:#\x0D
DTMF *	xCommand Call DTMFSend DTMFString:*\x0D
DTMF 0	xCommand Call DTMFSend DTMFString:0\x0D
DTMF 9	xCommand Call DTMFSend DTMFString:9\x0D
Far End Camera Pan/Tilt Down	xCommand Call FarEndControl Camera Move Value:Down\x0D
Far End Camera Pan/Tilt Left	xCommand Call FarEndControl Camera Move Value:Left\x0D
Far End Camera Pan/Tilt Right	xCommand Call FarEndControl Camera Move Value:Right\x0D
Far End Camera Pan/Tilt Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Camera Pan/Tilt Up	xCommand Call FarEndControl Camera Move Value:Up\x0D
Far End Camera Preset Recall 1	xCommand Call FarEndControl RoomPreset Activate PresetId: 1\x0D
Far End Camera Preset Recall 15	xCommand Call FarEndControl RoomPreset Activate PresetId:15\x0D
Far End Camera Source 0	xCommand Call FarEndControl Source Select SourceId:0\x0D
Far End Camera Source 15	xCommand Call FarEndControl Source Select SourceId:15\x0D
Far End Camera Zoom In	xCommand Call FarEndControl Camera Move Value:ZoomIn\x0D
Far End Camera Zoom Out	xCommand Call FarEndControl Camera Move Value:ZoomOut\x0D
Far End Camera Zoom Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Control Off	xConfiguration Conference FarEndControl Mode: Off\x0D
Far End Control On	xConfiguration Conference FarEndControl Mode: On\x0D
H323 Gatekeeper Address Command None	xConfiguration H323 Gatekeeper Address: H323\x0D
H323Alias E164 Command None	xConfiguration H323 H323Alias E164: H323\x0D
H323Alias ID Command None	xConfiguration H323 H323Alias ID: H323\x0D
H323Profile Authentication LoginName Command None	H323 Authentication LoginName: H323\x0D
H323Profile Authentication Password Command None	xConfiguration H323 Authentication Password: H323\x0D
Hook Accept Protocol Auto	xCommand Call Accept\x0D
Hook Accept Protocol H320	xCommand Call Accept\x0D
Hook Accept Protocol H323	xCommand Call Accept\x0D
Hook Accept Protocol SIP	xCommand Call Accept\x0D
Hook Accept Protocol Spark	xCommand Call Accept\x0D
Hook Disconnect All Protocol Auto	xCommand Call Disconnect \x0D

Global Scriptor Module Communication Sheet

Hook Disconnect All Protocol H320	xCommand Call Disconnect \x0D
Hook Disconnect All Protocol H323	xCommand Call Disconnect \x0D
Hook Disconnect All Protocol SIP	xCommand Call Disconnect \x0D
Hook Disconnect All Protocol Spark	xCommand Call Disconnect \x0D
Hook Reject Protocol Auto	xCommand Call Reject\x0D
Hook Reject Protocol H320	xCommand Call Reject\x0D
Hook Reject Protocol H323	xCommand Call Reject\x0D
Hook Reject Protocol SIP	xCommand Call Reject\x0D
Hook Reject Protocol Spark	xCommand Call Reject\x0D
Input 1	xCommand Video Input SetMainVideoSource ConnectorId: 1\x0D
Input 3	xCommand Video Input SetMainVideoSource ConnectorId: 3\x0D
Input 6	xCommand Video Input SetMainVideoSource ConnectorId: 6\x0D
Input HDMI Level 0 Input HDMI 1	xConfiguration Audio Input HDMI 1 Level:0\x0D
Input HDMI Level 0 Input HDMI 2	xConfiguration Audio Input HDMI 2 Level:0\x0D
Input HDMI Level 0 Input HDMI 3	xConfiguration Audio Input HDMI 3 Level:0\x0D
Input HDMI Level -24 Input HDMI 1	xConfiguration Audio Input HDMI 1 Level:-24\x0D
Input HDMI Level -24 Input HDMI 2	xConfiguration Audio Input HDMI 2 Level:-24\x0D
Input HDMI Level -24 Input HDMI 3	xConfiguration Audio Input HDMI 3 Level:-24\x0D
Input Line Level 0 Input Line 1	xConfiguration Audio Input Line 1 Level:0\x0D
Input Line Level 0 Input Line 2	xConfiguration Audio Input Line 2 Level:0\x0D
Input Line Level 0 Input Line 3	xConfiguration Audio Input Line 3 Level:0\x0D
Input Line Level 0 Input Line 4	xConfiguration Audio Input Line 4 Level:0\x0D
Input Line Level 24 Input Line 1	xConfiguration Audio Input Line 1 Level:24\x0D
Input Line Level 24 Input Line 2	xConfiguration Audio Input Line 2 Level:24\x0D
Input Line Level 24 Input Line 3	xConfiguration Audio Input Line 3 Level:24\x0D
Input Line Level 24 Input Line 4	xConfiguration Audio Input Line 4 Level:24\x0D
Input Mic Level 0 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:0\x0D
Input Mic Level 0 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:0\x0D
Input Mic Level 0 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:0\x0D
Input Mic Level 0 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:0\x0D
Input Mic Level 0 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:0\x0D
Input Mic Level 0 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:0\x0D
Input Mic Level 0 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:0\x0D
Input Mic Level 0 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:0\x0D
Input Mic Level 24 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:24\x0D
Input Mic Level 24 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:24\x0D
Input Mic Level 70 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:70\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Input Mic Level 70 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:70\x0D
Input Mic Level 70 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:70\x0D
Input Mic Level 70 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:70\x0D
Input Mic Level 70 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:70\x0D
Input Mic Level 70 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:70\x0D
Input Mic Level 70 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:70\x0D
Input Mic Level 70 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:70\x0D
Input Mute Off Input Line 1	xConfiguration Audio Input Line 1 Mode:On\x0D
Input Mute Off Input Line 2	xConfiguration Audio Input Line 2 Mode:On\x0D
Input Mute Off Input Line 3	xConfiguration Audio Input Line 3 Mode:On\x0D
Input Mute Off Input Line 4	xConfiguration Audio Input Line 4 Mode:On\x0D
Input Mute Off Input HDMI 1	xConfiguration Audio Input HDMI 1 Mode:On\x0D
Input Mute Off Input HDMI 2	xConfiguration Audio Input HDMI 2 Mode:On\x0D
Input Mute Off Input HDMI 3	xConfiguration Audio Input HDMI 3 Mode:On\x0D
Input Mute Off Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:On\x0D
Input Mute Off Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:On\x0D
Input Mute Off Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:On\x0D
Input Mute Off Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:On\x0D
Input Mute Off Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:On\x0D
Input Mute Off Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:On\x0D
Input Mute Off Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:On\x0D
Input Mute Off Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:On\x0D
Input Mute On Input Line 1	xConfiguration Audio Input Line 1 Mode:Off\x0D
Input Mute On Input Line 2	xConfiguration Audio Input Line 2 Mode:Off\x0D
Input Mute On Input Line 3	xConfiguration Audio Input Line 3 Mode:Off\x0D
Input Mute On Input Line 4	xConfiguration Audio Input Line 4 Mode:Off\x0D
Input Mute On Input HDMI 1	xConfiguration Audio Input HDMI 1 Mode:Off\x0D
Input Mute On Input HDMI 2	xConfiguration Audio Input HDMI 2 Mode:Off\x0D
Input Mute On Input HDMI 3	xConfiguration Audio Input HDMI 3 Mode:Off\x0D
Input Mute On Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:Off\x0D
Input Mute On Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:Off\x0D
Input Mute On Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:Off\x0D
Input Mute On Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:Off\x0D
Input Mute On Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:Off\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Input Mute On Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:Off\x0D
Input Mute On Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:Off\x0D
Input Mute On Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:Off\x0D
Input Video Mute Off	xCommand Video Input MainVideo Unmute\x0D
Input Video Mute On	xCommand Video Input MainVideo Mute\x0D
IPv4 Address Command None	xConfiguration Network 1 IPv4 Address: IPv4\x0D
IPv4 Gateway Command None	xConfiguration Network 1 IPv4 Gateway: IPv4\x0D
IPv4 SubnetMask Command None	xConfiguration Network 1 IPv4 SubnetMask: IPv4\x0D
IR Emulation - Key Click	xCommand UserInterface OSD Key Click Key: -\x0D
IR Emulation - Key Press	xCommand UserInterface OSD Key Press Key: -\x0D
IR Emulation - Key Release	xCommand UserInterface OSD Key Release Key: - \x0D
IR Emulation + Key Click	xCommand UserInterface OSD Key Click Key: +\x0D
IR Emulation + Key Press	xCommand UserInterface OSD Key Press Key: +\x0D
IR Emulation + Key Release	xCommand UserInterface OSD Key Release Key: +\x0D
IR Emulation 0 Key Click	xCommand UserInterface OSD Key Click Key: 0\x0D
IR Emulation 0 Key Press	xCommand UserInterface OSD Key Press Key: 0\x0D
IR Emulation 0 Key Release	xCommand UserInterface OSD Key Release Key: 0\x0D
IR Emulation 9 Key Click	xCommand UserInterface OSD Key Click Key: 9\x0D
IR Emulation 9 Key Press	xCommand UserInterface OSD Key Press Key: 9\x0D
IR Emulation 9 Key Release	xCommand UserInterface OSD Key Release Key: 9\x0D
IR Emulation Aux Key Click	xCommand UserInterface OSD Key Click Key: SrcAux\x0D
IR Emulation Aux Key Press	xCommand UserInterface OSD Key Press Key: SrcAux\x0D
IR Emulation Aux Key Release	xCommand UserInterface OSD Key Release Key: SrcAux\x0D
IR Emulation C Key Click	xCommand UserInterface OSD Key Click Key: C\x0D
IR Emulation C Key Press	xCommand UserInterface OSD Key Press Key: C\x0D
IR Emulation C Key Release	xCommand UserInterface OSD Key Release Key: C\x0D
IR Emulation Call Key Click	xCommand UserInterface OSD Key Click Key: Call\x0D
IR Emulation Call Key Press	xCommand UserInterface OSD Key Press Key: Call\x0D
IR Emulation Call Key Release	xCommand UserInterface OSD Key Release Key: Call\x0D
IR Emulation Camera Key Click	xCommand UserInterface OSD Key Click Key: SrcCamera\x0D
IR Emulation Camera Key Press	xCommand UserInterface OSD Key Press Key: SrcCamera\x0D
IR Emulation Camera Key Release	xCommand UserInterface OSD Key Release Key: SrcCamera\x0D
IR Emulation Disconnect Key Click	xCommand UserInterface OSD Key Click Key: Disconnect\x0D
IR Emulation Disconnect Key Press	xCommand UserInterface OSD Key Press Key: Disconnect\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

IR Emulation Disconnect Key Release	xCommand UserInterface OSD Key Release Key: Disconnect\x0D
IR Emulation Doc Cam Key Click	xCommand UserInterface OSD Key Click Key: SrcDocCam\x0D
IR Emulation Doc Cam Key Press	xCommand UserInterface OSD Key Press Key: SrcDocCam\x0D
IR Emulation Doc Cam Key Release	xCommand UserInterface OSD Key Release Key: SrcDocCam\x0D
IR Emulation Down Key Click	xCommand UserInterface OSD Key Click Key: Down\x0D
IR Emulation Down Key Press	xCommand UserInterface OSD Key Press Key: Down\x0D
IR Emulation Down Key Release	xCommand UserInterface OSD Key Release Key: Down\x0D
IR Emulation F1 Key Click	xCommand UserInterface OSD Key Click Key: F1\x0D
IR Emulation F1 Key Press	xCommand UserInterface OSD Key Press Key: F1\x0D
IR Emulation F1 Key Release	xCommand UserInterface OSD Key Release Key: F1\x0D
IR Emulation F2 Key Click	xCommand UserInterface OSD Key Click Key: F2\x0D
IR Emulation F2 Key Press	xCommand UserInterface OSD Key Press Key: F2\x0D
IR Emulation F2 Key Release	xCommand UserInterface OSD Key Release Key: F2\x0D
IR Emulation F3 Key Click	xCommand UserInterface OSD Key Click Key: F3\x0D
IR Emulation F3 Key Press	xCommand UserInterface OSD Key Press Key: F3\x0D
IR Emulation F3 Key Release	xCommand UserInterface OSD Key Release Key: F3\x0D
IR Emulation F4 Key Click	xCommand UserInterface OSD Key Click Key: F4\x0D
IR Emulation F4 Key Press	xCommand UserInterface OSD Key Press Key: F4\x0D
IR Emulation F4 Key Release	xCommand UserInterface OSD Key Release Key: F4\x0D
IR Emulation F5 Key Click	xCommand UserInterface OSD Key Click Key: F5\x0D
IR Emulation F5 Key Press	xCommand UserInterface OSD Key Press Key: F5\x0D
IR Emulation F5 Key Release	xCommand UserInterface OSD Key Release Key: F5\x0D
IR Emulation Grab Key Click	xCommand UserInterface OSD Key Click Key: Grab\x0D
IR Emulation Grab Key Press	xCommand UserInterface OSD Key Press Key: Grab\x0D
IR Emulation Grab Key Release	xCommand UserInterface OSD Key Release Key: Grab\x0D
IR Emulation Home Key Click	xCommand UserInterface OSD Key Click Key: Home\x0D
IR Emulation Home Key Press	xCommand UserInterface OSD Key Press Key: Home\x0D
IR Emulation Home Key Release	xCommand UserInterface OSD Key Release Key: Home\x0D
IR Emulation Layout Key Click	xCommand UserInterface OSD Key Click Key: Layout\x0D
IR Emulation Layout Key Press	xCommand UserInterface OSD Key Press Key: Layout\x0D
IR Emulation Layout Key Release	xCommand UserInterface OSD Key Release Key: Layout\x0D
IR Emulation Left Key Click	xCommand UserInterface OSD Key Click Key: Left\x0D
IR Emulation Left Key Press	xCommand UserInterface OSD Key Press Key: Left\x0D

Global Scripter Module Communication Sheet

IR Emulation Left Key Release	xCommand UserInterface OSD Key Release Key: Left\x0D
IR Emulation Mute Key Click	xCommand UserInterface OSD Key Click Key: Mute\x0D
IR Emulation Mute Key Press	xCommand UserInterface OSD Key Press Key: Mute\x0D
IR Emulation Mute Key Release	xCommand UserInterface OSD Key Release Key: Mute\x0D
IR Emulation Mute Mic Key Click	xCommand UserInterface OSD Key Click Key: MuteMic\x0D
IR Emulation Mute Mic Key Press	xCommand UserInterface OSD Key Press Key: MuteMic\x0D
IR Emulation Mute Mic Key Release	xCommand UserInterface OSD Key Release Key: MuteMic\x0D
IR Emulation Ok Key Click	xCommand UserInterface OSD Key Click Key: Ok\x0D
IR Emulation Ok Key Press	xCommand UserInterface OSD Key Press Key: Ok\x0D
IR Emulation Ok Key Release	xCommand UserInterface OSD Key Release Key: Ok\x0D
IR Emulation Pc Key Click	xCommand UserInterface OSD Key Click Key: SrcPc\x0D
IR Emulation Pc Key Press	xCommand UserInterface OSD Key Press Key: SrcPc\x0D
IR Emulation Pc Key Release	xCommand UserInterface OSD Key Release Key: SrcPc\x0D
IR Emulation PhoneBook Key Click	xCommand UserInterface OSD Key Click Key: PhoneBook\x0D
IR Emulation PhoneBook Key Press	xCommand UserInterface OSD Key Press Key: PhoneBook\x0D
IR Emulation PhoneBook Key Release	xCommand UserInterface OSD Key Release Key: PhoneBook\x0D
IR Emulation Presentation Key Click	xCommand UserInterface OSD Key Click Key: Presentation\x0D
IR Emulation Presentation Key Press	xCommand UserInterface OSD Key Press Key: Presentation\x0D
IR Emulation Presentation Key Release	xCommand UserInterface OSD Key Release Key: Presentation\x0D
IR Emulation Right Key Click	xCommand UserInterface OSD Key Click Key: Right\x0D
IR Emulation Right Key Press	xCommand UserInterface OSD Key Press Key: Right\x0D
IR Emulation Right Key Release	xCommand UserInterface OSD Key Release Key: Right\x0D
IR Emulation Selfview Key Click	xCommand UserInterface OSD Key Click Key: Selfview\x0D
IR Emulation Selfview Key Press	xCommand UserInterface OSD Key Press Key: Selfview\x0D
IR Emulation Selfview Key Release	xCommand UserInterface OSD Key Release Key: Selfview\x0D
IR Emulation Square Key Click	xCommand UserInterface OSD Key Click Key: Square\x0D
IR Emulation Square Key Press	xCommand UserInterface OSD Key Press Key: Square\x0D
IR Emulation Square Key Release	xCommand UserInterface OSD Key Release Key: Square\x0D
IR Emulation Star Key Click	xCommand UserInterface OSD Key Click Key: Star\x0D
IR Emulation Star Key Press	xCommand UserInterface OSD Key Press Key: Star\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

IR Emulation Star Key Release	xCommand UserInterface OSD Key Release Key: Star\x0D
IR Emulation Up Key Click	xCommand UserInterface OSD Key Click Key: Up\x0D
IR Emulation Up Key Press	xCommand UserInterface OSD Key Press Key: Up\x0D
IR Emulation Up Key Release	xCommand UserInterface OSD Key Release Key: Up\x0D
IR Emulation Vcr Key Click	xCommand UserInterface OSD Key Click Key: SrcVcr\x0D
IR Emulation Vcr Key Press	xCommand UserInterface OSD Key Press Key: SrcVcr\x0D
IR Emulation Vcr Key Release	xCommand UserInterface OSD Key Release Key: SrcVcr\x0D
IR Emulation Volume Down Key Click	xCommand UserInterface OSD Key Click Key: VolumeDown\x0D
IR Emulation Volume Down Key Press	xCommand UserInterface OSD Key Press Key: VolumeDown\x0D
IR Emulation Volume Down Key Release	xCommand UserInterface OSD Key Release Key: VolumeDown\x0D
IR Emulation Volume Up Key Click	xCommand UserInterface OSD Key Click Key: VolumeUp\x0D
IR Emulation Volume Up Key Press	xCommand UserInterface OSD Key Press Key: VolumeUp\x0D
IR Emulation Volume Up Key Release	xCommand UserInterface OSD Key Release Key: VolumeUp\x0D
IR Emulation Zoom In Key Click	xCommand UserInterface OSD Key Click Key: ZoomIn\x0D
IR Emulation Zoom In Key Press	xCommand UserInterface OSD Key Press Key: ZoomIn\x0D
IR Emulation Zoom In Key Release	xCommand UserInterface OSD Key Release Key: ZoomIn\x0D
IR Emulation Zoom Out Key Click	xCommand UserInterface OSD Key Click Key: ZoomOut\x0D
IR Emulation Zoom Out Key Press	xCommand UserInterface OSD Key Press Key: ZoomOut\x0D
IR Emulation Zoom Out Key Release	xCommand UserInterface OSD Key Release Key: ZoomOut\x0D
Layout Set Auto Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: auto\x0D
Layout Set Auto Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: auto\x0D
Layout Set Custom Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: custom\x0D
Layout Set Custom Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: custom\x0D
Layout Set Equal Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: equal\x0D
Layout Set Equal Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: equal\x0D
Layout Set Overlay Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: overlay\x0D
Layout Set Overlay Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: overlay\x0D
Layout Set Prominent Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: prominent\x0D
Layout Set Prominent Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: prominent\x0D
Layout Set Prominent L Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:prominent_l\x0D

Global Scriptor Module Communication Sheet

Revision: 8/26/2021

Layout Set Prominent L Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily: prominent_l\x0D
Layout Set Single Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: single\x0D
Layout Set Single Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: single\x0D
Macro Activate Name testString	xCommand Macros Macro Activate Name: "testString"\x0D
Macro Auto Start Off	xConfiguration Macros AutoStart: Off\x0D
Macro Auto Start On	xConfiguration Macros AutoStart: On\x0D
Macro Deactivate Name testString	xCommand Macros Macro Deactivate Name: "testString"\x0D
Macro Mode Off	xConfiguration Macros Mode: Off\x0D
Macro Mode On	xConfiguration Macros Mode: On\x0D
Microphones Mute Off	xCommand Audio Microphones Unmute\x0D
Microphones Mute On	xCommand Audio Microphones Mute\x0D
Output Level 0 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level: 0\x0D
Output Level 0 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level: 0\x0D
Output Level 0 Output Line 1	xConfiguration Audio Output Line 1 Level: 0\x0D
Output Level 0 Output Line 2	xConfiguration Audio Output Line 2 Level: 0\x0D
Output Level 0 Output Line 3	xConfiguration Audio Output Line 3 Level: 0\x0D
Output Level 0 Output Line 4	xConfiguration Audio Output Line 4 Level: 0\x0D
Output Level 0 Output Line 5	xConfiguration Audio Output Line 5 Level: 0\x0D
Output Level 0 Output Line 6	xConfiguration Audio Output Line 6 Level: 0\x0D
Output Level -24 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level: -24\x0D
Output Level -24 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level: -24\x0D
Output Level -24 Output Line 1	xConfiguration Audio Output Line 1 Level: -24\x0D
Output Level -24 Output Line 2	xConfiguration Audio Output Line 2 Level: -24\x0D
Output Level -24 Output Line 3	xConfiguration Audio Output Line 3 Level: -24\x0D
Output Level -24 Output Line 4	xConfiguration Audio Output Line 4 Level: -24\x0D
Output Level -24 Output Line 5	xConfiguration Audio Output Line 5 Level: -24\x0D
Output Level -24 Output Line 6	xConfiguration Audio Output Line 6 Level: -24\x0D
People Count Out of Call Off	xConfiguration RoomAnalytics PeopleCountOutOfCall: Off\x0D
People Count Out of Call On	xConfiguration RoomAnalytics PeopleCountOutOfCall: On\x0D
People Presence Detector Off	xConfiguration RoomAnalytics PeoplePresenceDetector: Off\x0D
People Presence Detector On	xConfiguration RoomAnalytics PeoplePresenceDetector: On\x0D
Presentation ExternalSource Select Command None	xCommand UserInterface Presentation ExternalSource Select SourceIdentifier: "Source Value"\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance: 1 SendingMode: LocalRemote ConnectorId: 1 Layout: Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance: 1 SendingMode: LocalRemote ConnectorId: 1\x0D
Presentation Start Video Input Source Connector Id 1	xCommand Presentation Start Instance: 1 SendingMode: LocalRemote ConnectorId: 1

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Sending Mode Local and Remote Instance 1 Layout Prominent	Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:1 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:1 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:1 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Layout Prominent	
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance New Layout	xCommand Presentation Start Instance:New ConnectorId:2 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Prominent	
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:2 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:2 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3

Global Scripter Module Communication Sheet

	Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6 Layout	xCommand Presentation Start Instance:6 ConnectorId:3 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Prominent	
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:3 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:3 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Specified Layout Equal	Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4	xCommand Presentation Start Instance:1 ConnectorId:4 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Sending Mode Not Specified Instance 1 Layout Prominent	
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:4 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:4 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Layout Equal	Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:5 Layout:Equal\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:5 Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout	xCommand Presentation Start Instance:6 SendingMode:LocalRemote Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Equal	
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Sending Mode Local Only Instance New Layout Prominent	
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New Layout:Prominent\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start Layout:Equal\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:1 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:1 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:1 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:2\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:2 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:2 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:3 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:3 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:3 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:4 Layout:Prominent\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:4 Layout:Equal\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:4 Layout:Prominent\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop Instance:1\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Layout Prominent	
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:1\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:3\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Revision: 8/26/2021

Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:4\x0D
PresenterTrack Control Off	xConfiguration Cameras PresenterTrack Enabled: False\x0D
PresenterTrack Control On	xConfiguration Cameras PresenterTrack Enabled: True\x0D
PresenterTrack Mode Background	xCommand Cameras PresenterTrack Set Mode: Background\x0D
PresenterTrack Mode Diagnostic	xCommand Cameras PresenterTrack Set Mode: Diagnostic\x0D
PresenterTrack Mode Follow	xCommand Cameras PresenterTrack Set Mode: Follow\x0D
PresenterTrack Mode Off	xCommand Cameras PresenterTrack Set Mode: Off\x0D
PresenterTrack Mode Persistent	xCommand Cameras PresenterTrack Set Mode: Persistent\x0D
PresenterTrack Mode Setup	xCommand Cameras PresenterTrack Set Mode: Setup\x0D
Preset Recall 1	xCommand RoomPreset Activate PresetId:1\x0D
Preset Recall 15	xCommand RoomPreset Activate PresetId:15\x0D
Preset Save 1	xCommand RoomPreset Store PresetId:1 Type:All\x0D
Preset Save 15	xCommand RoomPreset Store PresetId:15 Type:All\x0D
Reboot None	xCommand SystemUnit Boot Action:Restart\x0D
Restart Macros None	xCommand Macros Runtime Restart\x0D
Self View Default Fullscreen Mode Current	xConfiguration Video Selfview Default FullscreenMode:Current\x0D
Self View Default Fullscreen Mode Off	xConfiguration Video Selfview Default FullscreenMode:Off\x0D
Self View Default Fullscreen Mode On	xConfiguration Video Selfview Default FullscreenMode:On\x0D
Self View Off	xCommand Video Selfview Set Mode:Off\x0D
Self View On	xCommand Video Selfview Set Mode:On\x0D
Self View Position Center Left	xCommand Video Selfview Set PIPPosition:CenterLeft\x0D
Self View Position Center Right	xCommand Video Selfview Set PIPPosition:CenterRight\x0D
Self View Position Lower Left	xCommand Video Selfview Set PIPPosition:LowerLeft\x0D

Global Scriptor Module Communication Sheet

Self View Position Lower Right	xCommand Video Selfview Set PIPPosition:LowerRight\x0D
Self View Position Upper Center	xCommand Video Selfview Set PIPPosition:UpperCenter\x0D
Self View Position Upper Left	xCommand Video Selfview Set PIPPosition:UpperLeft\x0D
Self View Position Upper Right	xCommand Video Selfview Set PIPPosition:UpperRight\x0D
SIP URI Command None	xConfiguration SIP URI: SIPURI\x0D
Sleep Timer 1	xCommand Standby ResetTimer Delay:1\x0D
Sleep Timer 480	xCommand Standby ResetTimer Delay:480\x0D
SpeakerTrack Control Off	xCommand Cameras SpeakerTrack Deactivate\x0D
SpeakerTrack Control On	xCommand Cameras SpeakerTrack Activate\x0D
SpeakerTrack Mode Auto	xConfiguration Cameras SpeakerTrack Mode: Auto\x0D
SpeakerTrack Mode Off	xConfiguration Cameras SpeakerTrack Mode: Off\x0D
Standby Activate	xCommand Standby Activate\x0D
Standby Deactivate	xCommand Standby Deactivate\x0D
Standby Half Wake	xCommand Standby Halfwake\x0D
System Unit Name Command None	xConfiguration SystemUnit Name: System Unit Name\x0D
Volume 0	xCommand Audio Volume Set Level:0\x0D
Volume 100	xCommand Audio Volume Set Level:100\x0D

Appendix B. Update Commands

Audio Output Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode\x0D
Audio Output Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode\x0D
Audio Output Output Line 1	xConfiguration Audio Output Line 1 Mode\x0D
Audio Output Output Line 2	xConfiguration Audio Output Line 2 Mode\x0D
Audio Output Output Line 3	xConfiguration Audio Output Line 3 Mode\x0D
Audio Output Output Line 4	xConfiguration Audio Output Line 4 Mode\x0D
Audio Output Output Line 5	xConfiguration Audio Output Line 5 Mode\x0D
Audio Output Output Line 6	xConfiguration Audio Output Line 6 Mode\x0D
Auto Answer	xConfiguration Conference AutoAnswer Mode\x0D
Call Authentication Request Status Call 1	xStatus Conference Call 132 AuthenticationRequest\x0D
Call Authentication Request Status Call 5	xStatus Conference Call 132 AuthenticationRequest\x0D
Call Setup Mode	xConfiguration H323 CallSetup Mode\x0D
Call Status Call 1	xstatus call\x0D
Call Status Call 5	xstatus call\x0D
Call Status Device Type Call 1	xstatus call\x0D
Call Status Device Type Call 5	xstatus call\x0D
Call Status Type Call 1	xstatus call\x0D
Call Status Type Call 5	xstatus call\x0D
Display Mode	xConfiguration Video Monitors\x0D
Display Name Call 1	xstatus call\x0D
Display Name Call 5	xstatus call\x0D
DNS Domain Name	xStatus Network 1 DNS Domain Name\x0D
DNS Server Address Server 1	xStatus Network 1 DNS Server 1 Address\x0D
DNS Server Address Server 5	xStatus Network 1 DNS Server 5 Address\x0D
Do Not Disturb	xStatus Conference 1 DoNotDisturb\x0D
Far End Control	xConfiguration Conference FarEndControl Mode\x0D
Firmware Version	xgetxml /status/standby\x0D
Gateway Address	xStatus Network 1 IPv4 Gateway\x0D
H323 Gatekeeper Address	xStatus H323 Gatekeeper Address\x0D
H323 Gatekeeper Status	xStatus H323 Gatekeeper Status\x0D
H323Alias E164 Status	xConfiguration H323 H323Alias E164\x0D
H323Alias ID Status	xConfiguration H323 H323Alias ID\x0D
Input	xStatus Video Input MainVideoSource\x0D
Input HDMI Level Input HDMI 1	xConfiguration Audio Input HDMI 1 Level\x0D
Input HDMI Level Input HDMI 2	xConfiguration Audio Input HDMI 2 Level\x0D
Input HDMI Level Input HDMI 3	xConfiguration Audio Input HDMI 3 Level\x0D
Input Line Level Input Line 1	xConfiguration Audio Input Line 1 Level\x0D
Input Line Level Input Line 2	xConfiguration Audio Input Line 2 Level\x0D
Input Line Level Input Line 3	xConfiguration Audio Input Line 3 Level\x0D
Input Line Level Input Line 4	xConfiguration Audio Input Line 4 Level\x0D
Input Mic Level Input Microphone 1	xConfiguration Audio Input Microphone 1 Level\x0D

Global Scripter Module Communication Sheet

Input Mic Level Input Microphone 2	xConfiguration Audio Input Microphone 2 Level\x0D
Input Mic Level Input Microphone 3	xConfiguration Audio Input Microphone 3 Level\x0D
Input Mic Level Input Microphone 4	xConfiguration Audio Input Microphone 4 Level\x0D
Input Mic Level Input Microphone 5	xConfiguration Audio Input Microphone 5 Level\x0D
Input Mic Level Input Microphone 6	xConfiguration Audio Input Microphone 6 Level\x0D
Input Mic Level Input Microphone 7	xConfiguration Audio Input Microphone 7 Level\x0D
Input Mic Level Input Microphone 8	xConfiguration Audio Input Microphone 8 Level\x0D
Input Mute Input HDMI 1	xConfiguration Audio Input HDMI 1 Mode\x0D
Input Mute Input HDMI 2	xConfiguration Audio Input HDMI 2 Mode\x0D
Input Mute Input HDMI 3	xConfiguration Audio Input HDMI 3 Mode\x0D
Input Mute Input Line 1	xConfiguration Audio Input Line 1 Mode\x0D
Input Mute Input Line 2	xConfiguration Audio Input Line 2 Mode\x0D
Input Mute Input Line 3	xConfiguration Audio Input Line 3 Mode\x0D
Input Mute Input Line 4	xConfiguration Audio Input Line 4 Mode\x0D
Input Mute Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode\x0D
Input Mute Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode\x0D
Input Mute Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode\x0D
Input Mute Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode\x0D
Input Mute Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode\x0D
Input Mute Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode\x0D
Input Mute Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode\x0D
Input Mute Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode\x0D
Input Signal Input 1	xStatus Video Input Connector 1 Connected\x0D
Input Signal Input 3	xStatus Video Input Connector 3 Connected\x0D
Input Signal Input 5	xStatus Video Input Connector 5 Connected\x0D
Input Video Mute	xStatus Video Input MainVideoMute\x0D
IP Address	xStatus Network 1 IPv4 Address\x0D
Layout Set Target Local	xStatus Video Layout LayoutFamily Local\x0D
Layout Set Target Remote	xStatus Video Layout LayoutFamily Remote\x0D
MAC Address	xStatus Network 1 Ethernet MacAddress\x0D
Macro Auto Start	xConfiguration Macros AutoStart\x0D
Macro Mode	xConfiguration Macros Mode\x0D
Microphones Mute	xStatus Audio Microphones Mute\x0D
Network Assignment	xConfiguration Network 1 IPv4 Assignment\x0D
Output Level Output HDMI 1	xConfiguration Audio Output HDMI 1 Level\x0D
Output Level Output HDMI 2	xConfiguration Audio Output HDMI 2 Level\x0D
Output Level Output Line 1	xConfiguration Audio Output Line 1 Level\x0D
Output Level Output Line 2	xConfiguration Audio Output Line 2 Level\x0D
Output Level Output Line 3	xConfiguration Audio Output Line 3 Level\x0D
Output Level Output Line 4	xConfiguration Audio Output Line 4 Level\x0D
Output Level Output Line 5	xConfiguration Audio Output Line 5 Level\x0D

Global Scripter Module Communication Sheet

Output Level Output Line 6	xConfiguration Audio Output Line 6 Level\x0D
People Count Current	xStatus RoomAnalytics PeopleCount Current\x0D
People Count Out of Call	xConfiguration RoomAnalytics PeopleCountOutOfCall\x0D
People Presence Detector	xConfiguration RoomAnalytics PeoplePresenceDetector\x0D
Presentation Mode Status	xStatus Conference Presentation Mode\x0D
Presentation Sending Mode Status Instance 1	xStatus Conference Presentation LocalInstance 1 SendingMode\x0D
Presentation Sending Mode Status Instance 6	xStatus Conference Presentation LocalInstance 6 SendingMode\x0D
Presentation Source Status Instance 1	xStatus Conference Presentation LocalInstance 1 Source\x0D
Presentation Source Status Instance 6	xStatus Conference Presentation LocalInstance 6 Source\x0D
PresenterTrack Control	xConfiguration Cameras PresenterTrack Enabled\x0D
PresenterTrack Mode	xStatus Cameras PresenterTrack Status\x0D
Remote Number Call 1	xstatus call\x0D
Remote Number Call 5	xstatus call\x0D
Self View	xStatus Video Selfview Mode\x0D
Self View Default Fullscreen Mode	xConfiguration Video Selfview Default FullscreenMode\x0D
Self View Position	xStatus Video Selfview PIPPosition\x0D
SIP Registration Status	xStatus SIP Registration 1 Status\x0D
SIP URI Status	xConfiguration SIP URI\x0D
SpeakerTrack Control	xStatus Cameras SpeakerTrack Status\x0D
SpeakerTrack Mode	xConfiguration Cameras SpeakerTrack Mode\x0D
Standby	xStatus Standby State\x0D
Subnet Mask	xStatus Network 1 IPv4 SubnetMask\x0D
System Time Status Type Date	xStatus Time SystemTime\x0D
System Time Status Type Time	xStatus Time SystemTime\x0D
System Unit Name Status	xConfiguration SystemUnit Name\x0D
Volume	xStatus Audio Volume\x0D