

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: Cisco
Firmware Version: CE9.3
Model(s): SX10 CE9.3.X, SX20 CE9.3.X, SX80 CE9.3.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0

Version History

Module Version	Date	Notes
1_1_2_0	9/13/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- devicePassword and deviceUsername variables must be set accordingly.
Example: `InterfaceName.deviceUsername = 'admin'`
`InterfaceName.devicePassword = 'password'`
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- CallHistoryOccurrenceType variable must be set accordingly. Default value is 'Time'. Call History Occurrence Type ranges from 'Time and 'Frequency'.
Example: `InterfaceName.CallHistoryOccurrenceType = 'Time'`
- NumberofPhonebookSearch variable must be set accordingly. Default value is 5. Number of Phonebook Search ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookSearch = 5`
- NumberofCallHistory variable must be set accordingly. Default value is 5 Number of Call History ranges from 1 to 20.
Example: `InterfaceName.NumberofCallHistory = 5`
- NumberofPhonebookFolderSearch variable must be set accordingly. Default value is 5
NumberofPhonebookFolderSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookFolderSearch = 5`
- NumberofPeripheral variable must be set accordingly. Default value is 5 NumberofPeripheral ranges from 1 to 10.
Example: `InterfaceName.NumberofPeripheral = 5`
- NumberofContactsPerSearch variable must be set accordingly. Default value is 50
NumberofContactsPerSearch ranges from 20 to 250.
Example: `InterfaceName.NumberofContactsPerSearch = 50`
- NumberofFoldersPerSearch variable must be set accordingly. Default value is 50
NumberofFoldersPerSearch ranges from 20 to 250.
Example: `InterfaceName.NumberofFoldersPerSearch = 50`

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SX80 CE9.3.X')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SX80 CE9.3.X')
```

SSH

#Password required

```
InterfaceName=ModuleName.SSHClass('192.168.254.254', 22, Credentials=('Username','Password'),  
Model='SX80 CE9.3.X')
```

#No Password required

```
InterfaceName=ModuleName.SSHClass('192.168.254.254', 22, Credentials=('Username',''), Model='SX80  
CE9.3.X')
```

Phonebook commands:

- PhonebookUpdate
This is used to trigger the Phonebook search.
- PhonebookSearchResult
This is where the search results will be saved to when phonebook is searched. The number of results is set by a module variable NumberofPhonebookSearch, this is initialized to 5 results by default.
- PhonebookNavigation
This command is used for navigating through the search results. The navigation commands scroll through the results when there are more results than NumberofPhonebookSearch variable.
- PhonebookSearchSet
When the number selected in this command is triggered, it will dial the number with the xCommand Dial Number command.
- PhonebookFolderIDUpdate
This is used to trigger the Folder search within the Phonebook.
- PhonebookFolderIDSearchResult
This is where the search results are saved when PhonebookFolderIDUpdate is called. The number of results displayed is set to 5 by default. Simply call SetText with the returned results to display the results on a button or label object.
- PhonebookFolderIDSearchSet
When the Folder Name is selected using this command, it will store the Folder Name in a class variable named FolderIDNumber. This variable can be used in the 'FolderID' qualifier in the PhonebookUpdate command.
Example: InterfaceName.Set('PhonebookUpdate','Refresh', {'Contact':'','FolderID':
InterfaceName.FolderIDNumber, 'PhonebookType':'Local'})

Call History commands:

- **CallHistoryRefresh**
This is used to trigger the search for recent Call History based on the CallHistoryOccuranceType class variable.
- **CallHistory**
This is where the search results are saved when CallHistoryRefresh is called. The number of results displayed is set to 5 by default. Simply call SetText to display the results on a button or label object.
- **CallHistoryNavigation**
This command is used for navigating through the CallHistory results.
- **CallHistorySelect**
When the CallHistorySelect is triggered, it will dial the number selected.

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioOutput ²	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# AudioOutput example InterfaceName.Set('AudioOutput', 'On', {'Output': 'Line 1'})			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command CallHistoryNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')			
Command CallHistoryRefresh	Value None		
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)			
Command CallHistorySelect	Value '1' – '20'		
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', '1')			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode example InterfaceName.Set('CallSetupMode', 'Gatekeeper')			
Command CallStatus	Value None		
# CallStatus example InterfaceName.Set('CallStatusRP', None)			
Command	Value	Value	Value

CameraFocus	'Near'	'Far'	'Stop'
	'Auto'		
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
# CameraFocus example InterfaceName.Set('CameraFocus', 'Near', {'Camera': '1'})			
Command CameraFocusSX20	Value 'Near'	Value 'Far'	Value 'Stop'
	'Auto'		
# CameraFocusSX20 example InterfaceName.Set('CameraFocusSX20', 'Near', None)			
Command CameraPan	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraPan example InterfaceName.Set('CameraPan', 'Left', {'Camera': '1', 'Speed': 15})			
Command CameraPanSX20	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraPan SX20 example InterfaceName.Set('CameraPanSX20', 'Left', {'Speed': 15})			
Command CameraPresetRecall	Value '1' – '35'		
# CameraPresetRecall example InterfaceName.Set('CameraPresetRecall', '1')			
Command CameraPresetSave	Value '1' – '35'		
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
# CameraPresetSave example InterfaceName.Set('CameraPresetSave', '1', {'Camera': '1'})			
Command CameraPresetSaveSX20	Value '1' – '35'		
# CameraPresetSaveSX20 example InterfaceName.Set('CameraPresetSaveSX20', '1', {'Camera': '1'})			
Command CameraTilt	Value 'Up'	Value 'Down'	Value 'Stop'

Global Scripter Module Communication Sheet

Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraTilt example InterfaceName.Set('CameraTilt', 'Up', {'Camera': '1', 'Speed': 15})			
Command CameraTiltSX20	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraTiltSX20 example InterfaceName.Set('CameraTiltSX20', 'Up', {'Speed': 15})			
Command CameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoom example InterfaceName.Set('CameraZoom', 'In', {'Camera': '1', 'Speed': 15})			
Command CameraZoomSX20	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoomSX20 example InterfaceName.Set('CameraZoomSX20', 'In', {'Speed': 15})			
Command ConnectedDeviceNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# ConnectedDeviceNavigation example InterfaceName.Set('ConnectedDeviceNavigation', 'Up')			
Command ConnectedDeviceUpdate	Value None		
# ConnectedDeviceUpdate example InterfaceName.Set('ConnectedDeviceUpdate', None)			
Command DisplayMode	Value 'Dual' 'Triple Presentation Only'	Value 'Single' 'Triple'	Value 'Dual Presentation Only' 'Auto'
# DisplayMode example InterfaceName.Set('DisplayMode', 'Dual')			

Command DNSDomainNameCommand	Value 'String'		
# DNSDomainNameCommand example InterfaceName.Set('DNSDomainNameCommand', 'String')			
Command DNSServerAddressCommand	Value 'String'		
# DNSServerAddressCommand example InterfaceName.Set('DNSServerAddressCommand', 'String')			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Active')			
Command DTMF	Value '0' '3' '6' '9'	Value '1' '4' '7' '*'	Value '2' '5' '8' '#'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command FarEndCameraPanTilt	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
# FarEndCameraPanTilt example InterfaceName.Set('FarEndCameraPanTilt', 'Up')			
Command FarEndCameraPresetRecall	Value '1' – '15'		
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')			
Command FarEndCameraSource	Value '0' – '15'		
# FarEndCameraSource example InterfaceName.Set('FarEndCameraSource', '0')			
Command FarEndCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
# FarEndCameraZoom example InterfaceName.Set('FarEndCameraZoom', 'In')			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Set('FarEndControl', 'On')			
Command	Value 'String'		

H323GatekeeperAddressCommand			
# H323GatekeeperAddressCommand example InterfaceName.Set('H323GatekeeperAddressCommand', 'String')			
Command H323AliasE164Command	Value 'String'		
# H323AliasE164Command example InterfaceName.Set('H323AliasE164Command', 'String')			
Command H323AliasIDCommand	Value 'String'		
# H323AliasIDCommand example InterfaceName.Set('H323AliasIDCommand', 'String')			
Command H323ProfileAuthenticationLoginNameCommand	Value 'String'		
# H323ProfileAuthenticationLoginNameCommand example InterfaceName.Set('H323ProfileAuthenticationLoginNameCommand', 'String')			
Command H323ProfileAuthenticationPasswordCommand	Value 'String'		
# H323ProfileAuthenticationPasswordCommand example InterfaceName.Set('H323ProfileAuthenticationPasswordCommand', 'String')			
Command Hook	Value 'Dial' 'Reject' 'Disconnect 1' 'Resume 2' 'Disconnect 3' 'Join 4' 'Hold 5' 'Resume 4'	Value 'Join 1' 'Hold 1' 'Hold 2' 'Resume 3' 'Join 2' 'Join 5' 'Disconnect 4' 'Resume 5'	Value 'Accept' 'Resume 1' 'Hold 3' 'Disconnect 2' 'Join 3' 'Hold 4' 'Disconnect 5'
Qualifier Key 'Number'	Qualifier Value 'String'		
Qualifier Key 'Protocol'	Qualifier Value 'Auto' 'H320'	Qualifier Value 'SIP'	Qualifier Value 'H323'
# Hook example InterfaceName.Set('Hook', 'Dial', {'Number': '5555555555','Protocol': 'Auto'}) InterfaceName.Set('Hook', 'Disconnect 1', {'Protocol': 'Auto'})			

Command Input	Value '1' – '2' ¹	Value '1' – '5' ²	
# Input example InterfaceName.Set('Input', '1')			
Command InputLineLevel ¹	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Line 1' 'Line 4'	Qualifier Value 'Line 2'	Qualifier Value 'Line 3'
# InputLineLevel example InterfaceName.Set('InputLineLevel', 24, {'Input': 'Line 1'})			
Command InputMicLevel ¹	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Microphone 1'	Qualifier Value 'Microphone 2'	
# InputMicLevel example InterfaceName.Set('InputMicLevel', 24, {'Input': 'Microphone 1'})			
Command InputMicLevel ²	Value 0 to 70 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' 'Microphone 4' 'Microphone 7'	Qualifier Value 'Microphone 2' 'Microphone 5' 'Microphone 8'	Qualifier Value 'Microphone 3' 'Microphone 6'
# InputMicLevel example InterfaceName.Set('InputMicLevel', 70, {'Input': 'Microphone 1'})			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ¹ 'Microphone 4' 'Microphone 7' 'Line 2'	Qualifier Value 'Microphone 2' ¹ 'Microphone 5' 'Microphone 8' 'Line 3'	Qualifier Value 'Microphone 3' 'Microphone 6' 'Line 1' 'Line 4'
# InputMute example InterfaceName.Set('InputMute', 'On', {'Input': 'Microphone 1'})			
Command IPv4AddressCommand	Value 'String'		
# IPv4AddressCommand example InterfaceName.Set('IPv4AddressCommand', 'String')			
Command IPv4GatewayCommand	Value 'String'		
# IPv4GatewayCommand example			

InterfaceName.Set('IPv4GatewayCommand', 'String')			
Command IPv4SubnetMaskCommand	Value 'String'		
# IPv4SubnetMaskCommand example InterfaceName.Set('IPv4SubnetMaskCommand', 'String')			
Command IREmulation ¹	Value	Value	Value
	'0'	'1'	'2'
	'3'	'4'	'5'
	'6'	'7'	'8'
	'9'	'C'	'Call'
	'Down'	'F1'	'F2'
	'F3'	'F4'	'F5'
	'Grab'	'Home'	'Layout'
	'Left'	'Mute'	'Mute Mic'
	'Ok'	'PhoneBook'	'Presentation'
	'Right'	'Selfview'	'Square'
	'Aux'	'Camera'	'Doc Cam'
	'Pc'	'Vcr'	'Star'
	'Up'	'Volume Down'	'Volume Up'
	'Zoom In'	'Zoom Out'	'Disconnect'
'+'	'-'		
Qualifier Key 'Key'	Qualifier Value 'Click'	Qualifier Value 'Press'	Qualifier Value 'Release'
# IREmulation example InterfaceName.Set('IREmulation', '0', {'Key': 'Click'})			
Command LayoutSet	Value 'Auto'	Value 'Custom'	Value 'Equal'
	'Overlay'	'Prominent'	'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command Macro	Value 'Activate'	Value 'Deactivate'	
Qualifier Key 'Name'	Qualifier Value 'String'		
# Macro example InterfaceName.Set('Macro', 'Activate', {'Name': 'MacroName'})			
Command	Value	Value	

MacroAutoStart	'On'	'Off'	
# MacroAutoStart example InterfaceName.Set('MacroAutoStart', 'On')			
Command MacroMode	Value 'On'	Value 'Off'	
# MacroMode example InterfaceName.Set('MacroMode', 'On')			
Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute example InterfaceName.Set('MicrophonesMute', 'On')			
Command OutputLevel	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# OutputLevel example InterfaceName.Set('OutputLevel', 0, {'Output': 'Line 1'})			
Command PhonebookFolderIDNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up')			
Command PhonebookFolderIDSearchSet	Value 1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command PhonebookFolderIDUpdate	Value None		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Corporate'})			
Command PhonebookNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		

Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Local'})			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Local'})			
Command Presentation	Value 'Start'	Value 'Stop'	
Qualifier Key 'Instance'	Qualifier Value 'Not Specified'	Qualifier Value '1' – '6'	Qualifier Value 'New'
Qualifier Key 'Sending Mode'	Qualifier Value 'Not Specified'	Qualifier Value 'Local Only'	Qualifier Value 'Local and Remote'
Qualifier Key 'Video Input Source'	Qualifier Value 'Not Specified'	Qualifier Value 'Presentation Source 2'	Qualifier Value 'Connector Id 2'
	'Connector Id 3'	'Presentation Source 1'	'Connector Id 1'
	'Presentation Source 3'	'Presentation Source 4'	'Connector Id 4'
	'Connector Id 5'		
# Presentation example InterfaceName.Set('Presentation', 'Start', {'Instance': 'Not Specified', 'Sending Mode': 'Not Specified', 'Video Input Source': 'Not Specified'}) InterfaceName.Set('Presentation', 'Start', {'Instance': '1', 'Sending Mode': 'Local and Remote', 'Video Input Source': 'Connector ID 1'})			
Command PresentationExternalSourceSelectCommand	Value None		
Qualifier Key 'SourceValue'	Qualifier Value String		
# Presentation example InterfaceName.Set('PresentationExternalSourceSelectCommand', None, {'SourceValue': 'String'})			

Command PresetRecall	Value '1' – '15'		
# PresetRecall example InterfaceName.Set('PresetRecall', '15')			
Command PresetSave	Value '1' – '15'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command RestartMacros	Value None		
# RestartMacros example InterfaceName.Set('RestartMacros', None)			
Command Reboot	Value None		
# Reboot example InterfaceName.Set('Reboot', None)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')			
Command SelfViewDefaultFullscreenMode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Set('SelfViewDefaultFullscreenMode', 'On')			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')			
Command SIPURICommand	Value None		
# SIPURICommand example InterfaceName.Set('SIPURICommand', None)			
Command SleepTimer	Value 1 – 480		
# SleepTimer example InterfaceName.Set('SleepTimer', 480)			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
# SpeakerTrackControl example InterfaceName.Set('SpeakerTrackControl', 'On')			

Global Scripter Module Communication Sheet

Command SpeakerTrackMode	Value 'Auto'	Value 'Off'	
# SpeakerTrackMode example InterfaceName.Set('SpeakerTrackMode', 'Auto')			
Command Standby	Value 'Activate'	Value 'Deactivate'	Value 'Half Wake'
# Standby example InterfaceName.Set('Standby', 'Activate')			
Command SystemUnitNameCommand	Value None		
# SystemUnitNameCommand example InterfaceName.Set('SystemUnitNameCommand', None)			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, CallHistory, CallStatusType, ConnectedDeviceMAC, ConnectedDeviceName, ConnectedDeviceType, DisplayName, PhonebookFolderIDSearchResult and PhonebookSearchResult do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
AudioOutput ²	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Output'	'Line 1'	'Line 2'	'Line 3'
	'Line 4'	'Line 5'	'Line 6'
	'HDMI 1'	'HDMI 2'	
# AudioOutput examples InterfaceName.Update('AudioOutput', {'Output': 'Line 1'}) InterfaceName.ReadStatus('AudioOutput', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('AudioOutput', None, FeedbackHandler)			
Command	Value	Value	
AutoAnswer	'On'	'Off'	
# AutoAnswer examples InterfaceName.Update('AutoAnswer') InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)			
Command	Value		
CallHistory	'String'		
Qualifier Key	Qualifier Value		
'Button'	'1' – '20'		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Detail Type'	'Display Name'	'Callback Number'	'Last Occurrence Time'
	'Occurrence Count'	'Occurrence Type'	

# CallHistory examples InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode examples InterfaceName.Update('CallSetupMode') InterfaceName.ReadStatus('CallSetupMode') InterfaceName.SubscribeStatus('CallSetupMode', None, FeedbackHandler)			
Command CallStatus	Value 'Dialing' 'Ringing' 'On Hold' 'Remote Preserved'	Value 'Connecting' 'Idle' 'Early Media'	Value 'Connected' 'Disconnecting' 'Preserved'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatus examples InterfaceName.Update('CallStatus', None) InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)			
Command CallStatusType	Value 'Video' 'Forward All Call'	Value 'Audio' 'Unknown'	Value 'Audio Can Escalate'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatusType examples InterfaceName.ReadStatus('CallStatusType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)			
Command ConnectedDeviceMAC	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# ConnectedDeviceMAC examples InterfaceName.ReadStatus('ConnectedDeviceMAC', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceMAC', None, FeedbackHandler)			
Command ConnectedDeviceName	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# ConnectedDeviceName examples InterfaceName.ReadStatus('ConnectedDeviceName', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceName', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command	Value		
ConnectedDeviceType	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 to 10 in steps of 1		
# ConnectedDeviceType examples InterfaceName.ReadStatus('ConnectedDeviceType', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceType', None, FeedbackHandler)			
Command	Value		Value
ConnectionStatus	'Connected'		'Disconnected'
# ConnectionStatus examples InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
DisplayMode	'Dual'	'Single'	'Dual Presentation Only'
	'Triple Presentation Only'	'Triple'	'Auto'
# DisplayMode examples InterfaceName.Update('DisplayMode') InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)			
Command	Value		
DisplayName	'String'		
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
# DisplayName examples InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)			
Command	Value		
DNSDomainName	'String'		
# DNSDomainName examples InterfaceName.Update('DNSDomainName') InterfaceName.ReadStatus('DNSDomainName') InterfaceName.SubscribeStatus('DNSDomainName', None, FeedbackHandler)			
Command	Value		
DNSServerAddress	'String'		
Qualifier Key	Qualifier Value		
'Server'	'1' – '3'		
# DNSServerAddress examples InterfaceName.Update('DNSServerAddress', {'Server': '1'}) InterfaceName.ReadStatus('DNSServerAddress', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddress', None, FeedbackHandler)			
Command	Value		Value
DoNotDisturb	'Active'		'Inactive'

<pre># DoNotDisturb examples InterfaceName.Update('DoNotDisturb') InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)</pre>			
Command FarEndControl	Value 'On'	Value 'Off'	
<pre># FarEndControl examples InterfaceName.Update('FarEndControl') InterfaceName.ReadStatus('FarEndControl') InterfaceName.SubscribeStatus('FarEndControl', None, FeedbackHandler)</pre>			
Command FirmwareVersion	Value 'String'		
<pre># FirmwareVersion examples InterfaceName.Update('FirmwareVersion') InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)</pre>			
Command GatewayAddress	Value 'String'		
<pre># GatewayAddress examples InterfaceName.Update('GatewayAddress') InterfaceName.ReadStatus('GatewayAddress') InterfaceName.SubscribeStatus('GatewayAddress', None, FeedbackHandler)</pre>			
Command H323GatekeeperAddress	Value 'String'		
<pre># H323GatekeeperAddress examples InterfaceName.Update('H323GatekeeperAddress') InterfaceName.ReadStatus('H323GatekeeperAddress') InterfaceName.SubscribeStatus('H323GatekeeperAddress', None, FeedbackHandler)</pre>			
Command H323GatekeeperStatus	Value 'Required'	Value 'Discovering'	Value 'Discovered'
	'Authenticating'	'Authenticated'	'Registering'
	'Registered'	'Inactive'	'Rejected'
<pre># H323GatekeeperStatus examples InterfaceName.Update('H323GatekeeperStatus') InterfaceName.ReadStatus('H323GatekeeperStatus') InterfaceName.SubscribeStatus('H323GatekeeperStatus', None, FeedbackHandler)</pre>			
Command H323AliasIDStatus	Value 'String'		
<pre># H323AliasIDStatus examples InterfaceName.Update('H323AliasIDStatus') Value = InterfaceName.ReadStatus('H323AliasIDStatus') InterfaceName.SubscribeStatus('H323AliasIDStatus', None, FeedbackHandler)</pre>			
Command Input	Value '1' – '5'		
<pre># Input examples</pre>			

InterfaceName.Update('Input')			
InterfaceName.ReadStatus('Input')			
InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value		
InputLineLevel	0 to 24 in steps of 1		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Input'	'Line 1'	'Line 2'	'Line 3'
	'Line 4'		
# InputLineLevel examples			
InterfaceName.Update('InputLineLevel', {'Input': 'Line 1'})			
InterfaceName.ReadStatus('InputLineLevel', {'Input': 'Line 1'})			
InterfaceName.SubscribeStatus('InputLineLevel', None, FeedbackHandler)			
Command	Value		
InputMicLevel ¹	0 to 24 in steps of 1		
Qualifier Key	Qualifier Value		
'Input'	'Microphone 1'		
# InputMicLevel examples			
InterfaceName.Update('InputMicLevel', {'Input': 'Microphone 1'})			
InterfaceName.ReadStatus('InputMicLevel', {'Input': 'Microphone 1'})			
InterfaceName.SubscribeStatus('InputMicLevel', None, FeedbackHandler)			
Command	Value		
InputMicLevel ²	0 to 70 in steps of 1		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Input'	'Microphone 1'	'Microphone 2'	'Microphone 3'
	'Microphone 4'	'Microphone 5'	'Microphone 6'
	'Microphone 7'	'Microphone 8'	
# InputMicLevel examples			
InterfaceName.Update('InputMicLevel', {'Input': 'Microphone 1'})			
InterfaceName.ReadStatus('InputMicLevel', {'Input': 'Microphone 1'})			
InterfaceName.SubscribeStatus('InputMicLevel', None, FeedbackHandler)			
Command	Value	Value	
InputMute	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Input'	'Microphone 1'	'Microphone 2'	'Microphone 3'
	'Microphone 4'	'Microphone 5'	'Microphone 6'
	'Microphone 7'	'Microphone 8'	'Line 1'
	'Line 2'	'Line 3'	'Line 4'
# InputMute examples			
InterfaceName.Update('InputMute', {'Input': 'Microphone 1'})			
InterfaceName.ReadStatus('InputMute', {'Input': 'Microphone 1'})			
InterfaceName.SubscribeStatus('InputMute', None, FeedbackHandler)			
Command	Value	Value	
InputSignal	'True'	'False'	

Qualifier Key 'Input'	Qualifier Value '1' – '5'		
# InputSignal examples InterfaceName.Update('InputSignal', {'Input': '1'}) InterfaceName.ReadStatus('InputSignal', {'Input': '1'}) InterfaceName.SubscribeStatus('InputSignal', None, FeedbackHandler)			
Command IPAddress	Value 'String'		
# IPAddress examples InterfaceName.Update('IPAddress') InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)			
Command MacroAutoStart	Value 'On'	Value 'Off'	
# MacroAutoStart examples InterfaceName.Update('MacroAutoStart') InterfaceName.ReadStatus('MacroAutoStart') InterfaceName.SubscribeStatus('MacroAutoStart', None, FeedbackHandler)			
Command MacroMode	Value 'On'	Value 'Off'	
# MacroMode examples InterfaceName.Update('MacroMode') InterfaceName.ReadStatus('MacroMode') InterfaceName.SubscribeStatus('MacroMode', None, FeedbackHandler)			
Command MACAddress	Value 'String'		
# MACAddress examples InterfaceName.Update('MACAddress') InterfaceName.ReadStatus('MACAddress') InterfaceName.SubscribeStatus('MACAddress', None, FeedbackHandler)			
Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute examples InterfaceName.Update('MicrophonesMute') InterfaceName.ReadStatus('MicrophonesMute') InterfaceName.SubscribeStatus('MicrophonesMute', None, FeedbackHandler)			
Command NetworkAssignment	Value 'Static'	Value 'DHCP'	
# NetworkAssignment examples InterfaceName.Update('NetworkAssignment') InterfaceName.ReadStatus('NetworkAssignment') InterfaceName.SubscribeStatus('NetworkAssignment', None, FeedbackHandler)			
Command OutputLevel	Value -24 to 0 in steps of 1		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value

'Output'	'Line 1'	'Line 2'	'Line 3'
	'Line 4'	'Line 5'	'Line 6'
	'HDMI 1'	'HDMI 2'	
# OutputLevel examples InterfaceName.Update('OutputLevel', {'Output': 'Line 1'}) InterfaceName.ReadStatus('OutputLevel', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('OutputLevel', None, FeedbackHandler)			
Command PeopleCountCurrent	Qualifier Value 'String'		
# PeopleCountCurrent examples InterfaceName.Update('PeopleCountCurrent') Value = InterfaceName.ReadStatus('PeopleCountCurrent') InterfaceName.SubscribeStatus('PeopleCountCurrent', None, FeedbackHandler)			
Command PeopleCountOutOfCall	Value 'On'	Value 'Off'	
# PeopleCountOutOfCall examples InterfaceName.Update('PeopleCountOutOfCall') Value = InterfaceName.ReadStatus('PeopleCountOutOfCall') InterfaceName.SubscribeStatus('PeopleCountOutOfCall', None, FeedbackHandler)			
Command PeoplePresence	Value 'Yes'	Value 'No'	Value 'Unknown'
# PeoplePresence examples InterfaceName.Update('PeoplePresence') Value = InterfaceName.ReadStatus('PeoplePresence') InterfaceName.SubscribeStatus('PeoplePresence', None, FeedbackHandler)			
Command PeoplePresenceDetector	Value 'On'	Value 'Off'	
# PeoplePresenceDetector examples InterfaceName.Update('PeoplePresenceDetector') Value = InterfaceName.ReadStatus('PeoplePresenceDetector') InterfaceName.SubscribeStatus('PeoplePresenceDetector', None, FeedbackHandler)			
Command PhonebookFolderIDSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# PhonebookFolderIDSearchResult examples InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)			
Command PhonebookSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# PhonebookSearchResult examples			

InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10})			
InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)			
Command	Value	Value	
PresentationModeStatus	'On'	'Off'	
	'Receiving'		
# PresentationModeStatus examples			
InterfaceName.Update('PresentationModeStatus')			
Value = InterfaceName.ReadStatus('PresentationModeStatus')			
InterfaceName.SubscribeStatus('PresentationModeStatus', None, FeedbackHandler)			
Command	Value	Value	
PresentationSendingModeStatus	'Local and Remote'	'Local Only'	
Qualifier Key	Qualifier Value		
'Instance'	'1' – '6'		
# PresentationSendingModeStatus examples			
InterfaceName.Update('PresentationSendingModeStatus', {'Instance': '1'})			
Value = InterfaceName.ReadStatus('PresentationSendingModeStatus', {'Instance': '1'})			
InterfaceName.SubscribeStatus('PresentationSendingModeStatus', None, FeedbackHandler)			
Command	Value	Value	
PresentationSourceStatus	'1' – '4'	'Off'	
Qualifier Key	Qualifier Value		
'Instance'	'1' – '6'		
# PresentationSourceStatus examples			
InterfaceName.Update('PresentationSourceStatus', {'Instance': '1'})			
Value = InterfaceName.ReadStatus('PresentationSourceStatus', {'Instance': '1'})			
InterfaceName.SubscribeStatus('PresentationSourceStatus', None, FeedbackHandler)			
Command	Value		
RemoteNumber	'String'		
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
# RemoteNumber examples			
InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'})			
InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)			
Command	Value	Value	
SelfView	'On'	'Off'	
# SelfView examples			
InterfaceName.Update('SelfView')			
InterfaceName.ReadStatus('SelfView')			
InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)			
Command	Value	Value	Value
SelfViewDefaultFullscreenMode	'On'	'Off'	'Current'
# SelfViewDefaultFullscreenMode examples			
InterfaceName.Update('SelfViewDefaultFullscreenMode')			
InterfaceName.ReadStatus('SelfViewDefaultFullscreenMode')			
InterfaceName.SubscribeStatus('SelfViewDefaultFullscreenMode', None, FeedbackHandler)			

Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition examples InterfaceName.Update('SelfViewPosition') InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)			
Command SIPRegistrationStatus	Value 'Deregistering' 'Registered'	Value 'Failed' 'Registering'	Value 'Inactive'
# SIPRegistrationStatus examples InterfaceName.Update('SIPRegistrationStatus') InterfaceName.ReadStatus('SIPRegistrationStatus') InterfaceName.SubscribeStatus('SIPRegistrationStatus', None, FeedbackHandler)			
Command SIPURISatus	Qualifier Value 'String'		
# SIPURISatus examples InterfaceName.Update('SIPURISatus') Value = InterfaceName.ReadStatus('SIPURISatus') InterfaceName.SubscribeStatus('SIPURISatus', None, FeedbackHandler)			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
# SpeakerTrackControl examples InterfaceName.Update('SpeakerTrackControl') InterfaceName.ReadStatus('SpeakerTrackControl') InterfaceName.SubscribeStatus('SpeakerTrackControl', None, FeedbackHandler)			
Command SpeakerTrackMode	Value 'Auto'	Value 'Off'	
# SpeakerTrackMode examples InterfaceName.Update('SpeakerTrackMode') InterfaceName.ReadStatus('SpeakerTrackMode') InterfaceName.SubscribeStatus('SpeakerTrackMode', None, FeedbackHandler)			
Command Standby	Value 'Activate' Value 'Half Wake'	Value 'Deactivate'	Value 'Entering Standby'
# Standby examples InterfaceName.Update('Standby') InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)			
Command SubnetMask	Value 'String'		
# SubnetMask examples InterfaceName.Update('SubnetMask')			

<pre>InterfaceName.ReadStatus('SubnetMask') InterfaceName.SubscribeStatus('SubnetMask', None, FeedbackHandler)</pre>	
Command SystemUnitNameStatus	Qualifier Value 'String'
<pre># SystemUnitNameStatus examples InterfaceName.Update('SystemUnitNameStatus') Value = InterfaceName.ReadStatus('SystemUnitNameStatus') InterfaceName.SubscribeStatus('SystemUnitNameStatus', None, FeedbackHandler)</pre>	
Command Volume	Value 0 to 100 in steps of 1
<pre># Volume examples InterfaceName.Update('Volume') InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>	

Cable and Adapter Requirements

SX10: Contact manufacturer for cable requirements.

SX20: Captive Screw to USB Type-A RS-232 Serial Cable adapter.

SX80: Captive Screw to Male DB9 RS-232 Serial Cable.

Notes for the Device

For the module to work, the “Require passphrase change on next user sign in” must be unchecked within the devices embedded webpage. checkbox under Security → Users → <USERNAME>.

Serial communication

Port Type: RS-232

Baud Rate: 115200

Data Bits: 8


Parity: None

Stop Bits: One

Flow Control: None


Pin Assignments Diagram

SX20 – SX10:

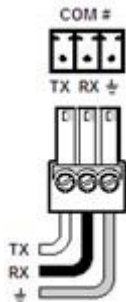

Contact manufacturer for pinout diagram

SX80:

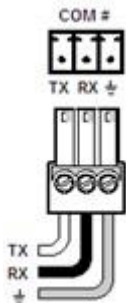

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	22
Logon Credentials Supported:	Yes
Multi-Connection	Yes
Capabilities:	
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

- For the module to work, the "Require passphrase change on next user sign in" must be unchecked within the device's embedded webpage. checkbox under Security → Users → <USERNAME>.
- Password is required for SSH communication to work.
- SSH mode must be set to 'On' by an admin to have open communication with the module.

Appendix A. Set Commands

Audio Output Off Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:Off\x0D
Audio Output Off Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:Off\x0D
Audio Output Off Output Line 1	xConfiguration Audio Output Line 1 Mode:Off\x0D
Audio Output Off Output Line 2	xConfiguration Audio Output Line 2 Mode:Off\x0D
Audio Output Off Output Line 3	xConfiguration Audio Output Line 3 Mode:Off\x0D
Audio Output Off Output Line 4	xConfiguration Audio Output Line 4 Mode:Off\x0D
Audio Output Off Output Line 5	xConfiguration Audio Output Line 5 Mode:Off\x0D
Audio Output Off Output Line 6	xConfiguration Audio Output Line 6 Mode:Off\x0D
Audio Output On Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:On\x0D
Audio Output On Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:On\x0D
Audio Output On Output Line 1	xConfiguration Audio Output Line 1 Mode:On\x0D
Audio Output On Output Line 2	xConfiguration Audio Output Line 2 Mode:On\x0D
Audio Output On Output Line 3	xConfiguration Audio Output Line 3 Mode:On\x0D
Audio Output On Output Line 4	xConfiguration Audio Output Line 4 Mode:On\x0D
Audio Output On Output Line 5	xConfiguration Audio Output Line 5 Mode:On\x0D
Audio Output On Output Line 6	xConfiguration Audio Output Line 6 Mode:On\x0D
Auto Answer Off	xConfiguration Conference AutoAnswer Mode: Off\x0D
Auto Answer On	xConfiguration Conference AutoAnswer Mode: On\x0D
Call Setup Mode Direct	xConfiguration H323 CallSetup Mode: Direct\x0D
Call Setup Mode Gatekeeper	xConfiguration H323 CallSetup Mode: Gatekeeper\x0D
Camera Focus Far	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 1	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 7	xCommand Camera Ramp CameraId:7 Focus:Far\x0D
Camera Focus Near	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 1	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 7	xCommand Camera Ramp CameraId:7 Focus:Near\x0D
Camera Focus Stop	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 1	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 7	xCommand Camera Ramp CameraId:7 Focus:Stop\x0D
Camera Pan Left Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Left Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:15\x0D

Global Scripter Module Communication Sheet

Camera Pan Left Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Right Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Right Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:15\x0D
Camera Pan Right Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Preset Recall 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset Recall 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Save 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 7	xCommand Camera Preset Store PresetId:1 CameraId:7\x0D
Camera Preset Save 35	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 1	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 7	xCommand Camera Preset Store PresetId:35 CameraId:7\x0D
Camera Tilt Down Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D

Global Scripter Module Communication Sheet

Camera Tilt Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Stop\x0D
Camera Tilt Stop Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Stop\x0D
Camera Tilt Up Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Zoom In Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom Out Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom: Stop\x0D
Camera Zoom Stop Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D

Global Scripter Module Communication Sheet

Camera Zoom Stop Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Connected Device Update None	xStatus Peripherals ConnectedDevice\x0D
Display Mode Auto	xConfiguration Video Monitors: Auto\x0D
Display Mode Dual	xConfiguration Video Monitors: Dual\x0D
Display Mode Dual Presentation Only	xConfiguration Video Monitors: DualPresentationOnly\x0D
Display Mode Single	xConfiguration Video Monitors: Single\x0D
Display Mode Triple	xConfiguration Video Monitors: Triple\x0D
Display Mode Triple Presentation Only	xConfiguration Video Monitors: TriplePresentationOnly\x0D
DNS Domain Name Command None	xConfiguration Network 1 DNS Domain Name: string\x0D
DNS Server Address Command None	xConfiguration Network 1 DNS Server 1 Address: string\x0D
Do Not Disturb Active	xCommand Conference DoNotDisturb Activate\x0D
Do Not Disturb Inactive	xCommand Conference DoNotDisturb Deactivate\x0D
DTMF #	xCommand Call DTMFSend DTMFString:#\x0D
DTMF *	xCommand Call DTMFSend DTMFString:*\x0D
DTMF 0	xCommand Call DTMFSend DTMFString:0\x0D
DTMF 9	xCommand Call DTMFSend DTMFString:9\x0D
Far End Camera Pan/Tilt Down	xCommand Call FarEndControl Camera Move Value:Down\x0D
Far End Camera Pan/Tilt Left	xCommand Call FarEndControl Camera Move Value:Left\x0D
Far End Camera Pan/Tilt Right	xCommand Call FarEndControl Camera Move Value:Right\x0D
Far End Camera Pan/Tilt Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Camera Pan/Tilt Up	xCommand Call FarEndControl Camera Move Value:Up\x0D
Far End Camera Preset Recall 1	xCommand Call FarEndControl RoomPreset Activate:1\x0D
Far End Camera Preset Recall 15	xCommand Call FarEndControl RoomPreset Activate:15\x0D
Far End Camera Source 0	xCommand Call FarEndControl Source Select SourceId:0\x0D
Far End Camera Source 15	xCommand Call FarEndControl Source Select SourceId:15\x0D
Far End Camera Zoom In	xCommand Call FarEndControl Camera Move Value:ZoomIn\x0D
Far End Camera Zoom Out	xCommand Call FarEndControl Camera Move Value:ZoomOut\x0D
Far End Camera Zoom Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Control Off	xConfiguration Conference FarEndControl Mode: Off\x0D
Far End Control On	xConfiguration Conference FarEndControl Mode: On\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

H323 Gatekeeper Address Command None	xConfiguration H323 Gatekeeper Address: string\x0D
H323Alias E164 Command None	xConfiguration H323 H323Alias E164: string\x0D
H323Alias ID Command None	xConfiguration H323 H323Alias ID: string\x0D
H323Profile Authentication LoginName Command None	H323 Authentication LoginName: string\x0D
H323Profile Authentication Password Command None	xConfiguration H323 Authentication Password: string\x0D
Hook Accept Protocol Auto	xCommand Call Accept\x0D
Hook Accept Protocol H320	xCommand Call Accept\x0D
Hook Accept Protocol H323	xCommand Call Accept\x0D
Hook Accept Protocol SIP	xCommand Call Accept\x0D
Hook Disconnect 1 Protocol Auto	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 1 Protocol H320	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 1 Protocol H323	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 1 Protocol SIP	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 2 Protocol Auto	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 2 Protocol H320	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 2 Protocol H323	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 2 Protocol SIP	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 3 Protocol Auto	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 3 Protocol H320	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 3 Protocol H323	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 3 Protocol SIP	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 4 Protocol Auto	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 4 Protocol H320	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 4 Protocol H323	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 4 Protocol SIP	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 5 Protocol Auto	xCommand Call Disconnect CallId: 5\x0D
Hook Disconnect 5 Protocol H320	xCommand Call Disconnect CallId: 5\x0D
Hook Disconnect 5 Protocol H323	xCommand Call Disconnect CallId: 5\x0D
Hook Disconnect 5 Protocol SIP	xCommand Call Disconnect CallId: 5\x0D
Hook Hold 1 Protocol Auto	xCommand Call Hold CallId: 1\x0D
Hook Hold 1 Protocol H320	xCommand Call Hold CallId: 1\x0D
Hook Hold 1 Protocol H323	xCommand Call Hold CallId: 1\x0D
Hook Hold 1 Protocol SIP	xCommand Call Hold CallId: 1\x0D
Hook Hold 2 Protocol Auto	xCommand Call Hold CallId: 2\x0D
Hook Hold 2 Protocol H320	xCommand Call Hold CallId: 2\x0D
Hook Hold 2 Protocol H323	xCommand Call Hold CallId: 2\x0D

Global Scripter Module Communication Sheet

Hook Hold 2 Protocol SIP	xCommand Call Hold CallId: 2\x0D
Hook Hold 3 Protocol Auto	xCommand Call Hold CallId: 3\x0D
Hook Hold 3 Protocol H320	xCommand Call Hold CallId: 3\x0D
Hook Hold 3 Protocol H323	xCommand Call Hold CallId: 3\x0D
Hook Hold 3 Protocol SIP	xCommand Call Hold CallId: 3\x0D
Hook Hold 4 Protocol Auto	xCommand Call Hold CallId: 4\x0D
Hook Hold 4 Protocol H320	xCommand Call Hold CallId: 4\x0D
Hook Hold 4 Protocol H323	xCommand Call Hold CallId: 4\x0D
Hook Hold 4 Protocol SIP	xCommand Call Hold CallId: 4\x0D
Hook Hold 5 Protocol Auto	xCommand Call Hold CallId: 5\x0D
Hook Hold 5 Protocol H320	xCommand Call Hold CallId: 5\x0D
Hook Hold 5 Protocol H323	xCommand Call Hold CallId: 5\x0D
Hook Hold 5 Protocol SIP	xCommand Call Hold CallId: 5\x0D
Hook Join 1 Protocol Auto	xCommand Call Join CallId: 1\x0D
Hook Join 1 Protocol H320	xCommand Call Join CallId: 1\x0D
Hook Join 1 Protocol H323	xCommand Call Join CallId: 1\x0D
Hook Join 1 Protocol SIP	xCommand Call Join CallId: 1\x0D
Hook Join 2 Protocol Auto	xCommand Call Join CallId: 2\x0D
Hook Join 2 Protocol H320	xCommand Call Join CallId: 2\x0D
Hook Join 2 Protocol H323	xCommand Call Join CallId: 2\x0D
Hook Join 2 Protocol SIP	xCommand Call Join CallId: 2\x0D
Hook Join 3 Protocol Auto	xCommand Call Join CallId: 3\x0D
Hook Join 3 Protocol H320	xCommand Call Join CallId: 3\x0D
Hook Join 3 Protocol H323	xCommand Call Join CallId: 3\x0D
Hook Join 3 Protocol SIP	xCommand Call Join CallId: 3\x0D
Hook Join 4 Protocol Auto	xCommand Call Join CallId: 4\x0D
Hook Join 4 Protocol H320	xCommand Call Join CallId: 4\x0D
Hook Join 4 Protocol H323	xCommand Call Join CallId: 4\x0D
Hook Join 4 Protocol SIP	xCommand Call Join CallId: 4\x0D
Hook Join 5 Protocol Auto	xCommand Call Join CallId: 5\x0D
Hook Join 5 Protocol H320	xCommand Call Join CallId: 5\x0D
Hook Join 5 Protocol H323	xCommand Call Join CallId: 5\x0D
Hook Join 5 Protocol SIP	xCommand Call Join CallId: 5\x0D
Hook Reject Protocol Auto	xCommand Call Reject\x0D
Hook Reject Protocol H320	xCommand Call Reject\x0D
Hook Reject Protocol H323	xCommand Call Reject\x0D
Hook Reject Protocol SIP	xCommand Call Reject\x0D
Hook Resume 1 Protocol Auto	xCommand Call Resume CallId: 1\x0D
Hook Resume 1 Protocol H320	xCommand Call Resume CallId: 1\x0D

Hook Resume 1 Protocol H323	xCommand Call Resume CallId: 1\x0D
Hook Resume 1 Protocol SIP	xCommand Call Resume CallId: 1\x0D
Hook Resume 2 Protocol Auto	xCommand Call Resume CallId: 2\x0D
Hook Resume 2 Protocol H320	xCommand Call Resume CallId: 2\x0D
Hook Resume 2 Protocol H323	xCommand Call Resume CallId: 2\x0D
Hook Resume 2 Protocol SIP	xCommand Call Resume CallId: 2\x0D
Hook Resume 3 Protocol Auto	xCommand Call Resume CallId: 3\x0D
Hook Resume 3 Protocol H320	xCommand Call Resume CallId: 3\x0D
Hook Resume 3 Protocol H323	xCommand Call Resume CallId: 3\x0D
Hook Resume 3 Protocol SIP	xCommand Call Resume CallId: 3\x0D
Hook Resume 4 Protocol Auto	xCommand Call Resume CallId: 4\x0D
Hook Resume 4 Protocol H320	xCommand Call Resume CallId: 4\x0D
Hook Resume 4 Protocol H323	xCommand Call Resume CallId: 4\x0D
Hook Resume 4 Protocol SIP	xCommand Call Resume CallId: 4\x0D
Hook Resume 5 Protocol Auto	xCommand Call Resume CallId: 5\x0D
Hook Resume 5 Protocol H320	xCommand Call Resume CallId: 5\x0D
Hook Resume 5 Protocol H323	xCommand Call Resume CallId: 5\x0D
Hook Resume 5 Protocol SIP	xCommand Call Resume CallId: 5\x0D
Input 1	xCommand Video Input SetMainVideoSource ConnectorId: 1\x0D
Input 3	xCommand Video Input SetMainVideoSource ConnectorId: 3\x0D
Input 6	xCommand Video Input SetMainVideoSource ConnectorId: 6\x0D
Input Line Level 0 Input Line 1	xConfiguration Audio Input Line 1 Level:0\x0D
Input Line Level 0 Input Line 2	xConfiguration Audio Input Line 2 Level:0\x0D
Input Line Level 0 Input Line 3	xConfiguration Audio Input Line 3 Level:0\x0D
Input Line Level 0 Input Line 4	xConfiguration Audio Input Line 4 Level:0\x0D
Input Line Level 24 Input Line 1	xConfiguration Audio Input Line 1 Level:24\x0D
Input Line Level 24 Input Line 2	xConfiguration Audio Input Line 2 Level:24\x0D
Input Line Level 24 Input Line 3	xConfiguration Audio Input Line 3 Level:24\x0D
Input Line Level 24 Input Line 4	xConfiguration Audio Input Line 4 Level:24\x0D
Input Mic Level 0 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:0\x0D
Input Mic Level 0 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:0\x0D
Input Mic Level 0 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:0\x0D
Input Mic Level 0 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:0\x0D
Input Mic Level 0 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:0\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

Input Mic Level 0 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:0\x0D
Input Mic Level 0 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:0\x0D
Input Mic Level 0 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:0\x0D
Input Mic Level 24 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:24\x0D
Input Mic Level 24 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:24\x0D
Input Mic Level 70 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:70\x0D
Input Mic Level 70 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:70\x0D
Input Mic Level 70 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:70\x0D
Input Mic Level 70 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:70\x0D
Input Mic Level 70 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:70\x0D
Input Mic Level 70 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:70\x0D
Input Mic Level 70 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:70\x0D
Input Mic Level 70 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:70\x0D
Input Mute Off Input Line 1	xConfiguration Audio Input Line 1 Mode:Off\x0D
Input Mute Off Input Line 2	xConfiguration Audio Input Line 2 Mode:Off\x0D
Input Mute Off Input Line 3	xConfiguration Audio Input Line 3 Mode:Off\x0D
Input Mute Off Input Line 4	xConfiguration Audio Input Line 4 Mode:Off\x0D
Input Mute Off Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:Off\x0D
Input Mute Off Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:Off\x0D
Input Mute Off Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:Off\x0D
Input Mute Off Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:Off\x0D
Input Mute Off Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:Off\x0D
Input Mute Off Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:Off\x0D
Input Mute Off Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:Off\x0D
Input Mute Off Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:Off\x0D
Input Mute On Input Line 1	xConfiguration Audio Input Line 1 Mode:On\x0D
Input Mute On Input Line 2	xConfiguration Audio Input Line 2 Mode:On\x0D
Input Mute On Input Line 3	xConfiguration Audio Input Line 3 Mode:On\x0D

Input Mute On Input Line 4	xConfiguration Audio Input Line 4 Mode:On\x0D
Input Mute On Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:On\x0D
Input Mute On Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:On\x0D
Input Mute On Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:On\x0D
Input Mute On Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:On\x0D
Input Mute On Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:On\x0D
Input Mute On Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:On\x0D
Input Mute On Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:On\x0D
Input Mute On Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:On\x0D
IPv4 Address Command None	xConfiguration Network 1 IPv4 Address: string\x0D
IPv4 Gateway Command None	xConfiguration Network 1 IPv4 Gateway: string\x0D
IPv4 SubnetMask Command None	xConfiguration Network 1 IPv4 SubnetMask: string\x0D
IR Emulation - Key Click	xCommand UserInterface OSD Key Click Key: -\x0D
IR Emulation - Key Press	xCommand UserInterface OSD Key Press Key: -\x0D
IR Emulation - Key Release	xCommand UserInterface OSD Key Release Key: -\x0D
IR Emulation + Key Click	xCommand UserInterface OSD Key Click Key: +\x0D
IR Emulation + Key Press	xCommand UserInterface OSD Key Press Key: +\x0D
IR Emulation + Key Release	xCommand UserInterface OSD Key Release Key: +\x0D
IR Emulation 0 Key Click	xCommand UserInterface OSD Key Click Key: 0\x0D
IR Emulation 0 Key Press	xCommand UserInterface OSD Key Press Key: 0\x0D
IR Emulation 0 Key Release	xCommand UserInterface OSD Key Release Key: 0\x0D
IR Emulation 9 Key Click	xCommand UserInterface OSD Key Click Key: 9\x0D
IR Emulation 9 Key Press	xCommand UserInterface OSD Key Press Key: 9\x0D
IR Emulation 9 Key Release	xCommand UserInterface OSD Key Release Key: 9\x0D
IR Emulation Aux Key Click	xCommand UserInterface OSD Key Click Key: SrcAux\x0D
IR Emulation Aux Key Press	xCommand UserInterface OSD Key Press Key: SrcAux\x0D
IR Emulation Aux Key Release	xCommand UserInterface OSD Key Release Key: SrcAux\x0D
IR Emulation C Key Click	xCommand UserInterface OSD Key Click Key: C\x0D
IR Emulation C Key Press	xCommand UserInterface OSD Key Press Key: C\x0D
IR Emulation C Key Release	xCommand UserInterface OSD Key Release Key: C\x0D
IR Emulation Call Key Click	xCommand UserInterface OSD Key Click Key: Call\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

IR Emulation Call Key Press	xCommand UserInterface OSD Key Press Key: Call\x0D
IR Emulation Call Key Release	xCommand UserInterface OSD Key Release Key: Call\x0D
IR Emulation Camera Key Click	xCommand UserInterface OSD Key Click Key: SrcCamera\x0D
IR Emulation Camera Key Press	xCommand UserInterface OSD Key Press Key: SrcCamera\x0D
IR Emulation Camera Key Release	xCommand UserInterface OSD Key Release Key: SrcCamera\x0D
IR Emulation Disconnect Key Click	xCommand UserInterface OSD Key Click Key: Disconnect\x0D
IR Emulation Disconnect Key Press	xCommand UserInterface OSD Key Press Key: Disconnect\x0D
IR Emulation Disconnect Key Release	xCommand UserInterface OSD Key Release Key: Disconnect\x0D
IR Emulation Doc Cam Key Click	xCommand UserInterface OSD Key Click Key: SrcDocCam\x0D
IR Emulation Doc Cam Key Press	xCommand UserInterface OSD Key Press Key: SrcDocCam\x0D
IR Emulation Doc Cam Key Release	xCommand UserInterface OSD Key Release Key: SrcDocCam\x0D
IR Emulation Down Key Click	xCommand UserInterface OSD Key Click Key: Down\x0D
IR Emulation Down Key Press	xCommand UserInterface OSD Key Press Key: Down\x0D
IR Emulation Down Key Release	xCommand UserInterface OSD Key Release Key: Down\x0D
IR Emulation F1 Key Click	xCommand UserInterface OSD Key Click Key: F1\x0D
IR Emulation F1 Key Press	xCommand UserInterface OSD Key Press Key: F1\x0D
IR Emulation F1 Key Release	xCommand UserInterface OSD Key Release Key: F1\x0D
IR Emulation F2 Key Click	xCommand UserInterface OSD Key Click Key: F2\x0D
IR Emulation F2 Key Press	xCommand UserInterface OSD Key Press Key: F2\x0D
IR Emulation F2 Key Release	xCommand UserInterface OSD Key Release Key: F2\x0D
IR Emulation F3 Key Click	xCommand UserInterface OSD Key Click Key: F3\x0D
IR Emulation F3 Key Press	xCommand UserInterface OSD Key Press Key: F3\x0D
IR Emulation F3 Key Release	xCommand UserInterface OSD Key Release Key: F3\x0D
IR Emulation F4 Key Click	xCommand UserInterface OSD Key Click Key: F4\x0D
IR Emulation F4 Key Press	xCommand UserInterface OSD Key Press Key: F4\x0D
IR Emulation F4 Key Release	xCommand UserInterface OSD Key Release Key: F4\x0D
IR Emulation F5 Key Click	xCommand UserInterface OSD Key Click Key: F5\x0D
IR Emulation F5 Key Press	xCommand UserInterface OSD Key Press Key: F5\x0D
IR Emulation F5 Key Release	xCommand UserInterface OSD Key Release Key: F5\x0D

IR Emulation Grab Key Click	xCommand UserInterface OSD Key Click Key: Grab\x0D
IR Emulation Grab Key Press	xCommand UserInterface OSD Key Press Key: Grab\x0D
IR Emulation Grab Key Release	xCommand UserInterface OSD Key Release Key: Grab\x0D
IR Emulation Home Key Click	xCommand UserInterface OSD Key Click Key: Home\x0D
IR Emulation Home Key Press	xCommand UserInterface OSD Key Press Key: Home\x0D
IR Emulation Home Key Release	xCommand UserInterface OSD Key Release Key: Home\x0D
IR Emulation Layout Key Click	xCommand UserInterface OSD Key Click Key: Layout\x0D
IR Emulation Layout Key Press	xCommand UserInterface OSD Key Press Key: Layout\x0D
IR Emulation Layout Key Release	xCommand UserInterface OSD Key Release Key: Layout\x0D
IR Emulation Left Key Click	xCommand UserInterface OSD Key Click Key: Left\x0D
IR Emulation Left Key Press	xCommand UserInterface OSD Key Press Key: Left\x0D
IR Emulation Left Key Release	xCommand UserInterface OSD Key Release Key: Left\x0D
IR Emulation Mute Key Click	xCommand UserInterface OSD Key Click Key: Mute\x0D
IR Emulation Mute Key Press	xCommand UserInterface OSD Key Press Key: Mute\x0D
IR Emulation Mute Key Release	xCommand UserInterface OSD Key Release Key: Mute\x0D
IR Emulation Mute Mic Key Click	xCommand UserInterface OSD Key Click Key: Mute Mic\x0D
IR Emulation Mute Mic Key Press	xCommand UserInterface OSD Key Press Key: Mute Mic\x0D
IR Emulation Mute Mic Key Release	xCommand UserInterface OSD Key Release Key: Mute Mic\x0D
IR Emulation Ok Key Click	xCommand UserInterface OSD Key Click Key: Ok\x0D
IR Emulation Ok Key Press	xCommand UserInterface OSD Key Press Key: Ok\x0D
IR Emulation Ok Key Release	xCommand UserInterface OSD Key Release Key: Ok\x0D
IR Emulation Pc Key Click	xCommand UserInterface OSD Key Click Key: SrcPc\x0D
IR Emulation Pc Key Press	xCommand UserInterface OSD Key Press Key: SrcPc\x0D
IR Emulation Pc Key Release	xCommand UserInterface OSD Key Release Key: SrcPc\x0D
IR Emulation PhoneBook Key Click	xCommand UserInterface OSD Key Click Key: PhoneBook\x0D
IR Emulation PhoneBook Key Press	xCommand UserInterface OSD Key Press Key: PhoneBook\x0D

Global Scripter Module Communication Sheet

IR Emulation PhoneBook Key Release	xCommand UserInterface OSD Key Release Key: PhoneBook\x0D
IR Emulation Presentation Key Click	xCommand UserInterface OSD Key Click Key: Presentation\x0D
IR Emulation Presentation Key Press	xCommand UserInterface OSD Key Press Key: Presentation\x0D
IR Emulation Presentation Key Release	xCommand UserInterface OSD Key Release Key: Presentation\x0D
IR Emulation Right Key Click	xCommand UserInterface OSD Key Click Key: Right\x0D
IR Emulation Right Key Press	xCommand UserInterface OSD Key Press Key: Right\x0D
IR Emulation Right Key Release	xCommand UserInterface OSD Key Release Key: Right\x0D
IR Emulation Selfview Key Click	xCommand UserInterface OSD Key Click Key: Selfview\x0D
IR Emulation Selfview Key Press	xCommand UserInterface OSD Key Press Key: Selfview\x0D
IR Emulation Selfview Key Release	xCommand UserInterface OSD Key Release Key: Selfview\x0D
IR Emulation Square Key Click	xCommand UserInterface OSD Key Click Key: Square\x0D
IR Emulation Square Key Press	xCommand UserInterface OSD Key Press Key: Square\x0D
IR Emulation Square Key Release	xCommand UserInterface OSD Key Release Key: Square\x0D
IR Emulation Star Key Click	xCommand UserInterface OSD Key Click Key: Star\x0D
IR Emulation Star Key Press	xCommand UserInterface OSD Key Press Key: Star\x0D
IR Emulation Star Key Release	xCommand UserInterface OSD Key Release Key: Star\x0D
IR Emulation Up Key Click	xCommand UserInterface OSD Key Click Key: Up\x0D
IR Emulation Up Key Press	xCommand UserInterface OSD Key Press Key: Up\x0D
IR Emulation Up Key Release	xCommand UserInterface OSD Key Release Key: Up\x0D
IR Emulation Vcr Key Click	xCommand UserInterface OSD Key Click Key: SrcVcr\x0D
IR Emulation Vcr Key Press	xCommand UserInterface OSD Key Press Key: SrcVcr\x0D
IR Emulation Vcr Key Release	xCommand UserInterface OSD Key Release Key: SrcVcr\x0D
IR Emulation Volume Down Key Click	xCommand UserInterface OSD Key Click Key: VolumeDown\x0D
IR Emulation Volume Down Key Press	xCommand UserInterface OSD Key Press Key: VolumeDown\x0D
IR Emulation Volume Down Key Release	xCommand UserInterface OSD Key Release Key: VolumeDown\x0D
IR Emulation Volume Up Key Click	xCommand UserInterface OSD Key Click Key: VolumeUp\x0D

Global Scripter Module Communication Sheet

IR Emulation Volume Up Key Press	xCommand UserInterface OSD Key Press Key: VolumeUp\x0D
IR Emulation Volume Up Key Release	xCommand UserInterface OSD Key Release Key: VolumeUp\x0D
IR Emulation Zoom In Key Click	xCommand UserInterface OSD Key Click Key: ZoomIn\x0D
IR Emulation Zoom In Key Press	xCommand UserInterface OSD Key Press Key: ZoomIn\x0D
IR Emulation Zoom In Key Release	xCommand UserInterface OSD Key Release Key: ZoomIn\x0D
IR Emulation Zoom Out Key Click	xCommand UserInterface OSD Key Click Key: ZoomOut\x0D
IR Emulation Zoom Out Key Press	xCommand UserInterface OSD Key Press Key: ZoomOut\x0D
IR Emulation Zoom Out Key Release	xCommand UserInterface OSD Key Release Key: ZoomOut\x0D
Layout Set Auto Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:auto\x0D
Layout Set Auto Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:auto\x0D
Layout Set Custom Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:custom\x0D
Layout Set Custom Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:custom\x0D
Layout Set Equal Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:equal\x0D
Layout Set Equal Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:equal\x0D
Layout Set Overlay Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:overlay\x0D
Layout Set Overlay Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:overlay\x0D
Layout Set Prominent Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:prominent\x0D
Layout Set Prominent Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:prominent\x0D
Layout Set Single Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily:single\x0D
Layout Set Single Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily:single\x0D
Macro Activate Name testString	xCommand Macros Macro Activate Name: "testString"\x0D
Macro Auto Start Off	xConfiguration Macros AutoStart: Off\x0D
Macro Auto Start On	xConfiguration Macros AutoStart: On\x0D
Macro Deactivate Name testString	xCommand Macros Macro Deactivate Name: "testString"\x0D
Macro Mode Off	xConfiguration Macros Mode: Off\x0D
Macro Mode On	xConfiguration Macros Mode: On\x0D
Microphones Mute Off	xCommand Audio Microphones UnMute\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

Microphones Mute On	xCommand Audio Microphones Mute\x0D
Output Level 0 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level:0\x0D
Output Level 0 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level:0\x0D
Output Level 0 Output Line 1	xConfiguration Audio Output Line 1 Level:0\x0D
Output Level 0 Output Line 2	xConfiguration Audio Output Line 2 Level:0\x0D
Output Level 0 Output Line 3	xConfiguration Audio Output Line 3 Level:0\x0D
Output Level 0 Output Line 4	xConfiguration Audio Output Line 4 Level:0\x0D
Output Level 0 Output Line 5	xConfiguration Audio Output Line 5 Level:0\x0D
Output Level 0 Output Line 6	xConfiguration Audio Output Line 6 Level:0\x0D
Output Level -24 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level:-24\x0D
Output Level -24 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level:-24\x0D
Output Level -24 Output Line 1	xConfiguration Audio Output Line 1 Level:-24\x0D
Output Level -24 Output Line 2	xConfiguration Audio Output Line 2 Level:-24\x0D
Output Level -24 Output Line 3	xConfiguration Audio Output Line 3 Level:-24\x0D
Output Level -24 Output Line 4	xConfiguration Audio Output Line 4 Level:-24\x0D
Output Level -24 Output Line 5	xConfiguration Audio Output Line 5 Level:-24\x0D
Output Level -24 Output Line 6	xConfiguration Audio Output Line 6 Level:-24\x0D
People Count Out of Call Off	xConfiguration RoomAnalytics PeopleCountOutOfCall: Off\x0D
People Count Out of Call On	xConfiguration RoomAnalytics PeopleCountOutOfCall: On\x0D
People Presence Detector Off	xConfiguration RoomAnalytics PeoplePresenceDetector: Off\x0D
People Presence Detector On	xConfiguration RoomAnalytics PeoplePresenceDetector: On\x0D
Phonebook Folder ID Update None Phonebook Type Corporate	xCommand Phonebook Search PhonebookType:Corporate ContactType: Folder Offset: 0 Limit: 250\x0D
Phonebook Folder ID Update None Phonebook Type Local	xCommand Phonebook Search PhonebookType:Local ContactType: Folder Offset: 0 Limit: 250\x0D
Presentation ExternalSource Select Command None	xCommand UserInterface Presentation ExternalSource Select SourceIdentifier: "string"\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:2\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:5\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:2\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:4\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Preset Recall 1	xCommand RoomPreset Activate PresetId:1\x0D
Preset Recall 15	xCommand RoomPreset Activate PresetId:15\x0D
Preset Save 1	xCommand RoomPreset Store PresetId:1 Type:All\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

Preset Save 15	xCommand RoomPreset Store PresetId:15 Type:All\x0D
Reboot None	xCommand SystemUnit Boot Action:Restart\x0D
Restart Macros None	xCommand Macros Runtime Restart\x0D
Self View Default Fullscreen Mode Current	xConfiguration Video Selfview Default FullscreenMode:Current\x0D
Self View Default Fullscreen Mode Off	xConfiguration Video Selfview Default FullscreenMode:Off\x0D
Self View Default Fullscreen Mode On	xConfiguration Video Selfview Default FullscreenMode:On\x0D
Self View Off	xCommand Video Selfview Set Mode:Off\x0D
Self View On	xCommand Video Selfview Set Mode:On\x0D
Self View Position Center Left	xCommand Video Selfview Set PIPPosition:CenterLeft\x0D
Self View Position Center Right	xCommand Video Selfview Set PIPPosition:CenterRight\x0D
Self View Position Lower Left	xCommand Video Selfview Set PIPPosition:LowerLeft\x0D
Self View Position Lower Right	xCommand Video Selfview Set PIPPosition:LowerRight\x0D
Self View Position Upper Center	xCommand Video Selfview Set PIPPosition:UpperCenter\x0D
Self View Position Upper Left	xCommand Video Selfview Set PIPPosition:UpperLeft\x0D
Self View Position Upper Right	xCommand Video Selfview Set PIPPosition:UpperRight\x0D
SIP URI Command None	xConfiguration SIP URI: string\x0D
Sleep Timer 1	xCommand Standby ResetTimer Delay:1\x0D
Sleep Timer 480	xCommand Standby ResetTimer Delay:480\x0D
SpeakerTrack Control Off	xCommand Cameras SpeakerTrack Deactivate\x0D
SpeakerTrack Control On	xCommand Cameras SpeakerTrack Activate\x0D
SpeakerTrack Mode Auto	xConfiguration Cameras SpeakerTrack Mode: Auto\x0D
SpeakerTrack Mode Off	xConfiguration Cameras SpeakerTrack Mode: Off\x0D
Standby Activate	xCommand Standby Activate\x0D
Standby Deactivate	xCommand Standby Deactivate\x0D
Standby Half Wake	xCommand Standby Halfwake\x0D
System Unit Name Command None	xConfiguration SystemUnit Name: string\x0D
Volume 0	xCommand Audio Volume Set Level:0\x0D
Volume 100	xCommand Audio Volume Set Level:100\x0D

Appendix B. Update Commands

Audio Output Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode\x0D
Audio Output Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode\x0D
Audio Output Output Line 1	xConfiguration Audio Output Line 1 Mode\x0D
Audio Output Output Line 2	xConfiguration Audio Output Line 2 Mode\x0D
Audio Output Output Line 3	xConfiguration Audio Output Line 3 Mode\x0D
Audio Output Output Line 4	xConfiguration Audio Output Line 4 Mode\x0D
Audio Output Output Line 5	xConfiguration Audio Output Line 5 Mode\x0D
Audio Output Output Line 6	xConfiguration Audio Output Line 6 Mode\x0D
Auto Answer	xConfiguration Conference AutoAnswer Mode\x0D
Call Setup Mode	xConfiguration H323 CallSetup Mode\x0D
Call Status Call 1	xstatus call\x0D
Call Status Call 5	xstatus call\x0D
Display Mode	xConfiguration Video Monitors\x0D
DNS Domain Name	xStatus Network 1 DNS Domain Name\x0D
DNS Server Address Server 1	xStatus Network 1 DNS Server 1 Address\x0D
DNS Server Address Server 5	xStatus Network 1 DNS Server 5 Address\x0D
Do Not Disturb	xStatus Conference 1 DoNotDisturb\x0D
Far End Control	xConfiguration Conference FarEndControl Mode\x0D
Firmware Version	xgetxml /status/standby\x0D
Gateway Address	xStatus Network 1 IPv4 Gateway\x0D
H323 Gatekeeper Address	xStatus H323 Gatekeeper Address\x0D
H323 Gatekeeper Status	xStatus H323 Gatekeeper Status\x0D
H323Alias ID Status	xConfiguration H323 H323Alias ID\x0D
Input	xStatus Video Input MainVideoSource\x0D
Input Line Level Input Line 1	xConfiguration Audio Input Line 1 Level\x0D
Input Line Level Input Line 2	xConfiguration Audio Input Line 2 Level\x0D
Input Line Level Input Line 3	xConfiguration Audio Input Line 3 Level\x0D
Input Line Level Input Line 4	xConfiguration Audio Input Line 4 Level\x0D
Input Mic Level Input Microphone 1	xConfiguration Audio Input Microphone 1 Level\x0D
Input Mic Level Input Microphone 2	xConfiguration Audio Input Microphone 2 Level\x0D
Input Mic Level Input Microphone 3	xConfiguration Audio Input Microphone 3 Level\x0D
Input Mic Level Input Microphone 4	xConfiguration Audio Input Microphone 4 Level\x0D
Input Mic Level Input Microphone 5	xConfiguration Audio Input Microphone 5 Level\x0D
Input Mic Level Input Microphone 6	xConfiguration Audio Input Microphone 6 Level\x0D
Input Mic Level Input Microphone 7	xConfiguration Audio Input Microphone 7 Level\x0D
Input Mic Level Input Microphone 8	xConfiguration Audio Input Microphone 8 Level\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

Input Mute Input Line 1	xConfiguration Audio Input Line 1 Mode\x0D
Input Mute Input Line 2	xConfiguration Audio Input Line 2 Mode\x0D
Input Mute Input Line 3	xConfiguration Audio Input Line 3 Mode\x0D
Input Mute Input Line 4	xConfiguration Audio Input Line 4 Mode\x0D
Input Mute Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode\x0D
Input Mute Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode\x0D
Input Mute Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode\x0D
Input Mute Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode\x0D
Input Mute Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode\x0D
Input Mute Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode\x0D
Input Mute Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode\x0D
Input Mute Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode\x0D
Input Signal Input 1	xStatus Video Input Connector 1 Connected\x0D
Input Signal Input 3	xStatus Video Input Connector 3 Connected\x0D
Input Signal Input 5	xStatus Video Input Connector 5 Connected\x0D
IP Address	xStatus Network 1 IPv4 Address\x0D
Macro Auto Start	xConfiguration Macros AutoStart\x0D
Macro Mode	xConfiguration Macros Mode\x0D
Microphones Mute	xStatus Audio Microphones\x0D
Network Assignment	xConfiguration Network 1 IPv4 Assignment\x0D
Output Level Output HDMI 1	xConfiguration Audio Output HDMI 1 Level\x0D
Output Level Output HDMI 2	xConfiguration Audio Output HDMI 2 Level\x0D
Output Level Output Line 1	xConfiguration Audio Output Line 1 Level\x0D
Output Level Output Line 2	xConfiguration Audio Output Line 2 Level\x0D
Output Level Output Line 3	xConfiguration Audio Output Line 3 Level\x0D
Output Level Output Line 4	xConfiguration Audio Output Line 4 Level\x0D
Output Level Output Line 5	xConfiguration Audio Output Line 5 Level\x0D
Output Level Output Line 6	xConfiguration Audio Output Line 6 Level\x0D
People Count Current	xStatus RoomAnalytics PeopleCount Current\x0D
People Count Out of Call	xConfiguration RoomAnalytics PeopleCountOutOfCall\x0D
People Presence	xStatus RoomAnalytics PeoplePresence\x0D
People Presence Detector	xConfiguration RoomAnalytics PeoplePresenceDetector\x0D
Presentation Mode Status	xStatus Conference Presentation Mode\x0D
Presentation Sending Mode Status Instance 1	xStatus Conference Presentation LocalInstance 1 SendingMode\x0D
Presentation Sending Mode Status Instance 6	xStatus Conference Presentation LocalInstance 6 SendingMode\x0D
Presentation Source Status Instance 1	xStatus Conference Presentation LocalInstance 1 Source\x0D

Global Scripter Module Communication Sheet

Revision: 9/13/2018

Presentation Source Status Instance 6	xStatus Conference Presentation LocalInstance 6 Source\x0D
Self View	xStatus Video Selfview Mode\x0D
Self View Default Fullscreen Mode	xConfiguration Video Selfview Default FullscreenMode\x0D
Self View Position	xStatus Video Selfview PIPPosition\x0D
SIP Registration Status	xStatus SIP Registration 1 Status\x0D
SIP URI Status	xConfiguration SIP URI\x0D
SpeakerTrack Control	xStatus Cameras SpeakerTrack Status\x0D
SpeakerTrack Mode	xConfiguration Cameras SpeakerTrack Mode\x0D
Standby	xStatus Standby State\x0D
Subnet Mask	xStatus Network 1 IPv4 SubnetMask\x0D
System Unit Name Status	xConfiguration SystemUnit Name\x0D
Volume	xStatus Audio Volume\x0D