

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: Cisco
Firmware Version: CE9.8
Model(s): SX10 CE9.8.X, SX20 CE9.8.X, SX80 CE9.8.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_0_1_0	11/26/2019	Added Call Authentication Response Command
1_0_0_0	7/26/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly. devicePassword and deviceUsername default values are Cisco and admin respectively.
Example: `InterfaceName.devicePassword = 'extron'`
- CallHistoryOccurrenceType variable must be set accordingly. Default value is ''.
Example: `InterfaceName.CallHistoryOccurrenceType = ''`
- NumberOfPhonebookSearch variable must be set accordingly. Default value is '5'.
NumberOfPhonebookSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookSearch = '5'`
- NumberOfCallHistory variable must be set accordingly. Default value is '5'. NumberOfCallHistory ranges from 1 to 20.
Example: `InterfaceName.NumberofCallHistory = '5'`
- NumberOfPhonebookFolderSearch variable must be set accordingly. Default value is '5'.
NumberOfPhonebookFolderSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookFolderSearch = '5'`
- PhonebookSearchOffset variable must be set accordingly. Default value is '50'.
PhonebookSearchOffset ranges from 20 to 250.
Example: `InterfaceName.PhonebookSearchOffset = '50'`
- NumberOfPeripheral variable must be set accordingly. Default value is '5'. NumberOfPeripheral ranges from 1 to 10.
Example: `InterfaceName.NumberofPeripheral = '5'`
- Use highest baud rate for better performance when using a serial connection.
- SpeakerTrack: The SpeakerTrack Control command will work only after the SpeakerTrack Mode: Auto command is sent. This command applies only when using a Cisco TelePresence SpeakerTrack 60 camera.

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SX10 CE9.6.X')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SX10 CE9.6.X')
SSHClass
#Password Required InterfaceName = ModuleName.EthernetClass('192.168.254.254', 22, Credentials={'admin', 'Cisco'}, Model='SX10 CE9.6.X')
#No Password Required InterfaceName = ModuleName.EthernetClass('192.168.254.254', 22, Credentials={'admin', ''}, Model='SX10 CE9.6.X')

Phonebook commands:

- **PhonebookUpdate**
This is used to trigger the Phonebook search.
- **PhonebookSearchResult**
This is where the search results will be saved to when phonebook is searched. The number of results is set by a module variable `NumberOfPhonebookSearch`, this is initialized to 5 results by default.
- **PhonebookNavigation**
This command is used for navigating through the search results. The navigation commands scroll through the results when there are more results than `NumberOfPhonebookSearch` variable.
- **PhonebookSearchSet**
When the number selected in this command is triggered, it will dial the number with the `xCommand Dial Number` command.
- **PhonebookFolderIDUpdate**
This is used to trigger the Folder search within the Phonebook.
- **PhonebookFolderIDSearchResult**
This is where the search results are saved when `PhonebookFolderIDUpdate` is called. The number of results displayed is set to 5 by default. Simply call `SetText` with the returned results to display the results on a button or label object.
- **PhonebookFolderIDSearchSet**
When the Folder Name is selected using this command, it will store the Folder Name in a class variable named `FolderIDNumber`. This variable can be used in the 'FolderID' qualifier in the `PhonebookUpdate` command.
Example: `InterfaceName.Set('PhonebookUpdate','Refresh', {'Contact':'','FolderID':
InterfaceName.FolderIDNumber, 'PhonebookType':'Local'})`

Call History commands:

- **CallHistoryRefresh**
This is used to trigger the search for recent Call History based on the CallHistoryOccuranceType class variable.
- **CallHistory**
This is where the search results are saved when CallHistoryRefresh is called. The number of results displayed is set to 5 by default. Simply call SetText to display the results on a button or label object.
- **CallHistoryNavigation**
This command is used for navigating through the CallHistory results.
- **CallHistorySelect**
When the CallHistorySelect is triggered, it will dial the number selected.

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioOutput ³	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# AudioOutput example InterfaceName.Set('AudioOutput', 'On', {'Output': 'Line 1'})			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command CallHistoryNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')			
Command CallHistoryRefresh	Value None		
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)			
Command CallHistorySelect	Value '1' – '20'		
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', '1')			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode example InterfaceName.Set('CallSetupMode', 'Gatekeeper')			
Command CallAuthenticationResponseCommand	Value None		
Qualifier Key 'Call' ³	Qualifier Value 'Not Specified'	Qualifier Value '1' – '5'	
Qualifier Key 'Participant Role'	Qualifier Value 'Join as host'	Qualifier Value 'Join as panelist'	Qualifier Value 'Join as guest'
Qualifier Key 'Pin'	Qualifier Value 'String'		
Command CameraFocus	Value 'Near' 'Auto'	Value 'Far'	Value 'Stop'
Qualifier Key 'Camera' ³	Qualifier Value '1' – '7'		
# CameraFocus SX10 and SX20 example InterfaceName.Set('CameraFocus', 'Near', None)			

Global Scriptor Module Communication Sheet

# CameraFocus SX80 example InterfaceName.Set('CameraFocus', 'Near', {'Camera': '1'})			
Command CameraPan	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Camera' ³	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraPan SX10 and SX20 example InterfaceName.Set('CameraPan', 'Left', {'Speed': 15}) # CameraPan SX80 example InterfaceName.Set('CameraPan', 'Left', {'Camera': '1', 'Speed': 15})			
Command CameraPresetRecall	Value '1' – '35'		
# CameraPresetRecall example InterfaceName.Set('CameraPresetRecall', '1')			
Command CameraPresetSave	Value '1' – '35'		
Qualifier Key 'Camera' ³	Qualifier Value '1' – '7'		
# CameraPresetSave SX10 and SX20 example InterfaceName.Set('CameraPresetSave', '1', None) # CameraPresetSave SX80 example InterfaceName.Set('CameraPresetSave', '1', {'Camera': '1'})			
Command CameraTilt	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Camera' ³	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraTilt SX10 and SX20 example InterfaceName.Set('CameraTilt', 'Up', {'Speed': 15}) # CameraTilt SX80 example InterfaceName.Set('CameraTilt', 'Up', {'Camera': '1', 'Speed': 15})			
Command CameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Camera' ³	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoom SX10 and SX20 example InterfaceName.Set('CameraZoom', 'In', {'Speed': 15}) # CameraZoom SX80 example InterfaceName.Set('CameraZoom', 'In', {'Camera': '1', 'Speed': 15})			
Command ConnectedDeviceNavigation	Value 'Up'	Value 'Down'	Value 'Page Up'
	'Page Down'		
# ConnectedDeviceNavigation example InterfaceName.Set('ConnectedDeviceNavigation', 'Up')			
Command ConnectedDeviceUpdate	Value None		
# ConnectedDeviceUpdate example InterfaceName.Set('ConnectedDeviceUpdate', None)			

Global Scriptor Module Communication Sheet

Command DisplayMode	Value 'Dual' 'Triple Presentation Only' ³	Value 'Single' 'Triple' ³	Value 'Dual Presentation Only' 'Auto'
# DisplayMode example InterfaceName.Set('DisplayMode', 'Dual')			
Command DNSDomainNameCommand	Value None		
# DNSDomainNameCommand example InterfaceName.Set('DNSDomainNameCommand', None)			
Command DNSServerAddressCommand	Value None		
# DNSServerAddressCommand example InterfaceName.Set('DNSServerAddressCommand', None)			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Active')			
Command DTMF	Value '0' – '9'	Value '*'	Value '#'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command FarEndCameraPanTilt	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
# FarEndCameraPanTilt example InterfaceName.Set('FarEndCameraPanTilt', 'Up')			
Command FarEndCameraPresetRecall	Value '1' – '15'		
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')			
Command FarEndCameraSource	Value '0' – '15'		
# FarEndCameraSource example InterfaceName.Set('FarEndCameraSource', '0')			
Command FarEndCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
# FarEndCameraZoom example InterfaceName.Set('FarEndCameraZoom', 'In')			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Set('FarEndControl', 'On')			
Command H323GatekeeperAddressCommand	Value None		
# H323GatekeeperAddressCommand example InterfaceName.Set('H323GatekeeperAddressCommand', None)			

Command	Value		
H323AliasE164Command	None		
# H323AliasE164Command example InterfaceName.Set('H323AliasE164Command', None)			
Command	Value		
H323AliasIDCommand	None		
# H323AliasIDCommand example InterfaceName.Set('H323AliasIDCommand', None)			
Command	Value		
H323ProfileAuthenticationLoginNameCommand	None		
# H323ProfileAuthenticationLoginNameCommand example InterfaceName.Set('H323ProfileAuthenticationLoginNameCommand', None)			
Command	Value		
H323ProfileAuthenticationPasswordCommand	None		
# H323ProfileAuthenticationPasswordCommand example InterfaceName.Set('H323ProfileAuthenticationPasswordCommand', None)			
Command	Value	Value	Value
Hook	'Dial'	'Join 1'	'Accept'
	'Reject'	'Hold 1'	'Resume 1'
	'Disconnect 1'	'Hold 2'	'Hold 3'
	'Resume 2'	'Resume 3'	'Disconnect 2'
	'Disconnect 3'	'Join 2'	'Join 3'
	'Join 4'	'Join 5'	'Hold 4'
	'Hold 5'	'Disconnect 4'	'Disconnect 5'
	'Resume 4'	'Resume 5'	'Disconnect All'
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Protocol'	'Auto'	'SIP'	'H323'
# Hook example InterfaceName.Set('Hook', 'Disconnect 1', None) InterfaceName.Set('Hook', 'Dial', {'Number': 'string', 'Protocol': 'Auto'})			
Command	Value	Value	Value
Input	'1' – '3' ²	'1' – '6' ³	'Composed'
# Input example InterfaceName.Set('Input', '1')			
Command	Value		
InputLineLevel ³	0 to 24 in steps of 1		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Input'	'Line 1'	'Line 2'	'Line 3'
# InputLineLevel example InterfaceName.Set('InputLineLevel', 24, {'Input': 'Line 1'})			
Command	Value	Value	
InputMicLevel	0 to 24 in steps of 1 ^{1,2}	0 to 70 in steps of 1 ³	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Input'	'Microphone 1' ^{1,2,3}	'Microphone 2' ^{1,2,3}	'Microphone 3' ³
	'Microphone 4' ³	'Microphone 5' ³	'Microphone 6' ³
	'Microphone 7' ³	'Microphone 8' ³	
# InputMicLevel example InterfaceName.Set('InputMicLevel', 24, {'Input': 'Microphone 1'})			

Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ^{1, 2, 3} 'Microphone 4' ³ 'Microphone 7' ³ 'Line 2' ³	Qualifier Value 'Microphone 2' ^{1, 2, 3} 'Microphone 5' ³ 'Microphone 8' ³ 'Line 3' ³	Qualifier Value 'Microphone 3' ³ 'Microphone 6' ³ 'Line 1' ³ 'Line 4' ³
# InputMute example InterfaceName.Set('InputMute', 'On', {'Input': 'Microphone 1'})			
Command IPv4AddressCommand	Value None		
# IPv4AddressCommand example InterfaceName.Set('IPv4AddressCommand', None)			
Command IPv4GatewayCommand	Value None		
# IPv4GatewayCommand example InterfaceName.Set('IPv4GatewayCommand', None)			
Command IPv4SubnetMaskCommand	Value None		
# IPv4SubnetMaskCommand example InterfaceName.Set('IPv4SubnetMaskCommand', None)			
Command IREmulation ^{1, 2}	Value '0' – '9' 'Down' 'F3' 'Grab' 'Left' 'Ok' 'Right' 'Aux' 'Pc' 'Up' 'Zoom In' '+' 'C' 'F1' 'F4' 'Home' 'Mute' 'PhoneBook' 'Selfview' 'Camera' 'Vcr' 'Volume Down' 'Zoom Out' '_'	Value 'Call' 'F2' 'F5' 'Layout' 'Mute Mic' 'Presentation' 'Square' 'Doc Cam' 'Star' 'Volume Up' 'Disconnect'	
Qualifier Key 'Key'	Qualifier Value 'Click'	Qualifier Value 'Press'	Qualifier Value 'Release'
# IREmulation example InterfaceName.Set('IREmulation', '0', {'Key': 'Click'})			
Command LayoutSet	Value 'Auto' 'Overlay'	Value 'Custom' 'Prominent'	Value 'Equal' 'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command Macro	Value 'Activate'	Value 'Deactivate'	
Qualifier Key 'Name'	Qualifier Value 'String'		
# Macro example InterfaceName.Set('Macro', 'Activate', {'Name': 'String'})			

Global Scriptor Module Communication Sheet

Command MacroAutoStart	Value 'On'	Value 'Off'	
# MacroAutoStart example InterfaceName.Set('MacroAutoStart', 'On')			
Command MacroMode	Value 'On'	Value 'Off'	
# MacroMode example InterfaceName.Set('MacroMode', 'On')			
Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute example InterfaceName.Set('MicrophonesMute', 'On')			
Command OutputLevel ³	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# OutputLevel example InterfaceName.Set('OutputLevel', 0, {'Output': 'Line 1'})			
Command PeopleCountOutOfCall	Value 'On'	Value 'Off'	
# PeopleCountOutOfCall example InterfaceName.Set('PeopleCountOutOfCall', 'On')			
Command PeoplePresenceDetector	Value 'On'	Value 'Off'	
# PeoplePresenceDetector example InterfaceName.Set('PeoplePresenceDetector', 'On')			
Command PhonebookFolderID	Value 'String'		
# PhonebookFolderID example InterfaceName.Set('PhonebookFolderID', 'String')			
Command PhonebookFolderIDNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up')			
Command PhonebookFolderIDSearchSet	Value 1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command PhonebookFolderIDUpdate	Value None		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Corporate'})			

Global Scriptor Module Communication Sheet

Command PhonebookNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up', {'Phonebook Type': 'Corporate'})			
Command PhonebookSearch	Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookSearch example InterfaceName.Set('PhonebookSearch', 'String', {'Phonebook Type': 'Corporate'})			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Phonebook Type': 'Corporate'})			
Command Presentation	Value 'Start'	Value 'Stop'	
Qualifier Key 'Instance'	Qualifier Value '1' – '6'	Qualifier Value 'Not Specified'	Qualifier Value 'New'
Qualifier Key 'Sending Mode'	Qualifier Value 'Not Specified'	Qualifier Value 'Local Only'	Qualifier Value 'Local and Remote'
Qualifier Key 'Video Input Source'	Qualifier Value 'Presentation Source 1' 2, 3 'Presentation Source 4' ³ 'Connector Id 3' ^{1, 2, 3} 'Not Specified'	Qualifier Value 'Presentation Source 2' ^{1, 2, 3} 'Connector Id 1' ^{2, 3} 'Connector Id 4' ³	Qualifier Value 'Presentation Source 3' ³ 'Connector Id 2' ^{1, 2, 3} 'Connector Id 5' ³
Qualifier Key 'Layout'	Qualifier Value 'Not Specified'	Qualifier Value 'Equal'	Qualifier Value 'Prominent'
# Presentation example InterfaceName.Set('Presentation', 'Stop') InterfaceName.Set('Presentation', 'Start', {'Instance': '1', 'Sending Mode': 'Not Specified', 'Video Input Source': 'Not Specified', 'Layout': 'Not Specified'})			
Command PresentationExternalSourceSelectCommand	Value None		
# PresentationExternalSourceSelectCommand example InterfaceName.Set('PresentationExternalSourceSelectCommand', None)			
Command PresetRecall	Value '1' – '15'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1')			
Command PresetSave	Value '1' – '15'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			

Command	Value		
Reboot	None		
# Reboot example InterfaceName.Set('Reboot', None)			
Command	Value		
RestartMacros	None		
# RestartMacros example InterfaceName.Set('RestartMacros', None)			
Command	Value	Value	
SelfView	'On'	'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')			
Command	Value	Value	Value
SelfViewDefaultFullscreen Mode	'On'	'Off'	'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Set('SelfViewDefaultFullscreenMode', 'On')			
Command	Value	Value	Value
SelfViewPosition	'Upper Left' 'Center Left' 'Lower Right'	'Upper Center' 'Center Right'	'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')			
Command	Value		
SIPURICommand	None		
# SIPURICommand example InterfaceName.Set('SIPURICommand', None)			
Command	Value		
SleepTimer	1 – 480		
# SleepTimer example InterfaceName.Set('SleepTimer', 480)			
Command	Value	Value	
SpeakerTrackControl ³	'On'	'Off'	
# SpeakerTrackControl example InterfaceName.Set('SpeakerTrackControl', 'On')			
Command	Value	Value	
SpeakerTrackMode ³	'Auto'	'Off'	
# SpeakerTrackMode example InterfaceName.Set('SpeakerTrackMode', 'Auto')			
Command	Value	Value	Value
Standby	'Activate'	'Deactivate'	'Half Wake'
# Standby example InterfaceName.Set('Standby', 'Activate')			
Command	Value		
SystemUnitNameCommand	None		
# SystemUnitNameCommand example InterfaceName.Set('SystemUnitNameCommand', None)			
Command	Value		
Volume	0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

¹ Supported on model SX10

² Supported on model SX20

³Supported on model SX80

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, CallHistory, CallStatus, CallStatusDeviceType, CallStatusType, ConnectedDeviceMAC, ConnectedDeviceName, ConnectedDeviceType, DisplayName, PhonebookFolderIDSearchResult, PhonebookSearchResult, and RemoteNumber do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})  
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})  
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)  
Value = InterfaceName.ReadStatus(Command)  
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)  
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
AudioOutput ³	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Output'	'Line 1'	'Line 2'	'Line 3'
	'Line 4'	'Line 5'	'Line 6'
	'HDMI 1'	'HDMI 2'	
# AudioOutput example InterfaceName.Update('AudioOutput', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('AudioOutput', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('AudioOutput', None, FeedbackHandler)			
Command	Value	Value	
AutoAnswer	'On'	'Off'	
# AutoAnswer example InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)			
Command	Value		
CallHistory	'String'		
Qualifier Key	Qualifier Value		
'Button'	'1' – '20'		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Detail Type'	'Display Name'	'Callback Number'	'Last Occurrence Time'
	'Occurrence Count'	'Occurrence Type'	
Value = InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)			
Command	Value	Value	
CallSetupMode	'Gatekeeper'	'Direct'	
# CallSetupMode example InterfaceName.Update('CallSetupMode') Value = InterfaceName.ReadStatus('CallSetupMode') InterfaceName.SubscribeStatus('CallSetupMode', None, FeedbackHandler)			

Global Scriptor Module Communication Sheet

Command CallStatus	Value 'Dialing' 'Ringing' 'On Hold' 'Remote Preserved'	Value 'Connecting' 'Idle' 'Early Media'	Value 'Connected' 'Disconnecting' 'Preserved'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
Value = InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)			
Command CallStatusDeviceType	Value 'Endpoint'	Value 'MCU'	Value 'Unknown'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
Value = InterfaceName.ReadStatus('CallStatusDeviceType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusDeviceType', None, FeedbackHandler)			
Command CallStatusType	Value 'Video' 'Forward All Call'	Value 'Audio' 'Unknown'	Value 'Audio Can Escalate'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
Value = InterfaceName.ReadStatus('CallStatusType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)			
Command ConnectedDeviceMAC	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
Value = InterfaceName.ReadStatus('ConnectedDeviceMAC', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceMAC', None, FeedbackHandler)			
Command ConnectedDeviceName	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
Value = InterfaceName.ReadStatus('ConnectedDeviceName', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceName', None, FeedbackHandler)			
Command ConnectedDeviceType	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
Value = InterfaceName.ReadStatus('ConnectedDeviceType', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceType', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command DisplayMode	Value 'Dual' 'Triple Presentation Only' ³	Value 'Single' 'Triple' ³	Value 'Dual Presentation Only' 'Auto'
# DisplayMode example InterfaceName.Update('DisplayMode') Value = InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command DisplayName	Value 'String'
Qualifier Key 'Call'	Qualifier Value '1' – '5'
Value = InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)	
Command DNSDomainName	Value 'String'
# DNSDomainName example InterfaceName.Update('DNSDomainName') Value = InterfaceName.ReadStatus('DNSDomainName') InterfaceName.SubscribeStatus('DNSDomainName', None, FeedbackHandler)	
Command DNSServerAddress	Value 'String'
Qualifier Key 'Server'	Qualifier Value '1' – '5'
# DNSServerAddress example InterfaceName.Update('DNSServerAddress', {'Server': '1'}) Value = InterfaceName.ReadStatus('DNSServerAddress', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddress', None, FeedbackHandler)	
Command DoNotDisturb	Value 'Active' Value 'Inactive'
# DoNotDisturb example InterfaceName.Update('DoNotDisturb') Value = InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)	
Command FarEndControl	Value 'On' Value 'Off'
# FarEndControl example InterfaceName.Update('FarEndControl') Value = InterfaceName.ReadStatus('FarEndControl') InterfaceName.SubscribeStatus('FarEndControl', None, FeedbackHandler)	
Command FirmwareVersion	Value 'String'
# FirmwareVersion example InterfaceName.Update('FirmwareVersion') Value = InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)	
Command GatewayAddress	Value 'String'
# GatewayAddress example InterfaceName.Update('GatewayAddress') Value = InterfaceName.ReadStatus('GatewayAddress') InterfaceName.SubscribeStatus('GatewayAddress', None, FeedbackHandler)	
Command H323GatekeeperAddress	Value 'String'
# H323GatekeeperAddress example InterfaceName.Update('H323GatekeeperAddress') Value = InterfaceName.ReadStatus('H323GatekeeperAddress') InterfaceName.SubscribeStatus('H323GatekeeperAddress', None, FeedbackHandler)	

Global Scriptor Module Communication Sheet

Revision: 11/26/2019

Command H323GatekeeperStatus	Value 'Required' 'Authenticating' 'Registered'	Value 'Discovering' 'Authenticated' 'Inactive'	Value 'Discovered' 'Registering' 'Rejected'
# H323GatekeeperStatus example InterfaceName.Update('H323GatekeeperStatus') Value = InterfaceName.ReadStatus('H323GatekeeperStatus') InterfaceName.SubscribeStatus('H323GatekeeperStatus', None, FeedbackHandler)			
Command H323AliasIDStatus	Value 'String'		
# H323AliasIDStatus example InterfaceName.Update('H323AliasIDStatus') Value = InterfaceName.ReadStatus('H323AliasIDStatus') InterfaceName.SubscribeStatus('H323AliasIDStatus', None, FeedbackHandler)			
Command Input	Value '1' – '3' ²	Value '1' – '6' ³	Value 'Composed'
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command InputLineLevel ³	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Line 1' 'Line 4'	Qualifier Value 'Line 2'	Qualifier Value 'Line 3'
# InputLineLevel example InterfaceName.Update('InputLineLevel', {'Input': 'Line 1'}) Value = InterfaceName.ReadStatus('InputLineLevel', {'Input': 'Line 1'}) InterfaceName.SubscribeStatus('InputLineLevel', None, FeedbackHandler)			
Command InputMicLevel	Value 0 to 24 in steps of 1 ^{1, 2}		
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ^{1, 2, 3} 'Microphone 4' ³ 'Microphone 7' ³	Qualifier Value 'Microphone 2' ^{1, 2, 3} 'Microphone 5' ³ 'Microphone 8' ³	Qualifier Value 'Microphone 3' ³ 'Microphone 6' ³
# InputMicLevel example InterfaceName.Update('InputMicLevel', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMicLevel', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMicLevel', None, FeedbackHandler)			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ^{1, 2, 3} 'Microphone 4' ³ 'Microphone 7' ³ 'Line 2' ³	Qualifier Value 'Microphone 2' ^{1, 2, 3} 'Microphone 5' ³ 'Microphone 8' ³ 'Line 3' ³	Qualifier Value 'Microphone 3' ³ 'Microphone 6' ³ 'Line 1' ³ 'Line 4' ³
# InputMute example InterfaceName.Update('InputMute', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMute', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMute', None, FeedbackHandler)			

Global Scriptor Module Communication Sheet

Command InputSignal	Value 'True'	Value 'False'	Value 'Unknown'
Qualifier Key 'Input'	Qualifier Value '1' – '3' ²	Qualifier Value '1' – '5' ³	
# InputSignal example InterfaceName.Update('InputSignal', {'Input': '1'}) Value = InterfaceName.ReadStatus('InputSignal', {'Input': '1'}) InterfaceName.SubscribeStatus('InputSignal', None, FeedbackHandler)			
Command IPAddress	Value 'String'		
# IPAddress example InterfaceName.Update('IPAddress') Value = InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)			
Command LayoutSet	Value 'Auto' 'Overlay'	Value 'Custom' 'Prominent'	Value 'Equal' 'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Update('LayoutSet', {'Target': 'Local'}) Value = InterfaceName.ReadStatus('LayoutSet', {'Target': 'Local'}) InterfaceName.SubscribeStatus('LayoutSet', None, FeedbackHandler)			
Command MACAddress	Value 'String'		
# MACAddress example InterfaceName.Update('MACAddress') Value = InterfaceName.ReadStatus('MACAddress') InterfaceName.SubscribeStatus('MACAddress', None, FeedbackHandler)			
Command MacroAutoStart	Value 'On'	Value 'Off'	
# MacroAutoStart example InterfaceName.Update('MacroAutoStart') Value = InterfaceName.ReadStatus('MacroAutoStart') InterfaceName.SubscribeStatus('MacroAutoStart', None, FeedbackHandler)			
Command MacroMode	Value 'On'	Value 'Off'	
# MacroMode example InterfaceName.Update('MacroMode') Value = InterfaceName.ReadStatus('MacroMode') InterfaceName.SubscribeStatus('MacroMode', None, FeedbackHandler)			
Command MicrophonesMute	Value 'On'	Value 'Off'	
# MicrophonesMute example InterfaceName.Update('MicrophonesMute') Value = InterfaceName.ReadStatus('MicrophonesMute') InterfaceName.SubscribeStatus('MicrophonesMute', None, FeedbackHandler)			
Command NetworkAssignment	Value 'Static'	Value 'DHCP'	
# NetworkAssignment example InterfaceName.Update('NetworkAssignment') Value = InterfaceName.ReadStatus('NetworkAssignment') InterfaceName.SubscribeStatus('NetworkAssignment', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 11/26/2019

Command OutputLevel ³	Value -24 to 0 in steps of 1		
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4' 'HDMI 1'	Qualifier Value 'Line 2' 'Line 5' 'HDMI 2'	Qualifier Value 'Line 3' 'Line 6'
# OutputLevel example InterfaceName.Update('OutputLevel', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('OutputLevel', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('OutputLevel', None, FeedbackHandler)			
Command PeopleCountCurrent	Value 'String'		
# PeopleCountCurrent example InterfaceName.Update('PeopleCountCurrent') Value = InterfaceName.ReadStatus('PeopleCountCurrent') InterfaceName.SubscribeStatus('PeopleCountCurrent', None, FeedbackHandler)			
Command PeopleCountOutOfCall	Value 'On'	Value 'Off'	
# PeopleCountOutOfCall example InterfaceName.Update('PeopleCountOutOfCall') Value = InterfaceName.ReadStatus('PeopleCountOutOfCall') InterfaceName.SubscribeStatus('PeopleCountOutOfCall', None, FeedbackHandler)			
Command PeoplePresence	Value 'Yes'	Value 'No'	Value 'Unknown'
# PeoplePresence example InterfaceName.Update('PeoplePresence') Value = InterfaceName.ReadStatus('PeoplePresence') InterfaceName.SubscribeStatus('PeoplePresence', None, FeedbackHandler)			
Command PeoplePresenceDetector	Value 'On'	Value 'Off'	
# PeoplePresenceDetector example InterfaceName.Update('PeoplePresenceDetector') Value = InterfaceName.ReadStatus('PeoplePresenceDetector') InterfaceName.SubscribeStatus('PeoplePresenceDetector', None, FeedbackHandler)			
Command PhonebookFolderIDSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
Value = InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)			
Command PhonebookSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)			
Command PresentationModeStatus	Value 'Off' ^{1, 2, 3} 'On' ^{1, 2}	Value 'Sending' ³	Value 'Receiving' ³
# PresentationModeStatus example InterfaceName.Update('PresentationModeStatus') Value = InterfaceName.ReadStatus('PresentationModeStatus') InterfaceName.SubscribeStatus('PresentationModeStatus', None, FeedbackHandler)			

Global Scriptor Module Communication Sheet

Command PresentationSendingModeStatus	Value 'Local and Remote'	Value 'Local Only'	Value 'Off'
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# PresentationSendingModeStatus example InterfaceName.Update('PresentationSendingModeStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSendingModeStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSendingModeStatus', None, FeedbackHandler)			
Command PresentationSourceStatus	Value '1' ¹ 'Off'	Value '1' – '2' ²	Value '1' – '4' ³
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
# PresentationSourceStatus example InterfaceName.Update('PresentationSourceStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSourceStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSourceStatus', None, FeedbackHandler)			
Command RemoteNumber	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
Value = InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'}) InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Update('SelfView') Value = InterfaceName.ReadStatus('SelfView') InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)			
Command SelfViewDefaultFullscreenMode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Update('SelfViewDefaultFullscreenMode') Value = InterfaceName.ReadStatus('SelfViewDefaultFullscreenMode') InterfaceName.SubscribeStatus('SelfViewDefaultFullscreenMode', None, FeedbackHandler)			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Update('SelfViewPosition') Value = InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)			
Command SIPRegistrationStatus	Value 'Deregistering' 'Registered'	Value 'Failed' 'Registering'	Value 'Inactive'
# SIPRegistrationStatus example InterfaceName.Update('SIPRegistrationStatus') Value = InterfaceName.ReadStatus('SIPRegistrationStatus') InterfaceName.SubscribeStatus('SIPRegistrationStatus', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command	Value		
SIPURISStatus	'String'		
# SIPURISStatus example InterfaceName.Update('SIPURISStatus') Value = InterfaceName.ReadStatus('SIPURISStatus') InterfaceName.SubscribeStatus('SIPURISStatus', None, FeedbackHandler)			
Command	Value	Value	
SpeakerTrackControl ³	'On'	'Off'	
# SpeakerTrackControl example InterfaceName.Update('SpeakerTrackControl') Value = InterfaceName.ReadStatus('SpeakerTrackControl') InterfaceName.SubscribeStatus('SpeakerTrackControl', None, FeedbackHandler)			
Command	Value	Value	
SpeakerTrackMode ³	'Auto'	'Off'	
# SpeakerTrackMode example InterfaceName.Update('SpeakerTrackMode') Value = InterfaceName.ReadStatus('SpeakerTrackMode') InterfaceName.SubscribeStatus('SpeakerTrackMode', None, FeedbackHandler)			
Command	Value	Value	Value
Standby	'Activate'	'Deactivate'	'Entering Standby'
	'Half Wake'		
# Standby example InterfaceName.Update('Standby') Value = InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)			
Command	Value		
SubnetMask	'String'		
# SubnetMask example InterfaceName.Update('SubnetMask') Value = InterfaceName.ReadStatus('SubnetMask') InterfaceName.SubscribeStatus('SubnetMask', None, FeedbackHandler)			
Command	Value		
SystemUnitNameStatus	'String'		
# SystemUnitNameStatus example InterfaceName.Update('SystemUnitNameStatus') Value = InterfaceName.ReadStatus('SystemUnitNameStatus') InterfaceName.SubscribeStatus('SystemUnitNameStatus', None, FeedbackHandler)			
Command	Value		
Volume	0 to 100 in steps of 1		
# Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)			

¹ Supported on model SX10

² Supported on model SX20

³ Supported on model SX80

Cable and Adapter Requirements

SX10: Contact manufacturer for cable requirements

SX20: Captive Screw to USB Type-A RS-232 Serial Cable adapter

SX80: Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

For the module to work, the “Require passphrase change on next user sign in” must be unchecked within the devices embedded webpage. checkbox under Security → Users → <USERNAME>.


Serial communication

Port Type: RS-232
Baud Rate: 115200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None


Pin Assignments Diagram

SX10, SX20:

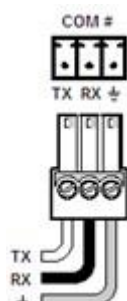


Contact manufacturer for pinout diagram layout

SX80:

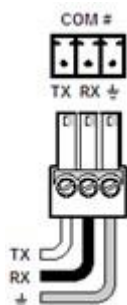

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

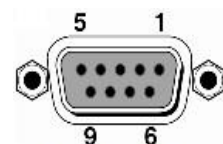

RS232 DB9, Female
Video Conference

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface.

Port Type:	Ethernet
Default Port:	22
Logon Credentials Supported:	Yes
Default Username:	admin
Multi-Connection Capabilities:	Yes
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

- For the module to work, the “Require passphrase change on next user sign in” must be unchecked within the devices embedded webpage. checkbox under Security → Users → <USERNAME>.
- Password is required for SSH communication to work. SSH mode must be set to ‘On’ by an admin to have open communication with the module.

Appendix A. Set Commands

Audio Output Off Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:Off\x0D
Audio Output Off Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:Off\x0D
Audio Output Off Output Line 1	xConfiguration Audio Output Line 1 Mode:Off\x0D
Audio Output Off Output Line 2	xConfiguration Audio Output Line 2 Mode:Off\x0D
Audio Output Off Output Line 3	xConfiguration Audio Output Line 3 Mode:Off\x0D
Audio Output Off Output Line 4	xConfiguration Audio Output Line 4 Mode:Off\x0D
Audio Output Off Output Line 5	xConfiguration Audio Output Line 5 Mode:Off\x0D
Audio Output Off Output Line 6	xConfiguration Audio Output Line 6 Mode:Off\x0D
Audio Output On Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:On\x0D
Audio Output On Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:On\x0D
Audio Output On Output Line 1	xConfiguration Audio Output Line 1 Mode:On\x0D
Audio Output On Output Line 2	xConfiguration Audio Output Line 2 Mode:On\x0D
Audio Output On Output Line 3	xConfiguration Audio Output Line 3 Mode:On\x0D
Audio Output On Output Line 4	xConfiguration Audio Output Line 4 Mode:On\x0D
Audio Output On Output Line 5	xConfiguration Audio Output Line 5 Mode:On\x0D
Audio Output On Output Line 6	xConfiguration Audio Output Line 6 Mode:On\x0D
Auto Answer Off	xConfiguration Conference AutoAnswer Mode: Off\x0D
Auto Answer On	xConfiguration Conference AutoAnswer Mode: On\x0D
Call Setup Mode Direct	xConfiguration H323 CallSetup Mode: Direct\x0D
Call Setup Mode Gatekeeper	xConfiguration H323 CallSetup Mode: Gatekeeper\x0D
Camera Focus Auto	xCommand Camera TriggerAutoFocus CameraId:1\x0D
Camera Focus Auto Camera 1	xCommand Camera TriggerAutoFocus CameraId:1\x0D
Camera Focus Auto Camera 7	xCommand Camera TriggerAutoFocus CameraId:7\x0D
Camera Focus Far	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 1	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 7	xCommand Camera Ramp CameraId:7 Focus:Far\x0D
Camera Focus Near	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 1	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 7	xCommand Camera Ramp CameraId:7 Focus:Near\x0D
Camera Focus Stop	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 1	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 7	xCommand Camera Ramp CameraId:7 Focus:Stop\x0D
Camera Pan Left Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Left Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:15\x0D
Camera Pan Left Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D

Global Scriptor Module Communication Sheet

Camera Pan Right Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Right Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:15\x0D
Camera Pan Right Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Preset Recall 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset Recall 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Save 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 7	xCommand Camera Preset Store PresetId:1 CameraId:7\x0D
Camera Preset Save 35	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 1	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 7	xCommand Camera Preset Store PresetId:35 CameraId:7\x0D
Camera Tilt Down Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Stop\x0D
Camera Tilt Stop Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Stop\x0D
Camera Tilt Up Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D

Global Scriptor Module Communication Sheet

Camera Tilt Up Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Zoom In Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom Out Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom: Stop\x0D
Camera Zoom Stop Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Connected Device Update None	xStatus Peripherals ConnectedDevice\x0D
Display Mode Auto	xConfiguration Video Monitors: Auto\x0D
Display Mode Dual	xConfiguration Video Monitors: Dual\x0D
Display Mode Dual Presentation Only	xConfiguration Video Monitors: DualPresentationOnly\x0D
Display Mode Single	xConfiguration Video Monitors: Single\x0D
Display Mode Triple	xConfiguration Video Monitors: Triple\x0D
Display Mode Triple Presentation Only	xConfiguration Video Monitors: TriplePresentationOnly\x0D
DNS Domain Name Command None	xConfiguration Network 1 DNS Domain Name: string\x0D
DNS Server Address Command None	xConfiguration Network 1 DNS Server 1 Address: string\x0D
Do Not Disturb Active	xCommand Conference DoNotDisturb Activate\x0D
Do Not Disturb Inactive	xCommand Conference DoNotDisturb Deactivate\x0D
DTMF #	xCommand Call DTMFSend DTMFString:#\x0D

**Global Scripter Module
Communication Sheet**

Revision: 11/26/2019

DTMF *	xCommand Call DTMFSend DTMFString:*\x0D
DTMF 0	xCommand Call DTMFSend DTMFString:0\x0D
DTMF 9	xCommand Call DTMFSend DTMFString:9\x0D
Far End Camera Pan/Tilt Down	xCommand Call FarEndControl Camera Move Value:Down\x0D
Far End Camera Pan/Tilt Left	xCommand Call FarEndControl Camera Move Value:Left\x0D
Far End Camera Pan/Tilt Right	xCommand Call FarEndControl Camera Move Value:Right\x0D
Far End Camera Pan/Tilt Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Camera Pan/Tilt Up	xCommand Call FarEndControl Camera Move Value:Up\x0D
Far End Camera Preset Recall 1	xCommand Call FarEndControl RoomPreset Activate:1\x0D
Far End Camera Preset Recall 15	xCommand Call FarEndControl RoomPreset Activate:15\x0D
Far End Camera Source 0	xCommand Call FarEndControl Source Select SourceId:0\x0D
Far End Camera Source 15	xCommand Call FarEndControl Source Select SourceId:15\x0D
Far End Camera Zoom In	xCommand Call FarEndControl Camera Move Value:ZoomIn\x0D
Far End Camera Zoom Out	xCommand Call FarEndControl Camera Move Value:ZoomOut\x0D
Far End Control Off	xConfiguration Conference FarEndControl Mode: Off\x0D
Far End Control On	xConfiguration Conference FarEndControl Mode: On\x0D
H323 Gatekeeper Address Command None	xConfiguration H323 Gatekeeper Address: string\x0D
H323Alias E164 Command None	xConfiguration H323 H323Alias E164: string\x0D
H323Alias ID Command None	xConfiguration H323 H323Alias ID: string\x0D
H323Profile Authentication LoginName Command None	H323 Authentication LoginName: string\x0D
H323Profile Authentication Password Command None	xConfiguration H323 Authentication Password: string\x0D
Hook Accept Protocol Auto	xCommand Call Accept\x0D
Hook Accept Protocol H320	xCommand Call Accept\x0D
Hook Accept Protocol H323	xCommand Call Accept\x0D
Hook Accept Protocol SIP	xCommand Call Accept\x0D
Hook Dial Protocol Auto	xCommand Dial Number:"string"\x0D
Hook Dial Protocol H320	xCommand Dial Number:"string" Protocol:h320\x0D
Hook Dial Protocol H323	xCommand Dial Number:"string" Protocol:h323\x0D
Hook Dial Protocol SIP	xCommand Dial Number:"string" Protocol:sip\x0D
Hook Disconnect 1 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Disconnect 1 Protocol H320	xCommand Call string CallId: string\x0D
Hook Disconnect 1 Protocol H323	xCommand Call string CallId: string\x0D
Hook Disconnect 1 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Disconnect 2 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Disconnect 2 Protocol H320	xCommand Call string CallId: string\x0D
Hook Disconnect 2 Protocol H323	xCommand Call string CallId: string\x0D

**Global Scriptor Module
Communication Sheet**

Hook Disconnect 2 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Disconnect 3 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Disconnect 3 Protocol H320	xCommand Call string CallId: string\x0D
Hook Disconnect 3 Protocol H323	xCommand Call string CallId: string\x0D
Hook Disconnect 3 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Disconnect 4 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Disconnect 4 Protocol H320	xCommand Call string CallId: string\x0D
Hook Disconnect 4 Protocol H323	xCommand Call string CallId: string\x0D
Hook Disconnect 4 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Disconnect 5 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Disconnect 5 Protocol H320	xCommand Call string CallId: string\x0D
Hook Disconnect 5 Protocol H323	xCommand Call string CallId: string\x0D
Hook Disconnect 5 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Hold 1 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Hold 1 Protocol H320	xCommand Call string CallId: string\x0D
Hook Hold 1 Protocol H323	xCommand Call string CallId: string\x0D
Hook Hold 1 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Hold 2 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Hold 2 Protocol H320	xCommand Call string CallId: string\x0D
Hook Hold 2 Protocol H323	xCommand Call string CallId: string\x0D
Hook Hold 2 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Hold 3 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Hold 3 Protocol H320	xCommand Call string CallId: string\x0D
Hook Hold 3 Protocol H323	xCommand Call string CallId: string\x0D
Hook Hold 3 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Hold 4 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Hold 4 Protocol H320	xCommand Call string CallId: string\x0D
Hook Hold 4 Protocol H323	xCommand Call string CallId: string\x0D
Hook Hold 4 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Hold 5 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Hold 5 Protocol H320	xCommand Call string CallId: string\x0D
Hook Hold 5 Protocol H323	xCommand Call string CallId: string\x0D
Hook Hold 5 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Join 1 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Join 1 Protocol H320	xCommand Call string CallId: string\x0D
Hook Join 1 Protocol H323	xCommand Call string CallId: string\x0D
Hook Join 1 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Join 2 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Join 2 Protocol H320	xCommand Call string CallId: string\x0D
Hook Join 2 Protocol H323	xCommand Call string CallId: string\x0D
Hook Join 2 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Join 3 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Join 3 Protocol H320	xCommand Call string CallId: string\x0D
Hook Join 3 Protocol H323	xCommand Call string CallId: string\x0D

**Global Scripter Module
Communication Sheet**

Hook Join 3 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Join 4 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Join 4 Protocol H320	xCommand Call string CallId: string\x0D
Hook Join 4 Protocol H323	xCommand Call string CallId: string\x0D
Hook Join 4 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Join 5 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Join 5 Protocol H320	xCommand Call string CallId: string\x0D
Hook Join 5 Protocol H323	xCommand Call string CallId: string\x0D
Hook Join 5 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Reject Protocol Auto	xCommand Call Reject\x0D
Hook Reject Protocol H320	xCommand Call Reject\x0D
Hook Reject Protocol H323	xCommand Call Reject\x0D
Hook Reject Protocol SIP	xCommand Call Reject\x0D
Hook Resume 1 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Resume 1 Protocol H320	xCommand Call string CallId: string\x0D
Hook Resume 1 Protocol H323	xCommand Call string CallId: string\x0D
Hook Resume 1 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Resume 2 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Resume 2 Protocol H320	xCommand Call string CallId: string\x0D
Hook Resume 2 Protocol H323	xCommand Call string CallId: string\x0D
Hook Resume 2 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Resume 3 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Resume 3 Protocol H320	xCommand Call string CallId: string\x0D
Hook Resume 3 Protocol H323	xCommand Call string CallId: string\x0D
Hook Resume 3 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Resume 4 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Resume 4 Protocol H320	xCommand Call string CallId: string\x0D
Hook Resume 4 Protocol H323	xCommand Call string CallId: string\x0D
Hook Resume 4 Protocol SIP	xCommand Call string CallId: string\x0D
Hook Resume 5 Protocol Auto	xCommand Call string CallId: string\x0D
Hook Resume 5 Protocol H320	xCommand Call string CallId: string\x0D
Hook Resume 5 Protocol H323	xCommand Call string CallId: string\x0D
Hook Resume 5 Protocol SIP	xCommand Call string CallId: string\x0D
Input 1	xCommand Video Input SetMainVideoSource ConnectorId: 1\x0D
Input 3	xCommand Video Input SetMainVideoSource ConnectorId: 3\x0D
Input 6	xCommand Video Input SetMainVideoSource ConnectorId: 6\x0D
Input Line Level 0 Input Line 1	xConfiguration Audio Input Line 1 Level:0\x0D
Input Line Level 0 Input Line 2	xConfiguration Audio Input Line 2 Level:0\x0D
Input Line Level 0 Input Line 3	xConfiguration Audio Input Line 3 Level:0\x0D
Input Line Level 0 Input Line 4	xConfiguration Audio Input Line 4 Level:0\x0D
Input Line Level 24 Input Line 1	xConfiguration Audio Input Line 1 Level:24\x0D
Input Line Level 24 Input Line 2	xConfiguration Audio Input Line 2 Level:24\x0D
Input Line Level 24 Input Line 3	xConfiguration Audio Input Line 3 Level:24\x0D

Global Scriptor Module Communication Sheet

Revision: 11/26/2019

Input Line Level 24 Input Line 4	xConfiguration Audio Input Line 4 Level:24\x0D
Input Mic Level 0 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:0\x0D
Input Mic Level 0 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:0\x0D
Input Mic Level 0 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:0\x0D
Input Mic Level 0 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:0\x0D
Input Mic Level 0 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:0\x0D
Input Mic Level 0 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:0\x0D
Input Mic Level 0 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:0\x0D
Input Mic Level 0 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:0\x0D
Input Mic Level 24 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:24\x0D
Input Mic Level 24 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:24\x0D
Input Mic Level 70 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:70\x0D
Input Mic Level 70 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:70\x0D
Input Mic Level 70 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:70\x0D
Input Mic Level 70 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:70\x0D
Input Mic Level 70 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:70\x0D
Input Mic Level 70 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:70\x0D
Input Mic Level 70 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:70\x0D
Input Mic Level 70 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:70\x0D
Input Mute Off Input Line 1	xConfiguration Audio Input Line 1 Mode:Off\x0D
Input Mute Off Input Line 2	xConfiguration Audio Input Line 2 Mode:Off\x0D
Input Mute Off Input Line 3	xConfiguration Audio Input Line 3 Mode:Off\x0D
Input Mute Off Input Line 4	xConfiguration Audio Input Line 4 Mode:Off\x0D
Input Mute Off Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:Off\x0D
Input Mute Off Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:Off\x0D
Input Mute Off Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:Off\x0D
Input Mute Off Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:Off\x0D
Input Mute Off Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:Off\x0D
Input Mute Off Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:Off\x0D
Input Mute Off Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:Off\x0D
Input Mute Off Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:Off\x0D

**Global Scriptor Module
Communication Sheet**

Input Mute On Input Line 1	xConfiguration Audio Input Line 1 Mode:On\x0D
Input Mute On Input Line 2	xConfiguration Audio Input Line 2 Mode:On\x0D
Input Mute On Input Line 3	xConfiguration Audio Input Line 3 Mode:On\x0D
Input Mute On Input Line 4	xConfiguration Audio Input Line 4 Mode:On\x0D
Input Mute On Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:On\x0D
Input Mute On Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:On\x0D
Input Mute On Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:On\x0D
Input Mute On Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:On\x0D
Input Mute On Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:On\x0D
Input Mute On Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:On\x0D
Input Mute On Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:On\x0D
Input Mute On Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:On\x0D
IPv4 Address Command None	xConfiguration Network 1 IPv4 Address: string\x0D
IPv4 Gateway Command None	xConfiguration Network 1 IPv4 Gateway: string\x0D
IPv4 SubnetMask Command None	xConfiguration Network 1 IPv4 SubnetMask: string\x0D
IR Emulation - Key Click	xCommand UserInterface OSD Key Click Key: -\x0D
IR Emulation - Key Press	xCommand UserInterface OSD Key Press Key: -\x0D
IR Emulation - Key Release	xCommand UserInterface OSD Key Release Key: - \x0D
IR Emulation + Key Click	xCommand UserInterface OSD Key Click Key: +\x0D
IR Emulation + Key Press	xCommand UserInterface OSD Key Press Key: +\x0D
IR Emulation + Key Release	xCommand UserInterface OSD Key Release Key: +\x0D
IR Emulation 0 Key Click	xCommand UserInterface OSD Key Click Key: 0\x0D
IR Emulation 0 Key Press	xCommand UserInterface OSD Key Press Key: 0\x0D
IR Emulation 0 Key Release	xCommand UserInterface OSD Key Release Key: 0\x0D
IR Emulation 9 Key Click	xCommand UserInterface OSD Key Click Key: 9\x0D
IR Emulation 9 Key Press	xCommand UserInterface OSD Key Press Key: 9\x0D
IR Emulation 9 Key Release	xCommand UserInterface OSD Key Release Key: 9\x0D
IR Emulation Aux Key Click	xCommand UserInterface OSD Key Click Key: SrcAux\x0D
IR Emulation Aux Key Press	xCommand UserInterface OSD Key Press Key: SrcAux\x0D
IR Emulation Aux Key Release	xCommand UserInterface OSD Key Release Key: SrcAux\x0D
IR Emulation C Key Click	xCommand UserInterface OSD Key Click Key: C\x0D
IR Emulation C Key Press	xCommand UserInterface OSD Key Press Key: C\x0D
IR Emulation C Key Release	xCommand UserInterface OSD Key Release Key: C\x0D
IR Emulation Call Key Click	xCommand UserInterface OSD Key Click Key: Call\x0D

Global Scriptor Module Communication Sheet

IR Emulation Call Key Press	xCommand UserInterface OSD Key Press Key: Call\x0D
IR Emulation Call Key Release	xCommand UserInterface OSD Key Release Key: Call\x0D
IR Emulation Camera Key Click	xCommand UserInterface OSD Key Click Key: SrcCamera\x0D
IR Emulation Camera Key Press	xCommand UserInterface OSD Key Press Key: SrcCamera\x0D
IR Emulation Camera Key Release	xCommand UserInterface OSD Key Release Key: SrcCamera\x0D
IR Emulation Disconnect Key Click	xCommand UserInterface OSD Key Click Key: Disconnect\x0D
IR Emulation Disconnect Key Press	xCommand UserInterface OSD Key Press Key: Disconnect\x0D
IR Emulation Disconnect Key Release	xCommand UserInterface OSD Key Release Key: Disconnect\x0D
IR Emulation Doc Cam Key Click	xCommand UserInterface OSD Key Click Key: SrcDocCam\x0D
IR Emulation Doc Cam Key Press	xCommand UserInterface OSD Key Press Key: SrcDocCam\x0D
IR Emulation Doc Cam Key Release	xCommand UserInterface OSD Key Release Key: SrcDocCam\x0D
IR Emulation Down Key Click	xCommand UserInterface OSD Key Click Key: Down\x0D
IR Emulation Down Key Press	xCommand UserInterface OSD Key Press Key: Down\x0D
IR Emulation Down Key Release	xCommand UserInterface OSD Key Release Key: Down\x0D
IR Emulation F1 Key Click	xCommand UserInterface OSD Key Click Key: F1\x0D
IR Emulation F1 Key Press	xCommand UserInterface OSD Key Press Key: F1\x0D
IR Emulation F1 Key Release	xCommand UserInterface OSD Key Release Key: F1\x0D
IR Emulation F2 Key Click	xCommand UserInterface OSD Key Click Key: F2\x0D
IR Emulation F2 Key Press	xCommand UserInterface OSD Key Press Key: F2\x0D
IR Emulation F2 Key Release	xCommand UserInterface OSD Key Release Key: F2\x0D
IR Emulation F3 Key Click	xCommand UserInterface OSD Key Click Key: F3\x0D
IR Emulation F3 Key Press	xCommand UserInterface OSD Key Press Key: F3\x0D
IR Emulation F3 Key Release	xCommand UserInterface OSD Key Release Key: F3\x0D
IR Emulation F4 Key Click	xCommand UserInterface OSD Key Click Key: F4\x0D
IR Emulation F4 Key Press	xCommand UserInterface OSD Key Press Key: F4\x0D
IR Emulation F4 Key Release	xCommand UserInterface OSD Key Release Key: F4\x0D
IR Emulation F5 Key Click	xCommand UserInterface OSD Key Click Key: F5\x0D
IR Emulation F5 Key Press	xCommand UserInterface OSD Key Press Key: F5\x0D
IR Emulation F5 Key Release	xCommand UserInterface OSD Key Release Key: F5\x0D

**Global Scriptor Module
Communication Sheet**

IR Emulation Grab Key Click	xCommand UserInterface OSD Key Click Key: Grab\x0D
IR Emulation Grab Key Press	xCommand UserInterface OSD Key Press Key: Grab\x0D
IR Emulation Grab Key Release	xCommand UserInterface OSD Key Release Key: Grab\x0D
IR Emulation Home Key Click	xCommand UserInterface OSD Key Click Key: Home\x0D
IR Emulation Home Key Press	xCommand UserInterface OSD Key Press Key: Home\x0D
IR Emulation Home Key Release	xCommand UserInterface OSD Key Release Key: Home\x0D
IR Emulation Layout Key Click	xCommand UserInterface OSD Key Click Key: Layout\x0D
IR Emulation Layout Key Press	xCommand UserInterface OSD Key Press Key: Layout\x0D
IR Emulation Layout Key Release	xCommand UserInterface OSD Key Release Key: Layout\x0D
IR Emulation Left Key Click	xCommand UserInterface OSD Key Click Key: Left\x0D
IR Emulation Left Key Press	xCommand UserInterface OSD Key Press Key: Left\x0D
IR Emulation Left Key Release	xCommand UserInterface OSD Key Release Key: Left\x0D
IR Emulation Mute Key Click	xCommand UserInterface OSD Key Click Key: Mute\x0D
IR Emulation Mute Key Press	xCommand UserInterface OSD Key Press Key: Mute\x0D
IR Emulation Mute Key Release	xCommand UserInterface OSD Key Release Key: Mute\x0D
IR Emulation Mute Mic Key Click	xCommand UserInterface OSD Key Click Key: Mute Mic\x0D
IR Emulation Mute Mic Key Press	xCommand UserInterface OSD Key Press Key: Mute Mic\x0D
IR Emulation Mute Mic Key Release	xCommand UserInterface OSD Key Release Key: Mute Mic\x0D
IR Emulation Ok Key Click	xCommand UserInterface OSD Key Click Key: Ok\x0D
IR Emulation Ok Key Press	xCommand UserInterface OSD Key Press Key: Ok\x0D
IR Emulation Ok Key Release	xCommand UserInterface OSD Key Release Key: Ok\x0D
IR Emulation Pc Key Click	xCommand UserInterface OSD Key Click Key: SrcPc\x0D
IR Emulation Pc Key Press	xCommand UserInterface OSD Key Press Key: SrcPc\x0D
IR Emulation Pc Key Release	xCommand UserInterface OSD Key Release Key: SrcPc\x0D
IR Emulation PhoneBook Key Click	xCommand UserInterface OSD Key Click Key: PhoneBook\x0D
IR Emulation PhoneBook Key Press	xCommand UserInterface OSD Key Press Key: PhoneBook\x0D
IR Emulation PhoneBook Key Release	xCommand UserInterface OSD Key Release Key: PhoneBook\x0D
IR Emulation Presentation Key Click	xCommand UserInterface OSD Key Click Key: Presentation\x0D
IR Emulation Presentation Key Press	xCommand UserInterface OSD Key Press Key: Presentation\x0D

**Global Scriptor Module
Communication Sheet**

Revision: 11/26/2019

IR Emulation Presentation Key Release	xCommand UserInterface OSD Key Release Key: Presentation\x0D
IR Emulation Right Key Click	xCommand UserInterface OSD Key Click Key: Right\x0D
IR Emulation Right Key Press	xCommand UserInterface OSD Key Press Key: Right\x0D
IR Emulation Right Key Release	xCommand UserInterface OSD Key Release Key: Right\x0D
IR Emulation Selfview Key Click	xCommand UserInterface OSD Key Click Key: Selfview\x0D
IR Emulation Selfview Key Press	xCommand UserInterface OSD Key Press Key: Selfview\x0D
IR Emulation Selfview Key Release	xCommand UserInterface OSD Key Release Key: Selfview\x0D
IR Emulation Square Key Click	xCommand UserInterface OSD Key Click Key: Square\x0D
IR Emulation Square Key Press	xCommand UserInterface OSD Key Press Key: Square\x0D
IR Emulation Square Key Release	xCommand UserInterface OSD Key Release Key: Square\x0D
IR Emulation Star Key Click	xCommand UserInterface OSD Key Click Key: Star\x0D
IR Emulation Star Key Press	xCommand UserInterface OSD Key Press Key: Star\x0D
IR Emulation Star Key Release	xCommand UserInterface OSD Key Release Key: Star\x0D
IR Emulation Up Key Click	xCommand UserInterface OSD Key Click Key: Up\x0D
IR Emulation Up Key Press	xCommand UserInterface OSD Key Press Key: Up\x0D
IR Emulation Up Key Release	xCommand UserInterface OSD Key Release Key: Up\x0D
IR Emulation Vcr Key Click	xCommand UserInterface OSD Key Click Key: SrcVcr\x0D
IR Emulation Vcr Key Press	xCommand UserInterface OSD Key Press Key: SrcVcr\x0D
IR Emulation Vcr Key Release	xCommand UserInterface OSD Key Release Key: SrcVcr\x0D
IR Emulation Volume Down Key Click	xCommand UserInterface OSD Key Click Key: VolumeDown\x0D
IR Emulation Volume Down Key Press	xCommand UserInterface OSD Key Press Key: VolumeDown\x0D
IR Emulation Volume Down Key Release	xCommand UserInterface OSD Key Release Key: VolumeDown\x0D
IR Emulation Volume Up Key Click	xCommand UserInterface OSD Key Click Key: VolumeUp\x0D
IR Emulation Volume Up Key Press	xCommand UserInterface OSD Key Press Key: VolumeUp\x0D
IR Emulation Volume Up Key Release	xCommand UserInterface OSD Key Release Key: VolumeUp\x0D
IR Emulation Zoom In Key Click	xCommand UserInterface OSD Key Click Key: ZoomIn\x0D
IR Emulation Zoom In Key Press	xCommand UserInterface OSD Key Press Key: ZoomIn\x0D
IR Emulation Zoom In Key Release	xCommand UserInterface OSD Key Release Key: ZoomIn\x0D
IR Emulation Zoom Out Key Click	xCommand UserInterface OSD Key Click Key: ZoomOut\x0D

Global Scriptor Module Communication Sheet

Revision: 11/26/2019

IR Emulation Zoom Out Key Press	xCommand UserInterface OSD Key Press Key: ZoomOut\x0D
IR Emulation Zoom Out Key Release	xCommand UserInterface OSD Key Release Key: ZoomOut\x0D
Layout Set Auto Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: auto\x0D
Layout Set Auto Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: auto\x0D
Layout Set Custom Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: custom\x0D
Layout Set Custom Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: custom\x0D
Layout Set Equal Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: equal\x0D
Layout Set Equal Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: equal\x0D
Layout Set Overlay Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: overlay\x0D
Layout Set Overlay Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: overlay\x0D
Layout Set Prominent Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: prominent\x0D
Layout Set Prominent Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: prominent\x0D
Layout Set Single Target Local	xCommand Video Layout LayoutFamily Set Target: Local LayoutFamily: single\x0D
Layout Set Single Target Remote	xCommand Video Layout LayoutFamily Set Target: Remote LayoutFamily: single\x0D
Macro Activate Name testString	xCommand Macros Macro Activate Name: "testString"\x0D
Macro Auto Start Off	xConfiguration Macros AutoStart: Off\x0D
Macro Auto Start On	xConfiguration Macros AutoStart: On\x0D
Macro Deactivate Name testString	xCommand Macros Macro Deactivate Name: "testString"\x0D
Macro Mode Off	xConfiguration Macros Mode: Off\x0D
Macro Mode On	xConfiguration Macros Mode: On\x0D
Microphones Mute Off	xCommand Audio Microphones UnMute\x0D
Microphones Mute On	xCommand Audio Microphones Mute\x0D
Output Level 0 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level:0\x0D
Output Level 0 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level:0\x0D
Output Level 0 Output Line 1	xConfiguration Audio Output Line 1 Level:0\x0D
Output Level 0 Output Line 2	xConfiguration Audio Output Line 2 Level:0\x0D
Output Level 0 Output Line 3	xConfiguration Audio Output Line 3 Level:0\x0D
Output Level 0 Output Line 4	xConfiguration Audio Output Line 4 Level:0\x0D
Output Level 0 Output Line 5	xConfiguration Audio Output Line 5 Level:0\x0D
Output Level 0 Output Line 6	xConfiguration Audio Output Line 6 Level:0\x0D
Output Level -24 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level:- 24\x0D
Output Level -24 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level:- 24\x0D
Output Level -24 Output Line 1	xConfiguration Audio Output Line 1 Level:- 24\x0D
Output Level -24 Output Line 2	xConfiguration Audio Output Line 2 Level:- 24\x0D

Global Scriptor Module Communication Sheet

Revision: 11/26/2019

Output Level -24 Output Line 3	xConfiguration Audio Output Line 3 Level:- 24\x0D
Output Level -24 Output Line 4	xConfiguration Audio Output Line 4 Level:- 24\x0D
Output Level -24 Output Line 5	xConfiguration Audio Output Line 5 Level:- 24\x0D
Output Level -24 Output Line 6	xConfiguration Audio Output Line 6 Level:- 24\x0D
People Count Out of Call Off	xConfiguration RoomAnalytics PeopleCountOutOfCall: Off\x0D
People Count Out of Call On	xConfiguration RoomAnalytics PeopleCountOutOfCall: On\x0D
People Presence Detector Off	xConfiguration RoomAnalytics PeoplePresenceDetector: Off\x0D
People Presence Detector On	xConfiguration RoomAnalytics PeoplePresenceDetector: On\x0D
Phonebook Update Next Search Phonebook Type Corporate	xCommand Phonebook Search PhonebookType:Corporate SearchField: Name ContactType: Contact Offset: 0 Limit: 50\x0D
Phonebook Update Next Search Phonebook Type Local	xCommand Phonebook Search PhonebookType:Local SearchField: Name ContactType: Contact Offset: 0 Limit: 50\x0D
Phonebook Update Previous Search Phonebook Type Corporate	xCommand Phonebook Search PhonebookType:Corporate SearchField: Name ContactType: Contact Offset: 0 Limit: 50\x0D
Phonebook Update Previous Search Phonebook Type Local	xCommand Phonebook Search PhonebookType:Local SearchField: Name ContactType: Contact Offset: 0 Limit: 50\x0D
Phonebook Update Refresh Phonebook Type Corporate	xCommand Phonebook Search PhonebookType:Corporate SearchField: Name ContactType: Contact Offset: 0 Limit: 50\x0D
Phonebook Update Refresh Phonebook Type Local	xCommand Phonebook Search PhonebookType:Local SearchField: Name ContactType: Contact Offset: 0 Limit: 50\x0D
Presentation ExternalSource Select Command None	xCommand UserInterface Presentation ExternalSource Select SourceIdentifier: "string"\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:4\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5\x0D

Global Scriptor Module Communication Sheet

Presentation Start Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:5\x0D
Presentation Start Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:5\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6\x0D

Global Scriptor Module Communication Sheet

Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2\x0D

Global Scriptor Module Communication Sheet

Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:3\x0D

Global Scripter Module Communication Sheet

Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:4\x0D
Presentation Start Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:4\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Revision: 11/26/2019

Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Revision: 11/26/2019

Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 4 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Revision: 11/26/2019

Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Connector Id 5 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D

Global Scriptor Module Communication Sheet

Revision: 11/26/2019

Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 1	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance 6	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance New	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 4 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Preset Recall 1	xCommand RoomPreset Activate PresetId:1\x0D
Preset Recall 15	xCommand RoomPreset Activate PresetId:15\x0D
Preset Save 1	xCommand RoomPreset Store PresetId:1 Type:All\x0D
Preset Save 15	xCommand RoomPreset Store PresetId:15 Type:All\x0D
Reboot None	xCommand SystemUnit Boot Action:Restart\x0D
Restart Macros None	xCommand Macros Runtime Restart\x0D
Self View Default Fullscreen Mode Current	xConfiguration Video Selfview Default FullscreenMode:Current\x0D
Self View Default Fullscreen Mode Off	xConfiguration Video Selfview Default FullscreenMode:Off\x0D
Self View Default Fullscreen Mode On	xConfiguration Video Selfview Default FullscreenMode:On\x0D
Self View Off	xCommand Video Selfview Set Mode:Off\x0D
Self View On	xCommand Video Selfview Set Mode:On\x0D

**Global Scriptor Module
Communication Sheet**

Self View Position Center Left	xCommand Video Selfview Set PIPPosition:CenterLeft\x0D
Self View Position Center Right	xCommand Video Selfview Set PIPPosition:CenterRight\x0D
Self View Position Lower Left	xCommand Video Selfview Set PIPPosition:LowerLeft\x0D
Self View Position Lower Right	xCommand Video Selfview Set PIPPosition:LowerRight\x0D
Self View Position Upper Center	xCommand Video Selfview Set PIPPosition:UpperCenter\x0D
Self View Position Upper Left	xCommand Video Selfview Set PIPPosition:UpperLeft\x0D
Self View Position Upper Right	xCommand Video Selfview Set PIPPosition:UpperRight\x0D
SIP URI Command None	xConfiguration SIP URI: string\x0D
Sleep Timer 1	xCommand Standby ResetTimer Delay:1\x0D
Sleep Timer 480	xCommand Standby ResetTimer Delay:480\x0D
SpeakerTrack Control Off	xCommand Cameras SpeakerTrack Deactivate\x0D
SpeakerTrack Control On	xCommand Cameras SpeakerTrack Activate\x0D
SpeakerTrack Mode Auto	xConfiguration Cameras SpeakerTrack Mode: Auto\x0D
SpeakerTrack Mode Off	xConfiguration Cameras SpeakerTrack Mode: Off\x0D
Standby Activate	xCommand Standby Activate\x0D
Standby Deactivate	xCommand Standby Deactivate\x0D
Standby Half Wake	xCommand Standby Halfwake\x0D
System Unit Name Command None	xConfiguration SystemUnit Name: string\x0D
Volume 0	xCommand Audio Volume Set Level:0\x0D
Volume 100	xCommand Audio Volume Set Level:100\x0D

Appendix B. Update Commands

Audio Output Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode\x0D
Audio Output Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode\x0D
Audio Output Output Line 1	xConfiguration Audio Output Line 1 Mode\x0D
Audio Output Output Line 2	xConfiguration Audio Output Line 2 Mode\x0D
Audio Output Output Line 3	xConfiguration Audio Output Line 3 Mode\x0D
Audio Output Output Line 4	xConfiguration Audio Output Line 4 Mode\x0D
Audio Output Output Line 5	xConfiguration Audio Output Line 5 Mode\x0D
Audio Output Output Line 6	xConfiguration Audio Output Line 6 Mode\x0D
Auto Answer	xConfiguration Conference AutoAnswer Mode\x0D
Call Setup Mode	xConfiguration H323 CallSetup Mode\x0D
Call StatusRP	xstatus call\x0D
Display Mode	xConfiguration Video Monitors\x0D
DNS Domain Name	xStatus Network 1 DNS Domain Name\x0D
DNS Server Address Server 1	xStatus Network 1 DNS Server 1 Address\x0D
DNS Server Address Server 5	xStatus Network 1 DNS Server 5 Address\x0D
Do Not Disturb	xStatus Conference 1 DoNotDisturb\x0D
Far End Control	xConfiguration Conference FarEndControl Mode\x0D
Firmware Version	xgetxml /status/standby\x0D
Gateway Address	xStatus Network 1 IPv4 Gateway\x0D
H323 Gatekeeper Address	xStatus H323 Gatekeeper Address\x0D
H323 Gatekeeper Status	xStatus H323 Gatekeeper Status\x0D
H323Alias ID Status	xConfiguration H323 H323Alias ID\x0D
Input	xStatus Video Input MainVideoSource\x0D
Input Line Level Input Line 1	xConfiguration Audio Input Line 1 Level\x0D
Input Line Level Input Line 2	xConfiguration Audio Input Line 2 Level\x0D
Input Line Level Input Line 3	xConfiguration Audio Input Line 3 Level\x0D
Input Line Level Input Line 4	xConfiguration Audio Input Line 4 Level\x0D
Input Mic Level Input Microphone 1	xConfiguration Audio Input Microphone 1 Level\x0D
Input Mic Level Input Microphone 2	xConfiguration Audio Input Microphone 2 Level\x0D
Input Mic Level Input Microphone 3	xConfiguration Audio Input Microphone 3 Level\x0D
Input Mic Level Input Microphone 4	xConfiguration Audio Input Microphone 4 Level\x0D
Input Mic Level Input Microphone 5	xConfiguration Audio Input Microphone 5 Level\x0D
Input Mic Level Input Microphone 6	xConfiguration Audio Input Microphone 6 Level\x0D
Input Mic Level Input Microphone 7	xConfiguration Audio Input Microphone 7 Level\x0D
Input Mic Level Input Microphone 8	xConfiguration Audio Input Microphone 8 Level\x0D
Input Mute Input Line 1	xConfiguration Audio Input Line 1 Mode\x0D
Input Mute Input Line 2	xConfiguration Audio Input Line 2 Mode\x0D
Input Mute Input Line 3	xConfiguration Audio Input Line 3 Mode\x0D

**Global Scriptor Module
Communication Sheet**

Input Mute Input Line 4	xConfiguration Audio Input Line 4 Mode\x0D
Input Mute Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode\x0D
Input Mute Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode\x0D
Input Mute Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode\x0D
Input Mute Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode\x0D
Input Mute Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode\x0D
Input Mute Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode\x0D
Input Mute Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode\x0D
Input Mute Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode\x0D
Input Signal Input 1	xStatus Video Input Connector 1 Connected\x0D
Input Signal Input 3	xStatus Video Input Connector 3 Connected\x0D
Input Signal Input 5	xStatus Video Input Connector 5 Connected\x0D
IP Address	xStatus Network 1 IPv4 Address\x0D
Layout Set Target Local	xStatus Video Layout LayoutFamily Local\x0D
Layout Set Target Remote	xStatus Video Layout LayoutFamily Remote\x0D
MAC Address	xStatus Network 1 Ethernet MacAddress\x0D
Macro Auto Start	xConfiguration Macros AutoStart\x0D
Macro Mode	xConfiguration Macros Mode\x0D
Microphones Mute	xStatus Audio Microphones Mute\x0D
Network Assignment	xConfiguration Network 1 IPv4 Assignment\x0D
Output Level Output HDMI 1	xConfiguration Audio Output HDMI 1 Level\x0D
Output Level Output HDMI 2	xConfiguration Audio Output HDMI 2 Level\x0D
Output Level Output Line 1	xConfiguration Audio Output Line 1 Level\x0D
Output Level Output Line 2	xConfiguration Audio Output Line 2 Level\x0D
Output Level Output Line 3	xConfiguration Audio Output Line 3 Level\x0D
Output Level Output Line 4	xConfiguration Audio Output Line 4 Level\x0D
Output Level Output Line 5	xConfiguration Audio Output Line 5 Level\x0D
Output Level Output Line 6	xConfiguration Audio Output Line 6 Level\x0D
People Count Current	xStatus RoomAnalytics PeopleCount Current\x0D
People Count Out of Call	xConfiguration RoomAnalytics PeopleCountOutOfCall\x0D
People Presence	xStatus RoomAnalytics PeoplePresence\x0D
People Presence Detector	xConfiguration RoomAnalytics PeoplePresenceDetector\x0D
Presentation Mode Status	xStatus Conference Presentation Mode\x0D
Presentation Sending Mode Status Instance 1	xStatus Conference Presentation LocalInstance 1 SendingMode\x0D
Presentation Sending Mode Status Instance 6	xStatus Conference Presentation LocalInstance 6 SendingMode\x0D
Presentation Source Status Instance 1	xStatus Conference Presentation LocalInstance 1 Source\x0D
Presentation Source Status Instance 6	xStatus Conference Presentation LocalInstance 6 Source\x0D

Global Scripter Module Communication Sheet

Self View	xStatus Video Selfview Mode\x0D
Self View Default Fullscreen Mode	xConfiguration Video Selfview Default FullscreenMode\x0D
Self View Position	xStatus Video Selfview PIPPosition\x0D
SIP Registration Status	xStatus SIP Registration 1 Status\x0D
SIP URI Status	xConfiguration SIP URI\x0D
SpeakerTrack Control	xStatus Cameras SpeakerTrack Status\x0D
SpeakerTrack Mode	xConfiguration Cameras SpeakerTrack Mode\x0D
Standby	xStatus Standby State\x0D
Subnet Mask	xStatus Network 1 IPv4 SubnetMask\x0D
System Unit Name Status	xConfiguration SystemUnit Name\x0D
Volume	xStatus Audio Volume\x0D