

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: Cisco
Firmware Version: TC7.3
Model(s): SX20 TC7.3.X, SX80 TC7.3.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.01.0000-b010	2.1.0

Version History

Module Version	Date	Notes
1_6_4_0	12/12/2018	Updated module to Rev B1.
1_6_2_0	5/14/2018	Added SSH support. Removed TCP support. Changed Call Status to Asynchronous. Updated Presentation commands. Updated NumberOfPhonebookSearch, NumberOfPhonebookFolderSearch and NumberOfCallHistory to allow for integer value and string numbers values.
1_5_2_0	11/6/2017	Updated module to Rev. B. Added H323 Alias E164 Status. Updated Call Status to synchronous polling, Updated Call History to synchronous polling.

**Global Scripter Module
Communication Sheet**

1_3_0_2	7/12/2017	Fixed variables naming NumberOfFoldersPerSearch and NumberofContactsPerSearch. Updated Document notes. Removed unused command Phonebook Search. Fixed SIPRegistrationStatus.
1_3_0_1	6/27/2017	Updated module standards. Updated Call status to sync format. Fixed Call Status Idle status.
1_3_0_0	3/29/2017	Added H323 Alias ID Status. Removed qualifier from Phonebook Folder ID Navigation. Updated Module.
1_2_6_0	1/13/2016	Fixed Call Status Type Pattern. Added Audio Volume Mute.
1_2_4_0	12/22/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- NumberofPhonebookSearch variable must be set accordingly. Default value is '1'. Number of Phonebook Search ranges from '1' – '10'.
Example: `InterfaceName.NumberofPhonebookSearch = '1'`
- NumberofPhonebookFolderSearch variable must be set accordingly. Default value is '1'. Number of Phonebook Folder Search ranges from '1' – '10'.
Example: `InterfaceName.NumberofPhonebookFolderSearch = '1'`
- CallHistoryOccurrenceType variable must be set accordingly. Default value is 'Time'.
CallHistoryOccurrenceType options are 'Time' and 'Frequency'.
Example: `InterfaceName.CallHistoryOccurrenceType = 'Time'`
- NumberofCallHistory variable must be set accordingly. Default value is '5'. NumberofCallHistory Range is '1' – '20'.
Example: `InterfaceName.NumberofCallHistory = '5'`

Phonebook commands:

- **PhonebookUpdate**
This is used to trigger the Phonebook search.
- **PhonebookSearchResult**
This is where the search results will be saved to when phonebook is searched. The number of results are set by a module parameter Number of Phonebook Search, this is initialized to 5 results by default. Simply call SetText with the returned result to display the search result on a button or label object.
- **PhonebookNavigation**
This command is used for navigating through the search results. The navigation commands scroll through the results when there are more results than NumberOfPhonebookSearch variable.
- **PhonebookSearchSet**
When the number selected in this command is triggered, it will dial the number with the xCommand Dial Number command.
- **PhonebookFolderIDUpdate**
This is used to trigger the Folder search within the Phonebook.
- **PhonebookFolderIDNavigation**
This command is used for navigating through the search results. The navigation commands scroll through the results when there are more results than NumberOfPhonebookFolderSearch variable.
- **PhonebookFolderIDSearchSet**
When the Folder Name selected in this command is triggered, it will store the Folder Name in a class variable, FolderIDNumber, and that variable can be accessed and used in the 'FolderID' qualifier in the PhonebookUpdate command.
Example: `interfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': '', 'FolderID':interfaceName.FolderIDNumber , 'Phonebook Type': 'Local'})`
- **PhonebookFolderIDSearchResult**
This is where the search results are saved when PhonebookFolderIDUpdate is called. The number of results displayed is set to 5 by default. Simply call SetText with the returned results to display the results on a button or label object.

Call History commands:

- **CallHistoryRefresh**
This is used to trigger the search for recent Call History based on the CallHistoryOccuranceType class variable.
- **CallHistory**
This is where the search results are saved when CallHistoryRefresh is called. The number of results displayed is set to 5 by default. Simply call SetText to display the results on a button or label object.
- **CallHistoryNavigation**
This command is used for navigating through the CallHistory results.
- **CallHistorySelect**
When the CallHistorySelect is triggered, it will dial the call back number associated to call history status.

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SX20 TC7.3.X')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SX20 TC7.3.X')
```

SSH

#Password required

```
InterfaceName=ModuleName.SSHClass('192.168.254.254', 22, Credentials=('Username','Password'),  
Model='Touch 10 Custom')
```

#No Password required

```
InterfaceName=ModuleName.SSHClass('192.168.254.254', 22, Credentials=('Username',''), Model='Touch 10  
Custom')
```

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AssignLocalOutput ¹	Value None		
Qualifier Key 'Layout ID'	Qualifier Value 1 to 2147483647 in steps of 1		
Qualifier Key 'Output ID'	Qualifier Value 0 to 65534 in steps of 1		
# AssignLocalOutput example InterfaceName.Set('AssignLocalOutput', None, {'Layout ID': 2147483647, 'Output ID': 65534})			
Command AudioOutput ¹	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'HDMI 1' 'Line 2' 'Line 5'	Qualifier Value 'HDMI 2' 'Line 3' 'Line 6'	Qualifier Value 'Line 1' 'Line 4'
# AudioOutput example InterfaceName.Set('AudioOutput', 'On', {'Output': 'HDMI 1'})			
Command AudioVolumeMute	Value 'On'	Value 'Off'	
# AudioVolumeMute example InterfaceName.Set('AudioVolumeMute', 'On')			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command CallHistoryNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')			
Command CallHistoryRefresh	Value None		
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)			

Command	Value		
CallHistorySelect	None		
Qualifier Key	Qualifier Value		
'Button'	'1' – '20'		
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', None, {'Button': '1'})			
Command	Value		Value
CallSetupMode	'Gatekeeper'	'Direct'	
# CallSetupMode example InterfaceName.Set('CallSetupMode', 'Gatekeeper')			
Command	Value		Value
CameraFocusSX20	'Near'	'Far'	'Stop'
	'Auto'		
# CameraFocusSX20 example InterfaceName.Set('CameraFocusSX20', 'Near')			
Command	Value		Value
CameraFocus	'Near'	'Far'	'Stop'
	'Auto'		
Qualifier Key	Qualifier Value		
'Camera'	'1' – '7'		
# CameraFocus example InterfaceName.Set('CameraFocus', 'Near', {'Camera': '1'})			
Command	Value		Value
CameraPanSX20	'Left'	'Right'	'Stop'
Qualifier Key	Qualifier Value		
'Speed'	1 to 15 in steps of 1		
# CameraPanSX20 example InterfaceName.Set('CameraPanSX20', 'Left', {'Speed': 15})			
Command	Value		Value
CameraPan	'Left'	'Right'	'Stop'
Qualifier Key	Qualifier Value		
'Camera'	'1' – '7'		
Qualifier Key	Qualifier Value		
'Speed'	1 to 15 in steps of 1		
# CameraPan example InterfaceName.Set('CameraPan', 'Left', {'Camera': '1', 'Speed': 15})			
Command	Value		
CameraPresetPositionRecallSX20	'1' – '15'		
# CameraPresetPositionRecallSX20 example InterfaceName.Set('CameraPresetPositionRecallSX20', '1')			

Command CameraPresetPositionRecall	Value '1' – '15'		
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
# CameraPresetPositionRecall example InterfaceName.Set('CameraPresetPositionRecall', '1', {'Camera': '1'})			
Command CameraPresetRecall	Value '1' – '35'		
# CameraPresetRecall example InterfaceName.Set('CameraPresetRecall', '1')			
Command CameraPresetSaveSX20	Value '1' – '35'		
# CameraPresetSaveSX20 example InterfaceName.Set('CameraPresetSaveSX20', '1')			
Command CameraPresetSave	Value '1' – '35'		
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
# CameraPresetSave example InterfaceName.Set('CameraPresetSave', '1', {'Camera': '1'})			
Command CameraSerialNumberRefresh³	Value None		
# CameraSerialNumberRefresh example InterfaceName.Set('CameraSerialNumberRefresh', None)			
Command CameraTiltSX20	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraTiltSX20 example InterfaceName.Set('CameraTiltSX20', 'Up', {'Speed': 15})			
Command CameraTilt	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraTilt example InterfaceName.Set('CameraTilt', 'Up', {'Camera': '1', 'Speed': 15})			
Command CameraZoomSX20	Value 'In'	Value 'Out'	Value 'Stop'

Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoomSX20 example InterfaceName.Set('CameraZoomSX20', 'In', {'Speed': 15})			
Command CameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# CameraZoom example InterfaceName.Set('CameraZoom', 'In', {'Camera': '1', 'Speed': 15})			
Command CloseMenu	Value None		
# CloseMenu example InterfaceName.Set('CloseMenu', None)			
Command DefaultCallRate	Value 64 to 6000 in steps of 1		
# DefaultCallRate example InterfaceName.Set('DefaultCallRate', 6000)			
Command DisplayMode	Value 'Dual' 'Triple' ¹	Value 'Single' 'Auto'	Value 'Dual Presentation Only'
# DisplayMode example InterfaceName.Set('DisplayMode', 'Dual')			
Command DNSDomainNameCommand	Value 'String'		
# DNSDomainNameCommand example InterfaceName.Set('DNSDomainNameCommand', 'String')			
Command DNSServerAddressCommand	Value 'String'		
# DNSServerAddressCommand example InterfaceName.Set('DNSServerAddressCommand', 'String')			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Active')			
Command DTMF	Value '0' '3'	Value '1' '4'	Value '2' '5'

	'6'	'7'	'8'
	'9'	'*'	'#'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command FarEndCameraPanTilt	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
# FarEndCameraPanTilt example InterfaceName.Set('FarEndCameraPanTilt', 'Up')			
Command FarEndCameraPresetRecall	Value '1' – '15'		
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')			
Command FarEndCameraPresetSave	Value '1' – '15'		
# FarEndCameraPresetSave example InterfaceName.Set('FarEndCameraPresetSave', '1')			
Command FarEndCameraSource	Value '0' – '15'		
# FarEndCameraSource example InterfaceName.Set('FarEndCameraSource', '0')			
Command FarEndCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
# FarEndCameraZoom example InterfaceName.Set('FarEndCameraZoom', 'In')			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Set('FarEndControl', 'On')			
Command H323GatekeeperAddressCommand	Value 'String'		
# H323GatekeeperAddressCommand example InterfaceName.Set('H323GatekeeperAddressCommand', 'String')			
Command H323AliasE164Command	Value 'String'		
# H323AliasE164Command example InterfaceName.Set('H323AliasE164Command', 'String')			

Command H323AliasIDCommand	Value 'String'		
# H323AliasIDCommand example InterfaceName.Set('H323AliasIDCommand', 'String')			
Command H323ProfileAuthenticationLoginNameCommand	Value 'String'		
# H323ProfileAuthenticationLoginNameCommand example InterfaceName.Set('H323ProfileAuthenticationLoginNameCommand', 'String')			
Command H323ProfileAuthenticationPasswordCommand	Value 'String'		
# H323ProfileAuthenticationPasswordCommand example InterfaceName.Set('H323ProfileAuthenticationPasswordCommand', 'String')			
Command Hook	Value	Value	Value
	'Dial'	'Disconnect All'	'Join 1'
	'Accept'	'Reject'	'Hold 1'
	'Resume 1'	'Disconnect 1'	'Hold 2'
	'Hold 3'	'Resume 2'	'Resume 3'
	'Disconnect 2'	'Disconnect 3'	'Join 2'
	'Join 3'	'Hold All'	'Join 4'
	'Join 5'	'Hold 4'	'Hold 5'
	'Disconnect 4'	'Disconnect 5'	'Resume 4'
'Resume 5'			
Qualifier Key 'Number'	Qualifier Value 'String'		
Qualifier Key 'Protocol'	Qualifier Value 'H320'	Qualifier Value 'H323'	Qualifier Value 'SIP'
	'Auto'		
# Hook example InterfaceName.Set('Hook', 'Dial', {'Number': '123','Protocol': 'H320'}) InterfaceName.Set('Hook', 'Disconnect All', {'Number': '', 'Protocol': 'Auto'})			
Command InputSX20	Value '1' – '2'		
# InputSX20 example InterfaceName.Set('InputSX20', '1')			
Command InputSX80	Value '1' – '5'		
# InputSX80 example InterfaceName.Set('InputSX80', '1')			

Command InputLineLevel ¹	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Line 1' 'Line 4'	Qualifier Value 'Line 2'	Qualifier Value 'Line 3'
# InputLineLevel example InterfaceName.Set('InputLineLevel', 24, {'Input': 'Line 1'})			
Command InputMicLevel	Value 0 to 70 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ² 'Microphone 4' 'Microphone 7'	Qualifier Value 'Microphone 2' ² 'Microphone 5' 'Microphone 8'	Qualifier Value 'Microphone 3' 'Microphone 6'
# InputMicLevel example InterfaceName.Set('InputMicLevel', 70, {'Input': 'Microphone 1'})			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ² 'Microphone 4' 'Microphone 7' 'Line 2'	Qualifier Value 'Microphone 2' ² 'Microphone 5' 'Microphone 8' 'Line 3'	Qualifier Value 'Microphone 3' 'Microphone 6' 'Line 1' 'Line 4'
# InputMute example InterfaceName.Set('InputMute', 'On', {'Input': 'Microphone 1'})			
Command IPv4AddressCommand	Value 'String'		
# IPv4AddressCommand example InterfaceName.Set('IPv4AddressCommand', 'String')			
Command IPv4GatewayCommand	Value 'String'		
# IPv4GatewayCommand example InterfaceName.Set('IPv4GatewayCommand', 'String')			
Command IPv4SubnetMaskCommand	Value 'String'		
# IPv4SubnetMaskCommand example InterfaceName.Set('IPv4SubnetMaskCommand', 'String')			
Command IREmulation	Value '0' '3'	Value '1' '4'	Value '2' '5'

	'6'	'7'	'8'
	'9'	'Delete'	'Call'
	'Disconnect'	'F1'	'F2'
	'F3'	'F4'	'F5'
	'Grab'	'Home'	'Layout'
	'Mute'	'Mute Mic'	'Ok'
	'Phonebook'	'Presentation'	'Selfview'
	'Aux'	'Camera'	'Doc Camera'
	'PC'	'VCR'	'Volume Up'
	'Volume Down'	'Zoom In'	'Zoom Out'
	'*'	'#'	'Up'
	'Down'	'Left'	'Right'
# IREmulation example InterfaceName.Set('IREmulation', '0')			
Command Layout	Value 'Add' 'Reset'	Value 'Remove'	Value 'Remove All'
Qualifier Key 'Layout ID'	Qualifier Value 1 to 65535 in steps of 1		
# Layout example InterfaceName.Set('Layout', 'Add', {'Layout ID': 65535})			
Command LayoutSet	Value 'Auto' 'Fullscreen' 'Presentation Small Speaker' 'Speaker Full'	Value 'Custom' 'Overlay' 'Prominent'	Value 'Equal' 'Presentation Large Speaker' 'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command MaxReceiveCallRate	Value 64 to 6000 in steps of 1		
# MaxReceiveCallRate example InterfaceName.Set('MaxReceiveCallRate', 6000)			

Command	Value		
MaxTotalReceiveCallRate	64 to 10000 in steps of 1		
# MaxTotalReceiveCallRate example InterfaceName.Set('MaxTotalReceiveCallRate', 10000)			
Command	Value		
MaxTotalTransmitCallRate	64 to 10000 in steps of 1		
# MaxTotalTransmitCallRate example InterfaceName.Set('MaxTotalTransmitCallRate', 10000)			
Command	Value		
MaxTransmitCallRate	64 to 6000 in steps of 1		
# MaxTransmitCallRate example InterfaceName.Set('MaxTransmitCallRate', 6000)			
Command	Value	Value	
MicrophonesMute	'On'	'Off'	
# MicrophonesMute example InterfaceName.Set('MicrophonesMute', 'On')			
Command	Value		
OutputLevel ¹	-24 to 0 in steps of 1		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Output'	'HDMI 1'	'HDMI 2'	'Line 1'
	'Line 2'	'Line 3'	'Line 4'
	'Line 5'	'Line 6'	
# OutputLevel example InterfaceName.Set('OutputLevel', 0, {'Output': 'HDMI 1'})			
Command	Value	Value	Value
PhonebookFolderIDNavigation	'Up'	'Down'	'Page Up'
	'Page Down'		
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up')			
Command	Value		
PhonebookFolderIDSearchSet	1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command	Value		
PhonebookFolderIDUpdate	None		
Qualifier Key	Qualifier Value	Qualifier Value	
'Phonebook Type'	'Corporate'	'Local'	
# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Corporate'})			

Global Scripter Module Communication Sheet

Command PhonebookNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
Qualifier Key 'Phonebook Tag'	Qualifier Value 'No Tag'	Qualifier Value 'Favorite'	Qualifier Value 'Untagged'
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Local', 'Phonebook Tag': 'No Tag'}) InterfaceName.Set('PhonebookNavigation', 'Up', {'Contact': 'John Doe', 'FolderID': '', 'Phonebook Type': 'Local', 'Phonebook Tag': 'No Tag'})			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
Qualifier Key 'Phonebook Tag'	Qualifier Value 'No Tag'	Qualifier Value 'Favorite'	Qualifier Value 'Untagged'
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Local', 'Phonebook Tag': 'No Tag'}) InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': 'John Doe', 'FolderID': '', 'Phonebook Type': 'Local', 'Phonebook Tag': 'No Tag'})			
Command PictureInPicture	Value 'On'	Value 'Off'	
# PictureInPicture example InterfaceName.Set('PictureInPicture', 'On')			

Global Scripter Module Communication Sheet

Command Presentation	Value 'Start'	Value 'Stop'	
Qualifier Key ⁴ 'Video Input Source'	Qualifier Value 'Not Specified' Qualifier Value 'Presentation Source 3' Qualifier Value 'Connector Id 2' Qualifier Value 'Connector Id 5'	Qualifier Value 'Presentation Source 1' Qualifier Value 'Presentation Source 4' Qualifier Value 'Connector Id 3'	Qualifier Value 'Presentation Source 2' Qualifier Value 'Connector Id 1' Qualifier Value 'Connector Id 4'
Qualifier Key ⁴ 'Sending Mode'	Qualifier Value 'Not Specified'	Qualifier Value 'Local Only'	Qualifier Value 'Local and Remote'
Qualifier Key ⁴ 'Instance'	Qualifier Value 'Not Specified' Qualifier Value '2' Qualifier Value '5'	Qualifier Value 'New' Qualifier Value '3' Qualifier Value '6'	Qualifier Value '1' Qualifier Value '4'
<pre># Presentation example with no qualifier specified InterfaceName.Set('Presentation', 'Start') # Presentation example with Video Input Mode qualifier specified InterfaceName.Set('Presentation', 'Start', {'Video Input Mode': 'Connector Id 1', 'Sending Mode': 'Not Specified', 'Instance': 'Not Specified'}) # Presentation example with qualifiers specified InterfaceName.Set('Presentation', 'Start', {'Video Input Mode': 'Connector Id 1', 'Sending Mode': 'Local Only', 'Instance': 'New'})</pre>			
Command PresetRecall	Value '1' – '15'		
<pre># PresetRecall example InterfaceName.Set('PresetRecall', '1')</pre>			
Command PresetSave	Value '1' – '15'		
<pre># PresetSave example InterfaceName.Set('PresetSave', '1')</pre>			
Command Reboot	Value None		
<pre># Reboot example InterfaceName.Set('Reboot', None)</pre>			

Global Scripter Module Communication Sheet

Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')			
Command SelfViewDefaultFullscreen Mode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Set('SelfViewDefaultFullscreenMode', 'On')			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')			
Command SleepTimer	Value 1 – 480		
# SleepTimer example InterfaceName.Set('SleepTimer', 480)			
Command SNCameraFocus	Value 'Near' 'Auto'	Value 'Far'	Value 'Stop'
Qualifier Key 'Serial Number'	Qualifier Value 'String'		
# SNCameraFocus example InterfaceName.Set('SNCameraFocus', 'Near', {'Serial Number': 'String'})			
Command SNCameraPan	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Serial Number'	Qualifier Value 'String'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# SNCameraPan example InterfaceName.Set('SNCameraPan', 'Left', {'Serial Number': 'String', 'Speed': 15})			
Command SNCameraPresetSave	Value '1' – '35'		
Qualifier Key 'Serial Number'	Qualifier Value 'String'		
# SNCameraPresetSave example InterfaceName.Set('SNCameraPresetSave', '1', {'Serial Number': 'String'})			

Command SNCameraTilt	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Serial Number'	Qualifier Value 'String'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# SNCameraTilt example InterfaceName.Set('SNCameraTilt', 'Up', {'Serial Number': 'String', 'Speed': 15})			
Command SNCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Serial Number'	Qualifier Value 'String'		
Qualifier Key 'Speed'	Qualifier Value 1 to 15 in steps of 1		
# SNCameraZoom example InterfaceName.Set('SNCameraZoom', 'In', {'Serial Number': 'String', 'Speed': 15})			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
# SpeakerTrackControl example InterfaceName.Set('SpeakerTrackControl', 'On')			
Command SpeakerTrackMode	Value 'Auto'	Value 'Off'	
# SpeakerTrackMode example InterfaceName.Set('SpeakerTrackMode', 'Auto')			
Command Standby	Value 'Activate'	Value 'Deactivate'	
# Standby example InterfaceName.Set('Standby', 'Activate')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

¹ Supported by SX80² Supported by SX20³ Stores configured cameras Serial Number internally, requires to be sent at least once before using any SNCamera commands⁴ Optional Parameters

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, CallHistory, CallStatus, CallStatusType, DisplayName, PhonebookFolderIDSearchResult, PhonebookSearchResult and RemoteNumber do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioOutput ¹	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'HDMI 1' 'Line 2' 'Line 5'	Qualifier Value 'HDMI 2' 'Line 3' 'Line 6'	Qualifier Value 'Line 1' 'Line 4'
# AudioOutput examples InterfaceName.Update('AudioOutput', {'Output': 'HDMI 1'}) Value = InterfaceName.ReadStatus('AudioOutput', {'Output': 'HDMI 1'}) InterfaceName.SubscribeStatus('AudioOutput', None, FeedbackHandler)			
Command AudioVolumeMute	Value 'On'	Value 'Off'	
# AudioVolumeMute examples InterfaceName.Update('AudioVolumeMute') Value = InterfaceName.ReadStatus('AudioVolumeMute') InterfaceName.SubscribeStatus('AudioVolumeMute', None, FeedbackHandler)			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer examples InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)			
Command CallHistory	Value 'String'		
Qualifier Key 'Button'	Qualifier Value '1' – '20'		

Global Scripter Module Communication Sheet

Qualifier Key 'Detail Type'	Qualifier Value 'Display Name' 'Occurrence Count'	Qualifier Value 'Callback Number' 'Occurrence Type'	Qualifier Value 'Last Occurrence Time'
# CallHistory examples Value = InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)			
Command CallStatus	Value 'Dialing' 'Ringing' 'On Hold' 'Remote Preserved'	Value 'Connecting' 'Idle' 'Early Media'	Value 'Connected' 'Disconnecting' 'Preserved'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatus examples Value = InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)			
Command CallStatusType	Value 'Video' 'Forward All Call'	Value 'Audio' 'Unknown'	Value 'Audio Can Escalate'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatusType examples Value = InterfaceName.ReadStatus('CallStatusType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command DefaultCallRate	Value 64 to 6000 in steps of 1		
# DefaultCallRate examples InterfaceName.Update('DefaultCallRate') Value = InterfaceName.ReadStatus('DefaultCallRate') InterfaceName.SubscribeStatus('DefaultCallRate', None, FeedbackHandler)			
Command DisplayMode	Value 'Dual' 'Triple'	Value 'Single' 'Auto'	Value 'Dual Presentation Only'
# DisplayMode examples InterfaceName.Update('DisplayMode') Value = InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command DisplayName	Value 'String'	
Qualifier Key 'Call'	Qualifier Value '1' – '5'	
# DisplayName examples Value = InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)		
Command DNSDomainName	Value 'String'	
# DNSDomainName examples InterfaceName.Update('DNSDomainName') Value = InterfaceName.ReadStatus('DNSDomainName') InterfaceName.SubscribeStatus('DNSDomainName', None, FeedbackHandler)		
Command DNSServerAddress	Value 'String'	
Qualifier Key 'Server'	Qualifier Value '1' – '3'	
# DNSServerAddress examples InterfaceName.Update('DNSServerAddress', {'Server': '1'}) Value = InterfaceName.ReadStatus('DNSServerAddress', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddress', None, FeedbackHandler)		
Command DoNotDisturb	Value 'Active'	Value 'Inactive'
# DoNotDisturb examples InterfaceName.Update('DoNotDisturb') Value = InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)		
Command FarEndControl	Value 'On'	Value 'Off'
# FarEndControl examples InterfaceName.Update('FarEndControl') Value = InterfaceName.ReadStatus('FarEndControl') InterfaceName.SubscribeStatus('FarEndControl', None, FeedbackHandler)		
Command FirmwareVersion	Value 'String'	
# FirmwareVersion examples InterfaceName.Update('FirmwareVersion') Value = InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)		
Command GatewayAddress	Value 'String'	
# GatewayAddress examples InterfaceName.Update('GatewayAddress') Value = InterfaceName.ReadStatus('GatewayAddress') InterfaceName.SubscribeStatus('GatewayAddress', None, FeedbackHandler)		

Command	Value		
H323AliasE164Status	'String'		
# H323AliasE164Status examples InterfaceName.Update('H323AliasE164Status') Value = InterfaceName.ReadStatus('H323AliasE164Status') InterfaceName.SubscribeStatus('H323AliasE164Status', None, FeedbackHandler)			
Command	Value		
H323GatekeeperAddress	'String'		
# H323GatekeeperAddress examples InterfaceName.Update('H323GatekeeperAddress') Value = InterfaceName.ReadStatus('H323GatekeeperAddress') InterfaceName.SubscribeStatus('H323GatekeeperAddress', None, FeedbackHandler)			
Command	Value	Value	Value
H323GatekeeperStatus	'Required'	'Discovering'	'Discovered'
	'Authenticating'	'Authenticated'	'Registering'
	'Registered'	'Inactive'	'Rejected'
# H323GatekeeperStatus examples InterfaceName.Update('H323GatekeeperStatus') Value = InterfaceName.ReadStatus('H323GatekeeperStatus') InterfaceName.SubscribeStatus('H323GatekeeperStatus', None, FeedbackHandler)			
Command	Value		
H323AliasIDStatus	'String'		
# H323AliasIDStatus examples InterfaceName.Update('H323AliasIDStatus') Value = InterfaceName.ReadStatus('H323AliasIDStatus') InterfaceName.SubscribeStatus('H323AliasIDStatus', None, FeedbackHandler)			
Command	Value		
InputSX20	'1' – '2'		
# InputSX20 examples InterfaceName.Update('InputSX20') Value = InterfaceName.ReadStatus('InputSX20') InterfaceName.SubscribeStatus('InputSX20', None, FeedbackHandler)			
Command	Value		
InputSX80	'1' – '5'		
# InputSX80 examples InterfaceName.Update('InputSX80') Value = InterfaceName.ReadStatus('InputSX80') InterfaceName.SubscribeStatus('InputSX80', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command InputLineLevel	Value 0 to 24 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Line 1' 'Line 4'	Qualifier Value 'Line 2'	Qualifier Value 'Line 3'
<pre># InputLineLevel examples InterfaceName.Update('InputLineLevel', {'Input': 'Line 1'}) Value = InterfaceName.ReadStatus('InputLineLevel', {'Input': 'Line 1'}) InterfaceName.SubscribeStatus('InputLineLevel', None, FeedbackHandler)</pre>			
Command InputMicLevel	Value 0 to 70 in steps of 1		
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ² 'Microphone 4' 'Microphone 7'	Qualifier Value 'Microphone 2' ² 'Microphone 5' 'Microphone 8'	Qualifier Value 'Microphone 3' 'Microphone 6'
<pre># InputMicLevel examples InterfaceName.Update('InputMicLevel', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMicLevel', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMicLevel', None, FeedbackHandler)</pre>			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ² 'Microphone 4' 'Microphone 7' 'Line 2'	Qualifier Value 'Microphone 2' ² 'Microphone 5' 'Microphone 8' 'Line 3'	Qualifier Value 'Microphone 3' 'Microphone 6' 'Line 1' 'Line 4'
<pre># InputMute examples InterfaceName.Update('InputMute', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMute', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMute', None, FeedbackHandler)</pre>			
Command IPAddress	Value 'String'		
<pre># IPAddress examples InterfaceName.Update('IPAddress') Value = InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)</pre>			
Command MACAddress	Value 'String'		
<pre># MACAddress examples InterfaceName.Update('MACAddress') Value = InterfaceName.ReadStatus('MACAddress') InterfaceName.SubscribeStatus('MACAddress', None, FeedbackHandler)</pre>			

Command	Value		
MaxReceiveCallRate	64 to 6000 in steps of 1		
# MaxReceiveCallRate examples InterfaceName.Update('MaxReceiveCallRate') Value = InterfaceName.ReadStatus('MaxReceiveCallRate') InterfaceName.SubscribeStatus('MaxReceiveCallRate', None, FeedbackHandler)			
Command	Value		
MaxTotalReceiveCallRate	64 to 10000 in steps of 1		
# MaxTotalReceiveCallRate examples InterfaceName.Update('MaxTotalReceiveCallRate') Value = InterfaceName.ReadStatus('MaxTotalReceiveCallRate') InterfaceName.SubscribeStatus('MaxTotalReceiveCallRate', None, FeedbackHandler)			
Command	Value		
MaxTotalTransmitCallRate	64 to 10000 in steps of 1		
# MaxTotalTransmitCallRate examples InterfaceName.Update('MaxTotalTransmitCallRate') Value = InterfaceName.ReadStatus('MaxTotalTransmitCallRate') InterfaceName.SubscribeStatus('MaxTotalTransmitCallRate', None, FeedbackHandler)			
Command	Value		
MaxTransmitCallRate	64 to 6000 in steps of 1		
# MaxTransmitCallRate examples InterfaceName.Update('MaxTransmitCallRate') Value = InterfaceName.ReadStatus('MaxTransmitCallRate') InterfaceName.SubscribeStatus('MaxTransmitCallRate', None, FeedbackHandler)			
Command	Value	Value	
MicrophonesMute	'On'	'Off'	
# MicrophonesMute examples InterfaceName.Update('MicrophonesMute') Value = InterfaceName.ReadStatus('MicrophonesMute') InterfaceName.SubscribeStatus('MicrophonesMute', None, FeedbackHandler)			
Command	Value	Value	
NetworkAssignment	'Static'	'DHCP'	
# NetworkAssignment examples InterfaceName.Update('NetworkAssignment') Value = InterfaceName.ReadStatus('NetworkAssignment') InterfaceName.SubscribeStatus('NetworkAssignment', None, FeedbackHandler)			
Command	Value		
OutputLevel	-24 to 0 in steps of 1		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Output'	'HDMI 1'	'HDMI 2'	'Line 1'
	'Line 2'	'Line 3'	'Line 4'
	'Line 5'	'Line 6'	
# OutputLevel examples InterfaceName.Update('OutputLevel', {'Output': 'HDMI 1'}) Value = InterfaceName.ReadStatus('OutputLevel', {'Output': 'HDMI 1'})			

InterfaceName.SubscribeStatus('OutputLevel', None, FeedbackHandler)			
Command PhonebookFolderIDSearch Result	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# PhonebookFolderIDSearchResult examples Value = InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)			
Command PhonebookSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# PhonebookSearchResult examples Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)			
Command PresentationModeStatus	Value 'Off'	Value 'Sending' ¹	Value 'Receiving' ¹
	Value 'On' ²		
# PresentationModeStatus examples Value = InterfaceName.ReadStatus('PresentationModeStatus') InterfaceName.SubscribeStatus('PresentationModeStatus', None, FeedbackHandler)			
Command PresentationSendingModeStatus	Value 'Local and Remote'	Value 'Local Only'	Value 'Off'
# PresentationSendingModeStatus examples Value = InterfaceName.ReadStatus('PresentationSendingModeStatus') InterfaceName.SubscribeStatus('PresentationSendingModeStatus', None, FeedbackHandler)			
Command PresentationSourceStatus	Qualifier Value '1' – '2' ²	Qualifier Value '1' – '4' ¹	Value 'Off'
# PresentationSourceStatus examples Value = InterfaceName.ReadStatus('PresentationSourceStatus') InterfaceName.SubscribeStatus('PresentationSourceStatus', None, FeedbackHandler)			
Command RemoteNumber	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# RemoteNumber examples Value = InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'}) InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)			
Command SelfView	Value 'On'	Value 'Off'	

<pre># SelfView examples InterfaceName.Update('SelfView') Value = InterfaceName.ReadStatus('SelfView') InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)</pre>			
Command SelfViewDefaultFullscreen Mode	Value 'On'	Value 'Off'	Value 'Current'
<pre># SelfViewDefaultFullscreenMode examples InterfaceName.Update('SelfViewDefaultFullscreenMode') Value = InterfaceName.ReadStatus('SelfViewDefaultFullscreenMode') InterfaceName.SubscribeStatus('SelfViewDefaultFullscreenMode', None, FeedbackHandler)</pre>			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
<pre># SelfViewPosition examples InterfaceName.Update('SelfViewPosition') Value = InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)</pre>			
Command SIPRegistrationStatus	Value 'Deregistering' 'Registered'	Value 'Failed' 'Registering'	Value 'Inactive'
<pre># SIPRegistrationStatus examples InterfaceName.Update('SIPRegistrationStatus') Value = InterfaceName.ReadStatus('SIPRegistrationStatus') InterfaceName.SubscribeStatus('SIPRegistrationStatus', None, FeedbackHandler)</pre>			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
<pre># SpeakerTrackControl examples InterfaceName.Update('SpeakerTrackControl') Value = InterfaceName.ReadStatus('SpeakerTrackControl') InterfaceName.SubscribeStatus('SpeakerTrackControl', None, FeedbackHandler)</pre>			
Command Standby	Value 'Activate'	Value 'Deactivate'	
<pre># Standby examples InterfaceName.Update('Standby') Value = InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)</pre>			
Command SubnetMask	Value 'String'		
<pre># SubnetMask examples InterfaceName.Update('SubnetMask') Value = InterfaceName.ReadStatus('SubnetMask') InterfaceName.SubscribeStatus('SubnetMask', None, FeedbackHandler)</pre>			

Command	Value
Volume	0 to 100 in steps of 1
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>	

¹Supported by SX80²Supported by SX20

Cable and Adapter Requirements

- SX20: Captive Screw to USB Type-A RS-232 Serial Cable adapter
- SX80: Captive Screw to Male DB9 RS-232 Serial Cable


Notes for the Device

Serial communication

Port Type:	RS-232	Parity:	None
Baud Rate:	115200	Stop Bits:	One
Data Bits:	8	Flow Control:	None


Pin Assignments Diagram

SX20:

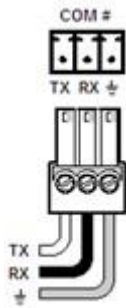


Contact manufacturer for pinout diagram

SX80:

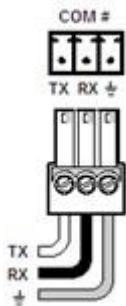

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

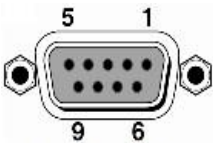

RS232 DB9, Female
Video Conference

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	SSH
Default Port:	22
Logon Credentials Supported:	Yes
Default Username:	admin
Default Password:	TANDBERG
Multi-Connection	Yes
Capabilities:	
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

SSH mode must be set to 'On' by an admin to have open communication with the module.

Appendix A. Set Commands

Assign Local Output None Output ID 0 Layout ID 1	xCommand Video Layout AssignLocalOutput OutputId:0 LayoutId:1\x0D
Assign Local Output None Output ID 0 Layout ID 2147483647	xCommand Video Layout AssignLocalOutput OutputId:0 LayoutId:2147483647\x0D
Assign Local Output None Output ID 65534 Layout ID 1	xCommand Video Layout AssignLocalOutput OutputId:65534 LayoutId:1\x0D
Assign Local Output None Output ID 65534 Layout ID 2147483647	xCommand Video Layout AssignLocalOutput OutputId:65534 LayoutId:2147483647\x0D
Audio Output Off Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:Off\x0D
Audio Output Off Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:Off\x0D
Audio Output Off Output Line 1	xConfiguration Audio Output Line 1 Mode:Off\x0D
Audio Output Off Output Line 2	xConfiguration Audio Output Line 2 Mode:Off\x0D
Audio Output Off Output Line 3	xConfiguration Audio Output Line 3 Mode:Off\x0D
Audio Output Off Output Line 4	xConfiguration Audio Output Line 4 Mode:Off\x0D
Audio Output Off Output Line 5	xConfiguration Audio Output Line 5 Mode:Off\x0D
Audio Output Off Output Line 6	xConfiguration Audio Output Line 6 Mode:Off\x0D
Audio Output On Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:On\x0D
Audio Output On Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:On\x0D
Audio Output On Output Line 1	xConfiguration Audio Output Line 1 Mode:On\x0D
Audio Output On Output Line 2	xConfiguration Audio Output Line 2 Mode:On\x0D
Audio Output On Output Line 3	xConfiguration Audio Output Line 3 Mode:On\x0D
Audio Output On Output Line 4	xConfiguration Audio Output Line 4 Mode:On\x0D
Audio Output On Output Line 5	xConfiguration Audio Output Line 5 Mode:On\x0D
Audio Output On Output Line 6	xConfiguration Audio Output Line 6 Mode:On\x0D
Audio Volume Mute Off	xCommand Audio Volume UnMute\x0D
Audio Volume Mute On	xCommand Audio Volume Mute\x0D
Auto Answer Off	xConfiguration Conference 1 AutoAnswer Mode:Off\x0D
Auto Answer On	xConfiguration Conference 1 AutoAnswer Mode:On\x0D
Call Setup Mode Direct	xConfiguration H323 Profile 1 CallSetup Mode:Direct\x0D
Call Setup Mode Gatekeeper	xConfiguration H323 Profile 1 CallSetup Mode:Gatekeeper\x0D
Camera Focus Far	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 1	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 7	xCommand Camera Ramp CameraId:7 Focus:Far\x0D
Camera Focus Near	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 1	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 7	xCommand Camera Ramp CameraId:7 Focus:Near\x0D
Camera Focus Stop	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 1	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D

Global Scripter Module Communication Sheet

Camera Focus Stop Camera 7	xCommand Camera Ramp CameraId:7 Focus:Stop\x0D
Camera Pan Left Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 1 Camera 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 1 Camera 7	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Left Speed 15 Camera 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Left Speed 15 Camera 7	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:15\x0D
Camera Pan Right Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Speed 1 Camera 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Speed 1 Camera 7	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:1\x0D
Camera Pan Right Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Right Speed 15 Camera 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Right Speed 15 Camera 7	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:15\x0D
Camera Pan Stop Speed 1	xCommand Camera Ramp CameraId:1 Pan:Stop PanSpeed:1\x0D
Camera Pan Stop Speed 1 Camera 1	xCommand Camera Ramp CameraId:1 Pan:Stop PanSpeed:1\x0D
Camera Pan Stop Speed 1 Camera 7	xCommand Camera Ramp CameraId:7 Pan:Stop PanSpeed:1\x0D
Camera Pan Stop Speed 15	xCommand Camera Ramp CameraId:1 Pan:Stop PanSpeed:15\x0D
Camera Pan Stop Speed 15 Camera 1	xCommand Camera Ramp CameraId:1 Pan:Stop PanSpeed:15\x0D
Camera Pan Stop Speed 15 Camera 7	xCommand Camera Ramp CameraId:7 Pan:Stop PanSpeed:15\x0D
Camera Preset Position Recall 1	xCommand Camera PositionActivateFromPreset CameraId:1 PresetId:1\x0D
Camera Preset Position Recall 1 Camera 1	xCommand Camera PositionActivateFromPreset CameraId:1 PresetId:1\x0D
Camera Preset Position Recall 1 Camera 7	xCommand Camera PositionActivateFromPreset CameraId:7 PresetId:1\x0D
Camera Preset Position Recall 15 Camera 1	xCommand Camera PositionActivateFromPreset CameraId:1 PresetId:15\x0D
Camera Preset Position Recall 15 Camera 7	xCommand Camera PositionActivateFromPreset CameraId:7 PresetId:15\x0D
Camera Preset Recall 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset Recall 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Save 1	xCommand Camera Preset Store PresetId: 1 CameraId: 1\x0D
Camera Preset Save 1 Camera 1	xCommand Camera Preset Store PresetId: 1 CameraId: 1\x0D

Global Scripter Module Communication Sheet

Camera Preset Save 1 Camera 7	xCommand Camera Preset Store PresetId: 1 CameraId: 7\x0D
Camera Preset Save 35	xCommand Camera Preset Store PresetId: 35 CameraId: 1\x0D
Camera Preset Save 35 Camera 1	xCommand Camera Preset Store PresetId: 35 CameraId: 1\x0D
Camera Preset Save 35 Camera 7	xCommand Camera Preset Store PresetId: 35 CameraId: 7\x0D
Camera Serial Number Refresh None	xstatus camera SerialNumber\x0D
Camera Tilt Down Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 1 Camera 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 1 Camera 7	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Speed 15 Camera 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Speed 15 Camera 7	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Stop Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Stop TiltSpeed:1\x0D
Camera Tilt Stop Speed 1 Camera 1	xCommand Camera Ramp CameraId:1 Tilt:Stop TiltSpeed:1\x0D
Camera Tilt Stop Speed 1 Camera 7	xCommand Camera Ramp CameraId:7 Tilt:Stop TiltSpeed:1\x0D
Camera Tilt Stop Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Stop TiltSpeed:15\x0D
Camera Tilt Stop Speed 15 Camera 1	xCommand Camera Ramp CameraId:1 Tilt:Stop TiltSpeed:15\x0D
Camera Tilt Stop Speed 15 Camera 7	xCommand Camera Ramp CameraId:7 Tilt:Stop TiltSpeed:15\x0D
Camera Tilt Up Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 1 Camera 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 1 Camera 7	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Speed 15 Camera 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Speed 15 Camera 7	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:15\x0D
Camera Zoom In Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 1 Camera 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 1 Camera 7	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D

Global Scripter Module Communication Sheet

Camera Zoom In Speed 15 Camera 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Speed 15 Camera 7	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:15\x0D
Camera Zoom Out Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 1 Camera 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 1 Camera 7	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Speed 15 Camera 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Speed 15 Camera 7	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Stop Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Stop ZoomSpeed:1\x0D
Camera Zoom Stop Speed 1 Camera 1	xCommand Camera Ramp CameraId:1 Zoom:Stop ZoomSpeed:1\x0D
Camera Zoom Stop Speed 1 Camera 7	xCommand Camera Ramp CameraId:7 Zoom:Stop ZoomSpeed:1\x0D
Camera Zoom Stop Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Stop ZoomSpeed:15\x0D
Camera Zoom Stop Speed 15 Camera 1	xCommand Camera Ramp CameraId:1 Zoom:Stop ZoomSpeed:15\x0D
Camera Zoom Stop Speed 15 Camera 7	xCommand Camera Ramp CameraId:7 Zoom:Stop ZoomSpeed:15\x0D
Close Menu None	xCommand UserInterface OSD Close Element: Menu\x0D
Default Call Rate 6000	xConfiguration Conference 1 DefaultCall Rate: 6000\x0D
Default Call Rate 64	xConfiguration Conference 1 DefaultCall Rate: 64\x0D
Display Mode Auto	xConfiguration Video Monitors: Auto\x0D
Display Mode Dual	xConfiguration Video Monitors: Dual\x0D
Display Mode Dual Presentation Only	xConfiguration Video Monitors: DualPresentationOnly\x0D
Display Mode Single	xConfiguration Video Monitors: Single\x0D
Display Mode Triple	xConfiguration Video Monitors: Triple\x0D
Do Not Disturb Active	xCommand Conference DoNotDisturb Activate\x0D
Do Not Disturb Inactive	xCommand Conference DoNotDisturb Deactivate\x0D
DTMF #	xCommand DTMFSend DTMFString:#\x0D
DTMF *	xCommand DTMFSend DTMFString:*\x0D
DTMF 0	xCommand DTMFSend DTMFString:0\x0D
DTMF 9	xCommand DTMFSend DTMFString:9\x0D
Far End Camera Pan/Tilt Down	xCommand FarEndControl Camera Move Value:Down\x0D
Far End Camera Pan/Tilt Left	xCommand FarEndControl Camera Move Value:Left\x0D
Far End Camera Pan/Tilt Right	xCommand FarEndControl Camera Move Value:Right\x0D
Far End Camera Pan/Tilt Up	xCommand FarEndControl Camera Move Value:Up\x0D

Global Scripter Module Communication Sheet

Far End Camera Preset Recall 1	xCommand FarEndControl Preset Activate PresetId:1\x0D
Far End Camera Preset Recall 15	xCommand FarEndControl Preset Activate PresetId:15\x0D
Far End Camera Preset Save 1	xCommand FarEndControl Preset Store PresetId:1\x0D
Far End Camera Preset Save 15	xCommand FarEndControl Preset Store PresetId:15\x0D
Far End Camera Source 0	xCommand FarEndControl Source Select SourceId:0\x0D
Far End Camera Source 15	xCommand FarEndControl Source Select SourceId:15\x0D
Far End Camera Zoom In	xCommand FarEndControl Camera Move Value:ZoomIn\x0D
Far End Camera Zoom Out	xCommand FarEndControl Camera Move Value:ZoomOut\x0D
Far End Control Off	xConfiguration Conference 1 FarEndControl Mode: Off\x0D
Far End Control On	xConfiguration Conference 1 FarEndControl Mode: On\x0D
Hook Accept Protocol Auto	xCommand Call Accept\x0D
Hook Accept Protocol H320	xCommand Call Accept\x0D
Hook Accept Protocol H323	xCommand Call Accept\x0D
Hook Accept Protocol SIP	xCommand Call Accept\x0D
Hook Disconnect All Protocol Auto	xCommand Call DisconnectAll\x0D
Hook Disconnect All Protocol H320	xCommand Call DisconnectAll\x0D
Hook Disconnect All Protocol H323	xCommand Call DisconnectAll\x0D
Hook Disconnect All Protocol SIP	xCommand Call DisconnectAll\x0D
Hook Hold All Protocol Auto	xCommand Call HoldAll\x0D
Hook Hold All Protocol H320	xCommand Call HoldAll\x0D
Hook Hold All Protocol H323	xCommand Call HoldAll\x0D
Hook Hold All Protocol SIP	xCommand Call HoldAll\x0D
Hook Reject Protocol Auto	xCommand Call Reject\x0D
Hook Reject Protocol H320	xCommand Call Reject\x0D
Hook Reject Protocol H323	xCommand Call Reject\x0D
Hook Reject Protocol SIP	xCommand Call Reject\x0D
Input 1	xCommand Video Input SetMainVideoSource ConnectorId: 1\x0D
Input 2	xConfiguration Video MainVideoSource: 2\x0D
Input 5	xCommand Video Input SetMainVideoSource ConnectorId: 5\x0D
Input Line Level 0 Input Line 1	xConfiguration Audio Input Line 1 Level:0\x0D
Input Line Level 0 Input Line 2	xConfiguration Audio Input Line 2 Level:0\x0D
Input Line Level 0 Input Line 3	xConfiguration Audio Input Line 3 Level:0\x0D
Input Line Level 0 Input Line 4	xConfiguration Audio Input Line 4 Level:0\x0D
Input Line Level 24 Input Line 1	xConfiguration Audio Input Line 1 Level:24\x0D
Input Line Level 24 Input Line 2	xConfiguration Audio Input Line 2 Level:24\x0D
Input Line Level 24 Input Line 3	xConfiguration Audio Input Line 3 Level:24\x0D

Global Scripter Module Communication Sheet

Input Line Level 24 Input Line 4	xConfiguration Audio Input Line 4 Level:24\x0D
Input Mic Level 0 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:0\x0D
Input Mic Level 0 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:0\x0D
Input Mic Level 0 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:0\x0D
Input Mic Level 0 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:0\x0D
Input Mic Level 0 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:0\x0D
Input Mic Level 0 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:0\x0D
Input Mic Level 0 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:0\x0D
Input Mic Level 0 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:0\x0D
Input Mic Level 24 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:24\x0D
Input Mic Level 24 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:24\x0D
Input Mic Level 70 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:70\x0D
Input Mic Level 70 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:70\x0D
Input Mic Level 70 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:70\x0D
Input Mic Level 70 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:70\x0D
Input Mic Level 70 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:70\x0D
Input Mic Level 70 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:70\x0D
Input Mic Level 70 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:70\x0D
Input Mic Level 70 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:70\x0D
Input Mute Off Input Line 1	xConfiguration Audio Input Line 1 Mode:Off\x0D
Input Mute Off Input Line 2	xConfiguration Audio Input Line 2 Mode:Off\x0D
Input Mute Off Input Line 3	xConfiguration Audio Input Line 3 Mode:Off\x0D
Input Mute Off Input Line 4	xConfiguration Audio Input Line 4 Mode:Off\x0D
Input Mute Off Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:Off\x0D
Input Mute Off Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:Off\x0D
Input Mute Off Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:Off\x0D
Input Mute Off Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:Off\x0D
Input Mute Off Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:Off\x0D
Input Mute Off Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:Off\x0D

Global Scriptor Module Communication Sheet

Input Mute Off Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:Off\x0D
Input Mute Off Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:Off\x0D
Input Mute On Input Line 1	xConfiguration Audio Input Line 1 Mode:On\x0D
Input Mute On Input Line 2	xConfiguration Audio Input Line 2 Mode:On\x0D
Input Mute On Input Line 3	xConfiguration Audio Input Line 3 Mode:On\x0D
Input Mute On Input Line 4	xConfiguration Audio Input Line 4 Mode:On\x0D
Input Mute On Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:On\x0D
Input Mute On Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:On\x0D
Input Mute On Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:On\x0D
Input Mute On Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:On\x0D
Input Mute On Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:On\x0D
Input Mute On Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:On\x0D
Input Mute On Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:On\x0D
Input Mute On Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:On\x0D
IR Emulation #	xCommand Key Click Key:Square\x0D
IR Emulation *	xCommand Key Click Key:Star\x0D
IR Emulation 0	xCommand Key Click Key:0\x0D
IR Emulation 9	xCommand Key Click Key:9\x0D
IR Emulation Aux	xCommand Key Click Key:SrcAux\x0D
IR Emulation Call	xCommand Key Click Key:Call\x0D
IR Emulation Camera	xCommand Key Click Key:SrcCamera\x0D
IR Emulation Delete	xCommand Key Click Key:C\x0D
IR Emulation Disconnect	xCommand Key Click Key:Disconnect\x0D
IR Emulation Doc Camera	xCommand Key Click Key:SrcDocCam\x0D
IR Emulation Down	xCommand Key Click Key:Down\x0D
IR Emulation F1	xCommand Key Click Key:F1\x0D
IR Emulation F2	xCommand Key Click Key:F2\x0D
IR Emulation F3	xCommand Key Click Key:F3\x0D
IR Emulation F4	xCommand Key Click Key:F4\x0D
IR Emulation F5	xCommand Key Click Key:F5\x0D
IR Emulation Grab	xCommand Key Click Key:Grab\x0D
IR Emulation Home	xCommand Key Click Key:Home\x0D
IR Emulation Layout	xCommand Key Click Key:Layout\x0D
IR Emulation Left	xCommand Key Click Key:Left\x0D
IR Emulation Mute	xCommand Key Click Key:Mute\x0D
IR Emulation Mute Mic	xCommand Key Click Key:MuteMic\x0D

Global Scripter Module Communication Sheet

IR Emulation Ok	xCommand Key Click Key:Ok\x0D
IR Emulation PC	xCommand Key Click Key:SrcPc\x0D
IR Emulation Phonebook	xCommand Key Click Key:Phonebook\x0D
IR Emulation Presentation	xCommand Key Click Key:Presentation\x0D
IR Emulation Right	xCommand Key Click Key:Right\x0D
IR Emulation Selfview	xCommand Key Click Key:Selfview\x0D
IR Emulation Up	xCommand Key Click Key:Up\x0D
IR Emulation VCR	xCommand Key Click Key:SrcVcr\x0D
IR Emulation Volume Down	xCommand Key Click Key:VolumeDown\x0D
IR Emulation Volume Up	xCommand Key Click Key:VolumeUp\x0D
IR Emulation Zoom In	xCommand Key Click Key:ZoomIn\x0D
IR Emulation Zoom Out	xCommand Key Click Key:ZoomOut\x0D
Layout Add Layout ID 1	xCommand Video Layout Add LayoutId: 1\x0D
Layout Add Layout ID 65535	xCommand Video Layout Add LayoutId: 65535\x0D
Layout Remove All Layout ID 1	xCommand Video Layout RemoveAll\x0D
Layout Remove All Layout ID 65535	xCommand Video Layout RemoveAll\x0D
Layout Remove Layout ID 1	xCommand Video Layout Remove LayoutId: 1\x0D
Layout Remove Layout ID 65535	xCommand Video Layout Remove LayoutId: 65535\x0D
Layout Reset Layout ID 1	xCommand Video Layout Reset\x0D
Layout Reset Layout ID 65535	xCommand Video Layout Reset\x0D
Layout Set Auto Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Auto\x0D
Layout Set Auto Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Auto\x0D
Layout Set Custom Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Custom\x0D
Layout Set Custom Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Custom\x0D
Layout Set Equal Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Equal\x0D
Layout Set Equal Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Equal\x0D
Layout Set Fullscreen Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Fullscreen\x0D
Layout Set Fullscreen Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Fullscreen\x0D
Layout Set Overlay Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Overlay\x0D
Layout Set Overlay Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Overlay\x0D
Layout Set Presentation Large Speaker Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: PresentationLargeSpeaker\x0D
Layout Set Presentation Large Speaker Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: PresentationLargeSpeaker\x0D
Layout Set Presentation Small Speaker Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: PresentationSmallSpeaker\x0D

Global Scriptor Module Communication Sheet

Layout Set Presentation Small Speaker Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: PresentationSmallSpeaker\x0D
Layout Set Prominent Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Prominent\x0D
Layout Set Prominent Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Prominent\x0D
Layout Set Single Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Single\x0D
Layout Set Single Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Single\x0D
Layout Set Speaker Full Target Local	xCommand Video PictureLayoutSet Target: Local LayoutFamily: Speaker_Full\x0D
Layout Set Speaker Full Target Remote	xCommand Video PictureLayoutSet Target: Remote LayoutFamily: Speaker_Full\x0D
Max Receive Call Rate 6000	xConfiguration Conference 1 MaxReceiveCallRate: 6000\x0D
Max Receive Call Rate 64	xConfiguration Conference 1 MaxReceiveCallRate: 64\x0D
Max Total Receive Call Rate 10000	xConfiguration Conference 1 MaxTotalReceiveCallRate: 10000\x0D
Max Total Receive Call Rate 64	xConfiguration Conference 1 MaxTotalReceiveCallRate: 64\x0D
Max Total Transmit Call Rate 10000	xConfiguration Conference 1 MaxTotalTransmitCallRate: 10000\x0D
Max Total Transmit Call Rate 64	xConfiguration Conference 1 MaxTotalTransmitCallRate: 64\x0D
Max Transmit Call Rate 6000	xConfiguration Conference 1 MaxTransmitCallRate: 6000\x0D
Max Transmit Call Rate 64	xConfiguration Conference 1 MaxTransmitCallRate: 64\x0D
Microphones Mute Off	xCommand Audio Microphones UnMute\x0D
Microphones Mute On	xCommand Audio Microphones Mute\x0D
Output Level 0 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level:0\x0D
Output Level 0 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level:0\x0D
Output Level 0 Output Line 1	xConfiguration Audio Output Line 1 Level:0\x0D
Output Level 0 Output Line 2	xConfiguration Audio Output Line 2 Level:0\x0D
Output Level 0 Output Line 3	xConfiguration Audio Output Line 3 Level:0\x0D
Output Level 0 Output Line 4	xConfiguration Audio Output Line 4 Level:0\x0D
Output Level 0 Output Line 5	xConfiguration Audio Output Line 5 Level:0\x0D
Output Level 0 Output Line 6	xConfiguration Audio Output Line 6 Level:0\x0D
Output Level -24 Output HDMI 1	xConfiguration Audio Output HDMI 1 Level:-24\x0D
Output Level -24 Output HDMI 2	xConfiguration Audio Output HDMI 2 Level:-24\x0D
Output Level -24 Output Line 1	xConfiguration Audio Output Line 1 Level:-24\x0D
Output Level -24 Output Line 2	xConfiguration Audio Output Line 2 Level:-24\x0D
Output Level -24 Output Line 3	xConfiguration Audio Output Line 3 Level:-24\x0D
Output Level -24 Output Line 4	xConfiguration Audio Output Line 4 Level:-24\x0D
Output Level -24 Output Line 5	xConfiguration Audio Output Line 5 Level:-24\x0D
Output Level -24 Output Line 6	xConfiguration Audio Output Line 6 Level:-24\x0D

Global Scripter Module Communication Sheet

Picture In Picture Off	xCommand CamCtrlPip Mode:Off\x0D
Picture In Picture On	xCommand CamCtrlPip Mode:On\x0D
Presentation	xCommand Presentation Start PresentationSource:1\x0D
Presentation	xCommand Presentation Start PresentationSource:2\x0D
Presentation	xCommand Presentation Start PresentationSource:5\x0D
Presentation Sending Mode Local and Remote	xCommand Presentation Start SendingMode:LocalRemote\x0D
Presentation Sending Mode Local Only	xCommand Presentation Start SendingMode:LocalOnly\x0D
Presentation Stop	xCommand Presentation Stop\x0D
Presentation Start Sending Mode Local Only Instance 1 Video Input Source Connector Id 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Stop Sending Mode Local Only Instance 1 Video Input Source Connector Id 1	xCommand Presentation Stop Instance:1 ConnectorId:1\x0D
Presentation Start Sending Mode Local Only Instance 6 Video Input Source Connector Id 1	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Stop Sending Mode Local Only Instance 6 Video Input Source Connector Id 1	xCommand Presentation Stop Instance:6 ConnectorId:1\x0D
Presentation Start Sending Mode Local Only Instance New Video Input Source Connector Id 1	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Stop Sending Mode Local Only Instance New Video Input Source Connector Id 1	xCommand Presentation Stop Instance:New ConnectorId:1\x0D
Presentation Start Sending Mode Local Only Instance Not Specified Video Input Source Connector Id 1	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Stop Sending Mode Local Only Instance Not Specified Video Input Source Connector Id 1	xCommand Presentation Stop ConnectorId:1\x0D
Presentation Start Sending Mode Local and Remote Instance 1 Video Input Source Connector Id 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Stop Sending Mode Local and Remote Instance 1 Video Input Source Connector Id 1	xCommand Presentation Stop Instance:1 ConnectorId:1\x0D
Presentation Start Sending Mode Local and Remote Instance 6 Video Input Source Connector Id 1	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Stop Sending Mode Local and Remote Instance 6 Video Input Source Connector Id 1	xCommand Presentation Stop Instance:6 ConnectorId:1\x0D
Presentation Start Sending Mode Local and Remote Instance New Video Input Source Connector Id 1	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Stop Sending Mode Local and Remote Instance New Video Input Source Connector Id 1	xCommand Presentation Stop Instance:New ConnectorId:1\x0D
Presentation Start Sending Mode Local and Remote Instance Not Specified Video Input Source Connector Id 1	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1\x0D

Global Scriptor Module Communication Sheet

Presentation Stop Sending Mode Local and Remote Instance Not Specified Video Input Source Connector Id 1	xCommand Presentation Stop ConnectorId:1\x0D
Presentation Start Sending Mode Not Specified Instance 1 Video Input Source Connector Id 1	xCommand Presentation Start Instance:1 ConnectorId:1\x0D
Presentation Stop Sending Mode Not Specified Instance 1 Video Input Source Connector Id 1	xCommand Presentation Stop Instance:1 ConnectorId:1\x0D
Presentation Start Sending Mode Not Specified Instance 6 Video Input Source Connector Id 1	xCommand Presentation Start Instance:6 ConnectorId:1\x0D
Presentation Stop Sending Mode Not Specified Instance 6 Video Input Source Connector Id 1	xCommand Presentation Stop Instance:6 ConnectorId:1\x0D
Presentation Start Sending Mode Not Specified Instance New Video Input Source Connector Id 1	xCommand Presentation Start Instance:New ConnectorId:1\x0D
Presentation Stop Sending Mode Not Specified Instance New Video Input Source Connector Id 1	xCommand Presentation Stop Instance:New ConnectorId:1\x0D
Presentation Start Sending Mode Not Specified Instance Not Specified Video Input Source Connector Id 1	xCommand Presentation Start ConnectorId:1\x0D
Presentation Stop Sending Mode Not Specified Instance Not Specified Video Input Source Connector Id 1	xCommand Presentation Stop ConnectorId:1\x0D
Presentation Start Sending Mode Local Only Instance 1 Video Input Source Connector Id 2	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Stop Sending Mode Local Only Instance 1 Video Input Source Connector Id 2	xCommand Presentation Stop Instance:1 ConnectorId:2\x0D
Presentation Start Sending Mode Local Only Instance 6 Video Input Source Connector Id 2	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Stop Sending Mode Local Only Instance 6 Video Input Source Connector Id 2	xCommand Presentation Stop Instance:6 ConnectorId:2\x0D
Presentation Start Sending Mode Local Only Instance New Video Input Source Connector Id 2	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Stop Sending Mode Local Only Instance New Video Input Source Connector Id 2	xCommand Presentation Stop Instance:New ConnectorId:2\x0D
Presentation Start Sending Mode Local Only Instance Not Specified Video Input Source Connector Id 2	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Stop Sending Mode Local Only Instance Not Specified Video Input Source Connector Id 2	xCommand Presentation Stop ConnectorId:2\x0D
Presentation Start Sending Mode Local and Remote Instance 1 Video Input Source Connector Id 2	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Stop Sending Mode Local and Remote Instance 1 Video Input Source Connector Id 2	xCommand Presentation Stop Instance:1 ConnectorId:2\x0D

Global Scriptor Module Communication Sheet

Presentation Start Sending Mode Local and Remote Instance 6 Video Input Source Connector Id 2	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Stop Sending Mode Local and Remote Instance 6 Video Input Source Connector Id 2	xCommand Presentation Stop Instance:6 ConnectorId:2\x0D
Presentation Start Sending Mode Local and Remote Instance New Video Input Source Connector Id 2	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Stop Sending Mode Local and Remote Instance New Video Input Source Connector Id 2	xCommand Presentation Stop Instance:New ConnectorId:2\x0D
Presentation Start Sending Mode Local and Remote Instance Not Specified Video Input Source Connector Id 2	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Stop Sending Mode Local and Remote Instance Not Specified Video Input Source Connector Id 2	xCommand Presentation Stop ConnectorId:2\x0D
Presentation Start Sending Mode Not Specified Instance 1 Video Input Source Connector Id 2	xCommand Presentation Start Instance:1 ConnectorId:2\x0D
Presentation Stop Sending Mode Not Specified Instance 1 Video Input Source Connector Id 2	xCommand Presentation Stop Instance:1 ConnectorId:2\x0D
Presentation Start Sending Mode Not Specified Instance 6 Video Input Source Connector Id 2	xCommand Presentation Start Instance:6 ConnectorId:2\x0D
Presentation Stop Sending Mode Not Specified Instance 6 Video Input Source Connector Id 2	xCommand Presentation Stop Instance:6 ConnectorId:2\x0D
Presentation Start Sending Mode Not Specified Instance New Video Input Source Connector Id 2	xCommand Presentation Start Instance:New ConnectorId:2\x0D
Presentation Stop Sending Mode Not Specified Instance New Video Input Source Connector Id 2	xCommand Presentation Stop Instance:New ConnectorId:2\x0D
Presentation Start Sending Mode Not Specified Instance Not Specified Video Input Source Connector Id 2	xCommand Presentation Start ConnectorId:2\x0D
Presentation Stop Sending Mode Not Specified Instance Not Specified Video Input Source Connector Id 2	xCommand Presentation Stop ConnectorId:2\x0D
Presentation Start Sending Mode Local Only Instance 1 Video Input Source Connector Id 3	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Stop Sending Mode Local Only Instance 1 Video Input Source Connector Id 3	xCommand Presentation Stop Instance:1 ConnectorId:3\x0D
Presentation Start Sending Mode Local Only Instance 6 Video Input Source Connector Id 3	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Stop Sending Mode Local Only Instance 6 Video Input Source Connector Id 3	xCommand Presentation Stop Instance:6 ConnectorId:3\x0D
Presentation Start Sending Mode Local Only Instance New Video Input Source Connector Id 3	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Stop Sending Mode Local Only Instance New Video Input Source Connector Id 3	xCommand Presentation Stop Instance:New ConnectorId:3\x0D

Global Scripter Module Communication Sheet

Presentation Start Sending Mode Local Only Instance Not Specified Video Input Source Connector Id 3	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Stop Sending Mode Local Only Instance Not Specified Video Input Source Connector Id 3	xCommand Presentation Stop ConnectorId:3\x0D
Presentation Start Sending Mode Local and Remote Instance 1 Video Input Source Connector Id 3	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Stop Sending Mode Local and Remote Instance 1 Video Input Source Connector Id 3	xCommand Presentation Stop Instance:1 ConnectorId:3\x0D
Presentation Start Sending Mode Local and Remote Instance 6 Video Input Source Connector Id 3	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Stop Sending Mode Local and Remote Instance 6 Video Input Source Connector Id 3	xCommand Presentation Stop Instance:6 ConnectorId:3\x0D
Presentation Start Sending Mode Local and Remote Instance New Video Input Source Connector Id 3	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Stop Sending Mode Local and Remote Instance New Video Input Source Connector Id 3	xCommand Presentation Stop Instance:New ConnectorId:3\x0D
Presentation Start Sending Mode Local and Remote Instance Not Specified Video Input Source Connector Id 3	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Stop Sending Mode Local and Remote Instance Not Specified Video Input Source Connector Id 3	xCommand Presentation Stop ConnectorId:3\x0D
Presentation Start Sending Mode Not Specified Instance 1 Video Input Source Connector Id 3	xCommand Presentation Start Instance:1 ConnectorId:3\x0D
Presentation Stop Sending Mode Not Specified Instance 1 Video Input Source Connector Id 3	xCommand Presentation Stop Instance:1 ConnectorId:3\x0D
Presentation Start Sending Mode Not Specified Instance 6 Video Input Source Connector Id 3	xCommand Presentation Start Instance:6 ConnectorId:3\x0D
Presentation Stop Sending Mode Not Specified Instance 6 Video Input Source Connector Id 3	xCommand Presentation Stop Instance:6 ConnectorId:3\x0D
Presentation Start Sending Mode Not Specified Instance New Video Input Source Connector Id 3	xCommand Presentation Start Instance:New ConnectorId:3\x0D
Presentation Stop Sending Mode Not Specified Instance New Video Input Source Connector Id 3	xCommand Presentation Stop Instance:New ConnectorId:3\x0D
Presentation Start Sending Mode Not Specified Instance Not Specified Video Input Source Connector Id 3	xCommand Presentation Start ConnectorId:3\x0D
Presentation Stop Sending Mode Not Specified Instance Not Specified Video Input Source Connector Id 3	xCommand Presentation Stop ConnectorId:3\x0D
Presentation Start Sending Mode Local Only Instance 1 Video Input Source Connector Id 4	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4\x0D

Global Scripter Module Communication Sheet

Presentation Stop Sending Mode Local Only Instance 1 Video Input Source Connector Id 4	xCommand Presentation Stop Instance:1 ConnectorId:4\x0D
Presentation Start Sending Mode Local Only Instance 6 Video Input Source Connector Id 4	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Stop Sending Mode Local Only Instance 6 Video Input Source Connector Id 4	xCommand Presentation Stop Instance:6 ConnectorId:4\x0D
Presentation Start Sending Mode Local Only Instance New Video Input Source Connector Id 4	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Stop Sending Mode Local Only Instance New Video Input Source Connector Id 4	xCommand Presentation Stop Instance:New ConnectorId:4\x0D
Presentation Start Sending Mode Local Only Instance Not Specified Video Input Source Connector Id 4	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Stop Sending Mode Local Only Instance Not Specified Video Input Source Connector Id 4	xCommand Presentation Stop ConnectorId:4\x0D
Presentation Start Sending Mode Local and Remote Instance 1 Video Input Source Connector Id 4	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Stop Sending Mode Local and Remote Instance 1 Video Input Source Connector Id 4	xCommand Presentation Stop Instance:1 ConnectorId:4\x0D
Presentation Start Sending Mode Local and Remote Instance 6 Video Input Source Connector Id 4	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Stop Sending Mode Local and Remote Instance 6 Video Input Source Connector Id 4	xCommand Presentation Stop Instance:6 ConnectorId:4\x0D
Presentation Start Sending Mode Local and Remote Instance New Video Input Source Connector Id 4	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Stop Sending Mode Local and Remote Instance New Video Input Source Connector Id 4	xCommand Presentation Stop Instance:New ConnectorId:4\x0D
Presentation Start Sending Mode Local and Remote Instance Not Specified Video Input Source Connector Id 4	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Stop Sending Mode Local and Remote Instance Not Specified Video Input Source Connector Id 4	xCommand Presentation Stop ConnectorId:4\x0D
Presentation Start Sending Mode Not Specified Instance 1 Video Input Source Connector Id 4	xCommand Presentation Start Instance:1 ConnectorId:4\x0D
Presentation Stop Sending Mode Not Specified Instance 1 Video Input Source Connector Id 4	xCommand Presentation Stop Instance:1 ConnectorId:4\x0D
Presentation Start Sending Mode Not Specified Instance 6 Video Input Source Connector Id 4	xCommand Presentation Start Instance:6 ConnectorId:4\x0D
Presentation Stop Sending Mode Not Specified Instance 6 Video Input Source Connector Id 4	xCommand Presentation Stop Instance:6 ConnectorId:4\x0D
Presentation Start Sending Mode Not Specified Instance New Video Input Source Connector Id 4	xCommand Presentation Start Instance:New ConnectorId:4\x0D

Global Scripter Module Communication Sheet

Presentation Stop Sending Mode Not Specified Instance New Video Input Source Connector Id 4	xCommand Presentation Stop Instance:New ConnectorId:4\x0D
Presentation Start Sending Mode Not Specified Instance Not Specified Video Input Source Connector Id 4	xCommand Presentation Start ConnectorId:4\x0D
Presentation Stop Sending Mode Not Specified Instance Not Specified Video Input Source Connector Id 4	xCommand Presentation Stop ConnectorId:4\x0D
Presentation Start Sending Mode Local Only Instance 1 Video Input Source Connector Id 5	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Stop Sending Mode Local Only Instance 1 Video Input Source Connector Id 5	xCommand Presentation Stop Instance:1 ConnectorId:5\x0D
Presentation Start Sending Mode Local Only Instance 6 Video Input Source Connector Id 5	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Stop Sending Mode Local Only Instance 6 Video Input Source Connector Id 5	xCommand Presentation Stop Instance:6 ConnectorId:5\x0D
Presentation Start Sending Mode Local Only Instance New Video Input Source Connector Id 5	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Stop Sending Mode Local Only Instance New Video Input Source Connector Id 5	xCommand Presentation Stop Instance:New ConnectorId:5\x0D
Presentation Start Sending Mode Local Only Instance Not Specified Video Input Source Connector Id 5	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Stop Sending Mode Local Only Instance Not Specified Video Input Source Connector Id 5	xCommand Presentation Stop ConnectorId:5\x0D
Presentation Start Sending Mode Local and Remote Instance 1 Video Input Source Connector Id 5	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Stop Sending Mode Local and Remote Instance 1 Video Input Source Connector Id 5	xCommand Presentation Stop Instance:1 ConnectorId:5\x0D
Presentation Start Sending Mode Local and Remote Instance 6 Video Input Source Connector Id 5	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Stop Sending Mode Local and Remote Instance 6 Video Input Source Connector Id 5	xCommand Presentation Stop Instance:6 ConnectorId:5\x0D
Presentation Start Sending Mode Local and Remote Instance New Video Input Source Connector Id 5	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Stop Sending Mode Local and Remote Instance New Video Input Source Connector Id 5	xCommand Presentation Stop Instance:New ConnectorId:5\x0D
Presentation Start Sending Mode Local and Remote Instance Not Specified Video Input Source Connector Id 5	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Stop Sending Mode Local and Remote Instance Not Specified Video Input Source Connector Id 5	xCommand Presentation Stop ConnectorId:5\x0D

Global Scriptor Module Communication Sheet

Presentation Start Sending Mode Not Specified Instance 1 Video Input Source Connector Id 5	xCommand Presentation Start Instance:1 ConnectorId:5\x0D
Presentation Stop Sending Mode Not Specified Instance 1 Video Input Source Connector Id 5	xCommand Presentation Stop Instance:1 ConnectorId:5\x0D
Presentation Start Sending Mode Not Specified Instance 6 Video Input Source Connector Id 5	xCommand Presentation Start Instance:6 ConnectorId:5\x0D
Presentation Stop Sending Mode Not Specified Instance 6 Video Input Source Connector Id 5	xCommand Presentation Stop Instance:6 ConnectorId:5\x0D
Presentation Start Sending Mode Not Specified Instance New Video Input Source Connector Id 5	xCommand Presentation Start Instance:New ConnectorId:5\x0D
Presentation Stop Sending Mode Not Specified Instance New Video Input Source Connector Id 5	xCommand Presentation Stop Instance:New ConnectorId:5\x0D
Presentation Start Sending Mode Not Specified Instance Not Specified Video Input Source Connector Id 5	xCommand Presentation Start ConnectorId:5\x0D
Presentation Stop Sending Mode Not Specified Instance Not Specified Video Input Source Connector Id 5	xCommand Presentation Stop ConnectorId:5\x0D
Presentation Start Sending Mode Local Only Instance 1 Video Input Source Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly\x0D
Presentation Stop Sending Mode Local Only Instance 1 Video Input Source Not Specified	xCommand Presentation Stop Instance:1\x0D
Presentation Start Sending Mode Local Only Instance 6 Video Input Source Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly\x0D
Presentation Stop Sending Mode Local Only Instance 6 Video Input Source Not Specified	xCommand Presentation Stop Instance:6\x0D
Presentation Start Sending Mode Local Only Instance New Video Input Source Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly\x0D
Presentation Stop Sending Mode Local Only Instance New Video Input Source Not Specified	xCommand Presentation Stop Instance:New\x0D
Presentation Start Sending Mode Local Only Instance Not Specified Video Input Source Not Specified	xCommand Presentation Start SendingMode:LocalOnly\x0D
Presentation Stop Sending Mode Local Only Instance Not Specified Video Input Source Not Specified	xCommand Presentation Stop\x0D
Presentation Start Sending Mode Local and Remote Instance 1 Video Input Source Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote\x0D
Presentation Stop Sending Mode Local and Remote Instance 1 Video Input Source Not Specified	xCommand Presentation Stop Instance:1\x0D
Presentation Start Sending Mode Local and Remote Instance 6 Video Input Source Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote\x0D
Presentation Stop Sending Mode Local and Remote Instance 6 Video Input Source Not Specified	xCommand Presentation Stop Instance:6\x0D

Global Scripter Module Communication Sheet

Presentation Start Sending Mode Local and Remote Instance New Video Input Source Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote\x0D
Presentation Stop Sending Mode Local and Remote Instance New Video Input Source Not Specified	xCommand Presentation Stop Instance:New\x0D
Presentation Start Sending Mode Local and Remote Instance Not Specified Video Input Source Not Specified	xCommand Presentation Start SendingMode:LocalRemote\x0D
Presentation Stop Sending Mode Local and Remote Instance Not Specified Video Input Source Not Specified	xCommand Presentation Stop\x0D
Presentation Start Sending Mode Not Specified Instance 1 Video Input Source Not Specified	xCommand Presentation Start Instance:1\x0D
Presentation Stop Sending Mode Not Specified Instance 1 Video Input Source Not Specified	xCommand Presentation Stop Instance:1\x0D
Presentation Start Sending Mode Not Specified Instance 6 Video Input Source Not Specified	xCommand Presentation Start Instance:6\x0D
Presentation Stop Sending Mode Not Specified Instance 6 Video Input Source Not Specified	xCommand Presentation Stop Instance:6\x0D
Presentation Start Sending Mode Not Specified Instance New Video Input Source Not Specified	xCommand Presentation Start Instance:New\x0D
Presentation Stop Sending Mode Not Specified Instance New Video Input Source Not Specified	xCommand Presentation Stop Instance:New\x0D
Presentation Start Sending Mode Not Specified Instance Not Specified Video Input Source Not Specified	xCommand Presentation Start\x0D
Presentation Stop Sending Mode Not Specified Instance Not Specified Video Input Source Not Specified	xCommand Presentation Stop\x0D
Presentation Start Sending Mode Local Only Instance 1 Video Input Source Presentation Source 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Instance 1 Video Input Source Presentation Source 1	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Start Sending Mode Local Only Instance 6 Video Input Source Presentation Source 1	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Instance 6 Video Input Source Presentation Source 1	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Start Sending Mode Local Only Instance New Video Input Source Presentation Source 1	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Instance New Video Input Source Presentation Source 1	xCommand Presentation Stop Instance:New PresentationSource:1\x0D

Global Scriptor Module Communication Sheet

Presentation Start Sending Mode Local Only Instance Not Specified Video Input Source Presentation Source 1	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Instance Not Specified Video Input Source Presentation Source 1	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Start Sending Mode Local and Remote Instance 1 Video Input Source Presentation Source 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Instance 1 Video Input Source Presentation Source 1	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Start Sending Mode Local and Remote Instance 6 Video Input Source Presentation Source 1	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Instance 6 Video Input Source Presentation Source 1	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Start Sending Mode Local and Remote Instance New Video Input Source Presentation Source 1	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Instance New Video Input Source Presentation Source 1	xCommand Presentation Stop Instance:New PresentationSource:1\x0D
Presentation Start Sending Mode Local and Remote Instance Not Specified Video Input Source Presentation Source 1	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Instance Not Specified Video Input Source Presentation Source 1	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Start Sending Mode Not Specified Instance 1 Video Input Source Presentation Source 1	xCommand Presentation Start Instance:1 PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Instance 1 Video Input Source Presentation Source 1	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Start Sending Mode Not Specified Instance 6 Video Input Source Presentation Source 1	xCommand Presentation Start Instance:6 PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Instance 6 Video Input Source Presentation Source 1	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Start Sending Mode Not Specified Instance New Video Input Source Presentation Source 1	xCommand Presentation Start Instance:New PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Instance New Video Input Source Presentation Source 1	xCommand Presentation Stop Instance:New PresentationSource:1\x0D
Presentation Start Sending Mode Not Specified Instance Not Specified Video Input Source Presentation Source 1	xCommand Presentation Start PresentationSource:1\x0D

Global Scriptor Module Communication Sheet

Presentation Stop Sending Mode Not Specified Instance Not Specified Video Input Source Presentation Source 1	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Start Sending Mode Local Only Instance 1 Video Input Source Presentation Source 2	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Instance 1 Video Input Source Presentation Source 2	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Start Sending Mode Local Only Instance 6 Video Input Source Presentation Source 2	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Instance 6 Video Input Source Presentation Source 2	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Start Sending Mode Local Only Instance New Video Input Source Presentation Source 2	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Instance New Video Input Source Presentation Source 2	xCommand Presentation Stop Instance:New PresentationSource:2\x0D
Presentation Start Sending Mode Local Only Instance Not Specified Video Input Source Presentation Source 2	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Instance Not Specified Video Input Source Presentation Source 2	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Start Sending Mode Local and Remote Instance 1 Video Input Source Presentation Source 2	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Instance 1 Video Input Source Presentation Source 2	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Start Sending Mode Local and Remote Instance 6 Video Input Source Presentation Source 2	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Instance 6 Video Input Source Presentation Source 2	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Start Sending Mode Local and Remote Instance New Video Input Source Presentation Source 2	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Instance New Video Input Source Presentation Source 2	xCommand Presentation Stop Instance:New PresentationSource:2\x0D
Presentation Start Sending Mode Local and Remote Instance Not Specified Video Input Source Presentation Source 2	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Instance Not Specified Video Input Source Presentation Source 2	xCommand Presentation Stop PresentationSource:2\x0D

Global Scripter Module Communication Sheet

Presentation Start Sending Mode Not Specified Instance 1 Video Input Source Presentation Source 2	xCommand Presentation Start Instance:1 PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Instance 1 Video Input Source Presentation Source 2	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Start Sending Mode Not Specified Instance 6 Video Input Source Presentation Source 2	xCommand Presentation Start Instance:6 PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Instance 6 Video Input Source Presentation Source 2	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Start Sending Mode Not Specified Instance New Video Input Source Presentation Source 2	xCommand Presentation Start Instance:New PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Instance New Video Input Source Presentation Source 2	xCommand Presentation Stop Instance:New PresentationSource:2\x0D
Presentation Start Sending Mode Not Specified Instance Not Specified Video Input Source Presentation Source 2	xCommand Presentation Start PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Instance Not Specified Video Input Source Presentation Source 2	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Start Sending Mode Local Only Instance 1 Video Input Source Presentation Source 3	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Instance 1 Video Input Source Presentation Source 3	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Start Sending Mode Local Only Instance 6 Video Input Source Presentation Source 3	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Instance 6 Video Input Source Presentation Source 3	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Start Sending Mode Local Only Instance New Video Input Source Presentation Source 3	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Instance New Video Input Source Presentation Source 3	xCommand Presentation Stop Instance:New PresentationSource:3\x0D
Presentation Start Sending Mode Local Only Instance Not Specified Video Input Source Presentation Source 3	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Instance Not Specified Video Input Source Presentation Source 3	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Start Sending Mode Local and Remote Instance 1 Video Input Source Presentation Source 3	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Instance 1 Video Input Source Presentation Source 3	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D

Global Scripter Module Communication Sheet

Presentation Start Sending Mode Local and Remote Instance 6 Video Input Source Presentation Source 3	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Instance 6 Video Input Source Presentation Source 3	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Start Sending Mode Local and Remote Instance New Video Input Source Presentation Source 3	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Instance New Video Input Source Presentation Source 3	xCommand Presentation Stop Instance:New PresentationSource:3\x0D
Presentation Start Sending Mode Local and Remote Instance Not Specified Video Input Source Presentation Source 3	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Instance Not Specified Video Input Source Presentation Source 3	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Start Sending Mode Not Specified Instance 1 Video Input Source Presentation Source 3	xCommand Presentation Start Instance:1 PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Instance 1 Video Input Source Presentation Source 3	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Start Sending Mode Not Specified Instance 6 Video Input Source Presentation Source 3	xCommand Presentation Start Instance:6 PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Instance 6 Video Input Source Presentation Source 3	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Start Sending Mode Not Specified Instance New Video Input Source Presentation Source 3	xCommand Presentation Start Instance:New PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Instance New Video Input Source Presentation Source 3	xCommand Presentation Stop Instance:New PresentationSource:3\x0D
Presentation Start Sending Mode Not Specified Instance Not Specified Video Input Source Presentation Source 3	xCommand Presentation Start PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Instance Not Specified Video Input Source Presentation Source 3	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Start Sending Mode Local Only Instance 1 Video Input Source Presentation Source 4	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Instance 1 Video Input Source Presentation Source 4	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Start Sending Mode Local Only Instance 6 Video Input Source Presentation Source 4	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Instance 6 Video Input Source Presentation Source 4	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Presentation Start Sending Mode Local Only Instance New Video Input Source Presentation Source 4	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Instance New Video Input Source Presentation Source 4	xCommand Presentation Stop Instance:New PresentationSource:4\x0D
Presentation Start Sending Mode Local Only Instance Not Specified Video Input Source Presentation Source 4	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Instance Not Specified Video Input Source Presentation Source 4	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Start Sending Mode Local and Remote Instance 1 Video Input Source Presentation Source 4	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Instance 1 Video Input Source Presentation Source 4	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Start Sending Mode Local and Remote Instance 6 Video Input Source Presentation Source 4	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Instance 6 Video Input Source Presentation Source 4	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Start Sending Mode Local and Remote Instance New Video Input Source Presentation Source 4	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Instance New Video Input Source Presentation Source 4	xCommand Presentation Stop Instance:New PresentationSource:4\x0D
Presentation Start Sending Mode Local and Remote Instance Not Specified Video Input Source Presentation Source 4	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Instance Not Specified Video Input Source Presentation Source 4	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Start Sending Mode Not Specified Instance 1 Video Input Source Presentation Source 4	xCommand Presentation Start Instance:1 PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Instance 1 Video Input Source Presentation Source 4	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Start Sending Mode Not Specified Instance 6 Video Input Source Presentation Source 4	xCommand Presentation Start Instance:6 PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Instance 6 Video Input Source Presentation Source 4	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Start Sending Mode Not Specified Instance New Video Input Source Presentation Source 4	xCommand Presentation Start Instance:New PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Presentation Stop Sending Mode Not Specified Instance New Video Input Source Presentation Source 4	xCommand Presentation Stop Instance:New PresentationSource:4\x0D
Presentation Start Sending Mode Not Specified Instance Not Specified Video Input Source Presentation Source 4	xCommand Presentation Start PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Instance Not Specified Video Input Source Presentation Source 4	xCommand Presentation Stop PresentationSource:4\x0D
Presentation ExternalSource Select Command None	xCommand UserInterface Presentation ExternalSource Select SourceIdentifier: "String"\x0D
Preset Recall 1	xCommand Preset Activate PresetId:1\x0D
Preset Recall 15	xCommand Preset Activate PresetId:15\x0D
Preset Save 1	xCommand Preset Store PresetId:1 Type:All\x0D
Preset Save 15	xCommand Preset Store PresetId:15 Type:All\x0D
Reboot None	xCommand Boot\x0D
Self View Default Fullscreen Mode Current	xConfiguration Video SelfviewDefault FullscreenMode:Current\x0D
Self View Default Fullscreen Mode Off	xConfiguration Video SelfviewDefault FullscreenMode:Off\x0D
Self View Default Fullscreen Mode On	xConfiguration Video SelfviewDefault FullscreenMode:On\x0D
Self View Off	xCommand Video Selfview Set Mode:Off\x0D
Self View On	xCommand Video Selfview Set Mode:On\x0D
Self View Position Center Left	xCommand Video Selfview Set PIPPosition:CenterLeft\x0D
Self View Position Center Right	xCommand Video Selfview Set PIPPosition:CenterRight\x0D
Self View Position Lower Left	xCommand Video Selfview Set PIPPosition:LowerLeft\x0D
Self View Position Lower Right	xCommand Video Selfview Set PIPPosition:LowerRight\x0D
Self View Position Upper Center	xCommand Video Selfview Set PIPPosition:UpperCenter\x0D
Self View Position Upper Left	xCommand Video Selfview Set PIPPosition:UpperLeft\x0D
Self View Position Upper Right	xCommand Video Selfview Set PIPPosition:UpperRight\x0D
Sleep Timer 1	xCommand Standby ResetTimer Delay:1\x0D
Sleep Timer 480	xCommand Standby ResetTimer Delay:480\x0D
SpeakerTrack Control Off	xCommand Cameras SpeakerTrack Deactivate\x0D
SpeakerTrack Control On	xCommand Cameras SpeakerTrack Activate\x0D
SpeakerTrack Mode Auto	xConfiguration Cameras SpeakerTrack Mode: Auto\x0D
SpeakerTrack Mode Off	xConfiguration Cameras SpeakerTrack Mode: Off\x0D
Standby Activate	xCommand Standby Activate\x0D
Standby Deactivate	xCommand Standby Deactivate\x0D
Volume 0	xcommand audio volume set level:0\x0D

Volume 100	xcommand audio volume set level:100\x0D
------------	---

Appendix B. Query Commands

Audio Output Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode\x0D
Audio Output Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode\x0D
Audio Output Output Line 1	xConfiguration Audio Output Line 1 Mode\x0D
Audio Output Output Line 2	xConfiguration Audio Output Line 2 Mode\x0D
Audio Output Output Line 3	xConfiguration Audio Output Line 3 Mode\x0D
Audio Output Output Line 4	xConfiguration Audio Output Line 4 Mode\x0D
Audio Output Output Line 5	xConfiguration Audio Output Line 5 Mode\x0D
Audio Output Output Line 6	xConfiguration Audio Output Line 6 Mode\x0D
Audio Volume Mute	xStatus Audio VolumeMute\x0D
Auto Answer	xConfiguration Conference 1 AutoAnswer Mode\x0D
Default Call Rate	xConfiguration Conference 1 DefaultCall Rate\x0D
Display Mode	xConfiguration Video Monitors\x0D
DNS Domain Name	xStatus Network DNS Domain Name\x0D
DNS Server Address Server 1	xStatus Network 1 DNS Server 1 Address\x0D
DNS Server Address Server 3	xStatus Network 1 DNS Server 3 Address\x0D
Do Not Disturb	xStatus Conference 1 DoNotDisturb\x0D
Far End Control	xConfiguration Conference 1 FarEndControl Mode\x0D
Firmware Version	xStatus SystemUnit Software Version\x0D
Gateway Address	xStatus Network 1 IPv4 Gateway\x0D
H323 Alias E164 Status	xConfiguration H323 Profile 1 H323Alias E164\x0D
H323 Gatekeeper Address	xStatus H323 Gatekeeper Address\x0D
H323 Gatekeeper Status	xStatus H323 Gatekeeper Status\x0D
H323Alias ID Status	xConfiguration H323 Profile 1 H323Alias ID\x0D
Input	xStatus Video Input MainVideoSource\x0D
Input Line Level Input Line 1	xConfiguration Audio Input Line 1 Level\x0D
Input Line Level Input Line 2	xConfiguration Audio Input Line 2 Level\x0D
Input Line Level Input Line 3	xConfiguration Audio Input Line 3 Level\x0D
Input Line Level Input Line 4	xConfiguration Audio Input Line 4 Level\x0D
Input Mic Level Input Microphone 1	xConfiguration Audio Input Microphone 1 Level\x0D
Input Mic Level Input Microphone 2	xConfiguration Audio Input Microphone 2 Level\x0D
Input Mic Level Input Microphone 3	xConfiguration Audio Input Microphone 3 Level\x0D
Input Mic Level Input Microphone 4	xConfiguration Audio Input Microphone 4 Level\x0D
Input Mic Level Input Microphone 5	xConfiguration Audio Input Microphone 5 Level\x0D
Input Mic Level Input Microphone 6	xConfiguration Audio Input Microphone 6 Level\x0D
Input Mic Level Input Microphone 7	xConfiguration Audio Input Microphone 7 Level\x0D
Input Mic Level Input Microphone 8	xConfiguration Audio Input Microphone 8 Level\x0D
Input Mute Input Line 1	xConfiguration Audio Input Line 1 Mode\x0D
Input Mute Input Line 2	xConfiguration Audio Input Line 2 Mode\x0D
Input Mute Input Line 3	xConfiguration Audio Input Line 3 Mode\x0D
Input Mute Input Line 4	xConfiguration Audio Input Line 4 Mode\x0D

Global Scripter Module Communication Sheet

Input Mute Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode\x0D
Input Mute Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode\x0D
Input Mute Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode\x0D
Input Mute Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode\x0D
Input Mute Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode\x0D
Input Mute Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode\x0D
Input Mute Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode\x0D
Input Mute Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode\x0D
IP Address	xStatus Network 1 IPv4 Address\x0D
MAC Address	xStatus Network 1 Ethernet MacAddress\x0D
Max Receive Call Rate	xConfiguration Conference 1 MaxReceiveCallRate\x0D
Max Total Receive Call Rate	xConfiguration Conference 1 MaxTotalReceiveCallRate\x0D
Max Total Transmit Call Rate	xConfiguration Conference 1 MaxTotalTransmitCallRate\x0D
Max Transmit Call Rate	xConfiguration Conference 1 MaxTransmitCallRate\x0D
Microphones Mute	xStatus Audio Microphones\x0D
Network Assignment	xConfiguration Network 1 IPv4 Assignment\x0D
Output Level Output HDMI 1	xConfiguration Audio Output HDMI 1 Level\x0D
Output Level Output HDMI 2	xConfiguration Audio Output HDMI 2 Level\x0D
Output Level Output Line 1	xConfiguration Audio Output Line 1 Level\x0D
Output Level Output Line 2	xConfiguration Audio Output Line 2 Level\x0D
Output Level Output Line 3	xConfiguration Audio Output Line 3 Level\x0D
Output Level Output Line 4	xConfiguration Audio Output Line 4 Level\x0D
Output Level Output Line 5	xConfiguration Audio Output Line 5 Level\x0D
Output Level Output Line 6	xConfiguration Audio Output Line 6 Level\x0D
Presentation Mode Status	xStatus Conference Presentation Mode\x0D
Presentation Sending Mode Status Instance 1	xStatus Conference Presentation LocalInstance 1 SendingMode\x0D
Presentation Sending Mode Status Instance 6	xStatus Conference Presentation LocalInstance 6 SendingMode\x0D
Presentation Source Status Instance 1	xStatus Conference Presentation LocalInstance 1 Source\x0D
Presentation Source Status Instance 6	xStatus Conference Presentation LocalInstance 6 Source\x0D
Self View	xStatus Video Selfview Mode\x0D
Self View Default Fullscreen Mode	xConfiguration Video SelfviewDefault FullscreenMode\x0D
Self View Position	xStatus Video Selfview PIPPosition\x0D
SIP Registration Status	xStatus SIP Profile 1 Registration 1 Status\x0D
SpeakerTrack Control	xStatus Cameras SpeakerTrack Status\x0D
Standby	xStatus Standby\x0D
Subnet Mask	xStatus Network 1 IPv4 SubnetMask\x0D
Volume	xstatus audio volume\x0D