

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
 Manufacturer: Cisco
 Firmware Version: N/A
 Model(s): Webex Room Kit CE9.14.X, Webex Room Kit Plus CE9.14.X, Webex Room Kit Pro CE9.14.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.14.0000-b007	2.13.0

Version History

Module Version	Date	Notes
1_3_1_0	10/28/2021	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly. deviceUsername default value is admin respectively.
Example: `InterfaceName.deviceUsername = 'admin'`
- CallHistoryOccurrenceType variable must be set accordingly.
Example: `InterfaceName.CallHistoryOccurrenceType = 'Time'`
- NumberOfPhonebookSearch variable must be set accordingly. Default value is '5'.
NumberOfPhonebookSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookSearch = '5'`
- NumberOfCallHistory variable must be set accordingly. Default value is '5'. NumberOfCallHistory ranges from 1 to 20.
Example: `InterfaceName.NumberofCallHistory = '5'`
- NumberOfPhonebookFolderSearch variable must be set accordingly. Default value is '5'.
NumberOfPhonebookFolderSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookFolderSearch = '5'`
- PhonebookSearchOffset variable must be set accordingly. Default value is '50'.
PhonebookSearchOffset ranges from 20 to 250.
Example: `InterfaceName.PhonebookSearchOffset = '50'`
- NumberOfPeripheral variable must be set accordingly. Default value is '5'. NumberOfPeripheral ranges from 1 to 10.
Example: `InterfaceName.NumberofPeripheral = '5'`
- Use highest baud rate for most optimal performance when using a serial connection.

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='Webex Room Kit  
CE9.14.X')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='Webex Room  
Kit CE9.14.X')
```

SSHClass

#Password Required

```
InterfaceName = ModuleName.SSHClass('192.168.254.254', 22, Credentials=('admin', 'extron'),  
Model='Webex Room Kit CE9.14.X')
```

#No Password Required

```
InterfaceName = ModuleName.SSHClass('192.168.254.254', 22, Credentials=('admin', ''),  
Model='Webex Room Kit CE9.14.X')
```

Phonebook commands:

- PhonebookUpdate
 - This is used to trigger the search.
- PhonebookSearchResult
 - This is where the search results will be saved to when the phonebook is searched. The number of results is determined by the module parameter NumberofPhonebookSearch, which is initialized to 5 results by default.
- PhonebookNavigation
 - This command is used for navigating through the search results, it is like scrolling through the results when there are more than the NumberofPhonebookSearch that came back from the search.
- PhonebookSearchSet
 - When the number selected in this command is triggered, it will be dialed.
- PhonebookFolderIDUpdate
 - This is used to trigger the search.
- PhonebookFolderIDSearchResult
 - This is where the search results will be saved to when the phonebook folder ID is searched. The number of results is determined by the module parameter NumberofPhonebookFolderSearch, which is initialized to 5 results by default.
- PhonebookFolderIDNavigation
 - This command is used for navigating through the search results, it is like scrolling through the results when there are more than the NumberofPhonebookFolderSearch that came back from the search.
- PhonebookFolderIDSearchSet
 - When the folder name selected in this command is triggered, it will copy the FolderID and use it as the FolderID command parameter the next time PhonebookUpdate is used.

Query commands:

The following commands trigger a query command and should not be sent at a faster rate than the Command Timeout Duration specified.

Command Name	Command Timeout Duration
CallHistoryRefresh	5 seconds
ConnectedDeviceUpdate	3 seconds
PhonebookFolderIDUpdate	10 seconds
PhonebookUpdate	10 seconds
MeetingRefresh	10 seconds

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
AudioOutput	'On'	'Off'	'Ultrasound Only'
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Output'	'Internal Speaker' ^{1, 2} 'HDMI' ¹	'Line' ^{1, 2} 'HDMI 1' - 'HDMI 3' ⁶	'Line 1' - 'Line 6' ⁶
# AudioOutput example InterfaceName.Set('AudioOutput', 'On', {'Output': 'Internal Speaker'})			
Command	Value	Value	
AutoAnswer	'On'	'Off'	
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command	Value		
CallAuthenticationResponseCommand ¹⁰	None		
Qualifier Key	Qualifier Value	Qualifier Value	
'Call'	'1' – '5'	'Not Specified'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Participant Role'	'Host'	'Panelist'	'Guest'
Qualifier Key	Qualifier Value		
'Pin'	'String'		
# CallAuthenticationResponseCommand example InterfaceName.Set('CallAuthenticationResponseCommand', None, {'Call': '1', 'Participant Role': 'Host', 'Pin': '1234'})			
Command	Value	Value	Value
CallHistoryNavigation	'Up' 'Page Down'	'Down'	'Page Up'
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')			
Command	Value		
CallHistoryRefresh	None		
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)			
Command	Value		
CallHistorySelect	'1' – '20'		
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', '1')			
Command	Value	Value	
CallSetupMode	'Gatekeeper'	'Direct'	
# CallSetupMode example InterfaceName.Set('CallSetupMode', 'Gatekeeper')			
Command	Value	Value	Value
CameraFocus	'Near' 'Auto'	'Far'	'Stop'
Qualifier Key	Qualifier Value		
'Camera' ^{1, 6}	'1' – '7'		

Global Scripter Module Communication Sheet

Revision: 10/28/2021

# CameraFocus example InterfaceName.Set('CameraFocus', 'Near', {'Camera': '1'})			
Command	Value	Value	Value
CameraPan	'Left'	'Right'	'Stop'
Qualifier Key	Qualifier Value		
'Camera' ^{1, 6}	'1' – '7'		
Qualifier Key	Qualifier Value		
'Speed'	1 – 15		
# CameraPan example InterfaceName.Set('CameraPan', 'Left', {'Camera': '1', 'Speed': 15})			
Command	Value		
CameraPresetRecall	'1' – '35'		
# CameraPresetRecall example InterfaceName.Set('CameraPresetRecall', '1')			
Command	Value		
CameraPresetSave	'1' – '35'		
Qualifier Key	Qualifier Value		
'Camera' ^{1, 6}	'1' – '7'		
# CameraPresetSave example InterfaceName.Set('CameraPresetSave', '1', {'Camera': '1'})			
Command	Value	Value	Value
CameraTilt	'Up'	'Down'	'Stop'
Qualifier Key	Qualifier Value		
'Camera' ^{1, 6}	'1' – '7'		
Qualifier Key	Qualifier Value		
'Speed'	1 – 15		
# CameraTilt example InterfaceName.Set('CameraTilt', 'Up', {'Camera': '1', 'Speed': 15})			
Command	Value	Value	Value
CameraZoom	'In'	'Out'	'Stop'
Qualifier Key	Qualifier Value		
'Camera'	'1' – '7'		
Qualifier Key	Qualifier Value		
'Speed'	1 – 15		
# CameraZoom example InterfaceName.Set('CameraZoom', 'In', {'Camera': '1', 'Speed': 15})			
Command	Value	Value	Value
ConnectedDeviceNavigation	'Up'	'Down'	'Page Up'
	'Page Down'		
# ConnectedDeviceNavigation example InterfaceName.Set('ConnectedDeviceNavigation', 'Up')			
Command	Value		
ConnectedDeviceUpdate	None		
# ConnectedDeviceUpdate example InterfaceName.Set('ConnectedDeviceUpdate', None)			
Command	Value	Value	Value
DisplayMode	'Dual'	'Single'	'Dual Presentation Only'
	'Auto'	'Triple Presentation Only' ⁶	'Triple' ⁶
# DisplayMode example InterfaceName.Set('DisplayMode', 'Dual')			
Command	Value		

Global Scripter Module Communication Sheet

Revision: 10/28/2021

DNSDomainNameCommand	None		
# DNSDomainNameCommand example InterfaceName.Set('DNSDomainNameCommand', None)			
Command DNSServerAddressCommand	Value None		
# DNSServerAddressCommand example InterfaceName.Set('DNSServerAddressCommand', None)			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Active')			
Command DTMF	Value '0' – '9'	Value '*'	Value '#'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command FarEndCameraPanTilt	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
# FarEndCameraPanTilt example InterfaceName.Set('FarEndCameraPanTilt', 'Up')			
Command FarEndCameraPresetRecall	Value '1' – '15'		
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')			
Command FarEndCameraSource	Value '0' – '15'		
# FarEndCameraSource example InterfaceName.Set('FarEndCameraSource', '0')			
Command FarEndCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
# FarEndCameraZoom example InterfaceName.Set('FarEndCameraZoom', 'In')			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Set('FarEndControl', 'On')			
Command H323GatekeeperAddressCommand	Value None		
# H323GatekeeperAddressCommand example InterfaceName.Set('H323GatekeeperAddressCommand', None)			
Command H323AliasE164Command	Value None		
# H323AliasE164Command example InterfaceName.Set('H323AliasE164Command', None)			
Command H323AliasIDCommand	Value None		
# H323AliasIDCommand example InterfaceName.Set('H323AliasIDCommand', None)			
Command	Value None		

Global Scripter Module Communication Sheet

Revision: 10/28/2021

H323ProfileAuthenticationLoginNameCommand			
# H323ProfileAuthenticationLoginNameCommand example InterfaceName.Set('H323ProfileAuthenticationLoginNameCommand', None)			
Command H323ProfileAuthenticationPasswordCommand	Value None		
# H323ProfileAuthenticationPasswordCommand example InterfaceName.Set('H323ProfileAuthenticationPasswordCommand', None)			
Command Hook ¹⁰	Value 'Dial' 'Join 2' 'Join 5' 'Hold 3' 'Resume 1' 'Resume 4' 'Disconnect 2' 'Disconnect 5'	Value 'Accept' 'Join 3' 'Hold 1' 'Hold 4' 'Resume 2' 'Resume 5' 'Disconnect 3' 'Reject'	Value 'Join 1' 'Join 4' 'Hold 2' 'Hold 5' 'Resume 3' 'Disconnect 1' 'Disconnect 4' 'Disconnect All'
Qualifier Key 'Protocol'	Qualifier Value 'Auto' 'H320'	Qualifier Value 'SIP' 'Spark'	Qualifier Value 'H323'
Qualifier Key 'Call Type'	Qualifier Value 'Audio'	Qualifier Value 'Video'	Qualifier Value 'Auto'
Qualifier Key 'Number'	Qualifier Value 'String'		
# Hook example InterfaceName.Set('Hook', 'Dial', {'Protocol': 'Auto', 'Call Type': 'Audio'}) # Hook example with Number InterfaceName.Set('Hook', 'Dial', {'Protocol': 'Auto', 'Call Type': 'Audio', 'Number' : 'String'})			
Command Input	Value '1' – '2' ²	Value '1' – '3' ¹	Value '1' – '6' ⁶
# Input example InterfaceName.Set('Input', '1')			
Command InputHDMIlevel	Value -24 to 0 in steps of 1 dB		
Qualifier Key 'Input'	Qualifier Value 'HDMI' ²	Qualifier Value 'HDMI 2' – 'HDMI 3' ¹	Qualifier Value 'HDMI 1' - 'HDMI 5' ⁶
# InputHDMIlevel example InterfaceName.Set('InputHDMIlevel', 0, {'Input': 'HDMI'})			
Command InputMicLevel	Value 0 to 26 in steps of 1 dB ²	Value 0 to 24 in steps of 1 dB ¹	Value 0 to 70 in steps of 1 dB ⁶
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ^{1, 6}	Qualifier Value 'Microphone 2' - 'Microphone 3'	Qualifier Value 'Microphone 4' - 'Microphone 8' ⁶
# InputMicLevel example InterfaceName.Set('InputMicLevel', 70, {'Input': 'Microphone 1'})			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ^{1, 6}	Qualifier Value 'Microphone 2' - 'Microphone 3'	Qualifier Value 'Microphone 4' - 'Microphone 8' ⁶

Global Scripter Module Communication Sheet

Revision: 10/28/2021

	'HDMI 1' ⁶ 'Internal Microphone' ²	'HDMI 2' - 'HDMI 3' ^{1, 6} 'HDMI' ²	'HDMI 4' - 'HDMI 5' ⁶
# InputMute example InterfaceName.Set('InputMute', 'On', {'Input': 'Microphone 1'})			
Command InputVideoMute	Value 'On'	Value 'Off'	
# InputVideoMute example InterfaceName.Set('InputVideoMute', 'On')			
Command IPv4AddressCommand	Value None		
# IPv4AddressCommand example InterfaceName.Set('IPv4AddressCommand', None)			
Command IPv4GatewayCommand	Value None		
# IPv4GatewayCommand example InterfaceName.Set('IPv4GatewayCommand', None)			
Command IPv4SubnetMaskCommand	Value None		
# IPv4SubnetMaskCommand example InterfaceName.Set('IPv4SubnetMaskCommand', None)			
Command LayoutSet	Value 'Auto' 'Overlay'	Value 'Custom' 'Prominent'	Value 'Equal' 'Single'
Qualifier Key 'Target'	Qualifier Value 'Local'	Qualifier Value 'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command Macro	Value 'Activate'	Value 'Deactivate'	
Qualifier Key 'Name'	Qualifier Value 'String'		
# Macro example InterfaceName.Set('Macro', 'Activate', {'Name': 'String'})			
Command MacroAutoStart	Value 'On'	Value 'Off'	
# MacroAutoStart example InterfaceName.Set('MacroAutoStart', 'On')			
Command MacroMode	Value 'On'	Value 'Off'	
# MacroMode example InterfaceName.Set('MacroMode', 'On')			
Command MeetingJoin ⁷	Value None		
Qualifier Key 'Meeting'	Qualifier Value '1' - '5'		
# MeetingJoin example InterfaceName.Set('MeetingJoin', None, {'Meeting': '1'})			
Command MeetingRefresh	Value None		
# MeetingRefresh example InterfaceName.Set('MeetingRefresh', None)			
Command MicrophonesMute	Value 'On'	Value 'Off'	

Global Scripter Module Communication Sheet

Revision: 10/28/2021

# MicrophonesMute example InterfaceName.Set('MicrophonesMute', 'On')			
Command OutputLevel ⁶	Value -24 to 0 in steps of 1 dB		
Qualifier Key 'Output'	Qualifier Value 'Line 1' 'Line 4'	Qualifier Value 'Line 2' 'Line 5'	Qualifier Value 'Line 3' 'Line 6'
# OutputLevel example InterfaceName.Set('OutputLevel', 0, {'Output': 'Line 1'})			
Command PeopleCountOutOfCall	Value 'On'	Value 'Off'	
# PeopleCountOutOfCall example InterfaceName.Set('PeopleCountOutOfCall', 'On')			
Command PeoplePresenceDetector	Value 'On'	Value 'Off'	
# PeoplePresenceDetector example InterfaceName.Set('PeoplePresenceDetector', 'On')			
Command PhonebookFolderIDNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up')			
Command PhonebookFolderIDSearchSet	Value 1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command PhonebookFolderIDUpdate	Value None		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Corporate'})			
Command PhonebookNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up')			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		

Global Scripter Module Communication Sheet

Revision: 10/28/2021

# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Phonebook Type': 'Corporate', 'Contact': '', 'FolderID': ''})			
Command Presentation	Value 'Start' ^{3,4}	Value 'Stop' ⁵	
Qualifier Key 'Instance'	Qualifier Value '1' – '6'	Qualifier Value 'Not Specified'	Qualifier Value 'New'
Qualifier Key 'Layout'	Qualifier Value 'Not Specified'	Qualifier Value 'Equal'	Qualifier Value 'Prominent'
Qualifier Key 'Sending Mode'	Qualifier Value 'Not Specified'	Qualifier Value 'Local Only'	Qualifier Value 'Local and Remote'
Qualifier Key 'Video Input Source'	Qualifier Value 'Not Specified'	Qualifier Value 'Presentation Source 1' - 'Presentation Source 2'	Qualifier Value 'Presentation Source 3' ^{1,6} 'Presentation Source 4' - 'Presentation Source 6' ⁶ 'Connector Id 4' - 'Connector Id 6' ⁶
# Presentation example InterfaceName.Set('Presentation', 'Start', {'Instance': '1', 'Layout': 'Not Specified', 'Sending Mode': 'Not Specified', 'Video Input Source': 'Not Specified'})			
Command PresentationExternalSourceSelectCommand	Value None		
# PresentationExternalSourceSelectCommand example InterfaceName.Set('PresentationExternalSourceSelectCommand', None)			
Command PresenterTrackControl ^{1,6}	Value 'On'	Value 'Off'	
# PresenterTrackControl example InterfaceName.Set('PresenterTrackControl', 'On')			
Command PresenterTrackMode ^{1,6,8}	Value 'Off' 'Background'	Value 'Follow' 'Setup'	Value 'Diagnostic' 'Persistent'
# PresenterTrackMode example InterfaceName.Set('PresenterTrackMode', 'Off')			
Command PresenterTrackPresenterDetectedStatus ^{1,6}	Value 'On'	Value 'Off'	
# PresenterTrackPresenterDetectedStatus example InterfaceName.Set('PresenterTrackPresenterDetectedStatus', 'On')			
Command PresetRecall	Value '1' – '15'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1')			
Command PresetSave	Value '1' – '15'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command Reboot	Value None		
# Reboot example InterfaceName.Set('Reboot', None)			
Command	Value		

Global Scripter Module Communication Sheet

Revision: 10/28/2021

RestartMacros	None		
# RestartMacros example InterfaceName.Set('RestartMacros', None)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')			
Command SelfViewDefaultFullscreen Mode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example InterfaceName.Set('SelfViewDefaultFullscreenMode', 'On')			
Command SelfViewFullscreenMode	Value 'On'	Value 'Off'	
# SelfViewFullscreenMode example InterfaceName.Set('SelfViewFullscreenMode', 'On')			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')			
Command SIPDisplayNameComman d	Value None		
# SIPDisplayNameCommand example InterfaceName.Set('SIPDisplayNameCommand', None)			
Command SIPURICommand	Value None		
# SIPURICommand example InterfaceName.Set('SIPURICommand', None)			
Command SleepTimer	Value 1 – 480		
# SleepTimer example InterfaceName.Set('SleepTimer', 480)			
Command SpeakerTrackControl	Value 'On' ⁹	Value 'Off'	
# SpeakerTrackControl example InterfaceName.Set('SpeakerTrackControl', 'On')			
Command SpeakerTrackMode	Value 'Auto'	Value 'Off'	
# SpeakerTrackMode example InterfaceName.Set('SpeakerTrackMode', 'Auto')			
Command Standby	Value 'Activate'	Value 'Deactivate'	Value 'Halfwake'
# Standby example InterfaceName.Set('Standby', 'Activate')			
Command SystemUnitNameComman d	Value None		
# SystemUnitNameCommand example InterfaceName.Set('SystemUnitNameCommand', None)			
Command Volume	Value 0 to 100 in steps of 1		

```
# Volume example  
InterfaceName.Set('Volume', 100)
```

¹ Only supported for Webex Room Kit Plus model

² Only supported for Webex Room Kit model

³ Optional parameters: "Video Input Source ", "Sending Mode", "Instance", and "Layout" (all parameters set to "Not Specified" by default)

⁴ Must be in an active call for command to work properly.

⁵ Optional parameters: "Video Input Source" (except "Connector Id" states) and "Instance" (except "New" state). "Sending Mode" and "Layout" parameters should be set to "Not Specified".

⁶ Only supported for Webex Room Kit Pro model

⁷ Requires "MeetingRefresh" command before using.

⁸ Requires "PresenterTrackControl" command to be "On" before using.

⁹ Requires "SpeakerTrackMode" command to be 'Auto' before using

¹⁰ Requires "CallStatus" command to work properly.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, CallHistory, ConnectedDeviceMAC, ConnectedDeviceName, ConnectedDeviceType, MeetingAgenda, MeetingDialMode, MeetingDialNumber, MeetingEndTime, MeetingOrganizer, MeetingStartTime, MeetingTitle, PhonebookFolderIDSearchResult, and PhonebookSearchResult do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioOutput	Value 'On'	Value 'Off'	Value 'Ultrasound Only'
Qualifier Key 'Output'	Qualifier Value 'Internal Speaker' ^{1, 2} 'HDMI' ¹	Qualifier Value 'Line' ^{1, 2} 'HDMI 1' - 'HDMI 3' ³	Qualifier Value 'Line 1' - 'Line 6' ³
# AudioOutput example InterfaceName.Update('AudioOutput', {'Output': 'Internal Speaker'}) Value = InterfaceName.ReadStatus('AudioOutput', {'Output': 'Internal Speaker'}) InterfaceName.SubscribeStatus('AudioOutput', None, FeedbackHandler)			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)			
Command CallAnswerState	Value 'Unanswered' 'Answered'	Value 'Ignored' 'Unknown'	Value 'Auto-Answered'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallAnswerState example InterfaceName.Update('CallAnswerState', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallAnswerState', {'Call': '1'}) InterfaceName.SubscribeStatus('CallAnswerState', None, FeedbackHandler)			
Command CallAuthenticationRequestStatus⁵	Value 'None' 'Panelist Pin'	Value 'Host Pin or Guest'	Value 'Host Pin or Guest Pin'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallAuthenticationRequestStatus example InterfaceName.Update('CallAuthenticationRequestStatus', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallAuthenticationRequestStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallAuthenticationRequestStatus', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Command	Value		
CallHistory	'String'		
Qualifier Key	Qualifier Value		
'Button'	'1' – '20'		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Detail Type'	'Display Name'	'Callback Number'	'Last Occurrence Time'
	'Occurrence Count'	'Occurrence Type'	
# CallHistory example Value = InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)			
Command	Value	Value	
CallSetupMode	'Gatekeeper'	'Direct'	
# CallSetupMode example InterfaceName.Update('CallSetupMode') Value = InterfaceName.ReadStatus('CallSetupMode') InterfaceName.SubscribeStatus('CallSetupMode', None, FeedbackHandler)			
Command	Value	Value	Value
CallStatus	'Dialing'	'Connecting'	'Connected'
	'Ringing'	'Idle'	'Disconnecting'
	'On Hold'	'Early Media'	'Preserved'
	'Remote Preserved'		
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
# CallStatus example InterfaceName.Update('CallStatus', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)			
Command	Value	Value	Value
CallStatusDeviceType	'Endpoint'	'MCU'	'Unknown'
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
# CallStatusDeviceType example InterfaceName.Update('CallStatusDeviceType', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallStatusDeviceType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusDeviceType', None, FeedbackHandler)			
Command	Value	Value	Value
CallStatusType	'Video'	'Audio'	'Audio Can Escalate'
	'Forward All Call'	'Unknown'	
Qualifier Key	Qualifier Value		
'Call'	'1' – '5'		
# CallStatusType example InterfaceName.Update('CallStatusType', {'Call': '1'}) Value = InterfaceName.ReadStatus('CallStatusType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)			
Command	Value		
ConnectedDeviceMAC	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 – 10		
# ConnectedDeviceMAC example Value = InterfaceName.ReadStatus('ConnectedDeviceMAC', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceMAC', None, FeedbackHandler)			
Command	Value		
ConnectedDeviceName	'String'		
Qualifier Key	Qualifier Value		

Global Scriptor Module Communication Sheet

Revision: 10/28/2021

'Button'	1 – 10		
# ConnectedDeviceName example Value = InterfaceName.ReadStatus('ConnectedDeviceName', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceName', None, FeedbackHandler)			
Command ConnectedDeviceType	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 – 10		
# ConnectedDeviceType example Value = InterfaceName.ReadStatus('ConnectedDeviceType', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceType', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command DisplayMode	Value 'Dual' 'Auto'	Value 'Single' 'Triple Presentation Only' ³	Value 'Dual Presentation Only' 'Triple' ³
# DisplayMode example InterfaceName.Update('DisplayMode') Value = InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)			
Command DisplayName	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# DisplayName example InterfaceName.Update('DisplayName', {'Call': '1'}) Value = InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)			
Command DNSDomainName	Value 'String'		
# DNSDomainName example InterfaceName.Update('DNSDomainName') Value = InterfaceName.ReadStatus('DNSDomainName') InterfaceName.SubscribeStatus('DNSDomainName', None, FeedbackHandler)			
Command DNSServerAddress	Value 'String'		
Qualifier Key 'Server'	Qualifier Value '1' – '5'		
# DNSServerAddress example InterfaceName.Update('DNSServerAddress', {'Server': '1'}) Value = InterfaceName.ReadStatus('DNSServerAddress', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddress', None, FeedbackHandler)			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Update('DoNotDisturb') Value = InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Update('FarEndControl')			

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Value = InterfaceName.ReadStatus('FarEndControl') InterfaceName.SubscribeStatus('FarEndControl', None, FeedbackHandler)			
Command FirmwareVersion	Value 'String'		
# FirmwareVersion example InterfaceName.Update('FirmwareVersion') Value = InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)			
Command GatewayAddress	Value 'String'		
# GatewayAddress example InterfaceName.Update('GatewayAddress') Value = InterfaceName.ReadStatus('GatewayAddress') InterfaceName.SubscribeStatus('GatewayAddress', None, FeedbackHandler)			
Command H323GatekeeperAddress	Value 'String'		
# H323GatekeeperAddress example InterfaceName.Update('H323GatekeeperAddress') Value = InterfaceName.ReadStatus('H323GatekeeperAddress') InterfaceName.SubscribeStatus('H323GatekeeperAddress', None, FeedbackHandler)			
Command H323GatekeeperStatus	Value 'Required' 'Authenticating' 'Registered'	Value 'Discovering' 'Authenticated' 'Inactive'	Value 'Discovered' 'Registering' 'Rejected'
# H323GatekeeperStatus example InterfaceName.Update('H323GatekeeperStatus') Value = InterfaceName.ReadStatus('H323GatekeeperStatus') InterfaceName.SubscribeStatus('H323GatekeeperStatus', None, FeedbackHandler)			
Command H323AliasIE164Status	Value 'String'		
# H323AliasIE164Status example InterfaceName.Update('H323AliasIE164Status') Value = InterfaceName.ReadStatus('H323AliasIE164Status') InterfaceName.SubscribeStatus('H323AliasIE164Status', None, FeedbackHandler)			
Command H323AliasIDStatus			
# H323AliasIDStatus example InterfaceName.Update('H323AliasIDStatus') Value = InterfaceName.ReadStatus('H323AliasIDStatus') InterfaceName.SubscribeStatus('H323AliasIDStatus', None, FeedbackHandler)			
Command Input	Value '1' – '2' ² 'Composed'	Value '1' – '3' ¹	Value '1' – '6' ³
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command InputHDMILevel	Value -24 to 0 in steps of 1 dB		
Qualifier Key 'Input'	Qualifier Value 'HDMI' ²	Qualifier Value 'HDMI 2' – 'HDMI 3' ¹	Qualifier Value 'HDMI 1' - 'HDMI 5' ³
# InputHDMILevel example InterfaceName.Update('InputHDMILevel', {'Input': 'HDMI'}) Value = InterfaceName.ReadStatus('InputHDMILevel', {'Input': 'HDMI'}) InterfaceName.SubscribeStatus('InputHDMILevel', None, FeedbackHandler)			
Command InputMicLevel	Value 0 to 26 in steps of 1 dB ²	Value 0 to 24 in steps of 1 dB ¹	Value 0 to 70 in steps of 1 dB ³

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ^{1,3}	Qualifier Value 'Microphone 2' - 'Microphone 3'	Qualifier Value 'Microphone 4' - 'Microphone 8' ³
# InputMicLevel example InterfaceName.Update('InputMicLevel', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMicLevel', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMicLevel', None, FeedbackHandler)			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'Microphone 1' ^{1,3} 'HDMI 1' ³ 'Internal Microphone' ²	Qualifier Value 'Microphone 2' - 'Microphone 3' 'HDMI 2' - 'HDMI 3' ^{1,3} 'HDMI' ²	Qualifier Value 'Microphone 4' - 'Microphone 8' ³ 'HDMI 4' - 'HDMI 5' ³
# InputMute example InterfaceName.Update('InputMute', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMute', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMute', None, FeedbackHandler)			
Command InputSignal	Value 'True'	Value 'False'	Value 'Unknown'
Qualifier Key 'Input'	Qualifier Value '1' - '2' ²	Qualifier Value '1' - '3' ¹	Qualifier Value '1' - '6' ³
# InputSignal example InterfaceName.Update('InputSignal', {'Input': '1'}) Value = InterfaceName.ReadStatus('InputSignal', {'Input': '1'}) InterfaceName.SubscribeStatus('InputSignal', None, FeedbackHandler)			
Command InputVideoMute	Value 'On'	Value 'Off'	
# InputVideoMute example InterfaceName.Update('InputVideoMute') Value = InterfaceName.ReadStatus('InputVideoMute') InterfaceName.SubscribeStatus('InputVideoMute', None, FeedbackHandler)			
Command IPAddress	Value 'String'		
# IPAddress example InterfaceName.Update('IPAddress') Value = InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)			
Command MACAddress	Value 'String'		
# MACAddress example InterfaceName.Update('MACAddress') Value = InterfaceName.ReadStatus('MACAddress') InterfaceName.SubscribeStatus('MACAddress', None, FeedbackHandler)			
Command MacroAutoStart	Value 'On'	Value 'Off'	
# MacroAutoStart example InterfaceName.Update('MacroAutoStart') Value = InterfaceName.ReadStatus('MacroAutoStart') InterfaceName.SubscribeStatus('MacroAutoStart', None, FeedbackHandler)			
Command MacroMode	Value 'On'	Value 'Off'	
# MacroMode example InterfaceName.Update('MacroMode') Value = InterfaceName.ReadStatus('MacroMode') InterfaceName.SubscribeStatus('MacroMode', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Command MeetingAgenda ⁴	Value 'String'
Qualifier Key 'Meeting'	Qualifier Value '1' – '5'
# MeetingAgenda example Value = InterfaceName.ReadStatus('MeetingAgenda', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingAgenda', None, FeedbackHandler)	
Command MeetingDialMode ⁴	Value 'String'
Qualifier Key 'Meeting'	Qualifier Value '1' – '5'
# MeetingDialMode example Value = InterfaceName.ReadStatus('MeetingDialMode', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingDialMode', None, FeedbackHandler)	
Command MeetingDialNumber ⁴	Value 'String'
Qualifier Key 'Meeting'	Qualifier Value '1' – '5'
# MeetingDialNumber example Value = InterfaceName.ReadStatus('MeetingDialNumber', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingDialNumber', None, FeedbackHandler)	
Command MeetingEndTime ⁴	Value 'String'
Qualifier Key 'Meeting'	Qualifier Value '1' – '5'
# MeetingEndTime example Value = InterfaceName.ReadStatus('MeetingEndTime', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingEndTime', None, FeedbackHandler)	
Command MeetingOrganizer ⁴	Value 'String'
Qualifier Key 'Meeting'	Qualifier Value '1' – '5'
# MeetingOrganizer example Value = InterfaceName.ReadStatus('MeetingOrganizer', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingOrganizer', None, FeedbackHandler)	
Command MeetingStartTime ⁴	Value 'String'
Qualifier Key 'Meeting'	Qualifier Value '1' – '5'
# MeetingStartTime example Value = InterfaceName.ReadStatus('MeetingStartTime', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingStartTime', None, FeedbackHandler)	
Command MeetingTitle ⁴	Value 'String'
Qualifier Key 'Meeting'	Qualifier Value '1' – '5'
# MeetingTitle example Value = InterfaceName.ReadStatus('MeetingTitle', {'Meeting': '1'}) InterfaceName.SubscribeStatus('MeetingTitle', None, FeedbackHandler)	
Command MicrophonesMute	Value 'On' Value 'Off'
# MicrophonesMute example InterfaceName.Update('MicrophonesMute') Value = InterfaceName.ReadStatus('MicrophonesMute') InterfaceName.SubscribeStatus('MicrophonesMute', None, FeedbackHandler)	

Global Scriptor Module Communication Sheet

Revision: 10/28/2021

Command	Value	Value	
NetworkAssignment	'Static'	'DHCP'	
<pre># NetworkAssignment example InterfaceName.Update('NetworkAssignment') Value = InterfaceName.ReadStatus('NetworkAssignment') InterfaceName.SubscribeStatus('NetworkAssignment', None, FeedbackHandler)</pre>			
Command	Value		
OutputLevel ³	-24 to 0 in steps of 1 dB		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Output'	'Line 1'	'Line 2'	'Line 3'
	'Line 4'	'Line 5'	'Line 6'
<pre># OutputLevel example InterfaceName.Update('OutputLevel', {'Output': 'Line 1'}) Value = InterfaceName.ReadStatus('OutputLevel', {'Output': 'Line 1'}) InterfaceName.SubscribeStatus('OutputLevel', None, FeedbackHandler)</pre>			
Command	Value		
PeopleCountCurrent	'String'		
<pre># PeopleCountCurrent example InterfaceName.Update('PeopleCountCurrent') Value = InterfaceName.ReadStatus('PeopleCountCurrent') InterfaceName.SubscribeStatus('PeopleCountCurrent', None, FeedbackHandler)</pre>			
Command	Value	Value	
PeopleCountOutOfCall	'On'	'Off'	
<pre># PeopleCountOutOfCall example InterfaceName.Update('PeopleCountOutOfCall') Value = InterfaceName.ReadStatus('PeopleCountOutOfCall') InterfaceName.SubscribeStatus('PeopleCountOutOfCall', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
PeoplePresence	'Yes'	'No'	'Unknown'
<pre># PeoplePresence example InterfaceName.Update('PeoplePresence') Value = InterfaceName.ReadStatus('PeoplePresence') InterfaceName.SubscribeStatus('PeoplePresence', None, FeedbackHandler)</pre>			
Command	Value	Value	
PeoplePresenceDetector	'On'	'Off'	
<pre># PeoplePresenceDetector example InterfaceName.Update('PeoplePresenceDetector') Value = InterfaceName.ReadStatus('PeoplePresenceDetector') InterfaceName.SubscribeStatus('PeoplePresenceDetector', None, FeedbackHandler)</pre>			
Command	Value		
PhonebookFolderIDSearchResult	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 – 10		
<pre># PhonebookFolderIDSearchResult example Value = InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)</pre>			
Command	Value		
PhonebookSearchResult	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 – 10		
<pre># PhonebookSearchResult example Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
PresentationModeStatus	'Sending'	'Receiving'	'Off'

Global Scripter Module Communication Sheet

Revision: 10/28/2021

<pre># PresentationModeStatus example InterfaceName.Update('PresentationModeStatus') Value = InterfaceName.ReadStatus('PresentationModeStatus') InterfaceName.SubscribeStatus('PresentationModeStatus', None, FeedbackHandler)</pre>			
Command PresentationSendingModeStatus	Value 'Local and Remote'	Value 'Local Only'	Value 'Off'
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
<pre># PresentationSendingModeStatus example InterfaceName.Update('PresentationSendingModeStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSendingModeStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSendingModeStatus', None, FeedbackHandler)</pre>			
Command PresentationSourceStatus	Value '1' – '2' ² 'Off'	Value '1' – '3' ¹	Value '1' – '6' ³
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
<pre># PresentationSourceStatus example InterfaceName.Update('PresentationSourceStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSourceStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSourceStatus', None, FeedbackHandler)</pre>			
Command PresenterTrackControl ^{1,3}	Value 'On'	Value 'Off'	
<pre># PresenterTrackControl example InterfaceName.Update('PresenterTrackControl') Value = InterfaceName.ReadStatus('PresenterTrackControl') InterfaceName.SubscribeStatus('PresenterTrackControl', None, FeedbackHandler)</pre>			
Command PresenterTrackMode ^{1,3}	Value 'Off' 'Background'	Value 'Follow' 'Setup'	Value 'Diagnostic' 'Persistent'
<pre># PresenterTrackMode example InterfaceName.Update('PresenterTrackMode') Value = InterfaceName.ReadStatus('PresenterTrackMode') InterfaceName.SubscribeStatus('PresenterTrackMode', None, FeedbackHandler)</pre>			
Command PresenterTrackPresenterDetectedStatus ^{1,3}	Value 'On'	Value 'Off'	
<pre># PresenterTrackPresenterDetectedStatus example InterfaceName.Update('PresenterTrackPresenterDetectedStatus') Value = InterfaceName.ReadStatus('PresenterTrackPresenterDetectedStatus') InterfaceName.SubscribeStatus('PresenterTrackPresenterDetectedStatus', None, FeedbackHandler)</pre>			
Command RemoteNumber	Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
<pre># RemoteNumber example InterfaceName.Update('RemoteNumber', {'Call': '1'}) Value = InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'}) InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)</pre>			
Command SelfView	Value 'On'	Value 'Off'	
<pre># SelfView example InterfaceName.Update('SelfView') Value = InterfaceName.ReadStatus('SelfView') InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)</pre>			

Global Scriptor Module Communication Sheet

Revision: 10/28/2021

Command SelfViewDefaultFullscreen Mode	Value 'On'	Value 'Off'	Value 'Current'
<pre># SelfViewDefaultFullscreenMode example InterfaceName.Update('SelfViewDefaultFullscreenMode') Value = InterfaceName.ReadStatus('SelfViewDefaultFullscreenMode') InterfaceName.SubscribeStatus('SelfViewDefaultFullscreenMode', None, FeedbackHandler)</pre>			
Command SelfViewFullscreenMode	Value 'On'	Value 'Off'	
<pre># SelfViewFullscreenMode example InterfaceName.Update('SelfViewFullscreenMode') Value = InterfaceName.ReadStatus('SelfViewFullscreenMode') InterfaceName.SubscribeStatus('SelfViewFullscreenMode', None, FeedbackHandler)</pre>			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
<pre># SelfViewPosition example InterfaceName.Update('SelfViewPosition') Value = InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)</pre>			
Command SIPDisplayNameStatus	Value 'String'		
<pre># SIPDisplayNameStatus example InterfaceName.Update('SIPDisplayNameStatus') Value = InterfaceName.ReadStatus('SIPDisplayNameStatus') InterfaceName.SubscribeStatus('SIPDisplayNameStatus', None, FeedbackHandler)</pre>			
Command SIPRegistrationStatus	Value 'Deregistering' 'Registered'	Value 'Failed' 'Registering'	Value 'Inactive'
<pre># SIPRegistrationStatus example InterfaceName.Update('SIPRegistrationStatus') Value = InterfaceName.ReadStatus('SIPRegistrationStatus') InterfaceName.SubscribeStatus('SIPRegistrationStatus', None, FeedbackHandler)</pre>			
Command SIPURIStatus	Value 'String'		
<pre># SIPURIStatus example InterfaceName.Update('SIPURIStatus') Value = InterfaceName.ReadStatus('SIPURIStatus') InterfaceName.SubscribeStatus('SIPURIStatus', None, FeedbackHandler)</pre>			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
<pre># SpeakerTrackControl example InterfaceName.Update('SpeakerTrackControl') Value = InterfaceName.ReadStatus('SpeakerTrackControl') InterfaceName.SubscribeStatus('SpeakerTrackControl', None, FeedbackHandler)</pre>			
Command SpeakerTrackMode	Value 'Auto'	Value 'Off'	
<pre># SpeakerTrackMode example InterfaceName.Update('SpeakerTrackMode') Value = InterfaceName.ReadStatus('SpeakerTrackMode') InterfaceName.SubscribeStatus('SpeakerTrackMode', None, FeedbackHandler)</pre>			
Command Standby	Value 'Activate' 'Entering Standby'	Value 'Deactivate'	Value 'Halfwake'

Global Scripter Module Communication Sheet

Revision: 10/28/2021

<pre># Standby example InterfaceName.Update('Standby') Value = InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)</pre>		
Command	Value	
SubnetMask	'String'	
<pre># SubnetMask example InterfaceName.Update('SubnetMask') Value = InterfaceName.ReadStatus('SubnetMask') InterfaceName.SubscribeStatus('SubnetMask', None, FeedbackHandler)</pre>		
Command	Value	
SystemTimeStatus	'String'	
Qualifier Key	Qualifier Value	Qualifier Value
'Type'	'Date'	'Time'
<pre># SystemTimeStatus example InterfaceName.Update('SystemTimeStatus', {'Type': 'Date'}) Value = InterfaceName.ReadStatus('SystemTimeStatus', {'Type': 'Date'}) InterfaceName.SubscribeStatus('SystemTimeStatus', None, FeedbackHandler)</pre>		
Command	Value	
SystemUnitNameStatus	'String'	
<pre># SystemUnitNameStatus example InterfaceName.Update('SystemUnitNameStatus') Value = InterfaceName.ReadStatus('SystemUnitNameStatus') InterfaceName.SubscribeStatus('SystemUnitNameStatus', None, FeedbackHandler)</pre>		
Command	Value	
Volume	0 to 100 in steps of 1	
<pre># Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>		

¹ Only supported for Webex Room Kit Plus model

² Only supported for Webex Room Kit model

³ Only supported for Webex Room Kit Pro model

⁴ Requires "MeetingRefresh" command to populate.

⁵ Requires "CallStatus" command to populate.

Cable and Adapter Requirements

Captive Screw to USB Type-A RS-232 Serial Cable Adapter

Notes for the Device


For the module to work, the “Require passphrase change on next user sign in” checkbox under Security → Users → <USERNAME> must be unchecked within the devices embedded webpage.

Serial communication

Port Type: RS-232
Baud Rate: 115200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

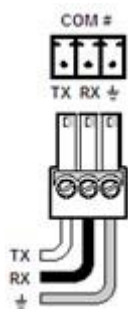

Please contact the manufacturer for the pin assignments diagram and connector type.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet (SSH)

Default Port: 22

Logon Credentials Supported: Yes

Default Username: admin

Default Password:

Multi-Connection Capabilities: Yes

Port Changeability: No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

- Password is required for SSH communication to work. "SSH Mode" must be set to "On" by an admin to have open communication with the module.
- For the module to work, the "Require passphrase change on next user sign in" checkbox under Security → Users → <USERNAME> must be unchecked within the devices embedded webpage.

Appendix A. Set Commands

Audio Output Off Output HDMI	xConfiguration Audio Output HDMI 1 Mode:Off\x0D
Audio Output Off Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:Off\x0D
Audio Output Off Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:Off\x0D
Audio Output Off Output HDMI 3	xConfiguration Audio Output HDMI 3 Mode:Off\x0D
Audio Output Off Output Internal Speaker	xConfiguration Audio Output InternalSpeaker Mode:Off\x0D
Audio Output Off Output Line	xConfiguration Audio Output Line 1 Mode:Off\x0D
Audio Output Off Output Line 1	xConfiguration Audio Output Line 1 Mode:Off\x0D
Audio Output Off Output Line 2	xConfiguration Audio Output Line 2 Mode:Off\x0D
Audio Output Off Output Line 3	xConfiguration Audio Output Line 3 Mode:Off\x0D
Audio Output Off Output Line 4	xConfiguration Audio Output Line 4 Mode:Off\x0D
Audio Output Off Output Line 5	xConfiguration Audio Output Line 5 Mode:Off\x0D
Audio Output Off Output Line 6	xConfiguration Audio Output Line 6 Mode:Off\x0D
Audio Output On Output HDMI	xConfiguration Audio Output HDMI 1 Mode:On\x0D
Audio Output On Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode:On\x0D
Audio Output On Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode:On\x0D
Audio Output On Output HDMI 3	xConfiguration Audio Output HDMI 3 Mode:On\x0D
Audio Output On Output Internal Speaker	xConfiguration Audio Output InternalSpeaker Mode:On\x0D
Audio Output On Output Line	xConfiguration Audio Output Line 1 Mode:On\x0D
Audio Output On Output Line 1	xConfiguration Audio Output Line 1 Mode:On\x0D
Audio Output On Output Line 2	xConfiguration Audio Output Line 2 Mode:On\x0D
Audio Output On Output Line 3	xConfiguration Audio Output Line 3 Mode:On\x0D
Audio Output On Output Line 4	xConfiguration Audio Output Line 4 Mode:On\x0D
Audio Output On Output Line 5	xConfiguration Audio Output Line 5 Mode:On\x0D
Audio Output On Output Line 6	xConfiguration Audio Output Line 6 Mode:On\x0D
Audio Output Ultrasound Only Output Internal Speaker	xConfiguration Audio Output InternalSpeaker Mode:UltrasoundOnly\x0D
Audio Output Ultrasound Only Output Line	xConfiguration Audio Output Line 1 Mode:UltrasoundOnly\x0D
Auto Answer Off	xConfiguration Conference AutoAnswer Mode: Off\x0D
Auto Answer On	xConfiguration Conference AutoAnswer Mode: On\x0D
Call Authentication Response Command None Call Not Specified Participant Role Guest No Pin	xCommand Conference Call AuthenticationResponse ParticipantRole: Guest\x0D
Call Authentication Response Command None Call Not Specified Participant Role Host Pin 1234	xCommand Conference Call AuthenticationResponse ParticipantRole: Host Pin: 1234\x0D
Call Authentication Response Command None Call Not Specified Participant Role Panelist No Pin	xCommand Conference Call AuthenticationResponse ParticipantRole: Panelist\x0D
Call Setup Mode Direct	xConfiguration H323 CallSetup Mode: Direct\x0D
Call Setup Mode Gatekeeper	xConfiguration H323 CallSetup Mode: Gatekeeper\x0D
Camera Focus Far	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 1	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 7	xCommand Camera Ramp CameraId:7 Focus:Far\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Camera Focus Near	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 1	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 7	xCommand Camera Ramp CameraId:7 Focus:Near\x0D
Camera Focus Stop	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 1	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 7	xCommand Camera Ramp CameraId:7 Focus:Stop\x0D
Camera Pan Left Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Left Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:15\x0D
Camera Pan Left Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Right Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Right Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:15\x0D
Camera Pan Right Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Preset Recall 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset Recall 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Save 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 7	xCommand Camera Preset Store PresetId:1 CameraId:7\x0D
Camera Preset Save 35	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 1	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 7	xCommand Camera Preset Store PresetId:35 CameraId:7\x0D
Camera Tilt Down Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Camera Tilt Down Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Speed 15	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Up Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Zoom In Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom Out Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom: Stop\x0D
Camera Zoom Stop Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D

Global Scriptor Module Communication Sheet

Revision: 10/28/2021

Camera Zoom Stop Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Connected Device Update None	xStatus Peripherals ConnectedDevice\x0D
Display Mode Auto	xConfiguration Video Monitors: Auto\x0D
Display Mode Dual	xConfiguration Video Monitors: Dual\x0D
Display Mode Dual Presentation Only	xConfiguration Video Monitors: DualPresentationOnly\x0D
Display Mode Single	xConfiguration Video Monitors: Single\x0D
Display Mode Triple	xConfiguration Video Monitors: Triple\x0D
Display Mode Triple Presentation Only	xConfiguration Video Monitors: TriplePresentationOnly\x0D
DNS Domain Name Command None	xConfiguration Network 1 DNS Domain Name: DNS\x0D
DNS Server Address Command None	xConfiguration Network 1 DNS Server 1 Address: DNS\x0D
Do Not Disturb Active	xCommand Conference DoNotDisturb Activate\x0D
Do Not Disturb Inactive	xCommand Conference DoNotDisturb Deactivate\x0D
DTMF #	xCommand Call DTMFSend DTMFString:#\x0D
DTMF *	xCommand Call DTMFSend DTMFString:*\x0D
DTMF 0	xCommand Call DTMFSend DTMFString:0\x0D
DTMF 9	xCommand Call DTMFSend DTMFString:9\x0D
Far End Camera Pan/Tilt Down	xCommand Call FarEndControl Camera Move Value:Down\x0D
Far End Camera Pan/Tilt Left	xCommand Call FarEndControl Camera Move Value:Left\x0D
Far End Camera Pan/Tilt Right	xCommand Call FarEndControl Camera Move Value:Right\x0D
Far End Camera Pan/Tilt Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Camera Pan/Tilt Up	xCommand Call FarEndControl Camera Move Value:Up\x0D
Far End Camera Preset Recall 1	xCommand Call FarEndControl RoomPreset Activate:1\x0D
Far End Camera Preset Recall 15	xCommand Call FarEndControl RoomPreset Activate:15\x0D
Far End Camera Source 0	xCommand Call FarEndControl Source Select SourceId:0\x0D
Far End Camera Source 15	xCommand Call FarEndControl Source Select SourceId:15\x0D
Far End Camera Zoom In	xCommand Call FarEndControl Camera Move Value:ZoomIn\x0D
Far End Camera Zoom Out	xCommand Call FarEndControl Camera Move Value:ZoomOut\x0D
Far End Camera Zoom Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Control Off	xConfiguration Conference FarEndControl Mode: Off\x0D
Far End Control On	xConfiguration Conference FarEndControl Mode: On\x0D
H323 Gatekeeper Address Command None	xConfiguration H323 Gatekeeper Address: H323\x0D
H323Alias E164 Command None	xConfiguration H323 H323Alias E164: H323\x0D
H323Alias ID Command None	xConfiguration H323 H323Alias ID: H323\x0D
H323Profile Authentication LoginName Command None	xConfiguration H323 Authentication LoginName: H323\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

H323Profile Authentication Password Command None	xConfiguration H323 Authentication Password: H323\x0D
Hook Accept Call Type Audio Protocol Auto	xCommand Call Accept\x0D
Hook Accept Call Type Audio Protocol H320	xCommand Call Accept\x0D
Hook Accept Call Type Audio Protocol H323	xCommand Call Accept\x0D
Hook Accept Call Type Audio Protocol SIP	xCommand Call Accept\x0D
Hook Accept Call Type Audio Protocol Spark	xCommand Call Accept\x0D
Hook Accept Call Type Auto Protocol Auto	xCommand Call Accept\x0D
Hook Accept Call Type Auto Protocol H320	xCommand Call Accept\x0D
Hook Accept Call Type Auto Protocol H323	xCommand Call Accept\x0D
Hook Accept Call Type Auto Protocol SIP	xCommand Call Accept\x0D
Hook Accept Call Type Auto Protocol Spark	xCommand Call Accept\x0D
Hook Accept Call Type Video Protocol Auto	xCommand Call Accept\x0D
Hook Accept Call Type Video Protocol H320	xCommand Call Accept\x0D
Hook Accept Call Type Video Protocol H323	xCommand Call Accept\x0D
Hook Accept Call Type Video Protocol SIP	xCommand Call Accept\x0D
Hook Accept Call Type Video Protocol Spark	xCommand Call Accept\x0D
Hook Disconnect All Call Type Audio Protocol Auto	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Audio Protocol H320	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Audio Protocol H323	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Audio Protocol SIP	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Audio Protocol Spark	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Auto Protocol Auto	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Auto Protocol H320	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Auto Protocol H323	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Auto Protocol SIP	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Auto Protocol Spark	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Video Protocol Auto	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Video Protocol H320	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Video Protocol H323	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Video Protocol SIP	xCommand Call Disconnect \x0D
Hook Disconnect All Call Type Video Protocol Spark	xCommand Call Disconnect \x0D
Hook Reject Call Type Audio Protocol Auto	xCommand Call Reject\x0D
Hook Reject Call Type Audio Protocol H320	xCommand Call Reject\x0D
Hook Reject Call Type Audio Protocol H323	xCommand Call Reject\x0D
Hook Reject Call Type Audio Protocol SIP	xCommand Call Reject\x0D
Hook Reject Call Type Audio Protocol Spark	xCommand Call Reject\x0D
Hook Reject Call Type Auto Protocol Auto	xCommand Call Reject\x0D
Hook Reject Call Type Auto Protocol H320	xCommand Call Reject\x0D
Hook Reject Call Type Auto Protocol H323	xCommand Call Reject\x0D
Hook Reject Call Type Auto Protocol SIP	xCommand Call Reject\x0D
Hook Reject Call Type Auto Protocol Spark	xCommand Call Reject\x0D
Hook Reject Call Type Video Protocol Auto	xCommand Call Reject\x0D
Hook Reject Call Type Video Protocol H320	xCommand Call Reject\x0D
Hook Reject Call Type Video Protocol H323	xCommand Call Reject\x0D

Global Scriptor Module Communication Sheet

Revision: 10/28/2021

Hook Reject Call Type Video Protocol SIP	xCommand Call Reject\x0D
Hook Reject Call Type Video Protocol Spark	xCommand Call Reject\x0D
Input 1	xCommand Video Input SetMainVideoSource ConnectorId: 1\x0D
Input 2	xCommand Video Input SetMainVideoSource ConnectorId: 2\x0D
Input 3	xCommand Video Input SetMainVideoSource ConnectorId: 3\x0D
Input 6	xCommand Video Input SetMainVideoSource ConnectorId: 6\x0D
Input HDMI Level 0 Input HDMI	xConfiguration Audio Input HDMI 1 Level:0\x0D
Input HDMI Level 0 Input HDMI 1	xConfiguration Audio Input HDMI 1 Level:0\x0D
Input HDMI Level 0 Input HDMI 2	xConfiguration Audio Input HDMI 2 Level:0\x0D
Input HDMI Level 0 Input HDMI 3	xConfiguration Audio Input HDMI 3 Level:0\x0D
Input HDMI Level 0 Input HDMI 4	xConfiguration Audio Input HDMI 4 Level:0\x0D
Input HDMI Level 0 Input HDMI 5	xConfiguration Audio Input HDMI 5 Level:0\x0D
Input HDMI Level -24 Input HDMI	xConfiguration Audio Input HDMI 1 Level:-24\x0D
Input HDMI Level -24 Input HDMI 1	xConfiguration Audio Input HDMI 1 Level:-24\x0D
Input HDMI Level -24 Input HDMI 2	xConfiguration Audio Input HDMI 2 Level:-24\x0D
Input HDMI Level -24 Input HDMI 3	xConfiguration Audio Input HDMI 3 Level:-24\x0D
Input HDMI Level -24 Input HDMI 4	xConfiguration Audio Input HDMI 4 Level:-24\x0D
Input HDMI Level -24 Input HDMI 5	xConfiguration Audio Input HDMI 5 Level:-24\x0D
Input Mic Level 0 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:0\x0D
Input Mic Level 0 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:0\x0D
Input Mic Level 0 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:0\x0D
Input Mic Level 0 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:0\x0D
Input Mic Level 0 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:0\x0D
Input Mic Level 0 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:0\x0D
Input Mic Level 0 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:0\x0D
Input Mic Level 0 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:0\x0D
Input Mic Level 24 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:24\x0D
Input Mic Level 24 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:24\x0D
Input Mic Level 24 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:24\x0D
Input Mic Level 26 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:26\x0D
Input Mic Level 26 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:26\x0D
Input Mic Level 70 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:70\x0D
Input Mic Level 70 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:70\x0D
Input Mic Level 70 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:70\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Input Mic Level 70 Input Microphone 4	xConfiguration Audio Input Microphone 4 Level:70\x0D
Input Mic Level 70 Input Microphone 5	xConfiguration Audio Input Microphone 5 Level:70\x0D
Input Mic Level 70 Input Microphone 6	xConfiguration Audio Input Microphone 6 Level:70\x0D
Input Mic Level 70 Input Microphone 7	xConfiguration Audio Input Microphone 7 Level:70\x0D
Input Mic Level 70 Input Microphone 8	xConfiguration Audio Input Microphone 8 Level:70\x0D
Input Mute Off Input HDMI	xConfiguration Audio Input HDMI 1 Mode:On\x0D
Input Mute Off Input HDMI 1	xConfiguration Audio Input HDMI 1 Mode:On\x0D
Input Mute Off Input HDMI 2	xConfiguration Audio Input HDMI 2 Mode:On\x0D
Input Mute Off Input HDMI 3	xConfiguration Audio Input HDMI 3 Mode:On\x0D
Input Mute Off Input HDMI 4	xConfiguration Audio Input HDMI 4 Mode:On\x0D
Input Mute Off Input HDMI 5	xConfiguration Audio Input HDMI 5 Mode:On\x0D
Input Mute Off Input Internal Microphone	xConfiguration Audio Input Microphone 1 Mode:On\x0D
Input Mute Off Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:On\x0D
Input Mute Off Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:On\x0D
Input Mute Off Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:On\x0D
Input Mute Off Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:On\x0D
Input Mute Off Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:On\x0D
Input Mute Off Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:On\x0D
Input Mute Off Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:On\x0D
Input Mute Off Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:On\x0D
Input Mute On Input HDMI	xConfiguration Audio Input HDMI 1 Mode:Off\x0D
Input Mute On Input HDMI 1	xConfiguration Audio Input HDMI 1 Mode:Off\x0D
Input Mute On Input HDMI 2	xConfiguration Audio Input HDMI 2 Mode:Off\x0D
Input Mute On Input HDMI 3	xConfiguration Audio Input HDMI 3 Mode:Off\x0D
Input Mute On Input HDMI 4	xConfiguration Audio Input HDMI 4 Mode:Off\x0D
Input Mute On Input HDMI 5	xConfiguration Audio Input HDMI 5 Mode:Off\x0D
Input Mute On Input Internal Microphone	xConfiguration Audio Input Microphone 1 Mode:Off\x0D
Input Mute On Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:Off\x0D
Input Mute On Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:Off\x0D
Input Mute On Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:Off\x0D
Input Mute On Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode:Off\x0D
Input Mute On Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode:Off\x0D
Input Mute On Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode:Off\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Input Mute On Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode:Off\x0D
Input Mute On Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode:Off\x0D
Input Video Mute Off	xCommand Video Input MainVideo Unmute\x0D
Input Video Mute On	xCommand Video Input MainVideo Mute\x0D
IPv4 Address Command None	xConfiguration Network 1 IPv4 Address: IPv4\x0D
IPv4 Gateway Command None	xConfiguration Network 1 IPv4 Gateway: IPv4\x0D
IPv4 Subnet Mask Command None	xConfiguration Network 1 IPv4 SubnetMask: IPv4\x0D
Layout Set Auto Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:auto\x0D
Layout Set Auto Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:auto\x0D
Layout Set Custom Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:custom\x0D
Layout Set Custom Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:custom\x0D
Layout Set Equal Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:equal\x0D
Layout Set Equal Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:equal\x0D
Layout Set Overlay Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:overlay\x0D
Layout Set Overlay Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:overlay\x0D
Layout Set Prominent Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:prominent\x0D
Layout Set Prominent Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:prominent\x0D
Layout Set Single Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:single\x0D
Layout Set Single Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:single\x0D
Macro Activate Name testString	xCommand Macros Macro Activate Name: "testString"\x0D
Macro Auto Start Off	xConfiguration Macros AutoStart: Off\x0D
Macro Auto Start On	xConfiguration Macros AutoStart: On\x0D
Macro Deactivate Name testString	xCommand Macros Macro Deactivate Name: "testString"\x0D
Macro Mode Off	xConfiguration Macros Mode: Off\x0D
Macro Mode On	xConfiguration Macros Mode: On\x0D
Microphones Mute Off	xCommand Audio Microphones Unmute\x0D
Microphones Mute On	xCommand Audio Microphones Mute\x0D
Output Level 0 Output Line 1	xConfiguration Audio Output Line 1 Level:0\x0D
Output Level 0 Output Line 2	xConfiguration Audio Output Line 2 Level:0\x0D
Output Level 0 Output Line 3	xConfiguration Audio Output Line 3 Level:0\x0D
Output Level 0 Output Line 4	xConfiguration Audio Output Line 4 Level:0\x0D
Output Level 0 Output Line 5	xConfiguration Audio Output Line 5 Level:0\x0D
Output Level 0 Output Line 6	xConfiguration Audio Output Line 6 Level:0\x0D
Output Level -24 Output Line 1	xConfiguration Audio Output Line 1 Level:- 24\x0D
Output Level -24 Output Line 2	xConfiguration Audio Output Line 2 Level:- 24\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Output Level -24 Output Line 3	xConfiguration Audio Output Line 3 Level:-24\x0D
Output Level -24 Output Line 4	xConfiguration Audio Output Line 4 Level:-24\x0D
Output Level -24 Output Line 5	xConfiguration Audio Output Line 5 Level:-24\x0D
Output Level -24 Output Line 6	xConfiguration Audio Output Line 6 Level:-24\x0D
People Count Out of Call Off	xConfiguration RoomAnalytics PeopleCountOutOfCall: Off\x0D
People Count Out of Call On	xConfiguration RoomAnalytics PeopleCountOutOfCall: On\x0D
People Presence Detector Off	xConfiguration RoomAnalytics PeoplePresenceDetector: Off\x0D
People Presence Detector On	xConfiguration RoomAnalytics PeoplePresenceDetector: On\x0D
Presentation ExternalSource Select Command None	xCommand UserInterface Presentation ExternalSource Select SourceIdentifier: "Source Value"\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 1 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 2 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 3 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 4 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 5 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:6\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:6\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:6\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:6\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Connector Id 6 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:5\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:5\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:5 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:5\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:5\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:6\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:6\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:6\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:6 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:6\x0D
Presentation Start Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 1 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 2 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 3 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 4 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 5 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:6\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:6\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:6\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:6\x0D
Presentation Start Sending Mode Local Only Video Input Source Connector Id 6 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly\x0D
Presentation Start Sending Mode Local Only Video Input Source Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 1 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 2 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 3 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 4 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:5\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:5\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:5\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:5 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:5\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 5 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:6\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:6\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance New Layout Equal	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance New Layout Not Specified	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:6\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance New Layout Prominent	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance Not Specified Layout Equal	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance Not Specified Layout Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:6\x0D
Presentation Start Sending Mode Local Only Video Input Source Presentation Source 6 Instance Not Specified Layout Prominent	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:1\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:1\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:1\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:1 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:1\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 1 Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:1 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:2\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:2\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:2 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:2\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:2 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:2\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 2 Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:2 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:3\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:3\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:3 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:3\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:3 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:3\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 3 Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:3 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:4\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:4\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:4\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:4 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:4\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 4 Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:4 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:5\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:5\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:5\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:5 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:5\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 5 Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:5 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 ConnectorId:6\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 ConnectorId:6\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 ConnectorId:6 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance New Layout Equal	xCommand Presentation Start Instance:New ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance New Layout Not Specified	xCommand Presentation Start Instance:New ConnectorId:6\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance New Layout Prominent	xCommand Presentation Start Instance:New ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance Not Specified Layout Equal	xCommand Presentation Start ConnectorId:6 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance Not Specified Layout Not Specified	xCommand Presentation Start ConnectorId:6\x0D
Presentation Start Sending Mode Not Specified Video Input Source Connector Id 6 Instance Not Specified Layout Prominent	xCommand Presentation Start ConnectorId:6 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance 1 Layout Equal	xCommand Presentation Start Instance:1 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance 6 Layout Equal	xCommand Presentation Start Instance:6 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance New Layout Equal	xCommand Presentation Start Instance:New Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance New Layout Not Specified	xCommand Presentation Start Instance:New\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance New Layout Prominent	xCommand Presentation Start Instance:New Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance Not Specified Layout Equal	xCommand Presentation Start Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Start\x0D
Presentation Start Sending Mode Not Specified Video Input Source Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Start Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:1\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:1\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:1\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:1 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:1\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 1 Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:1 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:2\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:2\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:2\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:2 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:2\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 2 Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:2 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:3\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:3\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:3 Layout:Prominent\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:3\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:3 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:3\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 3 Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:3 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:4\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:4\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:4 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:4\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:4 Layout:Equal\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:4\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 4 Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:4 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:5\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:5\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:5\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:5 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:5\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 5 Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:5 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 1 Layout Equal	xCommand Presentation Start Instance:1 PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 1 Layout Not Specified	xCommand Presentation Start Instance:1 PresentationSource:6\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 1 Layout Prominent	xCommand Presentation Start Instance:1 PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 6 Layout Equal	xCommand Presentation Start Instance:6 PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 6 Layout Not Specified	xCommand Presentation Start Instance:6 PresentationSource:6\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 6 Layout Prominent	xCommand Presentation Start Instance:6 PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance New Layout Equal	xCommand Presentation Start Instance:New PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance New Layout Not Specified	xCommand Presentation Start Instance:New PresentationSource:6\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance New Layout Prominent	xCommand Presentation Start Instance:New PresentationSource:6 Layout:Prominent\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance Not Specified Layout Equal	xCommand Presentation Start PresentationSource:6 Layout:Equal\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance Not Specified Layout Not Specified	xCommand Presentation Start PresentationSource:6\x0D
Presentation Start Sending Mode Not Specified Video Input Source Presentation Source 6 Instance Not Specified Layout Prominent	xCommand Presentation Start PresentationSource:6 Layout:Prominent\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Not Specified Instance 1 Layout Equal	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Not Specified Instance 6 Layout Equal	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Local and Remote Video Input Source Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 1 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 2 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 3 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 4 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:5\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:5\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:5\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:5\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:5\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:5\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:5\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:5\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 5 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:5\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:6\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:6\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:6\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:6\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:6\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:6\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:6\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:6\x0D
Presentation Stop Sending Mode Local and Remote Video Input Source Presentation Source 6 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Not Specified Instance 1 Layout Equal	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Not Specified Instance 6 Layout Equal	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Local Only Video Input Source Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Sending Mode Local Only Video Input Source Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 1 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 1 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 1 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 1 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 1 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 1 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 1 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 1 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 1 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 2 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 2 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 2 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 2 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 2 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 2 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 2 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 2 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 2 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 3 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 3 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 3 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 3 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 3 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 3 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 3 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 3 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 3 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 4 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 4 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 4 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 4 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 4 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 4 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 4 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 4 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 4 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 5 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:5\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 5 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:5\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 5 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:5\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 5 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:5\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 5 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:5\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 5 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:5\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 5 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:5\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 5 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:5\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 5 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:5\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 6 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:6\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 6 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 6 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 6 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 6 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 6 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 6 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 6 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:6\x0D
Presentation Stop Sending Mode Local Only Video Input Source Presentation Source 6 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Not Specified Instance 1 Layout Equal	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Not Specified Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Not Specified Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Not Specified Instance 6 Layout Equal	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Not Specified Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Not Specified Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Not Specified Instance Not Specified Layout Equal	xCommand Presentation Stop\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Not Specified Instance Not Specified Layout Not Specified	xCommand Presentation Stop\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Not Specified Video Input Source Not Specified Instance Not Specified Layout Prominent	xCommand Presentation Stop\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 1 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 1 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 1 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 1 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 2 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 2 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 2 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 2 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 3 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 3 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 3 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 3 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 4 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 4 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 4 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 4 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:4\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:5\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:5\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:5\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:5\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:5\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 5 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:5\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 5 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:5\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 5 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:5\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 5 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:5\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 1 Layout Equal	xCommand Presentation Stop Instance:1 PresentationSource:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 1 Layout Not Specified	xCommand Presentation Stop Instance:1 PresentationSource:6\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 1 Layout Prominent	xCommand Presentation Stop Instance:1 PresentationSource:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 6 Layout Equal	xCommand Presentation Stop Instance:6 PresentationSource:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 6 Layout Not Specified	xCommand Presentation Stop Instance:6 PresentationSource:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 6 Instance 6 Layout Prominent	xCommand Presentation Stop Instance:6 PresentationSource:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 6 Instance Not Specified Layout Equal	xCommand Presentation Stop PresentationSource:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 6 Instance Not Specified Layout Not Specified	xCommand Presentation Stop PresentationSource:6\x0D
Presentation Stop Sending Mode Not Specified Video Input Source Presentation Source 6 Instance Not Specified Layout Prominent	xCommand Presentation Stop PresentationSource:6\x0D
PresenterTrack Control Off	xConfiguration Cameras PresenterTrack Enabled: False\x0D
PresenterTrack Control On	xConfiguration Cameras PresenterTrack Enabled: True\x0D
PresenterTrack Mode Background	xCommand Cameras PresenterTrack Set Mode: Background\x0D
PresenterTrack Mode Diagnostic	xCommand Cameras PresenterTrack Set Mode: Diagnostic\x0D
PresenterTrack Mode Follow	xCommand Cameras PresenterTrack Set Mode: Follow\x0D
PresenterTrack Mode Off	xCommand Cameras PresenterTrack Set Mode: Off\x0D
PresenterTrack Mode Persistent	xCommand Cameras PresenterTrack Set Mode: Persistent\x0D
PresenterTrack Mode Setup	xCommand Cameras PresenterTrack Set Mode: Setup\x0D
PresenterTrack Presenter Detected Status On	xConfiguration Cameras PresenterTrack PresenterDetectedStatus: Enabled\r
PresenterTrack Presenter Detected Status Off	xConfiguration Cameras PresenterTrack PresenterDetectedStatus: Disabled\r
Preset Recall 1	xCommand RoomPreset Activate PresetId:1\x0D
Preset Recall 15	xCommand RoomPreset Activate PresetId:15\x0D
Preset Save 1	xCommand RoomPreset Store PresetId:1 Type:All\x0D
Preset Save 15	xCommand RoomPreset Store PresetId:15 Type:All\x0D
Reboot None	xCommand SystemUnit Boot Action:Restart\x0D
Restart Macros None	xCommand Macros Runtime Restart\x0D
Self View Off	xCommand Video Selfview Set Mode:Off\x0D
Self View On	xCommand Video Selfview Set Mode:On\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Self View Default Fullscreen Mode Current	xConfiguration Video Selfview Default FullscreenMode:Current\x0D
Self View Default Fullscreen Mode Off	xConfiguration Video Selfview Default FullscreenMode:Off\x0D
Self View Default Fullscreen Mode On	xConfiguration Video Selfview Default FullscreenMode:On\x0D
Self View Fullscreen Mode Off	xCommand Video Selfview Set FullscreenMode:Off\r
Self View Fullscreen Mode On	xCommand Video Selfview Set FullscreenMode:On\r
Self View Position Center Left	xCommand Video Selfview Set PIPPosition:CenterLeft\x0D
Self View Position Center Right	xCommand Video Selfview Set PIPPosition:CenterRight\x0D
Self View Position Lower Left	xCommand Video Selfview Set PIPPosition:LowerLeft\x0D
Self View Position Lower Right	xCommand Video Selfview Set PIPPosition:LowerRight\x0D
Self View Position Upper Center	xCommand Video Selfview Set PIPPosition:UpperCenter\x0D
Self View Position Upper Left	xCommand Video Selfview Set PIPPosition:UpperLeft\x0D
Self View Position Upper Right	xCommand Video Selfview Set PIPPosition:UpperRight\x0D
SIP Display Name Command None	xConfiguration SIP DisplayName: "SIP"\x0D
SIP URI Command None	xConfiguration SIP URI: "SIP"\x0D
Sleep Timer 1	xCommand Standby ResetTimer Delay:1\x0D
Sleep Timer 480	xCommand Standby ResetTimer Delay:480\x0D
SpeakerTrack Control Off	xCommand Cameras SpeakerTrack Deactivate\x0D
SpeakerTrack Control On	xCommand Cameras SpeakerTrack Activate\x0D
SpeakerTrack Mode Auto	xConfiguration Cameras SpeakerTrack Mode: Auto\x0D
SpeakerTrack Mode Off	xConfiguration Cameras SpeakerTrack Mode: Off\x0D
Standby Activate	xCommand Standby Activate\x0D
Standby Deactivate	xCommand Standby Deactivate\x0D
Standby Halfwake	xCommand Standby Halfwake\x0D
System Unit Name Command None	xConfiguration SystemUnit Name: System Unit Name\x0D
Volume 0	xCommand Audio Volume Set Level:0\x0D
Volume 100	xCommand Audio Volume Set Level:100\x0D

Appendix B. Update Commands

Audio Output Output HDMI	xConfiguration Audio Output HDMI 1 Mode\x0D
Audio Output Output HDMI 1	xConfiguration Audio Output HDMI 1 Mode\x0D
Audio Output Output HDMI 2	xConfiguration Audio Output HDMI 2 Mode\x0D
Audio Output Output HDMI 3	xConfiguration Audio Output HDMI 3 Mode\x0D
Audio Output Output Internal Speaker	xConfiguration Audio Output InternalSpeaker Mode\x0D
Audio Output Output Line	xConfiguration Audio Output Line 1 Mode\x0D
Audio Output Output Line 1	xConfiguration Audio Output Line 1 Mode\x0D
Audio Output Output Line 2	xConfiguration Audio Output Line 2 Mode\x0D
Audio Output Output Line 3	xConfiguration Audio Output Line 3 Mode\x0D
Audio Output Output Line 4	xConfiguration Audio Output Line 4 Mode\x0D
Audio Output Output Line 5	xConfiguration Audio Output Line 5 Mode\x0D
Audio Output Output Line 6	xConfiguration Audio Output Line 6 Mode\x0D
Auto Answer	xConfiguration Conference AutoAnswer Mode\x0D
Call Answer State Call 1	xstatus call\x0D
Call Answer State Call 5	xstatus call\x0D
Call Authentication Request Status Call 1	xStatus Conference Call 132 AuthenticationRequest\x0D
Call Authentication Request Status Call 5	xStatus Conference Call 132 AuthenticationRequest\x0D
Call Setup Mode	xConfiguration H323 CallSetup Mode\x0D
Call Status Call 1	xstatus call\x0D
Call Status Call 5	xstatus call\x0D
Call Status Device Type Call 1	xstatus call\x0D
Call Status Device Type Call 5	xstatus call\x0D
Call Status Type Call 1	xstatus call\x0D
Call Status Type Call 5	xstatus call\x0D
Display Mode	xConfiguration Video Monitors\x0D
Display Name Call 1	xstatus call\x0D
Display Name Call 5	xstatus call\x0D
DNS Domain Name	xStatus Network 1 DNS Domain Name\x0D
DNS Server Address Server 1	xStatus Network 1 DNS Server 1 Address\x0D
DNS Server Address Server 5	xStatus Network 1 DNS Server 5 Address\x0D
Do Not Disturb	xStatus Conference DoNotDisturb\x0D
Far End Control	xConfiguration Conference FarEndControl Mode\x0D
Firmware Version	xgetxml /status/standby\x0D
Gateway Address	xStatus Network 1 IPv4 Gateway\x0D
H323 Gatekeeper Address	xStatus H323 Gatekeeper Address\x0D
H323 Gatekeeper Status	xStatus H323 Gatekeeper Status\x0D
H323Alias ID Status	xConfiguration H323 H323Alias ID\x0D
Input	xStatus Video Input MainVideoSource\x0D
Input HDMI Level Input HDMI	xConfiguration Audio Input HDMI 1 Level\x0D
Input HDMI Level Input HDMI 1	xConfiguration Audio Input HDMI 1 Level\x0D

Global Scriptor Module Communication Sheet

Revision: 10/28/2021

Input HDMI Level Input HDMI 2	xConfiguration Audio Input HDMI 2 Level\x0D
Input HDMI Level Input HDMI 3	xConfiguration Audio Input HDMI 3 Level\x0D
Input HDMI Level Input HDMI 4	xConfiguration Audio Input HDMI 4 Level\x0D
Input HDMI Level Input HDMI 5	xConfiguration Audio Input HDMI 5 Level\x0D
Input Mic Level Input Microphone 1	xConfiguration Audio Input Microphone 1 Level\x0D
Input Mic Level Input Microphone 2	xConfiguration Audio Input Microphone 2 Level\x0D
Input Mic Level Input Microphone 3	xConfiguration Audio Input Microphone 3 Level\x0D
Input Mic Level Input Microphone 4	xConfiguration Audio Input Microphone 4 Level\x0D
Input Mic Level Input Microphone 5	xConfiguration Audio Input Microphone 5 Level\x0D
Input Mic Level Input Microphone 6	xConfiguration Audio Input Microphone 6 Level\x0D
Input Mic Level Input Microphone 7	xConfiguration Audio Input Microphone 7 Level\x0D
Input Mic Level Input Microphone 8	xConfiguration Audio Input Microphone 8 Level\x0D
Input Mute Input HDMI	xConfiguration Audio Input HDMI 1 Mode\x0D
Input Mute Input HDMI 1	xConfiguration Audio Input HDMI 1 Mode\x0D
Input Mute Input HDMI 2	xConfiguration Audio Input HDMI 2 Mode\x0D
Input Mute Input HDMI 3	xConfiguration Audio Input HDMI 3 Mode\x0D
Input Mute Input HDMI 4	xConfiguration Audio Input HDMI 4 Mode\x0D
Input Mute Input HDMI 5	xConfiguration Audio Input HDMI 5 Mode\x0D
Input Mute Input Internal Microphone	xConfiguration Audio Input Microphone 1 Mode\x0D
Input Mute Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode\x0D
Input Mute Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode\x0D
Input Mute Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode\x0D
Input Mute Input Microphone 4	xConfiguration Audio Input Microphone 4 Mode\x0D
Input Mute Input Microphone 5	xConfiguration Audio Input Microphone 5 Mode\x0D
Input Mute Input Microphone 6	xConfiguration Audio Input Microphone 6 Mode\x0D
Input Mute Input Microphone 7	xConfiguration Audio Input Microphone 7 Mode\x0D
Input Mute Input Microphone 8	xConfiguration Audio Input Microphone 8 Mode\x0D
Input Signal Input 1	xStatus Video Input Connector 1 Connected\x0D
Input Signal Input 2	xStatus Video Input Connector 2 Connected\x0D
Input Signal Input 3	xStatus Video Input Connector 3 Connected\x0D
Input Signal Input 6	xStatus Video Input Connector 6 Connected\x0D
Input Video Mute	xStatus Video Input MainVideoMute\x0D
IP Address	xStatus Network 1 IPv4 Address\x0D
MAC Address	xStatus Network 1 Ethernet MacAddress\x0D
Macro Auto Start	xConfiguration Macros AutoStart\x0D
Macro Mode	xConfiguration Macros Mode\x0D

Global Scripter Module Communication Sheet

Revision: 10/28/2021

Microphones Mute	xStatus Audio Microphones Mute\x0D
Network Assignment	xConfiguration Network 1 IPv4 Assignment\x0D
Output Level Output Line 1	xConfiguration Audio Output Line 1 Level\x0D
Output Level Output Line 2	xConfiguration Audio Output Line 2 Level\x0D
Output Level Output Line 3	xConfiguration Audio Output Line 3 Level\x0D
Output Level Output Line 4	xConfiguration Audio Output Line 4 Level\x0D
Output Level Output Line 5	xConfiguration Audio Output Line 5 Level\x0D
Output Level Output Line 6	xConfiguration Audio Output Line 6 Level\x0D
People Count Out of Call	xConfiguration RoomAnalytics PeopleCountOutOfCall\x0D
People Presence Detector	xConfiguration RoomAnalytics PeoplePresenceDetector\x0D
Presentation Sending Mode Status Instance 1	xStatus Conference Presentation LocalInstance 1 SendingMode\x0D
Presentation Sending Mode Status Instance 6	xStatus Conference Presentation LocalInstance 6 SendingMode\x0D
Presentation Source Status Instance 1	xStatus Conference Presentation LocalInstance 1 Source\x0D
Presentation Source Status Instance 6	xStatus Conference Presentation LocalInstance 6 Source\x0D
PresenterTrack Control	xConfiguration Cameras PresenterTrack Enabled\x0D
PresenterTrack Mode	xStatus Cameras PresenterTrack Status\x0D
PresenterTrack Presenter Detected Status	xConfiguration Cameras PresenterTrack PresenterDetectedStatus\r
Remote Number Call 1	xstatus call\x0D
Remote Number Call 5	xstatus call\x0D
Self View	xStatus Video Selfview Mode\x0D
Self View Default Fullscreen Mode	xConfiguration Video Selfview Default FullscreenMode\x0D
Self View Fullscreen Mode	xStatus Video Selfview FullscreenMode\r
Self View Position	xStatus Video Selfview PIPPosition\x0D
SIP Display Name Status	xConfiguration SIP DisplayName\x0D
SIP Registration Status	xStatus SIP Registration 1 Status\x0D
SIP URI Status	xConfiguration SIP URI\x0D
SpeakerTrack Control	xStatus Cameras SpeakerTrack Status\x0D
SpeakerTrack Mode	xConfiguration Cameras SpeakerTrack Mode\x0D
Standby	xStatus Standby State\x0D
Subnet Mask	xStatus Network 1 IPv4 SubnetMask\x0D
System Time Status Type Date	xStatus Time SystemTime\x0D
System Time Status Type Time	xStatus Time SystemTime\x0D
System Unit Name Status	xConfiguration SystemUnit Name\x0D
Volume	xStatus Audio Volume\x0D