

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: Cisco
Firmware Version: N/A
Model(s): Webex Room Kit CE9.5.X, Webex Room Kit Plus CE9.5.X, Webex Room Kit Pro CE9.5.X

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.13.0000-b006	2.13.0

Version History

Module Version	Date	Notes
1_1_0_0	9/23/2021	Updated notes and fixed FarEndCameraPresetRecall command.
1_0_4_2	10/8/2020	Added 'Disconnect All' to Hook Command.
1_0_4_1	4/8/2020	Fixed issue with CallStatus reporting index error.
1_0_4_0	5/13/2019	Fixed CameraZoom Stop command. Added status command CallAnswerState
1_0_3_0	4/17/2019	Added model: Webex Room Kit Pro CE9.5.X, added commands, updated camera control command naming.

Global Scripter Module Communication Sheet

Revision: 9/23/2021

1_0_0_0	12/12/2018	Initial Version
---------	------------	-----------------

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly.
deviceUsername default value is admin respectively.
Example: `InterfaceName.deviceUsername = 'admin'`
- CallHistoryOccurrenceType variable must be set accordingly.
Example: `InterfaceName.CallHistoryOccurrenceType = 'Time'`
- NumberofPhonebookSearch variable must be set accordingly. Default value is '5'.
NumberofPhonebookSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookSearch = '5'`
- NumberofCallHistory variable must be set accordingly. Default value is '5'. NumberofCallHistory ranges from 1 to 20.
Example: `InterfaceName.NumberofCallHistory = '5'`
- NumberofPhonebookFolderSearch variable must be set accordingly. Default value is '5'.
NumberofPhonebookFolderSearch ranges from 1 to 10.
Example: `InterfaceName.NumberofPhonebookFolderSearch = '5'`
- PhonebookSearchOffset variable must be set accordingly. Default value is '50'. PhonebookSearchOffset ranges from 20 to 250.
Example: `InterfaceName.PhonebookSearchOffset = '50'`
- NumberofPeripheral variable must be set accordingly. Default value is '5'. NumberofPeripheral ranges from 1 to 10.
Example: `InterfaceName.NumberofPeripheral = '5'`
- Use highest baud rate for most optimal performance when using a serial connection.

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='Webex Room Kit CE9.5.X')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='Webex Room Kit  
CE9.5.X')
```

SSH

#Password required

```
InterfaceName=ModuleName.SSHClass('192.168.254.254', 22, Credentials=('admin','extron'), Model='Webex  
Room Kit CE9.5.X')
```

#No Password required

```
InterfaceName=ModuleName.SSHClass('192.168.254.254', 22, Credentials=('admin',''), Model='Webex Room  
Kit CE9.5.X')
```

Phonebook commands:

- PhonebookUpdate
 - This is used to trigger the search.
- PhonebookSearchResult
 - This is where the search results will be saved to when the phonebook is searched. The number of results is determined by the module parameter NumberofPhonebookSearch, which is initialized to 5 results by default.
- PhonebookNavigation
 - This command is used for navigating through the search results, it is like scrolling through the results when there are more than the NumberofPhonebookSearch that came back from the search.
- PhonebookSearchSet
 - When the number selected in this command is triggered, it will be dialed.
- PhonebookFolderIDUpdate
 - This is used to trigger the search.
- PhonebookFolderIDSearchResult
 - This is where the search results will be saved to when the phonebook folder ID is searched. The number of results is determined by the module parameter NumberofPhonebookFolderSearch, which is initialized to 5 results by default.
- PhonebookFolderIDNavigation
 - This command is used for navigating through the search results, it is like scrolling through the results when there are more than the NumberofPhonebookFolderSearch that came back from the search.
- PhonebookFolderIDSearchSet
 - When the folder name selected in this command is triggered, it will copy the FolderID and use it as the FolderID command parameter the next time PhonebookUpdate is used.

Query commands:

The following commands trigger a query command and should not be sent at a faster rate than the Command Timeout Duration specified.

Command Name	Command Timeout Duration
CallHistoryRefresh	5 seconds
ConnectedDeviceUpdate	3 seconds
PhonebookFolderIDUpdate	10 seconds
PhonebookUpdate	10 seconds

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioOutput	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'Internal Speaker' ^{1,2} Qualifier Value 'HDMI 1' – 'HDMI 3' ³	Qualifier Value 'Line' ^{1,2}	Qualifier Value 'Line 1' – 'Line 6' ³
# AudioOutput example InterfaceName.Set('AudioOutput', 'On', {'Output': 'Internal Speaker'})			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command CallHistoryNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# CallHistoryNavigation example InterfaceName.Set('CallHistoryNavigation', 'Up')			
Command CallHistoryRefresh	Value None		
# CallHistoryRefresh example InterfaceName.Set('CallHistoryRefresh', None)			
Command CallHistorySelect	Value '1' – '20'		
# CallHistorySelect example InterfaceName.Set('CallHistorySelect', '1')			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode example InterfaceName.Set('CallSetupMode', 'Gatekeeper')			
Command CameraFocus	Value 'Near'	Value 'Far'	Value 'Stop'
Qualifier Key 'Camera'^{1,3}	Qualifier Value '1' – '7'		
# CameraFocus example			

Global Scripter Module Communication Sheet

Revision: 9/23/2021

InterfaceName.Set('CameraFocus', 'Near')			
InterfaceName.Set('CameraFocus', 'Near', {'Camera': '1'})			
Command CameraPan	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Camera' ^{1,3}	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 – 15		
# CameraPan example InterfaceName.Set('CameraPan', 'Left', {'Speed': 15}) InterfaceName.Set('CameraPan', 'Left', {'Camera': '1', 'Speed': 15})			
Command CameraPresetRecall	Value '1' – '35'		
# CameraPresetRecall example InterfaceName.Set('CameraPresetRecall', '1')			
Command CameraPresetSave	Value '1' – '35'		
Qualifier Key 'Camera' ^{1,3}	Qualifier Value '1' – '7'		
# CameraPresetSave example InterfaceName.Set('CameraPresetSave', '1') InterfaceName.Set('CameraPresetSave', '1', {'Camera': '1'})			
Command CameraTilt	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Camera' ^{1,3}	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 – 15		
# CameraTilt example InterfaceName.Set('CameraTilt', 'Up', {'Speed': 15}) InterfaceName.Set('CameraTilt', 'Up', {'Camera': '1', 'Speed': 15})			
Command CameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'Camera' ^{1,3}	Qualifier Value '1' – '7'		
Qualifier Key 'Speed'	Qualifier Value 1 – 15		
# CameraZoom example InterfaceName.Set('CameraZoom', 'In', {'Speed': 15}) InterfaceName.Set('CameraZoom', 'In', {'Camera': '1', 'Speed': 15})			
Command ConnectedDeviceNavigation	Value 'Up'	Value 'Down'	Value 'Page Up'

Global Scripter Module Communication Sheet

Revision: 9/23/2021

	'Page Down'		
# ConnectedDeviceNavigation example InterfaceName.Set('ConnectedDeviceNavigation', 'Up')			
Command ConnectedDeviceUpdate	Value None		
# ConnectedDeviceUpdate example InterfaceName.Set('ConnectedDeviceUpdate', None)			
Command DisplayMode	Value 'Dual' 'Auto'	Value 'Single' 'Triple Presentation Only' ³	Value 'Dual Presentation Only' 'Triple' ³
# DisplayMode example InterfaceName.Set('DisplayMode', 'Dual')			
Command DNSDomainNameCommand	Value 'String'		
# DNSDomainNameCommand example InterfaceName.Set('DNSDomainNameCommand', 'String')			
Command DNSServerAddressCommand	Value 'String'		
# DNSServerAddressCommand example InterfaceName.Set('DNSServerAddressCommand', 'String')			
Command DoNotDisturb	Value 'Active'	Value 'Inactive'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'Active')			
Command DTMF	Value '0' '3' '6' '9'	Value '1' '4' '7' '*'	Value '2' '5' '8' '#'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command FarEndCameraPanTilt	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
# FarEndCameraPanTilt example InterfaceName.Set('FarEndCameraPanTilt', 'Up')			
Command FarEndCameraPresetRecall	Value '1' – '15'		
# FarEndCameraPresetRecall example InterfaceName.Set('FarEndCameraPresetRecall', '1')			

Global Scripter Module Communication Sheet

Command FarEndCameraSource	Value '0' – '15'		
# FarEndCameraSource example InterfaceName.Set('FarEndCameraSource', '0')			
Command FarEndCameraZoom	Value 'In'	Value 'Out'	Value 'Stop'
# FarEndCameraZoom example InterfaceName.Set('FarEndCameraZoom', 'In')			
Command FarEndControl	Value 'On'	Value 'Off'	
# FarEndControl example InterfaceName.Set('FarEndControl', 'On')			
Command H323GatekeeperAddressCo mmand	Value 'String'		
# H323GatekeeperAddressCommand example InterfaceName.Set('H323GatekeeperAddressCommand', 'String')			
Command H323AliasE164Command	Value 'String'		
# H323AliasE164Command example InterfaceName.Set('H323AliasE164Command', 'String')			
Command H323AliasIDCommand	Value 'String'		
# H323AliasIDCommand example InterfaceName.Set('H323AliasIDCommand', 'String')			
Command H323ProfileAuthenticationL oginNameCommand	Value 'String'		
# H323ProfileAuthenticationLoginNameCommand example InterfaceName.Set('H323ProfileAuthenticationLoginNameCommand', 'String')			
Command H323ProfileAuthenticationP asswordCommand	Value 'String'		
# H323ProfileAuthenticationPasswordCommand example InterfaceName.Set('H323ProfileAuthenticationPasswordCommand', 'String')			
Command Hook	Value 'Dial'	Value 'Accept'	Value 'Join 1'
	'Join 2'	'Join 3'	'Join 4'
	'Join 5'	'Hold 1'	'Hold 2'
	'Hold 3'	'Hold 4'	'Hold 5'
	'Resume 1'	'Resume 2'	'Resume 3'

Global Scriptor Module Communication Sheet

Revision: 9/23/2021

	'Resume 4'	'Resume 5'	'Disconnect 1'
	'Disconnect 2'	'Disconnect 3'	'Disconnect 4'
	'Disconnect 5'	'Reject'	'Disconnect All'
Qualifier Key 'Number'	Qualifier Value 'String'		
Qualifier Key 'Protocol'	Qualifier Value 'Auto'	Qualifier Value 'SIP'	Qualifier Value 'H323'
	'H320'	'Spark'	
# Hook example InterfaceName.Set('Hook', 'Accept') InterfaceName.Set('Hook', 'Dial', {'Number': 'String', 'Protocol': 'Auto'})			
Command Input	Value '1' – '5'		
# Input example InterfaceName.Set('Input', '1')			
Command InputHDMILevel ³	Value -24 to 0 in steps of 1 dB		
Qualifier Key 'Input'	Qualifier Value 'HDMI 1' – 'HDMI 5'		
# InputHDMILevel example InterfaceName.Set('InputHDMILevel', 0, {'Input': 'HDMI 1'})			
Command InputMicLevel	Value 0 to 26 in steps of 1 dB ^{1, 2}	Value 0 to 70 in steps of 1 dB ³	
Qualifier Key 'Input'	Qualifier Value 'Microphone 2' – 'Microphone 3' ²	Qualifier Value 'Microphone 1' – 'Microphone 3' ¹	Qualifier Value 'Microphone 1' – 'Microphone 8' ³
# InputMicLevel example InterfaceName.Set('InputMicLevel', 26, {'Input': 'Microphone 1'})			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'HDMI 2' ¹ 'Microphone 2' ^{1, 2} 'Microphone 1' – 'Microphone 8' ³	Qualifier Value 'HDMI 3' ¹ 'Microphone 3' ^{1, 2} 'HDMI 1' – 'HDMI 5' ³	Qualifier Value 'Microphone 1' ¹ 'Internal Microphone' ²
# InputMute example InterfaceName.Set('InputMute', 'On', {'Input': 'HDMI 1'})			
Command IPv4AddressCommand	Value 'String'		
# IPv4AddressCommand example InterfaceName.Set('IPv4AddressCommand', 'String')			

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Command	Value		
IPv4GatewayCommand	'String'		
# IPv4GatewayCommand example InterfaceName.Set('IPv4GatewayCommand', 'String')			
Command	Value		
IPv4SubnetMaskCommand	'String'		
# IPv4SubnetMaskCommand example InterfaceName.Set('IPv4SubnetMaskCommand', 'String')			
Command	Value	Value	Value
LayoutSet	'Auto'	'Custom'	'Equal'
	'Overlay'	'Prominent'	'Single'
Qualifier Key	Qualifier Value	Qualifier Value	
'Target'	'Local'	'Remote'	
# LayoutSet example InterfaceName.Set('LayoutSet', 'Auto', {'Target': 'Local'})			
Command	Value	Value	
Macro	'Activate'	'Deactivate'	
Qualifier Key	Qualifier Value		
'Name'	'String'		
# Macro example InterfaceName.Set('Macro', 'Activate', {'Name': 'String'})			
Command	Value	Value	
MacroAutoStart	'On'	'Off'	
# MacroAutoStart example InterfaceName.Set('MacroAutoStart', 'On')			
Command	Value	Value	
MacroMode	'On'	'Off'	
# MacroMode example InterfaceName.Set('MacroMode', 'On')			
Command	Value	Value	
MicrophonesMute	'On'	'Off'	
# MicrophonesMute example InterfaceName.Set('MicrophonesMute', 'On')			
Command	Value	Value	
PeopleCountOutOfCall	'On'	'Off'	
# PeopleCountOutOfCall example InterfaceName.Set('PeopleCountOutOfCall', 'On')			
Command	Value	Value	
PeoplePresenceDetector	'On'	'Off'	
# PeoplePresenceDetector example InterfaceName.Set('PeoplePresenceDetector', 'On')			
Command	Value	Value	Value

Global Scripter Module Communication Sheet

Revision: 9/23/2021

PhonebookFolderIDNavigation	'Up'	'Down'	'Page Up'
	'Page Down'		
# PhonebookFolderIDNavigation example InterfaceName.Set('PhonebookFolderIDNavigation', 'Up')			
Command PhonebookFolderIDSearchSet	Value 1 – 10		
# PhonebookFolderIDSearchSet example InterfaceName.Set('PhonebookFolderIDSearchSet', 10)			
Command PhonebookFolderIDUpdate	Value None		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookFolderIDUpdate example InterfaceName.Set('PhonebookFolderIDUpdate', None, {'Phonebook Type': 'Local'})			
Command PhonebookNavigation	Value 'Up'	Value 'Down'	Value 'Page Up'
	'Page Down'		
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up', {'Contact': '', 'FolderID': ''})			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value 'Refresh'	Value 'Next Search'	Value 'Previous Search'
Qualifier Key 'Contact'	Qualifier Value 'String'		
Qualifier Key 'FolderID'	Qualifier Value 'String'		
Qualifier Key 'Phonebook Type'	Qualifier Value 'Corporate'	Qualifier Value 'Local'	
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', 'Refresh', {'Contact': '', 'FolderID': '', 'Phonebook Type': 'Local'})			
Command	Value	Value	

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Presentation	'Start'		'Stop'
Qualifier Key 'Instance'	Qualifier Value '1' – '6'	Qualifier Value 'Not Specified'	Qualifier Value 'New'
Qualifier Key 'Sending Mode'	Qualifier Value 'Not Specified'	Qualifier Value 'Local Only'	Qualifier Value 'Local and Remote'
Qualifier Key 'Video Input Source'	Qualifier Value 'Not Specified'	Qualifier Value 'Presentation Source 1' ^{1, 2}	Qualifier Value 'Presentation Source 2' ^{1, 2}
	'Presentation Source 3' ¹	'Connector Id 1' ^{1, 2}	'Connector Id 2' ^{1, 2}
	'Connector Id 3' ¹	'Connector Id 1' –	'Presentation Source 1' –
		'Connector Id 6' ³	'Presentation Source 6' ³
# Presentation example InterfaceName.Set('Presentation', 'Start', {'Instance': 'Not Specified', 'Sending Mode': 'Not Specified', 'Video Input Source': 'Not Specified'})			
Command PresentationExternalSourceSelectCommand	Value 'String'		
# PresentationExternalSourceSelectCommand example InterfaceName.Set('PresentationExternalSourceSelectCommand', 'String')			
Command PresetRecall	Value '1' – '15'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1')			
Command PresetSave	Value '1' – '15'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command Reboot	Value None		
# Reboot example InterfaceName.Set('Reboot', None)			
Command RestartMacros	Value None		
# RestartMacros example InterfaceName.Set('RestartMacros', None)			
Command SelfView	Value 'On'	Value 'Off'	
# SelfView example InterfaceName.Set('SelfView', 'On')			
Command SelfViewDefaultFullscreenMode	Value 'On'	Value 'Off'	Value 'Current'
# SelfViewDefaultFullscreenMode example			

Global Scripter Module Communication Sheet

Revision: 9/23/2021

InterfaceName.Set('SelfViewDefaultFullscreenMode', 'On')			
Command SelfViewPosition	Value 'Upper Left' 'Center Left' 'Lower Right'	Value 'Upper Center' 'Center Right'	Value 'Upper Right' 'Lower Left'
# SelfViewPosition example InterfaceName.Set('SelfViewPosition', 'Upper Left')			
Command SIPURICommand	Value 'String'		
# SIPURICommand example InterfaceName.Set('SIPURICommand', None)			
Command SleepTimer	Value 1 – 480		
# SleepTimer example InterfaceName.Set('SleepTimer', 480)			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
# SpeakerTrackControl example InterfaceName.Set('SpeakerTrackControl', 'On')			
Command SpeakerTrackMode	Value 'Auto'	Value 'Off'	
# SpeakerTrackMode example InterfaceName.Set('SpeakerTrackMode', 'Auto')			
Command Standby	Value 'Activate'	Value 'Deactivate'	Value 'Halfwake'
# Standby example InterfaceName.Set('Standby', 'Activate')			
Command SystemUnitNameCommand	Value 'String'		
# SystemUnitNameCommand example InterfaceName.Set('SystemUnitNameCommand', 'String')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

¹ Supported by Webex Room Kit Plus CE9.5.X model only

² Supported by Webex Room Kit CE9.5.X model only

³ Supported by Webex Room Kit Pro CE9.5.X model only

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, CallHistory, ConnectedDeviceMAC, ConnectedDeviceName, ConnectedDeviceType, PhonebookFolderIDSearchResult, PhonebookSearchResult do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioOutput	Value 'On'	Value 'Off'	
Qualifier Key 'Output'	Qualifier Value 'Internal Speaker' ^{1,2} Qualifier Value 'HDMI 1' – 'HDMI 3' ³	Qualifier Value 'Line' ^{1,2}	Qualifier Value 'Line 1' – 'Line 6' ³
# AudioOutput examples InterfaceName.Update('AudioOutput', {'Output': 'Internal Speaker'}) Value = InterfaceName.ReadStatus('AudioOutput', {'Output': 'Internal Speaker'}) InterfaceName.SubscribeStatus('AudioOutput', None, FeedbackHandler)			
Command AutoAnswer	Value 'On'	Value 'Off'	
# AutoAnswer examples InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)			
Command CallAnswerState ⁴	Value 'Unanswered' Value 'Answered'	Value 'Ignored' Value 'Unknown'	Value 'Auto-Answered'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# AutoAnswer examples InterfaceName.Update('CallAnswerState') Value = InterfaceName.ReadStatus('CallAnswerState', {'Call': '1'}) InterfaceName.SubscribeStatus('CallAnswerState', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Command CallHistory	Qualifier Value 'String'		
Qualifier Key 'Button'	Qualifier Value '1' – '20'		
Qualifier Key 'Detail Type'	Qualifier Value 'Display Name' 'Occurrence Count'	Qualifier Value 'Callback Number' 'Occurrence Type'	Qualifier Value 'Last Occurrence Time'
# CallHistory examples Value = InterfaceName.ReadStatus('CallHistory', {'Button': '1', 'Detail Type': 'Display Name'}) InterfaceName.SubscribeStatus('CallHistory', None, FeedbackHandler)			
Command CallSetupMode	Value 'Gatekeeper'	Value 'Direct'	
# CallSetupMode examples InterfaceName.Update('CallSetupMode') Value = InterfaceName.ReadStatus('CallSetupMode') InterfaceName.SubscribeStatus('CallSetupMode', None, FeedbackHandler)			
Command CallStatus ⁴	Value 'Dialing' 'Ringing' 'On Hold' 'Remote Preserved'	Value 'Connecting' 'Idle' 'Early Media'	Value 'Connected' 'Disconnecting' 'Preserved'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatus examples InterfaceName.Update('CallStatus') Value = InterfaceName.ReadStatus('CallStatus', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)			
Command CallStatusDeviceType ⁴	Value 'Endpoint'	Value 'MCU'	Value 'Unknown'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatusDeviceType examples InterfaceName.Update('CallStatusDeviceType') Value = InterfaceName.ReadStatus('CallStatusDeviceType', {'Call': '1'}) InterfaceName.SubscribeStatus('CallStatusDeviceType', None, FeedbackHandler)			
Command CallStatusType ⁴	Value 'Video' 'Forward All Call'	Value 'Audio' 'Unknown'	Value 'Audio Can Escalate'
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# CallStatusType examples InterfaceName.Update('CallStatusType') Value = InterfaceName.ReadStatus('CallStatusType', {'Call': '1'})			

Global Scripter Module Communication Sheet

Revision: 9/23/2021

InterfaceName.SubscribeStatus('CallStatusType', None, FeedbackHandler)			
Command ConnectedDeviceMAC	Qualifier Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 – 10		
# ConnectedDeviceMAC examples Value = InterfaceName.ReadStatus('ConnectedDeviceMAC', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceMAC', None, FeedbackHandler)			
Command ConnectedDeviceName	Qualifier Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 – 10		
# ConnectedDeviceName examples Value = InterfaceName.ReadStatus('ConnectedDeviceName', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceName', None, FeedbackHandler)			
Command ConnectedDeviceType	Qualifier Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 – 10		
# ConnectedDeviceType examples Value = InterfaceName.ReadStatus('ConnectedDeviceType', {'Button': 10}) InterfaceName.SubscribeStatus('ConnectedDeviceType', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command DisplayMode	Value 'Dual' 'Auto'	Value 'Single' 'Triple Presentation Only' ³	Value 'Dual Presentation Only' 'Triple' ³
# DisplayMode examples InterfaceName.Update('DisplayMode') Value = InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)			
Command DisplayName ⁴	Qualifier Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
# DisplayName examples InterfaceName.Update('DisplayName') Value = InterfaceName.ReadStatus('DisplayName', {'Call': '1'}) InterfaceName.SubscribeStatus('DisplayName', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Command	Qualifier Value		
DNSDomainName	'String'		
# DNSDomainName examples InterfaceName.Update('DNSDomainName') Value = InterfaceName.ReadStatus('DNSDomainName') InterfaceName.SubscribeStatus('DNSDomainName', None, FeedbackHandler)			
Command	Qualifier Value		
DNSServerAddress	'String'		
Qualifier Key	Qualifier Value		
'Server'	'1' – '5'		
# DNSServerAddress examples InterfaceName.Update('DNSServerAddress', {'Server': '1'}) Value = InterfaceName.ReadStatus('DNSServerAddress', {'Server': '1'}) InterfaceName.SubscribeStatus('DNSServerAddress', None, FeedbackHandler)			
Command	Value	Value	
DoNotDisturb	'Active'	'Inactive'	
# DoNotDisturb examples InterfaceName.Update('DoNotDisturb') Value = InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)			
Command	Value	Value	
FarEndControl	'On'	'Off'	
# FarEndControl examples InterfaceName.Update('FarEndControl') Value = InterfaceName.ReadStatus('FarEndControl') InterfaceName.SubscribeStatus('FarEndControl', None, FeedbackHandler)			
Command	Qualifier Value		
FirmwareVersion	'String'		
# FirmwareVersion examples InterfaceName.Update('FirmwareVersion') Value = InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)			
Command	Qualifier Value		
GatewayAddress	'String'		
# GatewayAddress examples InterfaceName.Update('GatewayAddress') Value = InterfaceName.ReadStatus('GatewayAddress') InterfaceName.SubscribeStatus('GatewayAddress', None, FeedbackHandler)			
Command	Qualifier Value		
H323GatekeeperAddress	'String'		
# H323GatekeeperAddress examples InterfaceName.Update('H323GatekeeperAddress') Value = InterfaceName.ReadStatus('H323GatekeeperAddress') InterfaceName.SubscribeStatus('H323GatekeeperAddress', None, FeedbackHandler)			
Command	Value	Value	Value

Global Scripter Module Communication Sheet

Revision: 9/23/2021

H323GatekeeperStatus	'Required'	'Discovering'	'Discovered'
	'Authenticating'	'Authenticated'	'Registering'
	'Registered'	'Inactive'	'Rejected'
<pre># H323GatekeeperStatus examples InterfaceName.Update('H323GatekeeperStatus') Value = InterfaceName.ReadStatus('H323GatekeeperStatus') InterfaceName.SubscribeStatus('H323GatekeeperStatus', None, FeedbackHandler)</pre>			
Command H323AliasIDStatus	Qualifier Value 'String'		
<pre># H323AliasIDStatus examples InterfaceName.Update('H323AliasIDStatus') Value = InterfaceName.ReadStatus('H323AliasIDStatus') InterfaceName.SubscribeStatus('H323AliasIDStatus', None, FeedbackHandler)</pre>			
Command Input	Value '1' – '6'	Value 'Composed'	
<pre># Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)</pre>			
Command InputHDMILevel³	Value -24 to 0 in steps of 1 dB		
Qualifier Key 'Input'	Qualifier Value 'HDMI 1' – 'HDMI 5'		
<pre># InputHDMILevel examples InterfaceName.Update('InputHDMILevel', {'Input': 'HDMI 1'}) Value = InterfaceName.ReadStatus('InputHDMILevel', {'Input': 'HDMI 1'}) InterfaceName.SubscribeStatus('InputHDMILevel', None, FeedbackHandler)</pre>			
Command InputMicLevel	Value 0 to 26 in steps of 1 dB		
Qualifier Key 'Input'	Qualifier Value 'Microphone 2' – 'Microphone 3' ²	Qualifier Value 'Microphone 1' – 'Microphone 3' ¹	Qualifier Value 'Microphone 1' – 'Microphone 8' ³
<pre># InputMicLevel examples InterfaceName.Update('InputMicLevel', {'Input': 'Microphone 1'}) Value = InterfaceName.ReadStatus('InputMicLevel', {'Input': 'Microphone 1'}) InterfaceName.SubscribeStatus('InputMicLevel', None, FeedbackHandler)</pre>			
Command InputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value 'HDMI 1' ¹ 'Microphone 2' ^{1, 2} 'Microphone 1' – 'Microphone 8' ³	Qualifier Value 'HDMI 2' ¹ 'Microphone 3' ^{1, 2} 'HDMI 1' – 'HDMI 5' ³	Qualifier Value 'Microphone 1' ¹ 'Internal Microphone' ²

Global Scripter Module Communication Sheet

Revision: 9/23/2021

<pre># InputMute examples InterfaceName.Update('InputMute', {'Input': 'HDMI 1'}) Value = InterfaceName.ReadStatus('InputMute', {'Input': 'HDMI 1'}) InterfaceName.SubscribeStatus('InputMute', None, FeedbackHandler)</pre>			
Command InputSignal	Value 'True'	Value 'False'	Value 'Unknown'
Qualifier Key 'Input'	Qualifier Value '1' – '2'		
<pre># InputSignal examples InterfaceName.Update('InputSignal', {'Input': '1'}) Value = InterfaceName.ReadStatus('InputSignal', {'Input': '1'}) InterfaceName.SubscribeStatus('InputSignal', None, FeedbackHandler)</pre>			
Command IPAddress	Qualifier Value 'String'		
<pre># IPAddress examples InterfaceName.Update('IPAddress') Value = InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)</pre>			
Command MACAddress	Qualifier Value 'String'		
<pre># MACAddress examples InterfaceName.Update('MACAddress') Value = InterfaceName.ReadStatus('MACAddress') InterfaceName.SubscribeStatus('MACAddress', None, FeedbackHandler)</pre>			
Command MacroAutoStart	Value 'On'	Value 'Off'	
<pre># MacroAutoStart examples InterfaceName.Update('MacroAutoStart') Value = InterfaceName.ReadStatus('MacroAutoStart') InterfaceName.SubscribeStatus('MacroAutoStart', None, FeedbackHandler)</pre>			
Command MacroMode	Value 'On'	Value 'Off'	
<pre># MacroMode examples InterfaceName.Update('MacroMode') Value = InterfaceName.ReadStatus('MacroMode') InterfaceName.SubscribeStatus('MacroMode', None, FeedbackHandler)</pre>			
Command MicrophonesMute	Value 'On'	Value 'Off'	
<pre># MicrophonesMute examples InterfaceName.Update('MicrophonesMute') Value = InterfaceName.ReadStatus('MicrophonesMute') InterfaceName.SubscribeStatus('MicrophonesMute', None, FeedbackHandler)</pre>			
Command NetworkAssignment	Value 'Static'	Value 'DHCP'	

Global Scripter Module Communication Sheet

Revision: 9/23/2021

<pre># NetworkAssignment examples InterfaceName.Update('NetworkAssignment') Value = InterfaceName.ReadStatus('NetworkAssignment') InterfaceName.SubscribeStatus('NetworkAssignment', None, FeedbackHandler)</pre>			
Command	Qualifier Value		
PeopleCountCurrent	'String'		
<pre># PeopleCountCurrent examples InterfaceName.Update('PeopleCountCurrent') Value = InterfaceName.ReadStatus('PeopleCountCurrent') InterfaceName.SubscribeStatus('PeopleCountCurrent', None, FeedbackHandler)</pre>			
Command	Value	Value	
PeopleCountOutOfCall	'On'	'Off'	
<pre># PeopleCountOutOfCall examples InterfaceName.Update('PeopleCountOutOfCall') Value = InterfaceName.ReadStatus('PeopleCountOutOfCall') InterfaceName.SubscribeStatus('PeopleCountOutOfCall', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
PeoplePresence	'Yes'	'No'	'Unknown'
<pre># PeoplePresence examples InterfaceName.Update('PeoplePresence') Value = InterfaceName.ReadStatus('PeoplePresence') InterfaceName.SubscribeStatus('PeoplePresence', None, FeedbackHandler)</pre>			
Command	Value	Value	
PeoplePresenceDetector	'On'	'Off'	
<pre># PeoplePresenceDetector examples InterfaceName.Update('PeoplePresenceDetector') Value = InterfaceName.ReadStatus('PeoplePresenceDetector') InterfaceName.SubscribeStatus('PeoplePresenceDetector', None, FeedbackHandler)</pre>			
Command	Qualifier Value		
PhonebookFolderIDSearch	'String'		
Result			
Qualifier Key	Qualifier Value		
'Button'	1 – 10		
<pre># PhonebookFolderIDSearchResult examples Value = InterfaceName.ReadStatus('PhonebookFolderIDSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookFolderIDSearchResult', None, FeedbackHandler)</pre>			
Command	Qualifier Value		
PhonebookSearchResult	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 – 10		
<pre># PhonebookSearchResult examples Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
PresentationModeStatus	'Sending'	'Receiving'	'Off'

Global Scripter Module Communication Sheet

Revision: 9/23/2021

<pre># PresentationModeStatus examples InterfaceName.Update('PresentationModeStatus') Value = InterfaceName.ReadStatus('PresentationModeStatus') InterfaceName.SubscribeStatus('PresentationModeStatus', None, FeedbackHandler)</pre>			
Command PresentationSendingModeStatus	Value 'Local and Remote'	Value 'Local Only'	Value 'Off'
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
<pre># PresentationSendingModeStatus examples InterfaceName.Update('PresentationSendingModeStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSendingModeStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSendingModeStatus', None, FeedbackHandler)</pre>			
Command PresentationSourceStatus	Value '1' – '2' ² 'Off'	Value '1' – '3' ¹	Value '1' – '6' ³
Qualifier Key 'Instance'	Qualifier Value '1' – '6'		
<pre># PresentationSourceStatus examples InterfaceName.Update('PresentationSourceStatus', {'Instance': '1'}) Value = InterfaceName.ReadStatus('PresentationSourceStatus', {'Instance': '1'}) InterfaceName.SubscribeStatus('PresentationSourceStatus', None, FeedbackHandler)</pre>			
Command RemoteNumber ⁴	Qualifier Value 'String'		
Qualifier Key 'Call'	Qualifier Value '1' – '5'		
<pre># RemoteNumber examples InterfaceName.Update('RemoteNumber') Value = InterfaceName.ReadStatus('RemoteNumber', {'Call': '1'}) InterfaceName.SubscribeStatus('RemoteNumber', None, FeedbackHandler)</pre>			
Command SelfView	Value 'On'	Value 'Off'	
<pre># SelfView examples InterfaceName.Update('SelfView') Value = InterfaceName.ReadStatus('SelfView') InterfaceName.SubscribeStatus('SelfView', None, FeedbackHandler)</pre>			
Command SelfViewDefaultFullscreenMode	Value 'On'	Value 'Off'	Value 'Current'
<pre># SelfViewDefaultFullscreenMode examples InterfaceName.Update('SelfViewDefaultFullscreenMode') Value = InterfaceName.ReadStatus('SelfViewDefaultFullscreenMode') InterfaceName.SubscribeStatus('SelfViewDefaultFullscreenMode', None, FeedbackHandler)</pre>			
Command SelfViewPosition	Value 'Upper Left'	Value 'Upper Center'	Value 'Upper Right'

Global Scripter Module Communication Sheet

Revision: 9/23/2021

	'Center Left'	'Center Right'	'Lower Left'
	'Lower Right'		
# SelfViewPosition examples InterfaceName.Update('SelfViewPosition') Value = InterfaceName.ReadStatus('SelfViewPosition') InterfaceName.SubscribeStatus('SelfViewPosition', None, FeedbackHandler)			
Command SIPRegistrationStatus	Value 'Deregistering' 'Registered'	Value 'Failed' 'Registering'	Value 'Inactive'
# SIPRegistrationStatus examples InterfaceName.Update('SIPRegistrationStatus') Value = InterfaceName.ReadStatus('SIPRegistrationStatus') InterfaceName.SubscribeStatus('SIPRegistrationStatus', None, FeedbackHandler)			
Command SIPURISatus	Qualifier Value 'String'		
# SIPURISatus examples InterfaceName.Update('SIPURISatus') Value = InterfaceName.ReadStatus('SIPURISatus') InterfaceName.SubscribeStatus('SIPURISatus', None, FeedbackHandler)			
Command SpeakerTrackControl	Value 'On'	Value 'Off'	
# SpeakerTrackControl examples InterfaceName.Update('SpeakerTrackControl') Value = InterfaceName.ReadStatus('SpeakerTrackControl') InterfaceName.SubscribeStatus('SpeakerTrackControl', None, FeedbackHandler)			
Command SpeakerTrackMode	Value 'Auto'	Value 'Off'	
# SpeakerTrackMode examples InterfaceName.Update('SpeakerTrackMode') Value = InterfaceName.ReadStatus('SpeakerTrackMode') InterfaceName.SubscribeStatus('SpeakerTrackMode', None, FeedbackHandler)			
Command Standby	Value 'Activate' 'Entering Standby'	Value 'Deactivate'	Value 'Halfwake'
# Standby examples InterfaceName.Update('Standby') Value = InterfaceName.ReadStatus('Standby') InterfaceName.SubscribeStatus('Standby', None, FeedbackHandler)			
Command SubnetMask	Qualifier Value 'String'		
# SubnetMask examples InterfaceName.Update('SubnetMask') Value = InterfaceName.ReadStatus('SubnetMask') InterfaceName.SubscribeStatus('SubnetMask', None, FeedbackHandler)			
Command	Qualifier Value		

Global Scripter Module Communication Sheet

Revision: 9/23/2021

SystemUnitNameStatus	'String'
<pre># SystemUnitNameStatus examples InterfaceName.Update('SystemUnitNameStatus') Value = InterfaceName.ReadStatus('SystemUnitNameStatus') InterfaceName.SubscribeStatus('SystemUnitNameStatus', None, FeedbackHandler)</pre>	
Command	Value
Volume	0 to 100 in steps of 1
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>	

¹ Supported by Webex Room Kit Plus CE9.5.X model only

² Supported by Webex Room Kit CE9.5.X model only

³ Supported by Webex Room Kit Pro CE9.5.X model only

⁴ Status updates all the following commands: CallStatus, CallStatusType, CallStatusDeviceType, DisplayName, RemoteNumber, CallAnswerState

Cable and Adapter Requirements

Captive Screw to USB Type-A RS-232 Serial Cable Adapter

Notes for the Device

For the module to work, the “Require passphrase change on next user sign in” checkbox under Security → Users → <USERNAME> must be unchecked within the devices embedded webpage.

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

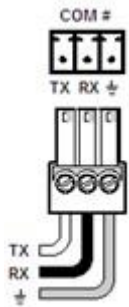

Please contact the manufacturer for pin assignment diagram.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet (SSH)
Default Port:	22
Logon Credentials Supported:	Yes
Default Username:	admin
Multi-Connection	Yes
Capabilities:	
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

- Password is required for SSH communication to work. "SSH Mode" must be set to "On" by an admin to have open communication with the module.
- For the module to work, the "Require passphrase change on next user sign in" checkbox under Security → Users → <USERNAME> must be unchecked within the devices embedded webpage.

Appendix A. Set Commands

Audio Output Off Output Internal Speaker	xConfiguration Audio Output InternalSpeaker Mode:Off\x0D
Audio Output Off Output Line	xConfiguration Audio Output Line 1 Mode:Off\x0D
Audio Output On Output Internal Speaker	xConfiguration Audio Output InternalSpeaker Mode:On\x0D
Audio Output On Output Line	xConfiguration Audio Output Line 1 Mode:On\x0D
Auto Answer Off	xConfiguration Conference AutoAnswer Mode: Off\x0D
Auto Answer On	xConfiguration Conference AutoAnswer Mode: On\x0D
Call Setup Mode Direct	xConfiguration H323 CallSetup Mode: Direct\x0D
Call Setup Mode Gatekeeper	xConfiguration H323 CallSetup Mode: Gatekeeper\x0D
Camera Focus Far	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 1	xCommand Camera Ramp CameraId:1 Focus:Far\x0D
Camera Focus Far Camera 7	xCommand Camera Ramp CameraId:7 Focus:Far\x0D
Camera Focus Near	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 1	xCommand Camera Ramp CameraId:1 Focus:Near\x0D
Camera Focus Near Camera 7	xCommand Camera Ramp CameraId:7 Focus:Near\x0D
Camera Focus Stop	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 1	xCommand Camera Ramp CameraId:1 Focus:Stop\x0D
Camera Focus Stop Camera 7	xCommand Camera Ramp CameraId:7 Focus:Stop\x0D
Camera Pan Left Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Left Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:1\x0D
Camera Pan Left Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Left PanSpeed:15\x0D
Camera Pan Left Speed 1	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:1\x0D
Camera Pan Left Speed 15	xCommand Camera Ramp CameraId:1 Pan:Left PanSpeed:15\x0D
Camera Pan Right Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Right Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:1\x0D
Camera Pan Right Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan:Right PanSpeed:15\x0D
Camera Pan Right Speed 1	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:1\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Camera Pan Right Speed 15	xCommand Camera Ramp CameraId:1 Pan:Right PanSpeed:15\x0D
Camera Pan Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Pan: Stop\x0D
Camera Pan Stop Speed 1	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Pan Stop Speed 15	xCommand Camera Ramp CameraId:1 Pan: Stop\x0D
Camera Preset Recall 1	xCommand Camera Preset Activate PresetId: 1\x0D
Camera Preset Recall 35	xCommand Camera Preset Activate PresetId: 35\x0D
Camera Preset Save 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 1	xCommand Camera Preset Store PresetId:1 CameraId:1\x0D
Camera Preset Save 1 Camera 7	xCommand Camera Preset Store PresetId:1 CameraId:7\x0D
Camera Preset Save 35	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 1	xCommand Camera Preset Store PresetId:35 CameraId:1\x0D
Camera Preset Save 35 Camera 7	xCommand Camera Preset Store PresetId:35 CameraId:7\x0D
Camera Tilt Down Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Down Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:1\x0D
Camera Tilt Down Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Down TiltSpeed:15\x0D
Camera Tilt Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt: Stop\x0D
Camera Tilt Stop Speed 1	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Stop Speed 15	xCommand Camera Ramp CameraId:1 Tilt: Stop\x0D
Camera Tilt Up Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:1\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Camera Tilt Up Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Tilt:Up TiltSpeed:15\x0D
Camera Tilt Up Speed 1	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:1\x0D
Camera Tilt Up Speed 15	xCommand Camera Ramp CameraId:1 Tilt:Up TiltSpeed:15\x0D
Camera Zoom In Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:In ZoomSpeed:15\x0D
Camera Zoom In Speed 1	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:1\x0D
Camera Zoom In Speed 15	xCommand Camera Ramp CameraId:1 Zoom:In ZoomSpeed:15\x0D
Camera Zoom Out Camera 1 Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 1 Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Camera 7 Speed 1	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Camera 7 Speed 15	xCommand Camera Ramp CameraId:7 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Out Speed 1	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:1\x0D
Camera Zoom Out Speed 15	xCommand Camera Ramp CameraId:1 Zoom:Out ZoomSpeed:15\x0D
Camera Zoom Stop Camera 1 Speed 1	xCommand Camera Ramp CameraId:{0} Zoom: Stop\x0D
Camera Zoom Stop Camera 1 Speed 15	xCommand Camera Ramp CameraId:{0} Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 1	xCommand Camera Ramp CameraId:{0} Zoom: Stop\x0D
Camera Zoom Stop Camera 7 Speed 15	xCommand Camera Ramp CameraId:{0} Zoom: Stop\x0D
Camera Zoom Stop Speed 1	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Camera Zoom Stop Speed 15	xCommand Camera Ramp CameraId:1 Zoom: Stop\x0D
Connected Device Update None	xStatus Peripherals ConnectedDevice\x0D
Display Mode Auto	xConfiguration Video Monitors: Auto\x0D
Display Mode Dual	xConfiguration Video Monitors: Dual\x0D
Display Mode Dual Presentation Only	xConfiguration Video Monitors: DualPresentationOnly\x0D
Display Mode Single	xConfiguration Video Monitors: Single\x0D
DNS Domain Name Command None	xConfiguration Network 1 DNS Domain Name: string\x0D
DNS Server Address Command None	xConfiguration Network 1 DNS Server 1 Address: string\x0D
Do Not Disturb Active	xCommand Conference DoNotDisturb Activate\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Do Not Disturb Inactive	xCommand Conference DoNotDisturb Deactivate\x0D
DTMF #	xCommand Call DTMFSend DTMFString:#\x0D
DTMF *	xCommand Call DTMFSend DTMFString:*\x0D
DTMF 0	xCommand Call DTMFSend DTMFString:0\x0D
DTMF 9	xCommand Call DTMFSend DTMFString:9\x0D
Far End Camera Pan/Tilt Down	xCommand Call FarEndControl Camera Move Value:Down\x0D
Far End Camera Pan/Tilt Left	xCommand Call FarEndControl Camera Move Value:Left\x0D
Far End Camera Pan/Tilt Right	xCommand Call FarEndControl Camera Move Value:Right\x0D
Far End Camera Pan/Tilt Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Camera Pan/Tilt Up	xCommand Call FarEndControl Camera Move Value:Up\x0D
Far End Camera Preset Recall 1	xCommand Call FarEndControl RoomPreset Activate PresetId: 1\x0D
Far End Camera Preset Recall 15	xCommand Call FarEndControl RoomPreset Activate PresetId:15\x0D
Far End Camera Source 0	xCommand Call FarEndControl Source Select SourceId:0\x0D
Far End Camera Source 15	xCommand Call FarEndControl Source Select SourceId:15\x0D
Far End Camera Zoom Stop	xCommand Call FarEndControl Camera Stop\x0D
Far End Control Off	xConfiguration Conference FarEndControl Mode: Off\x0D
Far End Control On	xConfiguration Conference FarEndControl Mode: On\x0D
H323 Gatekeeper Address Command None	xConfiguration H323 Gatekeeper Address: string\x0D
H323Alias E164 Command None	xConfiguration H323 H323Alias E164: string\x0D
H323Alias ID Command None	xConfiguration H323 H323Alias ID: string\x0D
H323Profile Authentication LoginName Command None	xConfiguration H323 Authentication LoginName: string\x0D
H323Profile Authentication Password Command None	xConfiguration H323 Authentication Password: string\x0D
Hook Accept Protocol Auto	xCommand Call Accept\x0D
Hook Accept Protocol H320	xCommand Call Accept\x0D
Hook Accept Protocol H323	xCommand Call Accept\x0D
Hook Accept Protocol SIP	xCommand Call Accept\x0D
Hook Accept Protocol Spark	xCommand Call Accept\x0D
Hook Dial Protocol Auto	xCommand Dial Number:"string"\x0D
Hook Dial Protocol H320	xCommand Dial Number:"string" Protocol:H320\x0D
Hook Dial Protocol H323	xCommand Dial Number:"string" Protocol:H323\x0D
Hook Dial Protocol SIP	xCommand Dial Number:"string" Protocol:Sip\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Hook Dial Protocol Spark	xCommand Dial Number:"string" Protocol:Spark\x0D
Hook Disconnect 1 Protocol Auto	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 1 Protocol H320	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 1 Protocol H323	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 1 Protocol SIP	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 1 Protocol Spark	xCommand Call Disconnect CallId: 1\x0D
Hook Disconnect 2 Protocol Auto	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 2 Protocol H320	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 2 Protocol H323	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 2 Protocol SIP	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 2 Protocol Spark	xCommand Call Disconnect CallId: 2\x0D
Hook Disconnect 3 Protocol Auto	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 3 Protocol H320	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 3 Protocol H323	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 3 Protocol SIP	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 3 Protocol Spark	xCommand Call Disconnect CallId: 3\x0D
Hook Disconnect 4 Protocol Auto	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 4 Protocol H320	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 4 Protocol H323	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 4 Protocol SIP	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 4 Protocol Spark	xCommand Call Disconnect CallId: 4\x0D
Hook Disconnect 5 Protocol Auto	xCommand Call Disconnect CallId: 5\x0D
Hook Disconnect 5 Protocol H320	xCommand Call Disconnect CallId: 5\x0D
Hook Disconnect 5 Protocol H323	xCommand Call Disconnect CallId: 5\x0D
Hook Disconnect 5 Protocol SIP	xCommand Call Disconnect CallId: 5\x0D
Hook Disconnect 5 Protocol Spark	xCommand Call Disconnect CallId: 5\x0D
Hook Hold 1 Protocol Auto	xCommand Call Hold CallId: 1\x0D
Hook Hold 1 Protocol H320	xCommand Call Hold CallId: 1\x0D
Hook Hold 1 Protocol H323	xCommand Call Hold CallId: 1\x0D
Hook Hold 1 Protocol SIP	xCommand Call Hold CallId: 1\x0D
Hook Hold 1 Protocol Spark	xCommand Call Hold CallId: 1\x0D
Hook Hold 2 Protocol Auto	xCommand Call Hold CallId: 2\x0D
Hook Hold 2 Protocol H320	xCommand Call Hold CallId: 2\x0D
Hook Hold 2 Protocol H323	xCommand Call Hold CallId: 2\x0D
Hook Hold 2 Protocol SIP	xCommand Call Hold CallId: 2\x0D
Hook Hold 2 Protocol Spark	xCommand Call Hold CallId: 2\x0D
Hook Hold 3 Protocol Auto	xCommand Call Hold CallId: 3\x0D
Hook Hold 3 Protocol H320	xCommand Call Hold CallId: 3\x0D
Hook Hold 3 Protocol H323	xCommand Call Hold CallId: 3\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Hook Hold 3 Protocol SIP	xCommand Call Hold CallId: 3\x0D
Hook Hold 3 Protocol Spark	xCommand Call Hold CallId: 3\x0D
Hook Hold 4 Protocol Auto	xCommand Call Hold CallId: 4\x0D
Hook Hold 4 Protocol H320	xCommand Call Hold CallId: 4\x0D
Hook Hold 4 Protocol H323	xCommand Call Hold CallId: 4\x0D
Hook Hold 4 Protocol SIP	xCommand Call Hold CallId: 4\x0D
Hook Hold 4 Protocol Spark	xCommand Call Hold CallId: 4\x0D
Hook Hold 5 Protocol Auto	xCommand Call Hold CallId: 5\x0D
Hook Hold 5 Protocol H320	xCommand Call Hold CallId: 5\x0D
Hook Hold 5 Protocol H323	xCommand Call Hold CallId: 5\x0D
Hook Hold 5 Protocol SIP	xCommand Call Hold CallId: 5\x0D
Hook Hold 5 Protocol Spark	xCommand Call Hold CallId: 5\x0D
Hook Join 1 Protocol Auto	xCommand Call Join CallId: 1\x0D
Hook Join 1 Protocol H320	xCommand Call Join CallId: 1\x0D
Hook Join 1 Protocol H323	xCommand Call Join CallId: 1\x0D
Hook Join 1 Protocol SIP	xCommand Call Join CallId: 1\x0D
Hook Join 1 Protocol Spark	xCommand Call Join CallId: 1\x0D
Hook Join 2 Protocol Auto	xCommand Call Join CallId: 2\x0D
Hook Join 2 Protocol H320	xCommand Call Join CallId: 2\x0D
Hook Join 2 Protocol H323	xCommand Call Join CallId: 2\x0D
Hook Join 2 Protocol SIP	xCommand Call Join CallId: 2\x0D
Hook Join 2 Protocol Spark	xCommand Call Join CallId: 2\x0D
Hook Join 3 Protocol Auto	xCommand Call Join CallId: 3\x0D
Hook Join 3 Protocol H320	xCommand Call Join CallId: 3\x0D
Hook Join 3 Protocol H323	xCommand Call Join CallId: 3\x0D
Hook Join 3 Protocol SIP	xCommand Call Join CallId: 3\x0D
Hook Join 3 Protocol Spark	xCommand Call Join CallId: 3\x0D
Hook Join 4 Protocol Auto	xCommand Call Join CallId: 4\x0D
Hook Join 4 Protocol H320	xCommand Call Join CallId: 4\x0D
Hook Join 4 Protocol H323	xCommand Call Join CallId: 4\x0D
Hook Join 4 Protocol SIP	xCommand Call Join CallId: 4\x0D
Hook Join 4 Protocol Spark	xCommand Call Join CallId: 4\x0D
Hook Join 5 Protocol Auto	xCommand Call Join CallId: 5\x0D
Hook Join 5 Protocol H320	xCommand Call Join CallId: 5\x0D
Hook Join 5 Protocol H323	xCommand Call Join CallId: 5\x0D
Hook Join 5 Protocol SIP	xCommand Call Join CallId: 5\x0D
Hook Join 5 Protocol Spark	xCommand Call Join CallId: 5\x0D
Hook Reject Protocol Auto	xCommand Call Reject\x0D
Hook Reject Protocol H320	xCommand Call Reject\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Hook Reject Protocol H323	xCommand Call Reject\x0D
Hook Reject Protocol SIP	xCommand Call Reject\x0D
Hook Reject Protocol Spark	xCommand Call Reject\x0D
Hook Resume 1 Protocol Auto	xCommand Call Resume CallId: 1\x0D
Hook Resume 1 Protocol H320	xCommand Call Resume CallId: 1\x0D
Hook Resume 1 Protocol H323	xCommand Call Resume CallId: 1\x0D
Hook Resume 1 Protocol SIP	xCommand Call Resume CallId: 1\x0D
Hook Resume 1 Protocol Spark	xCommand Call Resume CallId: 1\x0D
Hook Resume 2 Protocol Auto	xCommand Call Resume CallId: 2\x0D
Hook Resume 2 Protocol H320	xCommand Call Resume CallId: 2\x0D
Hook Resume 2 Protocol H323	xCommand Call Resume CallId: 2\x0D
Hook Resume 2 Protocol SIP	xCommand Call Resume CallId: 2\x0D
Hook Resume 2 Protocol Spark	xCommand Call Resume CallId: 2\x0D
Hook Resume 3 Protocol Auto	xCommand Call Resume CallId: 3\x0D
Hook Resume 3 Protocol H320	xCommand Call Resume CallId: 3\x0D
Hook Resume 3 Protocol H323	xCommand Call Resume CallId: 3\x0D
Hook Resume 3 Protocol SIP	xCommand Call Resume CallId: 3\x0D
Hook Resume 3 Protocol Spark	xCommand Call Resume CallId: 3\x0D
Hook Resume 4 Protocol Auto	xCommand Call Resume CallId: 4\x0D
Hook Resume 4 Protocol H320	xCommand Call Resume CallId: 4\x0D
Hook Resume 4 Protocol H323	xCommand Call Resume CallId: 4\x0D
Hook Resume 4 Protocol SIP	xCommand Call Resume CallId: 4\x0D
Hook Resume 4 Protocol Spark	xCommand Call Resume CallId: 4\x0D
Hook Resume 5 Protocol Auto	xCommand Call Resume CallId: 5\x0D
Hook Resume 5 Protocol H320	xCommand Call Resume CallId: 5\x0D
Hook Resume 5 Protocol H323	xCommand Call Resume CallId: 5\x0D
Hook Resume 5 Protocol SIP	xCommand Call Resume CallId: 5\x0D
Hook Resume 5 Protocol Spark	xCommand Call Resume CallId: 5\x0D
Input 1	xCommand Video Input SetMainVideoSource ConnectorId: 1\x0D
Input 5	xCommand Video Input SetMainVideoSource ConnectorId: 5\x0D
Input HDMI Level 0 Input HDMI 1	xConfiguration Audio Input HDMI 1 Level:0\x0D
Input HDMI Level 0 Input HDMI 2	xConfiguration Audio Input HDMI 2 Level:0\x0D
Input HDMI Level 0 Input HDMI 3	xConfiguration Audio Input HDMI 3 Level:0\x0D
Input HDMI Level -24 Input HDMI 1	xConfiguration Audio Input HDMI 1 Level:-24\x0D
Input HDMI Level -24 Input HDMI 2	xConfiguration Audio Input HDMI 2 Level:-24\x0D
Input HDMI Level -24 Input HDMI 3	xConfiguration Audio Input HDMI 3 Level:-24\x0D
Input Mic Level 0 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:0\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Input Mic Level 0 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:0\x0D
Input Mic Level 0 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:0\x0D
Input Mic Level 26 Input Microphone 1	xConfiguration Audio Input Microphone 1 Level:26\x0D
Input Mic Level 26 Input Microphone 2	xConfiguration Audio Input Microphone 2 Level:26\x0D
Input Mic Level 26 Input Microphone 3	xConfiguration Audio Input Microphone 3 Level:26\x0D
Input Mute Off Input HDMI 1	xConfiguration Audio Input HDMI 1 Mode:Off\x0D
Input Mute Off Input HDMI 2	xConfiguration Audio Input HDMI 2 Mode:Off\x0D
Input Mute Off Input Internal Microphone	xConfiguration Audio Input Microphone 1 Mode:Off\x0D
Input Mute Off Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:Off\x0D
Input Mute Off Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:Off\x0D
Input Mute Off Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:Off\x0D
Input Mute On Input HDMI 1	xConfiguration Audio Input HDMI 1 Mode:On\x0D
Input Mute On Input HDMI 2	xConfiguration Audio Input HDMI 2 Mode:On\x0D
Input Mute On Input Internal Microphone	xConfiguration Audio Input Microphone 1 Mode:On\x0D
Input Mute On Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode:On\x0D
Input Mute On Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode:On\x0D
Input Mute On Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode:On\x0D
IPv4 Address Command None	xConfiguration Network 1 IPv4 Address: string\x0D
IPv4 Gateway Command None	xConfiguration Network 1 IPv4 Gateway: string\x0D
IPv4 Subnet Mask Command None	xConfiguration Network 1 IPv4 SubnetMask: string\x0D
Layout Set Auto Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:auto\x0D
Layout Set Auto Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:auto\x0D
Layout Set Custom Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:custom\x0D
Layout Set Custom Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:custom\x0D
Layout Set Equal Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:equal\x0D
Layout Set Equal Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:equal\x0D
Layout Set Overlay Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:overlay\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Layout Set Overlay Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:overlay\x0D
Layout Set Prominent Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:prominent\x0D
Layout Set Prominent Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:prominent\x0D
Layout Set Single Target Local	xCommand Video Layout LayoutFamily Set Target: local LayoutFamily:single\x0D
Layout Set Single Target Remote	xCommand Video Layout LayoutFamily Set Target: remote LayoutFamily:single\x0D
Macro Activate Name testString	xCommand Macros Macro Activate Name: "testString"\x0D
Macro Auto Start Off	xConfiguration Macros AutoStart: Off\x0D
Macro Auto Start On	xConfiguration Macros AutoStart: On\x0D
Macro Deactivate Name testString	xCommand Macros Macro Deactivate Name: "testString"\x0D
Macro Mode Off	xConfiguration Macros Mode: Off\x0D
Macro Mode On	xConfiguration Macros Mode: On\x0D
Microphones Mute Off	xCommand Audio Microphones Unmute\x0D
Microphones Mute On	xCommand Audio Microphones Mute\x0D
People Count Out of Call Off	xConfiguration RoomAnalytics PeopleCountOutOfCall: Off\x0D
People Count Out of Call On	xConfiguration RoomAnalytics PeopleCountOutOfCall: On\x0D
People Presence Detector Off	xConfiguration RoomAnalytics PeoplePresenceDetector: Off\x0D
People Presence Detector On	xConfiguration RoomAnalytics PeoplePresenceDetector: On\x0D
Phonebook Folder ID Update None Phonebook Type Corporate	xCommand Phonebook Search PhonebookType:Local ContactType: Folder Offset: 0 Limit: 250\x0D
Phonebook Folder ID Update None Phonebook Type Local	xCommand Phonebook Search PhonebookType:Local ContactType: Folder Offset: 0 Limit: 250\x0D
Presentation ExternalSource Select Command None	xCommand UserInterface Presentation ExternalSource Select SourceIdentifier: "string"\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:1\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:1\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:2\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Presentation Start Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:2\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New ConnectorId:3\x0D
Presentation Start Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start ConnectorId:3\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New\x0D
Presentation Start Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:1\x0D
Presentation Start Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:1\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:2\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New	xCommand Presentation Start Instance:New SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Start SendingMode:LocalRemote PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1	xCommand Presentation Start Instance:1 SendingMode:LocalOnly PresentationSource:3\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6	xCommand Presentation Start Instance:6 SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance New	xCommand Presentation Start Instance:New SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Start SendingMode:LocalOnly PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1	xCommand Presentation Start Instance:1 PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6	xCommand Presentation Start Instance:6 PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New	xCommand Presentation Start Instance:New PresentationSource:3\x0D
Presentation Start Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Start PresentationSource:3\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop Instance:1 ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop Instance:6 ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance New	xCommand Presentation Stop Instance:New ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 1	xCommand Presentation Stop Instance:1 ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance 6	xCommand Presentation Stop Instance:6 ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance New	xCommand Presentation Stop Instance:New ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 1	xCommand Presentation Stop Instance:1 ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance 6	xCommand Presentation Stop Instance:6 ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance New	xCommand Presentation Stop Instance:New ConnectorId:1\x0D
Presentation Stop Video Input Source Connector Id 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop ConnectorId:1\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop Instance:1 ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop Instance:6 ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance New	xCommand Presentation Stop Instance:New ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 1	xCommand Presentation Stop Instance:1 ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance 6	xCommand Presentation Stop Instance:6 ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance New	xCommand Presentation Stop Instance:New ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 1	xCommand Presentation Stop Instance:1 ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance 6	xCommand Presentation Stop Instance:6 ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance New	xCommand Presentation Stop Instance:New ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop ConnectorId:2\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop Instance:1 ConnectorId:3\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop Instance:6 ConnectorId:3\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance New	xCommand Presentation Stop Instance:New ConnectorId:3\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop ConnectorId:3\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 1	xCommand Presentation Stop Instance:1 ConnectorId:3\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance 6	xCommand Presentation Stop Instance:6 ConnectorId:3\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance New	xCommand Presentation Stop Instance:New ConnectorId:3\x0D

Global Scripter Module Communication Sheet

Presentation Stop Video Input Source Connector Id 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop ConnectorId:3\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 1	xCommand Presentation Stop Instance:1 ConnectorId:3\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance 6	xCommand Presentation Stop Instance:6 ConnectorId:3\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance New	xCommand Presentation Stop Instance:New ConnectorId:3\x0D
Presentation Stop Video Input Source Connector Id 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop ConnectorId:3\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 1	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance 6	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance New	xCommand Presentation Stop Instance:New\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 1	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance 6	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance New	xCommand Presentation Stop Instance:New\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 1	xCommand Presentation Stop Instance:1\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance 6	xCommand Presentation Stop Instance:6\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance New	xCommand Presentation Stop Instance:New\x0D
Presentation Stop Video Input Source Not Specified Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance New	xCommand Presentation Stop Instance:New PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 1	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance 6	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance New	xCommand Presentation Stop Instance:New PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 1	xCommand Presentation Stop Instance:1 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance 6	xCommand Presentation Stop Instance:6 PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance New	xCommand Presentation Stop Instance:New PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 1 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop PresentationSource:1\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance New	xCommand Presentation Stop Instance:New PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 1	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance 6	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance New	xCommand Presentation Stop Instance:New PresentationSource:2\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Presentation Stop Video Input Source Presentation Source 2 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 1	xCommand Presentation Stop Instance:1 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance 6	xCommand Presentation Stop Instance:6 PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance New	xCommand Presentation Stop Instance:New PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 2 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop PresentationSource:2\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 1	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance 6	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance New	xCommand Presentation Stop Instance:New PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local and Remote Instance Not Specified	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 1	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance 6	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance New	xCommand Presentation Stop Instance:New PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Local Only Instance Not Specified	xCommand Presentation Stop PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 1	xCommand Presentation Stop Instance:1 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance 6	xCommand Presentation Stop Instance:6 PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance New	xCommand Presentation Stop Instance:New PresentationSource:3\x0D
Presentation Stop Video Input Source Presentation Source 3 Sending Mode Not Specified Instance Not Specified	xCommand Presentation Stop PresentationSource:3\x0D
Preset Recall 1	xCommand RoomPreset Activate PresetId:1\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Preset Recall 15	xCommand RoomPreset Activate PresetId:15\x0D
Preset Save 1	xCommand RoomPreset Store PresetId:1 Type:All\x0D
Preset Save 15	xCommand RoomPreset Store PresetId:15 Type:All\x0D
Reboot None	xCommand SystemUnit Boot Action:Restart\x0D
Restart Macros None	xCommand Macros Runtime Restart\x0D
Self View Default Fullscreen Mode Current	xConfiguration Video Selfview Default FullscreenMode:Current\x0D
Self View Default Fullscreen Mode Off	xConfiguration Video Selfview Default FullscreenMode:Off\x0D
Self View Default Fullscreen Mode On	xConfiguration Video Selfview Default FullscreenMode:On\x0D
Self View Off	xCommand Video Selfview Set Mode:Off\x0D
Self View On	xCommand Video Selfview Set Mode:On\x0D
Self View Position Center Left	xCommand Video Selfview Set PIPPosition:CenterLeft\x0D
Self View Position Center Right	xCommand Video Selfview Set PIPPosition:CenterRight\x0D
Self View Position Lower Left	xCommand Video Selfview Set PIPPosition:LowerLeft\x0D
Self View Position Lower Right	xCommand Video Selfview Set PIPPosition:LowerRight\x0D
Self View Position Upper Center	xCommand Video Selfview Set PIPPosition:UpperCenter\x0D
Self View Position Upper Left	xCommand Video Selfview Set PIPPosition:UpperLeft\x0D
Self View Position Upper Right	xCommand Video Selfview Set PIPPosition:UpperRight\x0D
SIP URI Command None	xConfiguration SIP URI: string\x0D
Sleep Timer 1	xCommand Standby ResetTimer Delay:1\x0D
Sleep Timer 480	xCommand Standby ResetTimer Delay:480\x0D
SpeakerTrack Control Off	xCommand Cameras SpeakerTrack Deactivate\x0D
SpeakerTrack Control On	xCommand Cameras SpeakerTrack Activate\x0D
SpeakerTrack Mode Auto	xConfiguration Cameras SpeakerTrack Mode: Auto\x0D
SpeakerTrack Mode Off	xConfiguration Cameras SpeakerTrack Mode: Off\x0D
Standby Activate	xCommand Standby Activate\x0D
Standby Deactivate	xCommand Standby Deactivate\x0D
Standby Halfwake	xCommand Standby Halfwake\x0D
System Unit Name Command None	xConfiguration SystemUnit Name: string\x0D
Volume 0	xCommand Audio Volume Set Level:0\x0D
Volume 100	xCommand Audio Volume Set Level:100\x0D

Appendix B. Update Commands

Audio Output Output Internal Speaker	xConfiguration Audio Output InternalSpeaker Mode\x0D
Audio Output Output Line	xConfiguration Audio Output Line 1 Mode\x0D
Auto Answer	xConfiguration Conference AutoAnswer Mode\x0D
Call Setup Mode	xConfiguration H323 CallSetup Mode\x0D
Call Status Call 1	xstatus call\x0D
Call Status Call 5	xstatus call\x0D
Display Mode	xConfiguration Video Monitors\x0D
DNS Domain Name	xStatus Network 1 DNS Domain Name\x0D
DNS Server Address Server 1	xStatus Network 1 DNS Server 1 Address\x0D
DNS Server Address Server 5	xStatus Network 1 DNS Server 5 Address\x0D
Do Not Disturb	xStatus Conference DoNotDisturb\x0D
Far End Control	xConfiguration Conference FarEndControl Mode\x0D
Firmware Version	xgetxml /status/standby\x0D
Gateway Address	xStatus Network 1 IPv4 Gateway\x0D
H323 Gatekeeper Address	xStatus H323 Gatekeeper Address\x0D
H323 Gatekeeper Status	xStatus H323 Gatekeeper Status\x0D
H323Alias ID Status	xConfiguration H323 H323Alias ID\x0D
Input	xStatus Video Input MainVideoSource\x0D
Input HDMI Level Input HDMI 1	xConfiguration Audio Input HDMI 1 Level\x0D
Input HDMI Level Input HDMI 2	xConfiguration Audio Input HDMI 2 Level\x0D
Input HDMI Level Input HDMI 3	xConfiguration Audio Input HDMI 3 Level\x0D
Input Mic Level Input Microphone 1	xConfiguration Audio Input Microphone 1 Level\x0D
Input Mic Level Input Microphone 2	xConfiguration Audio Input Microphone 2 Level\x0D
Input Mic Level Input Microphone 3	xConfiguration Audio Input Microphone 3 Level\x0D
Input Mute Input HDMI 1	xConfiguration Audio Input HDMI 1 Mode\x0D
Input Mute Input HDMI 2	xConfiguration Audio Input HDMI 2 Mode\x0D
Input Mute Input Internal Microphone	xConfiguration Audio Input Microphone 1 Mode\x0D
Input Mute Input Microphone 1	xConfiguration Audio Input Microphone 1 Mode\x0D
Input Mute Input Microphone 2	xConfiguration Audio Input Microphone 2 Mode\x0D
Input Mute Input Microphone 3	xConfiguration Audio Input Microphone 3 Mode\x0D
Input Signal Input 1	xStatus Video Input Connector 1 Connected\x0D
Input Signal Input 2	xStatus Video Input Connector 2 Connected\x0D
IP Address	xStatus Network 1 IPv4 Address\x0D
MAC Address	xStatus Network 1 Ethernet MacAddress\x0D
Macro Auto Start	xConfiguration Macros AutoStart\x0D
Macro Mode	xConfiguration Macros Mode\x0D

Global Scripter Module Communication Sheet

Revision: 9/23/2021

Microphones Mute	xStatus Audio Microphones Mute\x0D
Network Assignment	xConfiguration Network 1 IPv4 Assignment\x0D
People Count Current	xStatus RoomAnalytics PeopleCount Current\x0D
People Count Out of Call	xConfiguration RoomAnalytics PeopleCountOutOfCall\x0D
People Presence	xStatus RoomAnalytics PeoplePresence\x0D
People Presence Detector	xConfiguration RoomAnalytics PeoplePresenceDetector\x0D
Presentation Mode Status	xStatus Conference Presentation Mode\x0D
Presentation Sending Mode Status Instance 1	xStatus Conference Presentation LocalInstance 1 SendingMode\x0D
Presentation Sending Mode Status Instance 6	xStatus Conference Presentation LocalInstance 6 SendingMode\x0D
Presentation Source Status Instance 1	xStatus Conference Presentation LocalInstance 1 Source\x0D
Presentation Source Status Instance 6	xStatus Conference Presentation LocalInstance 6 Source\x0D
Self View	xStatus Video Selfview Mode\x0D
Self View Default Fullscreen Mode	xConfiguration Video Selfview Default FullscreenMode\x0D
Self View Position	xStatus Video Selfview PIPPosition\x0D
SIP Registration Status	xStatus SIP Registration 1 Status\x0D
SIP URI Status	xConfiguration SIP URI\x0D
SpeakerTrack Control	xStatus Cameras SpeakerTrack Status\x0D
SpeakerTrack Mode	xConfiguration Cameras SpeakerTrack Mode\x0D
Standby	xStatus Standby State\x0D
Subnet Mask	xStatus Network 1 IPv4 SubnetMask\x0D
System Unit Name Status	xConfiguration SystemUnit Name\x0D
Volume	xStatus Audio Volume\x0D