

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

---

## Device Specifications

Device Type: Lighting Control  
Manufacturer: Comm-Tec  
Firmware Version: N/A  
Model(s): CTG-LON/NX

## Tested on the Following Software and Firmware Versions

| IP Link Pro Control Processor Firmware | Global Scriptor Version |
|----------------------------------------|-------------------------|
| 2.06.0002-b002                         | 1.4.2                   |

## Version History

| Module Version | Date     | Notes           |
|----------------|----------|-----------------|
| 1_0_1_0        | 2/1/2018 | Initial Version |

---

## Module Notes

N/A

## Supported Classes and Examples

|                                                                                                 |
|-------------------------------------------------------------------------------------------------|
| <b>SerialClass</b>                                                                              |
| InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='CTG-LON/NX')               |
| <b>SerialOverEthernetClass</b>                                                                  |
| InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='CTG-LON/NX') |

## Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

|                                                                                        |                                                                                  |                                                                                           |                                                                                              |
|----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| <b>Command</b><br><b>HVACMode</b>                                                      | Value<br>'HVAC_AUTO'<br><br>'HVAC_COOL'<br><br>'HVAC_OFF'<br><br>'HVAC_FAN_ONLY' | Value<br>'HVAC_HEAT'<br><br>'HVAC_NIGHT_PURGE'<br><br>'HVAC_TEST'<br><br>'HVAC_FREE_COOL' | Value<br>'HVAC_MRNG_WRMUP'<br><br>'HVAC_PRE_COOL'<br><br>'HVAC_EMERG_HEAT'<br><br>'HVAC_ICE' |
| <b>Qualifier Key</b><br>'ID'                                                           | Qualifier Value<br>'1' – '32'                                                    |                                                                                           |                                                                                              |
| # HVACMode example<br>InterfaceName.Set('HVACMode', 'HVAC_AUTO', {'ID': '1'})          |                                                                                  |                                                                                           |                                                                                              |
| <b>Command</b><br><b>Occupancy</b>                                                     | Value<br>'Area is occupied'<br><br>'Area is temporarily unoccupied'              | Value<br>'Area is unoccupied'                                                             | Value<br>'Area is temporarily occupied for the bypass period'                                |
| <b>Qualifier Key</b><br>'ID'                                                           | Qualifier Value<br>'1' – '32'                                                    |                                                                                           |                                                                                              |
| # Occupancy example<br>InterfaceName.Set('Occupancy', 'Area is occupied', {'ID': '1'}) |                                                                                  |                                                                                           |                                                                                              |
| <b>Command</b><br><b>Preset</b>                                                        | Value<br>0 – 655352                                                              |                                                                                           |                                                                                              |
| <b>Qualifier Key</b><br>'ID'                                                           | Qualifier Value<br>'1' – '32'                                                    |                                                                                           |                                                                                              |
| # Preset example<br>InterfaceName.Set('Preset', 655352, {'ID': '1'})                   |                                                                                  |                                                                                           |                                                                                              |
| <b>Command</b><br><b>Setting</b>                                                       | Value<br>0 to 100 in steps of 1                                                  |                                                                                           |                                                                                              |
| <b>Qualifier Key</b><br>'ID'                                                           | Qualifier Value<br>'1' – '64'                                                    |                                                                                           |                                                                                              |
| <b>Qualifier Key</b><br>'Function'                                                     | Qualifier Value<br>'On'<br><br>'Down'                                            | Qualifier Value<br>'Off'<br><br>'Stop'                                                    | Qualifier Value<br>'Up'<br><br>'State'                                                       |
| <b>Qualifier Key</b>                                                                   | -359.98 – 360                                                                    |                                                                                           |                                                                                              |

|                                                                                                        |                                   |
|--------------------------------------------------------------------------------------------------------|-----------------------------------|
| <b>'Rotation'</b>                                                                                      |                                   |
| # Setting example<br>InterfaceName.Set('Setting', 100, {'ID': '1', 'Function': 'On', 'Rotation': 360}) |                                   |
| Command<br><b>State</b>                                                                                | Value<br>'1'                      |
| Qualifier Key<br><b>'ID'</b>                                                                           | Qualifier Value<br>'1' – '16'     |
| Qualifier Key<br><b>'Bit'</b>                                                                          | Qualifier Value<br>'0' – '15'     |
| # State example<br>InterfaceName.Set('State', '1', {'ID': '1', 'Bit': '0'})                            |                                   |
| Command<br><b>SwitchState</b>                                                                          | Value<br>'1'                      |
| Qualifier Key<br><b>'ID'</b>                                                                           | Qualifier Value<br>'1' – '64'     |
| # SwitchState example<br>InterfaceName.Set('SwitchState', '1', {'ID': '1'})                            |                                   |
| Command<br><b>SwitchValue</b>                                                                          | Value<br>0 to 100 in steps of 0.5 |
| Qualifier Key<br><b>'ID'</b>                                                                           | Qualifier Value<br>'1' – '64'     |
| # SwitchValue example<br>InterfaceName.Set('SwitchValue', 100, {'ID': '1'})                            |                                   |

**Status Available**
**N/A**

---

## Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

## Notes for the Device

---

### Serial communication

**Port Type:** RS-232

**Baud Rate:** 38400


**Data Bits:** 8

**Parity:** None

**Stop Bits:** One

**Flow Control:** None

### Pin Assignments Diagram

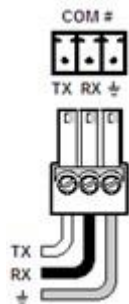

| Signal | Main Cable | Pin | Signal |
|--------|------------|-----|--------|
| TxD    |            | 2   | TxD    |
| RxD    |            | 3   | RxD    |
| GND    |            | 5   | GND    |



**Appendix A. Set Commands**

|                                                                       |                            |
|-----------------------------------------------------------------------|----------------------------|
| HVAC Mode HVAC_AUTO ID 1                                              | \xFE0w642:1:0\xFF          |
| HVAC Mode HVAC_COOL ID 1                                              | \xFE0w642:1:3\xFF          |
| HVAC Mode HVAC_EMERG_HEAT ID 1                                        | \xFE0w642:1:8\xFF          |
| HVAC Mode HVAC_FAN_ONLY ID 1                                          | \xFE0w642:1:9\xFF          |
| HVAC Mode HVAC_FREE_COOL ID 1                                         | \xFE0w642:1:10\xFF         |
| HVAC Mode HVAC_HEAT ID 1                                              | \xFE0w642:1:1\xFF          |
| HVAC Mode HVAC_ICE ID 1                                               | \xFE0w642:1:11\xFF         |
| HVAC Mode HVAC_MRNG_WRMUP ID 1                                        | \xFE0w642:1:2\xFF          |
| HVAC Mode HVAC_NIGHT_PURGE ID 1                                       | \xFE0w642:1:4\xFF          |
| HVAC Mode HVAC_OFF ID 1                                               | \xFE0w642:1:6\xFF          |
| HVAC Mode HVAC_PRE_COOL ID 1                                          | \xFE0w642:1:5\xFF          |
| HVAC Mode HVAC_TEST ID 1                                              | \xFE0w642:1:7\xFF          |
| HVAC Mode HVAC_AUTO ID 32                                             | \xFE0w673:1:0\xFF          |
| HVAC Mode HVAC_COOL ID 32                                             | \xFE0w673:1:3\xFF          |
| HVAC Mode HVAC_EMERG_HEAT ID 32                                       | \xFE0w673:1:8\xFF          |
| HVAC Mode HVAC_FAN_ONLY ID 32                                         | \xFE0w673:1:9\xFF          |
| HVAC Mode HVAC_FREE_COOL ID 32                                        | \xFE0w673:1:10\xFF         |
| HVAC Mode HVAC_HEAT ID 32                                             | \xFE0w673:1:1\xFF          |
| HVAC Mode HVAC_ICE ID 32                                              | \xFE0w673:1:11\xFF         |
| HVAC Mode HVAC_MRNG_WRMUP ID 32                                       | \xFE0w673:1:2\xFF          |
| HVAC Mode HVAC_NIGHT_PURGE ID 32                                      | \xFE0w673:1:4\xFF          |
| HVAC Mode HVAC_OFF ID 32                                              | \xFE0w673:1:6\xFF          |
| HVAC Mode HVAC_PRE_COOL ID 32                                         | \xFE0w673:1:5\xFF          |
| HVAC Mode HVAC_TEST ID 32                                             | \xFE0w673:1:7\xFF          |
| Occupancy Area is occupied ID 1                                       | \xFE0w578:1:0\xFF          |
| Occupancy Area is temporarily occupied for the<br>bypass period ID 1  | \xFE0w578:1:2\xFF          |
| Occupancy Area is temporarily unoccupied ID 1                         | \xFE0w578:1:3\xFF          |
| Occupancy Area is unoccupied ID 1                                     | \xFE0w578:1:1\xFF          |
| Occupancy Area is occupied ID 32                                      | \xFE0w609:1:0\xFF          |
| Occupancy Area is temporarily occupied for the<br>bypass period ID 32 | \xFE0w609:1:2\xFF          |
| Occupancy Area is temporarily unoccupied ID 32                        | \xFE0w609:1:3\xFF          |
| Occupancy Area is unoccupied ID 32                                    | \xFE0w609:1:1\xFF          |
| Preset 0 ID 1                                                         | \xFE0w384:1:0/2:0\xFF      |
| Preset 655352 ID 1                                                    | \xFE0w384:1:0/2:655352\xFF |
| Preset 0 ID 32                                                        | \xFE0w415:1:0/2:0\xFF      |

**Global Scripter Module  
Communication Sheet**

Revision: 2/1/2018

|                                                          |                                   |
|----------------------------------------------------------|-----------------------------------|
| <b>Preset 655352 ID 32</b>                               | \xFE0w415:1:0/2:655352\xFF        |
| <b>Setting 0 ID 1 Function Down Rotation -359.98</b>     | \xFE0w224:1:2/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 1 Function Down Rotation -359.98</b>   | \xFE0w224:1:2/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 1 Function Down Rotation 360.0</b>       | \xFE0w224:1:2/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 1 Function Down Rotation 360.0</b>     | \xFE0w224:1:2/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 1 Function Off Rotation -359.98</b>      | \xFE0w224:1:0/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 1 Function Off Rotation -359.98</b>    | \xFE0w224:1:0/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 1 Function Off Rotation 360.0</b>        | \xFE0w224:1:0/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 1 Function Off Rotation 360.0</b>      | \xFE0w224:1:0/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 1 Function On Rotation -359.98</b>       | \xFE0w224:1:1/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 1 Function On Rotation -359.98</b>     | \xFE0w224:1:1/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 1 Function On Rotation 360.0</b>         | \xFE0w224:1:1/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 1 Function On Rotation 360.0</b>       | \xFE0w224:1:1/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 1 Function State Rotation -359.98</b>    | \xFE0w224:1:5/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 1 Function State Rotation -359.98</b>  | \xFE0w224:1:5/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 1 Function State Rotation 360.0</b>      | \xFE0w224:1:5/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 1 Function State Rotation 360.0</b>    | \xFE0w224:1:5/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 1 Function Stop Rotation -359.98</b>     | \xFE0w224:1:4/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 1 Function Stop Rotation -359.98</b>   | \xFE0w224:1:4/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 1 Function Stop Rotation 360.0</b>       | \xFE0w224:1:4/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 1 Function Stop Rotation 360.0</b>     | \xFE0w224:1:4/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 1 Function Up Rotation -359.98</b>       | \xFE0w224:1:3/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 1 Function Up Rotation -359.98</b>     | \xFE0w224:1:3/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 1 Function Up Rotation 360.0</b>         | \xFE0w224:1:3/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 1 Function Up Rotation 360.0</b>       | \xFE0w224:1:3/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 64 Function Down Rotation -359.98</b>    | \xFE0w287:1:2/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 64 Function Down Rotation -359.98</b>  | \xFE0w287:1:2/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 64 Function Down Rotation 360.0</b>      | \xFE0w287:1:2/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 64 Function Down Rotation 360.0</b>    | \xFE0w287:1:2/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 64 Function Off Rotation -359.98</b>     | \xFE0w287:1:0/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 64 Function Off Rotation -359.98</b>   | \xFE0w287:1:0/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 64 Function Off Rotation 360.0</b>       | \xFE0w287:1:0/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 64 Function Off Rotation 360.0</b>     | \xFE0w287:1:0/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 64 Function On Rotation -359.98</b>      | \xFE0w287:1:1/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 64 Function On Rotation -359.98</b>    | \xFE0w287:1:1/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 64 Function On Rotation 360.0</b>        | \xFE0w287:1:1/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 64 Function On Rotation 360.0</b>      | \xFE0w287:1:1/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 64 Function State Rotation -359.98</b>   | \xFE0w287:1:5/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 64 Function State Rotation -359.98</b> | \xFE0w287:1:5/2:100/3:-359.98\xFF |

# Global Scripter Module Communication Sheet

Revision: 2/1/2018

|                                                         |                                   |
|---------------------------------------------------------|-----------------------------------|
| <b>Setting 0 ID 64 Function State Rotation 360.0</b>    | \xFE0w287:1:5/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 64 Function State Rotation 360.0</b>  | \xFE0w287:1:5/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 64 Function Stop Rotation -359.98</b>   | \xFE0w287:1:4/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 64 Function Stop Rotation -359.98</b> | \xFE0w287:1:4/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 64 Function Stop Rotation 360.0</b>     | \xFE0w287:1:4/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 64 Function Stop Rotation 360.0</b>   | \xFE0w287:1:4/2:100/3:360.00\xFF  |
| <b>Setting 0 ID 64 Function Up Rotation -359.98</b>     | \xFE0w287:1:3/2:0/3:-359.98\xFF   |
| <b>Setting 100 ID 64 Function Up Rotation -359.98</b>   | \xFE0w287:1:3/2:100/3:-359.98\xFF |
| <b>Setting 0 ID 64 Function Up Rotation 360.0</b>       | \xFE0w287:1:3/2:0/3:360.00\xFF    |
| <b>Setting 100 ID 64 Function Up Rotation 360.0</b>     | \xFE0w287:1:3/2:100/3:360.00\xFF  |
| <b>State 0 ID 1 Bit 0</b>                               | \xFE0w144:1:0\xFF                 |
| <b>State 1 ID 1 Bit 0</b>                               | \xFE0w144:1:1\xFF                 |
| <b>State 0 ID 1 Bit 15</b>                              | \xFE0w144:16:0\xFF                |
| <b>State 1 ID 1 Bit 15</b>                              | \xFE0w144:16:1\xFF                |
| <b>State 0 ID 16 Bit 0</b>                              | \xFE0w159:1:0\xFF                 |
| <b>State 1 ID 16 Bit 0</b>                              | \xFE0w159:1:1\xFF                 |
| <b>State 0 ID 16 Bit 15</b>                             | \xFE0w159:16:0\xFF                |
| <b>State 1 ID 16 Bit 15</b>                             | \xFE0w159:16:1\xFF                |
| <b>Switch State 0 ID 1</b>                              | \xFE0w64:2:0\xFF                  |
| <b>Switch State 1 ID 1</b>                              | \xFE0w64:2:1\xFF                  |
| <b>Switch State 0 ID 64</b>                             | \xFE0w127:2:0\xFF                 |
| <b>Switch State 1 ID 64</b>                             | \xFE0w127:2:1\xFF                 |
| <b>Switch Value 0 ID 1</b>                              | \xFE0w64:1:0\xFF                  |
| <b>Switch Value 100 ID 1</b>                            | \xFE0w64:1:100\xFF                |
| <b>Switch Value 0 ID 64</b>                             | \xFE0w127:1:0\xFF                 |
| <b>Switch Value 100 ID 64</b>                           | \xFE0w127:1:100\xFF               |