

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Lighting Control
Manufacturer: Comm-Tec
Firmware Version: V1.02 (CTG-KNX/IP)
Model(s): CTG-KNX/IP, CTG-EIB/NX

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0002-b002	1.4.2

Version History

Module Version	Date	Notes
1_2_0_0	1/29/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- The DevicesTemperatureScale defines if communication to Temperature devices themselves is handled in Celsius or Fahrenheit. Default value is 'Celsius'. Devices Temperature Scale can be set to 'Celsius' or 'Fahrenheit'.
Example: `InterfaceName.DevicesTemperatureScale = 'Celsius'`
- The system needs to be pre-configured using the AVIT Terminal.
- The DPT Data Formats that are supported in this module are Format 1, Format 3, Format 5, and Format 9.
- Model CTG-EIB/NX supports Serial control only.
- Model CTG-KNX/IP supports Ethernet control only.
- The driver will put the device in the following mode on startup:
OV-, OE-, OQ-, OX-, OR-, OS-, OH-, ON-, OG-, OD+, OW-
- `InterfaceName.Update('InitializationStatus')` must be called every 10 seconds to maintain Connection Status with the device.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='CTG-KNX/IP')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='CTG-KNX/IP')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 10002, Model='CTG-KNX/IP')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command Dimmer	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Area'	Qualifier Value '0' – '15'		
Qualifier Key 'Line'	Qualifier Value '0' – '7'		
Qualifier Key 'Device'	Qualifier Value '0' – '255'		
# Dimmer example InterfaceName.Set('Dimmer', 'Up', {'Area': '0', 'Line': '0', 'Device': '0'})			
Command Scaling	Value 0 to 255 in steps of 1		
Qualifier Key 'Area'	Qualifier Value '0' – '15'		
Qualifier Key 'Line'	Qualifier Value '0' – '7'		
Qualifier Key 'Device'	Qualifier Value '0' – '255'		
# Scaling example InterfaceName.Set('Scaling', 255, {'Area': '0', 'Line': '0', 'Device': '0'})			
Command ScalingPercent	Value 0 to 100 in steps of 0.01 %		
Qualifier Key 'Area'	Qualifier Value '0' – '15'		
Qualifier Key 'Line'	Qualifier Value '0' – '7'		
Qualifier Key 'Device'	Qualifier Value '0' – '255'		
# ScalingPercent example InterfaceName.Set('ScalingPercent', 100, {'Area': '0', 'Line': '0', 'Device': '0'})			
Command Switch	Value 'On'	Value 'Off'	
Qualifier Key	Qualifier Value		

Global Scripter Module Communication Sheet

'Area'	'0' – '15'	
Qualifier Key 'Line'	Qualifier Value '0' – '7'	
Qualifier Key 'Device'	Qualifier Value '0' – '255'	
# Switch example InterfaceName.Set('Switch', 'On', {'Area': '0', 'Line': '0', 'Device': '0'})		
Command ThermostatSetpoint	Value -999 to 999 in steps of 0.01°	
Qualifier Key 'Area'	Qualifier Value '0' – '15'	
Qualifier Key 'Line'	Qualifier Value '0' – '7'	
Qualifier Key 'Device'	Qualifier Value '0' – '255'	
Qualifier Key 'Scale'	Qualifier Value 'Fahrenheit'	Qualifier Value 'Celsius'
# ThermostatSetpoint example InterfaceName.Set('ThermostatSetpoint', 123.45, {'Area': '0', 'Line': '0', 'Device': '0', 'Scale': 'Fahrenheit'})		

Status Available

For all commands, call Update to receive the latest status. All commands except for ThermostatSetpoint only needs to call Update method once upon initialization and the device will provide unsolicited responses for updated statuses. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AmbientTemperature	Value -999 to 999 in steps of 0.01°	
Qualifier Key 'Area'	Qualifier Value '0' – '15'	
Qualifier Key 'Line'	Qualifier Value '0' – '7'	
Qualifier Key 'Device'	Qualifier Value '0' – '255'	
Qualifier Key 'Scale'	Qualifier Value 'Fahrenheit'	Qualifier Value 'Celsius'
<pre># AmbientTemperature examples InterfaceName.Update('AmbientTemperature', {'Area': '0', 'Line': '0', 'Device': '0', 'Scale': 'Fahrenheit'}) Value = InterfaceName.ReadStatus('AmbientTemperature', {'Area': '0', 'Line': '0', 'Device': '0', 'Scale': 'Fahrenheit'}) InterfaceName.SubscribeStatus('AmbientTemperature', None, FeedbackHandler)</pre>		
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'
<pre># ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)</pre>		
Command InitializationStatus	Value 'Successful'	Value 'Not Successful'
<pre># InitializationStatus examples InterfaceName.Update('InitializationStatus')</pre>		

Global Scripter Module Communication Sheet

Revision: 1/29/2018

Value = InterfaceName.ReadStatus('InitializationStatus') InterfaceName.SubscribeStatus('InitializationStatus', None, FeedbackHandler)	
Command Scaling	Value 0 to 255 in steps of 1
Qualifier Key 'Area'	Qualifier Value '0' – '15'
Qualifier Key 'Line'	Qualifier Value '0' – '7'
Qualifier Key 'Device'	Qualifier Value '0' – '255'
# Scaling examples InterfaceName.Update('Scaling', {'Area': '0', 'Line': '0', 'Device': '0'}) Value = InterfaceName.ReadStatus('Scaling', {'Area': '0', 'Line': '0', 'Device': '0'}) InterfaceName.SubscribeStatus('Scaling', None, FeedbackHandler)	
Command ScalingPercent	Value 0 to 100 in steps of 0.01 %
Qualifier Key 'Area'	Qualifier Value '0' – '15'
Qualifier Key 'Line'	Qualifier Value '0' – '7'
Qualifier Key 'Device'	Qualifier Value '0' – '255'
# ScalingPercent examples InterfaceName.Update('ScalingPercent', {'Area': '0', 'Line': '0', 'Device': '0'}) Value = InterfaceName.ReadStatus('ScalingPercent', {'Area': '0', 'Line': '0', 'Device': '0'}) InterfaceName.SubscribeStatus('ScalingPercent', None, FeedbackHandler)	
Command Switch	Value Value 'On' 'Off'
Qualifier Key 'Area'	Qualifier Value '0' – '15'
Qualifier Key 'Line'	Qualifier Value '0' – '7'
Qualifier Key 'Device'	Qualifier Value '0' – '255'
# Switch examples InterfaceName.Update('Switch', {'Area': '0', 'Line': '0', 'Device': '0'}) Value = InterfaceName.ReadStatus('Switch', {'Area': '0', 'Line': '0', 'Device': '0'}) InterfaceName.SubscribeStatus('Switch', None, FeedbackHandler)	
Command ThermostatSetpoint	Value -999 to 999 in steps of 0.01°
Qualifier Key 'Area'	Qualifier Value '0' – '15'

Global Scripter Module Communication Sheet

Qualifier Key 'Line'	Qualifier Value '0' – '7'	
Qualifier Key 'Device'	Qualifier Value '0' – '255'	
Qualifier Key 'Scale'	Qualifier Value 'Fahrenheit'	Qualifier Value 'Celsius'
<pre># ThermostatSetpoint examples InterfaceName.Update('ThermostatSetpoint', {'Area': '0', 'Line': '0', 'Device': '0', 'Scale': 'Fahrenheit'}) Value = InterfaceName.ReadStatus('ThermostatSetpoint', {'Area': '0', 'Line': '0', 'Device': '0', 'Scale': 'Fahrenheit'}) InterfaceName.SubscribeStatus('ThermostatSetpoint', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Contact manufacturer for cable requirements.

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: Hardware

Pin Assignments Diagram

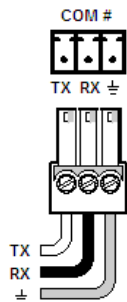

Please contact manufacturer for pin assignment diagram.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	10002
Logon Credentials Supported:	No
Multi-Connection	No
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device