

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Sony
Firmware Version: N/A
Model(s): FW-85XD8501, FW-65XD8501, FW-55XD8501, FW-75XD8501, FW-43XD8001, FW-49XD8001, FWD-100ZD9501

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0002-b001	1.4.2

Version History

Module Version	Date	Notes
1_0_2_0	5/10/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='FW-85XD8501')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='FW-85XD8501')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 20060, Model='FW-85XD8501')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio ^{1,4}	Value 'Wide Zoom' 'Normal' 'PC Full 2'	Value 'Full' 'PC Normal'	Value 'Zoom' 'PC Full 1'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Wide Zoom')			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command Channel	Value 'Up'	Value 'Down'	
# Channel example InterfaceName.Set('Channel', 'Up')			
Command Input	Value 'TV' 'HDMI 1' 'HDMI 4'	Value 'Video' 'HDMI 2' 'SCART' ³	Value 'Component' ² 'HDMI 3'
# Input example InterfaceName.Set('Input', 'TV')			
Command Keypad	Value '0' '3' '6' '9' 'Dot'	Value '1' '4' '7' '11' ³	Value '2' '5' '8' '12' ³
# Keypad example InterfaceName.Set('Keypad', '0')			
Command MenuNavigation	Value 'Up' 'Right' 'Return'	Value 'Down' 'Confirm' ³ 'Top Menu' ³	Value 'Left' 'Home' 'Popup Menu' ³

	'Select' ⁴	
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')		
Command PIPMode ³	Value 'On'	Value 'Off'
# PIPMode example InterfaceName.Set('PIPMode', 'On')		
Command Power	Value 'On'	Value 'Off'
# Power example InterfaceName.Set('Power', 'On')		
Command VideoMute	Value 'On'	Value 'Off'
# VideoMute example InterfaceName.Set('VideoMute', 'On')		
Command Volume	Value 0 to 100 in steps of 1	
# Volume example InterfaceName.Set('Volume', 100)		

¹ Depends on selected input.

² Not available on models FW-43XD8001, FW-49XD8001 and FWD-100ZD9501.

³ Only for Ethernet connection.

⁴ Only for Serial connection.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value 'TV' 'HDMI 1' 'HDMI 4'	Value 'Video' 'HDMI 2' 'SCART' ²	Value 'Component' ¹ 'HDMI 3'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command PIPMODE ²	Value 'On'	Value 'Off'	
# PIPMode examples InterfaceName.Update('PIPMODE') Value = InterfaceName.ReadStatus('PIPMODE') InterfaceName.SubscribeStatus('PIPMODE', None, FeedbackHandler)			
Command Power	Value 'On'	Value 'Off'	
# Power examples InterfaceName.Update('Power')			

<pre>Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>		
Command VideoMute ²	Value 'On'	Value 'Off'
<pre># VideoMute examples InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)</pre>		
Command Volume ²	Value 0 to 100 in steps of 1	
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>		

¹ Not available on models FW-43XD8001, FW-49XD8001 and FWD-100ZD9501.

² Only for Ethernet connection.

Cable and Adapter Requirements

For Built-in input models: Captive Screw to 3.5 mm Stereo Connector Serial Cable

For CBX-H11 models (FWD-100ZD9501): Please contact manufacturer for details

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600

Data Bits: 8

Parity: None

Stop Bits: One


Flow Control: None

Pin Assignments Diagram

FWD-100ZD9501

Please contact manufacturer for details

Other models

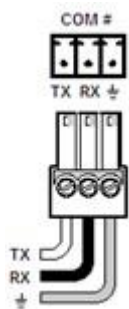

Signal	Main Cable	Pin	Signal
TxD	→	R	RxD
RxD	←	T	TxD
GND	→	S	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	20060
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Undetermined

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

To control the device properly in standby, the following settings need to be enabled:
Settings → Network → Home network setup → IP control → Simple IP Control → On

Appendix A. Set Commands (Serial)

Aspect Ratio Full	\x8C\x00D\x03\x01\x01\xD5
Aspect Ratio Normal	\x8C\x00D\x03\x01\x03\xD7
Aspect Ratio PC Full 1	\x8C\x00D\x03\x01\x06\xDA
Aspect Ratio PC Full 2	\x8C\x00D\x03\x01\x07\xDB
Aspect Ratio PC Normal	\x8C\x00D\x03\x01\x05\xD9
Aspect Ratio Wide Zoom	\x8C\x00D\x03\x01\x00\xD4
Aspect Ratio Zoom	\x8C\x00D\x03\x01\x02\xD6
Audio Mute Off	\x8C\x00\x06\x03\x01\x00\x96
Audio Mute On	\x8C\x00\x06\x03\x01\x01\x97
Channel Down	\x8C\x00g\x03\x01\x11\x08
Channel Up	\x8C\x00g\x03\x01\x10\x07
Input HDMI 1	\x8C\x00\x02\x03\x04\x01\x96
Input HDMI 2	\x8C\x00\x02\x03\x04\x02\x97
Input HDMI 3	\x8C\x00\x02\x03\x04\x03\x98
Input HDMI 4	\x8C\x00\x02\x03\x04\x04\x99
Input TV	\x8C\x00\x02\x02\x01\x91
Input Video	\x8C\x00\x02\x03\x02\x01\x94
Input Component	\x8C\x00\x02\x03\x03\x01\x95
Keypad 0	\x8C\x00g\x03\x01\x09\x00
Keypad 9	\x8C\x00g\x03\x01\x08\xFF
Keypad Dot	\x8C\x00g\x03\x97\x1D\xAA
Menu Navigation Down	\x8C\x00g\x03\x01u1
Menu Navigation Home	\x8C\x00g\x03\x01`W
Menu Navigation Left	\x8C\x00g\x03\x014+
Menu Navigation Return	\x8C\x00g\x03\x97#\xB0
Menu Navigation Right	\x8C\x00g\x03\x013*
Menu Navigation Select	\x8C\x00g\x03\x01e\
Menu Navigation Up	\x8C\x00g\x03\x01tk
Power Off	\x8C\x00\x01\x02\x01\x90
Video Mute Off	\x8C\x00\x0D\x03\x01\x00\x9D
Video Mute On	\x8C\x00\x0D\x03\x01\x01\x9E
Volume 0	\x8C\x00\x05\x03\x01\x00\x95
Volume 100	\x8C\x00\x05\x03\x01d\xF9

Appendix B. Update Commands (Serial)

Audio Mute	\x83\x00\x06\xff\xff\x87
Input	\x83\x00\x02\xff\xff\x83
Power	\x83\x00\x00\xff\xff\x81

Appendix C. Set Commands (Ethernet)

Audio Mute Off	*SCAMUT0000000000000000\x0A
Audio Mute On	*SCAMUT0000000000000001\x0A
Channel Down	*SCIRCC0000000000000034\x0A
Channel Up	*SCIRCC0000000000000033\x0A
Input HDMI 1	*SCINPT0000000100000001\x0A
Input HDMI 2	*SCINPT0000000100000002\x0A
Input HDMI 3	*SCINPT0000000100000003\x0A
Input HDMI 4	*SCINPT0000000100000004\x0A
Input TV	*SCINPT0000000000000000\x0A
Input Video	*SCINPT0000000300000001\x0A
Input SCART	*SCINPT0000000200000001\x0A
Keypad 0	*SCIRCC0000000000000027\x0A
Keypad 9	*SCIRCC0000000000000026\x0A
Keypad Dot	*SCIRCC0000000000000038\x0A
Keypad 11	*SCIRCC0000000000000028\x0A
Keypad 12	*SCIRCC0000000000000029\x0A
Menu Navigation Down	*SCIRCC0000000000000010\x0A
Menu Navigation Home	*SCIRCC0000000000000006\x0A
Menu Navigation Left	*SCIRCC0000000000000012\x0A
Menu Navigation Return	*SCIRCC0000000000000008\x0A
Menu Navigation Right	*SCIRCC0000000000000011\x0A
Menu Navigation Up	*SCIRCC0000000000000009\x0A
Menu Navigation Confirm	*SCIRCC0000000000000013\x0A
Menu Navigation Popup Menu	*SCIRCC0000000000000089\x0A
Menu Navigation Top Menu	*SCIRCC0000000000000088\x0A
PIP Mode Off	*SCPIPI0000000000000000\x0A
PIP Mode On	*SCPIPI0000000000000001\x0A
Power Off	*SCPOWR0000000000000000\x0A
Power On	*SCPOWR0000000000000001\x0A
Video Mute Off	*SCPMUT0000000000000000\x0A
Video Mute On	*SCPMUT0000000000000001\x0A
Volume 0	*SCVOLU0000000000000000\x0A
Volume 100	*SCVOLU0000000000000100\x0A

Appendix D. Update Commands (Ethernet)

Audio Mute	*SEAMUT#####\x0A
Input	*SEINPT#####\x0A
PIP Mode	*SEPIPI#####\x0A
Power	*SEPOWR#####\x0A
Video Mute	*SEPMUT#####\x0A
Volume	*SEVOLU#####\x0A