

RYing

HIGH-SPEED HAIR DRYER

User Manual

Please read this manual, together with all instructions and warning labels on the packaging and the product itself, carefully before first use.



READ BEFORE USE

Important Safety Instructions

**WARNING — MAGNETS**

The appliance, filters and accessories contain magnets. Keep them away from pacemakers, defibrillators, credit cards and electronic storage media.

WARNING

The following warnings apply to this product and to all tools and accessories used with it. To reduce the risk of fire, electric shock and personal injury:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the appliance by a person responsible for their safety.
2. Do not treat the appliance as a toy. Particular attention is required when it is used by or near children. Keep the appliance under supervision to ensure that children do not play with it.
3. If the appliance is used in a bathroom, unplug it after use. Even with the switch off, the proximity of water is still dangerous.
4. Do not use the appliance near a bathtub, shower, washbasin or other vessel filled with water. 
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a qualified person in order to avoid a hazard.
6. This appliance is equipped with a non-self-resetting thermal safety cut-out to prevent overheating. If the appliance cuts out, disconnect the plug from the mains socket and allow it to cool down.
7. **Note:** to avoid a hazard caused by accidental resetting of the thermal cut-out, the appliance must not be supplied through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
8. For added protection, it is recommended that the electrical circuit supplying the bathroom be protected by a residual current device (RCD) with a rated residual operating current not exceeding 30 mA. Consult a qualified electrician for installation.
9. Do not use the appliance for any purpose other than drying hair.
10. Do not touch the plug or any part of the appliance with wet hands.
11. Never pull the supply cord to disconnect the plug. Always grasp the plug itself, not the cord. The use of extension cords is not recommended.
12. Do not pull or place heavy pressure on the supply cord. Keep it away from heated surfaces and do not wrap it around the appliance.

13. Do not apply any lubricant, cleaner, polish or air freshener to any part of this appliance.
14. For maintenance or repair, please contact the official help line. Do not disassemble the appliance — improper disassembly may cause electric shock or fire.
15. Do not use the appliance and contact the official help line if it is not working as intended, has suffered a severe impact, has been dropped from a height, is damaged, has been left outdoors or has fallen into water.
16. Before any maintenance, repair or cleaning, disconnect the appliance from the power supply or unplug it.
17. The rated power is measured with the main unit fitted with no accessories.
18. Rated power is measured with the main unit operating without any accessories attached.

REMINDER

Before using the appliance, read the section "Important Safety Instructions" in this manual.

**CARE & STORAGE**

Caring for Your Appliance


1. Do not carry out any maintenance or repair work other than that described in this manual or recommended by the official help-line staff.
2. Before checking for a problem, always disconnect the plug from the mains. If the appliance does not work, first check that the socket is live and that the plug is inserted correctly.
3. The hair dryer is fitted with a removable air-inlet mesh. Remove and refit the mesh as required. Cleaning the fine mesh regularly helps prevent dust and hair from entering the appliance.
4. Store the hair dryer in a dry, well-ventilated place away from humid conditions.
5. Do not store the hair dryer where it is exposed to high temperatures or direct sunlight.
6. When storing, do not place heavy objects on top of the hair dryer, as this may damage internal components.

FINAL REMINDER



Retain this manual for future reference. Before each use, make sure the air inlet and outlet are clean and free of obstruction, and that the supply cord and plug are undamaged.

AT A GLANCE

Product Overview

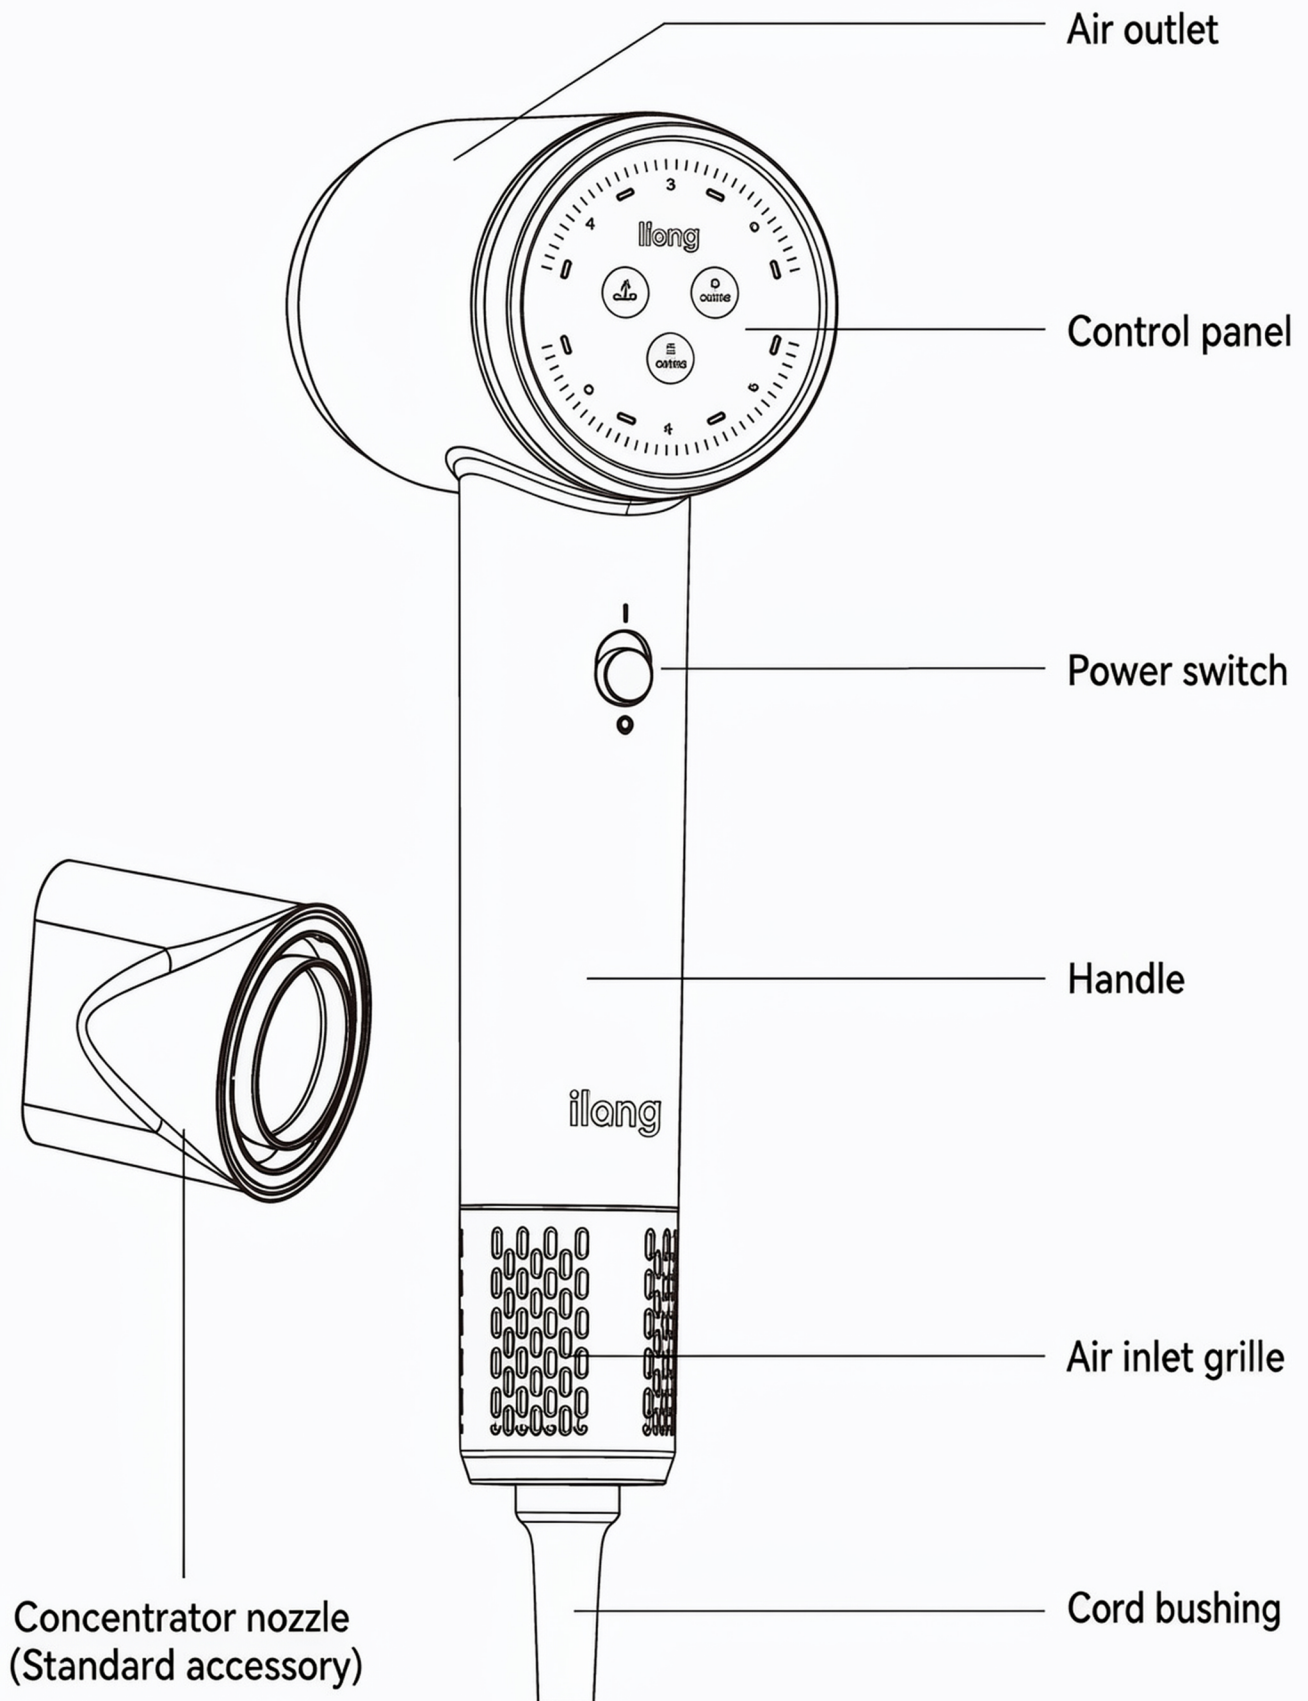

Setup Guide

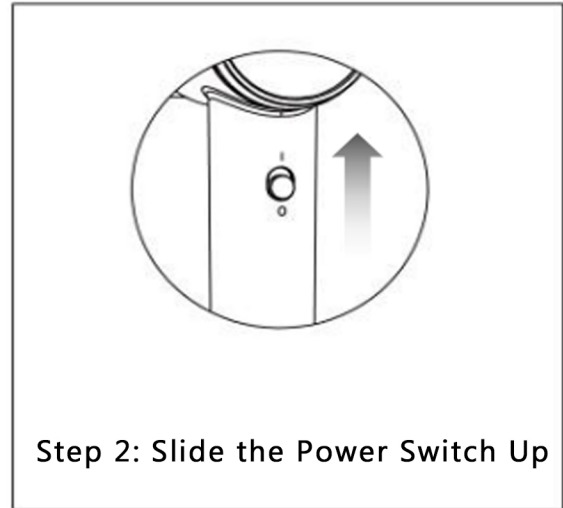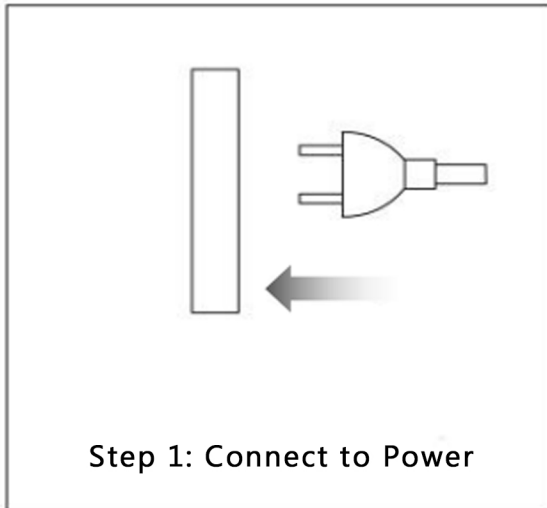


Airflow Setting

slide along the airflow bar for stepless speed control.

Hot & Cool Cycle:

press and hold the Hot & Cool Cycle button for 2 seconds to turn the function on or off.

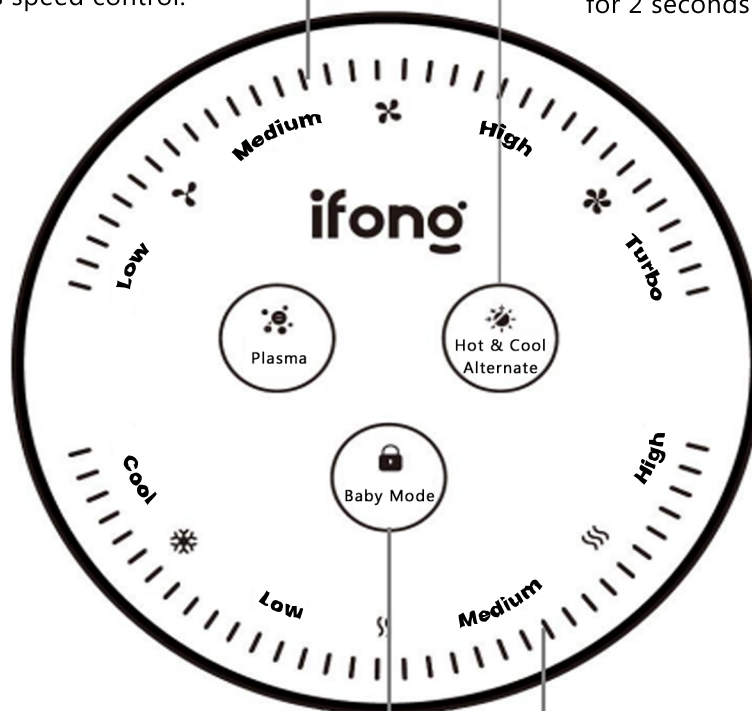

Baby Mode

Press and hold the Baby Mode button for 2 seconds to turn Baby Mode on or off.

Temperature Setting

Slide along the temperature bar to adjust the temperature freely.

HOW TO USE

Using Your Product

**TOUCH SCREEN****Touch-screen control after start-up**

After the appliance is switched on, all settings are controlled via the touch screen.

1. Function icons

A · PLASMA**Plasma function**

This function is activated automatically as soon as the appliance is switched on and cannot be switched off or controlled manually.

B · HOT / COLD CYCLE**Alternating hot and cold air**

How to start: long-press the icon for 2 seconds. The appliance will alternate between hot air (2 seconds) and cold air (5 seconds). The icon will flash until you press it again to stop the cycle.

C · BABY MODE**Gentle, mild airflow for children****1 Locate the baby-mode icon**

Find the baby-mode icon on the touch screen.

2 Activate baby mode

Long-press the baby-mode icon for 2 seconds. The indicator (or icon) will light up to confirm that it has been activated.

3 Exit baby mode

While in baby mode, long-press the baby-mode icon for 2 seconds again. The indicator (or icon) will switch off and the appliance will exit baby mode.

2. Wind speed control



MEMORY FUNCTION

The last selected speed is remembered

After being switched on, the appliance remembers the wind-speed setting used previously and starts automatically at that speed.

ADJUSTING WIND SPEED

Slide or tap to change the airflow

Gently slide or tap the speed bar on the touch screen. The indicators change according to your selection and the airflow changes with them: from left to right, the wind speed increases gradually.

3. Temperature control



MEMORY FUNCTION

The last selected temperature is remembered

After being switched on, the appliance remembers the temperature setting used previously and starts automatically at that temperature.

ADJUSTING TEMPERATURE

Slide or tap to change the temperature

Gently slide or tap the temperature bar on the touch screen. The indicators change according to your selection and the temperature changes with them: from left to right, the temperature rises gradually.

PRODUCT DATA

Basic Specifications

Product name	Electric hair dryer
Rated voltage	220 V ~
Rated frequency	50 Hz
Rated power	1500 W (accessories not included)
Product dimensions	250 × 93 × 71 mm (accessories not included)
Compliance standards	GB 4706.1 (IEC 60335-1); GB 4706.15 (IEC 60335-2-23); GB 4343.1 (EN 55014-1); GB 4343.2; GB 17625.1; GB 17625.2

TROUBLE SHOOTING

Troubleshooting

Symptom	Possible cause	Solution
Appliance does not work	Power failure; circuit fault; overheat protection triggered	Check that the supply cord is connected to the socket. Check that the power switch is on. Check that the socket is live. Unplug the appliance and try again after 15 minutes.
Appliance overheats	Used for too long; blocked ventilation; low voltage	Avoid continuous use for extended periods. Clean dust and hair from the air inlet and keep ventilation clear. Check the inlet and outlet for foreign objects and remove them. Avoid running other high-power appliances at the same time.
Reduced airflow	Blocked ventilation; motor fault; low voltage	Clean dust and hair from the air-inlet mesh. Check that the motor and fan are working properly.
Supply cord or plug becomes hot	Poor contact; worn socket; low voltage; prolonged use; circuit fault	Check that the plug and socket are properly connected. Check whether the socket or power strip is worn out. Check that several high-power appliances are not running at the same time. Check whether the appliance has been running for too long while the body also becomes hot.
Unusual smell	Foreign object drawn in; circuit fault; damaged component; over-voltage	Check for burnt hair or accumulated dust inside. Clean the dust and hair that has built up inside. Check whether the power supply is temporary or unstable. Avoid using the appliance during thunderstorms.

If the above troubleshooting steps do not resolve the problem, please contact our after-sales service (your sales representative or the online platform's customer support) for assistance. Do not attempt to disassemble or repair the appliance yourself, as this may create a safety hazard.

MATERIAL DECLARATION

Notes on Hazardous Substances

Component	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Cr(VI)	PBB	PBDE
Plastic parts	○	○	○	○	○	○
Metal parts	×	○	○	×	○	○
Supply cord	×	○	○	○	○	○
Circuit-board assembly	×	○	○	○	○	×
Motor assembly	×	○	○	○	○	○
Electronic control assembly	×	○	○	○	○	○
Accessories	○	○	○	○	○	○

○ All homogeneous materials comply with GB/T 26572

× Contains a substance exceeding the specified limit

NOTE ON RESTRICTED SUBSTANCES

For the components marked "×" above, certain hazardous substances exceed the specified limits because current industry technology does not yet allow them to be replaced or reduced.

ENVIRONMENTALLY FRIENDLY USE PERIOD

The reference marking for the environmentally friendly use period applies only when the product is operated under normal temperature, humidity and other working conditions.

Product Warranty

1-year limited warranty

Terms and conditions of the 1-year limited warranty.

What the warranty covers

1. Except where required otherwise by law, if a material, manufacturing or functional defect is found within one year from the date of purchase or delivery, we will, at our discretion, repair or replace the product (or, where any part is unavailable or no longer manufactured, replace it with an equivalent functional part).
2. The warranty is valid only while the product is used in the country or region in which it was sold.

What the warranty does *not* cover

Damage or defects resulting from any of the following are not covered:

1. Damage caused by failure to carry out the recommended product maintenance.
2. Accidental damage and faults resulting from careless, improper, negligent or rough handling, or from operating the product in any way that contradicts this manual.
3. Use of the product for any purpose outside the recommended scope of use.
4. Use of the product outside the scope of "normal use".
5. Use in a hair salon or by a stylist.
6. Parts that have not been assembled or installed in accordance with these instructions.
7. Use of non-original parts and accessories.
8. Incorrect installation (except where installed by an authorised party).
9. Repairs or modifications carried out by anyone other than an authorised party or its authorised agent.
10. Normal wear and tear (e.g. fuses).

Summary of warranty terms

1. The warranty takes effect from the date of purchase, or from the date of delivery if delivery takes place later than the purchase date.
2. Before any work is carried out on your product, you must provide proof of delivery or purchase, both initially and on any subsequent occasion. Without such proof, any work will be charged for. Please keep your receipt, delivery note or other proof of purchase in a safe place.
3. All work will be carried out by an authorised party or its authorised agent.
4. Any replaced parts become the property of the authorised party.

Disposal information: this product is made from high-grade recyclable materials. Please recycle it wherever possible.

