



High-Speed Hair Dryer

User Manual

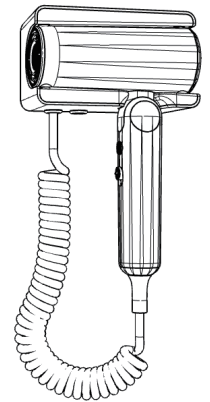

These symbols mean "Do not use while bathing or showering."
Illustrations of the hair dryer, accessories, and user interface in the user manual are for reference purposes only. The actual product may vary due to product updates and improvements.

Getting started

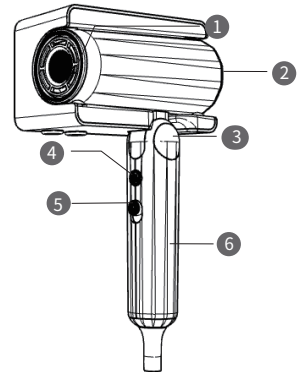


- 1 Air Outlet Vent
- 2 Air intake net
- 3 Digital display screen
- 4 Temperature settings/Airflow temperature indicator
- 5 On/Off Switch & Speed Settings
- 6 Handle

Settings

On/Off Switch & Speed Settings


Slide up and down to quickly switch between the two speed settings. Make sure that the switch is turned off before plugging the hair dryer in.

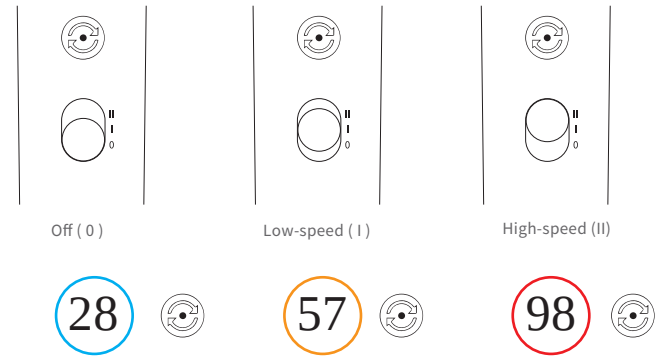


Digital display of wind temperature

The default air temperature upon startup is warm air. Press the wind temperature button to turn it into hot air. Press again to switch to cold air (Warm air - Hot air - Cold air) (Cold air - Warm air - Hot air). Press and hold for 3 s to activate the cold and hot cycle.

Installation

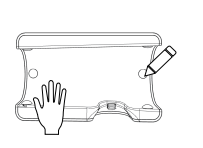

1. Mark the wall with a pencil to indicate the locaon of the bracket

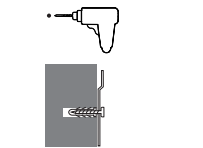

2. Insert the wall plug into the hole and insert the screw into the wall plug.



3. Hang the base unit on the bracket and fix the boom screw

Nozzle Functions and Usage

The hair dryer comes with magnetic noizles that areeasy to install and remove. Simply line up the nozzle with the metal ring around the air outlet to snap it inplace.

Basic Parameters

Product name	High-Speed Hair Dryer	
Model number	W513	
Rated voltage	220-240 V~	
Rated frequency	50/60 Hz	
Rated power	1600W	wind speed:29m/s
Product dimensions	134*69*241 mm	

Common Faults andTroubleshooting	Reason	Solution
Powers on butdoesn't work	The on/off button is invalidor internally damaged	Return to the factoryfor aftersale
The screen displayis abnormal	Internal malfunction.	Return to the factoryfor aftersale
There is a burnt smell during use	Internal parts are damaged.	Return to the factoryfor aftersale
No wind or small wind		
The body or hot air is abnormally high	Air inlet is blocked	Clean the air inlet net andinside filter of the handleand the rear cover slot filter
The inside of the fuse-lageis red and smoke is coming out	Safety guards are notworking properly.	Return to the factoryforaftersale
The root ofthe power cordor plug is defor-med,and thepower cord becomes hot	The power cord is damaged	Return to the factoryfor aftersale

Warining Usage and Storage

- Do not block the air outlet/air inlet of the hairdryer during working,otherwise it may cause the heating wire to turn red and cause a fire.
- Do not immerse the hair dryer in water.
- Do not use the hair dryer in a humid environment.
- Please keep the hair dryer dry, otherwise it may cause electric shock.
- Do not use it with wet hands, otherwise electric shock or short circuit may occur and cause a fire.
- Do not use it near petroleum gas or other flammable products(such as volatile agents, paint thinners,sprays etc.), .otherwise it may cause explosion or fire due to short circuit.
- Do not wrap the power cord around the main body of the product during storage, otherwise it may cause the power cord to break, electric shock or fire due to short circuit.


- Do not store in a highly humid place, otherwise it may cause electric shock or fire due to shortcircuit.
 - Keep out of reach of children and infants, as this may result in electric shock and injury.
 - Do not repair, disassemble or modify this product by yourself, otherwise it may cause injury due to fire or abnormal operation.
 - Do not use the power cord or plug if it is damaged or hot, otherwise it may cause burns, electric shock or fire due to short circuit.
- For extra protection.it is recommended to install a residual current device (RCD) witha rated residual operating current not exceeding 30mA in the electrical circuit supplying the bathroom.




Do not use this product near a athtub, shower washbasin or other utensils filled with water.

- During use, the air outlet and nozzle may become hot. Please do not touch it with your hands, otherwise it may cause burns.
- Do not use on infants or young children,otherwise it may cause burns.
- When using the hair dryer in the bathroom,please unplug it after use.
- Do not pull the power cord forcibly, otherwise it may cause the power cord to break, cause electric shock or short circuit and cause fire.
- This product is only used to dry hair and hair,do not use it to dry shoes and clothes, otherwise it may cause a fire due to short circuit.
- When using it in the bathroom, unplug it after use, because even after the hair dryer switch is turned off, it is still dangerous to get close to water,otherwise it may cause electric shock or injury.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service department or similar professionals in order to avoidhazards, otherwise it may cause accident or injury..

Installation

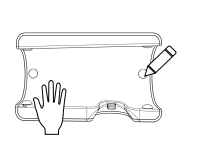

1. Mark the wall with a pencil to indicate the locaon of the bracket

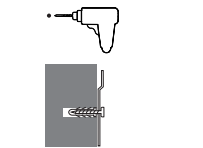

2. Insert the wall plug into the hole and insert the screw into the wall plug.



3. Hang the base unit on the bracket and fix the boom screw

Nozzle Functions and Usage

The hair dryer comes with magnetic noizles that areeasy to install and remove. Simply line up the nozzle with the metal ring around the air outlet to snap it inplace.

Basic Parameters

Product name	High-Speed Hair Dryer	
Model number	W513	
Rated voltage	220-240 V~	
Rated frequency	50/60 Hz	
Rated power	1600W	wind speed:29m/s
Product dimensions	134*69*241 mm	

Common Faults andTroubleshooting	Reason	Solution
Powers on butdoesn't work	The on/off button is invalidor internally damaged	Return to the factoryfor aftersale
The screen displayis abnormal	Internal malfunction.	Return to the factoryfor aftersale
There is a burnt smell during use	Internal parts are damaged.	Return to the factoryfor aftersale
No wind or small wind		
The body or hot air is abnormally high	Air inlet is blocked	Clean the air inlet net andinside filter of the handleand the rear cover slot filter
The inside of the fuse-lageis red and smoke is coming out	Safety guards are notworking properly.	Return to the factoryforaftersale
The root ofthe power cordor plug is defor-med,and thepower cord becomes hot	The power cord is damaged	Return to the factoryfor aftersale

Warining Usage and Storage

- Do not block the air outlet/air inlet of the hairdryer during working,otherwise it may cause the heating wire to turn red and cause a fire.
- Do not immerse the hair dryer in water.
- Do not use the hair dryer in a humid environment.
- Please keep the hair dryer dry, otherwise it may cause electric shock.
- Do not use it with wet hands, otherwise electric shock or short circuit may occur and cause a fire.
- Do not use it near petroleum gas or other flammable products(such as volatile agents, paint thinners,sprays etc.), .otherwise it may cause explosion or fire due to short circuit.
- Do not wrap the power cord around the main body of the product during storage, otherwise it may cause the power cord to break, electric shock or fire due to short circuit.

- Do not store in a highly humid place, otherwise it may cause electric shock or fire due to shortcircuit.
 - Keep out of reach of children and infants, as this may result in electric shock and injury.
 - Do not repair, disassemble or modify this product by yourself, otherwise it may cause injury due to fire or abnormal operation.
 - Do not use the power cord or plug if it is damaged or hot, otherwise it may cause burns, electric shock or fire due to short circuit.
- For extra protection.it is recommended to install a residual current device (RCD) witha rated residual operating current not exceeding 30mA in the electrical circuit supplying the bathroom.




Do not use this product near a athtub, shower washbasin or other utensils filled with water.

- During use, the air outlet and nozzle may become hot. Please do not touch it with your hands, otherwise it may cause burns.
- Do not use on infants or young children,otherwise it may cause burns.
- When using the hair dryer in the bathroom,please unplug it after use.
- Do not pull the power cord forcibly, otherwise it may cause the power cord to break, cause electric shock or short circuit and cause fire.
- This product is only used to dry hair and hair,do not use it to dry shoes and clothes, otherwise it may cause a fire due to short circuit.
- When using it in the bathroom, unplug it after use, because even after the hair dryer switch is turned off, it is still dangerous to get close to water,otherwise it may cause electric shock or injury.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service department or similar professionals in order to avoidhazards, otherwise it may cause accident or injury..


High-Speed Hair Dryer

User Manual

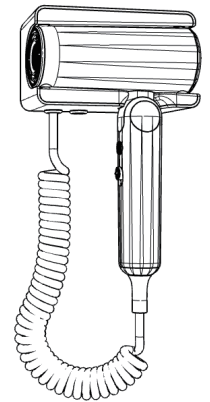

These symbols mean "Do not use while bathing or showering."
Illustrations of the hair dryer, accessories, and user interface in the user manual are for reference purposes only. The actual product may vary due to product updates and improvements.

Getting started

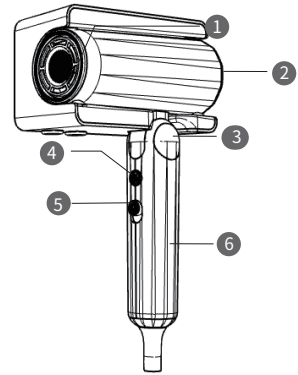

- 1 Air Outlet Vent
- 2 Air intake net
- 3 Digital display screen
- 4 Temperature settings/Airflow temperature indicator
- 5 On/Off Switch & Speed Settings
- 6 Handle

Settings

On/Off Switch & Speed Settings

Slide up and down to quickly switch between the two speed settings. Make sure that the switch is turned off before plugging the hair dryer in.

Off (0)	Low-speed (I)	High-speed (II)
 	 	 
28 	57 	98 

Digital display of wind temperature

The default air temperature upon startup is warm air Press the wind temperature button to turn it into hot air Press again to switch to cold air (Warm air - Hot air - Cold air) (Cold air - Warm air - Hot air) Press and hold for 3 s to activate the cold and hot cycle