

Axial cooling fan

Model CF-120 · Revision 04 · Sample document

01 Product overview



OPERATING TEMPERATURE

-20 C to 120 C

MAX FASTENING TORQUE

12 N m

RATED VOLTAGE

24 V DC

ACOUSTIC PRESSURE

55 dBA maximum

WARNING Isolate the power supply before servicing.


Wait until the rotor has stopped completely before opening the enclosure.

Use the specified torque; over-tightening can damage the mounting points.

Assembly overview

Identify parts for inspection and replacement

02 Exploded assembly

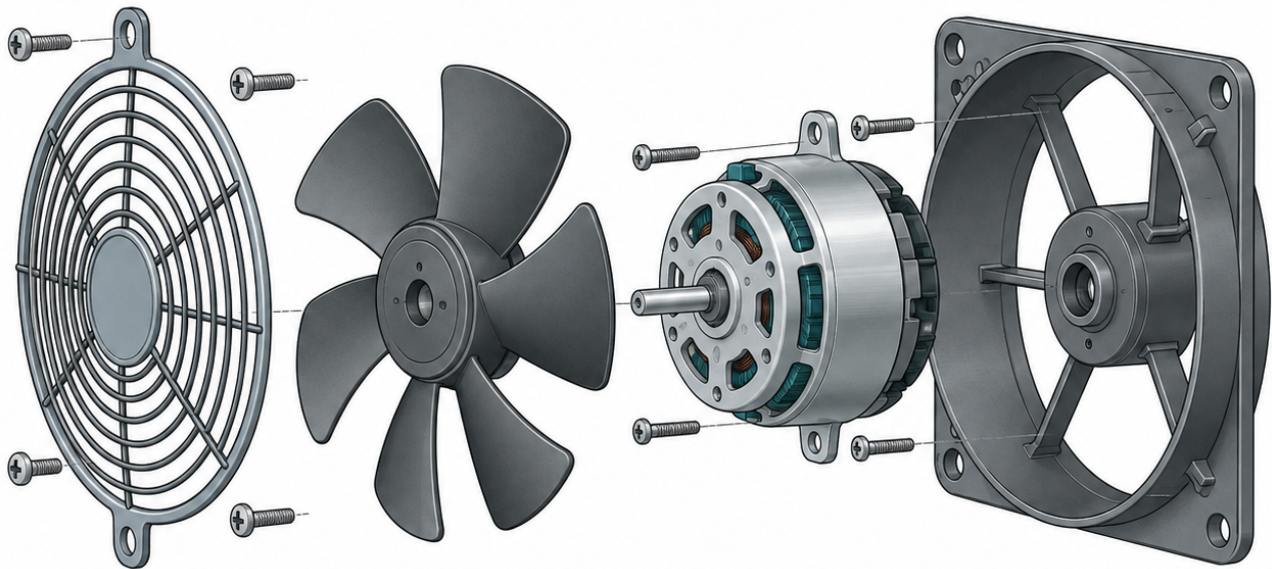

Front grille · Rotor and blades · Motor · Rear housing

Select a component and attach an inspection note or replacement label.

Vibration check

Routine maintenance · Sample evidence

03 Measurement in progress



CHECK Power remains isolated during the vibration reading.

Record the measurement value and compare it with the previous service.