# デジパワーTV レンズシステム DIGI POWER TV LENS SYSTEM

# L10プロトコル仕様書

(レンズ制御コンピュータ←→レンズ)

# PROTOCOL L10 SPECIFICATIONS

(LENS CONTROL COMPUTER←→ LENS)

Ver. 1.40

フジノン株式会社 FUJINON Corporation

# 1. SERIAL DATA FORMAT

1. 1 BIT RATE : 38.4kBPS : 8BIT 1. 2 DATA LENGTH 1. 3 STOP BIT : 1BIT 1. 4 PARITY : NON 1. 5 COMMUNICATION STANDARD : RS-232C

# 2. PIN ASSIGN

CONNECTOR ON THE LENS SIDE

BOX-TYPE LENS: DE-9PF-N (JAE)


HANDY LENS:

HR10G-10R-10S (HIROSE)

DE-9PF-N			HR10G	-10R-10S	3
PIN No.	FUNCT	TION	PIN No.	FUNCT	NOL
1	DCD	(CD)	1	RESER	VED
2	RxD	(RD)	2	RxD	(RD)
3	TxD	(SD)	3	TxD	(SD)
4	DTR	(ER)	4	DTR	(ER)
5	GND	(SG)	5	GND	(SG)
6	DSR	(DR)	6	DSR	(DR)
7	RTS	(RS)	7	RESER	VED
8	CTS	(CS)	8	RESER	VED
9	RI	(CI)	9	RESER	VED
			10	RESER	VED

# 3. PROTOCOL SEQUENCE

# 3. 1 LENS CONTROL

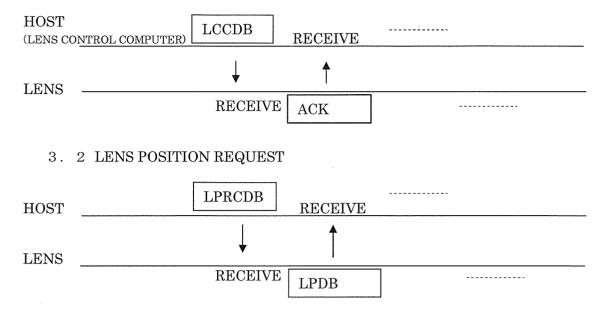

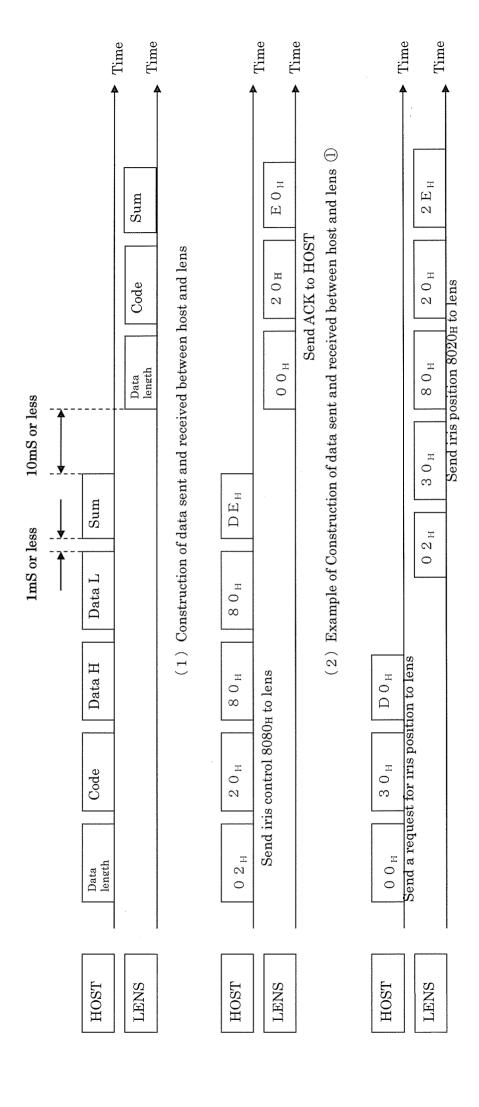


Fig. 1 Construction of data sent and received between host and lens

(3) Example of Construction of data sent and received between host and lens  $\ensuremath{\mathbb{Q}}$ 

#### 3. 3 CONSTRUCTION OF DATA SENT AND RECEIVED

#### COMMAND BLOCK DATA CONSTRUCTION

DATA LENGTH	FUNCTION CODE	FUNCTION DATA (Variable length)	CHECK SUM
1 byte	1 byte	$0 \sim 15$ byte	1 byte

#### DATA LENGTH

D7 D6 D5 D4	D3 D2	D1 D0
-------------	-------	-------

D7 ~ D4: 0000

D3 ~ D0: FUNCTION DATA LENGTH (0~15)

#### **FUNCTION CODE**

(4.1) ファンクションコード表 を参照。 Refer to ITEM 4 . 1 FUNCTION CODE TABLE.

#### **FUNCTION DATA**

2 バイト以上からなるファンクションデータは上位バイトから送信する。

For the function data made up of 2 bytes or more, the top several bytes are sent in order.

#### CHECK SUM

データ長からファンクションデータ 最下位バイトまでの総和の2の補数。 下記例を参照のこと。 A value where the sum of the data length, the function code, the function data, and the check sum amount becomes 0.

Please refer to the following example.

CHECK SUM =  $100_{H}$  -  $22_{H}$  = DE<sub>H</sub>

#### 3. 4 SPECIFICATION FOR COMMUNICATION-RELATED OPERATION

- 1) レンズコントロールコンピュータ(以下ホストと呼ぶ)主導の通信であり、ホストからのコマンドを受信しレンズが応答する。 レンズから先にコマンドを送信することはできない。
- 2) レンズは電源投入後, DSR の ON を確認して通信状態となる。 DSR はレンズと接続中, 常に ON でなければならない。 DTR は DSR を, RTS は CTS をループバックするが, CTS に関してはOFF の場合でもホストからのコマンド
- 1) A Lens control computer (hereinafter called "host") leads communications. The lens responds to a command received from the host. No commands can be sent from the lens first.
- 2) After the power is turned ON, the lens confirms that DSR is ON and readies for communications. DSR must be continuously ON while connecting to the lens. DTR loops back DSR and RTS loops back CTS. Even when CTS

があれば応答する。

- 3) ホストはレンズ電源投入後および受信 エラーやその他の通信エラーがあった 場合,ファンクションデータ長が 0 の 接続要求を送信し,レンズの応答を確 認してから通常の通信を行う。ホスト, レンズ共にエラーを検出したコマンド ブロックのデータは使用しないことと する。
- 4) レンズは電源投入後の最初の接続要求 で外部制御対応のためのリセット動作 を行う。 リセット動作中はファンクシ ョンデータ長が 1 (データ内容: 0H) の リセット時応答を返す。 リセット動作 の間ホストは接続要求を繰り返し送信 し、ファンクションデータ長が 0 の応 答があった時点でリセット動作の完了 を確認する。 ホストは通常動作中でも ファンクションデータ長が1(データ内 容: OH) のリセット要求で強制的にレ ンズリセットを行わせることができ る。但しリセット動作を行わないレン ズの場合, データ長1のコネクトを受 信してもリセット動作を行わず、デー タ長0の応答となる。

5) ホストはレンズから 10mSEC を超えて 応答が無い場合を除き、レンズからの 応答が返ってくるまでは、次のコマン ドを送信することができない(図1参 照)。

- is OFF the lens responds to a command from the host, if any.
- 3) After the power is turned ON and a receiving error and/or other communications errors occur for the lens, the host sends a connecting request command having no data to the lens. The host then confirms that the lens has responded to the command and communicates with the lens in the normal manner. Data from the command block in which errors occurred for both host and lens is not used.
- 4) On receiving the first connecting request command from the host after the power is turned ON, the lens is reset to cover the external control. During resetting, the lens returns a resetting response command having one piece of data (Data contents: 0) to the host computer. While the lens is in a resetting operation, the host sends a connecting request command to the lens repeatedly. The host confirms that the lens has been reset when the lens responds to the host computer by means of the command having no data. The host can force the lens to be reset by sending a reset request command having one piece of data (Data contents: 0) to the lens even during normal operations.

However the lens without reset function responds by sending a command having data (data length: 0) when receiving a command having data (data length: 1).

5) The host cannot send the next command to the lens until the lens responds to the host except if there is no response from the lens in 10 mSEC or more. (Fig.1)

- 6) ホストが送信するコマンドとレンズが応答するコマンドのファンクションコードは同一とする。 但し, レンズがリセット動作中の場合はホストからのいかなるコマンドに対してもファンクションデータ長が1の接続応答を返す。
- 7) レンズは、未定義、未対応のコマンドを受信したときは、アクノリッジ(同一ファンクションコードでデータ長0)を返す。 但し本仕様で示されていないコマンドに応答する場合もある。
- 8) ホスト,レンズ共に受信データにオーバーラン,フレーミング,チェックサムなどのエラーがあった場合や,コマンドブロック長がデータ長バイトで指定されたデータ長+3と異なる場合エラーと判断する。
- 9) ホストはコマンド送信後 10mSEC 以内 にレンズから応答がない場合エラーと 判断する(図1参照)。
- 10) ホスト、レンズ共に同一コマンドブロック内のバイト間隔は 1msec を超えてはならない。レンズ、ホスト共に受信コマンドブロックのバイト間隔が1msec を超えた場合エラーと判断する(図1参照)。
- 11) ホストからのコマンドが5秒以上無い場合、レンズはホストからの制御が終了したものと判断しローカルまたはカメラからの各制御を受付ける状態となる。但しその後ローカルまたはカメラの制御信号が変化したことを検出するまではそれまでの位置を保持する。

- 6) The function code of the command the host sends to the lens is the same as that of the command the lens sends back to the host. On receiving a command from the host during resetting, the lens sends back a connecting response command having one piece of data to the host.
- 7 ) When receiving an undefined command or a non-corresponding command from the host, the lens sends back ACKNOWLEDGE (same function code, data length: 0) to the host. In some cases the lens responds to a command not indicated in the Specifications.
- 8) Both lens and host judge that there is an error if the data contains an error such as an overrun, framing or check sum or if the length of the command block differs from the data length designated in data length bytes + 3.
- 9) The host judges that there is an error if the lens does not respond to the host within 10 mSEC after the host sends a command to the lens. (Fig.1)
- 10) For both lens and host, the byte intervals in the same command block must not be 1 mSEC or more. Both lens and host judge that there is an error if the byte intervals in the receiving command block are 1 mSEC or more.
- 1 1) If there is no command from the host in 5 seconds or more, the lens judges that the control from the host has finished and switches individual controls to local or camera. By the time the lens detects a change in local control signal or control signal from the camera, the position before switching is maintained.

- 12) レンズは DSR が OFF になった場合, 各制御をそれまでの設定にかかわらず ローカルまたはカメラに切り替える。 切り替え前の位置は保持しない。
- 1 2) If the lens or DSR is turned OFF, however, individual controls are switched to local or camera in spite of the settings made at that point. The position before switching is not maintained.

# 4. COMMAND LIST

# 4. 1 FUNCTION CODE TABLE

Functio n code	Function code name	$\mathrm{HOST} \to \mathrm{LENS}$		$\mathrm{LENS} \to \mathrm{HOST}$	
		Data length	Function description	Data length	Function description
		0	Connection request	0	Connection response
$01_{ m H}$	Connect	1	Lens reset request	1	Response at the time of resetting
$11_{ m H}$	Lens name 1	0	Request for the first half of the lens name	0~ 15	Response to the first half of the lens name
$12_{ m H}$	Lens name 2	0	Request for the second half of the lens name	0~ 15	Response to the second half of the lens name
$13_{ m H}$	Open F No.	0	Request for open-F No.	2	Response to open-F No.
14 <sub>H</sub>	Tele-end focal length	0	Request for tele-end focal length	2	Response to tele-end focal length
15 <sub>H</sub>	Wide-end focal length	0	Request for wide-end focal length	2	Response to wide end focal length
16 <sub>H</sub>	MOD	0	Request for MOD	2	Response to MOD
$20_{ m H}$	Iris control	2	Iris control	0	ACKNOWLEDGE
$21_{ m H}$	Zoom control	2	Zoom control	0	ACKNOWLEDGE
$22_{ m H}$	Focus control	2	Focus control	0	ACKNOWLEDGE
$30_{\mathrm{H}}$	Iris position	0	Request for iris position	2	Response to iris position
$31_{ m H}$	Zoom position	0	Request for zoom position	2	Response to zoom position
$32_{ m H}$	Focus position	0	Request for focus position	2	Response to focus position
$42_{ m H}$	Switch 2 control	1	Switch 2 control	0	ACKNOWLEDGE
$43_{ m H}$	Switch 3 control	1	Switch 3 control	0	ACKNOWLEDGE
$44_{ m H}$	Switch 4 control	1	Switch 4 control	0	ACKNOWLEDGE
$46_{ m H}$	Switch 6 control	1	Switch 6 control	0	ACKNOWLEDGE
$52_{ m H}$	Switch 2 position	0	Request for switch 2 position	1	Response to switch 2 position
53н	Switch 3 position	0	Request for switch 3 position	1	Response to switch 3 position
$54_{ m H}$	Switch 4 position	0	Request for switch 4 position	1	Response to switch 4 position
56н	Switch 6 position	0	Request for switch 6 position	1	Response to switch 6 position

Functio n code	Function code name		$\mathrm{HOST} \to \mathrm{LENS}$		$\mathrm{LENS} \to \mathrm{HOST}$	
		Data length	Function description	Data length	Function description	
$60_{ m H}$	Multiple data	0	Request for multiple data	1~ 7	Response to multiple data	
$70_{ m H}$	Multiple data setting	1~ 4	Request for setting of multiple data	1~ 4	Response to setting of multiple data	
$\mathrm{A1_{H}}$	PF evaluation area control	8	PF evaluation area control	0	ACKNOWLEDGE	
${ m A5_{H}}$	PF switch 0 control	1	PF switch 0 control	0	ACKNOWLEDGE	
$A7_{\rm H}$	PF switch 2 control	1	PF switch 2 control	0	ACKNOWLEDGE	
AF <sub>H</sub>	PF speed control	1	PF speed control	0	ACKNOWLEDGE	
В1н	PF evaluation area position	0	Request for PF evaluation area position	8	Response to PF evaluation area position	
В5н	PF switch 0 position	0	Request for PF switch 0 position	1	Response to PF swtch 0 position	
В6н	PF switch 1 position	0	Request for PF switch 1 position	1	Response to PF switch 1 position	
В7н	PF switch 2 position	0	Request for PF switch 2 position	1	Response to PF switch 2 position	
BF <sub>H</sub>	PF speed position	0	Request for PF speed position	1	Response to PF speed position	

## 4. 2 DETAILES OF FUNCTION DATA

# 01<sub>H</sub> CONNECT

データ長0の場合はホストからの接続要求 とレンズの接続応答となる。

データ長1の場合,ホストからの送信は強制リセット要求となり、レンズからの送信はリセット動作中の応答となる。何れのデータも内容は $0_H$ とする。ただしリセット動作を行わないレンズの場合,データ長1のコネクトを受信してもリセット動作を行わず、データ長0の応答を行う。

By sending a command having data (data length: 0) to the lens, the host makes a request for connection, and the lens responds to the host. By sending a command having data (data length: 1) to the lens, the host makes a forcible resetting of the lens and the lens tells the host that the lens is being reset. Contents of all the data are 0<sub>H</sub>. However, the lens without reset function responds by sending a command having data (data length: 0) when receiving a command having data (data length: 1). Please contact us, Fujinon to ask if your lens has a reset function.

## 11<sub>H</sub>,12<sub>H</sub> LENS NAME

レンズ名称を最大 30 文字の ASCII キャラクタで送る。 ホストは  $11_H$  の応答データが 15 バイトであった場合は  $12_H$  の要求も行う。

The name of a lens may be sent at up to 30 ASCII characters. The host also makes a request for 12<sub>H</sub> if the 11<sub>H</sub> response data is 15 bytes long.

#### 13<sub>H</sub> IRIS (FNo.) DATA FORMAT

 $10000_{\rm H}$ を  $\rm F1.0$  として 1 絞りあたり  $1000_{\rm H}$  とする。 $\rm Data$  は最大  $\rm FFFF_{\rm H}$ まで使用可能とする。

 $10000_{\rm H}$  is regarded as F1.0 with  $1000_{\rm H}$  per iris. Data can be used up to FFFF<sub>H</sub>.

 $FN_{0.} = 2^{(8 \times (1-Data/10000_H))}$  $Data = 10000_H \times (1 - log_2(FN_0)/8)$ 

# 14H, 15H, 16H DISTANCE DATA FORMAT

16bit のデータを上位 4bit の指数部 b と 下位 12bit の仮数部 a とに分ける。 The 16-bit data is divided into two parts: One is the exponent part b, made up of the upper 4 bits and the other is the mantissa part a, made up of the lower 12 bits.

b15 ~ b12	b11 ~ b0
ь	a

a は符号なしで 0  $\sim$  4095 を, b は符号付きで $-8\sim7$  を表し、全体で

 $a \times 10^b [m]$ 

の数値(距離)を表すものとする。

この方式では1つの距離を表すのに複数 の表現があり得るが、仮数部が最も大きく なるものを使う。

(例)

5.2mm は 0.0052m であり,

 $52 \times 10^{-4} \, \mathrm{[m]}$ 

 $520 \times 10^{-5} [m]$ 

の2通りの表し方があるが,仮数部の数値 が大きい下の例の方を採用する。

 $520 = 208_{\rm H}$ ,  $-5 = B_{\rm H}$ であるため  $B208_{\rm H}$  と表現する。

"a" represents 0 to 4095 without symbols, and "b" represents -8 to 7 with symbols. The exponent part and the mantissa part combined shall represent the value (distance) a  $\times$  10 b [m].

In this method, there are multiple expressions to indicate one distance. The one with which the mantissa part becomes maximum value is used.

(Example)

There are two equal expressions of 5.2 mm and 0.0052 m as follows:

 $52 \times 10^{-4}$  [m]

 $520 \times 10^{-5} [m]$ 

However, the second method is used since the mantissa part is larger.

Value 5.2 mm is represented as  $B208_H$  because  $520 = 208_H$  and  $-5 = B_H$ .

#### 20<sub>H</sub> IRIS CONTROL

可変範囲内を 0000H~FFFFH で表す。 0000Hがクローズ端, FFFFHが開放端。 The variable range is represented as  $0000_{\rm H}$  through FFFF<sub>H</sub>.  $0000_{\rm H}$  is the close end and FFFF<sub>H</sub> the open end.

#### 30<sub>H</sub> IRIS POSITION

可変範囲内を 0000H~FFFFH で表す。 0000Hがクローズ端, FFFFHが開放端。 The variable range is represented as  $0000_{\rm H}$  through FFFF<sub>H</sub>.  $0000_{\rm H}$  is the close end and FFFF<sub>H</sub> the open end.

#### 21H ZOOM CONTROL

可変範囲内を 0000<sub>H</sub>~FFFF<sub>H</sub> で表す。 | 0000<sub>H</sub>がワイド端, FFFF<sub>H</sub>がテレ端。

The variable range is represented as  $0000_{\rm H}$  through FFFF<sub>H</sub>.  $0000_{\rm H}$  is the wide end and FFFF<sub>H</sub> the tele-end.

#### 31H ZOOM POSITION

可変範囲内を 0000H~FFFFH で表す。 0000Hがワイド端, FFFFHがテレ端。 The variable range is represented as  $0000_{\rm H}$  through FFFF<sub>H</sub>.  $0000_{\rm H}$  is the wide end and FFFF<sub>H</sub> the tele-end.

#### 22<sub>H</sub> FOCUS CONTROL

可変範囲内を 0000H~FFFFH で表す。 0000Hが MOD, FFFFHが無限遠。 The variable range is represented as  $0000_{\rm H}$  through FFFF<sub>H</sub>.  $0000_{\rm H}$  is the MOD and FFFF<sub>H</sub> the infinite distance

## 32H FOCUS POSITION

可変範囲内を 0000H~FFFFH で表す。 0000Hが MOD, FFFFHが無限遠。 The variable range is represented as  $0000_{\rm H}$  through FFFF<sub>H</sub>.  $0000_{\rm H}$  is the MOD and FFFF<sub>H</sub> the infinite distance

# 42<sub>H</sub> SWITCH 2 CONTROL

Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Forced iris servo	0:OFF 1:ON
Bit4	IRIS auto/remote	0:auto 1:remote
Bit3	Undefined	1
Bit2	Undefined	1
Bit1	Undefined	1
Bit0	Undefined	1

# 52<sub>H</sub> SWITCH 2 POSITION

	I STITUTE OF THE STITUTE						
Bit7	Undefined	1					
Bit6	Undefined	1					
Bit5	Forced iris servo	0:OFF 1:ON					
Bit4	IRIS auto/remote	0:auto 1:remote					
Bit3	Undefined	1					
Bit2	Undefined	1					
Bit1	Undefined	1					
Bit0	Undefined	1					

- デフォルトは通信成立前に設定された 値となる。
   The default position of Switch 2 is the value set before communication is established.

43<sub>H</sub> SWITCH 3 CONTROL

Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Undefined	1
Bit4	Undefined	1
Bit3	Extender magnification	
Bit2	Extender magnification	Refer to the extender
Bit1	Extender magnification	magnification table
Bit0	Extender magnification	

- レンズは実装していない倍率を指示された場合、その制御を無効とする。
- エクステンダーは通信成立後ホストから常時制御可能であるが、エクステンダー操作部やカメラ等により×1.0 以外に設定されている場合はホストから×1.0 にすることはできない
- If the lens is designated with a non-provided magnification to the camera or extender is operated by hand the control shall be invalid.
- The extender can be controlled from the host at all times after communication is established. If the extender is set to a value except for ×1.0 by the operating part of the extender and the camera, the host cannot set the extender to ×1.0.

53<sub>H</sub> SWITCH 3 POSITION

on OTT	A SWITCH OF CONTROL					
Bit7	Projector	0:ON 1:OFF				
Bit6	Undefined	1				
Bit5	Undefined	1				
Bit4	4:3 mode	0:ON 1:OFF				
Bit3	Extender magnification					
Bit2	Extender magnification	Refer to the extender				
Bit1	Extender magnification	magnification table				
Bit0	Extender magnification					

- bit 7 が 0 の場合 bit 0  $\sim$  bit 3 は無効とする。
- 4:3 モードとは、16:9 の映像を 4:3 に切り出している状態を表す。 カメラの元の映像が 4:3 の場合やレンズがレシオコンバータ(×0.8)を実装していない場合は 4:3 モード OFF とする。
- デフォルトは通信成立前に設定された 値となる。
- If bit 7 is 0 in function code 53<sub>H</sub>, bit 0 through bit 3 shall be invalid.
- In the 4:3 mode, the 16:9 image is shown in the shape of the 4:3 image. If the original in the camera is the 4:3 image or if the lens is not provided with a ratio converter (×0.8), the 4:3 mode shall be turned OFF.
- The default position of Switch 2 is the value set before communication is established.

DAZODDA IDDD	A CA CONTINUE	ACTONICATOR
EXTENDER	MACTNIFIC	ATION TABLE

1.40 0	Function code 43 <sub>H</sub>		Function code 53 <sub>H</sub>	
bit0 ~ 3	4:3 mode OFF	4:3 mode ON	4:3 mode OFF	4:3 mode ON
$F_{H}$	×1.0	×1.0	×1.0	×1.0
$\mathrm{E}_{\mathrm{H}}$	×2.0	×2.4	×2.0	×2.4
$\mathrm{D_{H}}$	Reserved	Reserved	Reserved	Reserved
$C_{\mathrm{H}}$	Reserved	Reserved	Reserved	Reserved
$B_{\rm H} \sim 2_{\rm H}$	Undefined	Undefined	Undefined	Undefined
$1_{ m H}$	Undefined	Undefined	×0.8 (Note 1)	Undefined
Он	Undefined	×1.2 (Note 2)	Undefined	×1.2 (Note 2)

Note 1, 4:3 モード OFF 時にマニュアルで $\times$ 0.8 を入れたときの状態を表す。 ファンクションコード  $43_{\rm H}$ でこの状態に制御することはできない。

Note 2, 4:3 モード ON 時 $\times$ 0.8 を入れず  $\mathbb{C} \times 1.0$  を実質 $\times$ 1.2 として使用したと きの状態を表す。

Note 1: When the ratio converter  $(\times 0.8)$  is turned ON manually with the 4.3 mode OFF. This state cannot be controlled by means of function code  $43_{\rm H}$ .

Note 2: When the 4:3 mode is ON,  $\times 1.0$  is substantially used as  $\times 1.2$  with the

#### 44H SWITCH 4 CONTROL

11 2111	TOILLOUITION	γ
Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Undefined	1
Bit4	Undefined	1
Bit3	Undefined	1
Bit2	Iris host/camera	0:host 1:camera
Bit1	Zoom host/local	0:host 1:local
Bit0	Focus host/local	0:host 1:local

#### 54H SWITCH 4 POSITION

H DW	11 O11 4 1 O5111ON	
Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Undefined	1
Bit4	Undefined	1
Bit3	Undefined	1
Bit2	Iris host/camera	0:host 1:camera
Bit1	Zoom host/local	0:host 1:local
Bit0	Focus host/local	0:host 1:local

- レンズは制御先を bit0~bit2 により切り 替えるが、その後制御先の制御信号が変 化したことを検出するまで(ホストから の場合コントロール信号を受信するま で)は切り替え前の位置を保持する。
- Switch 4ポジション bit $0\sim2$ のデフォルトは 1 (local および camera) である。
- The lens switches the controlling destination according to bit 0 through bit 2. However, the lens maintains the position until the lens detects a change in the control signal for the controlling destination (until the lens receives a control signal from the host.)
- The default for Switch 4 position bit 0 through bit 2 is 1(local and camera).

#### 46H SWITCH 6 CONTROL

Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Undefined	1
Bit4	Undefined	1
Bit3	Undefined	1
Bit2	Undefined	1
Bit1	Undefined	1
Bit0	Stabilizer on/off	0:on 1:off

#### 56<sub>H</sub> SWITCH 6 POSITION

Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Undefined	1
Bit4	Undefined	1
Bit3	Undefined	1
Bit2	Undefined	1
Bit1	Undefined	1
Bit0	Stabilizer on/off	0:on 1:off

- デフォルトは通信成立前に設定された値となる。
- The default position of Switch 6 is the value set before communication is established.

#### 60H MULTIPLE DATA REQUEST AND RESPOND / 70H MULTIPLE SETTING

- ホストは70Hの複数データ設定ファンクションコードでアイリス、ズーム、フォーカスおよびエクステンダのポジションデータの中から送ってもらいたいファンクションコードとその並びをあらかじめ設定することができる。
- 設定後通信エラーが発生し接続要求により回復したときホストは、複数データの設定を再度行う。
- レンズは70Hのファンクションコードを 受信した場合,ファンクションコードの 並びの中から対応していないファンク ションコードを除いて,応答可能なファ ンクションコードの並びを送り返す。
- レンズは60Hのファンクションコードを 受信した場合,複数データ設定ファンク ションコードで設定されているファン クションコードのポジションデータの 並びを送り返す。

#### (例)

ホストが送ってもらいたいポジションデータ(アイリス  $30_{H}$ , ズーム  $31_{H}$ , フォーカス  $32_{H}$ , エクステンダー $53_{H}$ ) の並びを設定する。

- By using the 70<sub>H</sub> multiple data setting, the host can preset the designated function code among position data for iris, zoom, focus, and extender and arrangement.
- When recovering from an error after setting by means of a connecting request command, the host sets multiple data again.
- If receiving the 70<sub>H</sub> function code, the lens excludes a non-corresponding function code from the function code arrangement and returns a compatible function code to the arrangement.
- When receiving 60<sub>H</sub> function code, the lens sends back the position data arrangement for the function code set by multiple data setting function code.

#### (Example)

The host sets the order of the designated position data (iris 30<sub>H</sub>, zoom 31<sub>H</sub>, focus 32<sub>H</sub>, and extender 53<sub>H</sub>).

04н, 70н, 30н, 31н, 32н, 53н, sum

エクステンダーポジションをサポート していないレンズがこれに応答する。 The lens that does not support the extender position responds to this.

03н, 70н, 30н, 31н, 32н, sum

ホストが複数データを要求する。

The host makes a request for multiple data.

 $00_H$ ,  $60_H$ , sum

レンズがこれに応答する。(アイリス  $1234_{\rm H}$ , ズーム  $5678_{\rm H}$ , フォーカス  $9ABC_{\rm H}$ のポジションの例)

The lens responds to this (Example of the positions: 1234<sub>H</sub> for iris, 5678<sub>H</sub> for zoom, and 9ABC<sub>H</sub> for focus).

06н, 60н, 12н, 34н, 56н, 78н, 9Ан, BCн, sum

# A1H PF EVALUATION AREA CONTROL

DATA	COORDINATES	RANGE OF DATA
D0	X1(high-order 8bits)	0000 PEPE
D1	X1(low-order 8bits)	0000 <sub>H</sub> -FFFF <sub>H</sub>
D2	X2(high-order 8bits)	0000 PEEE
D3	X2(low-order 8bits)	0000 <sub>H</sub> -FFFF <sub>H</sub>
D4	Y1(high-order 8bits)	0000 EEEE
D5	Y1(low-order 8bits)	0000 <sub>H</sub> -FFFF <sub>H</sub>
D6	Y2(high-order 8bits)	0000 EEEE
D7	Y2(low-order 8bits)	$0000_{ m H} ext{-}{ m FFFF}_{ m H}$


## B1<sub>H</sub> PF EVALUATION AREA POSITION

DATA	COORDINATES	RANGE OF DATA
D0	X1(high-order 8bits)	0000 FFFF
D1	X1(low-order 8bits)	0000 <sub>H</sub> -FFFF <sub>H</sub>
D2	X2(high-order 8bits)	
D3	X2(low-order 8bits)	$0000_{ m H} ext{-}{ m FFFF}_{ m H}$
D4	Y1(high-order 8bits)	0000 FFFF
D5	Y1(low-order 8bits)	0000 <sub>H</sub> -FFFF <sub>H</sub>
D6	Y2(high-order 8bits)	0000 EEEE
D7	Y2(low-order 8bits)	0000 <sub>H</sub> -FFFF <sub>H</sub>

# Example) 08<sub>H</sub>, A1<sub>H</sub>, D0, D1, D2, D3, D4, D5, D6, D7, sum

PF 枠の座標データ(X1,X2,Y1,Y2)は,下の図の定義に従う。

The coordinate data of PF evaluation area(X1,X2,Y1,Y2) follws the definition of the figure below.

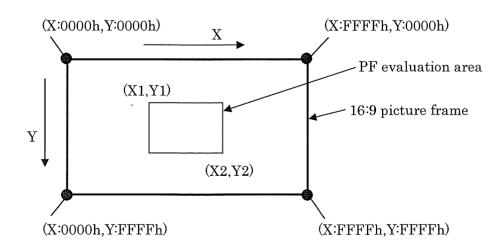

A5<sub>H</sub> PF SWITCH 0 CONTROL

Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Undefined	1
Bit4	Undefined	1
Bit3	Undefined	1
Bit2	Undefined	1
Bit1	Undefined	1
Bit0	PF ON/OFF	0:ON 1:OFF

B<sub>5H</sub> PF SWITCH 0 POSITION

Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Undefined	1
Bit4	Undefined	1
Bit3	Undefined	1
Bit2	Undefined	1
Bit1	Undefined	1
Bit0	PF ON/OFF	0:ON 1:OFF

- デフォルトは通信成立前に設定された 値となる。
   The default position of PF Switch 0 is the value set before communication is established.

B6<sub>H</sub> PF SWITCH 1 POSITION

Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Undefined	1
Bit4	Undefined	1
Bit3	Undefined	1
Bit2	focus display information 2	00h,01h,02h,06h:Undefined
Bit1	focus display information 1	03h: focus on near side(gap small) 04h:the best focus
Bit0	focus display information 0	05h:focus on infinity side(gap small) 07h:OFF

## A7<sub>H</sub> PF SWITCH 2 CONTROL

Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Undefined	1
Bit4	Undefined	1
Bit3	Undefined	1
Bit2	Undefined	1
Bit1	PF Area host/local	0:host 1:local
Bit0	PF host/local	0:host 1:local

#### B7<sub>H</sub> PF SWITCH 2 POSITION

Bit7	Undefined	1
Bit6	Undefined	1
Bit5	Undefined	1
Bit4	Undefined	1
Bit3	Undefined	1
Bit2	Undefined	1
Bit1	PF Area host/local	0:host 1:local
Bit0	PF host/local	0:host 1:local

- Bit0 は A5 H(PF SW0)及び AF H (PF | A5 H (PF SW0) and AF H (PF SPEED) can be SPEED)の制御切替が可能。
  - controlled in Bit0.
- Bit0 の host 制御はフォーカス制御が Local の場合に有効。
- The control by host of Bit0 is effective when the focus control is local.

## AFH PF SPEED CONTROL

可変範囲内を 0000H~FFFFH で表す。 0000Hが最低速度,FFFFHが最高速度。

The variable range is represented as 0000H through FFFF<sub>H</sub>. 0000<sub>H</sub> is the minimum speed and FFFFH the maximum speed.

## BF<sub>H</sub> PF SPEED POSITION

可変範囲内を 0000H~FFFFH で表す。 0000Hが最低速度,FFFFHが最高速度。

The variable range is represented as  $0000_{\rm H}$ through FFFF<sub>H</sub>. 0000<sub>H</sub> is the minimum speed and FFFFH the maximum speed.