

OBSERVATOR

Weather Monitoring Portal — Sydney Metro M1

User Manual

How to use the portal, screen by screen

Signing in, reading the map and alerts, checking stations and pumps, finding and exporting data, keeping an eye on system health, and administering users, alert rules and sensors.

This manual describes the design prototype. All readings shown are demonstration data; no sensors are connected and no alerts, emails or pump commands are sent.

Contents

1	Before you start
2	Signing in and out
3	Finding your way around
4	Map — the whole line at a glance
5	Alerts
6	Stations
7	Trends and Flood
8	History — finding and exporting data
9	Health — is the system working?
10	Administration
11	Your settings
12	Who can do what
13	Quick answers

Before you start

The portal shows the weather and flood monitoring for the Sydney Metro M1 line in one place: seven monitoring locations, the Marrickville flood pumps, every alert, and the health of the equipment. It works in any modern web browser — on a desktop, a laptop, a tablet or a phone — with nothing to install.

This is a design prototype. Every reading is demonstration data. No sensors are connected, and no emails, alerts or pump commands are sent. The screens are complete so the design can be reviewed; the working system is built after approval.

Colours mean the same thing everywhere:

Colour	Meaning
Red	Alert — a threshold has been crossed and action is needed
Amber	Warning — approaching a threshold, or something to check
Green	Normal / running / in service
Grey	Offline or no data
Blue	Information, or a pump command you can take

Every status also has a word and an icon beside the colour, so it can be read without colour.

Charts. A dashed red line on a chart is a threshold. Hover over (or tap) a chart to read exact values. The two small icons at the top right of every chart switch to a **table view** and **download the data as CSV**.

Signing in and out

Sign in

OBSERVATOR
Weather Monitoring Portal — Sydney Metro M1

Sign in
Every account is named. There are no shared logins.

Email
s.chen@metrotrains.com.au

Password [Forgot your password?](#)
.....

☒ Keep me signed in on this device for 30 days

 **Success!** 
For testing only. If seen, report to site owner
 Protected by Cloudflare Turnstile. Verified. (Prototype: Cloudflare's test key.)

Sign in
[See the lockout screen](#)

Figure 1 — The sign-in screen

1. Open the portal link. Every page asks you to sign in first.
2. Enter your **email** and **password**.
3. Wait for the **security check** (Cloudflare) to show *Success*. It usually passes on its own; occasionally it asks you to tick a box.
4. Leave **Keep me signed in on this device for 30 days** ticked on your own device. Untick it on a shared computer — you will then be signed out when the browser closes.
5. Select **Sign in**. You go straight to the page you opened.

If the details are wrong you see *That email and password do not match*. Your email stays filled in; type the password again.

Forgotten your password

You reset it yourself — nobody at MTS needs to be involved.

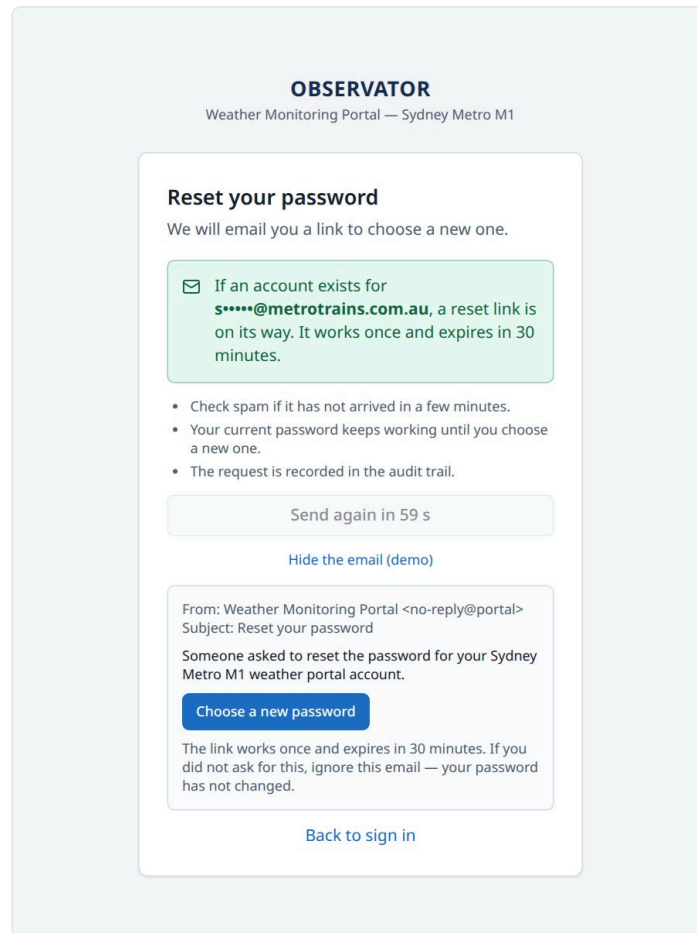


Figure 2 — After asking for a reset link

1. On the sign-in screen select **Forgot your password?**
2. Enter your work email, pass the security check and select **Send the reset link.**
3. Open the email and select **Choose a new password.** The link works **once** and expires after **30 minutes**. If it has expired, ask for a new one.

OBSERVATOR
Weather Monitoring Portal — Sydney Metro M1

Choose a new password

This link works once and expires 30 minutes after it was sent.

New password 👁 Show

.....

✓ At least 12 characters
✓ Upper and lower case
✓ A number
✓ A symbol
✓ Not a common word (password, metro, sydney)
Also checked on save: not one of your last five passwords.

Type it again

.....

Set new password

[See the expired-link screen](#)

Figure 3 — Choosing a new password

1. Type the new password twice. The rules turn green as they are met: at least 12 characters, upper and lower case, a number, a symbol, and not a common word.
2. Select **Set new password**. You are signed out on every other device, and you receive a confirmation email.

The reset screen never says whether an email address has an account. That stops the page being used to find out who works at MTS.

Sign out

Select your **initials** (top right) and choose **Sign out**. On a phone, open the ☰ menu — *Sign out* is at the bottom. After signing out, every page asks for your email and password again.

Finding your way around

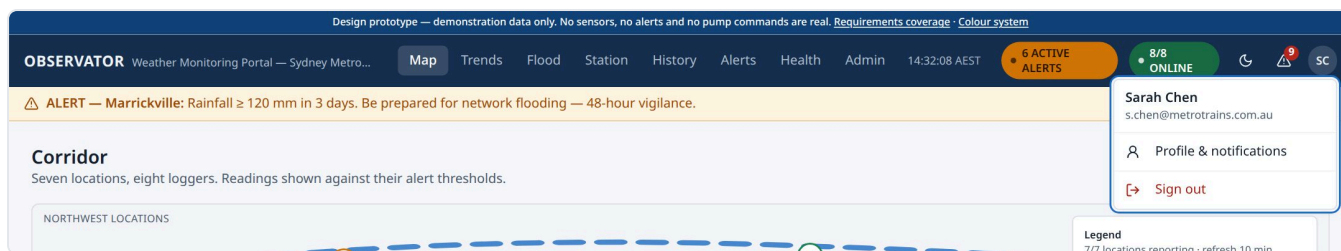


Figure 4 — The top of every page, with the account menu open

Along the top of every page:

- **Menu** — Map, Trends, Flood, Station, History, Alerts, Health and Admin. On a phone, it sits behind the ☰ button.
- **Clock** — Sydney time, marked AEST or AEDT.
- **Active alerts** (amber) — how many alerts are in force. Select it to open Alerts.
- **Online** (green) — how many monitoring loggers are reporting, for example *8/8 online*.
- **Moon / sun** — switch between light and dark display.
- **Bell** — alerts not yet acknowledged.
- **Your initials** — your profile and notification settings, and Sign out.

Under the top bar, the **alert banner** repeats the most important alert in force, with **Open** to go to it. A blue strip announces any **planned maintenance** at least 48 hours ahead.

Map — the whole line at a glance

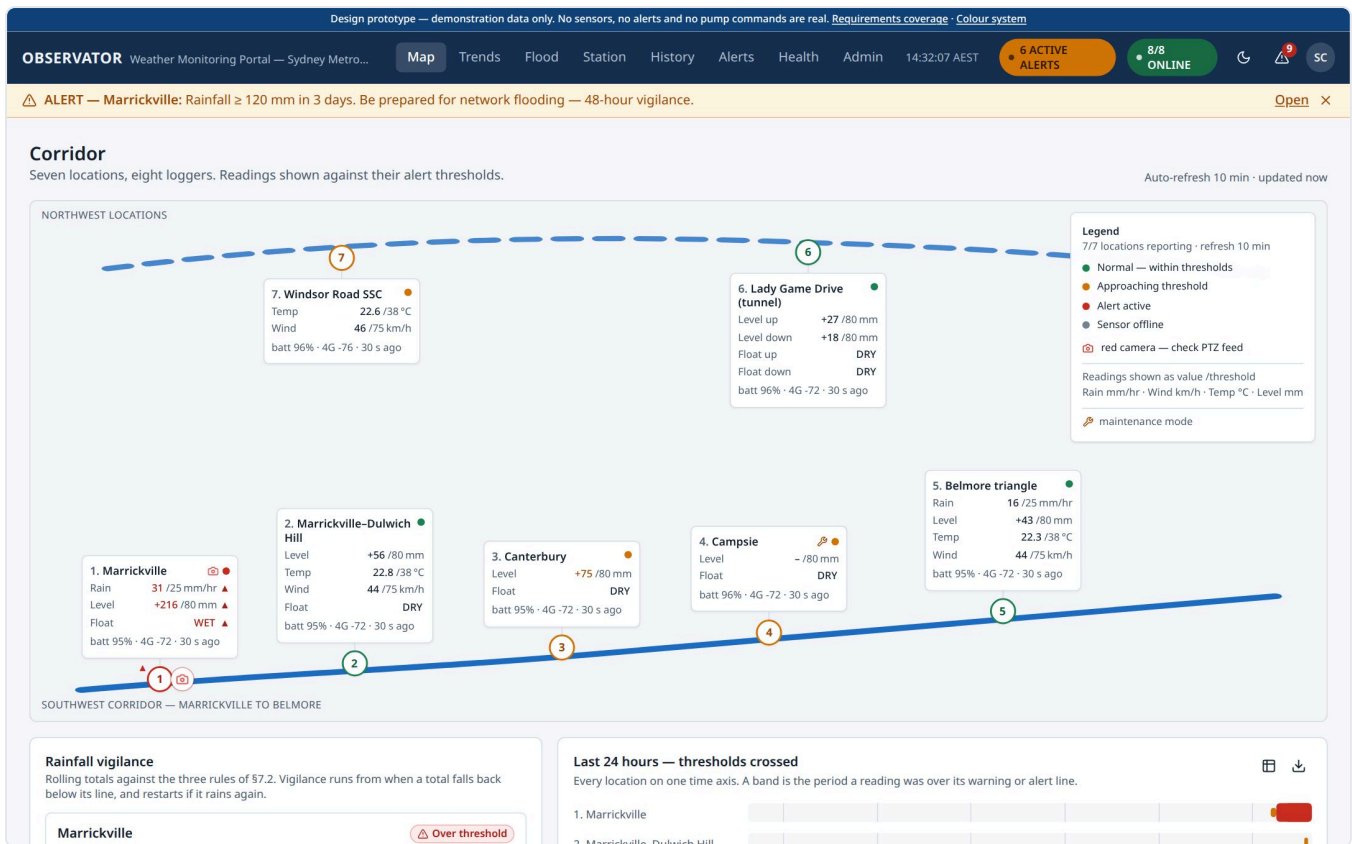


Figure 5 — Map — the corridor with every location

The map is the home page. It shows the line as a simple route, not a street map, with each of the seven locations on it.

- Each **location card** shows its readings beside their thresholds — for example *Rain 31 / 25 mm/hr* means 31 against a threshold of 25.
- The **pin colour** gives the location's status. A **blinking red camera** means standing water needs checking on the camera; a **wrench** means the location is in maintenance.
- Select a location to open its station page.

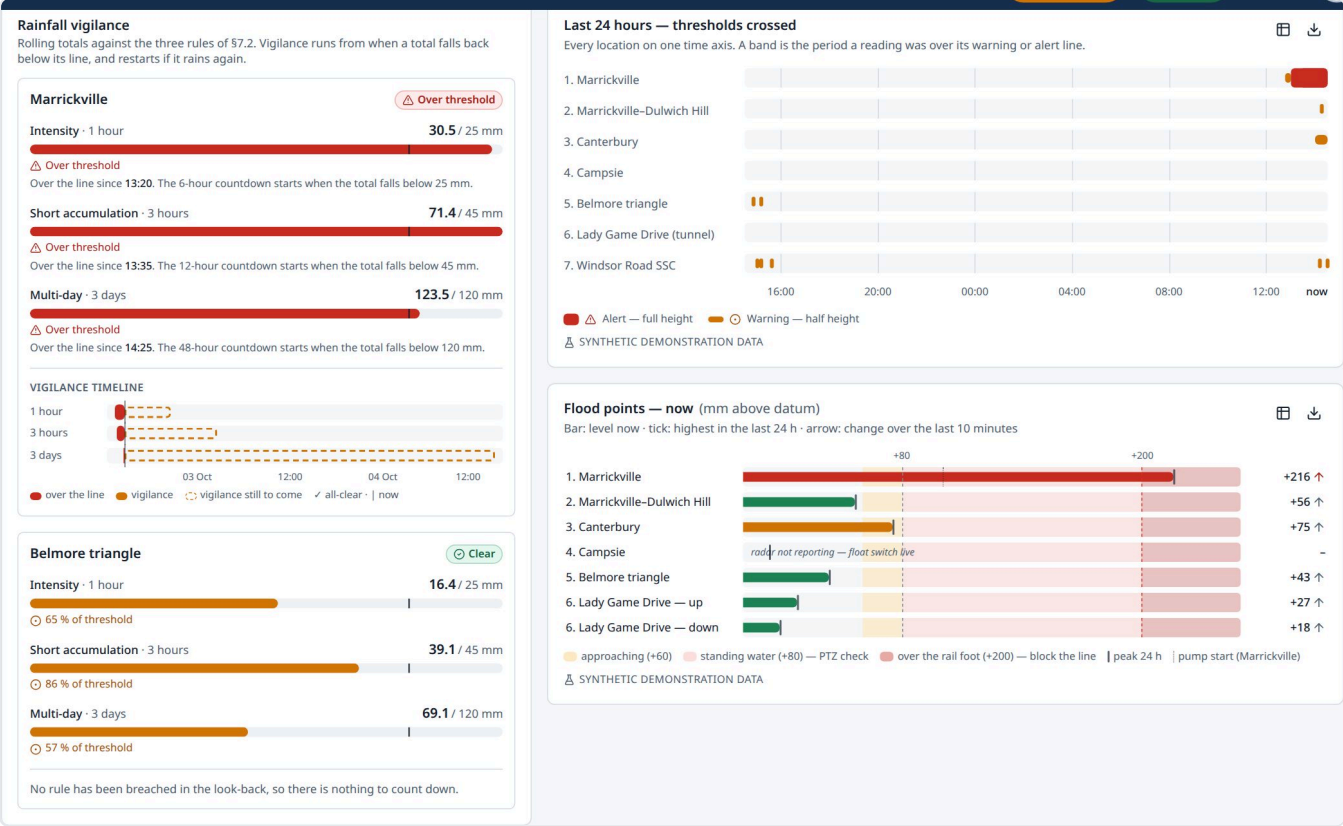


Figure 6 — Rainfall countdowns, the last 24 hours and the flood points

Further down the Map:

- **Rainfall vigilance** — for each rain gauge, the 1-hour, 3-hour and 3-day rainfall against the 25 mm, 45 mm and 120 mm rules. When a total falls back below its line, a countdown (6, 12 or 48 hours) runs before the all-clear. More heavy rain restarts it. The **vigilance timeline** draws this out.
- **Last 24 hours — thresholds crossed** — when each location was over its warning or alert line.
- **Flood points — now** — every water-level point on one scale against *standing water* and the *rail foot*, with the day's peak and whether the water is rising.

Station status — live readings vs alert thresholds										7 locations
Location	Rain (≥ 25 mm/hr)	Wind (≥ 75 km/h)	Temp (≥ 38 °C)	Water level	Pump	Battery	Signal	Updated	Status	
1. Marrickville	31 ▲	—	—	+216 ▲	RUN	95%	4G -72	now	Alert	
2. Marrickville-Dulwich Hill	—	44	22.8	+56	—	95%	4G -72	now	OK	
3. Canterbury	—	—	—	+75	—	95%	4G -72	now	Warning	
4. Campsie	—	—	—	—	—	96%	4G -72	now	Warning	Maintenance
5. Belmore triangle	16	44	22.3	+43	—	95%	4G -72	now	OK	
6. Lady Game Drive (tunnel)	—	—	—	+27	—	96%	4G -72	now	OK	
7. Windsor Road SSC	—	46	22.6	—	—	96%	4G -76	now	Warning	

Figure 7 — Station status table

The **station status table** at the bottom lists every location's latest readings, battery, signal and status in one table.

Alerts

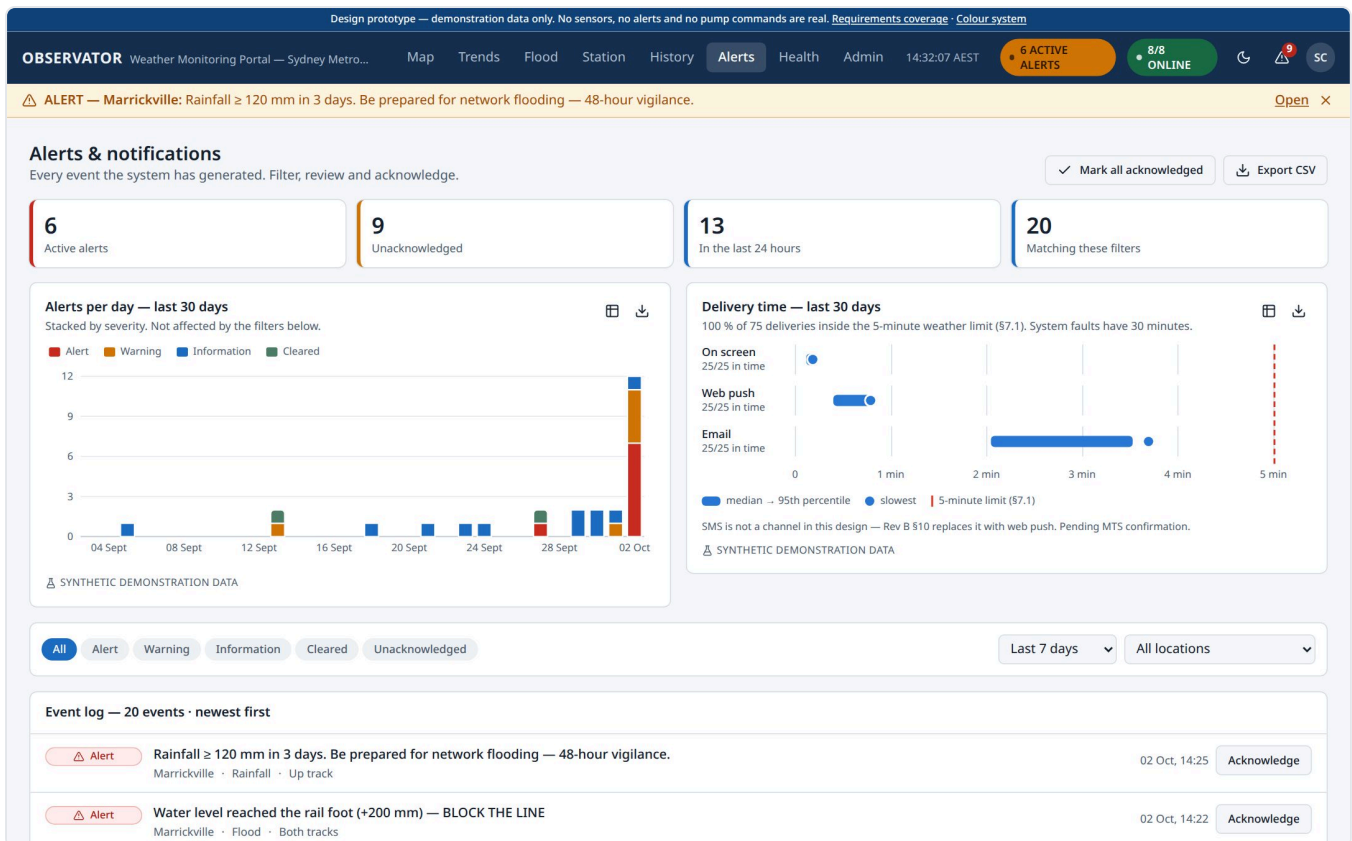


Figure 8 — Alerts and notifications

Alerts holds every alert the system has raised.

- The tiles at the top count active and unacknowledged alerts. The charts show alerts per day and how quickly each alert was delivered.
- **Filter** with the chips (Alert, Warning, Information, Cleared, Unacknowledged), the period and the location.
- Select **Acknowledge** on an alert to record that you have seen it. Your name and the time are saved. **Mark all acknowledged** does every alert in the list at once.
- **Export CSV** downloads the alerts in the list.
- Select an alert's text to open its own page.

Verifying standing water on the camera

When water reaches *standing water* level, a window opens by itself asking you to check the camera. The same window opens from the **PTZ** button on an alert, the red camera on the map, or **Verify on PTZ camera** on the station page.

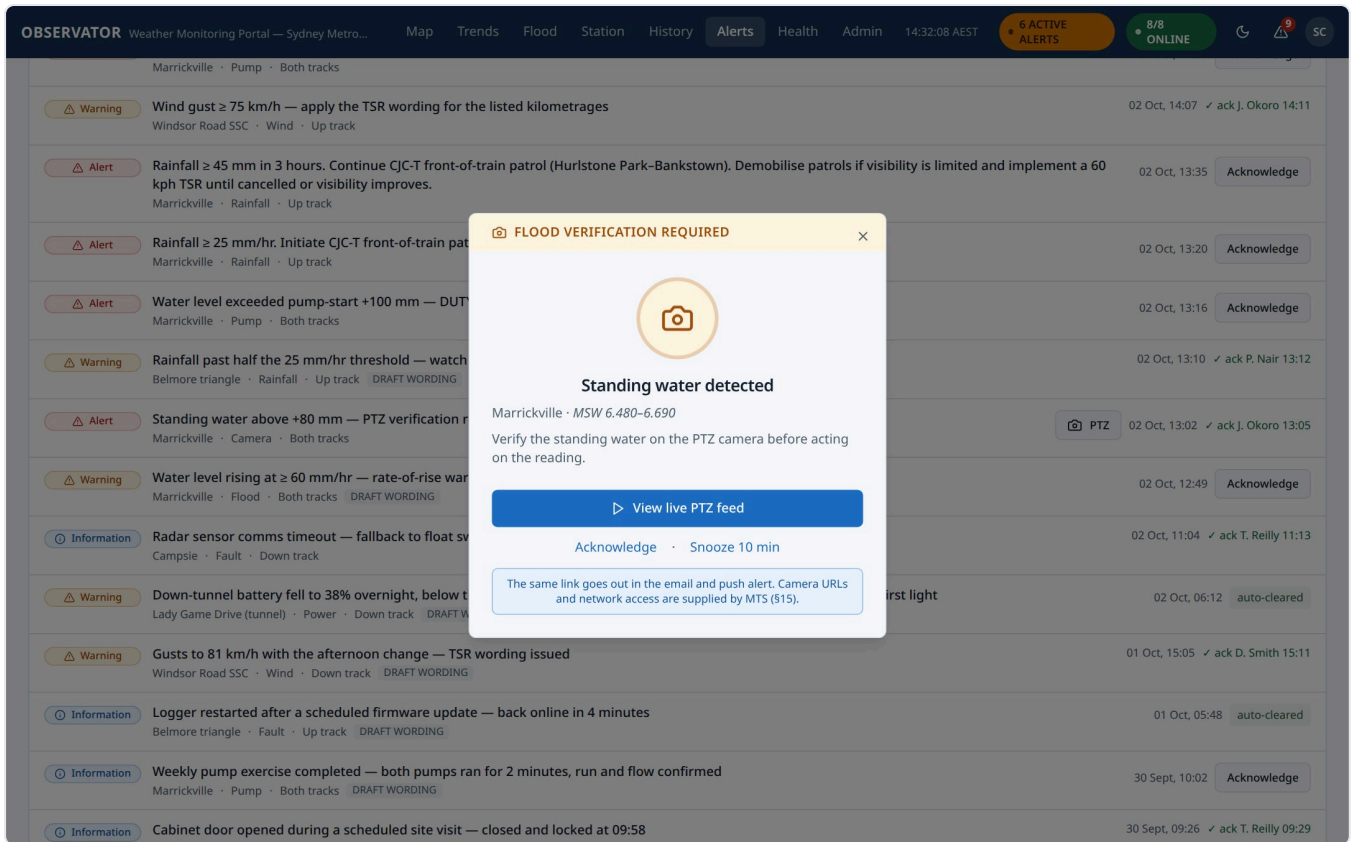


Figure 9 — The camera check

Choose **View live PTZ feed**, **Acknowledge**, or **Snooze 10 min** (it comes back if still unacknowledged).

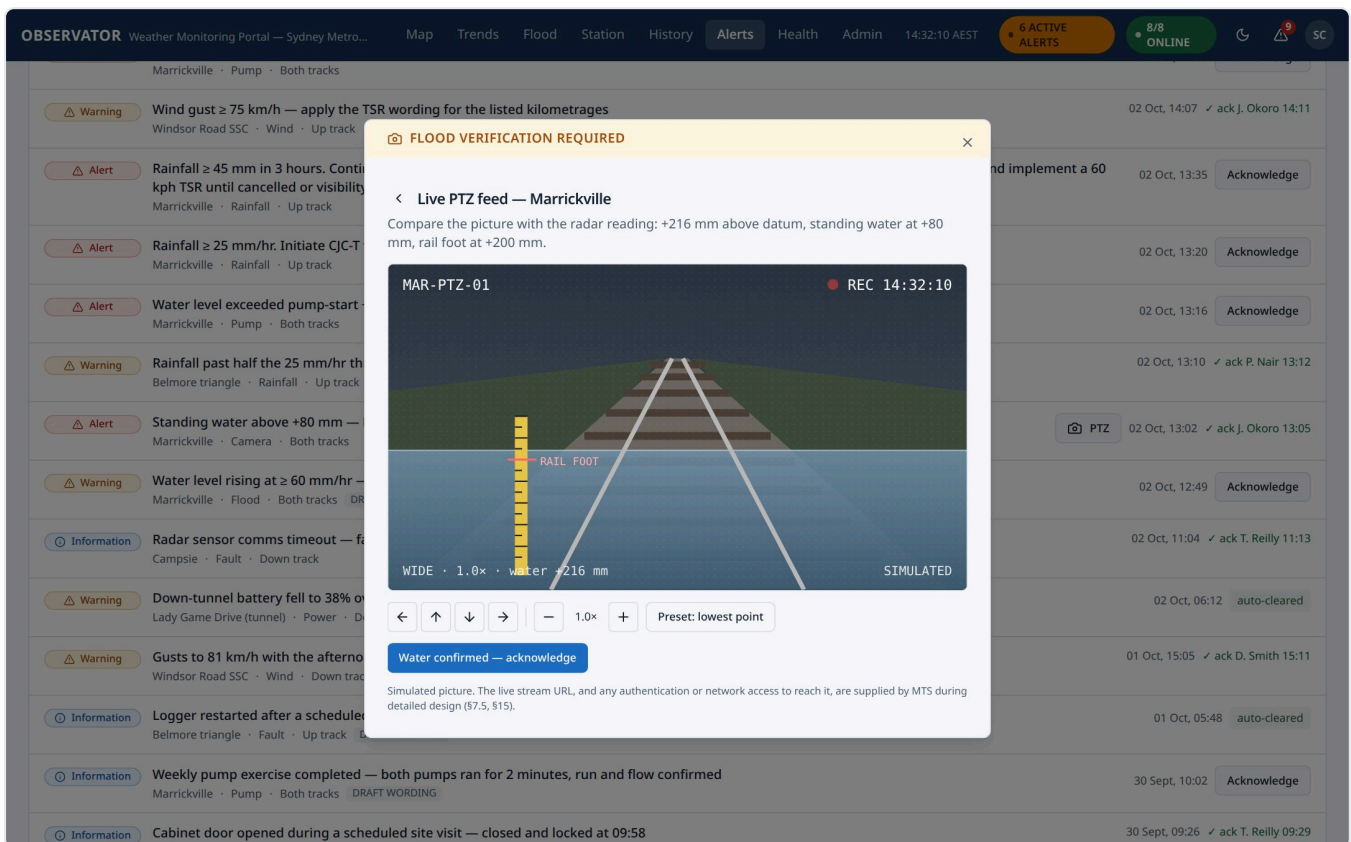


Figure 10 — The camera feed

Use the arrows and zoom to move the camera; **Preset: lowest point** points it at the gauge. When you can see the water, select **Water confirmed — acknowledge**.

An alert's own page

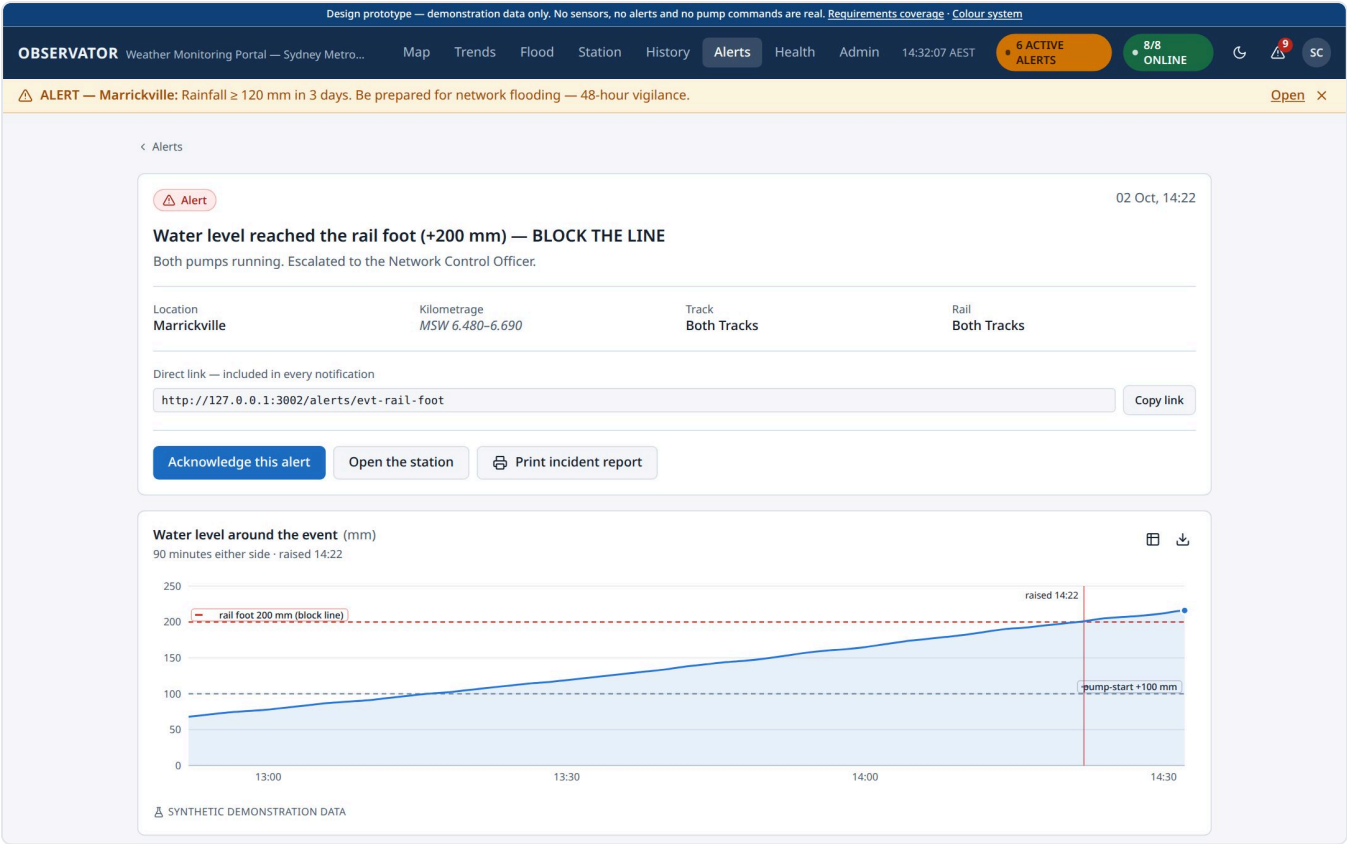


Figure 11 — An alert's page

Every alert email and notification links to this page. It shows where and when the alert happened (location, kilometrage, track and rail), the reading around that time with when it was raised and acknowledged, who it was sent to and when it arrived, and any **notes** added by the team. Use **Copy link** to share it, **Open the station** for the location, and **Print incident report** for a one-page record.

Stations

Open a station from the map, the status table, or **Station** in the menu. Each station has two tabs: **Live** and **Installation**.

Live

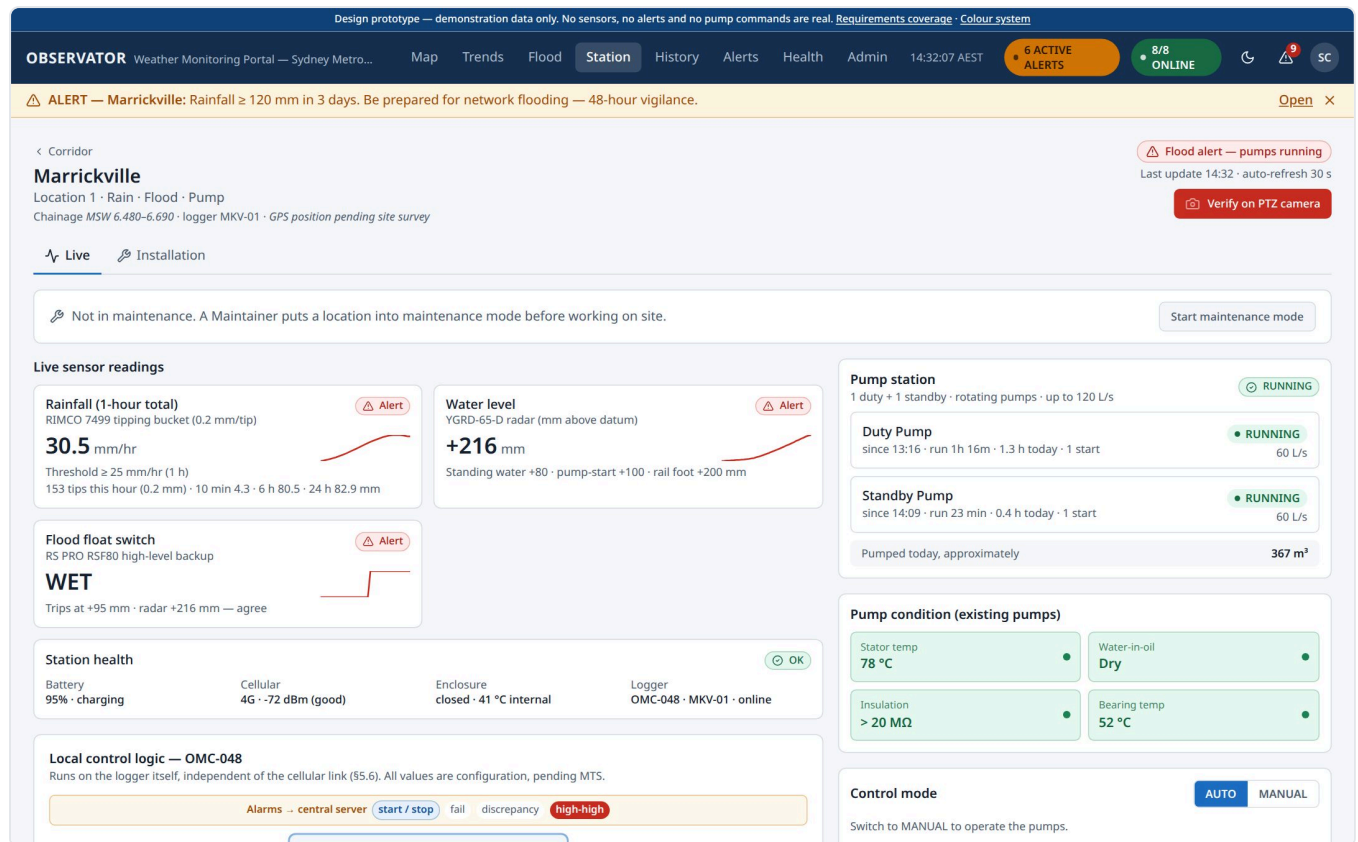


Figure 12 — Station — Live tab (Marrickville)

- **Live sensor readings** — one card per sensor, with its threshold and a small trend line.
- **Station health** — battery, mobile signal, cabinet and logger.
- **Maintenance mode** — a maintainer selects **Start maintenance mode** before working on site, so everyone can see why readings may be unusual. **End maintenance mode** when finished.
- Below the cards: the last 24 hours as charts, the battery and solar power for the last week, and how the station is reporting.

Pumps (Marrickville)

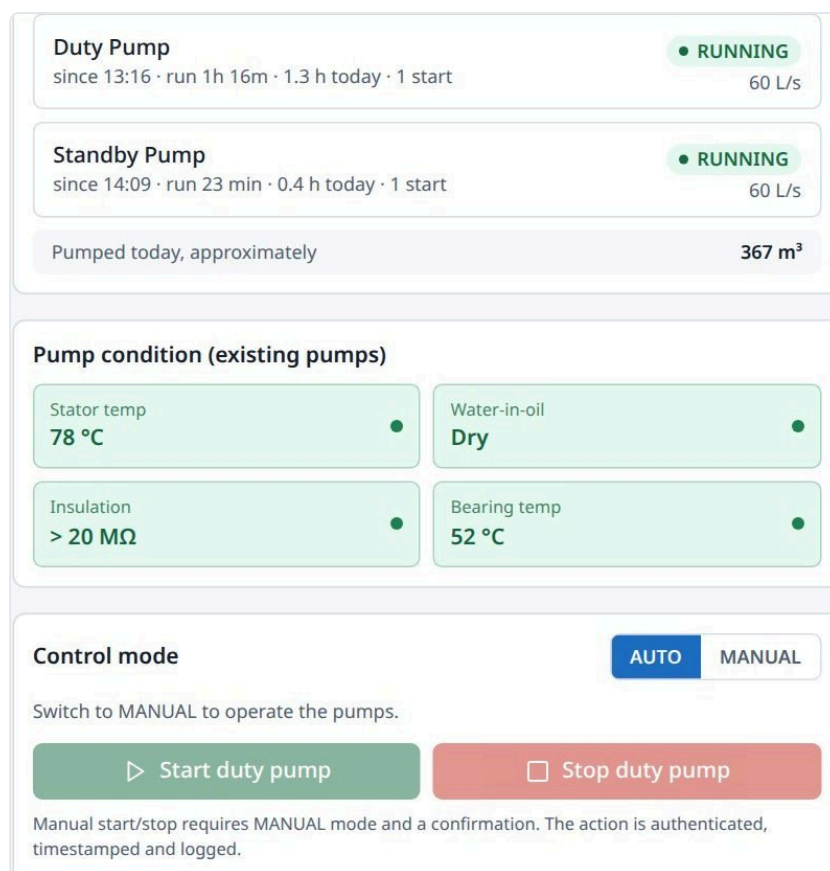


Figure 13 — Pump station and control

The pumps run themselves in **AUTO**: the duty pump starts at +100 mm, the standby pump joins at +180 mm, and both stop once the water is back down. The panel shows each pump, its run time, the pump-condition signals, and the **control logic** with each set point marked as met or not.

To run a pump by hand (Pump Controller role only):

1. Switch **Control mode** to **MANUAL**.
2. Select **Start duty pump** or **Stop duty pump**.
3. Read the confirmation — what will happen, to which pump, and under your name — and confirm.

Every manual action is recorded with your name and the time. Switch back to **AUTO** when finished.

Installation

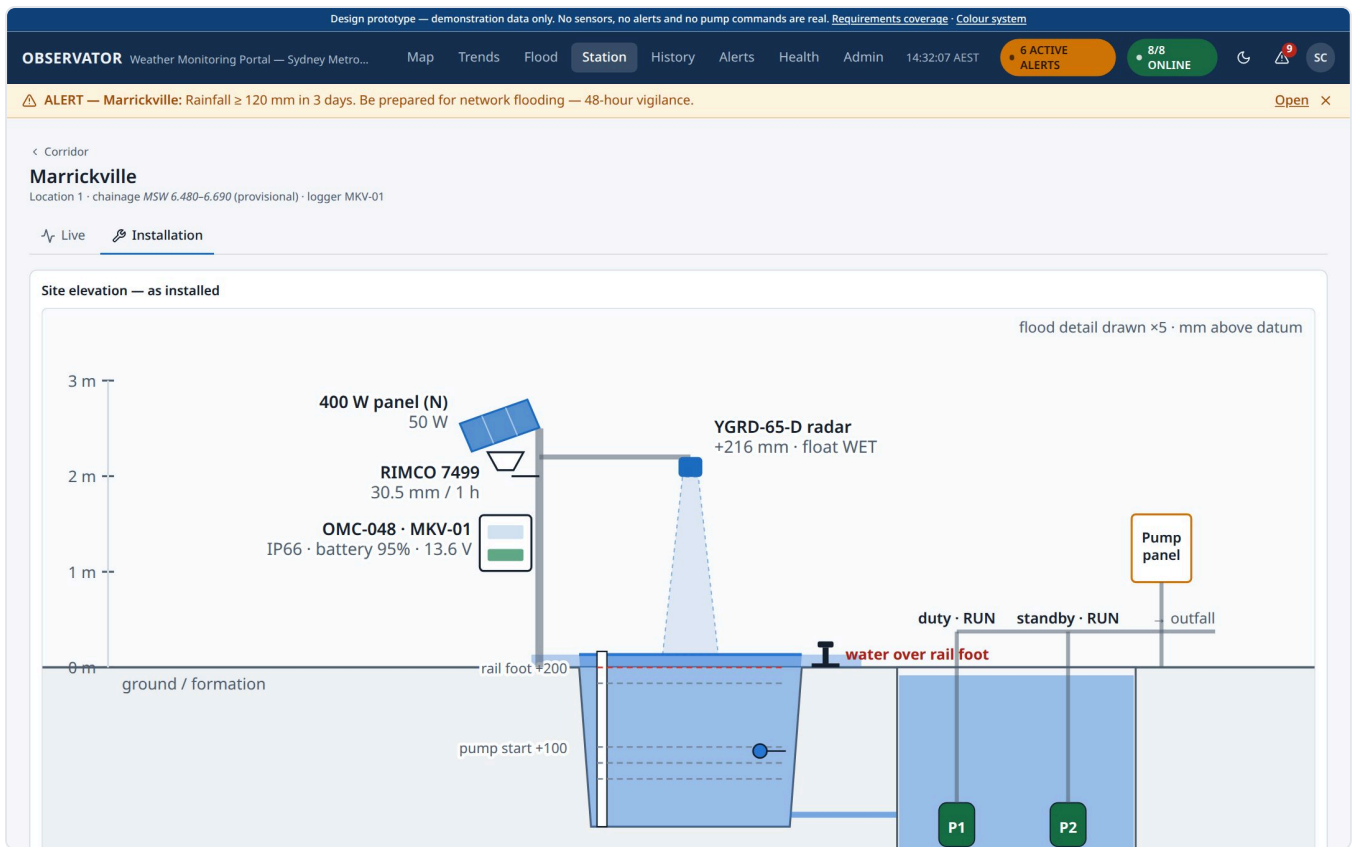


Figure 14 — Station — Installation tab

The **Installation** tab is for maintainers and engineers:

- **Site elevation** — a drawing of the station as installed, with live readings on it.
- **Wiring and connectivity** — each sensor on its logger connection, the power supply and the mobile link.
- **Equipment at this location** — the instruments fitted here, from the sensor register (see *Administration* → *Sensors*).
- **Requirement vs provided** — how each instrument meets the specification.

Trends and Flood

Trends

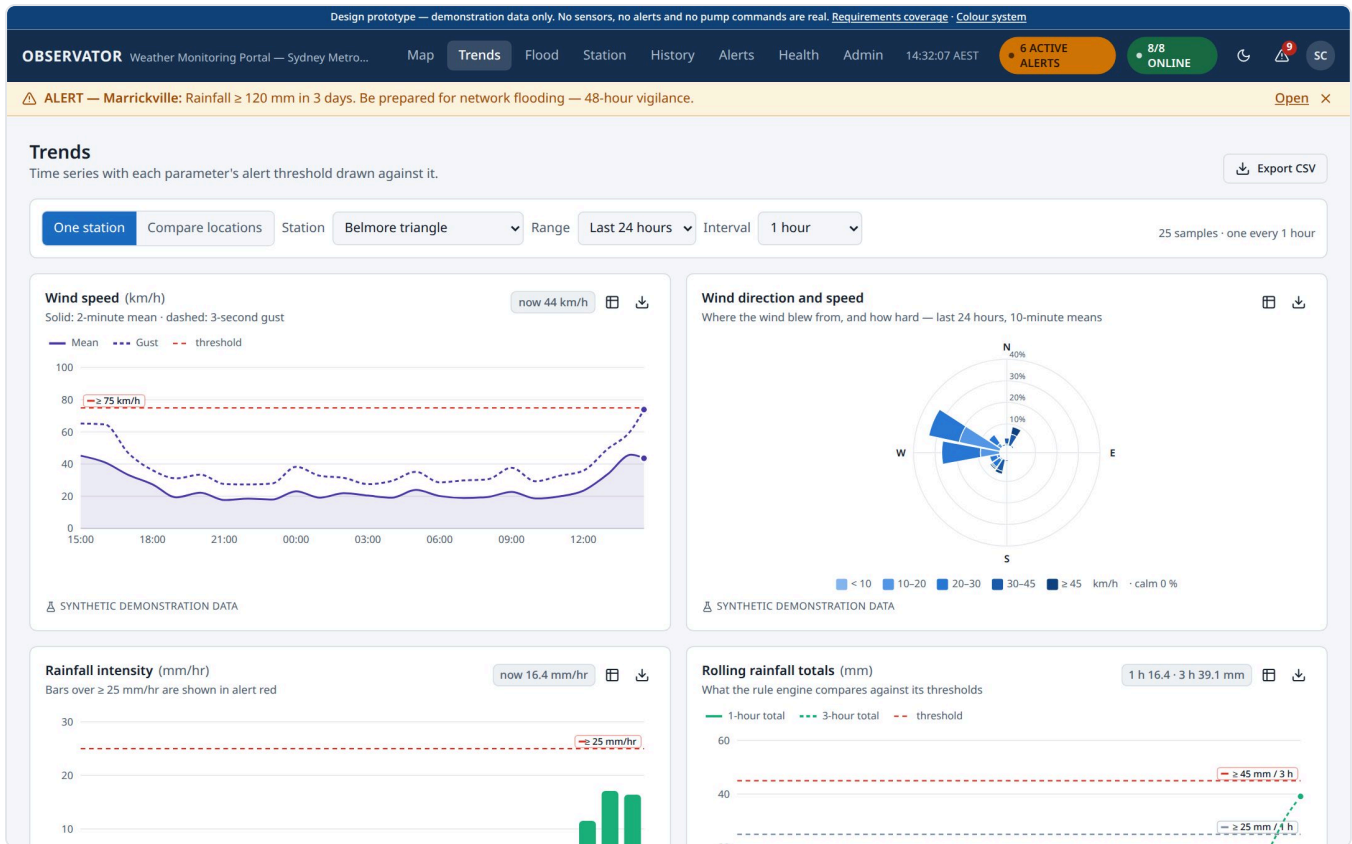


Figure 15 — Trends

- **One station** shows every measurement at one location: wind, wind direction, rainfall, temperature, humidity, water level and air pressure.
- **Compare locations** shows one measurement across all locations.
- Choose the **station**, the **range** (for example last 24 hours or 7 days) and the **interval**.
- **Export CSV** downloads what is on screen.

Flood

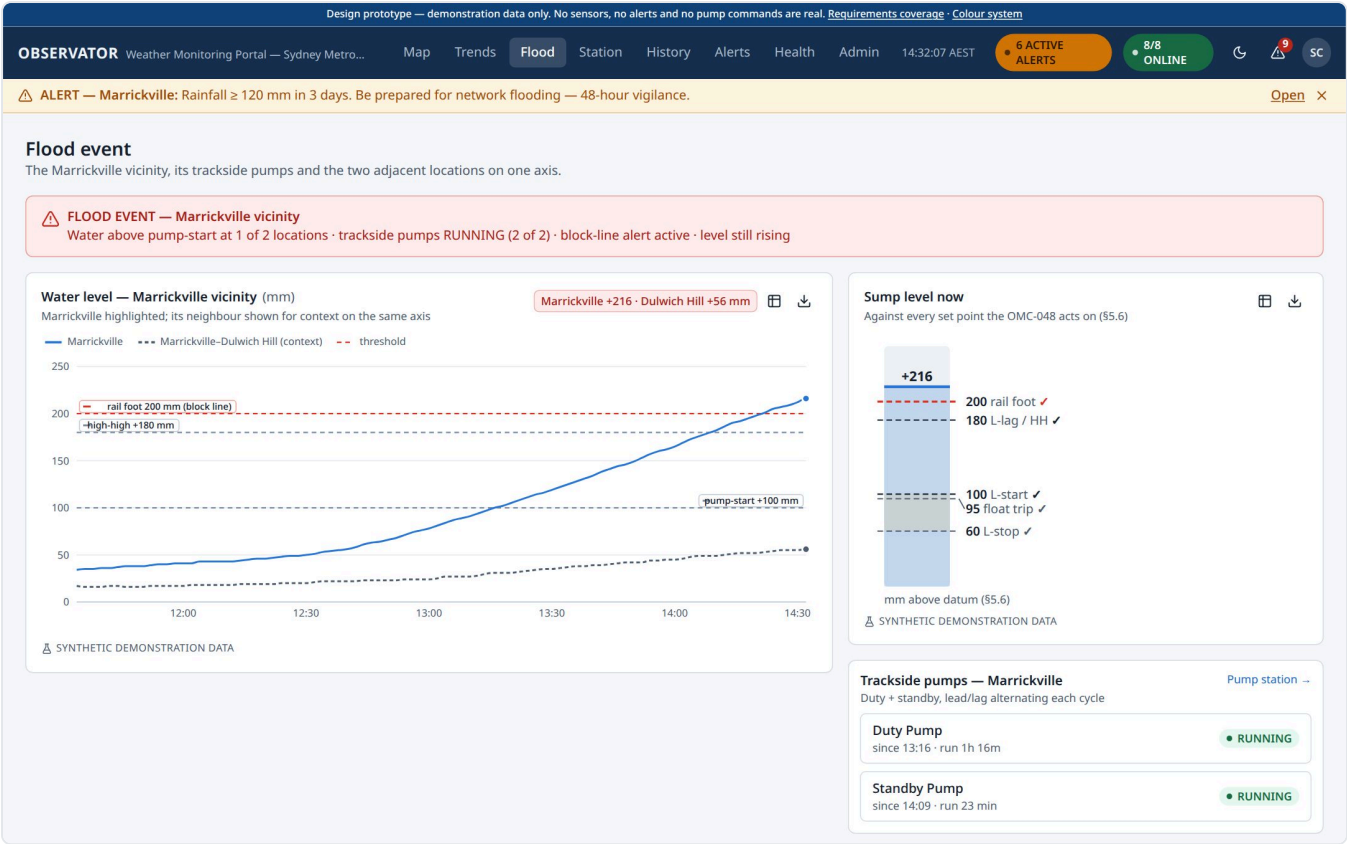


Figure 16 — Flood event

Flood brings everything about a flood at Marrickville onto one screen: the water level at the two nearby points, the pump sump gauge, the pumps, a strip map of the affected section, how fast the water is rising, the steps back to normal train speed after the line is blocked, and the event log.

History — finding and exporting data

- 1. Choose one or more **locations** and **measurements**.
- 2. Choose the **period** (last few days, or exact dates) and the **interval** (raw, 10 minutes, hourly or daily).
- 3. Select **Run query**.

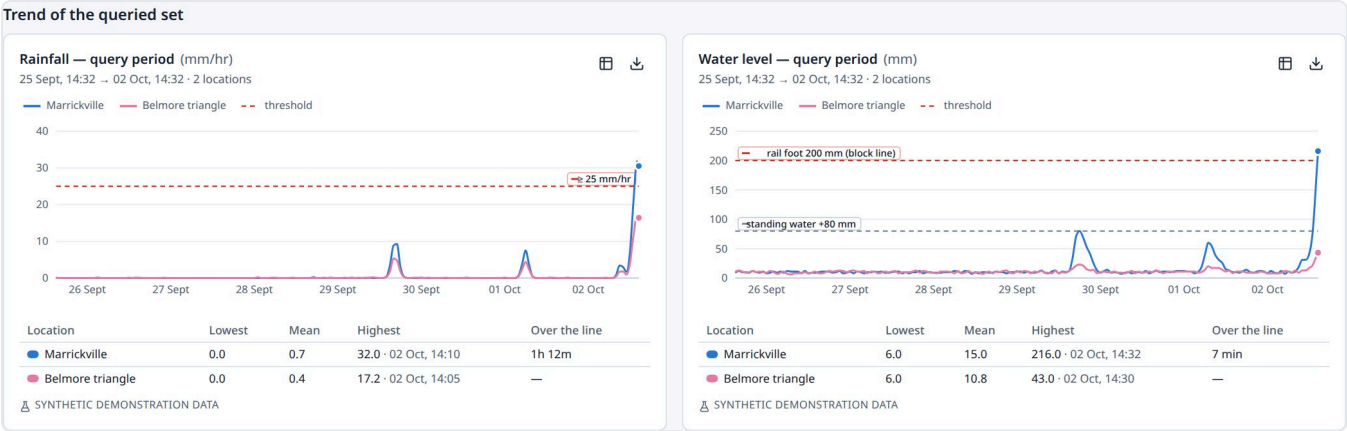


Figure 17 — History — charts of the query

The results open with a chart for each measurement, one line per location, and the lowest, average and highest values and the time spent over the threshold.

Query results — 4,000 records · showing 1-25 · newest first

Rows per page 25

Timestamp ▾	Location ▾	Parameter ▾	Value ▾	Unit	Status	Logger / ID
02 Oct, 14:32	Marrickville	Water level	216.0	mm	Alert	MKV-YGRD-01
02 Oct, 14:32	Belmore triangle	Rainfall	16.4	mm/hr	OK	BEL-RIMCO-01
02 Oct, 14:32	Belmore triangle	Water level	43.0	mm	OK	BEL-YGRD-01
02 Oct, 14:22	Marrickville	Rainfall	31.6	mm/hr	Alert	MKV-RIMCO-01
02 Oct, 14:22	Marrickville	Water level	201.0	mm	Alert	MKV-YGRD-01
02 Oct, 14:22	Belmore triangle	Rainfall	16.9	mm/hr	OK	BEL-RIMCO-01
02 Oct, 14:22	Belmore triangle	Water level	41.0	mm	OK	BEL-YGRD-01
02 Oct, 14:12	Marrickville	Rainfall	32.0	mm/hr	Alert	MKV-RIMCO-01
02 Oct, 14:12	Marrickville	Water level	186.0	mm	Alert	MKV-YGRD-01
02 Oct, 14:12	Belmore triangle	Rainfall	17.2	mm/hr	OK	BEL-RIMCO-01
02 Oct, 14:12	Belmore triangle	Water level	38.0	mm	OK	BEL-YGRD-01
02 Oct, 14:02	Marrickville	Rainfall	31.8	mm/hr	Alert	MKV-RIMCO-01
02 Oct, 14:02	Marrickville	Water level	169.0	mm	Alert	MKV-YGRD-01
02 Oct, 14:02	Belmore triangle	Rainfall	17.1	mm/hr	OK	BEL-RIMCO-01
02 Oct, 14:02	Belmore triangle	Water level	36.0	mm	OK	BEL-YGRD-01
02 Oct, 13:52	Marrickville	Rainfall	31.0	mm/hr	Alert	MKV-RIMCO-01
02 Oct, 13:52	Marrickville	Water level	153.0	mm	Alert	MKV-YGRD-01
02 Oct, 13:52	Belmore triangle	Rainfall	16.7	mm/hr	OK	BEL-RIMCO-01
02 Oct, 13:52	Belmore triangle	Water level	33.0	mm	OK	BEL-YGRD-01
02 Oct, 13:42	Marrickville	Rainfall	29.6	mm/hr	Alert	MKV-RIMCO-01
02 Oct, 13:42	Marrickville	Water level	138.0	mm	Alert	MKV-YGRD-01
02 Oct, 13:42	Belmore triangle	Rainfall	16.1	mm/hr	OK	BEL-RIMCO-01
02 Oct, 13:42	Belmore triangle	Water level	29.0	mm	OK	BEL-YGRD-01
02 Oct, 13:32	Marrickville	Rainfall	27.7	mm/hr	Alert	MKV-RIMCO-01

The export delivers the exact filtered result set as a UTF-8 CSV file.

Previous 1 / 160 Next

Figure 18 — History — the results table

Underneath is the full table. Select a column heading to sort, choose how many rows to show per page, and select **Export CSV** to download exactly the records you asked for. The rainfall charts at the top of the page show rain by hour for each gauge over the last two weeks.

Health — is the system working?

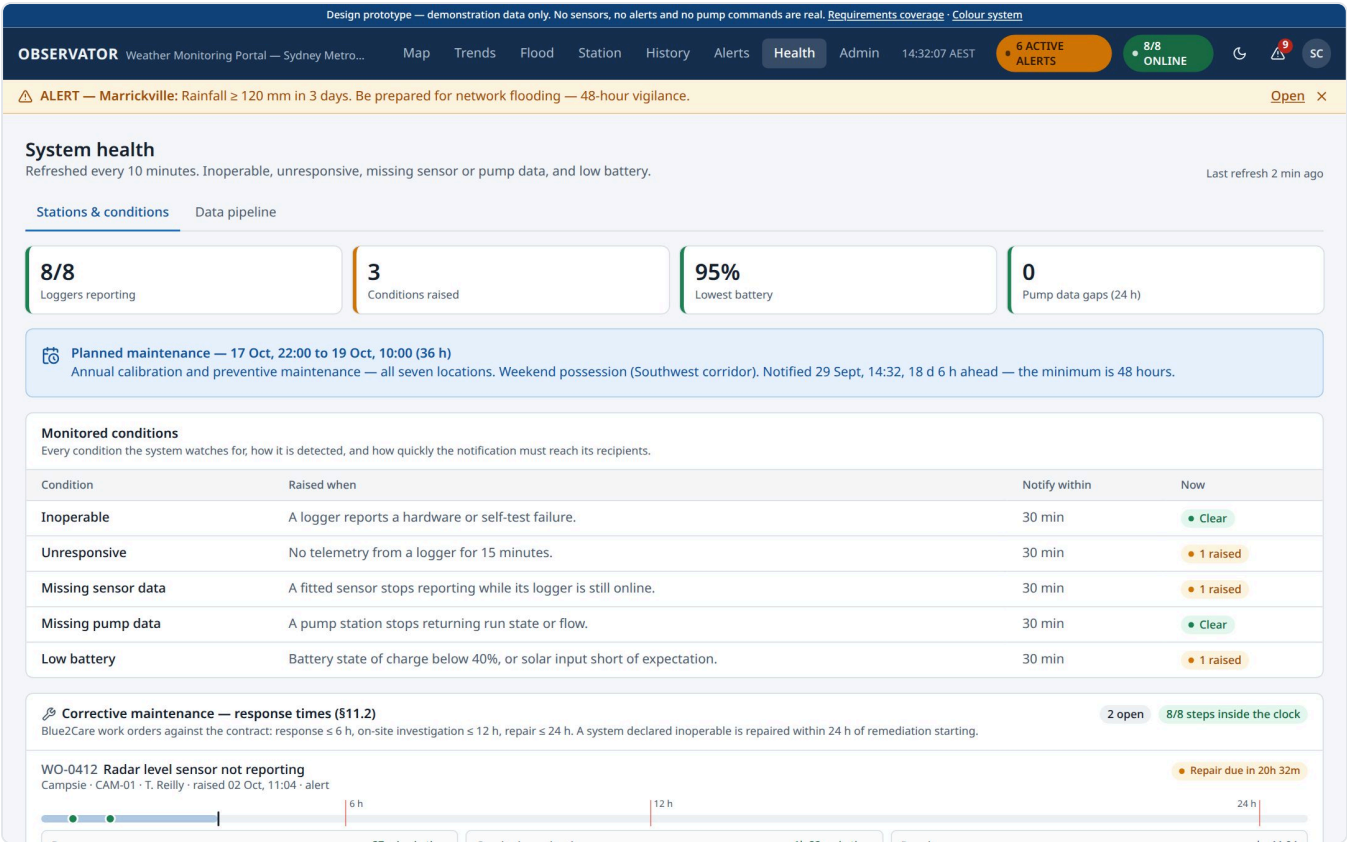


Figure 19 — System health

Health refreshes every 10 minutes and answers "is everything working?":

- **Monitored conditions** — inoperable, unresponsive, missing sensor data, missing pump data and low battery, each showing *Clear* or *raised*.
- **Availability** — a strip per logger for the last 24 hours. Green is reporting, amber is a sensor not reporting, grey is the logger silent. Hover a block for its time and cause.
- **Redundancy** — which backup source takes over if a sensor fails, and how the alert wording changes.
- **Conditions raised, data quality** (readings held back as suspect), **calibration** due dates, and **power** for every logger.

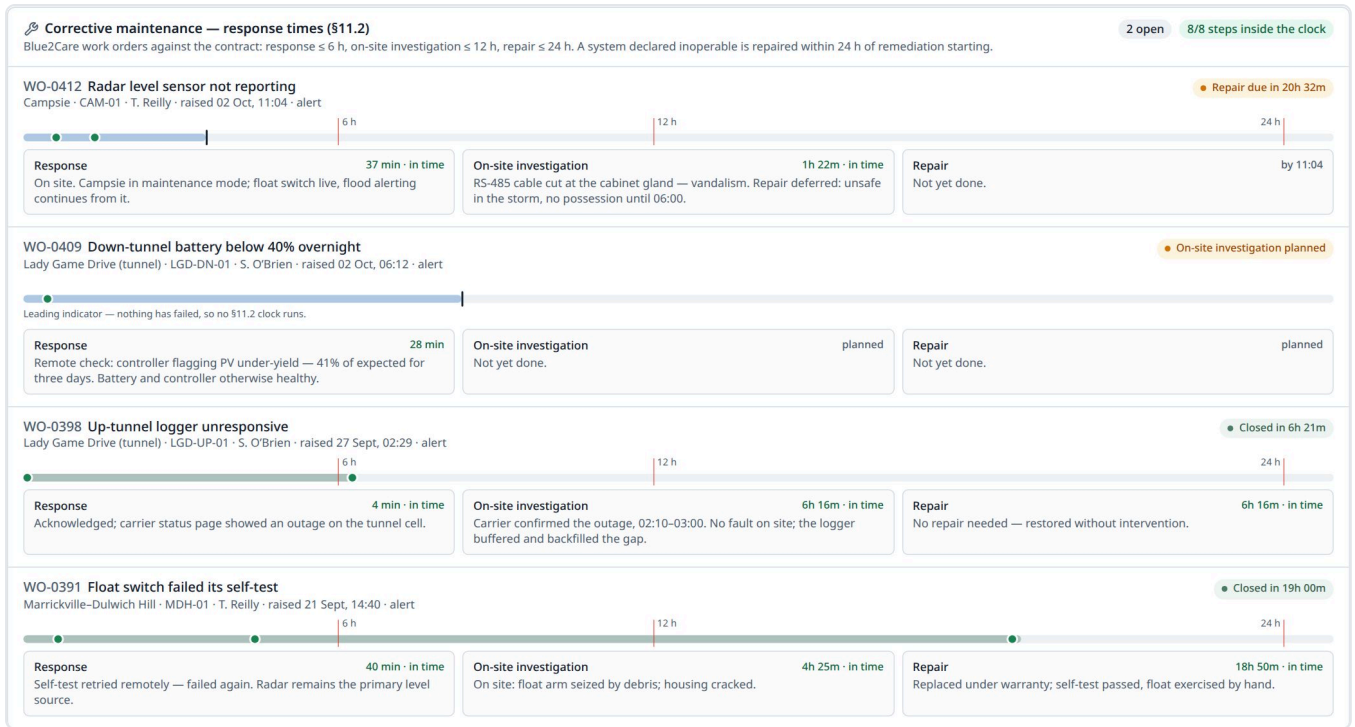


Figure 20 — Repairs against the response times

Corrective maintenance tracks each fault as a work order against the agreed response times — response within 6 hours, on-site investigation within 12, repair within 24 — with each step's time and notes.

The **Data pipeline** tab shows how data travels from the field to the portal, with today's counts.

Administration

Admin in the menu is for administrators. It has seven pages: Users, Roles, Alert rules, Sensors, Recipients, Audit trail, and System & contract.

Users

Design prototype — demonstration data only. No sensors, no alerts and no pump commands are real. [Requirements coverage](#) · [Colour system](#)

OBSERVATOR Weather Monitoring Portal — Sydney Metro... Map Trends Flood Station History Alerts Health Admin 14:32:06 AEST 6 ACTIVE ALERTS 8/8 ONLINE

⚠️ ALERT — Marrickville: Rainfall ≥ 120 mm in 3 days. Be prepared for network flooding — 48-hour vigilance. [Open](#) ×

Administration

MTS manages users, roles, sensors, thresholds, alert wording and recipients directly — no dependency on us for day-to-day changes.

[Users](#) Roles Alert rules Sensors Recipients Audit trail System & contract

Add, edit, suspend or remove users and assign their roles and station access. Administrator only.

Forgotten passwords are self-service: people reset their own from the sign-in screen with an emailed link that works once for 30 minutes. Administrators never see or set a password — resets appear in the audit trail.

Q Search name, email or role Role: All 22 users · 18 active · 2 suspended [Add user](#)

User	Role(s)	Station access	Status	Last login	Actions
SC Sarah Chen s.chen@metrotrains.com.au 0491 570 156	Administrator	All stations	Active	10 min ago	Edit Suspend Remove
JO James Okoro j.okoro@metrotrains.com.au 0491 570 157	Operator	All stations	Active	27 min ago	Edit Suspend Remove
PN Priya Nair p.nair@metrotrains.com.au 0491 570 158	Pump Controller Operator	Marrickville	Active	42 min ago	Edit Suspend Remove
TR Tom Reilly t.reilly@contractor.com 0491 570 159	Maintainer / Technician	All stations	Active	22 h ago	Edit Suspend Remove
AK Aisha Khan a.khan@metrotrains.com.au 0491 570 110	Analyst / Reporting	All stations	Active	2 d ago	Edit Suspend Remove
DS David Smith d.smith@metrotrains.com.au 0491 570 313	Viewer	Belmore triangle, Campsie	Active	3 d ago	Edit Suspend Remove
ML Mark Lee m.lee@metrotrains.com.au	Operator	All stations	Suspended	12 d ago	Edit Reinstate Remove

Figure 21 — Users

- **Add user** — enter the name, email and mobile number, choose one or more roles and which stations they can see. They receive an invitation and set their own password.
- **Edit** — change roles, station access or contact details. Changes apply at once.
- **Suspend** — block sign-in but keep the person's history. **Reinstate** reverses it.
- **Remove** — delete the account (its history stays in the audit trail).

Administrators never set or see passwords. People reset their own (see *Forgotten your password*).

Roles

Six standard roles are provided (see *Who can do what*). Select **New role** to create your own, choosing exactly which permissions it carries.

Alert rules

OBSERVATOR Weather Monitoring Portal — Sydney Metro...

MapTrendsFloodStationHistoryAlerts

intensity Rainfall	≥ 25 mm / 1 hour (rolling)	Vigilance 6 hours · reset	Alert
Rainfall — short accumulation Rainfall — 3 h	≥ 45 mm / 3 hours (rolling)	Vigilance 12 hours · reset	Alert
Rainfall — multi-day Rainfall — 3 days	≥ 120 mm / 3 days (rolling)	Vigilance 48 hours · reset	Alert
Flood — standing water Water level	≥ 80 mm	Immediate	Alert
Flood — above rail foot Water level	≥ 200 mm	Immediate	Alert
Flood — rate of rise Water level	Rising ≥ 60 mm/hr over 10 min	over 10 min	Warn
Flood — trending down Water level	Falling for 10 min after the line was blocked	falling for 10 min after a block	Warn
Temperature — heat 1 Air temperature	≥ 38 °C	Rising > 5 min · falling < 38 °C > 10 min	Warn
Temperature — heat 2 Air temperature	≥ 45 °C	Rising > 5 min · falling < 45 °C > 10 min	Alert
Wind — gust Wind gust	≥ 75 km/h	Per rule	Warn
Wind — gust (alert) Wind gust	≥ 85 km/h	Per rule	Alert
Wind —			

Edit rule — Rainfall — intensity

TRIGGER

Rule name

Rainfall — intensity

Parameter

Rainfall

Severity

Alert

Value

25

Unit

mm

Window

1 hour (rolling)

TIMING

Dwell

Immediate

Vigilance

6 hours

☒ Reset the countdown if more qualifying rain falls

SCHEDULE

Always active

Between dates

For seasonal rules (heat in summer) or temporary ones during track works. Outside the dates the rule is dormant but kept.

APPLIES TO

Marrickville

Marrickville-Dulwich Hill

Canterbury

Campsie

Belmore triangle

Lady Game Drive (tunnel)

Windsor Road SSC

Where the rule reads its sensor. Dashed locations have no rainfall sensor; the section an action covers is stated in the message. If a sensor fails, the rule falls back to its designated alternate source (§7.4).

TEST AGAINST THE LAST 24 HOURS

Marrickville ×1

Belmore triangle —

Figure 22 — Alert rules, with a rule open for editing

Every alert threshold, timer, message and recipient is a setting here — no software change is needed.

- Use the switch on a row to turn a rule **on or off**.
- Select **Edit** to change a rule: the threshold and time window, how long a reading must last before alerting, the countdown after it clears, dates it is active (for example summer only), the locations it covers, the **message** (with a preview of what people receive), and who gets it.
- Select **New rule** to add one.

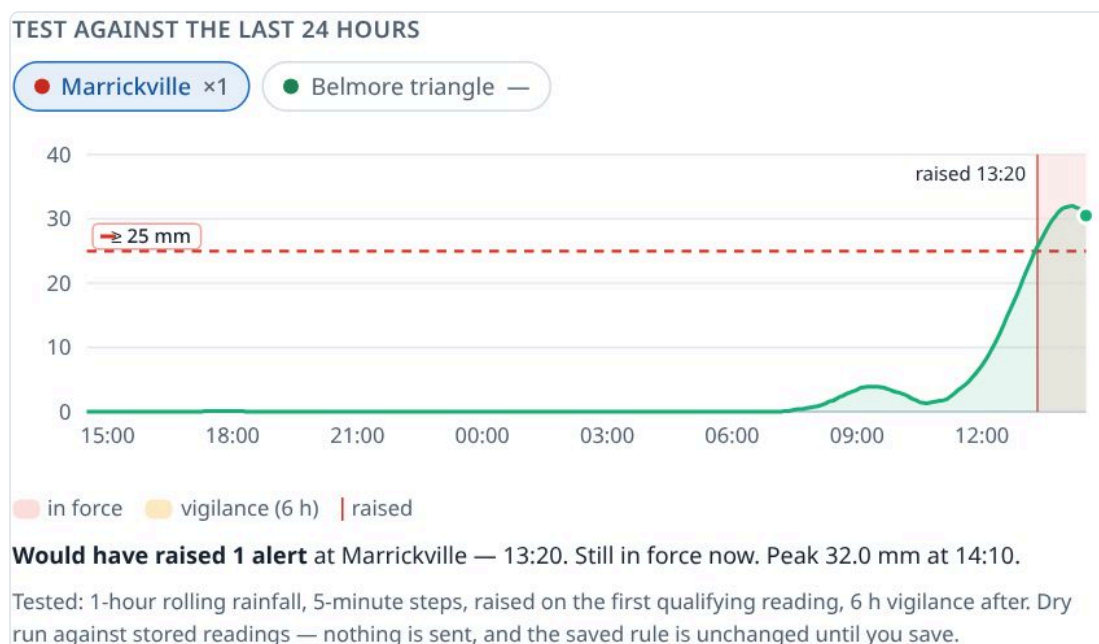


Figure 23 — Testing a rule before saving

Test against the last 24 hours shows, before you save, when your changed rule *would* have fired at each location. Use it to check a new threshold is right.

Every saved change creates a new **version**. **Version history** shows who changed what, and **Restore** brings back an earlier version.

Sensors

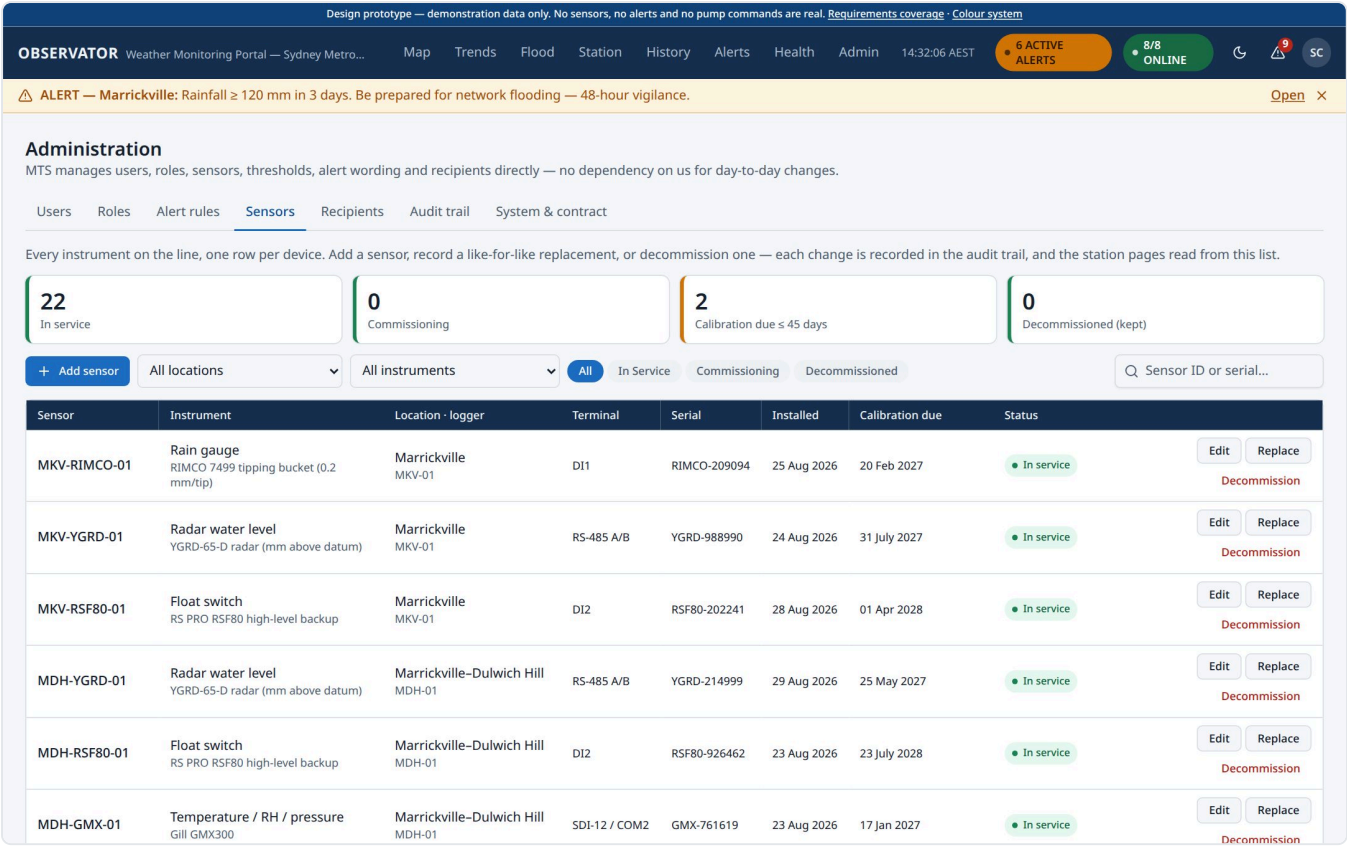


Figure 24 — The sensor register

Sensors lists every instrument on the line with its location, logger connection, serial number, install date, calibration due date and status.

Add a sensor

It starts in Commissioning — its readings feed no alerts until it is put in service.

Location

3. Canterbury

Instrument

Rain gauge

Serial number

RIMCO-778812

Calibration certificate

CAL-2026-...

Logger

CAN-01 — Canterbury

Sensor ID

CAN-RIMCO-01

Mounting

Mast, 1.5–2 m, clear of splash

Calibration due

mm/dd/yyyy

RIMCO 7499 tipping bucket (0.2 mm/tip)

Suggested from the logger and instrument — edit if your naming differs.

A rain gauge is new at Canterbury: a non-like-for-like change, submitted to the CCB before installation (\$13). Wired to CAN-01 on the terminal the \$4.3 schedule assigns.

Cancel

Add sensor

Figure 25 — Adding a sensor

- **Add sensor** — choose the location, logger and instrument type, then enter the serial number (and calibration certificate if you have it). A new sensor starts as **Commissioning**: it raises no alerts until you select **Put in service**.
- **Edit** — correct the details.
- **Replace** — record a like-for-like replacement with its new serial number. The sensor keeps its ID and history.
- **Decommission** — retire a sensor, with a reason. It stays on the list for its history.

Station pages read their equipment list from here.

Recipients

Who receives which alerts, and by which channel (on screen, email, web push), by group and by person.

Audit trail

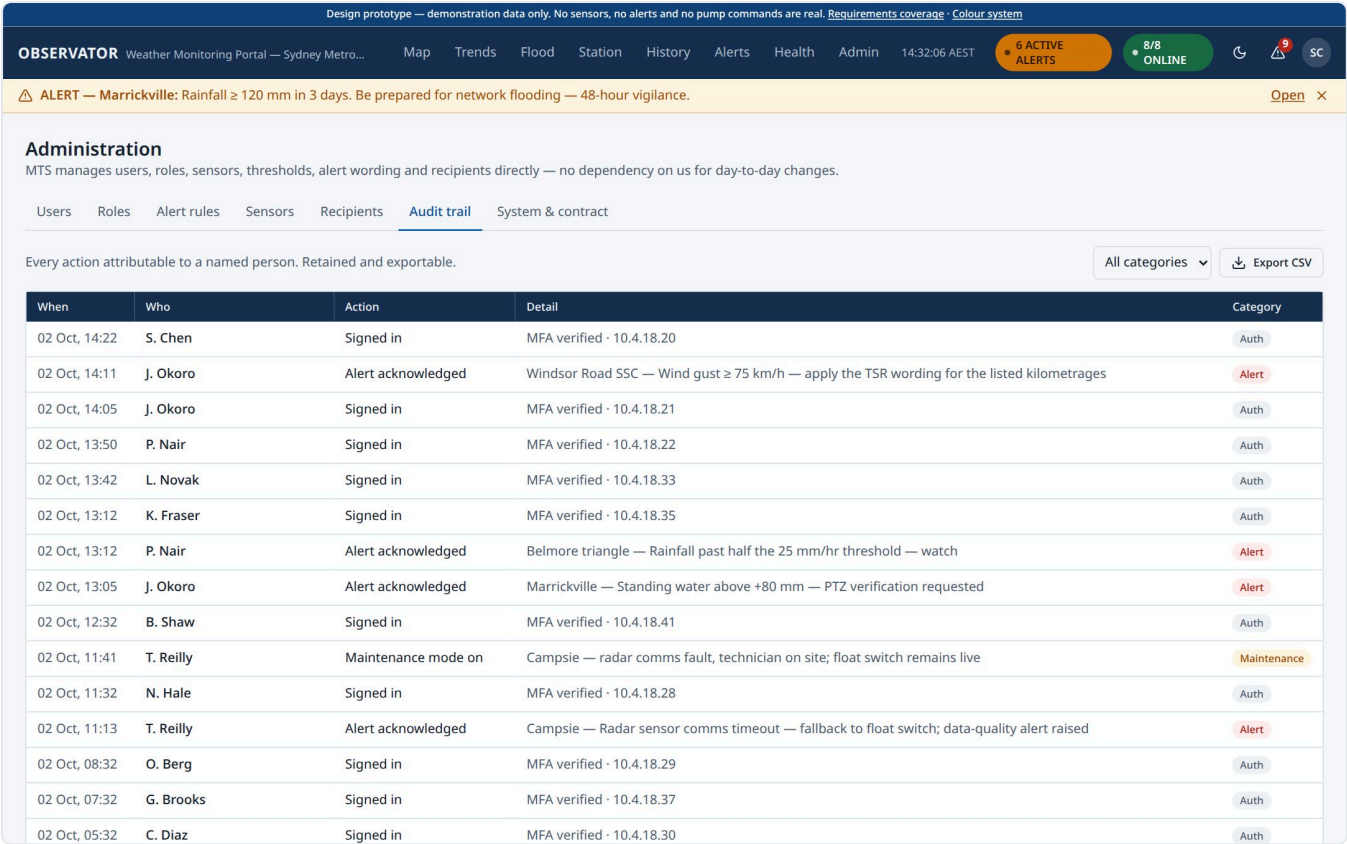


Figure 26 — Audit trail

A permanent record of who did what and when: sign-ins and password resets, users and roles changed, rule edits, sensor changes, alerts acknowledged, maintenance mode and every manual pump command. Filter by category and select **Export CSV**.

System & contract

A summary of the installed system: the sensors at each location, how the system was delivered, the maintenance and response commitments, and safety and governance.

Your settings

Design prototype — demonstration data only. No sensors, no alerts and no pump commands are real. [Requirements coverage](#) · [Colour system](#)

OBSERVATOR Weather Monitoring Portal — Sydney Metro... Map Trends Flood Station History Alerts Health Admin 14:32:06 AEST 6 ACTIVE ALERTS 8/8 ONLINE

⚠️ **ALERT — Marrickville:** Rainfall ≥ 120 mm in 3 days. Be prepared for network flooding — 48-hour vigilance. [Open](#) ×

Your settings

Your profile, and how you would like to be told about alerts.

Profile

Name	Email
Sarah Chen	s.chen@metrotrains.com.au
Roles	Station access
Administrator	All stations

How you are notified

On-screen alerts always appear while you are signed in. These control what reaches you when you are not.

On screen ☒

Pop-up in the portal, with an audible option for control-room screens.

Web push ☒

Arrives on your lock screen and opens straight to the event. On iPhone and iPad, add the portal to your Home Screen once to enable it.

Email ☐

A copy of the alert with the same event and camera links.

SMS ☐ not in scope

Out of scope — replaced by web push (Rev B §10)

Security

Two-factor authentication [Set up](#)

An authenticator app, in addition to your password.

Sessions time out automatically after a period of inactivity, and permissions are re-checked on every action — so a role withdrawn takes effect immediately, not at your next sign-in.

Figure 27 — Your settings

Open from your **initials** → **Profile & notifications**:

- **Notification preferences** — which alerts you receive, and how (on screen, email, web push).
- **Security** — set up **two-factor authentication** with an authenticator app.
- **Display** — how the portal uses colour. Light or dark is the moon / sun button in the top bar.

For your security, you are warned and then signed out after a period of inactivity.

Using a phone

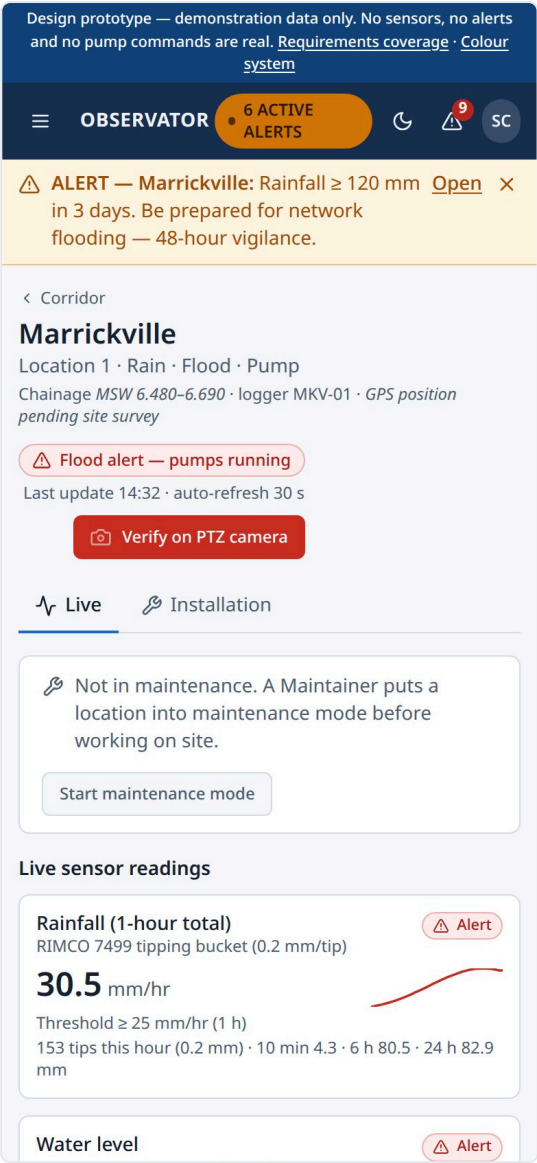


Figure 28 — The portal on a phone

Every page works on a phone. Pages reflow into a single column, tables scroll sideways, and the pump controls come straight after the readings so they are quick to reach.

Who can do what

Role	Typical user	Can
Administrator	System owner / IT	Everything: users, roles, alert rules, recipients, sensors, and all viewing and control
Operator	Operations control room	View everything, receive and acknowledge alerts, start operational responses
Pump Controller	Authorised operations staff	Everything an Operator can, plus manual pump start/stop at permitted stations
Maintainer / Technician	Field and maintenance	Equipment and power health, calibration, maintenance mode, maintenance alerts
Analyst / Reporting	Engineering and reporting	History, trends and CSV export; no control
Viewer	Stakeholders	View only — no actions or changes

A person can hold more than one role, and can be limited to particular stations.

Quick answers

I forgot my password. Select *Forgot your password?* on the sign-in screen. The link comes to your email and works once for 30 minutes.

I'm locked out after wrong passwords. Wait 15 minutes, or reset your password.

How do I stop a red alert showing as new? Open *Alerts* and select *Acknowledge*. Your name and the time are recorded.

The camera window keeps appearing. It is asking someone to confirm standing water. Check the feed and acknowledge, or snooze it for 10 minutes.

How do I get data into Excel? Use *History*, run your query and select *Export CSV*. Every chart's download icon also exports just that chart.

A station shows grey or "no data". The sensor or logger is not reporting. *Health* shows since when, and whether a work order is open.

How do I add a new sensor? *Admin* → *Sensors* → *Add sensor*. It starts in Commissioning; put it in service once it has been checked.

Who changed this rule? *Admin* → *Alert rules* → *Version history*, or the *Audit trail*.

Reviewing the prototype — demo time

Because the prototype uses demonstration data, it opens at **14:32 during a storm at Marrickville**. The **demo time** button at the bottom right plays the storm forward (×10, ×60) or **jumps** straight to key moments — the pumps starting, the line blocked, the camera check, the water falling and the all-clear. **Back to 14:32** starts again. This control exists only in the prototype.

