

What do I need to know about the Arlo Theft Replacement program?

What do I need to know about the Arlo Theft Replacement program?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AAD1001](#) [AL1101](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#)
[FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2030](#) [VMC2032](#)
[VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VMC3030](#)

1. What is the Arlo Theft Replacement program?

The Arlo Theft Replacement (ATR) program allows the *original purchasers* of certain Arlo devices connected to paid Arlo subscription plans to qualify for replacements in the event that they are stolen.

2. What is an eligible Arlo device?

An “Eligible Device” is an Arlo wire-free camera product (Arlo Wire-Free, Arlo Essential Outdoor Camera [2nd Generation], Arlo Essential XL Outdoor Camera [2nd Generation], Arlo Essential wire-free, Arlo Pro, Arlo Pro 2, Arlo Pro 3, Arlo Pro 3 Floodlight, Arlo Pro 4, Arlo Pro 5S, Arlo Ultra, and Arlo Ultra 2), Arlo doorbell product (Arlo Video Doorbell [2nd Generation], Arlo Essential Video Doorbell Wired, Arlo Essential Video Doorbell Wire-Free, and Arlo Audio Doorbell), or Arlo wire-free light product (Arlo Security Light), and the product’s accompanying batteries (if applicable). The Eligible Device must have been purchased directly from an Arlo authorized reseller *within the 12 months*

preceding the theft and may have been bought as brand new or certified refurbished. The Eligible Device must be registered under an Arlo account by the original purchaser at the time of the theft and will be rendered inoperative when registered as stolen under the ATR program.

3. What must I do to request a replacement device under the ATR program?

- A. File a police report and request a copy of the report showing a case number and law enforcement contact within two weeks of the theft. The registered owner of the Arlo account using the Eligible Device must be the person who files the police report.
- B. Do NOT remove the stolen Eligible Device from your Arlo account until you have contacted Arlo Support.
- C. Initiate an ATR claim by contacting [Arlo Support](#) within 30 days of the date printed on the police report. You will need to provide Arlo with your Eligible Device and account information, so that Arlo may validate and process your claim. You must have valid proof of purchase of the Eligible Device to initiate an ATR claim. Your recordings and personal information are protected in the Arlo cloud, as long as your account credentials were not stolen.
- D. Once we verify the police report and your ownership of the stolen Eligible Device and account, we will process the replacement. The replacement will be the same or similar make and model as the original Eligible Device and may be new or refurbished.
- E. You must be on a paid Arlo subscription plan (Arlo Secure, Arlo Secure Plus, Arlo Safe & Secure Pro for Home; Advanced, Professional, or Enterprise for Business) at the time of the Eligible Device theft.
- F. The theft must have occurred within the United States, Australia, or New Zealand, and the law enforcement contact on the police report must be in the United States, Australia, or New Zealand.

4. What is not covered under the ATR program?

- A. Arlo products purchased from unauthorized resellers including third party sellers on Amazon, eBay, and other marketplaces are not eligible for the ATR program.

- B. Arlo Go, Arlo Go 2, Arlo SmartHubs, Arlo Base Stations, Arlo Bridges, and indoor cameras such as Arlo Q, Arlo Q Plus, Arlo Baby, Arlo Essential Indoor Camera, and Arlo Essential Indoor Camera (2nd Generation) are not eligible for the ATR program.
- C. Arlo accessories such as mounts, skins, cables, solar panels, or power adapters are not eligible for the ATR program.
- D. The ATR program does not apply to theft during or upon delivery of your Arlo Eligible Device, or to theft any time prior to the registering of the Eligible Device to your Arlo account.
- E. The ATR program is not transferable.

Arlo Small Print: The ATR program is a courtesy service provided by Arlo. Arlo will determine in its sole reasonable discretion whether a claim under the ATR program meets the eligibility criteria. Arlo's decisions regarding eligibility and all other aspects of the ATR Program are final and binding. Arlo may, at any time in its sole discretion and without prior notice, terminate, cancel, or suspend the ATR Program; alter the requirements of the ATR Program; modify the administration of the ATR Program; or deny ATR claims because of Arlo's reasonable business concerns, including without limitation for suspected fraud and repeated claims by the same person or account.

DISCLAIMER AND LIMIT OF LIABILITY: OTHER THAN AS ABOVE, ARLO MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, REGARDING THE ATR PROGRAM. ARLO WILL NOT BE RESPONSIBLE OR LIABLE FOR ANY LOSS, DAMAGE, COST, OR INJURY THAT ARISES FROM OR RELATES TO PARTICIPATION IN THE ATR PROGRAM, INCLUDING BUT NOT LIMITED TO: (I) LATE, LOST, DELAYED, DAMAGED, MISDIRECTED, INCOMPLETE, OR UNINTELLIGIBLE CLAIMS; (II) TELEPHONE, ELECTRONIC, HARDWARE, SOFTWARE, NETWORK, INTERNET, OR COMPUTER MALFUNCTIONS, FAILURES, OR VIRUSES; (III) FAILED, INCOMPLETE, GARBLED, OR DELAYED COMPUTER TRANSMISSIONS; (IV) THE USE OR DOWNLOADING OF ANY SOFTWARE OR MATERIAL IN CONNECTION WITH THIS ATR PROGRAM; (V) TYPOGRAPHICAL OR OTHER ERRORS IN THE PRINTING OF THE OFFER OR ADMINISTRATION OF THE ATR PROGRAM; AND (VI) ANY OTHER CONDITION THAT MAY CAUSE THE ATR PROGRAM TO BE DISRUPTED.

RELEASE: TO THE EXTENT ALLOWED BY LAW, BY PARTICIPATING IN THE ATR PROGRAM, EACH ENTRANT RELEASES AND AGREES TO HOLD HARMLESS ARLO FROM

ANY LIABILITY FOR ANY CLAIMS, COSTS, LOSSES, OR DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH TO THE ATR PROGRAM.

Last Updated:09/11/2024 | Article ID: 000056563

Arlo Legacy Cameras End of Life

End of Life for Arlo Legacy Cameras and Arlo Services

This article applies to:

[AAD1001](#) [AL1101](#) [ABB1000](#) [VMC4030P](#) [VMC4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

As part of Arlo's commitment to delivering the highest performance in smart home security as well as its [Privacy Pledge](#) to protect our customers' privacy and data, we continually review the ability of our products and services to meet and exceed the ever-evolving technology and cybersecurity standards in the market.

Based on this analysis, we determine when our products and services need to be updated or retired and moved into their End of Life (EOL) stage. There are various factors considered when deciding to EOL a product or service, including data security, data privacy, product and service performance, functionality, utility, operational efficiency, and scalability.

Arlo defines an End of Life (EOL) Policy as posted on our [EOL Policy page](#).

What will happen with my device or service?

When a device has been moved into EOL, the following may occur for the EOL'd Arlo Product:

- No support
- No firmware upgrades
- No bug fixes
- No maintenance releases
- No workarounds or patches

- No spare parts
 - No replacement devices
 - Bundled services or features may be reduced or eliminated
 - Future services or features may be unavailable
 - Some automatic email alerts and push notifications may be reduced or eliminated
 - Offers, discounts, and coupons to purchase newer Arlo products may be given
 - For an Arlo Product that is a service, Arlo customers may be migrated to the closest equivalent service or given an offer to change their service plan
- Note:** Arlo will provide critical security updates for hardware to one year beyond the hardware's EOL date.

What devices and services will be moved to EOL?

The following Arlo hardware devices will be moved to EOL on July 1, 2023:

- Arlo Wire-Free Camera (VMC3030)
- Arlo Pro Camera (VMC4030)

Note: US customers who onboarded an Arlo Wire-Free Camera (VMC3030) or Arlo Pro Camera (VMC4030) before January 1, 2023 are eligible for upgrade offers.

The following Arlo Hardware devices will be moved to EOL on January 1, 2025:

- Arlo Pro 2 (VMC4030P)
- Arlo Q (VMC3040)
- Arlo Q+ (VMC3040S)
- Arlo Baby (ABC1000)
- Arlo Security Lights (ALS1101)
- Arlo Audio Doorbell (AAD1001)

The following Arlo Services will be moved to EOL in 2023:

- Email Notifications for motion and audio detection
- E911 Emergency Calling

FAQ

Can I still use my EOL device?

EOL devices may continue to be operated by the existing registered Arlo owners to record and livestream video from the camera, receive motion notifications on their smartphone, and store video clips locally with a compatible Arlo SmartHub or Base Station.

EOL devices can utilize Arlo's new cloud video storage platform, which is available with the Arlo Secure subscription service. However, some features may not be available on EOL devices since these devices no longer receive software or firmware updates and are no longer supported.

Does the End of Life Policy apply to all regions?

The End of Life Policy for Arlo Services applies to all regions. The End of Life Policy for Arlo Hardware applies to all regions except the EU and UK.

Am I able to record videos if I have an Arlo Secure subscription?

Yes, users who are subscribed to Arlo Secure can still use their EOL cameras to record video.

For more information on Arlo Secure, visit: [Arlo Secure Plans](#)

What does this mean to me when E911 Emergency Calling is moved to EOL?

E911 Emergency Calling will no longer be available, however, Arlo's Emergency Response feature is available for Arlo Secure subscribers. For more information, visit: [What is the Arlo Emergency Response feature and how does it work?](#)

Why are these services going to EOL?

- Arlo is migrating our emergency response capabilities to new services that deliver a full-service, personalized customer experience (Professional Monitoring), and a more efficient DIY experience (Direct Dispatch).
- Email system notifications are being retired as push notifications offer a superior experience, with better security, privacy, and efficiency.

Last Updated:09/24/2024 | Article ID: 000063018

Are Arlo cameras weatherproof?

Are Arlo cameras weatherproof?

This article applies to:

[FLW2001](#) [Arlo_Pro_2](#) [Arlo_Pro_3](#) [Arlo_Pro_3_Floodlight](#) [Arlo_Pro_4](#) [Arlo_Pro_5](#) [Arlo_Pro](#)
[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [VMC5040](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#)
[VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#)

The following Arlo cameras and doorbells are weather resistant and can be used outdoors:

- Arlo Ultra 2
- Arlo Ultra
- Arlo Pro 5S
- Arlo Pro 4
- Arlo Pro 3
- Arlo Pro 3 Floodlight
- Arlo Pro 2
- Arlo Pro
- Arlo Go 2
- Arlo Go
- Arlo Essential Video Doorbell Wire-Free
- Arlo Essential Video Doorbell Wired
- Arlo Essential Camera
- Arlo Essential Spotlight Camera
- Arlo Essential XL Spotlight Camera
- Arlo Audio Doorbell
- Arlo Wire-Free Camera (VMC3030)
- Arlo Essential Outdoor Camera (2nd Generation)
- Arlo Essential XL Outdoor Camera (2nd Generation)
- Arlo Video Doorbell (2nd Generation)
- Arlo Wired Floodlight Camera

Note: Arlo cameras and doorbells work in a wide variety of weather conditions, including rain and snow, but do **NOT** allow Arlo batteries or the interior of battery compartments to be exposed to water.

For more information, visit:

- [Safe Handling and Usage Guidelines for Arlo Rechargeable Batteries](#)
- [Safety Rules for Arlo Non-Rechargeable Batteries](#)

Recommended Operating Temperature Range for Arlo

Cameras and Doorbells

Arlo Ultra series, Arlo Pro series, Arlo Go series, Arlo Essential series, Arlo Audio Doorbell, Arlo Video Doorbells, Arlo Wired Floodlight Camera:

- **-4°F to 113°F** (-20°C to 45°C)

Arlo Wire-Free Camera (VMC3030):

- **14°F to 122°F** (-10°C to 50°C)

Note: Arlo Q, Arlo Q Plus, Arlo Baby, and Arlo Essential Indoor Cameras are designed for **INDOOR USE ONLY**.

Outdoor Charging

Some Arlo cameras can use Arlo Outdoor Charging Cables or Arlo Solar Panels to help keep the camera charged outdoors. To purchase outdoor charging accessories, visit:

Arlo Ultra series, Pro series, and Arlo Go 2

- [Arlo Outdoor Magnetic Charging Cable for Arlo Ultra, Ultra 2, Pro 3, Pro 4, Pro 5S, Go 2, and Pro 3 Floodlight](#)
- [Arlo Solar Panel for Arlo Ultra, Ultra 2, Pro 3, Pro 4, Pro 5S, Go 2, and Pro 3 Floodlight](#)

Arlo Essential Outdoor series (2nd Generation)

- [Arlo Outdoor Charging Cable for Arlo Essential Outdoor Cameras \(2nd Generation\)](#)
- [Arlo Solar Panel for Arlo Essential Outdoor Cameras \(2nd Generation\)](#)

Arlo Essential series

- [Arlo Essential Outdoor Charging Cable for Arlo Essential, Essential Spotlight, and Essential XL Spotlight](#)
- [Arlo Solar Panel for Arlo Essential, Essential Spotlight, and Essential XL Spotlight](#)

Arlo Pro, Arlo Pro 2, and Arlo Go

- [Arlo Outdoor Power Adapter for Arlo Pro, Arlo Pro 2, and Arlo Go](#)
- [Arlo Solar Panel for Arlo Pro, Arlo Pro 2, and Arlo Go](#)

For more information, visit:

- [Arlo Solar Panel Compatibility](#)
- [How can I extend Arlo camera battery life?](#)
- [What type of battery does my Arlo camera use?](#)
- [How do I keep my Arlo batteries charged in cold weather?](#)
- [What do my Arlo camera's battery level icons and notifications mean?](#)

Last Updated:09/30/2024 | Article ID: 1705

About the Arlo Privacy Center

About the Arlo Privacy Center

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [MS1001](#)
[LBB1001](#) [KB1001](#) [NT1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#)
[VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#)
[VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

We are committed to supporting industry standards for data protection designed to keep your personal information private and in your control. Use the Arlo Privacy Center to manage your account, erase cloud recordings, and control your logins and data.

To view the Arlo Privacy Center:

For the Arlo Secure App experience with **Feed**:

1. Launch the Arlo Secure App.
2. Tap .

3. Tap **Privacy Center**.

For the Arlo Secure App experience with **Library**:

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap **Privacy Center**.

For the **my.arlo.com** web portal:

1. Log in to my.arlo.com.
2. Click **Settings**.
3. Click **Privacy Center** or **Data Privacy**.

Use the tabs to navigate and manage your account preferences:

- **Overview:**
Learn about Arlo's privacy pledge and review our policies.
- **Content:**
Control your content and remove it from the Arlo cloud whenever you want. You can erase all the content on one or more of your Arlo devices.
- **Account:**
See a full list of devices that have access to your Arlo system. You can log out one or more of the devices if someone has unauthorized access.
- **Partners:**
View a list of apps and services linked to your Arlo account, like Alexa, Google, or IFTTT so you can validate that only authorized apps and services connect to your account. Easily disconnect one or all of the services whenever you need to.

Note: Some connections are maintained and controlled by partner services and may need to be removed from their website.

Note: Privacy Center feature availability varies by region.

Last Updated:05/03/2024 | Article ID: 000062614

Where can I find the serial number and firmware version for my Arlo device?

Where can I find the serial number and firmware version for my Arlo device?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [MS1001](#)
[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#)
[VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#)
[VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#)
[VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

You can find the Arlo device serial number in the Arlo Secure App or on the Arlo device label.

The firmware version for your Arlo device is located in the Arlo Secure App.

To view the serial number and firmware version in the

Arlo Secure App:

For the Arlo Secure experience with **Feed**:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select your Arlo device.
4. Tap .
5. Tap the device name at the top of the Device Settings screen.

The Device Info screen displays with Serial Number and Firmware.

For the Arlo Secure experience with **Library**:

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap **My Devices**.

4. Select your Arlo device.
5. Tap **Device Info**.

The Device Info screen displays with Serial Number and Firmware.

Serial numbers can also be found on the label of the Arlo device:

Arlo SmartHubs and Base Stations

Serial numbers are on the bottom of the device.

Arlo wire-free Cameras, Floodlights, and Security Lights

Serial numbers are typically in the battery compartment, behind the battery.

Arlo wired Cameras

Serial numbers are typically underneath the camera.

Arlo Wired Doorbells

Serial numbers are on the back of the device, underneath the doorbell mount.

Arlo Wire-Free Doorbells

Serial numbers are behind the battery.

Arlo Chimes and Arlo Bridge

Serial numbers are on the back of the device.

Arlo Essential wire-free Cameras

Serial numbers are on the bottom of the device, underneath the micro-USB charging port cover.

Arlo Essential Outdoor Cameras (2nd Generation)

Serial numbers are on the back of the device.

Arlo Essential Indoor Cameras (2nd Generation)

Serial numbers are on the back of the device, below the micro-USB charging port.

Arlo Video Doorbell (2nd Generation)

Serial numbers are on the back of the device.

Arlo Keypad Sensor Hub

Serial number is on the bottom of the device.

If a Cellular and Battery Backup is attached to the Arlo Keypad Sensor Hub, you will need use a paperclip to remove the Cellular and Battery Backup to view the serial number.

For more information, visit: [How do I set up the Arlo Cellular and Battery Backup device?](#)

Arlo All-in-One Sensor

Serial number is located on the back housing of the sensor.

Serial numbers are also listed on the inside of the back housing.

To remove the back housing, visit: [How do I replace the battery in the Arlo All-in-One Sensor?](#)

Arlo Cellular and Battery Backup

Serial number is located on the bottom of the device.

Last Updated:06/01/2024 | Article ID: 000062026

EU and UK Declarations of Conformity for Arlo Products

EU and UK Declarations of Conformity for Arlo Products

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [VMB5000](#) [VMB4540](#)
[VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#)
[VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

Click the links below to view the Declarations of Conformity for Arlo products.

Cameras, Doorbells, and Lights:

Arlo Wire-Free

- EU: [VMC3030 / VMS3x30](#)

Arlo Pro

- EU: [VMC4030 / VMS4x30](#)

Arlo Pro 2

- EU: [VMC4030P / VMS4x30P](#)

Arlo Pro 3

- EU: [VMS4X40P / VMC4X40B](#)
- UK: [VMC4040P / VMS4X50P / VMS4X50B](#)

Arlo Pro 3 Floodlight

- EU: [FB1001Y](#)
- UK: [FB1001Y](#)

Arlo Pro 4

- EU: [VMC4X5XY / VMS4X5XY](#)
- UK: [VMC4X5XY / VMS4X5XY](#)

Arlo Pro 5

- EU: [VMC4060P](#)
- UK: [VMC4060P](#)

Arlo Essential Camera / Arlo Essential Spotlight Camera

- EU: [VMC2030 / VMC2020](#)
- UK: [VMC2030 / VMC2020](#)

Arlo Essential XL Spotlight Camera

- EU: [VMC2032](#)
- UK: [VMC2032](#)

Arlo Essential Indoor Camera

- EU: [VMC2040](#)
- UK: [VMC2040](#)

Arlo Essential Outdoor Camera (2nd Generation)

- EU: [VMC2050 / VMC3050](#)
- UK: [VMC2050 / VMC3050](#)

Arlo Essential XL Outdoor Camera (2nd Generation)

- EU: [VMC2052 / VMC3052](#)
- UK: [VMC2052 / VMC3052](#)

Arlo Essential Indoor Camera (2nd Generation)

- EU: [VMC2060 / VMC3060](#)
- UK: [VMC2060 / VMC3060](#)

Arlo Q / Arlo Q Plus

- EU: [VMC3040 / VMC3040S](#)

Arlo Baby

- EU: [ABC1000 / ABC1000A](#)

Arlo Go

- EU: [VML4030](#)
- UK: [VML4030](#)

Arlo Go 2

- EU: [VML2030](#)
- UK: [VML2030](#)

Arlo Ultra / Arlo Ultra 2

- EU: [VMC5X4XY / VMS5X4XY](#)
- UK: [VMC5X4XY / VMS5X4XY](#)

Arlo Audio Doorbell

- EU: [AAD1001](#)

Arlo Essential Video Doorbell Wired

- EU: [AVD1001](#)
- UK: [AVD1001](#)

Arlo Essential Video Doorbell Wire-Free

- EU: [AVD2001](#)
- UK: [AVD2001](#)

Arlo Video Doorbell (2nd Generation)

- EU: [AVD3001 / AVD4001](#)
- UK: [AVD3001 / AVD4001](#)

Security Light and Bridge

- EU: [AL1101 / ABB1000 / ALS110x](#)

Short Form DoC All Products

- EU/UK: [Short Form DoC All Products](#)

Accessories:

Base Station and SmartHub

- EU: [VMB3000 / VMB3500 / VMB4000 / VMB4500 / VMB4540 / VMB5000](#)
- UK: [VMB4540 / VMB5000](#)

Charging Station

- EU: [VMA4400C / VMA5400C](#)
- UK: [VMA4400C / VMA5400C](#)

Chime

- EU: [AC1001 / AC2001](#)
- UK: [AC2001](#)

Indoor Power Adapter

- EU: [VMA4800](#)
- UK: [VMA4800](#)

Outdoor Power Adapter

- EU: [VMA3700 / VMA3701 / VMA5700](#)
- EU: [VMA4900](#)
- UK: [VMA3700 / VMA3701 / VMA5700](#)
- UK: [VMA4900](#)

Magnetic Charging Cable

- EU: [VMA5000C / VMA5001C / VMA5600C / VMA5601C](#)
- UK: [VMA5000C / VMA5001C / VMA5600C / VMA5601C](#)

Battery

- EU: [VMA2400 / VMA4400 / VMA4410 / VMA5400 / VMA5410 / VMA5420](#)
- UK: [VMA2400 / VMA4400 / VMA4410 / VMA5400 / VMA5410 / VMA5420](#)

Solar Panel

- EU: [VMA3600 / VMA3600B / VMA4600 / VMA5600 / VMA5600B / VMA6600 / VMA6600B](#)
- UK: [VMA3600 / VMA3600B / VMA4600 / VMA5600 / VMA5600B / VMA6600 / VMA6600](#)

PoE Adapter

- EU: [VMA3900](#)
- UK: [VMA3900](#)

Short Form DoC All Accessories

- EU/UK: [Short Form DoC All Accessories](#)

[Declarations of Conformity for Retired Arlo and VueZone Products](#)

Last Updated:09/05/2024 | Article ID: 000061839

How can I avoid Arlo support scams?

How can I avoid Arlo support scams?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [MS1001](#)
[LBB1001](#) [KB1001](#) [NT1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#)

[VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#)
[VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

How can I find the right support for my Arlo products without getting scammed?

If you need help or support, we recommend that you contact Arlo Technologies or the place where you purchased your Arlo product.

- Use the Arlo Secure App for easy access to help and support, or you can use a web browser to contact [Arlo Support](#).
- Arlo Support agents will never ask you for your **passwords** or **two-factor authentication codes**.
- Arlo Support agents will never ask for payments, credit card numbers, or bank information for Support services. If you chose an optional paid subscription plan for your Arlo products, use [my.arlo.com](#) to manage payments.

Beware of Support Scams

Multiple companies, many of which are scammers, post links and phone numbers on the web that can appear to be official Arlo Support, but they are not.

- These scammers claim to offer software support services on behalf of Arlo and other companies to gain access to and exploit consumers' personal information and collect payment for ineffective support services.
- Some third-party support services might be legitimate, but if you use them, you do so at your own risk.

Support scams can take many forms, including:

- Websites that mimic legitimate companies and may include fake alerts or fake error messages.
- Scammers use deceptive ads and search results to trick people into visiting their websites.
- Email messages that try to get you to click URLs or to open malicious attachments.

- Malware that gets installed on computers to make system changes and display fake error messages.
- Unsolicited phone calls (also known as cold calls) from scammers acting as if they are from a reputable company's support team.

The FTC has a good discussion of these and other phishing scams and how not to become a victim of them.

- For more information, visit: [How to Recognize and Avoid Phishing Scams](#)

To directly report any scams, email: reportscam@arlo.com

Last Updated:05/23/2024 | Article ID: 000062119

What is Arlo Professional Monitoring?

What is Arlo Professional Monitoring?

This article applies to:

[SH1001](#) [MS1001](#) [LBB1001](#) [KB1001](#) [SLB1001](#) [NT1001](#)

The Arlo Premium plan includes Arlo Professional Monitoring which is a paid subscription service for the Arlo Home Security System.

Professional Monitoring includes:

- 24/7 Live Security Experts to assist with any emergency
- Video and image verification to reduce false alarms and expedite emergency response
 - Enables Live Security Experts to access authorized cameras during an emergency event and take necessary action
- One Tap Direct Dispatch to quickly send police, fire, or medical responders to your home

- Insurance savings up to 20% depending on the insurance provider
- A Professional Monitoring Certificate for insurance purposes

How does Professional Monitoring work?

- Professional Monitoring uses Live Security Experts to contact you when security events are detected with the Arlo Home Security System in an armed mode (if the disarm PIN is not entered within the required time).
- Live Security Experts will be on standby to assist in case of emergency situations, communicate with the proper authorities, and request help if there is a problem.

Do I need an Arlo Premium plan for Professional Monitoring to work?

- Yes. You need an active Arlo Premium plan for Professional Monitoring to work.
- For more information, visit: [What are the available Arlo subscription plans and how much cloud recording is available?](#)

What is included in the trial that comes with the Arlo Home Security System?

- You will receive the Professional Monitoring services portion of the Arlo Safe & Secure Pro plan.
- This includes 24/7 Live Security Expert, Video and Image Verification (with an Arlo Camera), One Tap Direct Dispatch, and Cellular Backup (The Arlo Cellular and Battery Backup add-on device is required for cellular backup).

Last Updated:09/20/2024 | Article ID: 000062864

Arlo Community Terms of Service

Arlo Community Terms of Service

This article applies to:

Arlo welcomes you to the Arlo Community! Registration to the Arlo Community and its usage is free. The Arlo Community may include support sites and partner sites (all sites and the Arlo Community will be referred to as "Arlo Community" or "Community"). By using, accessing, reviewing, or posting to the Arlo Community, you agree to the following terms and conditions ("Terms of Service") and our Privacy Notice at <https://www.arlo.com/en-us/about/privacy-policy/>. If any conflict exists between the Terms of Service and the Privacy Notice, then the Privacy Notice will control.

In particular, you expressly agree to that:

1. Messages in the Arlo Community express the personal views of the author and not necessarily of Arlo or its representatives. Arlo takes no responsibility for and does not in any way warrant the accuracy of the content of any of the messages posted in the Community or of the authenticity of its authors.
2. Arlo and its representatives will not be held liable for the result of the usage of any information provided in the Community. Arlo and its representatives disclaim all liability resulting from the use of the posted information.
3. Search the Community first. Although every experience is unique, the Community contains cumulative knowledge from folks who may have already experienced what you may be seeing.
4. Stay on topic. Arlo Community is here to help people use Arlo products and technologies more effectively.
5. Behave with civility and mutual respect. Flaming or name calling will not be tolerated. Similarly, any message containing the following will be removed at the discretion of either a Community moderator or administrator.
 - Off-Topic posting
 - Unhelpful/redundant content
 - Thread hi-jacking
 - Spamming
 - Cussing or other profanity
 - Ranting
 - Discussion or suggestions involving illegal activities
 - Linking or posting of pornographic material
 - Linking or posting of advertising, promotions, contest materials that are non-Arlo provided

6. Never falsely represent yourself by impersonating other people.
7. Try to post to the correct thread. Threads incorrectly posted and placed may be moved or locked. Post to the Community that is most appropriate for the topic being presented.
8. Keep within the Law. Observe all Federal/State/Local laws pertaining to copyright, trademark, patent, trade secret, and/or insider information.
9. Respect Community MODERATORS and ADMINISTRATORS and follow their directions and instructions.
10. All messages posted in the Community become property of Arlo. Arlo reserves the right to use this material without further notification or explanation to the author.
11. You are at least 13 years old. If you are over 13 years old but have not yet reached the age of majority, you must have your parent or guardian's permissions to post to the Arlo Community.
12. Arlo's involvement is optional and limited. Arlo may respond to questions but does not formally provide technical support on the Community. Any information that is provided by Arlo or Arlo employees is offered on an "AS IS" basis without warranties of any kind.
13. Arlo may offer you benefits and award privileges for your participation in the Community. The benefits and privileges provided do not create an employee, agency or independent contractor relationship between you and Arlo, and you may not present yourself as a spokesperson for Arlo.
14. Arlo may use "cookies" and other technologies to track user activity within the Arlo Support Community. These technologies help us improve your experience and our products and services. Arlo's use of this tracking information will conform to Arlo's Privacy Notice (<https://www.arlo.com/en-us/about/privacy-policy/>)
15. Arlo may provide a gamification system whereby users acquire points for various activities.
 - Do not 'game' the system. You agree to not create multiple IDs or otherwise manipulate the points system.
 - Do not ask for points. If you feel the system is not clear to users, please provide feedback to Arlo; do not instruct other users unless they ask.

16. You will not advertise. Do not use the Community to sell or market your products to others and do not post a URL unless it directly answers a user's question. If any portion of your Submission, including any posted URL, results in any accrual of compensation or benefit to you, you must note this in your post by stating, "I may receive some form of compensation, financial or otherwise, from my recommendation or link." As well, the following are not allowed:

- A submission created solely to advertise documentation, service, software or some other item for sale.
- Any reference, including a link, to a commercial item that is not directly related to a relevant technical support question or answer.
- You may sign your submissions with information about yourself. However, this should not include a link to a website.

The Community and content may be frequently reviewed by Moderators and Administrators for violation of Arlo Community Terms of Service. Violation may result in the temporary suspension of privileges, loss of posting privileges, and/or revocation of Community account. Messages deemed in violation may be removed without notice or explanation.

Arlo reserves the right to change the aforementioned "Terms of Service" at any time without warning or notice. It is the responsibility of the forum member to check this page on a regular basis for any revisions in "Terms of Service" before using the Community.

Last Updated:06/12/2024 | Article ID: 000061898

My Arlo camera becomes too hot while in a very warm environment; what do I do?

**My Arlo camera becomes too hot
while in a very warm environment;
what do I do?**

This article applies to:

Your Arlo camera might overheat if the following conditions happen at the same time:

- Your camera is in a very warm environment: **113° F (45° C) or hotter**
- Your camera is plugged in to the AC power adapter

When your camera reaches a critical temperature under these conditions, it shuts down for safety reasons.

- The camera powers on again after it reaches a safe temperature

To avoid overheating your Arlo camera:

- Move the camera to a cooler location
- Remove the camera from direct sunlight
- Choose a location **no hotter than 104° F (40° C)**

Last Updated:06/03/2024 | Article ID: 000049581

Safe Handling and Usage Guidelines for Arlo Rechargeable Batteries

Safe Handling and Usage

Guidelines for Arlo Rechargeable Batteries

This article applies to:

Warnings for Batteries, Battery Packs, and Chargers

Used with Arlo Products

A. Counterfeit/Non-Arlo approved Batteries and Battery Packs

To ensure optimal safety and performance, only use genuine Arlo batteries, battery packs, and chargers. Unapproved batteries, battery packs or chargers present a serious risk of battery fire, explosion, battery leakage, and other product hazards. Many 3rd party suppliers claim Arlo compatibility yet have not actually tested or confirmed compatibility and safety.

- Do not use counterfeit batteries or batteries not approved by Arlo; such batteries can
 - develop internal shorts and may pose a fire or burn hazard.
 - have insufficient built-in fault and heat protection, which Arlo batteries contain for added safety.
 - have inferior runtime and overall performance.
 - damage your Arlo products and constitute a safety hazard (e.g. cause fires, burns, and injury).
 - void your Arlo warranty.
- Do not purchase batteries from online auctions and other marketplace websites, as these are known sources of counterfeit and inferior 3rd party batteries.

B. For all Batteries and Battery Packs Used with Arlo Products

- Do not use the battery or battery pack for anything other than its intended purpose.
- Do not use a battery or battery pack if its case appears damaged, swollen, or compromised. Examples of conditions that may indicate a compromised battery or battery pack include leaking, odors, dents, corrosion, rust, cracks, swelling, melting, and scratches.
- Do not disassemble, crush, puncture, or damage external contacts.
- Do not expose the battery or battery pack to fire or temperatures greater than 60°C (140°F).
- Do not place the battery or battery pack next to areas that may become hot (like a space heater, cooking surface, cooking appliance, iron, radiator, or fireplace) or next to flammable materials (like gasoline or certain clothing items).
- Do not get the battery or battery pack wet. Even though it might dry and appear to operate normally, the circuitry can slowly corrode and defeat the safety circuitry.

- Do not insert the battery or battery pack backwards into the product.
- Make sure that the Arlo battery compartment is empty and free of any moisture or loose debris before inserting the battery.
- Handle the battery or battery pack with care. Dropping it, especially on a hard surface, might cause damage. If you suspect damage to the battery or battery pack or the Arlo product, replace it.
- Keep the battery or battery pack away from children.
- Follow the directions in the Arlo Quick Start Guide and in the Arlo Product User Manual.
- Follow local waste and recycling laws & guidelines to dispose of used batteries or battery packs.

C. Additional Safety Instructions for Arlo Wire-Free Cameras Using Disposable/Non-Rechargeable Batteries

Certain Arlo products, such as early versions of the Arlo Wire Free HD Security Camera, use non-rechargeable batteries or ONLY a Tenergy rechargeable battery, as described below.

- Certain Arlo products, such as early versions of the Arlo Wire Free HD Security Camera, use non-rechargeable batteries or ONLY a Tenergy rechargeable battery, as described below.
 - Other than the Tenergy batteries described above, the use of any rechargeable batteries with Arlo Wire-Free cameras is expressly prohibited by Arlo, as such batteries may pose a fire or burn hazard or damage your camera.
- Always replace all batteries at the same time with batteries of the same type purchased at the same time from the same manufacturer and load batteries in the correct position.
- Only use the non-rechargeable batteries supplied with your Arlo camera, or non-rechargeable batteries from Tenergy, Panasonic®, Energizer®, or Duracell®.

D. General Disclaimer

To the extent permissible by law, Arlo Technologies Inc. disclaims all liability related to the use of any battery other than Arlo approved batteries in your Arlo Product. You assume all risks associated with the usage of any battery other than Arlo-approved batteries, including without limitation, fire, damage to property, bodily injury, and/or death. Arlo performance claims are

based on the use of batteries that initially ship with Arlo cameras or Arlo batteries purchased separately.

Last Updated:05/24/2024 | Article ID: 1143936

Safety Rules for Arlo Non-Rechargeable Batteries

Safety Rules for Arlo Non-Rechargeable Batteries

This article applies to:

This article is for Arlo devices that use non-rechargeable batteries only. Non-rechargeable batteries are used in the Arlo Safe Button, Arlo All-in-One Sensor, Arlo Wire-Free Outdoor Siren, and the original Arlo Wire-Free Camera (VMC3030).

- For all other Arlo cameras and devices, visit: [Safe Handling and Usage Guidelines for Arlo Rechargeable Batteries](#)

For the best possible experience, Arlo strongly recommends using one of the following types of batteries:

Arlo Safe Button

- The non-rechargeable batteries supplied with your Arlo Safe Button
- One ½ AA 3.6V Lithium battery (ER14250)
- Non-rechargeable batteries from other high quality, established, well-known manufacturers such as Panasonic®, Energizer®, or Duracell®

Arlo All-In-One Sensor

- The non-rechargeable batteries supplied with your Arlo All-in-One Sensor
- Coin cell CR2477 Lithium battery
- Non-rechargeable batteries from other high quality, established, well-known manufacturers such as Panasonic®, Energizer®, or Duracell®

Arlo Wire-Free Outdoor Siren

- The non-rechargeable batteries supplied with your Arlo Wire-Free Outdoor Siren
- Two CR123A Lithium batteries
- Non-rechargeable batteries from other high quality, established, well-known manufacturers such as Panasonic®, Energizer®, or Duracell®

Arlo Wire-Free Camera VMC3030

- The non-rechargeable batteries supplied with your Arlo Wire-Free cameras
- Tenenergy Li-Ion RCR123A 3.7V 650mAh rechargeable batteries specifically marked “Works with Arlo”
- Non-rechargeable batteries from other high quality, established, well-known manufacturers such as Panasonic®, Energizer®, or Duracell®

Arlo strongly recommends that you read the [Arlo Safety and Compliance Information](#) document prior to using your Arlo devices.

Poor quality or mishandled batteries can damage your devices, cause a fire or result in personal injury. Arlo is not responsible for any failure to follow these battery usage guidelines or the Arlo Safety and Compliance Information document.

To use your non-rechargeable batteries safely:

- **ALWAYS** use high-quality batteries from reputable sources and brands.
Counterfeit or inferior-quality batteries can damage your devices, cause a fire, or result in personal injury.
- **ALWAYS** keep all batteries away from children.
- **ALWAYS** store spare batteries in a cool, dry, ventilated area.
- **ALWAYS** replace all the batteries in a given device at the same time, and with batteries of the same type purchased together from the same source.
- **ALWAYS** make sure that the battery compartment is clean and free of any debris before inserting new batteries.
- **ALWAYS** insert your batteries into their slots gently.
- **ALWAYS** make sure that each battery's polarity (its positive and negative ends) matches the polarity of its individual slot. You'll find a guide inside the battery compartment.
- **ALWAYS** insert the first pair of batteries near the back of the camera, then insert the second pair of batteries near the compartment hinge. (VMC3030)

- **ALWAYS** follow local waste and recycling laws when throwing used batteries away.
- **NEVER** try to recharge the single-use batteries that came with your Arlo device as they are non-rechargeable.
- **NEVER** attempt to recharge a single-use (non-rechargeable) battery.
- **NEVER** place loose batteries in a pocket, purse, or other receptacle, especially one containing metal objects.
- **NEVER** store your batteries with hazardous or combustible materials.
- **NEVER** let your batteries or battery compartment get wet—before, during, or after installation.

VMC3030: While your camera itself is weatherproof when the battery compartment door is closed, its interior battery compartment and batteries are not waterproof!

- **NEVER** disassemble, cut, crush, puncture, short-circuit, dispose of in fire or water, or expose your batteries to temperatures above 60°C (140°F).

Last Updated:06/10/2024 | Article ID: 980150

Where can I find User Manuals and Quick Start Guides for my Arlo devices?

Arlo User Manuals, Quick Start Guides, and Data Sheets

This article applies to:

User Manuals, Quick Start Guides, and Data Sheets for Arlo cameras, doorbells, chimes, security systems, devices, and accessories can be accessed in the [Document Library](#) on the Arlo Support website.

Last Updated:05/29/2024 | Article ID: 000063355

Arlo Support Options

This article applies to:

[Arlo Secure Plans](#) [Arlo Secure App](#)

If you have questions or need help with your Arlo devices, there are a variety of support options. The best way to get support for your Arlo device is to use the **Support Center** in the Arlo Secure App.

[← Back](#)

Support



We are here to help.

Support by Phone

Talk to an Arlo Expert. We'll give you a call to help sort everything out.

 [Call a Live Agent](#)

Support by Chat

Have a question? Start a quick chat with us, and we'll help you out.

 [Start a Chat](#)

Self-Help Made Simple

See our support article to help troubleshoot and solve the issue you're experiencing.

 [Visit the Support Article](#)

You can also access the **Support Center** on my.arlo.com.

Support Center

 Search Support Center

Wi-Fi Issue

Camera Offline

Battery Issues

Grant Access

Onboarding Issues

Activity Zone

Feed

Subscription

Get help for your Arlo devices, subscriptions, and so much more



PHONE SUPPORT

Available 7-days a week
6AM-6PM PT

Request a Call From a
Live Agent



CHAT SUPPORT

Available 7-days a week

Start Chat



ARLO COMMUNITY

Learn from Arlo experts
and users like you

Ask Community



MANUALS & DOCUMENTS

Your product's manuals,
quick start guides and
data sheets

Explore

Browse By Your Products



Ultra Camera
Ultra



Arlo Baby
Baby Camera



Arlo Go 2
Go 2 LTE/Wi-Fi Camera



Arlo Keypad Sensor...
Arlo Keypad Sensor Hub



Chime 2
Arlo Chime 2

Top Support Articles



How do I subscribe to Arlo Secure?



Support by Phone

Customers with an Arlo subscription, on a trial, or with a new product within 90 days of purchase can use Support by Phone. Customers installing an Arlo device for the first time are also able to work with our Arlo Experts via phone. This includes requesting a call back from the Arlo Support team instead of waiting on hold for the next available agent.

Support by Chat

All Arlo customers and those interested in Arlo products can use chat to ask questions or to get assistance. You can start a chat anywhere on Arlo.com by clicking the button on the bottom

right-hand corner of your screen. Chat support is also available in the Arlo Secure App and on my.arlo.com.

Self-Service

All Arlo customers, regardless of subscription or warranty, can explore our self-service resources at any time for help:

- [Arlo Knowledge Base](#)
 - Includes articles with frequently asked questions, troubleshooting, and device configuration assistance
- [Arlo Community](#)
 - Learn, explore, and connect with other Arlo customers and experts for advice and solutions
- [Arlo Document Library](#)
 - Includes user manuals, quick start guides, and product data sheets for your Arlo devices

To access the **Support Center**, visit: [How to access the Arlo Support Center](#)

Note: The Support Center is available in the US, Canada, Australia, New Zealand, Hong Kong, Japan, Singapore, and South Africa. Alternatively, you can use a web browser to contact [Arlo Support](#).

Last Updated: 10/07/2024 | Article ID: 000062610

What to do before selling or transferring Arlo devices to a new owner

What to do before selling or transferring Arlo devices to a new owner

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#)
[MS1001](#) [LBB1001](#) [KB1001](#) [SLB1001](#) [NT1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#)
[VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#)
[VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#)
[VMC3040](#) [VMC3040S](#) [ABC1000](#)

If you would like to sell or transfer Arlo devices to a new owner, you must do the following:

- **Remove the devices from your Arlo account**
- **Perform a factory reset on each device**

This will ensure a successful transition to the new owner. If these steps are not performed, the new owner will experience difficulty in setting up the devices on a new Arlo system.

Deleting the Arlo Secure app or canceling your Arlo subscription plan does not release ownership of the device.

Note: If you are a new owner of Arlo devices that were transferred to you, and you are having issues getting the Arlo equipment installed, please contact the previous owner to perform the following steps.

If the previous owner has passed away, contact [Arlo Support](#) for assistance.

If you are the previous owner and you are no longer using Arlo, you may need to reinstall the Arlo Secure app to perform the following steps.

Remove the Arlo device from your Arlo account

Note: Download any videos you wish to save before you remove Arlo devices from your account.

To remove a device from your Arlo account:

1. Launch the Arlo Secure app or log in to your Arlo account at [arlo.com](#).
2. Tap or click **Settings** > **My Devices** and select the device that you want to remove.
3. Scroll to the bottom of the page and tap or click **Remove Device**.
4. Tap or click **Yes** to confirm that you want to remove the device.

For more information, visit: [How do I remove a device from my Arlo account?](#)

Factory reset the Arlo device

Note: The factory reset process varies by model. Arlo Pro and Arlo Pro 2 cameras do not require a factory reset.

To factory reset an Arlo device, visit:

- [How to factory reset Arlo devices](#)

Last Updated:05/08/2024 | Article ID: 000062757

How do I find the regulatory e-label for my Arlo product?

How do I find the regulatory e-label for my Arlo product?

This article applies to:

[AVD4001](#) [AVD3001](#) [AC2001](#) [AAD1001](#) [MS1001](#) [VMC4060P](#) [VMC2020](#) [VMC2040](#) [VMC2030](#)
[VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

Some Arlo products have a regulatory e-label that you can access in the Arlo Secure App or on the Arlo web portal.

- If the Regulatory sub-menu is not displayed for your Arlo product, then the product does not have a regulatory e-label. In this case, you can find all regulatory information on the physical label located either at the base, inside the battery compartment, or near the power input port of the Arlo product.

To find the regulatory e-label for your Arlo product:

For the Arlo Secure App experience with **Feed**:

1. Launch the Arlo Secure App or log in to [my.arlo.com](#).

2. Tap or click **Devices**.
3. Select the Arlo device.
4. Tap or click .
5. Tap or click the device name to get to Device Info.
6. Tap or click **Regulatory**.

For the Arlo Secure App experience with **Library**:

1. Launch the Arlo Secure App or log in to my.arlo.com.
2. Tap or click **Devices**.
3. Tap the **Settings** (gear) icon next to your Arlo device or tap the **menu** (. . .) icon next to your Arlo device, then tap **Device Settings**.
4. Tap or click **Device Info**.
5. Tap or click **Regulatory**.

For additional compliance information on Arlo products, visit:

<https://www.arlo.com/en-us/regulatoryCSR.html>

Last Updated:05/10/2024 | Article ID: 000062415

Why am I unable to upgrade my Arlo Secure App to the new Arlo experience?

Why am I unable to upgrade my Arlo Secure App to the new Arlo experience?

This article applies to:

[Arlo Secure App](#) [FLW2001](#) [AVD4001](#) [AVD3001](#) [VMC4060P](#) [VMC3060](#) [VMC2060](#) [VMC3050](#)
[VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#)
[ABC1000](#)

There are a few reasons why you might be unable to upgrade your Arlo Secure App to the new Arlo experience:

The new Arlo experience will not be released to all regions at the same time.

- Release dates vary by region.
- The Arlo Secure App will notify you when the new Arlo experience is available.

The new Arlo experience will not be released to all users in a particular region at the same time.

- The new Arlo experience will be released to batches of users over time.
- The Arlo Secure App will notify you when the new experience is available.

Arlo Go Cameras are not currently compatible with the new Arlo experience at this time, but will be at a future date not yet determined.

- Arlo Go Camera
Model number: VML4030

For more information, visit:

- [How do I prepare my Arlo System for the new Arlo experience?](#)
- [How do I upgrade my Arlo Secure App to the new Arlo experience?](#)

Last Updated: 10/08/2024 | Article ID: 000062795

What is the new Arlo experience?

What is the new Arlo experience?

This article applies to:

[Arlo Secure App](#)

The new Arlo experience is a complete redesign of the Arlo Secure App with amazing new features and new looks for your favorites. There are new tools to give you better control, customization, and access to immediate help during emergencies.

Features:

- **Event Feed:** View in-depth details like, who accessed a door or who Armed or Disarmed your system.
- **Notifications:** See what triggered an alert from your phone so you can activate the siren, call a friend, or request emergency response, from anywhere.
- **Emergency Response:** 24/7 Live Security Experts monitor your home, so you don't have to.
- **Dashboard:** Personalize your dashboard with your favorite security widgets for quick access to Arlo devices and information.
- **Modes:** Quickly and easily control arm, disarm, and standby modes with one-tap.
- **Locations:** Manage your security systems and customize settings, emergency response, and sirens for each address.
- **Automations:** Create schedules for hands-free arming and disarming of your security system.

What has changed from the previous Arlo experience?

The menu at the bottom of your screen includes:

- Dashboard
- Feed
- Emergency
- Devices
- Routines

The Library is now known as Feed. The Feed still has your cloud recordings and doorbell messages. Feed will now also include alerts for your All-in-One Sensors, and changes to your Routines, Modes, and Automations.

- For more information, visit: [How do I use the Feed in my Arlo account?](#)

A Location switcher is at the top of your screen to select locations where you may have set up Arlo devices, such as your permanent residence or vacation cabin.

- For more information, visit: [What are Locations in the Arlo Secure App and how do I use them?](#)

Devices shared with you by friends or family will appear in their own location, separate from your own. Use the location switcher to view cameras shared with you.

Emergency Response has moved to the bottom menu and is labeled Emergency.

- For more information, visit: [How do I dispatch Emergency Response services from the Arlo Secure App?](#)

Devices can now be accessed from the Devices menu or the all-new customizable Dashboard that includes widgets for quick access to Arlo devices and information.

The Dashboard will begin blank, and needs to be set up on each mobile device from which you access your Arlo account.

- For more information, visit: [What is the Dashboard on my Arlo Secure App and how does it work?](#)

Modes are now found near the top of your screen. The available Modes are labeled as Arm Away, Arm Home, and Standby. Configuration of Modes and Rules is now controlled under the Routines menu.

- For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

Last Updated:02/24/2024 | Article ID: 000062797

43

FAQs and Product Generic Information

Generic Info

What are the minimum requirements for installing and using an Arlo system?

What are the minimum requirements for installing and using an Arlo system?

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AAD1001](#) [SH1001](#) [MS1001](#) [VMB5000](#)
[VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VMC3030](#)
[VMC3040](#) [VMC3040S](#) [ABC1000](#)

- To install and use an Arlo system, you must have a high-speed internet connection and meet the requirements listed below.

Connectivity Requirements

All Arlo cameras require a high-speed internet connection, but each Arlo camera uses a different amount of bandwidth. Bandwidth use is measured on a per-camera basis. If you have multiple Arlo cameras on the same network, you can estimate the total bandwidth use of your entire Arlo system by adding the average bandwidth use of each camera.

Your Arlo system requires the following:

- A high-speed internet connection that can sustain the following average bandwidth use per Arlo device:
 - **Arlo Ultra Series:** 3 Mbps upload per camera
 - **Arlo Pro Series** (Pro 3 and newer): 2 Mbps upload per camera
 - **Arlo Wired Floodlight Camera:** 2 Mbps upload per camera
 - **Arlo Video Doorbells:** 2 Mbps upload per Video Doorbell
 - **Arlo Essential 2nd Generation Cameras:** 2 Mbps upload per camera
 - **All other Arlo cameras:** 1 Mbps upload per camera

- For Arlo SmartHub or Arlo Base Station connections, a router with an available Ethernet port is required.
- For direct to Wi-Fi connections, a Wi-Fi router with a 2.4GHz band is required.
- For Arlo Essential 2nd Generation devices, a Bluetooth capable mobile device is required for the installation process.
- The Arlo Wired Floodlight Camera requires a 100-240V AC 50-60 Hz hardwired power source.

Arlo works with the minimum requirements, but the functionality and video quality might be negatively affected.

- With a lower upstream bandwidth, there is a greater possibility that video quality might be pixelated and unclear.
- You might also experience a delay in starting a live stream.

Arlo Secure App Requirements

The Arlo Secure App requires:

- **iOS version 15** or higher for Apple devices
- **Android version 8** or higher for Android devices

Note: If you use Arlo on an earlier OS version than the minimum versions listed, Arlo systems and devices might not function as expected.

To download the Arlo Secure App to your mobile device, go to the App Store® on your iOS device, or Google Play on your Android device and search for **Arlo Secure**.

You can also download the Arlo Secure App by tapping or clicking the appropriate button below:

- App Store® is a registered trademark of Apple Inc.

- Google Play and the Google Play logo are trademarks of Google LLC.

Arlo Web Portal Requirements

The Arlo web portal requires a computer running Windows or macOS and the most current version of one of the following web browsers:

- Chrome on Windows or macOS
- Firefox on Windows or macOS
- Microsoft Edge on Windows
- Safari on macOS

Last Updated: 10/03/2024 | Article ID: 000062043

Which Arlo Cameras and Doorbells work directly with my Wi-Fi router?

Which Arlo Cameras and Doorbells work directly with my Wi-Fi router?

This article applies to:

The following Arlo Cameras and Arlo Doorbells connect directly to a Wi-Fi router and do not require an Arlo SmartHub or Arlo Base Station:

- Arlo Wired Floodlight Camera
- Arlo Pro 5S
- Arlo Pro 4
- Arlo Pro 3 Floodlight Camera
- Arlo Essential Outdoor Camera 2K (2nd Generation)
- Arlo Essential Outdoor Camera HD (2nd Generation)
- Arlo Essential XL Outdoor Camera 2K (2nd Generation)
- Arlo Essential XL Outdoor Camera HD (2nd Generation)

- Arlo Essential Indoor Camera 2K (2nd Generation)
- Arlo Essential Indoor Camera HD (2nd Generation)
- Arlo Video Doorbell 2K (2nd Generation)
- Arlo Video Doorbell HD (2nd Generation)
- Arlo Essential Video Doorbell Wired
- Arlo Essential Video Doorbell Wire-Free
- Arlo Essential Indoor Camera
- Arlo Essential Camera
- Arlo Essential Spotlight Camera
- Arlo Essential XL Spotlight Camera
- Arlo Baby
- Arlo Q
- Arlo Q Plus
- Arlo Go 2

Note: Arlo Go 2 connects directly to Wi-Fi or LTE

The following Arlo Cameras and Arlo Doorbells can also optionally connect to an Arlo SmartHub or Arlo Base Station:

- Arlo Pro 5S
- Arlo Pro 4
- Arlo Pro 3 Floodlight Camera
- Arlo Essential Video Doorbell Wired
- Arlo Essential Video Doorbell Wire-Free
- Arlo Essential Indoor Camera
- Arlo Essential Camera
- Arlo Essential Spotlight Camera
- Arlo Essential XL Spotlight Camera

For more information, visit:

- [How to set up Arlo Cameras](#)
- [Arlo SmartHub and Base Station Compatibility](#)
- [What are the benefits of using an Arlo SmartHub or Base Station?](#)

- [How do I connect my Arlo Camera or Video Doorbell to an Arlo SmartHub or Base Station?](#)
- [How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to an Arlo SmartHub or Base Station?](#)

Last Updated: 10/02/2024 | Article ID: 000062770

What are the benefits of using an Arlo SmartHub or Base Station?

What are the benefits of using an Arlo SmartHub or Base Station?

This article applies to:

Allows for a separate secure network for your cameras

Having your cameras connected to a Arlo SmartHub or Base Station means they are using a separate frequency to communicate with each other. This could be helpful if you are using a shared Wi-Fi network.

Local Storage options

All Arlo video recordings can be stored to the cloud, but you can setup local storage on your Arlo SmartHub or Base Station and use it as a second location to store recordings. You can also use it as primary storage if you're are not subscribed to Arlo Secure. For more information about Local Storage, visit: [How do I view Arlo videos saved on local storage?](#)

HomeKit compatibility

With Apple HomeKit and a compatible Arlo device, you can use voice commands to access and control multiple Arlo devices from one place. To take full advantage of these features, you need a supported and connected Arlo system. For more information, visit: [How do I connect my Arlo device to Apple Home?](#)

Local 2K/4K livestreaming

Stream higher quality videos real time when connected to the same network as your SmartHub or Base Station. For more information, visit: [How do I stream in 2K with my Arlo Pro 3, Pro 4, Pro 5S, or Pro 3 Floodlight Camera?](#)

Continuous Video Recording for select models.

Continuous video recording (CVR) is an optional feature available on certain cameras. With CVR activated on one of your cameras, you can record all the action 24/7. CVR captures everything in the background, and you can rewind to catch anything you missed. For more information, visit: [What is Continuous Video Recording \(CVR\) and how do I use it?](#)

To know if your camera is compatible with a SmartHub or Base Station, visit: [Arlo SmartHub and Base Station Compatibility](#)

Last Updated:05/21/2024 | Article ID: 000062754

How far can I place my Arlo cameras from my SmartHub or Base Station?

How far can I place my Arlo cameras from my SmartHub or Base Station?

This article applies to:

[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#)

Keep maximum and minimum distances in mind when placing your Arlo cameras:

Maximum. You can place your Arlo camera a maximum of 300 feet (90 meters) from the Arlo SmartHub or Base Station. The maximum line-of-sight range of 300 feet is reduced by each wall,

ceiling, or other major obstruction between the camera and Arlo SmartHub or Base Station. The following materials reduce signal strength the most:

- Large quantities of water, such as the water in a fish tank or water heater
- Metal
- Glass, especially mirrors
- Ceramic
- Stone
- Concrete
- Brick
- Unusually thick walls and ceilings

Minimum. Place your Arlo cameras at least 10 feet (3 meters) from the Arlo SmartHub or Base Station, and allow at least 6.5 feet (2 meters) between cameras. Follow these guidelines to prevent Wi-Fi signals between the devices from interfering with each other.

Last Updated: 10/09/2024 | Article ID: 35

What is Arlo SecureLink and how does it work with my Arlo system?

What is Arlo SecureLink and how does it work with my Arlo system?

This article applies to:

[SH1001](#) [MS1001](#) [VMC4060P](#)

Arlo SecureLink is a technology that uses sub-GHz wireless communication to communicate between Arlo devices. Your Arlo Keypad Sensor Hub uses Arlo SecureLink to communicate with the Arlo All-in-One Sensor and the Arlo Pro 5S Camera.

- To utilize Arlo SecureLink with Arlo Pro 5S, visit: [How do I pair the Arlo Pro 5S Camera to the Arlo Security Keypad Hub using Arlo SecureLink?](#)

Arlo SecureLink Benefits:

Longer Range and Less Interference

- Arlo SecureLink uses sub-GHz wireless communication which allows the Arlo system to have longer range and less interference from 2.4GHz and 5GHz Wi-Fi networks.
- This is helpful in areas with Wi-Fi congestion.

Power Efficiency

- Arlo devices use less power with Arlo SecureLink because it operates on a less crowded network.

The sub-GHz wireless communication also requires less power to travel the same distance.

- Arlo Pro 5S Low Power Mode uses Arlo SecureLink to communicate, saving additional battery life when the camera battery is low.

For more information, visit: [What is Low Power Mode and how does it work with my Arlo Pro 5S Camera?](#)

Operates during Wi-Fi and Power Outages

- When using Arlo SecureLink, Arlo Pro 5S will continue to operate when Wi-Fi is down.
- Arlo Pro 5S will also continue to operate during a power outage if it is paired to an Arlo Keypad Sensor Hub that is equipped with a Cellular and Battery Backup.

For more information, visit: [What is the Arlo Cellular and Battery Backup and how does it work?](#)

Last Updated:05/02/2024 | Article ID: 000062832

How does my Arlo Security Light system work independently and with my Arlo camera system?

How does my Arlo Security Light system work independently and with my Arlo camera system?

This article applies to:

[AL1101](#) [ABB1000](#)

The Arlo Security Light connects to the Arlo Bridge using **Bluetooth** technology.

The Arlo Bridge uses **2.4 GHz Wi-Fi** to connect to your router.

- **Note:** The Arlo Security Light needs to be within range of the Arlo Bridge and the Arlo Bridge needs to be within range of the router. However, the Arlo Security Light itself does not need to be within range of the router because it does not communicate with the router directly.

When your Arlo Security Light detects motion, it activates depending on the brightness of its surroundings.

- You can trigger your other Arlo devices using your Arlo Security Light by creating modes and rules for your Arlo system.
- For example, you can create a rule that tells the Arlo camera at your front door to start recording when your Arlo Security Light at the beginning of your driveway detects motion.
- For more information, visit: [About Arlo Modes and Rules](#)

Last Updated:06/14/2024 | Article ID: 000062032

What are the differences between Arlo Video Doorbells?

What are the differences between Arlo Video Doorbells?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#)

There are two Arlo Essential Video Doorbells and two 2nd Generation Arlo Video Doorbells. The four Arlo Video Doorbells vary in video resolution, power, and connection.

Arlo Essential Video Doorbells:

- Arlo Essential Video Doorbell Wired (AVD1001)
- Arlo Essential Video Doorbell Wire-Free (AVD2001)

2nd Generation Video Doorbells:

- Arlo Video Doorbell HD (AVD3001)
- Arlo Video Doorbell 2K (AVD4001)

Arlo Video Doorbell HD and 2K (2nd Generation)

- **Maximum Video Resolution:** 1080p and 2K
- **Power:** Integrated rechargeable battery with optional hardwiring to existing doorbell wiring
- **Connection:** Direct to Wi-Fi

Arlo Essential Video Doorbell Wire-Free



- **Maximum Video Resolution:** 1536 x 1536
- **Power:** Integrated rechargeable battery with optional hardwiring to existing doorbell wiring
- **Connection:** Direct to Wi-Fi or connect to an Arlo SmartHub or Arlo Base Station

Arlo Essential Video Doorbell Wired



- **Maximum Video Resolution:** 1536 x 1536
- **Power:** Must be hardwired to existing doorbell wiring
- **Connection:** Direct to Wi-Fi or connect to an Arlo SmartHub or Arlo Base Station

Last Updated:01/22/2024 | Article ID: 000063219

What is Arlo Total Security?

What is Arlo Total Security?

This article applies to:

[Arlo Total Security](#) [SH1001](#) [MS1001](#) [LBB1001](#) [VMC4060P](#)

Arlo Total Security bundles the Arlo Home Security System with 36-month Arlo service plans.

There are different options with varying service plans and Arlo hardware. All options include the Arlo Home Security System and Professional Monitoring.

- To purchase Arlo Total Security and get more information on current offers and pricing, visit: [Arlo Total Security on Arlo.com](#)

How do I pay for Arlo Total Security?

- Monthly payment plans for Arlo Total Security hardware and software will be available through Affirm.

What is the duration of the payments?

- Payments for Arlo Total Security are made over a 36-month period.

What is the duration of the warranty?

- Arlo Total Security hardware includes a 36-month warranty.

Can I purchase additional hardware?

- Yes, you may add additional Arlo cameras, doorbells, and sensors to your Arlo system at the location where the Arlo Home Security System is installed.

Which version of the Arlo Secure App is required?

- You must upgrade to the new Arlo Secure App experience (version 4.10 and up).
- For more information, visit:
 - [How do I upgrade my Arlo Secure App to the new Arlo experience?](#)
 - [What are the minimum requirements for installing and using an Arlo system?](#)

If I purchase Arlo Total Security, will I need to purchase another Arlo Secure plan if I add additional cameras?

- Some Arlo Total Security plans provide cloud recording for all Arlo cameras at a single location.
- For details on service plan options, visit: [Arlo Total Security on Arlo.com](#)

Can I cancel Arlo Total Security?

- Cancellation of Arlo Total Security is allowed within the first 30-days of purchase.
- For more information, visit: [Arlo Total Security on Arlo.com](#)

Last Updated:09/11/2024 | Article ID: 000063232

FAQ

Arlo Go 2 LTE / Wi-Fi Security Camera FAQs

Arlo Go 2 LTE / Wi-Fi Security

Camera FAQs

This article applies to:

[VML2030](#)

Arlo Go 2 Features

- **What's the difference between Arlo Go and Arlo Go 2 Cameras?**

The redesigned Arlo Go 2 is loaded with new features like LTE and Wi-Fi connectivity, 1080p video resolution, color night vision, a spotlight, two-way audio, a siren, and GPS camera location.

- **Where can I use Go 2?**

Monitor nearly any location with a Wi-Fi or LTE connection. The camera is portable so you can take it with you and rely on a backup connection to the cellular network to ensure your cameras remain armed even when Wi-Fi is unavailable.

- **Is it better to connect to a Wi-Fi signal or wireless mobile signal on my Go 2?**

Go 2 is designed to be flexible. For example, you can use your Wi-Fi with cellular mode as a backup, so you're always protected even if the Wi-Fi goes out. Or you can take your Go 2 to a remote location with no Wi-Fi and use LTE mode by itself. To learn more about both options, visit: [What are the benefits of connecting my Go 2 Camera via mobile or Wi-Fi?](#)

- **Do I need a SIM card for Arlo Go 2 mobile coverage?**

Yes. Your Arlo Go 2 camera requires an activated SIM card with a mobile data plan to access the mobile network. For help with your mobile service plan, contact the carrier of the SIM card that was provided. If no SIM card was included, visit your local wireless carrier to activate a service plan and receive a SIM card.

- **What options do I have if I do not have an activated SIM card?**

If you do not have an activated SIM card, you can set up the device Wi-Fi mode. To learn more, visit: [What are the benefits of connecting my Go 2 Camera via mobile or Wi-Fi?](#)

- **Does Arlo Go 2 come with an Arlo subscription?**

Some retailers sell Arlo Go 2 with a voucher for 24-months of Arlo Secure. This voucher will be included in the box.

- **What are the storage options for the Go 2?**

Use your Arlo Secure subscription to store videos in the cloud. Or install a microSD card (not included) to store your data locally.

Arlo Go 2 Mobile Providers

- **Which mobile service providers can I use with Arlo Go 2 in the United States?**

Arlo Go 2 currently works with:

- **AT&T**
- **Cellcom**
- **T-Mobile**
- **U.S. Cellular**
- **Verizon Wireless**

- **Which mobile service providers can I use with Arlo Go 2 in Canada?**

Arlo Go 2 currently works with:

- **Bell Canada**

- **Which mobile service providers can I use with Arlo Go 2 in the EU and UK?**

Providers vary by country:

- **Vodafone:** UK, Ireland, Spain, Italy, Germany, Portugal, Netherlands
- **EE and BT:** UK
- **3 Mobile:** UK, Austria
- **Deutsche Telekom:** Germany
- **Mobilcom Debitel:** Germany
- **O2:** Germany
- **Bouygues:** France
- **Telenor:** Sweden
- **Telia:** Sweden
- **KPN:** Netherlands
- **Swisscom:** Switzerland
- **Elisa:** Finland
- **BITÉ:** Lithuania, Latvia

- **How much cellular data does Arlo Go 2 use?**

Data use varies based on your environment and mobile service provider. Data consumption should range from 700MB to 2GB on a monthly basis, depending on the number of motion triggers and length of recordings.

To monitor Arlo Go 2 cellular data usage, contact your wireless provider. For more information, visit:

- [Data Usage FAQs | Verizon](#)
- [Check Your Usage | T-Mobile](#)
- [Data Usage Management | U.S. Cellular](#)

Arlo Go 2 Installation

- **Is the Arlo Go 2 battery powered?**

Yes. Arlo Go 2 has an extra-large rechargeable lithium polymer battery and does not require wiring. To learn more about installation, visit: [How do I insert the battery in my Arlo Go 2 camera?](#)

- **Where should I place Arlo Go 2?**

For best results, we recommend placing your Arlo Go camera in a location where the Arlo Secure App displays at least three bars of mobile network signal strength. To optimize signal strength, visit: [How can I optimize mobile signal strength for my Arlo Go series camera?](#)

- **How do I use the GPS location feature?**

The Arlo Go 2 Camera has outdoor GPS in case you install it in a remote area and need help finding it later. For more information, visit: [Use GPS to locate an Arlo Go 2 Camera](#)

Arlo Go 2 Accessories and Partners

- **Which Arlo accessories are compatible with Arlo Go 2?**

- Outdoor Mounts
 - VMA1000-10000S (white)
 - VMA1000B-10000S (black)
- Dual-Battery Charging Station
 - VMA5400C-100xxS
- Solar Panel Charger
 - VMA5600-100S

- Extra Rechargeable Battery
VMA5420-10000S
- Magnetic Indoor/Outdoor Charging Cable
VMA5600C-100xxS (white)
VMA5601C-100xxS (black)
- Indoor Charging Adapter
VMA5000C-100xxS (white)
VMA5001C-100xxS (black)
- Black Housing
VMA3800H-100S
- **Which smart home services does Arlo Go 2 support?**
Arlo Go 2 works with [Alexa](#), [IFTTT](#), and [Google Home/Google Assistant](#).

Last Updated:05/31/2024 | Article ID: 000062630

Arlo Pro 3 FAQ

Arlo Pro 3 FAQ

This article applies to:

[VMB4540](#) [VMC4040P](#)

Does Arlo Pro 3 output 2K resolution?

Yes. Arlo Pro 3 outputs 2560x1440 resolution at 16x9 aspect ratio.

What does color night vision mean?

Typical night-time video footage from security cameras is displayed in black and white. Arlo Pro 3 can output images in color, even at night.

What is High Dynamic Range (HDR)?

HDR solves the problem with over- or under-exposed images of scenes with both bright and dark areas in the same picture. Arlo Pro 3 automatically determines when to use HDR.

How wide is the viewing angle on Arlo Pro 3?

The lens is a 160-degree diagonal lens with a matching wide range for motion detection. This provides a panoramic view as if your eyes were there.

Can I use Arlo Pro 3 indoors and outdoors?

Yes. Arlo Pro 3 is outdoors weather resistant. It is wire free and does not require continuous power. If you wish to charge your camera outside, you must use the [Outdoor Magnetic Charging Cable](#).

What are the benefits of the magnetic charger?

The magnetic charger provides an easy, snap-in, truly weather-resistant charging solution for both indoors and out.

Is Arlo Pro 3 compatible with the Arlo XL Rechargeable Battery & Housing?

Yes. Arlo Pro 3 is compatible with the [Arlo XL Rechargeable Battery & Housing](#).

Is Arlo Pro 3 compatible with the Arlo Solar Panel?

Yes. Arlo Pro 3 is compatible with the [VMA5600 Solar Panel](#). For more information, visit: [Arlo Solar Panel Compatibility](#)

What are the benefits of 2K in a security camera?

With 2K you can see more details in every image, even when zoomed in.

What is the Auto Zoom and Tracking feature?

When Arlo Pro 3 detects motion, it automatically zooms in and tracks the motion for you. This tracking shows up as curated clips that are stored in the cloud for your easy access and playback.

When does the integrated spotlight turn on?

The spotlight turns on in low-light settings. You can also manually turn it on or off.

What are the benefits of the SmartHub?

The Arlo SmartHub helps to protect your footage by adding a secure, personal network to your router. The SmartHub also helps to regulate Wi-Fi traffic, improves battery life, and comes with local storage (USB devices are sold separately).

Does Arlo Pro 3 include a Arlo Secure trial?

Yes. Every Arlo Pro 3 kit comes a trial of Arlo Secure.

Do Arlo Pro 3 kits include mounting hardware?

Yes. The camera kits include screw kits to help you mount.

Does Arlo Pro 3 include a siren?

Yes. A siren sound plays directly from the camera. It can be set to trigger manually or automatically when motion or audio is detected.

Am I able to mount my Arlo Pro 3 camera from a ceiling?

Yes. You can use the included magnetic mount to mount your Pro 3 camera on the ceiling. If you use a [Anti-Theft Mount](#), you can purchase a [Ceiling Adapter](#) to mount your camera from the ceiling.

What is the minimum upload bandwidth speed required?

The Arlo Pro 3 camera uses an average of 2Mbps upload bandwidth per camera.

Will 2K work on the Arlo Pro 3 battery?

Yes. An efficient video encoding scheme as well as battery optimization algorithms between the camera and SmartHub allow 2K to work with the Arlo Pro 3 battery.

Does Pro 3 support full 2-way audio?

Yes. You are able to have full conversational audio with Arlo Pro 3.

Is 2K recording free?

Users of Arlo Pro 3 can enjoy 2K content without a subscription. You can use 2K by local live streaming or recording 2K motion content onto a USB device when inserted into an Arlo SmartHub. We recommend you purchase an add on service to store 2K, motion-activated clips to the Arlo Cloud for easy access anywhere your mobile app has a data connection.

Last Updated:04/30/2024 | Article ID: 000062285

Arlo Pro 4 FAQ

Arlo Pro 4 FAQ

This article applies to:

[VMC4041P](#) [VMC4050P](#)

Does Arlo Pro 4 output 2K resolution?

Yes. Arlo Pro 4 outputs 2560 x 1440 resolution at 16 x 9 aspect ratio.

Do I need an Arlo SmartHub or Base Station to use Arlo Pro 4?

No. An Arlo SmartHub or Base Station is optional. You can connect Arlo Pro 4 directly to your Wi-Fi router.

What are the benefits of connecting my Arlo Pro 4 to a SmartHub or Base Station?

The Arlo SmartHub or Base Station helps to protect your footage by adding a secure, personal network to your router. The SmartHub or Base Station also helps to regulate Wi-Fi traffic, can improve battery life, and is compatible with local storage.

For more information, visit: [Arlo SmartHub and Base Station Compatibility](#)

How wide is the viewing angle on Arlo Pro 4?

The lens is a 160-degree diagonal lens with a matching wide range for motion detection.

What does color night vision mean?

Typical night-time video footage from security cameras is displayed in black and white. Arlo Pro 4 can output images in color, even at night.

What is High Dynamic Range (HDR)?

HDR solves the problem with over or under exposed images with both bright and dark areas in the same picture. Arlo Pro 4 automatically determines when to use HDR.

Can I use Arlo Pro 4 indoors and outdoors?

Yes. Arlo Pro 4 can be used indoors and is weather resistant for outdoor use. The magnetic charging cable that was included with your camera is for indoor use only. If you wish to charge your camera outside, you must use the [Outdoor Magnetic Charging Cable](#).

Does Arlo Pro 4 have an integrated spotlight?

Yes. The spotlight turns on in low-light settings. You can also manually turn it on or off.

Does Arlo Pro 4 include an Arlo Secure trial?

Yes. Arlo Pro 4 comes with a trial of Arlo Secure.

Is Arlo Pro 4 compatible with the Arlo XL Rechargeable Battery & Housing?

Yes. Arlo Pro 4 is compatible with the [Arlo XL Rechargeable Battery & Housing](#).

Is Arlo Pro 4 compatible with the Arlo Solar Panel?

Yes. Arlo Pro 4 is compatible with the [VMA5600 Solar Panel](#).

For more information, visit: [Arlo Solar Panel Compatibility](#)

Am I able to mount my Arlo Pro 4 camera from a ceiling?

Yes. You can use the included magnetic mount to mount your Pro 4 camera on the ceiling. If you

use a [Anti-Theft Mount](#), you can purchase a [Ceiling Adapter](#) to mount your camera from the ceiling.

Does Arlo Pro 4 have an integrated siren?

Yes. A siren sound plays directly from the camera. It can be set to trigger manually or automatically when motion or audio is detected.

What is the minimum upload bandwidth speed required?

Arlo Pro 4 uses an average of 2 Mbps upload bandwidth per camera.

Does Pro 4 support full 2-way audio?

Yes. You are able to have full conversational audio with Arlo Pro 4.

Does 2K recording require a subscription?

Arlo Pro 4 cameras come with an Arlo Secure trial that allows 2K streaming and cloud recording. You can also record 2K clips to local storage with the use of an Arlo SmartHub or Base Station. When your trial expires, you will need to renew the subscription to continue 2K cloud recording. For more information on Arlo subscription plans, visit: [What Arlo subscription plans and cloud recording options are available?](#)

For more information on local storage, visit: [How do I set up local storage backups using my Arlo SmartHub or Base Station?](#)

Last Updated:05/23/2024 | Article ID: 000062512

Arlo Ultra 2 FAQ

Arlo Ultra 2 FAQ

This article applies to:

[VMC5040](#)

What is the difference between Arlo Ultra 2 and Arlo Ultra?

Arlo Ultra 2 has all the same features as the original Arlo Ultra and more. These features include increased connectivity range, dual-band Wi-Fi, and a 4K Arlo Secure trial.

For more information, visit: [What is the difference between the Arlo Ultra 2 and Arlo Ultra cameras?](#)

Can I place my Arlo Ultra 2 camera further away from my SmartHub or Base Station than my Arlo Ultra camera?

Yes. Arlo Ultra 2 has better range than Arlo Ultra, so it can be placed farther from your SmartHub or Base Station.

For help positioning your camera, visit: [Arlo Camera Placement Tips](#)

Do I get an Arlo Secure trial when I purchase an Arlo Ultra 2 camera?

Yes. Arlo Ultra 2 cameras come with a trial to Arlo Secure, with 4K streaming and recording included.

For more information, visit: [What is included in the Arlo Secure trial?](#)

Image Quality

Does Arlo Ultra 2 output 4K resolution?

Yes. Arlo Ultra 2 outputs 3840x2160 resolution at 16x9 aspect ratio.

Does Arlo Ultra 2 have HDR?

Yes. Your Arlo Ultra 2 camera automatically determines when to use HDR to optimize high-contrast areas in the camera's field of view.

For more information, visit: [How do I use HDR with my Arlo camera?](#)

How wide is the viewing angle on Arlo Ultra 2?

The lens is a 180-degree diagonal lens with a matching wide range for motion detection. This provides a panoramic view as if your eyes were there.

What does color night vision mean?

Typical night-time video footage from security cameras is displayed in black and white. Arlo Ultra 2 can output images in color, even at night.

Design and Installation

Can I use Arlo Ultra 2 indoors and outdoors?

Yes. Arlo Ultra is outdoors weather-resistant. It is wire-free and does not require continuous power. With an additional, outdoor-rated charge cable, you can use Arlo Ultra outdoors.

Does Arlo Ultra 2 have two microphones?

Yes. The microphones can be used for two-way full-duplex conversations; they also enable noise-cancelling and wind noise reduction.

Does Arlo Ultra 2 include a siren?

Yes. A siren sound plays directly from the camera. It can be set to trigger manually or automatically when motion or audio is detected.

For more information, visit: [How do I turn the siren on my Arlo camera on or off?](#)

Accessories and Compatibility

Does Arlo Ultra 2 have the same mounting options as Arlo Ultra?

Yes. Arlo Ultra 2 can use the same magnetic or screw-in mounts that are compatible with the original Arlo Ultra. You can purchase mounting accessories on [Arlo.com](#).

Can I use Auto Zoom and Tracking with Arlo Ultra 2?

Yes. Auto Zoom and Tracking is compatible with Arlo Ultra 2, Ultra, Pro 3, and Pro 3 Floodlight.

For more information, visit: [What is Auto Zoom and Tracking and how do I use it?](#)

Does the Arlo Ultra 2 require a Base Station or SmartHub to operate?

Yes, the Arlo Ultra 2 requires an Arlo SmartHub or Base Station to operate.

What Arlo SmartHubs or Base Stations are compatible with Arlo Ultra 2?

You can connect Arlo Ultra 2 to a VMB5000, VMB4540, VMB4500, and VMB4000 SmartHub or Base Station.

For more information, visit: [Arlo SmartHub and Base Station Compatibility](#)

What is the minimum upload bandwidth speed required?

Arlo recommends an average upload bandwidth speed of 3Mbps per Ultra 2 camera.

Which smart home and voice assistant systems is Arlo Ultra 2 compatible with?

Arlo Ultra 2 is compatible with Amazon Alexa, Apple Homekit, Google Assistant, and IFTTT.

Will 4K work on the Arlo Ultra 2 when powered by battery?

Yes. An efficient video encoding scheme as well as battery optimization algorithms between the camera and SmartHub allow 4K to work with the Arlo Ultra 2 battery.

Can I use the XL Battery with the Ultra 2?

Yes. The Arlo XL Battery is fully compatible with the Ultra 2.

For more information, visit: [Arlo XL Rechargeable Battery & Housing](#)

What are the available outdoor charging solutions for my Ultra 2?

You can charge the Ultra 2 outdoors using either the 25-ft. Outdoor Magnetic Charging Cable or Solar Panel. For more information, visit:

- [25-ft. Outdoor Magnetic Charging Cable](#)
- [Solar Panel Charger for Ultra, Pro 3, 4 & Go 2 Cameras](#)

Arlo Secure

Is 4K recording free?

Yes. Arlo Ultra 2 cameras come with an Arlo Secure trial that allows 4K streaming and cloud recording. You can also record 4K clips to local storage.

For more information, visit: [How do I record 4K videos to a local storage device?](#)

Can I use continuous video recording (CVR) with Arlo Ultra 2?

Yes. You can purchase a separate CVR subscription for your Arlo Ultra 2 camera.

For more information, visit: [What is continuous video recording \(CVR\) and how do I use it?](#)

What Arlo Secure subscription do I need to record and save 4K videos on the Arlo cloud?

To save videos to the Arlo cloud, you must have an Arlo Secure Plus subscription plan.

For more information, visit: [Arlo Secure Plans](#)

Last Updated:06/26/2024 | Article ID: 000062435

Arlo Pro 3 Floodlight Camera FAQ

Arlo Pro 3 Floodlight Camera FAQ

This article applies to:

[FB1001](#)

Floodlight Settings

How bright is the floodlight?

The floodlight on the Arlo Pro 3 Floodlight Camera can be adjusted up to 3000* lumens (lm) of brightness. The [Outdoor Magnetic Charging Cable](#) is required to adjust the brightness to 3000 lm. Without the cable, you can adjust the brightness up to 2000 lm. For more information, visit: [How do I charge my Arlo Pro 3 Floodlight Camera?](#)

Can I adjust the brightness setting on the floodlight?

Yes. You can adjust the brightness between 5-100%. For more information, visit: [How do I adjust the light settings on my Arlo Pro 3 Floodlight Camera?](#)

Will the floodlight turn on during daytime?

The floodlight is set to remain off during the daytime, when it is not needed. You can adjust this setting in the Arlo Secure App. For more information, visit: [What is the Dusk to Dawn Sensor setting?](#)

Can I set the floodlight to trigger when motion is detected?

Yes. The floodlight is set to trigger when motion is detected within the camera's field of view. You can adjust this setting in the Arlo Secure App. For more information, visit: [How do I trigger the floodlight on my Arlo Pro 3 Floodlight Camera?](#)

Does the floodlight offer different light patterns?

Yes. You can adjust the light to a constant or pulsating pattern.

Will floodlight still operate if the camera goes offline?

Yes. The floodlight on the Arlo Pro 3 Floodlight Camera will still respond to motion detection and activate the floodlight. The camera will not record if the device is offline but the floodlight will still respond to motion detection.

Image Quality

What are the benefits of 2K in a security camera?

2K means you can see more details in every image, even when zoomed in, allowing users to capture more details that matter to them.

What is High Dynamic Range (HDR)?

HDR solves the problem of over exposed or under exposed images in a scene where there are both extremely bright and extremely dark areas. The Arlo Pro 3 Floodlight Camera automatically determines when HDR should be utilized and is optimized for outdoor usage.

How wide is the viewing angle on the Arlo Pro 3 Floodlight Camera?

The lens is a 160° diagonal lens. You can decrease the field of view to 125° or 110°. For more information, visit: [What is the field of view on my Arlo camera and how do I change it?](#)

What is the maximum zoom of the camera?

12x digital zoom.

Audio

Does the Arlo Pro 3 Floodlight Camera have a microphone?

Yes. The Arlo Pro 3 Floodlight Camera comes with a single, high-sensitivity microphone that allows you to speak with a visitor in crystal clear audio.

Does the Arlo Pro 3 Floodlight Camera have an integrated siren?

Yes. The siren can be set to trigger automatically when motion or sound is detected, or manually via the Arlo Secure App. For more information, visit: [How do I turn the siren on my Arlo camera on or off?](#)

Design and Installation

Does the Arlo Pro 3 camera separate from the floodlight?

No. The camera and floodlight are integrated together in the Arlo Pro 3 Floodlight Camera.

Does the Arlo Pro 3 Floodlight Camera include mounting hardware?

Yes. The Arlo Pro 3 Floodlight Camera comes with an integrated swivel mount that allows for flexibility when mounting on a flat surface. For more information, visit: [How do I wall-mount my Arlo Pro 3 Floodlight Camera?](#)

Is the Arlo Pro 3 Floodlight Camera weather resistant?

Yes. The Arlo Pro 3 Floodlight Camera is weather resistant and built to withstand the heat, cold, rain, and sun.

Battery and Charging

Is the Arlo Pro 3 Floodlight Camera wire-free?

Yes. The Arlo Pro 3 Floodlight Camera is a 100% wire-free and battery operated. It does not require a direct connection to AC power.

Is the Arlo Pro 3 Floodlight Camera battery larger than other Arlo cameras?

Yes. The Arlo Pro 3 Floodlight Camera comes with an XL Rechargeable Battery.

Can I use my Arlo Ultra or Pro 3 battery with my Arlo Pro 3 Floodlight Camera?

No. You can't use the battery that came in the box with your Arlo Ultra or Pro 3 camera. The Arlo Pro 3 Floodlight Camera requires an XL Battery.

How do I charge the Arlo Pro 3 Floodlight Camera?

You can charge the Arlo Pro 3 Floodlight Camera indoors or outdoors by utilizing one of the two charging ports on the camera or by separately charging the battery with an [Arlo Dual Charging Station](#). For more information, visit: [How do I charge my Arlo Pro 3 Floodlight Camera?](#)

Accessories and Compatibility

Can I connect the Arlo Pro 3 Floodlight Camera to an Arlo Solar Panel?

Yes. You can use an Arlo Solar Panel and other Arlo accessories with the Arlo Pro 3 Floodlight Camera. To purchase an accessory, visit: [Arlo Pro 3 Floodlight Accessories](#)

Is the Arlo Pro 3 Floodlight Camera compatible with my existing Arlo system?

Yes. You can use your Arlo Pro 3 Floodlight Camera to cross-trigger other devices.

Can I connect the Arlo Pro 3 Floodlight Camera to an Arlo SmartHub or Arlo Base Station?

Yes. You can connect the camera to a VMB5000, VMB4540, VMB4500, or VMB4000 SmartHub or Base Station. For more information, visit: [Arlo SmartHub and Base Station Compatibility](#)

What is the minimum internet speed I need to use the Arlo Pro 3 Floodlight Camera?

The Arlo Pro 3 Floodlight Camera requires an upload speed of at least 2 Mbps per camera. For more information, visit: [What are the minimum requirements for installing and using an Arlo system?](#)

Last Updated:05/06/2024 | Article ID: 000062409

Arlo Essential Video Doorbell Wire-Free FAQ

Arlo Essential Video Doorbell

Wire-Free FAQ

This article applies to:

[AVD2001](#)

This article applies to the wire-free version of the Arlo Essential Video Doorbell (AVD2001).

Installation

1. Is the Arlo Essential Video Doorbell Wire-Free battery powered?

Yes. The doorbell always operates on battery power. You can also hardwire the doorbell to your existing doorbell chime for continuous trickle charging of the battery. When your doorbell is hardwired, it still uses battery power. For more information, visit [How do I hardwire my Arlo Essential Video Doorbell Wire-Free?](#).

2. Can I install the Arlo Essential Video Doorbell Wire-Free if I don't have an existing wired doorbell?

Yes. The doorbell is battery powered, and it does not require a connection to any existing doorbell wiring.

3. What comes with the Arlo Essential Video Doorbell Wire-Free?

When you purchase an Arlo Essential Video Doorbell Wire-Free, you receive the doorbell, a mounting plate, angled mounting plate, a release pin, a wall mount screw kit, and optional wire extensions.

4. Where should I install my Arlo Essential Video Doorbell Wire-Free?

Install your Arlo Essential Video Doorbell Wire-Free about 48 in (120 cm) off the ground. The doorbell should be placed so that it has the fullest view of the area leading up to the front entry. This provides the best opportunity to capture motion detection events and video clips that include a person approaching the door. For more information, visit [How should I position my Arlo Essential Video Doorbell Wire-Free?](#).

5. Can I use my Arlo Essential Video Doorbell Wire-Free without the battery?

No. The battery must always be inserted in the doorbell to operate, even if you

hardwire the doorbell to existing doorbell wiring. When you hardwire the doorbell, you connect it to continuous trickle charging. This means that the battery is used while the doorbell is active, and the battery is gradually charged while the doorbell is inactive.

Hardwiring

1. **Can I hardwire the Arlo Essential Video Doorbell Wire-Free?**

Yes. You can use the Arlo Essential Video Doorbell Wire-Free to replace your existing doorbell, and to continuously trickle charge your camera's battery. For more information, visit [How do I hardwire my Arlo Essential Video Doorbell Wire-Free?](#).

2. **What voltage is required to hardwire the Arlo Essential Video Doorbell Wire-Free?**

The doorbell requires a voltage between 8-24V AC to ring your chime and trickle charge your doorbell. For more information, visit [How do I hardwire my Arlo Essential Video Doorbell Wire-Free?](#).

Image quality

1. **What video resolution does the Arlo Essential Video Doorbell Wire-Free output?**

The Arlo Essential Video Doorbell Wire-Free records and outputs video in 1536x1536 HD resolution.

2. **How wide is the viewing angle on the Arlo Essential Video Doorbell Wire-Free?**

The lens has a 180-degree diagonal field of view. This enables you to see a package on the ground or a person from head to toe.

3. **Does the Arlo Essential Video Doorbell Wire-Free have a zoom-in capability?**

Yes. The Arlo Essential Video Doorbell Wire-Free supports 12x digital zoom-in with the Arlo app.

4. **Does the Arlo Essential Video Doorbell Wire-Free have night vision?**

Yes. The Arlo Essential Video Doorbell Wire-Free uses infrared night vision to see visitors when it's dark.

Features

1. **What are the benefits of the Arlo Essential Video Doorbell Wire-Free?**

The Arlo Essential Video Doorbell Wire-Free is designed for flexible installation and to capture the blind spots that other video doorbells miss. The 1:1 aspect ratio means that you can see a package on the ground and a visitor from head to toe. The doorbell also offers features such as high-definition video quality, a 180-degree viewing angle, and full-duplex two-way audio.

2. **Does the Arlo Essential Video Doorbell Wire-Free have an integrated siren?**

Yes. The built-in siren can be activated manually within the Arlo app, or you can set the siren to automatically ring when motion is detected to deter unwanted visitors.

3. **Does the Arlo Essential Video Doorbell Wire-Free have an integrated microphone?**

Yes. The doorbell comes with a single, high-sensitivity microphone that allows you to speak with a visitor in crystal clear audio.

4. **Does the Arlo Essential Video Doorbell Wire-Free have full-duplex audio?**

Yes. With full-duplex audio, you can talk and listen at the same time, enabling you to have a full 2-way conversation with the person at your door.

5. **Is there a reset button on the Arlo Essential Video Doorbell Wire-Free?**

Yes. There is a pin-hole button on the back of the doorbell. For more information, visit [How do I reset my Arlo Video Doorbell?](#)

6. **Does the Arlo Essential Video Doorbell Wire-Free come with a secure mount?**

Yes. The doorbell securely locks into the provided mounting plate. Once the doorbell is locked into place, it can't be removed without using the release pin or a similar object.

7. **What is the difference between the wire-free and wired version of the Arlo Essential Video Doorbell?**

There are two versions of the Arlo Essential Video Doorbell, a wired and a wire-free configuration:

- **Arlo Essential Video Doorbell Wire-Free (AVD2001).** Use solely with battery power or hardwire to trickle charge your doorbell. Hardwiring your doorbell also allows you to ring an existing doorbell chime.

- **Maximum streaming capability:** 1536x1536p Full HD
 - **Installation:** Wire-free or wired (to an existing 8V AC – 24V AC chime) with a removable and rechargeable battery
 - **Aspect ratio and field of view:** 1:1 and 180-degrees diagonal
 - **Direct-to-WiFi Connection:** Yes
 - **SmartHub or Base Station compatibility:** Yes; VMB4000, VMB4500, VMB4540, VMB5000
- **Arlo Essential Video Doorbell Wired (AVD1001).** Connect to your existing doorbell wiring. Arlo Essential Video Doorbell Wired requires a voltage between 16-24V AC to work.
 - **Maximum streaming capability:** 1536x1536p Full HD
 - **Installation:** Wired configuration only
 - **Aspect ratio and field of view:** 1:1 and 180-degrees diagonal
 - **Direct-to-WiFi Connection:** Yes
 - **SmartHub or Base Station compatibility:** Yes; VMB4000, VMB4500, VMB4540, VMB5000

Accessories and compatibility

1. Does the Arlo Essential Video Doorbell Wire-Free require a SmartHub or Base Station?

No, an Arlo SmartHub or Base Station is optional to use for the Arlo Wire-Free Essential Video Doorbell. You can use an existing WiFi router to connect the doorbell directly to a 2.4GHz WiFi network. If you want to connect your doorbell to a SmartHub or Base Station, you can connect it to a VMB5000, VMB4540, VMB4500, or VMB4000 SmartHub or Base Station.

2. Do I need to purchase other Arlo devices to use the Arlo Essential Video Doorbell Wire-Free?

No. The Arlo Essential Video Doorbell Wire-Free can operate as a standalone product.

3. Do I need the Arlo app to use the Arlo Essential Video Doorbell Wire-Free?

Yes. You must use the Arlo app to setup your doorbell, adjust settings, arm or disarm, and access cloud recordings.

4. **Does the Arlo Essential Video Doorbell Wire-Free offer different mounting options?**

Yes. The doorbell includes a flat mounting plate and an angled mounting plate that you can use to adjust the doorbell camera's viewing angle.

5. **Can I leave a voicemail message on the Arlo Essential Video Doorbell Wire-Free?**

Yes. If you don't answer the video call within 20 seconds after a doorbell press, the visitor is prompted to leave a voicemail. This also happens when you decline a doorbell call. You must have an Arlo Smart plan to access voicemail recordings from the Arlo library.

6. **Can I use the Arlo Essential Video Doorbell Wire-Free to cross-trigger other Arlo devices?**

Yes. The Arlo Video Doorbell has its own integrated camera, but you can set up cross triggering the same way as you would with Arlo wire-free cameras, so that other cameras will record when the doorbell detects motion.

Last Updated:05/09/2024 | Article ID: 000062526

Arlo Essential Video Doorbell Wired FAQ

Arlo Essential Video Doorbell

Wired FAQ

This article applies to:

[AVD1001](#)

What are the benefits of an Arlo Essential Video Doorbell Wired?

The Arlo Essential Video Doorbell Wired is designed to capture the blind spots that other video doorbells miss. The 1:1 aspect ratio means that you can see a package on the ground and a

visitor from head to toe. The doorbell also offers features such as high-definition video quality, a 180-degree viewing angle, and full-duplex two-way audio.

What are the minimum requirements to use an Arlo Essential Video Doorbell Wired?

To install an Arlo Essential Video Doorbell Wired, you must have an existing wired doorbell and chime with electrical wiring to a chime box. The voltage of the doorbell transformer must be between 16-24V AC. Your Internet connectivity and mobile device must also meet the minimum requirements to use an Arlo system. For more information, visit: [What are the minimum requirements for installing and using my Arlo system?](#)

Does the Arlo Essential Video Doorbell Wired operate on battery power?

No. The doorbell connects to existing electrical doorbell wiring with voltage between 16-24V AC.

Does the Arlo Essential Video Doorbell Wired require an Arlo SmartHub or Base Station?

No, an Arlo SmartHub or Base Station is optional to use the Arlo Essential Video Doorbell Wired. You can use an existing Wi-Fi router to connect the Arlo Essential Video Doorbell Wired directly to 2.4GHz Wi-Fi. If you want to connect your Arlo Essential Video Doorbell Wired to an Arlo SmartHub or Base Station, you can connect it to a VMB5000, VM4540, VMB4500, or VMB4000.

How easy is it to install the Arlo Essential Video Doorbell Wired?

To install your Arlo Essential Video Doorbell Wired, simply download the Arlo app and follow the setup instructions for Arlo Essential Video Doorbell Wired. Installation requires connecting the Arlo Power Kit and doorbell to existing wiring.

Can I install the Arlo Essential Video Doorbell Wired if I don't have an existing wired doorbell?

The Arlo Essential Video Doorbell Wired requires a connection to a wired mechanical or digital chime to enable continuous power, reduce latency, and capture and transmit videos in real time.

What comes with the Arlo Essential Video Doorbell Wired?

When you purchase an Arlo Essential Video Doorbell Wired, you receive the doorbell, a mounting plate, a power kit, a release pin, an angled mounting plate, wall screws and anchors, and optional wire extension, wire fasteners, and extra screws.

Do I need to purchase other Arlo devices to use the Arlo Essential Video Doorbell Wired?

No. The Arlo Essential Video Doorbell Wired can operate as a standalone product.

Do I need the Arlo app to use the Arlo Essential Video Doorbell Wired?

Yes. You must use the Arlo app to adjust settings, arm or disarm, and access cloud recordings on your Arlo Essential Video Doorbell Wired.

Is there a reset button on the Arlo Essential Video Doorbell Wired?

Yes. There is a pin-hole button on the back of the doorbell. For more information, visit: [How do I reset my Arlo Essential Video Doorbell Wired?](#)

Does the Arlo Essential Video Doorbell Wired offer different mounting options?

Yes. The Arlo Essential Video Doorbell Wired includes a flat mounting plate and an angled mounting wedge for flexible and precise mounting.

Is there a locking mechanism for the Arlo Essential Video Doorbell Wired?

Yes. The Arlo Essential Video Doorbell Wired securely locks into the provided mounting plate. There is a release pin included with each Arlo Essential Video Doorbell Wired that customers can use to remove the doorbell.

What video resolution does the Arlo Essential Video Doorbell Wired output?

The Arlo Essential Video Doorbell Wired records and outputs video in 1536x1536 HD resolution.

How wide is the viewing angle on the Arlo Essential Video Doorbell Wired?

The lens has a 180-degree diagonal field of view. This enables you to see a package on the ground or a person from head to toe.

Does the Arlo Essential Video Doorbell Wired have a zoom-on capability?

Yes. The Arlo Essential Video Doorbell Wired supports 12x manual zoom in.

Does the Arlo Essential Video Doorbell Wired have full-duplex audio?

Yes. With full-duplex audio, you can talk and listen at the same time, enabling you to have a full conversation with the person at your door.

Is leaving a message on the Arlo Essential Video Doorbell Wired the same as the Arlo Audio Doorbell?

Yes. If no action has been taken 20 seconds after a doorbell press, the visitor is prompted to leave a voicemail. This also happens when you decline a doorbell call. You must have an Arlo Secure plan for users to access voicemail prompts.

Does the Arlo Essential Video Doorbell Wired have an integrated siren?

Yes. The built-in siren can be activated to deter intruders.

Is the Arlo Essential Video Doorbell Wired compatible with my existing Arlo system?

Yes. When your Arlo Essential Video Doorbell Wired is connected to an Arlo SmartHub or Base Station, you can use the doorbell to trigger an Arlo Chime or other cameras. For help adding your

Arlo Video Doorbell to an Arlo SmartHub or Base Station, visit: [How do I connect my Arlo Camera or Video Doorbell to an Arlo SmartHub or Base Station?](#)

Can the Arlo Essential Video Doorbell Wired pair with other Arlo cameras?

The Arlo Essential Video Doorbell Wired has its own integrated camera. Additionally, you can set up cross triggering the same way as you would with Arlo cameras, so that other cameras will record when the Arlo Essential Video Doorbell Wired detects motion.

Can I connect my Arlo Essential Video Doorbell Wired to an Arlo SmartHub or Base Station?

You can connect your Arlo Essential Video Doorbell Wired to VMB5000, VMB4540, VMB4500, and VMB4000 Arlo SmartHubs/Base Stations. For more information, visit: [How do I connect my Arlo Camera or Video Doorbell to an Arlo SmartHub or Base Station?](#)

Last Updated:05/29/2024 | Article ID: 000062329

Arlo Essential Wire-Free Camera Series FAQ

Arlo Essential Wire-Free Camera Series FAQ

This article applies to:

[VMC2020](#) [VMC2030](#) [VMC2032](#)

This FAQ applies to the wire-free Arlo Essential Spotlight Camera (VMC2030), Arlo Essential XL Spotlight Camera (VMC2032), and Arlo Essential Camera (VMC2020).

Arlo Essential Series cameras

1. What is the difference between the three wire-free Arlo Essential cameras?

All three Essential camera models capture video in 1080p resolution. The Arlo Essential XL Spotlight Camera comes with an integrated extra-length (XL) battery, which provides additional battery life before recharging. Both the Arlo Essential XL Spotlight Camera and the Essential Spotlight Camera include an

integrated spotlight and color night vision, while the Arlo Essential Camera (VMC2020) does not include a spotlight and has standard night vision.

2. Are the wire-free Essential Series cameras completely wire-free?

Yes. The Essential wire-free cameras are fully wire-free and powered with an integrated battery. However, you can use a VMA3600 Solar Panel or a VMA3700 Outdoor Charging Cable to keep your Essential wire-free camera outdoors with continuous power. For more information, visit: [How do I charge my Arlo Essential wire-free camera?](#)

3. How much longer does the Arlo Essential XL Spotlight Camera battery last?

The Arlo Essential XL Spotlight Camera comes with an integrated extra-length (XL) battery that lasts one year without charging. The Arlo Essential Spotlight Camera and Arlo Essential Camera both come with an integrated battery that lasts six months without charging. For more information, visit: [How much longer does the Arlo Essential XL Spotlight Camera battery last than the Arlo Essential Spotlight Camera?](#)

4. Can I use the Essential wire-free cameras indoors and outdoors?

Yes. The Essential wire-free cameras are weather resistant, wire-free, and outdoor compatible. They do not require a continuous AC power connection.

5. Can I remove the battery in my Essential wire-free camera?

No. The battery in your Essential wire-free camera is fully integrated and cannot be removed. You can recharge the Essential wire-free camera with the indoor charging cable that came in the package with the camera. For more information, visit: [How do I charge my Arlo Essential wire-free camera?](#)

6. What is the minimum upload bandwidth speed required?

You must have a high-speed Internet connection that can sustain a minimum of 1 Mbps upload per Arlo Essential wire-free camera. For more information, visit: [What are the minimum requirements for installing and using my Arlo system?](#)

Image quality

1. What video resolution do the Essential wire-free cameras output?

The Essential wire-free cameras record and output Full HD 1080p at a 16:9 aspect ratio.

2. **How wide is the viewing angle on the Essential wire-free cameras?**

The lens provides a 130-degree diagonal field of view (FOV) for a wide viewing angle.

3. **Do the Arlo Essential wire-free cameras have color night vision?**

The Arlo Essential Spotlight Camera (VMC2030) and Arlo Essential XL Spotlight Camera (VMC2032) have color night vision. The Arlo Essential Camera (VMC2020) has standard night vision.

Features

1. **Do all the Arlo Essential wire-free cameras have an integrated spotlight?**

The Arlo Essential Spotlight Camera (VMC2030) and Arlo Essential XL Spotlight Camera (VMC2032) have an integrated spotlight. The Arlo Essential Camera (VMC2020) does not have an integrated spotlight.

2. **When does the integrated spotlight turn on?**

The spotlight can be set to trigger when motion is detected within the camera's field of view. You can also manually turn it on or off. For more information, visit:

[How does the spotlight on my Arlo camera work?](#)

3. **Do the Essential wire-free cameras include an integrated siren?**

Yes. A siren sound plays directly from the camera. It can be set to trigger manually or automatically when motion is detected. For more information, visit:

[How do I turn the siren on my Arlo camera on or off?](#)

4. **Do the Essential wire-free cameras have an integrated microphone?**

Yes. All three Essential wire-free cameras come with a single, high-sensitivity microphone that allows you to speak with a visitor in crystal clear audio.

5. **Do the Essential wire-free cameras support full two-way audio?**

Yes. You can use your Essential wire-free camera and the Arlo Secure app to have a full-duplex two-way conversation.

6. **Am I able to mount my Essential wire-free camera from a ceiling?**

Yes. You can use the included screw mount to mount your Essential wire-free camera to the ceiling. Ensure you mount the camera to a sturdy surface to avoid accidental dropping or displacement.

7. Do the Essential wire-free cameras include an Arlo Secure trial?

Yes. Essential wire-free cameras come with a trial of Arlo Secure. For more information, visit: [What is included in the Arlo Secure trial?](#)

Accessories and compatibility

1. Do the Essential wire-free cameras require a SmartHub or Base Station?

No. An Arlo SmartHub or Base Station is optional to use an Essential wire-free camera. You can use an existing Wi-Fi router to connect your Essential wire-free camera directly to 2.4GHz Wi-Fi. If you want to connect your Essential wire-free camera to a SmartHub or Base Station, you can connect it to a VMB5000, VMB4540, VMB4500, VMB4000 SmartHub or Base Station. For more information, visit: [What are the benefits of using an Arlo SmartHub or Base Station?](#)

2. Can I use a solar panel to charge my Essential wire-free camera?

Yes. Your Essential wire-free camera is compatible with the VMA3600 Solar Panel. For more information, visit: [How do I charge my Arlo Essential wire-free camera?](#)

3. Can I use my Essential wire-free camera to cross-trigger other Arlo cameras?

Yes. You can set your other Arlo cameras to record when your Essential wire-free camera detects motion.

4. What mounting options do I have with my Essential wire-free camera?

Your Essential wire-free camera comes with an adjustable screw mount that you can use indoors or outdoors. You can also visit [Arlo.com](#) to search for additional mounting accessories. For more information about mounting your camera, visit: [How do I mount my Arlo Essential wire-free camera?](#)

5. What kind of charging cable can I use with my Essential wire-free camera?

Your Essential wire-free camera comes with a micro USB type-A charging cable that you can use to charge your camera indoors. You can also use a VMA3600 Solar Panel or a VMA3700 Outdoor Charging Cable to charge your camera outdoors.

6. What kind of power adapter can I use with the indoor charging cable that came with my camera?

To charge your Arlo Essential wire-free camera, plug the included charging cable into any USB power source. Power sources with higher wattage charge your camera faster, we recommend using at least 5V-2A for best results. For more information, visit: [How do I charge my Arlo Essential wire-free camera?](#)

Last Updated:04/30/2024 | Article ID: 000062416

Arlo Essential Indoor Camera FAQ

Arlo Essential Indoor Camera FAQ

This article applies to:

[VMC2040](#)

1. What is the Privacy Shield?

The automated Privacy Shield closes whenever you disarm your camera, ensuring that your moments are private when needed. For more information, visit [How do I use the Privacy Shield on my Arlo Essential Indoor Camera?](#)

2. What happens when the Privacy Shield is enabled?

When the Privacy Shield is closed, your camera disables motion and audio detection, and the camera's microphone is turned off.

3. Can I close the Privacy Shield manually?

No. You can close the Privacy Shield in the Arlo Secure App by disarming your camera. Do not attempt to manually close the Privacy Shield with your finger. For more information, visit [How do I use the Privacy Shield on my Arlo Essential Indoor Camera?](#)

4. What image resolution does the Arlo Essential Indoor Camera output?

Your Arlo Essential Indoor Camera has a maximum video resolution of 1080p.

5. How wide is the viewing angle on the Arlo Essential Indoor Camera?

The field of view is 130-degrees diagonal.

6. Does the Arlo Essential Indoor Camera have an integrated microphone?

Yes. The Arlo Essential Indoor Camera comes with a single, high-sensitivity microphone that allows you to speak with a visitor in crystal clear audio.

7. Does the Arlo Essential Indoor Camera have an integrated siren?

Yes. The siren can be set to trigger automatically when motion or sound is detected, or manually via the Arlo Secure App. For more information, visit [How do I turn the siren on my Arlo camera on or off?](#)

8. How can I mount the Arlo Essential Indoor Camera?

You can use the included mounting plate to mount the camera on a wall, or you can place the camera on a flat surface. For more information, visit [How do I wall-mount my Arlo Essential Indoor Camera?](#)

9. Do I need an Arlo SmartHub or Base Station to use the Arlo Essential Indoor Camera?

No. You can connect the Arlo Essential Indoor Camera directly to your 2.4 GHz Wi-Fi network. You can optionally connect the camera to one of the following SmartHubs or Base Stations: VMB5000, VMB4540, VMB4500, or VMB4000.

10. What is the minimum upload bandwidth speed required?

The Arlo Essential Indoor Camera requires an upload speed of at least 1 Mbps per camera. For more information, visit [What are the minimum requirements for installing and using my Arlo system?](#)

11. Can I use continuous video recording (CVR) with the Arlo Essential Indoor Camera?

Yes. You can purchase a separate CVR subscription to continuously record on your Arlo Essential Indoor Camera. For more information, visit [What is continuous video recording \(CVR\) and how do I use it?](#)

12. What is the difference between Arlo Essential Indoor Cameras and Arlo Essential Wire-Free Cameras?

The Arlo Essential Indoor Camera is a wired camera that is meant for indoor use only. The Arlo Essential Wire-Free Cameras are wire-free cameras and can be used either indoors or outdoors. For a full list of features and specifications, visit [Arlo.com](#)

13. How is the Arlo Essential Indoor Camera powered?

The Arlo Essential Indoor Camera is a wired camera. You must keep the included power cable plugged into the camera for the camera to function.

14. Can I use a USB, SD, or microSD storage device with the Arlo Essential Indoor Camera?

Yes. If you connect your Arlo Essential Indoor Camera to a SmartHub or Base Station, you can plug a local storage device into the SmartHub or Base Station to save your Arlo videos. For more information, visit [How do I set up local storage backups using my Arlo Base Station or SmartHub?](#)

15. Does the Arlo Essential Indoor Camera come with an Arlo Secure trial?

Yes. Arlo Essential Indoor Cameras come with an Arlo Secure trial. For more information, visit [What is included in the Arlo Secure trial?](#)

Last Updated:05/06/2024 | Article ID: 000062558

Arlo Pro 5S Camera FAQ

Arlo Pro 5S Camera FAQ

This article applies to:

[VMC4060P](#)

What is the difference between Arlo Pro 5S and Arlo Pro 4?

Arlo Pro 5S offers all the same features as Arlo Pro 4 with the following additional capabilities:

- **Dual-Band Wi-Fi**
 - Hassle-free setup, faster video loading, and less buffering with support for 2.4GHz and 5GHz networks.
- **Arlo SecureLink Connectivity**
 - A more secure connection, protection during power or Wi-Fi outages, and longer battery life when connected to the Arlo Home Security System.
- **Low Power Mode**

- Provides up to 30% more battery life.
- **Improved image quality**
 - Enhanced image sensor provides higher quality video, especially in low light.

Does Arlo Pro 5S have 2K resolution?

Yes. Arlo Pro 5S features 2K (2560x1440) resolution at 16:9 aspect ratio.

What is Arlo SecureLink Connectivity?

Arlo SecureLink is a technology that uses the sub-GHz wireless communication to communicate between Arlo devices. The Arlo Security Keypad Sensor Hub uses Arlo SecureLink to talk with devices such as the Arlo All-in-One Sensor, and the Arlo Pro 5S Camera.

For more information, visit: [What is Arlo SecureLink and how does it work with my Arlo system?](#)

Do I need an Arlo SmartHub or Base Station to use Arlo Pro 5S?

No. An Arlo SmartHub or Base Station is optional. You can connect Arlo Pro 5S directly to your Wi-Fi router.

What are the benefits of connecting my Arlo Pro 5S to a SmartHub or Base Station?

The Arlo SmartHub or Base Station increases security by adding a secure, personal network to your router. The Arlo SmartHub or Base Station also helps to regulate Wi-Fi traffic, can improve battery life, and is compatible with local storage.

For more information, visit: [What are the benefits of using an Arlo SmartHub or Base Station?](#)

How wide is the viewing angle on Arlo Pro 5S?

The lens is a 160-degree diagonal lens with a matching wide range for motion detection.

What does color night vision mean?

Typical night-time video footage from security cameras displays in black and white. Arlo Pro 5S can output images in color, even at night.

What is High Dynamic Range (HDR)?

HDR solves the problem with over or under exposed images with both bright and dark areas in the same picture. Arlo Pro 5S automatically determines when to use HDR.

Can I use Arlo Pro 5S indoors and outdoors?

Yes. Arlo Pro 5S can be used indoors and is weather resistant for outdoor use. The included magnetic charging cable is for indoor use only. If you wish to charge your camera outside, you must use the [Outdoor Magnetic Charging Cable](#).

Does Arlo Pro 5S have an integrated spotlight?

Yes. The spotlight turns on in low-light settings. You can also manually turn it on or off.

Does Arlo Pro 5S include an Arlo Secure trial?

Yes. Arlo Pro 5S comes with a trial of Arlo Secure. For more information, visit: [What is Arlo Secure and how can I benefit from it?](#)

Is Arlo Pro 5S compatible with the Arlo XL Rechargeable Battery & Housing?

Yes. Arlo Pro 5S is compatible with the [Arlo XL Rechargeable Battery & Housing](#).

Is Arlo Pro 5S compatible with the Arlo Solar Panel?

Yes. Arlo Pro 5S is compatible with the [VMA5600 Solar Panel Charger](#).

For more information, visit: [Arlo Solar Panel Compatibility](#)

Am I able to mount my Arlo Pro 5S camera from my ceiling?

Yes. You can use the included mount or a [Magnetic Wall Mount](#) to mount your Pro 5S camera on the ceiling. If you use a [Total Security Mount](#), you can purchase a [Ceiling Adapter](#) to mount your camera from the ceiling.

Does Arlo Pro 5S have an integrated siren?

Yes. A siren sound plays directly from the camera. It can be set to trigger manually or automatically with motion or audio detection.

What is the minimum upload bandwidth speed required?

Arlo Pro 5S uses an average of 2 Mbps upload bandwidth per camera.

Does Arlo Pro 5S support full two-way audio?

Yes. Arlo Pro 5S has full two-way conversational audio.

Does 2K recording require a subscription?

Arlo Pro 5S cameras come with an Arlo Secure trial that allows 2K streaming and cloud recording. You can also record 2K clips to local storage with the use of an Arlo SmartHub or Base Station. When your trial expires, you will need to renew the subscription to continue 2K cloud recording.

For more information on Arlo subscription plans, visit: [What Arlo subscription plans and cloud recording options are available?](#)

For more information on local storage, visit: [How do I set up local storage backups using my Arlo SmartHub or Base Station?](#)

What smart home and voice assistant systems can I use with the Arlo Pro 5S Camera?

The Arlo Pro 5S Camera is compatible with Amazon Alexa, Google Home, If This Then That (IFTTT), and Samsung SmartThings.

For more information, visit: [What smart home and voice assistant systems can I use with my Arlo devices?](#)

Last Updated:06/10/2024 | Article ID: 000063006

Arlo Secure App FAQ

Arlo Secure App FAQ

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [VMB5000](#) [VMB4540](#)
[VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#)
[VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#)
[VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

The Arlo App is now the Arlo Secure App in alignment with our service offerings and communicates our commitment to keep you and your family protected.

What is the difference between the Arlo Secure App and the Arlo App?

Arlo Secure App is the new name for the existing Arlo App.

Does this change affect my Arlo account or recordings?

No. This change does not affect your Arlo account, recordings, subscription plans, or setup.

What is the difference between the Arlo Secure App and the Arlo Safe App?

The Arlo Secure App is a smart home security app that allows you to set-up, access, and control Arlo security devices; making it simple to protect what matters most.

The Arlo Safe App is a personal safety app for total protection and peace of mind with one-touch emergency activation on your phone. If you ever feel in danger, are involved in a car accident, or want to check in with a family member, help is there.

Note: Arlo Safe is only available in the US.

For more information, visit: [What is the difference between Arlo Secure App and Arlo Safe App?](#)

Do I need a different account for the Arlo Safe App and Arlo Secure App?

No. You can use the same Arlo account for both the Arlo Secure App and Arlo Safe App; however, you will need to trust each app separately on your mobile device. For more information, visit: [Why do I have to trust my device for both the Arlo Safe App and Arlo Secure App?](#)

Last Updated:05/24/2024 | Article ID: 000062730

Arlo Wire-Free Outdoor Siren FAQ

Arlo Wire-Free Outdoor Siren FAQ

This article applies to:

[SLB1001](#)

What hardware is required to use the Arlo Wire-Free Outdoor Siren?

The Arlo Wire-Free Outdoor Siren works in conjunction with the Arlo Home Security System and must be paired to the Arlo Keypad Sensor Hub.

How does the Arlo Wire-Free Outdoor Siren pair to the Arlo Keypad Sensor Hub?

The Arlo Wire-Free Outdoor Siren pairs to the Arlo Keypad Sensor Hub using Arlo SecureLink technology.

- For more information, visit: [What is Arlo SecureLink and how does it work with my Arlo system?](#)

Do I need to own Arlo cameras to use the Arlo Home Security System?

No. The Arlo Home Security System can work independently without Arlo cameras, Arlo SmartHubs, or Arlo Base Stations.

- If you do have an Arlo camera, it will work seamlessly with the Arlo Home Security System and the Arlo Secure App.

What type of batteries does the Arlo Wire-Free Outdoor Siren use?

The Arlo Wire-Free Outdoor Siren uses two CR123 3V Lithium batteries.

What types of sounds can the Arlo Wire-Free Outdoor Siren make?

The Arlo Wire-Free Outdoor Siren includes several prerecorded tones.

- You can choose from alarm sounds, doorbell chimes, dog barking sounds, police sirens, voice warnings, and more.

How does the Arlo Wire-Free Outdoor Siren work?

The Arlo Wire-Free Outdoor Siren responds to events from other Arlo devices such as Arlo Cameras, Arlo Doorbells, and Arlo All-in-One Sensors.

- The Arlo Wire-Free Outdoor Siren tones can also be activated manually.
- Flashes from the built-in strobe light can be activated manually or in response to events from other Arlo devices.

Does the Arlo Wire-Free Outdoor Siren detect motion or audio?

No. The Arlo Wire-Free Outdoor Siren does not have detection functions.

- The Arlo Wire-Free Outdoor Siren responds to detection events from other Arlo devices.

Can the Arlo Wire-Free Outdoor Siren duration, sounds, volume, and strobe light pattern be adjusted?

Yes. The Arlo Wire-Free Outdoor Siren audio and light settings can be adjusted in the Arlo Secure App.

Is the Arlo Wire-Free Outdoor Siren weather resistant?

Yes. The Arlo Wire-Free Outdoor Siren has a weather resistant design that withstands heat, cold, rain, sun, and more.

Arlo Home Security System FAQ

Arlo Home Security System FAQ

This article applies to:

[SH1001](#) [MS1001](#) [LBB1001](#) [KB1001](#) [NT1001](#)

Which Arlo cameras or doorbells work with the Arlo Home Security System?

- All Arlo cameras and doorbells work seamlessly with your Arlo Home Security System through the Arlo Secure App.
- Arlo SecureLink enabled cameras, such as the Arlo Pro 5S, can directly connect to the Arlo Keypad Sensor Hub for easy setup.

Do I need to own Arlo cameras to use the Arlo Home Security System?

- No. The Arlo Home Security System can work independently without Arlo cameras, Arlo SmartHubs, or Arlo Base Stations.
- If you do have an Arlo camera, it will work seamlessly with the Arlo Home Security System and the Arlo Secure App.

What devices can be added to the Arlo Home Security System?

- The following devices are compatible with the Arlo Home Security System and can be connected to the Arlo Keypad Sensor Hub:
 - Arlo All-in-One-Sensor
 - Arlo Cellular and Battery Backup
 - Arlo Pro 5S Camera
 - Arlo Wire-Free Outdoor Siren
 - Arlo Wire-Free Keypad

What is the Arlo Wire-Free Outdoor Siren?

- The Arlo Wire-Free Outdoor Siren provides you with the ability to deter burglars and alert neighbors with a loud siren and built-in strobe light.
- The weather resistant design allows you to extend your security system outdoors.
- The Arlo Wire-Free Outdoor Siren seamlessly connects with the Arlo Home Security System and can be customized to trigger automatically when unusual activity is detected by your system or manually from the Arlo Secure App.
- For more information, visit: [Arlo Wire-Free Outdoor Siren FAQ](#)

What is the Arlo Cellular and Battery Backup?

- The optional Arlo Cellular and Battery Backup connects to the Arlo Keypad Sensor Hub.
- It includes a pre-installed SIM card and keeps your Arlo Home Security System connected and powered during internet or power outages for up to 12 hours.
- For more information, visit: [What is the Arlo Cellular and Battery Backup and how does it work?](#)

How do security accessories such as the Arlo Wire-Free Outdoor Siren or Arlo All-in-One Sensor pair to the Arlo Keypad Sensor Hub?

- The Arlo Home Security System uses Arlo SecureLink technology to pair devices to the Arlo Keypad Sensor Hub. Arlo SecureLink offers longer range and better efficiency for wireless devices.
- For more information, visit: [What is Arlo SecureLink and how does it work with my Arlo system?](#)

Can I enable more than one detection function on my All-in-One Sensor?

- Yes, you can use several different detection functions at once. For example, the All-in-One Sensor can be configured to protect windows and doors by combining motion and open/close detection.
- You can also place the sensor under a sink for example and combine water leak and temperature detection.
- The All-in-One Sensor can also detect Smoke and CO alarms if you have the [Arlo Premium plan](#).

Is an Arlo Secure plan required to use the Arlo Home Security System?

- No, but Arlo Professional Monitoring is highly recommended for additional security features.
- The Arlo Home Security System includes a trial of Arlo Professional Monitoring.
- After the Professional Monitoring trial expires, an [Arlo Premium plan](#) is required for the Arlo Professional Monitoring service to work.
- For more information, visit: [What is Arlo Professional Monitoring?](#)

Is a trial of Arlo Professional Monitoring included with the Arlo Home Security System?

- Yes. A trial is included with the purchase of a new Arlo Home Security System.
- After the Arlo Professional Monitoring trial expires, an [Arlo Premium plan](#) is required for the Arlo Professional Monitoring service to work.
- For more information, visit: [What is Arlo Professional Monitoring?](#)

What is included with Arlo Professional Monitoring?

- Arlo Professional Monitoring includes features such as One Tap Direct Dispatch, 24/7 Live Security Experts, Video Verification,¹ and Cellular and Battery Backup.²
 - ¹ Requires an Arlo camera, sold separately.
 - ² Requires the Arlo Cellular and Battery Backup accessory, sold separately.

What is Arlo Video Verification?

- Video Verification allows Live Security Experts to access cameras during an emergency to take necessary action.
- Security Experts can only access cameras you have authorized for this purpose.

What type of Wi-Fi network do I need to use for the Arlo Keypad Sensor Hub?

- The Arlo Keypad Sensor Hub uses your existing 2.4GHz Wi-Fi network.

Last Updated:09/20/2024 | Article ID: 000062858

Arlo Chime 2 FAQ

Arlo Chime 2 FAQ

This article applies to:

[AC2001](#)

Which Arlo devices are compatible with the Arlo Chime 2?

You can use the [Arlo Chime 2](#) to ring an Arlo Essential Video Doorbell (Wired or Wire-Free) or an Arlo Audio Doorbell when the button is pressed. You can also set the Arlo Chime 2 to play a sound when a separate Arlo camera detects motion or audio.

- For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

Do I need an Arlo SmartHub or Base Station to use the Arlo Chime 2?

No. Your Arlo Chime 2 connects directly to your Wi-Fi router. After you connect your chime to a Wi-Fi router, you can pair it with an Arlo Essential Video Doorbell.

- For more information, visit: [How do I connect my Arlo Essential Video Doorbell to an Arlo Chime?](#)

Can I connect the Arlo Chime 2 to an Arlo SmartHub or Base Station?

No. You must connect your Arlo Chime 2 directly to your Wi-Fi router.

Can I use more than one Arlo Chime 2 with a single Arlo Essential Video Doorbell?

Yes. You can pair an unlimited number of chimes to a single Arlo doorbell.

Can I use more than one Arlo Essential Video Doorbell with a single Arlo Chime 2?

Yes. You can pair more than one Arlo Essential Video Doorbell with an Arlo Chime 2. For example, if you have two Arlo Essential Video Doorbells, you can set both to trigger one Arlo Chime 2. You can also customize each doorbell's melody, so you know which doorbell rang.

- For more information, visit: [How do I select a melody for my Arlo Chime?](#)

Does the Arlo Chime 2 run on battery power?

No. The Arlo Chime 2 must be plugged into a wall outlet indoors.

- For more information, visit: [How is the Arlo Chime 2 powered?](#)

Can I use the Arlo Chime 2 outdoors?

No. The Arlo Chime 2 is meant for indoor use only.

Where should I place the Arlo Chime 2?

Place the Arlo Chime 2 within range of the Wi-Fi router that it is connected to.

- For more information, visit: [Where should I place my Arlo Chime 2?](#)

Can I use the Arlo Chime 2 as a siren for an Arlo camera?

Yes. You can set the Arlo Chime 2 to activate the integrated siren when motion or audio is detected on your Arlo camera.

- For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

Can I change the chime melody that plays on my Arlo Chime 2?

Yes. You can change the chime melody in your Arlo doorbell's melody settings within the Arlo Secure App.

- For more information, visit: [How do I select a melody for my Arlo Chime?](#)

Can I silence the Arlo Chime 2?

Yes. You can silence your Arlo Chime 2 by activating Silent Mode on your Arlo doorbell.

- For more information, visit: [How do I receive phone calls or voice messages from my Arlo Doorbell?](#)

Last Updated:06/03/2024 | Article ID: 000062573

Arlo Audio Doorbell FAQ

Arlo Audio Doorbell FAQ

This article applies to:

[AC2001](#) [AAD1001](#) [AC1001](#)

What is an Arlo Audio Doorbell?

An Arlo Audio Doorbell calls your smart phone or tablet to notify you when your doorbell is pressed. The Arlo Audio Doorbell and Arlo Chime are compatible with your Arlo wire-free cameras, so you can see everything that's happening at your doorstep. Pairing your Arlo Audio Doorbell with your Arlo wire-free cameras, gives you a better view of your entry way, compared to a doorbell with a built-in camera.

Do Arlo Audio Doorbells have an integrated camera?

No.

Why doesn't my Arlo Audio Doorbell have an integrated camera?

Keeping the doorbell and camera separate lets you combine an Arlo Audio Doorbell with any Arlo wire-free camera of your choice. You also have the freedom to place your Arlo wire-free cameras anywhere around your front door so you can see more than what's directly in front of your doorbell button.

Can I purchase an Arlo Audio Doorbell or an Arlo Chime separately?

Yes. You can buy an Arlo Audio Doorbell or an Arlo Chime as separate, add-on accessories.

How many Arlo Audio Doorbells or Arlo Chimes can I associate a single Arlo Base Station?

An Arlo Base Station supports two Arlo Audio Doorbells and five Arlo Chimes.

Can more than one Arlo Audio Doorbell be associated with the same Arlo Chime?

Yes. You can pair more than one Arlo Audio Doorbell with an Arlo Chime. For example, if you have two Arlo Audio Doorbells, both will trigger your Arlo Chime. You can also customize your Arlo Doorbell's melody so you know which doorbell rang.

Do I need an Arlo Base Station to use an Arlo Audio Doorbell or Arlo Chime?

Yes. You must have an Arlo Base Station to use an Arlo Audio Doorbell or Arlo Chime.

Can I use my Arlo Audio Doorbell without wiring it to my existing chime?

Yes. Your smartphone rings to notify you when someone presses your Arlo Audio Doorbell. You can also use the Arlo Chime with your Arlo Audio Doorbell, which does not require any wiring.

If my Arlo Audio Doorbell is wired to an existing low-voltage chime, does it still require batteries to operate?

Yes. Your Arlo Audio Doorbell requires two AA batteries to operate.

How long will the two AA batteries in my Arlo Audio Doorbell last?

The two AA batteries that are in your Arlo Audio Doorbell typically last about a year with normal usage.

Can I initiate two-way talk from my Arlo Secure App to my Arlo Audio Doorbell?

No. Two-way talk is initiated only when a guest presses the button your Arlo Audio Doorbell.

Which cameras are compatible with my Arlo Audio Doorbell?

Your Arlo Audio Doorbell is compatible with Arlo Wire-Free, Arlo Ultra series, Pro series, and Essential series cameras.

Is the Arlo Audio Doorbell compatible with Arlo Chime 2?

Yes. It is compatible with Arlo Chime 2. For more information, visit: [Arlo Chime 2](#)

Last Updated:05/24/2024 | Article ID: 000061930

Arlo Essential Outdoor Camera (2nd Generation) FAQ

Arlo Essential Outdoor Camera (2nd Generation) FAQ

This article applies to:

This FAQ applies to the new Arlo Essential Outdoor Camera (2nd Generation).

What new 2nd Generation Arlo Essential Outdoor Camera models are available?

- Arlo Essential Outdoor Camera 2K (VMC3050)
- Arlo Essential XL Outdoor Camera 2K (VMC3052)
- Arlo Essential Outdoor Camera HD (VMC2050)
- Arlo Essential XL Outdoor Camera HD (VMC2052)

What is the difference between the four 2nd Generation Arlo Essential Outdoor Cameras?

Arlo Essential Outdoor HD and Arlo Essential XL Outdoor HD camera models capture video in 1080p resolution. Arlo Essential Outdoor 2K and Arlo Essential XL Outdoor 2K capture video in 2K resolution.

The Arlo Essential XL Outdoor 2K and HD cameras come with an integrated extra-length (XL) battery, which provides additional battery life.

What are the key features of the Arlo Essential Outdoor Camera (2nd Generation)?

- Motion Detection Alerts
- Color Night Vision
- Noise-Canceling Audio
- Integrated Spotlight
- Integrated Siren

- Weather Resistant
- Direct to Wi-Fi Connection

Are the Arlo Essential Outdoor (2nd Generation) cameras completely wire-free?

Yes. The Arlo Essential Outdoor (2nd Generation) cameras are fully wire-free and powered with an integrated battery. However, you can use the Arlo Essential Solar Panel (2nd Generation) and Arlo Essential Outdoor Charging Cable (2nd Generation) to keep your camera outdoors with continuous power. For more information, visit: [How do I charge my Arlo Essential Outdoor Camera \(2nd Generation\) camera?](#)

Can I use the Arlo Essential Outdoor (2nd Generation) cameras indoors and outdoors?

Yes. The Arlo Essential Outdoor (2nd Generation) cameras are weather resistant, wire-free, and outdoor compatible. They do not require a continuous AC power connection.

What is the minimum upload bandwidth speed required?

You must have a high-speed Internet connection that can sustain a minimum of 2 Mbps upload per Arlo Essential Outdoor Camera. For more information, visit: [What are the minimum requirements for installing and using my Arlo system?](#)

Do I need an Arlo SmartHub or Base Station to use the Arlo Essential Outdoor Camera (2nd Generation)?

No. You can connect the Arlo Essential Outdoor Camera directly to your 2.4 GHz Wi-Fi network without the need for an Arlo SmartHub or Base Station. Arlo is currently working on a solution to make Arlo Essential Outdoor Cameras (2nd Generation) compatible with Arlo SmartHubs and Base Stations in 2024.

What is the Arlo Essential Outdoor Camera (2nd Generation) video resolution?

The Arlo Essential Outdoor Camera HD (2nd Generation) and Arlo Essential XL Outdoor Camera HD (2nd Generation) record and output Full HD 1080p at a 16:9 aspect ratio. The Arlo Essential Outdoor Camera 2K (2nd Generation) and Arlo Essential XL Outdoor Camera 2K (2nd Generation) record and output 2K video at a 16:9 aspect ratio.

How wide is the Arlo Essential Outdoor Camera (2nd Generation) viewing angle?

The camera lens provides a 130-degree field of view (FOV).

Do the Arlo Essential Outdoor (2nd Generation) cameras have color night vision?

Yes. All four versions of the Arlo Essential Outdoor Camera (2nd Generation) include color night vision.

How much longer does the Arlo Essential XL Outdoor Camera (2nd Generation) battery last?

The Arlo Essential XL Outdoor Camera 2K and Essential XL Outdoor Camera HD come with an integrated extra-length (XL) battery that lasts 16 to 24 months with typical usage. The Arlo Essential Outdoor Camera HD and Arlo Essential Outdoor Camera 2K both come with an integrated battery that lasts six months without charging.

Can I remove the battery in my Arlo Essential Outdoor (2nd Generation) camera?

No. The battery in your Arlo Essential Outdoor Camera is fully integrated and cannot be removed. You can recharge the Arlo Essential Outdoor Camera with the indoor charging cable that is included with the camera. For more information, visit: [How do I charge my Arlo Essential Outdoor Camera \(2nd Generation\) camera?](#)

Can I use a solar panel to charge my Arlo Essential Outdoor (2nd Generation) camera?

Yes. Your Arlo Essential Outdoor Camera (2nd Generation) is compatible with the Arlo Essential Solar Panel (2nd Generation).

What kind of charging cable can I use with my 2nd Generation Arlo Essential Outdoor Camera?

Your Arlo Essential Outdoor Camera (2nd Generation) comes with a USB-C charging cable that you can use to charge your camera indoors. You can also use the Arlo Essential Solar Panel (2nd Generation) and Arlo Essential Outdoor Charging Cable (2nd Generation) to charge your camera outdoors.

What kind of power adapter can I use with the indoor charging cable that came with my camera?

To charge your Arlo Essential Outdoor Camera (2nd Generation), plug the included charging cable into any USB power source. Power sources with higher wattage charge your camera faster, Arlo recommends using at least 5V-2A. For more information, visit: [How do I charge my Arlo Essential Outdoor Camera \(2nd Generation\) camera?](#)

Can I use my Arlo Essential Outdoor Camera (2nd Generation) to cross-trigger other Arlo cameras?

Yes. You can set your other Arlo cameras to record when your Arlo Essential Outdoor Camera (2nd Generation) detects motion.

What mounting options do I have with my Arlo Essential Outdoor Camera (2nd Generation)?

Your Arlo Essential Outdoor Camera (2nd Generation) comes with an adjustable screw mount

that you can use indoors or outdoors. You can also visit [Arlo.com](https://www.arlo.com) to search for additional mounting accessories. For more information about mounting your camera, visit: [How do I mount my Arlo Essential Outdoor Camera to a wall \(2nd Generation\)?](#)

Are Arlo Protective Camera Covers available for my Arlo Essential Outdoor Camera (2nd Generation)?

Arlo Protective Covers are available for the Arlo Essential Outdoor Camera (2nd Generation). The silicone skins are UV and weather-resistant, and ideal for outdoor and indoor use. They have a convenient slip-on, slip-off design, while providing access for mounting and battery charging. For more information, visit: [Arlo.com](https://www.arlo.com)

Are Arlo Essential Outdoor or XL Outdoor Cameras compatible with Apple Home?

Not yet. The Arlo team is working to support Apple Home compatibility for Essential Outdoor (2nd Generation) Cameras.

Do Arlo Essential Outdoor or XL Outdoor Cameras work with Arlo SmartHubs?

Not yet. The Arlo team is working to support SmartHub (VMB5000/VMB4540) compatibility for Essential Outdoor (2nd Generation) Cameras.

Last Updated:07/10/2024 | Article ID: 000063189

Product Tour


Arlo Pro 5S, Pro 4, and Pro 3 Product Tour

Arlo Pro 5S, Pro 4, and Pro 3 Product Tour

This article applies to:

[VMC4040P](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#)

Arlo Pro 5S, Pro 4, and Pro 3 cameras have the following features:

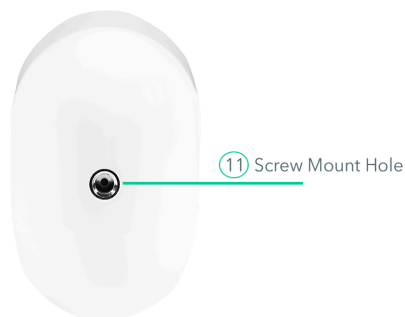

1. **Spotlight:** Activate the integrated spotlight manually, or set it to trigger when motion is detected. For more information, visit: [How do I activate the spotlight on my Arlo camera?](#)
2. **Light Sensor:** The light sensor makes sure that your Arlo camera image is properly adjusted according to the setting. For more information, visit: [How do I use HDR with my Arlo camera?](#)
3. **2K Lens with 160-Degree Field of View:** Never miss a detail with crystal clear 2K video quality and a wide viewing angle. For more information, visit: [What is the field of view on my Arlo camera and how do I change it?](#)

4. **Speaker:** Deter intruders by activating the siren on the integrated speaker. For more information, visit: [How do I turn the siren on my Arlo camera on or off?](#)
5. **Microphone:** Use the microphone and speaker for a full-duplex two-way conversation.
6. **Camera LED:** Determine the status of your Arlo camera by referring to the LED. For more information, visit: [What do the different LED behaviors on my Arlo camera mean?](#)
7. **Weather Resistant Camera Housing:** Use your Arlo camera indoors or outdoors. For more information, visit: [Are Arlo cameras weatherproof?](#)
8. **Sync Button:** Manually onboard cameras by pressing the sync button after releasing the camera from the camera housing.
9. **Charging Port:** Take advantage of a simpler charging solution with the magnetic charging cable that came with your camera. For more information, visit: [How do I charge my Arlo Ultra 2, Ultra, Pro 5S, Pro 4, Pro 3, or Go 2 camera with the magnetic charger?](#)
10. **Battery Access Button:** Press the battery access button to replace your batteries or access the sync button. For more information, visit: [How do I change the battery in my Arlo Ultra, Arlo Ultra 2, Arlo Pro 3, Arlo Pro 4, or Arlo Pro 5S camera?](#)
11. **Screw Mount Hole:** Use the screw mount hole to attach your camera to an outdoor security mount. For more information, visit: [Mount Accessories](#)

Last Updated:05/31/2024 | Article ID: 000062322

Arlo Go 2 Camera Product Tour


Arlo Go 2 Camera Product Tour

This article applies to:

[VML2030](#)

The Arlo Go 2 Camera has the following integrated features:



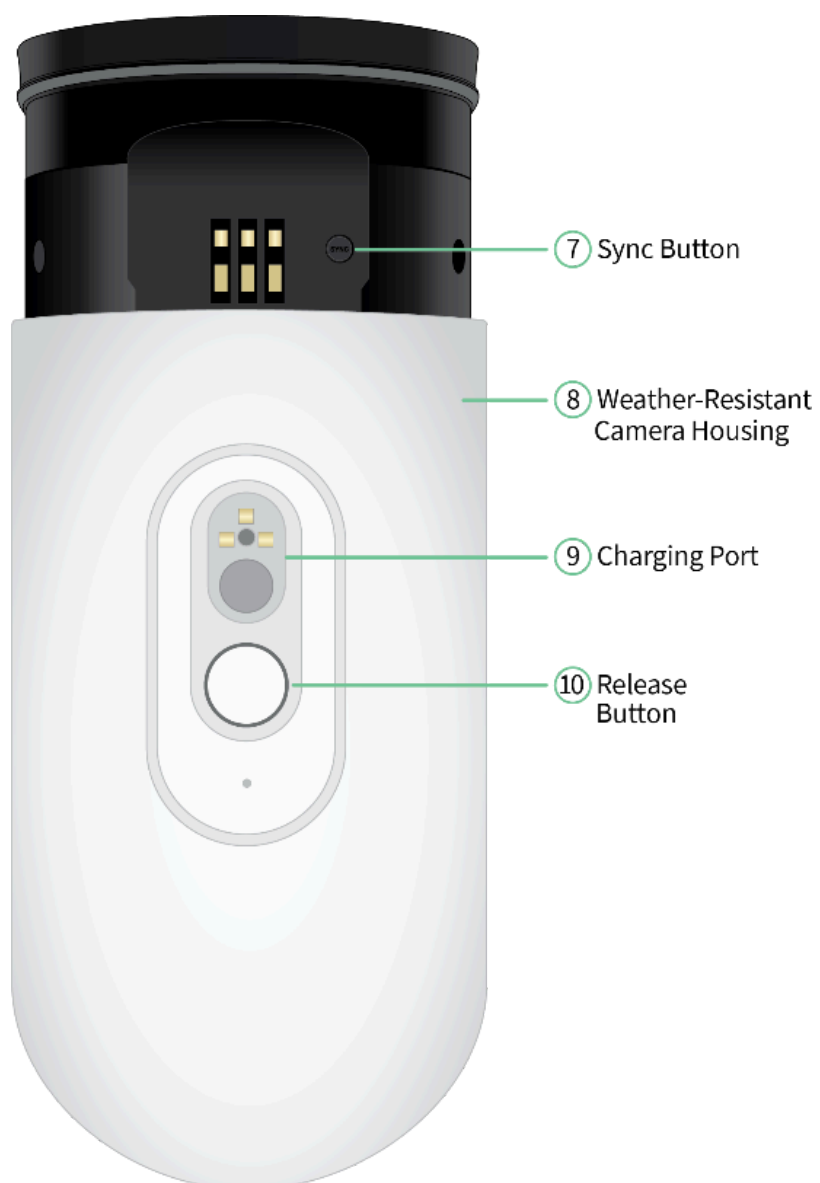



1. **Microphone:** Use the microphone and speaker for a full-duplex two-way conversation.
2. **Spotlight:** Activate the integrated spotlight manually, or set it to trigger when motion is detected. For more information, visit: [How does the spotlight on my Arlo camera work?](#)
3. **Camera Lens:** Keep an eye on more of what matters with a wide 130-degree field of view.

4. **Status LED:** Determine the status of your Arlo Go 2 Camera by referring to the LED indicator. For more information, visit: [What do the LED behaviors on my Arlo Go 2 Camera mean?](#)
5. **Light Sensor:** The light sensor is used to determine when to trigger the integrated spotlight. For more information, visit: [How does the spotlight on my Arlo camera work?](#)
6. **Speaker:** Use 2-Way Audio to have a conversation, or deter intruders by activating the siren. For more information, visit: [How do I turn the siren on my Arlo camera on or off?](#)
7. **Sync Button:** After releasing the camera from the camera housing, manually start the syncing process or factory reset your Arlo camera by pressing this button. For more information, visit: [What is the sync button on my Arlo Go 2 Camera?](#)
8. **Weather Resistant Camera Housing:** Use your Arlo Go 2 Camera indoors or outdoors. For more information, visit: [Are Arlo cameras weatherproof?](#)
9. **Charging Port:** Charge your camera battery with the magnetic charging cable that came with your camera.
10. **Release Button:** Press this button to release your Go 2 camera from the camera housing. This lets you access the battery and the SIM card, the **sync** button, and the SD card slot. For more information, visit: [How do I insert the battery in my Arlo Go 2 camera?](#)
11. **SIM Card Slot:** An activated SIM card is required for mobile broadband access. For more information, visit: [How do I install a SIM card in my Arlo Go 2 camera?](#).
12. **SD Card Slot:** You can use an optional micro SD card (sold separately) for local storage. For more information, visit: [How do I install an SD card in my Arlo Go 2 camera?](#).
13. **Screw Mount Hole:** Use the screw mount hole to attach your camera to the camera mount. For more information, visit: [How do I mount my Arlo Go 2 Camera?](#)


Arlo Ultra and Ultra 2 Product Tour

This article applies to:

[VMC5040](#)

Arlo Ultra cameras have the following integrated features:



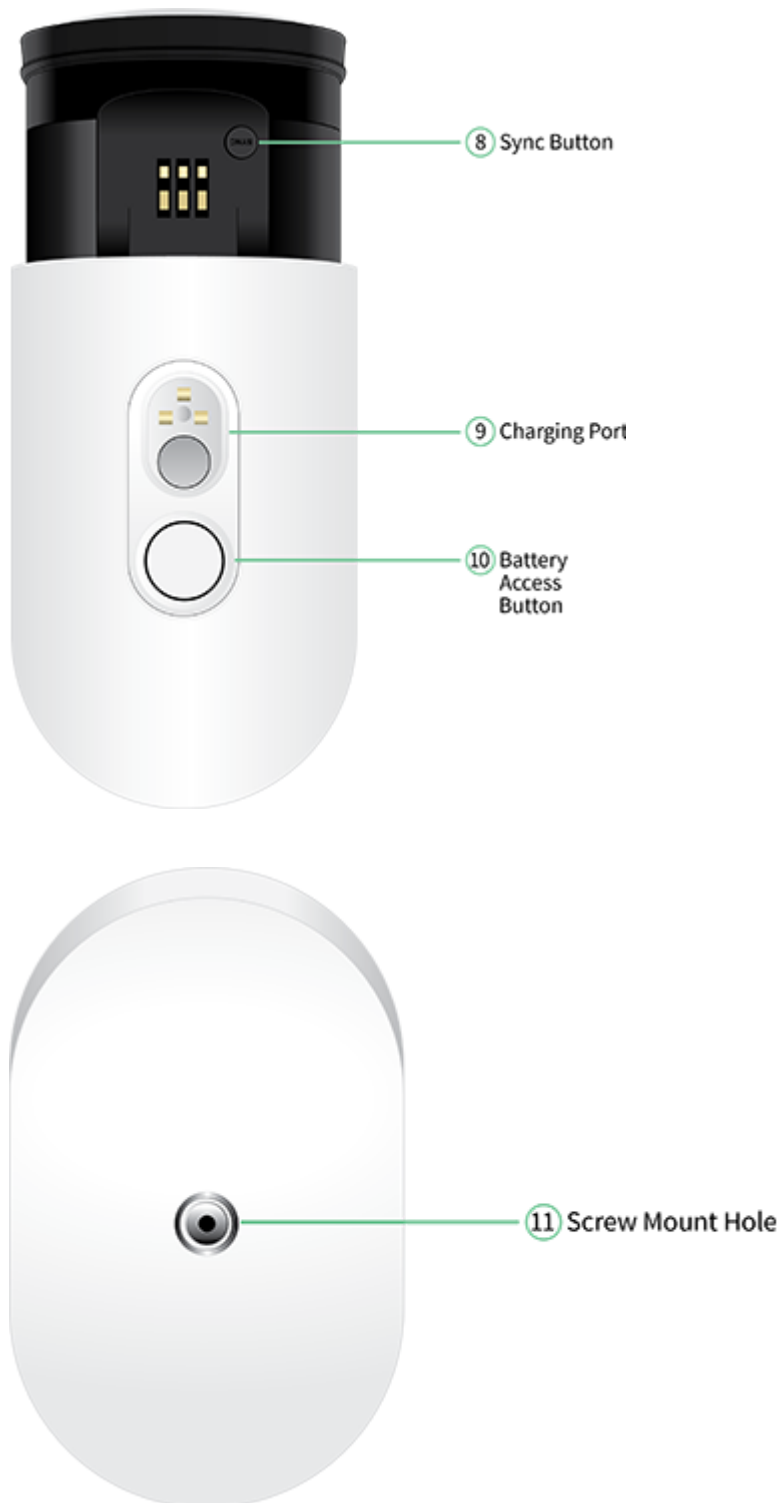

1. **Spotlight:** Activate the integrated spotlight manually, or set it to trigger when motion or sound is detected. For more information, visit: [How does the spotlight on my Arlo camera work?](#)
2. **Light Sensor:** The light sensor makes sure that your Arlo camera's image is properly adjusted according to the setting. For more information, visit: [How do I use HDR with my Arlo camera?](#)

3. **4K Lens with 180-Degree Field of View:** Never miss a detail with crystal clear 4K video quality and a wide viewing angle. For more information, visit: [What is the field of view on my Arlo camera and how do I change it?](#)
4. **Speaker:** Deter intruders by activating the siren on the integrated speaker. For more information, visit: [How do I turn the siren on my Arlo camera on or off?](#)
5. **Microphone:** Use the dual microphones to reduce wind noise, and use the speaker for a full-duplex two-way conversation. For more information, visit: [How do I reduce wind noise on my Arlo Ultra camera?](#)
6. **Camera LED:** Determine the status of your Arlo camera by referring to the LED indicator. For more information, visit: [What do the different LED behaviors on my Arlo camera mean?](#)
7. **Weather Resistant Camera Housing:** Use your Arlo Ultra 2 camera indoors or outdoors. For more information, visit: [Are Arlo cameras weatherproof?](#)
8. **Sync Button:** Press and hold the sync button to factory reset your Arlo Ultra camera.
9. **Charging Port:** Take advantage of a simpler charging solution with the magnetic charging cable that came with your Arlo Ultra 2 camera. For more information, visit: [How do I charge my Arlo Ultra 2, Ultra, Pro 5S, Pro 4, Pro 3, or Go 2 camera with the magnetic charger?](#)
10. **Battery Access Button:** Press the battery access button to replace your batteries or access the sync button. For more information, visit: [How do I change the battery in my Arlo Ultra, Arlo Ultra 2, Arlo Pro 3, Arlo Pro 4, or Arlo Pro 5S camera?](#)
11. **Screw Mount Hole:** Use the screw mount hole to attach your camera to an [Outdoor Mount](#) or [Anti-Theft Mount](#).

Last Updated:05/09/2024 | Article ID: 000062436

Arlo Essential Wire-Free Camera Product Tour

Arlo Essential Wire-Free Camera


Product Tour

This article applies to:

[VMC2020](#) [VMC2030](#) [VMC2032](#)

This product tour shows images of the Arlo Essential Spotlight Camera (VMC2030), but it can be applied to the Arlo Essential XL Spotlight Camera (VMC2032) and Arlo Essential Camera (VMC2020). For more information, visit: [What is the difference between the three Arlo Essential wire-free cameras?](#).



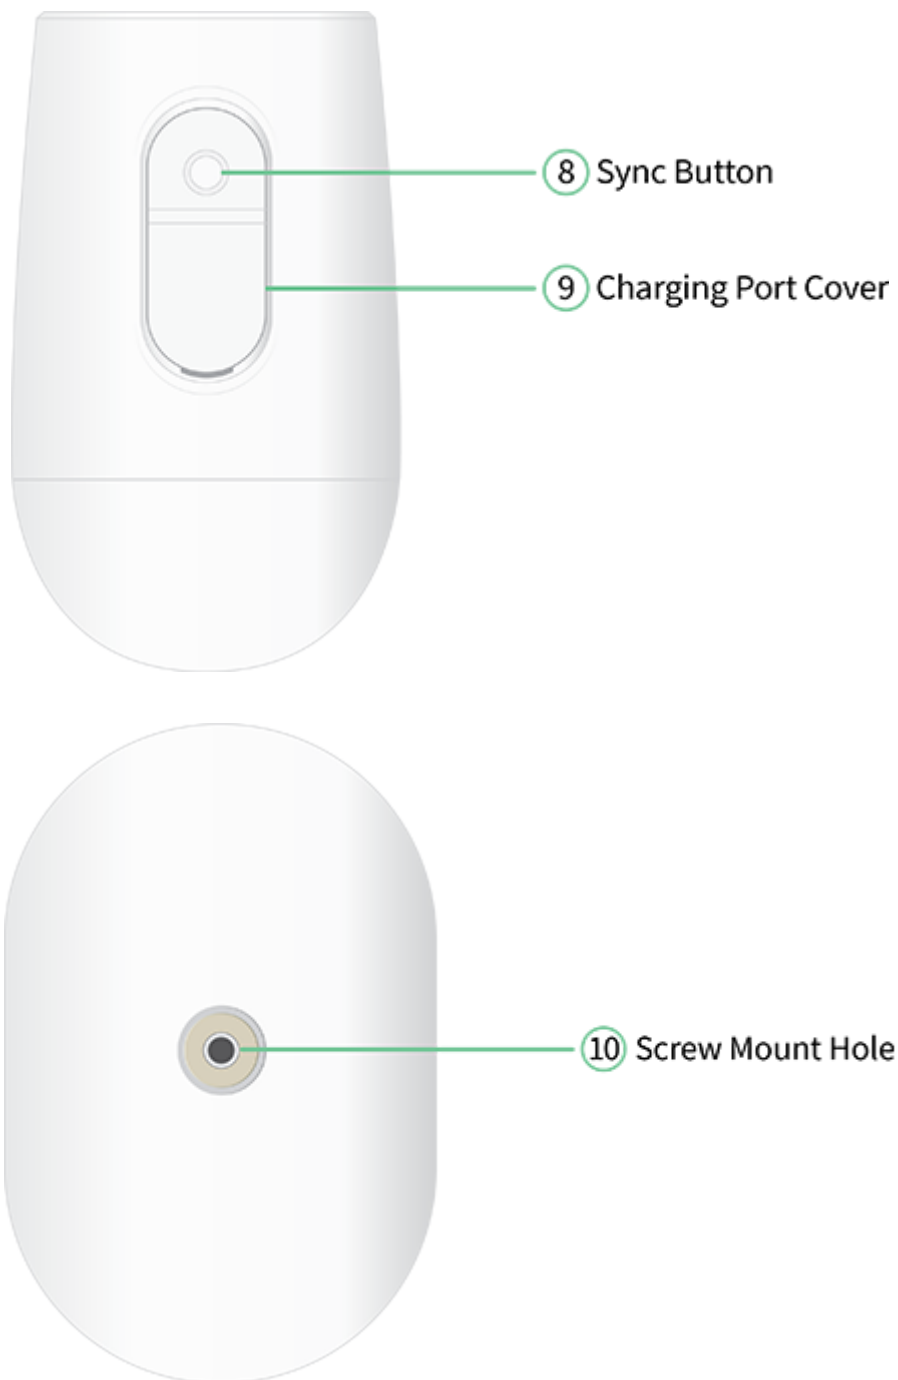

1. **Spotlight:** Activate the integrated spotlight manually, or set it to trigger when motion is detected. For more information, visit: [How does the spotlight on my Arlo camera work?](#).

Note: The Arlo Essential Camera (VMC2020) does not have an integrated spotlight.

2. **Microphone:** Use the integrated microphone to have a full two-way conversation with someone on the other side of your Arlo Essential wire-free camera.

3. **Light Sensor:** The light sensor is used to determine when to trigger the integrated spotlight. For more information, visit: [How does the spotlight on my Arlo camera work?](#).
4. **Camera LED:** Determine the status of your Arlo camera by referring to the LED indicator. For more information, visit: [What do the different LED behaviors on my Arlo camera mean?](#).
5. **Full HD Lens with 130-Degree Field of View:** View your videos in full HD and capture a wide viewing angle for motion detection.
6. **Weather Resistant Camera Housing:** Use your Arlo Essential wire-free camera indoors or outdoors. For more information, visit: [Are Arlo cameras weatherproof?](#).
7. **Speaker:** Deter intruders by activating the siren on the integrated speaker. For more information, visit: [How do I turn the siren on my Arlo camera on or off?](#).
8. **Sync Button:** Use the sync button to initiate onboarding, factory reset, or shut down the camera. For more information, visit: [How do I use the sync button on my Arlo Essential wire-free camera?](#).
9. **Charging Port Cover:** Pull the cover to access the micro USB charging port, and charge the camera indoors or outdoors. For more information, visit: [How do I charge my Arlo Essential wire-free camera?](#).
Note: The camera's serial number can be found on a label under the charging port cover.
10. **Screw Mount Hole:** Use the screw mount hole to attach your camera to the included screw mount. For more information, visit: [How do I mount my Arlo Essential wire-free camera?](#).

Note: The Arlo Essential XL Spotlight Camera (VMC2032) has an additional screw mount hole at the bottom of the camera, next to the charging port cover.

Last Updated: 04/24/2024 | Article ID: 000062417

All-in-One Sensor Product Tour

All-in-One Sensor Product Tour


This article applies to:

[MS1001](#)

The Arlo Home Security System includes Arlo All-in-One Sensors with eight sensing functions in one compact design. This gives you the flexibility to place the sensor anywhere you need in your home.

Note: Arlo All-in-One Sensors are for indoor use only.

The exterior of the Arlo All-in-One Sensor includes a motion sensor, sync button, water detection pins, and alignment marks.

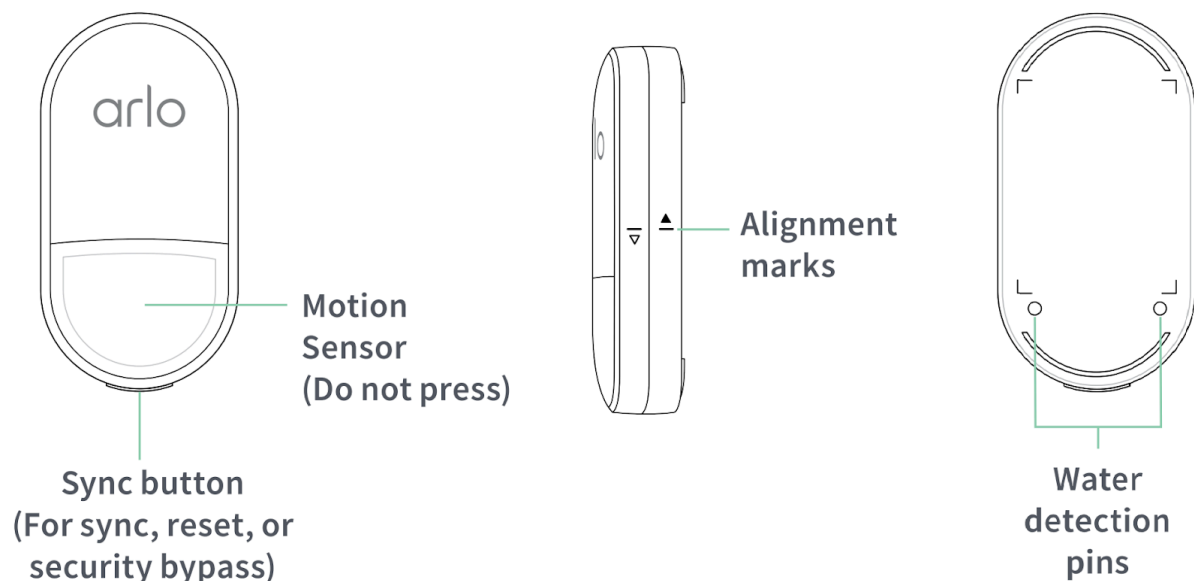

Motion Sensor:

- Place or mount the sensor in a vertical position 6 ft. (1.8 m) above the ground, in a wide space without obstructions to detect motion.
- For more information, visit: [How do I install and configure my Arlo All-in-One Sensor as a Motion Sensor?](#)

Sync button:

- Used during setup to pair your sensor to the Arlo Home Security System. For more information, visit: [How do I pair the All-in-One Sensor to the Arlo Keypad Sensor Hub?](#)

- Used to temporarily bypass security actions for the sensor when you want to open a door or window. For more information, visit: [How can I temporarily bypass security on my Arlo All-in-One Sensor?](#)
- Changes to sensor settings can take up to five minutes. Press the sync button to apply any setting changes immediately.
- Press and hold the sync button for 10 seconds to factory reset the All-in-One Sensor. For more information, visit: [How do I factory reset the Arlo All-in-One Sensor?](#)

Water detection pins:

- Place the sensor horizontally on a flat surface near sinks, water heaters, and other water appliances inside your home to detect water leaks when water contacts both detection pins.
- For more information, visit: [How to configure the All-in-One Sensor as a Water Leak Sensor](#)

Alignment marks:

- Match up the alignment marks on the sensor and magnet, without exceeding the recommended gap distance of 0.5 in. (12 mm).
- The magnet can be placed on either side of the sensor for open/close detection.
- For more information, visit: [How do I install and configure my Arlo All-in-One Sensor as an Open/Close Sensor for windows or doors?](#)

Last Updated:05/10/2024 | Article ID: 000062955

VueZone End-of-Life Information and FAQs

VueZone End-of-Life Information and FAQs

This article applies to:

End of VueZone Service

VueZone services will be discontinued on August 13, 2019. All service plans will be affected.

After August 13, 2019, the following will apply:

- VueZone services will no longer be available.
- All VueZone hardware products, including base stations and cameras, will cease to communicate with the VueZone back-end cloud services.
- Any videos and photos you have saved in the VueZone cloud will not be retrievable.
- Access to the VueZone web application (my.vuezone.com) and to the VueZone mobile applications will be unavailable to all customers.
- VueZone service plans will no longer be supported, and no service plan fees will be charged after this date.
- Arlo Customer Support will no longer provide technical support for VueZone products.

We understand that this may be disappointing news for our VueZone users. However, Arlo no longer has the resources to simultaneously maintain the older VueZone platform and the new Arlo platform while providing the great experience we want for our users.

Frequently Asked Questions (FAQ)

What happens to my paid Premier or Elite service subscription?

If this is an annual paid plan, you will be refunded the balance remaining for unused service. If this is a monthly plan, it will no longer be renewed after August 13, 2019.

What happens to my data after August 13, 2019?

All VueZone images and recordings remaining on the cloud will be deleted and will not be recoverable after this time. Download any images or recordings from your account that you would like to keep before this date.

What happens to my account and login information?

You will no longer be able to log in to the VueZone portal.

What do I do with my device after August 13, 2019?

The VueZone system should be recycled as e-waste. Check the regulations in your region regarding e-waste recycling.

What other products can I buy to replace my VueZone device?

The Arlo line of cameras is the next generation of VueZone camera with all of what you loved about VueZone with additional functionality such as audio and enhanced video resolution.

For more details on the various models and options, visit: [Arlo Cameras](#)

Last Updated:05/02/2024 | Article ID: 000062175

Arlo Essential Indoor Camera (2nd Generation) Product Tour



Arlo Essential Indoor Camera (2nd Generation) Product Tour

This article applies to:

[VMC3060](#) [VMC2060](#)

2nd Generation Arlo Essential Indoor 2K and HD Cameras

have the following integrated features:

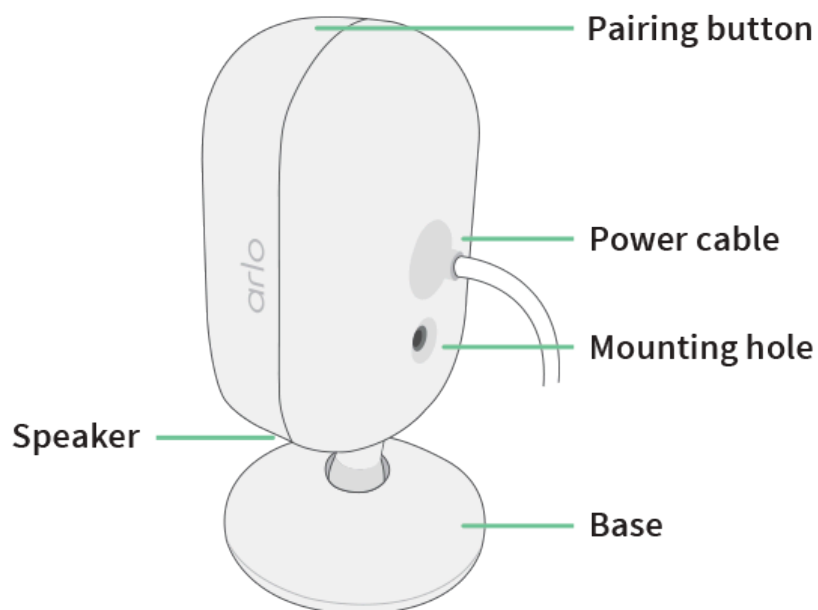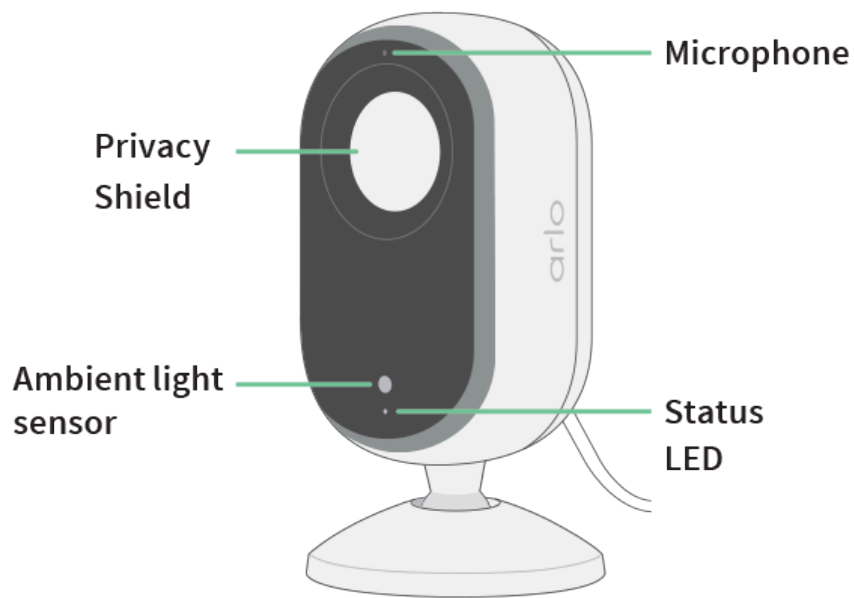

Microphone

- Use the microphone and speaker for full-duplex two-way conversation.
- For more information, visit: [How do I use 2-way audio on my Arlo camera? - Arlo Secure 4.0](#)

Privacy Shield

- Ensure your moments are private when needed by closing the integrated Privacy Shield.
- For more information, visit: [How do I use the Privacy Shield on my Arlo Essential Indoor Camera? - Arlo Secure 4.0](#)

Ambient Light Sensor

- The ambient light sensor determines the need for night vision.
- For more information, visit: [How do I turn Arlo Camera Night Vision on or off in the Arlo Secure App?](#)

Status LED

- Use the LED to determine the status of your camera.
- For more information, visit: [What do the LED behaviors on my Arlo Essential Indoor Camera \(2nd Generation\) mean?](#)

Pairing Button

- Use the pairing button for camera set-up and factory reset.
- For more information, visit:
 - [How to set up the Arlo Essential Indoor Camera \(2nd Generation\)](#)
 - [How do I factory reset my Arlo Essential Indoor Camera?](#)

Power Cable

- Use the cable to power your camera from an AC power outlet.

Mounting Hole

- Use the mounting hole to mount your camera to a wall.
- For more information, visit: [How do I mount my Arlo Essential Indoor Camera to a wall? \(2nd Generation\)](#)

Speaker

- Deter intruders by activating the siren on the integrated speaker.
- For more information, visit: [How do I turn the siren on my Arlo camera on or off? - Arlo Secure 4.0](#)

Base

- Use the base to place your camera on a flat surface.
- For more information, visit: [Arlo Camera Placement Tips](#)

Last Updated:06/27/2024 | Article ID: 000063230

What is the difference between Arlo Q Plus PoE and Ethernet?

What is the difference between Arlo Q Plus PoE and Ethernet?


This article applies to:

[VMC3040S](#)

Arlo Q Plus comes with a PoE adapter that allows the camera to be simultaneously powered and connected to the Internet using a PoE switch. It also supports traditional Ethernet for situations where a hard line connection is preferred over Wi-Fi.


PoE:

Power over Ethernet or PoE passes electrical power along with data on twisted pair Ethernet cabling. This allows a single cable to provide both data connection and electrical power to the Arlo Q Plus camera.

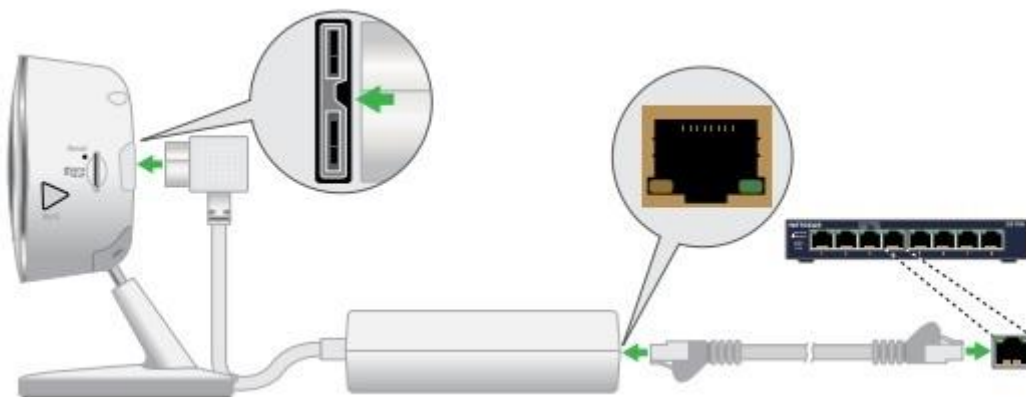

Ethernet:

The Ethernet connection is used to connect Arlo Q Plus to a network. You can connect Arlo Q Plus directly to a LAN port on your router or switch and use a separate power adapter to power the camera.

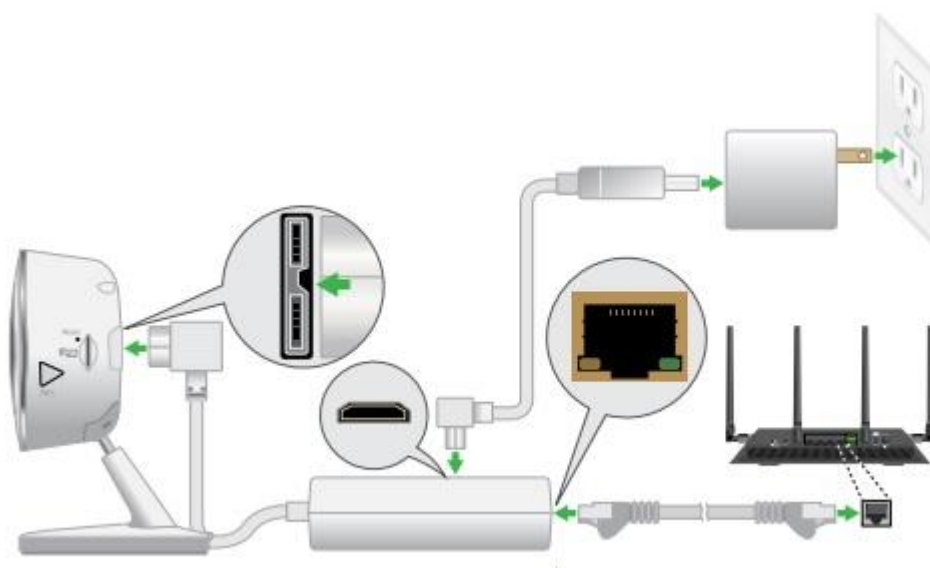

Last Updated:09/24/2024 | Article ID: 30977

What is the difference between Arlo Pro 3, Arlo Pro 4, and Arlo Pro 5S?

What is the difference between Arlo Pro 3, Arlo Pro 4, and Arlo Pro 5S?

This article applies to:

[VMC4040P](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#)

Arlo Pro 4 offers all the same features and more installation flexibility than Arlo Pro 3. You can connect your Arlo Pro 4 camera directly to a Wi-Fi router, an Arlo SmartHub, or an Arlo Base Station, whereas the Arlo Pro 3 camera can only be connected to an Arlo SmartHub or Base Station.

Arlo Pro 5S offers all the same features as Arlo Pro 4 with the following additional capabilities:

- **Dual-Band Wi-Fi**
 - Hassle-free setup, faster video loading, and less buffering with support for both 2.4GHz and 5GHz networks
- **SecureLink Connectivity**
 - A more secure connection, protection during power or Wi-Fi outages, and longer battery life when connected to the Arlo Home Security System
- **Low Power Mode**
 - Provides up to 30% more battery life

Arlo Pro 3, Pro 4, and Pro 5S all include the following:

- 2K Video Resolution with High Dynamic Range (HDR)
- Color Night Vision
- 160 Degree Field of View
- Auto Zoom & Tracking
- Integrated Spotlight
- Integrated Siren
- Free Arlo Secure Trial Included

What is the difference between the Arlo Ultra 2 and Arlo Ultra cameras?

What is the difference between Arlo Ultra 2 and the original Arlo Ultra camera?

This article applies to:

[VMC5040](#)

Arlo Ultra 2 has all the same features as the original Arlo Ultra camera including the following additional features:

Increased Wi-Fi Connectivity Range

- With expanded range, you can place Arlo Ultra 2 further from an Arlo SmartHub or Arlo Base Station than the original Arlo Ultra camera.

Note: Due to regulatory restrictions, expanded Wi-Fi range is not available in the EU.

- For positioning tips, visit: [Arlo Camera Placement Tips](#)

Dual-Band Wi-Fi

- Arlo Ultra 2 can switch between 2.4 GHz and 5 GHz Wi-Fi, depending on how far it is from the Arlo SmartHub or Arlo Base Station.
- This allows for optimized camera performance by balancing connectivity range and bandwidth.

Arlo Secure Trial with 4K

- Arlo Ultra 2 comes with a trial that enables 4K cloud recording and advanced object detection settings.
- For more information, visit: [What is included in the Arlo Secure trial?](#)

For more Arlo Ultra 2 information, visit:

- [Arlo Ultra 2 FAQ](#)
- [Arlo Ultra and Ultra 2 Product Tour](#)

Last Updated:05/03/2024 | Article ID: 000062437

What is the difference between Arlo Pro 5S and Arlo Pro 5 Cameras?

What is the difference between Arlo Pro 5S and Arlo Pro 5 Cameras?

This article applies to:

[VMC4060P](#)

The Arlo Pro 5S Camera and the Arlo Pro 5 Camera have the same features and the same specifications. The only difference is the name of the device in different regions.

- The Arlo Secure App recognizes Arlo Pro 5S and Arlo Pro 5 as the same camera.
- All support articles and documentation are the same for both devices.
- For more information, visit: [Arlo Pro 5S Camera FAQ](#)

Last Updated:06/05/2024 | Article ID: 000063039

46

Onboarding / Setup / Installation

INTERNAL KB

Troubleshooting Sync and Onboarding Issues for Arlo Cameras Connected Directly to Base/SmartHub (INTERNAL)

Troubleshooting Sync and Onboarding Issues for Arlo Cameras Connected Directly to Base/SmartHub (INTERNAL)

This article applies to:

[VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#)

To sync the camera, make sure the device is in the same room with the Base Station or SmartHub during the sync process but should be more than 3 feet away from the SmartHub/Base Station and router. For multiple cameras, it is important that you sync the device one at a time.

Note: If the customer is migrating from 3.X to 4.X and is trying to migrate a device that is offline, the device will remain offline. **Factory reset the device and re-add it to the account.**

1. Check CS Diag tool. Ensure that the SmartHub/Base Station is added to the account and is online. If the SmartHub/Base Station is offline, follow troubleshooting steps in the following article: [How to Troubleshoot Offline Issues on Arlo Cameras \(INTERNAL\)](#)

Note: Make sure that the customer is onboarding the device using an admin account, grant access accounts cannot add devices.

2. Confirm if the camera is compatible with the SmartHub/Base Station. For a list of compatible devices, visit: [Arlo SmartHub and Base Station Compatibility](#)
3. Check the battery charge. The device will not sync if the battery charge is depleted. If the battery is drained, charge the battery for at least 30 minutes before trying again.

4. Confirm the router is working and other devices can access the Internet.
5. Try a different device or on a computer/laptop to onboard the camera. If the camera has D2AP mode, another option is to switch the camera to a direct-to-Wi-Fi connection.
6. Check the location of the SmartHub or Base Station. Other devices may interfere with the SmartHub/Base Station. Make sure it is away from major appliances and equipment and is **3 feet (1 meter)** away from the router to reduce interference.
7. Reset the router by unplugging the AC adapter for 30 seconds. Plug it back in and wait for about 1-2 minutes to boot up. Confirm the SmartHub/Base Station is online before re-onboarding.
8. Factory reset the camera.
 - Press and hold the **SYNC** button for 15 seconds and release when the LED blinks amber.
Note: Try to reset the device twice to ensure the factory reset is done properly by the customer.
9. Factory reset the SmartHub/Base Station:
 - Press and hold the **RESET** button on the back of the SmartHub/Base Station for 10 seconds using a paper clip until the LEDs blink amber. When the LED lights stop blinking, the SmartHub/Base Station reboots and the device is removed from the Arlo account. Re-onboard the SmartHub/Base Station when the LED light turns solid Blue.

A factory reset deletes all cameras connected to your SmartHub or Base Station from your Arlo account. You will need to set up your Arlo system again.

Related external KB Articles:

- [Arlo can't discover my Base Station during installation; what do I do?](#)
- [My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?](#)

Troubleshooting Sync and Onboarding Issues for Wireless Arlo Cameras Connected Directly to a Router (INTERNAL)

Troubleshooting Sync and Onboarding Issues for Wireless Arlo Cameras Connected Directly to a Router (INTERNAL)

This article applies to:

Use the following troubleshooting steps if the wireless Arlo cameras connected directly to a router are unable to sync or having issues onboarding:

For initial install:

Factory reset the camera.

- Press and hold the **SYNC** button for 10-15 seconds.
- The camera LED will light solid blue for 2 seconds and then blink amber three times.

If the camera failed to connect or won't scan the QR code when attempting to onboard: Factory reset the camera again and try re-onboarding.

Note: The factory reset for Essential Wire-Free Cameras may take 15 to 45 seconds to complete.

For devices that were previously onboarded but won't sync:

1. Check the camera status (active camera, removed, or deactivated) in **CS Diag tool**.

Note: Upon logging in to CS Diag tool, look at the camera's STATUS column to verify the status.

If the device has been removed or deactivated:

- Factory reset the camera.
 - Press and hold the **SYNC** button for 10-15 seconds.
 - The camera LED will turn On solid Blue for 2 seconds and then blinks amber 3 times.
- Follow the in-app instructions to on-board.

If the device is offline, visit: [How To Troubleshoot Offline Issues on Arlo Cameras \(INTERNAL\)](#)

1. Make sure the camera is close to the router during the sync process.
2. If onboarding multiple cameras, it is important to sync one camera at a time.
3. Follow the instructions in the Arlo Secure App and make sure the correct device is selected.
4. Remove the battery and reinstall (if applicable).
 - Check the battery charge and installation.
 - If the battery is drained, advise the customer to charge the battery for 30 minutes before attempting onboarding.
5. Check the camera LED status:



Slow Blinking Blue:

- The camera is in the process of pairing with the SmartHub



Fast Blinking Blue

- The camera is paired with the SmartHub



Blinking Amber

- The camera is out of range, a connection error occurred during pairing, or the battery charge is low



Alternating Blue and Amber

- A firmware update is in process, the camera failed to pair with the SmartHub or a reset is in process

For Pro 5S camera:

 Slow Blinking Blue

- The camera is in the process of pairing with the SmartHub

 Fast Blinking Blue

- The camera paired with the SmartHub

 Blinking Amber

- The camera is out of range, a connection error has occurred during pairing, or the camera battery charge is low

 Alternating Blue and Amber

- The camera failed to pair with the SmartHub, a reset is in process, or a firmware update is in progress. **DO NOT TURN OFF THE CAMERA.**

1. Try using a different device to onboard the camera.
2. Confirm the router and other devices are working properly with internet access.
3. Make sure the onboarding device and camera are on the **same 2.4GHz network**.
Note: While the Arlo Pro 5S works with both 2.4GHz and 5GHz Wi-Fi networks, it must be installed on a 2.4GHz network. If the 5GHz SSID and password match the 2.4GHz network, the camera will join 5GHz automatically during onboarding. Otherwise, users may add a 5GHz Wi-Fi network after installation is complete.
4. If using a mesh system, turn off all access points except the main router and attempt camera onboarding.
5. Ensure the camera and the router are within **3 feet** (1 meter) away from each other during setup or syncing. Relocate the camera or router if necessary.
6. Other devices or equipment can interfere with the camera.
 - Relocate the camera and router if necessary.
7. If onboarding fails, turn off cellular data.
8. Select **Forget Wi-Fi network**, re-scan available networks, and re-add the correct network.
9. Reset the router.
 - Unplug the power adapter for **30 seconds**.

- Reconnect the power adapter and wait **1 to 2 minutes** for the router to boot up.
10. If the above steps do not resolve the issue, **factory reset** the camera:
- Press and hold the **Sync** button on the camera for **15 seconds**.
 - Release the **Sync** button when the camera LED blinks **Amber**.

For Arlo Go 2:

For initial install:

Factory reset the camera:

- Press and hold the **Sync** button on the camera for **15 seconds**.
- Release the **Sync** button when the camera LED blinks **Amber**.

If the camera failed to connect or won't scan the QR code when attempting to onboard: Factory reset the camera again and try re-onboarding.

For devices that were previously onboarded:

1. Check the camera status (active camera, removed, or deactivated) in **CS Diag tool**.

Note: Upon logging in to CS Diag tool, look at the camera's STATUS column to verify the status.

If the device has been removed or deactivated:

- Factory reset the camera.
 - Press and hold the **Sync** button on the camera for **15 seconds**.
 - Release the **Sync** button when the camera LED blinks **Amber**.
- Follow the in-app instructions to on-board.

If the device is offline, follow [How To Troubleshoot Offline Issues on Arlo Cameras \(INTERNAL\)](#).

1. Check the camera LED status:

 **Slow Blinking Blue**

- The camera is attempting to connect to a Wi-Fi network or is in QR scanning mode.

 Fast Blinking Blue

- The camera is establishing a Wi-Fi or LTE network connection.

 Fast Blinking Amber

- The camera did not connect to the Wi-Fi network or it did not connect to the LTE network.

 Solid Amber

- The camera does not detect an activated SIM card in its SIM card slot.

For Pro 5S camera:

 Slow Blinking Blue

- The camera is in the process of pairing with the SmartHub

 Fast Blinking Blue

- The camera paired with the SmartHub

 Blinking Amber

- The camera is out of range, a connection error has occurred during pairing, or the camera battery charge is low

 Alternating Blue and Amber

- The camera failed to pair with the SmartHub, or a reset is in process, or a firmware update is in progress. **DO NOT TURN OFF THE CAMERA.**

1. Try using a different device to onboard the camera.
2. Confirm the router and other devices are working properly with internet access.
3. Make sure the onboarding device and camera are on the **same 2.4GHz network**.

Note: While the Arlo Pro 5S works with both 2.4GHz and 5GHz Wi-Fi networks, it must be installed on a 2.4GHz network.

4. If using a mesh system, turn off all access points except the main router and attempt camera onboarding.
5. Ensure the camera and the router are within **3 feet** (1 meter) away from each other during setup or syncing. Relocate the camera or router if necessary.
6. Other devices or equipment can interfere with the camera.
 - Relocate the camera and router if necessary.
7. If onboarding fails, turn off cellular data.
8. Select **Forget Wi-Fi network**, re-scan available networks, and re-add the correct network.
9. Reset the router.
 - Unplug the power adapter for **30 seconds**.
 - Reconnect the power adapter and wait **one to two minutes** for the router to boot up.
10. If the above steps do not resolve the issue, **factory reset** the camera:
 - Press and hold the **Sync** button on the camera for **15 seconds**.
 - Release the **Sync** button when the camera LED blinks **Amber**.

Last Updated:01/19/2023 | Article ID: 000062637

Arlo All-in-One Sensor Onboarding (INTERNAL)

Arlo All-in-One Sensor Onboarding (INTERNAL)

This article applies to:

[MS1001](#)

Follow these troubleshooting steps if the customer's All-in-One Sensor is not found when trying to be installed/onboarded:

1. Make sure the customer is meeting the minimum requirements for the Arlo system to operate. For more information visit: [What are the minimum requirements for installing and using my Arlo system?](#)
2. The Keypad Sensor Hub must be installed first. The Arlo Keypad Sensor Hub must be installed and added to the Arlo account before the customer can add the Arlo All-in-One Sensor. For more information on installing your Keypad Sensor Hub, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)
3. Check if the Keypad Sensor Hub is online.

Check for the following Keypad LED behaviors to ensure that the Keypad Sensor Hub is online.

- No LEDs – the Keypad Sensor Hub has no power
If the Keypad Sensor Hub has no power, visit: [My Arlo Keypad Sensor Hub will not power on; how can I troubleshoot it?](#)
- All the buttons blink 5 times – the Keypad Sensor Hub failed to connect to a network.
If the Keypad Sensor Hub is offline, visit: [My Arlo Keypad Sensor Hub is offline; how can I troubleshoot it?](#)

4. Check if the All-in-One Sensor has power.
 - Check for the following All-in-One Sensor LED behaviors to ensure that the Sensor is Online by having the customer press the button of the sensor.
 - Flashing Blue. All-In-One Sensor is ready to pair.
 - Off/No LED. All-In-One Sensor battery is not installed, installed incorrectly, or dead.
Check if the battery is installed properly or try replacing the battery.
 - Orange LED. All-in-One Sensor thinks it's connected to a Keypad Sensor Hub but is not recognized by the Keypad Sensor Hub.
Proceed to Step 6.
5. The All-in-One Sensor may be too far away from the Keypad Sensor Hub.
 - Have the customer try moving the All-in-One Sensor closer to the Keypad Sensor Hub during Installation.
 - The customer can use the Device Rangefinder to ensure that the All-in-One Sensor is within the Keypad Sensor Hub's range. For more information,

visit: [How do I use the Device Rangefinder to install my Arlo All-In-One Sensor?](#)

6. Advise the customer to reset the All-in-One Sensor.

To reset the All-in-One Sensor:

- Press and hold the Sync button for 10 seconds or until the LED blinks amber 5 times.
- Try the installation process again.

7. Check in CS Diag Tool for the Sensor and its status.

Note: Upon logging in to CS Diag tool, look at the device's **STATUS** column to verify the status.

8. Check for possible existing entry for the sensor. Customer may need to remove the Arlo All-in-One Sensor from the Arlo Secure account first.
9. If the case needs to be escalated to L2, use the following escalation template:
 - Device(s) affected:
 - D2AP: Router info. Mesh system or other special considerations?
 - When did issue start?
 - Changes to system?
 - Physical setup: How far is device from BS/SH/Router? How many walls/other devices
 - Gather logs
 - Serial number of the All-in-One Sensor and Keypad Sensor Hub.

Last Updated:12/07/2022 | Article ID: 000062985

Troubleshooting Sync and Onboarding Issues for Indoor Cameras Connected Directly to a Router (INTERNAL)

Troubleshooting Sync and Onboarding Issues for Indoor

Cameras Connected Directly to a Router (INTERNAL)

This article applies to:

[VMC2040](#) [VMC3040](#) [VMC3040S](#)

Use the following troubleshooting steps if indoor cameras (Q, Q Plus, or Essential Indoor) connected directly to a router are unable to sync or having issues onboarding:

1. Ensure the camera has power.
 - Make sure the power cable is securely plugged into the camera and the wall outlet.
 - The Amber LED should be illuminated if the camera has power and is not connected to the network.
 - If there are multiple cameras, try a different power adapter or cable from a working camera to isolate power supply issues.
2. Make sure the camera and the device are on the **same 2.4GHz network**.
 - Ensure the network credentials are entered correctly.
3. Try using a different device to onboard the camera.
4. Ensure the camera and the router are within **3 feet** (1 meter) away from each other during setup or syncing.
5. Other devices or equipment can interfere with the camera.
 - Relocate the camera and router if necessary.
6. Try accessing the internet using another device.
7. Confirm the router is working properly.
 - Reset the router.
 - Unplug the AC adapter for **30 seconds**.
 - Reconnect the router and wait for the router to boot up.
8. If onboarding fails, turn off cellular data.
9. Select **Forget WiFi network**, re-scan available networks, and re-add the correct network.

- Ensure the network credentials are entered correctly.
10. If the camera is having difficulty reading or scanning the QR code, see [My Arlo camera won't scan the QR code during setup](#).
 11. Factory reset the device by pressing the **Sync** button for **15 seconds** and then release.
 12. Wait until the device comes back on and try onboarding/syncing again.

Related external KB Article:

- [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)

Last Updated: 06/15/2022 | Article ID: 000062636

Unable to onboard/sync the Go 2 camera - connected to Wi-Fi (INTERNAL)

Unable to onboard/sync the Go 2 camera - connected to Wi-Fi (INTERNAL)

This article applies to:

[VML2030](#)

Use the troubleshooting steps below if the customer is having issues onboarding the Arlo Go V2 using Wi-Fi.

1. Check status in **CS Diag tool** and **Splunk**.
2. Check the LED status of the camera:

 **Slow Blinking Blue** – the camera is attempting to connect to a Wi-Fi network or is in QR scanning mode.

 **Fast Blinking Blue** – the camera is establishing a Wi-Fi or LTE connection.

 **Fast Blinking Amber** – the camera did not connect to the Wi-Fi network or it did not connect to the LTE network.

 **Solid Amber** – the camera does not detect an activated SIM card in its SIM card slot.

If there is no LED, advise the customer to plug the charger and press the **SYNC** button. Once the LED blinks Blue, scan the QR code. If the camera won't scan the QR, use [My Arlo camera won't scan the QR code during setup](#).

If the LED is Fast Blinking Amber, proceed to Step 3.

3. Try a different device or a computer/laptop to onboard the camera.
4. Confirm that the router is working and other devices can access the internet. The device and the camera should be on the same **2.4ghz network**. If using a Mesh system, temporarily turn off all of the access points except the main router and try onboarding.
5. Check the location of the camera. Other devices may interfere with the signal, make sure it is away from major appliances and equipment. Router and device should be **3 feet/1 meter** away from each other.
6. **Power cycle the router** by unplugging the AC adapter for 30 seconds, re-plug and wait for about 1-2 minutes to boot up.
7. **Factory reset** the camera. Press the release button on the bottom to release the camera from its housing. Press and hold the **SYNC** button for 15 seconds until the LED begins to blink Amber. Make sure to let go of the **SYNC** button when the LED begins to blink amber. Insert the camera back into its housing. Wait until the camera comes back on and re-onboard.
8. Consult/Escalate to L2 if issue persist.

Last Updated: 12/10/2021 | Article ID: 000062669

Unable to onboard/sync the Go V2 camera - connected to LTE (INTERNAL)

Unable to onboard/sync the Go V2 camera - connected to LTE (INTERNAL)

This article applies to:

[VML2030](#)

Use the troubleshooting steps below if the customer is having issues onboarding the Arlo Go V2.

The SIM should be active prior to installing.

1. Check status in **CS Diag tool** and **Splunk**.
2. Check the LED status of the camera:

 **Slow Blinking Blue** – the camera is attempting to connect to a Wi-Fi network or is in QR scanning mode.

 **Fast Blinking Blue** – the camera is establishing a Wi-Fi or LTE connection.

 **Fast Blinking Amber** – the camera did not connect to the Wi-Fi network or it did not connect to the LTE network.

 **Solid Amber** – the camera does not detect an activated SIM card in its SIM card slot.

If there is no LED, advise the customer to plug the charger and press the **SYNC** button. Once the LED blinks Blue, scan the QR code. If the camera won't scan the QR, use [My Arlo camera won't scan the QR code during setup](#).

If the LED is Solid Amber, remove and re-insert the SIM card. Advise the customer to contact carrier for SIM issues if the LED does not change.

3. Make sure that the customer is within coverage area.
4. **Factory reset** the camera. Press the release button on the bottom to release the camera from its housing. Press and hold the SYNC button for 15 seconds until the LED begins to blink Amber. Make sure to let go of the SYNC button when the LED begins to blink amber. Wait until

the camera comes back on and re-onboard.

5. Try the SIM on a different device to check if the SIM is working. Otherwise, refer to carrier.

Last Updated: 12/09/2021 | Article ID: 000062668

How to troubleshoot Arlo Audio Doorbell onboarding issues (INTERNAL)

How to troubleshoot Arlo Audio Doorbell onboarding issues (INTERNAL)

This article applies to:

[AAD1001](#) [AC1001](#)

Arlo Audio Doorbell cannot be discovered:

1. Check the distance between the Audio Doorbell and Base Station.
 - Move the Arlo Audio Doorbell closer to the Base Station during the onboarding process.
2. Check the batteries.
 - Remove and reinsert the batteries.
 - If the Audio Doorbell LED is not on, **use new batteries**.
3. Make sure the Audio Doorbell LED is **fading white** during the onboarding process.
4. Ensure the camera LED on the Base Station is **not blinking** before going through the Audio Doorbell onboarding process.
5. The Arlo app will try to discover the Audio Doorbell within 2 minutes after inserting batteries.
 - If the customer has already inserted the batteries, have them **remove the batteries and reinsert when directed to do so in the app instructions**.

6. There can only be a maximum of two Arlo Audio Doorbells per Base Station.
 - Ensure there is **no more than one Audio Doorbell** added to the Base Station before adding a second.
7. Ensure the Arlo Chime is **NOT plugged in** before the Arlo Audio Doorbell onboarding process.
8. You can sync the Arlo Audio Doorbell to the system **with the SYNC button**.
 - **Before doing so**, make sure that camera LED on Arlo Base Station is **not blinking**.
 - Press and hold the Arlo Audio Doorbell **SYNC** button for **3 seconds**.
 - Press and hold the Arlo Base Station **SYNC** button for **3 seconds**.
 - This will cause the Arlo Audio Doorbell to enter the sync state for pairing with the Base Station.

Mobile device compatibility:

1. Reboot the mobile device.
2. Make sure the device used for onboarding is using **Android 6.0** and above or **iOS 10** and above.
3. There is no need to disconnect the cell phone data signal.
 - The phone does not need to be on the same network as the Base Station during Audio Doorbell onboarding.

If none of the above help:

1. Perform a **factory reset** by pressing the Arlo Audio Doorbell **SYNC button** for **10 seconds** (with **batteries installed**).
 - If the Arlo Audio Doorbell is removed from the app, it is good practice to factory reset the Audio Doorbell.

Last Updated: 12/26/2018 | Article ID: 000062178

Arlo Video Doorbell Onboarding Issues (INTERNAL)

Arlo Video Doorbell Onboarding Issues (INTERNAL)

This article applies to:

[AVD2001](#) [AVD1001](#)

Follow the steps below for Arlo Video Doorbell onboarding issues:

No LED/Solid Amber LED

1. Check the circuit breaker to ensure power is going to transformer.
2. If the LED is solid amber, check the transformer to ensure it meets the minimum requirements.
3. Make sure wiring is securely connected to back of the Video Doorbell (get a clear picture if possible).
4. Make sure wiring is securely connected to the transformer (get a clear picture if possible).
5. If the LED is solid amber, make note of the number of devices powered by the transformer.
6. If the LED is solid amber make sure power kit is in bypass mode.
7. Check the voltage (16V is the minimum requirement).
8. Make note of the approximate distance between the Video Doorbell and transformer.

QR Code Scanning Issue

1. Begin QR scanning within 4 inches of the camera lens and slowly move further away.
 - The user should not need to exceed 6 inches.
2. Increase the brightness of the mobile device.
3. Disable dark mode if using iOS.
4. Make sure to scan in an evenly lit area (avoid excessive darkness and excessive brightness).

5. If scanning during night time darkness, cover the Video Doorbell IR LED.
6. Clean the camera lens with a soft cloth.

Cannot Connect to Wi-Fi

1. When the SSID auto populates (expected behavior), enter the correct password for the SSID.
 - To ensure this, users can use the eyeball icon to see if they entered the password correctly.
2. Make sure the SSID is on 2.4GHz (Video Doorbell only supports 2.4GHz).
3. Try disabling the 5GHz and see if the Video Doorbell is able to connect to 2.4GHz.
 - Customers can turn 5GHz back on as soon as the Video Doorbell is onboarded.
4. Check the distance between the Video Doorbell and the WiFi router.
5. Make sure the router has an internet connection.

Unable to Discover Device

If all the steps above are performed correctly and there is still an issue with onboarding, perform the following:

1. Walk the customer through the in-app instructions.
2. Factory reset the Video Doorbell and follow the in-app instructions.
3. Collect transformer make/model details, and get a photo of the transformer/transformer wiring.
4. Note the make and model of the mobile device, OS version, and App version.
5. Collect Chime details, make/model, photo of the chime wiring, and a photo of the power kit.
6. Collect a screenshot of the error message, if there is any.

Last Updated:05/21/2020 | Article ID: 000062430

Arlo Pro 3 Floodlight Onboarding Issues Call Handler (INTERNAL)

Arlo Pro 3 Floodlight Onboarding Issues Call Handler (INTERNAL)

This article applies to:

[FB1001](#)

Follow the steps below to troubleshoot Pro 3 Floodlight onboarding issues.

Issues scanning QR code (AP Mode):

1. Make sure the **blue LED is flashing** before scanning the QR code.
 - The user may have to press the **sync button** to get the LED to start flashing blue.
2. Make sure the user is holding the QR code at least **4 inches** from the mobile device when scanning the QR Code and slowly moving further away.
 - The mobile device should not need to be further than 6 inches away
3. Increase the **brightness** of the mobile device.
4. Disable **dark mode**.
5. Make sure to scan in an **evenly lit area** (avoid excessive darkness and brightness).
6. If scanning during night time darkness, cover the **IR LED**.
7. Clean the **camera lens** with a soft cloth.
8. In some scenarios, the user may not be able to hear the chime sound.
 - Continue onboarding the device and bring the case to L3's attention

Cannot Connect to Wi-Fi (AP Mode):

1. When the SSID auto populates (expected behavior), enter the **correct password** for the SSID.
 - To ensure this, users can use the eyeball icon to see if they entered the password correctly.
2. Make sure the SSID is on **2.4GHz** (Floodlight only supports 2.4GHz).
3. Try **disabling 5GHz** and see if the Floodlight is able to connect to 2.4GHz.

- Customers can turn 5GHz back on as soon as the Floodlight is onboarded.
- 4. Check the **distance** between the Floodlight and the Wi-Fi router.
- 5. Make sure the router has an **internet connection**.

Floodlight Cannot Sync to Base Station/SmartHub:

1. Ensure the Base Station/SmartHub is **online**.
2. Check the camera **LED status**.
3. Check the **distance** between the Floodlight and Base Station/SmartHub.
4. **Power cycle** the Floodlight.
 - Remove and reinstall the battery
 - Replace the battery with a fully charged battery
 - Check battery polarity
5. Check the location and position of the Floodlight (immediate surroundings, nearby devices, etc.).
6. Check if there are walls, windows, or obstacles between the Floodlight and the Base Station/SmartHub.
7. Try **factory resetting** the Floodlight and attempt onboarding again.
8. Check the status of the Floodlight in the Arlo account (App or Web) under **Device Settings**.
9. Check the status of the Floodlight in the **CS Diag Tool**.
10. Get a **screenshot** of the error message in the Arlo account.
11. Note the **approximate time** of the issue in PST/CEST.

Collect Logs:

1. Collect Base Station/SmartHub logs from the CS Diag Tool.
 - If the Base Station/SmartHub is offline, collect the logs when the device is back online and attach them to the case
2. Collect logs from the applicable app:
 - [How to collect Arlo iOS app logs \(INTERNAL\)](#)
 - [How to collect Arlo Android app logs \(INTERNAL\)](#)

EXTERNAL KB

TROUBLESHOOTING

Arlo can't discover my Base Station during installation; what do I do?

Arlo can't discover my Base Station during installation; what do I do?

This article applies to:

[VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#)

This article is for Arlo Base Stations with three LEDs. If you have an Arlo Base Station or SmartHub with one LED, visit: [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)

If Arlo was unable to locate your Arlo Base Station, follow these steps.

To troubleshoot Base Station discovery problems:

1. Unplug the power adapter of your Base Station and make sure the ethernet cable is connected.
2. Begin the installation process again, but make sure you connect the Base Station to your **router** *before* you power on the Base Station.
 - For more information about connecting the Base Station, visit: [How do I connect my Arlo SmartHub or Base Station to the Internet?](#)
3. If Arlo still cannot discover the Base Station, check the color of the Internet LED on the Base Station:
 - If the **Internet LED is solid or blinking Green** - the Base Station is connected to the Internet.

- If the Base Station is still undiscoverable, make sure that the mobile device is on the same network as your Base Station.
- If the **Internet LED is solid Amber** - there is a network connection problem. Make sure the ethernet cable is securely plugged into the Base Station.
 - Confirm the Internet is working by testing another device.
Reboot your Base Station after making network adjustments.
- If the **Internet LED is Off** – the Base Station is not connecting to the router.
 - Try connecting to a different port on the router and make sure the ethernet cable is working and is securely plugged in. Try using another ethernet cable.
- 4. If you are using a Mesh system, make sure the Base Station is **connected to the main router** during installation.
- 5. **Factory reset** the device.
 - Press and hold the **Reset** button on the back of the Base Station for 10 seconds using a paper clip or pen until the LEDs blink Amber.
 - Once the LED light stops blinking, the Base Station reboots and the device is removed from the Arlo account.
 - Re-onboard the Base Station once the Internet LED light turns solid Green.
 - For more information, visit: [How can I factory reset my Arlo SmartHub or Base Station?](#)
- 6. If you completed these troubleshooting steps and Arlo was unable to discover your Base Station, contact [Arlo Support](#) to speak to an expert.

Last Updated: 04/25/2024 | Article ID: 000062690

Arlo can't discover my SmartHub or Base Station during installation; what do I do?

Arlo can't discover my SmartHub or Base Station during installation; what do I do?

This article applies to:

This article is for Arlo SmartHubs and Base Stations with one LED. If you have an Arlo Base Station with three or more LEDs, visit: [Arlo can't discover my Base Station during installation; what do I do?](#)

- If Arlo was unable to locate the Arlo SmartHub or Arlo Base Station, follow the steps below.

To troubleshoot Arlo SmartHub or Base Station discovery problems:

1. Unplug the power adapter of your Arlo SmartHub or Base Station and make sure the ethernet cable is connected.
2. Begin the installation process again, but make sure to connect the Arlo SmartHub or Base Station to your router **before you power on the SmartHub or Base Station**.

For more information about connecting your Arlo Base Station, visit: [How do I connect my Arlo SmartHub or Base Station to the Internet?](#)

3. If Arlo still cannot discover the Arlo SmartHub or Base Station, check the color of the Internet LED on the Arlo SmartHub or Base Station:
 - If the **Internet LED is Solid Blue** - the Arlo SmartHub or Base Station is connected to the internet.
 - If the **Internet LED is Solid Amber** - there is a network connection problem.
 - Make sure the ethernet cable is securely plugged into the Arlo SmartHub or Base Station.
 - Confirm the Internet is working by testing another device.

- Reboot the Arlo SmartHub or Base Station after making network adjustments.
- If the **Internet LED is alternating Blue and Amber** - the Arlo SmartHub or Base Station is updating its firmware.
 - Wait until the update is done before trying again.
- 4. **Make sure the router is operating correctly.**
 - Confirm the router is operational by accessing the Internet using other devices.
 - If you are using a Mesh system, make sure the Arlo SmartHub or Base Station is connected to the main router during installation.
- 5. **Factory reset the device.**
 - Press and hold the **Reset** button located at the back of the Arlo SmartHub or Base Station for 10 seconds using a paper clip or pen until the LED blinks Amber.
 - Once the LED stops blinking, the Arlo SmartHub or Base Station will reboot.
 - Readd the Arlo SmartHub or Base Station to your system when the LED turns Blue.
 - For more information, visit: [How do I factory reset my Arlo SmartHub or Base Station?](#)

If you completed these troubleshooting steps and Arlo was unable to discover your Arlo SmartHub or Base Station, contact [Arlo Support](#).

Last Updated: 05/17/2024 | Article ID: 1179130

What to do when your Arlo camera will not sync to a SmartHub or Base Station during an install or setup

What to do when your Arlo camera will not sync to a SmartHub or

Base Station during an install or setup

This article applies to:

*This article is for the Arlo Secure App with **Library**. If you have the Arlo Secure App with **Feed**, visit: [What to do when your Arlo camera will not sync to a SmartHub or Base Station during an install or setup - Arlo Secure 4.0](#)*

When you are setting up or adding a camera to your Arlo system, a camera might occasionally fail to sync with your SmartHub or Base Station. Make sure you are meeting the minimum requirements for your Arlo system to operate. Ensure the camera is compatible with your SmartHub or Base Station. Not all Arlo cameras work with SmartHubs or Base Stations and some cameras have the option to connect directly to a Wi-Fi router. For more information visit:

- [What are the minimum requirements for installing and using my Arlo system?](#)
- [Arlo SmartHub and Base Station Compatibility](#)
- [What are the benefits of using an Arlo SmartHub or Base Station?](#)

If you are having trouble connecting cameras directly to a Wi-Fi router, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)

For successful camera connection to an Arlo SmartHub or Base Station:

- Make sure the SmartHub or Base Station is [installed and operational](#).
- Check the [camera battery](#) for sufficient charge.
- Sync [one camera at a time](#) to the SmartHub or Base Station.
- If you perform all the steps properly and you still experience issues, you may need to perform a [factory reset](#).

Review the following details to troubleshoot issues with a camera setup to a SmartHub or Base Station:

Check the SmartHub or Base Station status

You must add the SmartHub or Base Station to your Arlo system before you can sync any cameras to it.

If you do not have an Arlo SmartHub or Base connected to your Arlo account:

1. Launch the Arlo Secure App.
2. Tap **Add New Device**.
3. Tap **Base Station/Hub** and follow the instructions in the app.

If Arlo is unable to discover your SmartHub or Base Station during installation, visit:

- Arlo Base Stations with three LEDs: [Arlo can't discover my Base Station during installation; what do I do?](#)
- Arlo SmartHubs and Base Stations with one LED: [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)

If your SmartHub or Base Station is offline, cameras cannot sync to it.

To check your SmartHub or Base Station status:

1. Launch the Arlo Secure App or log in to your account at my.arlo.com.
2. Tap or click **Settings > My Devices**.
3. Select your SmartHub or Base Station.

Your SmartHub or Base Station Device Settings display with status.

For more information about SmartHub or Base Station status, visit: [What do the LEDs on my Arlo SmartHub or Base Station mean?](#)

If your SmartHub or Base Station is offline, visit:

- [My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?](#)

Check the camera battery

Low batteries can prevent your camera from syncing to the SmartHub or Base Station.

If the camera LED is blinking amber, the camera battery may be low. For more information, visit:

[What do the different LED behaviors on my Arlo camera mean?](#)

Try charging the Arlo camera battery for 30 minutes and then reattempt the sync process.

Correctly sync the camera to the SmartHub or Base Station

Sync one camera at a time to the SmartHub or Base Station.

To properly sync the camera, visit: [How to set up Arlo Cameras](#)

Note: Make sure to select an Arlo SmartHub or Base Station to add the camera to. If you select *Connect without SmartHub*, the camera will be connected to your Wi-Fi router instead of a SmartHub or Base Station.

If your Arlo camera is currently set up and directly connected to a Wi-Fi router, and you want to switch to a SmartHub or Base Station connection, visit: [How do I connect my Arlo doorbell or camera to a SmartHub or Base Station?](#)

Factory Reset

If you tried all the steps above and you are still having issues getting the camera synced to a SmartHub or Base Station, **factory reset the camera**.

- To factory reset Arlo Pro 3, Pro 4, Ultra, Essential, Essential Spotlight, Essential Spotlight XL, Pro 3 Floodlight and Go 2, visit: [How do I factory reset and re-sync my Arlo camera?](#)
- To factory reset Arlo Essential Indoor, visit: [How do I factory reset my Arlo Essential Indoor Camera?](#)
- To factory reset Arlo Essential Video Doorbells, visit: [How do I reset my Arlo Essential Video Doorbell](#)

If you are still having problems **factory reset the SmartHub or Base Station**.

Note: All devices paired to the SmartHub or Base Station must also be reset and re-added to your Arlo account.

- To factory reset a SmartHub or Base Station, visit: [How can I factory reset my Arlo SmartHub or Base Station?](#)

If you tried all of these troubleshooting options and you still cannot sync your Arlo camera to your SmartHub or Base Station, visit [Arlo Support](#) to speak with an expert.

What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router

What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router

This article applies to:

[AVD2001](#) [AVD1001](#) [AC2001](#) [AC1001](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#)
[VMC3040](#) [VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App with **Library**. If you have the Arlo Secure App with **Feed**, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0](#)*

Use the following troubleshooting if you attempted to connect your Arlo device **directly to a Wi-Fi router** and Arlo failed to discover the device.

- If you are connecting your Arlo device to a SmartHub or Base Station, visit: [What to do when your Arlo camera will not sync to a Base Station or SmartHub during an install or setup](#)

To troubleshoot Wi-Fi discovery for your Arlo device:

Make sure you are connecting your Arlo device to a 2.4 GHz Wi-Fi network.

- Your Arlo device can only connect to a 2.4 GHz band, not a 5 GHz band.

- Make sure your phone or mobile device is connected to the same 2.4 GHz network that you are trying to connect your camera to.
- For more information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)

Make sure you typed the correct Wi-Fi network SSID (network name) and password, and that your Arlo device is within range of your Wi-Fi router.

- The network SSID and password are case-sensitive and must be EXACTLY correct.
- You can tap the password eye icon to view your password before submitting.
- During setup, place your camera within 10-15 feet (3-4.5 meters) of your Wi-Fi router.
- After the camera is set up and connected, you can move the camera farther away, keeping it within range of your Wi-Fi router.

Make sure the camera LED is blinking blue while the camera is being discovered.

Note: The Arlo Video Doorbell LED ring blinks white.

- The camera LED can time out if it blinks longer than two minutes without successfully connecting to your Wi-Fi network.
- If the camera times out, press the sync button again.
- Make sure the LED blinks blue for the entirety of the connection process.

Make sure you heard the chime noise when your camera scanned the QR code.

- After scanning the QR code, you must hear a chime noise from the camera to continue the onboarding process.
 - Do not continue until the QR code is scanned, and you hear a chime.
- For help, visit: [My Arlo camera will not scan the QR code during setup](#)

Verify that you are within range of your mobile network.

- For portable Arlo products like Go series cameras, make sure there is an activated SIM card inserted into the camera.
- Also ensure the camera is in range of your mobile network.

Ensure you are not using a VPN on your mobile device.

- If a VPN is used, disable the VPN connection.

If you have checked and verified all of the above, factory reset your Arlo device.

- For assistance, visit: [How to factory reset Arlo devices](#)

Last Updated:07/12/2024 | Article ID: 000062406

What to do when your Arlo camera will not sync to an Arlo SmartHub or Base Station during an install or setup - Arlo Secure 4.0

What to do when your Arlo camera will not sync to an Arlo SmartHub or Base Station during an install or setup - Arlo Secure 4.0

This article applies to:

*This article is for the Arlo Secure experience with **Feed**. If you have the Arlo Secure experience with **Library**, visit: [What to do when your Arlo camera will not sync to a SmartHub or Base Station during an install or setup](#)*

When you are setting up or adding a new Arlo wire-free camera to your system, a camera might occasionally fail to sync with your Arlo SmartHub or Base Station. An Arlo camera cannot be detected by your system until it is successfully synced to an Arlo SmartHub or Base Station.

- Make sure the camera is compatible with your Arlo SmartHub or Base Station: [Arlo SmartHub and Base Station Compatibility](#)
- If you are having trouble connecting cameras directly to a Wi-Fi router, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0](#)
- If your Arlo camera is currently set up and directly connected to a Wi-Fi router, and you want to switch to an Arlo SmartHub or Base Station connection, visit: [How do I connect my Arlo doorbell or camera to a SmartHub or Base Station?](#)

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the Need Help? button in the Arlo Secure App or on my.arlo.com.

- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

For successful camera connection to an Arlo SmartHub or Base Station:

- Make sure the Arlo SmartHub or Base Station is installed and operational.
 - For more information, visit: [How do I connect my Arlo SmartHub or Base Station to the Internet? - Arlo Secure 4.0](#)
- Check the camera battery for sufficient charge.
- Sync one camera at a time to the Arlo SmartHub or Base Station.

Sync the Camera to the Arlo SmartHub or Base Station

- To properly sync the camera, visit: [How to set up Arlo Cameras - Arlo Secure 4.0](#)
- Make sure you are installing the camera to the correct Location within the Arlo Secure App.
 - For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)
- Make sure to select an Arlo SmartHub or Base Station to add the camera to.
 - If you select *Connect without SmartHub*, the camera will be connected to your Wi-Fi router instead of an Arlo SmartHub or Base Station.

- Place the camera 3 to 10 feet (1 to 3 meters) from the Arlo SmartHub or Base Station during the sync process.
 - The sync process does not work if the camera is too far away from the Arlo SmartHub or Base Station.
- If you're using a single-LED Arlo SmartHub, you do not need to press a Sync button.
 - If the **blue** LED is blinking rapidly, your Arlo SmartHub is syncing with the camera.
- If you're using a multi-LED Arlo Base Station, press the **Sync** button.
 - If the LED above the camera icon is rapidly blinking **green**, your Arlo Base Station is syncing with your camera.
 - If the Sync button on the Arlo Base Station is pressed for too long, the LED blinks **amber**. If this happens, wait 15 minutes and then try the sync process again.
- For more information, visit: [What do the LEDs on my Arlo SmartHub or Base Station mean?](#)

Once your Arlo SmartHub or Base Station starts to search for your camera, you may need to take additional steps:

- Arlo Ultra series, Arlo Pro 3, Arlo Pro 4, Arlo Pro 5S, and Arlo Pro 3 Floodlight cameras should begin to sync when the battery is inserted.
 - You do not need to press the Sync button if the **blue LED is blinking slowly**.
 - If the **blue LED is blinking rapidly**, your camera is syncing with the Arlo SmartHub or Base Station.
- Essential Wire-Free series cameras may need to be turned on initially by pressing the Sync button.
 - You do not need to press the Sync button if the **blue LED is blinking slowly**.
 - If the **blue LED is blinking rapidly**, your camera is syncing with the Arlo SmartHub or Base Station.
- Arlo Pro, Arlo Pro 2, Arlo Essential Indoor, and Arlo Wire-Free (VMC3030) require a Sync button press on the camera to begin syncing.

- If the **blue LED is blinking rapidly**, your camera is syncing with the Arlo SmartHub or Base Station.

Repeat the process for each camera that you want to sync:

- You must sync each camera individually.
- Multiple cameras cannot be synced at the same time.

Check the Camera Battery Status:

Low batteries can prevent your camera from syncing to the Arlo SmartHub or Base Station.

If the battery is low, the battery icon is orange:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select your camera.
4. Tap .

Your battery status displays on the Device Settings page.

Check the Arlo SmartHub or Base Station Status:

If you do not see the Arlo SmartHub or Base Station, you must add the Arlo SmartHub or Base Station to your system before you can sync any cameras to it.

If your Arlo SmartHub or Base Station is deactivated, cameras cannot sync to it.

For more information, visit: [How do I connect my Arlo SmartHub or Base Station to the Internet? - Arlo Secure 4.0](#)

To check the Arlo SmartHub or Base Station status:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. The Device card for your Arlo SmartHub or Base Station will display Online or Offline.

Factory Reset

If you continue to have issues getting the camera synced to your Arlo SmartHub or Base Station, try factory resetting the camera, Arlo SmartHub, or Base Station.

For more information, visit: [How to factory reset Arlo devices](#)

For further assistance, contact [Arlo Support](#).

Last Updated: 10/07/2024 | Article ID: 000062886

What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0

What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0

This article applies to:

[AVD2001](#) [AVD1001](#) [AC2001](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [VML2030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App with **Feed**. If you have the Arlo Secure App with **Library**, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)*

Use the following troubleshooting if you attempted to connect your Arlo device directly to a Wi-Fi router and Arlo failed to discover the device.

- If you are connecting your Arlo device to a SmartHub or Base Station, visit: [What to do when your Arlo camera will not sync to a Base Station or SmartHub during an install or setup - Arlo Secure 4.0](#)

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the **Need Help?** button in the Arlo Secure App or on [my.arlo.com](#).

- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To troubleshoot Wi-Fi discovery:

Check for potential issues with your Wi-Fi network.

- For more information, visit: [How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?](#)

Make sure you are connecting your Arlo device to a 2.4 GHz Wi-Fi network.

- Most Arlo devices can only connect to a 2.4 GHz band. For Arlo Pro 5S, this device works with 2.4GHz and 5GHz bands after installation is complete on 2.4GHz.
- For more information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)

Make sure your phone or mobile device is connected to the same 2.4 GHz network that you are trying to connect your camera to.

- For more information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)

Make sure you typed the correct Wi-Fi network SSID (network name) and password.

- The network SSID and password are case-sensitive and must be EXACTLY correct.
- You can tap the password eye icon to view your password before submitting.

Ensure your mobile device and Arlo camera are within the Wi-Fi signal range of your Wi-Fi router.

- During setup, we recommend placing your camera within 10-15 feet (3-4.5 meters) of your Wi-Fi router.
- After the camera is set up and connected, you can move the camera anywhere within range of your Wi-Fi router.

Make sure the camera LED is blinking blue while the camera is being discovered.

Note: The Arlo Video Doorbell LED ring blinks white.

- The camera LED can time out if it blinks longer than two minutes without successfully connecting to your Wi-Fi network.
 - If the camera times out, press the sync button again.

- Make sure the LED blinks blue for the entirety of the connection process.

Make sure you heard the chime noise when your camera scanned the QR code.

- After scanning the QR code, you must hear a chime noise from the camera to continue the onboarding process.
 - Do not continue until the QR code is scanned, and you hear a chime.
- For help, visit: [My Arlo camera will not scan the QR code during setup](#)

Verify that you are in range of your mobile network.

- For portable Arlo products like Go series cameras, make sure there is an activated SIM card inserted into the camera.
- Also ensure the camera is in range of your mobile network.

Ensure you are not using a VPN on your mobile device.

- If a VPN is used, disable the VPN connection.

If you have checked and verified all of the above, factory reset your Arlo device.

- For assistance, visit: [How to factory reset Arlo devices](#)

Last Updated: 10/07/2024 | Article ID: 000062924

What to do when Arlo is unable to discover your device during installation on a mesh network system

What to do when Arlo is unable to discover your device during installation on a mesh network system

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMB3500](#) [VMB3000](#) [VMB3010](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2040](#)
[VMC2030](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

A mesh network system consists of a main router that connects directly to your modem with a series of satellite modules placed around your house for full Wi-Fi coverage. Instead of being limited by the distance from your router or having to log in to an extender, they are all part of a single wireless network and share the same SSID and password. A mesh network is a better option than a Wi-Fi extender if you have a large home. A mesh network will improve your Wi-Fi range, connectivity, and stability.

If you are unable to connect your Arlo device to the mesh network system, try the following:

Check for potential issues with your Wi-Fi network.

- For more information, visit: [How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?](#)

Make sure all cables are secure and properly connected.

- If you are using an Arlo SmartHub or Base Station, make sure your Ethernet cables are correctly connected to the main router.

Install the Arlo camera with the camera in close range of the main router.

- You may move the camera to its desired location once installation is complete.

Try turning off mesh access points temporarily during the installation process.

- You will need to install your camera while it is located close to the main router.
- Remember to turn your mesh access points back on once the Arlo installation is complete.

Make sure your mobile device is on the correct network.

- If your 2.4GHz and 5GHz bands are on the same SSID (network name), try to disable or rename the 5GHz network temporarily.
 - For information on changing your SSID, please contact your router manufacturer for assistance.

- Alternatively, try installing your Arlo device using a computer that is hardwired to the network, if possible.
- The Arlo Pro 5S Camera can connect to both 2.4GHz and 5GHz networks; however, you must connect the Arlo Pro 5S Camera to a 2.4GHz network upon initial setup.
 - For more information, visit: [How does the Arlo Pro 5S Camera use 5GHz Wi-Fi networks?](#)
- You can try moving your device farther away from your mesh access points, while still maintaining a connection to your Wi-Fi and staying near the main router.
 - The 2.4GHz band has greater range than the 5GHz band, so there is a greater chance you are connected to the 2.4GHz band at further distances.
- Band Steering automatically connects your devices to the best available Wi-Fi frequency in your home. Most Wi-Fi modems come with two frequencies (2.4 GHz and 5 GHz) and ask you to choose between them when connecting a device to your home network.
 - Disable Band Steering prior to installing your Arlo device.
 - Upon successful installation and setup, you can re-enable Band Steering.

Note: Contact your router manufacturer for specific Band Steering instructions.

Last Updated:04/30/2024 | Article ID: 000062764

How do I manually sync my Arlo camera to a SmartHub or Base Station?

How do I manually sync my Arlo camera to a SmartHub or Base Station?

This article applies to:

[VMC5040](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#)

You must use the Arlo Secure App to connect your Arlo cameras. If you are connecting an Arlo add-on camera to your account, or if you reached the **manually sync** option during setup, you must manually sync your camera to your Arlo SmartHub or Base Station.

To manually sync Arlo Ultra, Ultra 2, Pro 3, Pro 4, Pro 5S, and Pro 3 Floodlight:

1. Release the Arlo camera from the camera housing.
 - Press the button on the charging port underneath the camera.
 - A clicking sound occurs, and the camera slides partially out of the camera housing.
2. Pull the camera out of the camera housing.
3. Press the **Sync** button underneath your camera.



The LED on the front of the camera blinks blue.

4. Wait for your Arlo camera and Arlo SmartHub to sync.

The LEDs on your Arlo camera and Arlo SmartHub rapidly blink blue when they are syncing.
5. Check your Arlo camera's live stream in the Arlo Secure App to verify that the camera was synced.

Access your camera's live stream by launching the Arlo Secure App or logging in to your Arlo account at my.arlo.com.
6. When instructed, insert the camera into the housing until you feel the camera click into place.

For more information about syncing your Arlo cameras

- For the Arlo Secure App experience with **Feed**, visit: [What to do when your Arlo camera will not sync to a SmartHub or Base Station during an install or setup - Arlo Secure 4.0](#)
- For the Arlo Secure App experience with **Library**, visit: [What to do when your Arlo camera will not sync to a SmartHub or Base Station during an install or setup](#)

Last Updated: 04/24/2024 | Article ID: 000062134

The error "The network name was entered incorrectly" appears when trying to install my Arlo camera; how do I troubleshoot this issue?

The network name was entered incorrectly error appears when trying to install my Arlo camera; how do I troubleshoot this issue?

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

If the **network name was entered incorrectly** error appears when trying to install your Arlo camera, you have entered the incorrect Wi-Fi network SSID name during the installation process.

- This error means you manually entered a Wi-Fi SSID, but no matching Wi-Fi network exists.

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the **Need Help?** button in the Arlo Secure App or on my.arlo.com.


- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To correct the network name error:

1. Tap **Try Again**.

The network name was entered incorrectly.

The network that was entered could not be found by the Camera. There may be issues with network names that use special characters.

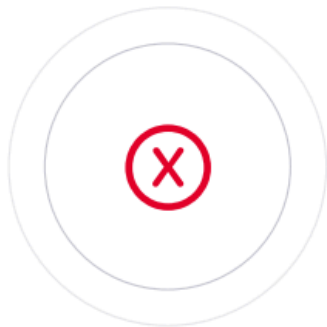

Try Again

Need Help?

2. Verify the correct SSID network.
3. Ensure your mobile device is connected to the same 2.4GHz network.
4. Re-enter or select the correct network name.

The error "No internet network was found" appears when trying to install my Arlo camera; how do I troubleshoot this issue?

The No internet network was found error appears when trying to install my Arlo camera; how do I troubleshoot this issue?

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

The **No internet network was found** error appears when you have successfully connected your Arlo device to the Wi-Fi network, but the device cannot access the Internet.

- This error means you successfully connected to a 2.4GHz Wi-Fi network with a correct password but your internet service is down.

Need Help?


- If you need help installing your new Arlo device, you can reach Arlo Support via the **Need Help?** button in the Arlo Secure App or on my.arlo.com.
- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To correct the "No internet network was found" error:

1. Tap **Try Again**.

No internet network was found.

The camera could not connect to the network.

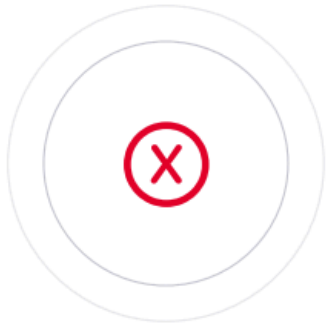

Try Again

Need Help?

2. Verify the correct Wi-Fi network was selected.
3. Ensure you are not using a VPN.
4. Check if other Wi-Fi devices can access the same network.
5. Reboot your internet modem and Wi-Fi router.
6. If the error persists, contact your internet service provider for assistance.

Last Updated: 10/07/2024 | Article ID: 000063166

The error "The Wi-Fi password was entered incorrectly" appears when trying to install my Arlo camera; how do I troubleshoot this issue?

The Wi-Fi password was entered incorrectly error appears when trying to install my Arlo camera; how do I troubleshoot this issue?

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

If the **Wi-Fi password was entered incorrectly** error appears when trying to install your Arlo camera, you have entered the incorrect Wi-Fi password during the installation process.

- This error means the camera tried to connect to the network, but the password was rejected.

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the **Need Help?** button in the Arlo Secure App or on my.arlo.com.


- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To correct the Wi-Fi password error:

1. Tap **Try Again**.

The Wi-Fi password was entered incorrectly.

The password that was entered could not be verified.

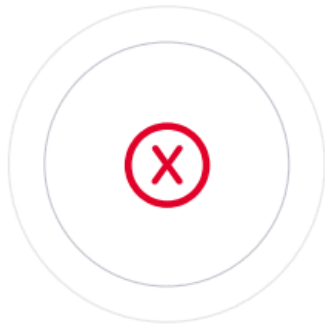

Try Again

Need Help?

2. Verify you are connected to the correct network.
3. Re-enter your password.

Last Updated:10/07/2024 | Article ID: 000063164

The error Camera failed to connect appears when trying to install my Arlo camera; how do I troubleshoot this issue?

The Camera failed to connect error appears when trying to install my

Arlo camera; how do I troubleshoot this issue?

This article applies to:

[FLW2001](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

- The **Camera failed to connect** error appears when the Bluetooth connection fails during the installation process.

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the **Need Help?** button in the Arlo Secure App or on my.arlo.com.


- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To correct the Camera failed to connect error:

1. Tap **Try Again**.

Camera failed to connect.

There was an issue when connecting the Camera.
Please try again.

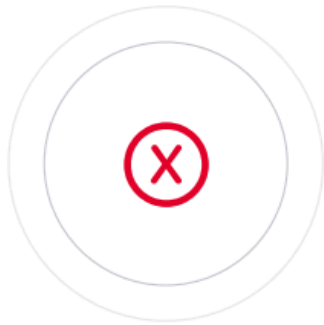

Error Code: [Number]

Try Again

Need Help?

2. Make sure Bluetooth is enabled on your mobile device.
3. Ensure the Bluetooth permission has been granted for the Arlo Secure App.
4. If the blue LED is not flashing on your Arlo device when you are attempting to connect to Bluetooth, press the **Sync** button and try again.
5. If there is no LED on the Arlo device, charge the battery for 30 minutes and reattempt the camera installation.
6. If you are still experiencing issues, try the installation on a different mobile device.
7. If none of the above steps resolve the problem, contact [Arlo Support](#).

How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?

How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?


This article applies to:

[FLW2001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#)
[VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)


The Arlo Wi-Fi Troubleshooting Tool allows you to run a quick scan of your home network and highlight any issue or network configuration that could impact or prevent your Arlo device from working properly.

If Arlo is having issues discovering your Arlo camera or device during initial installation:


1. Tap **NEED HELP?**

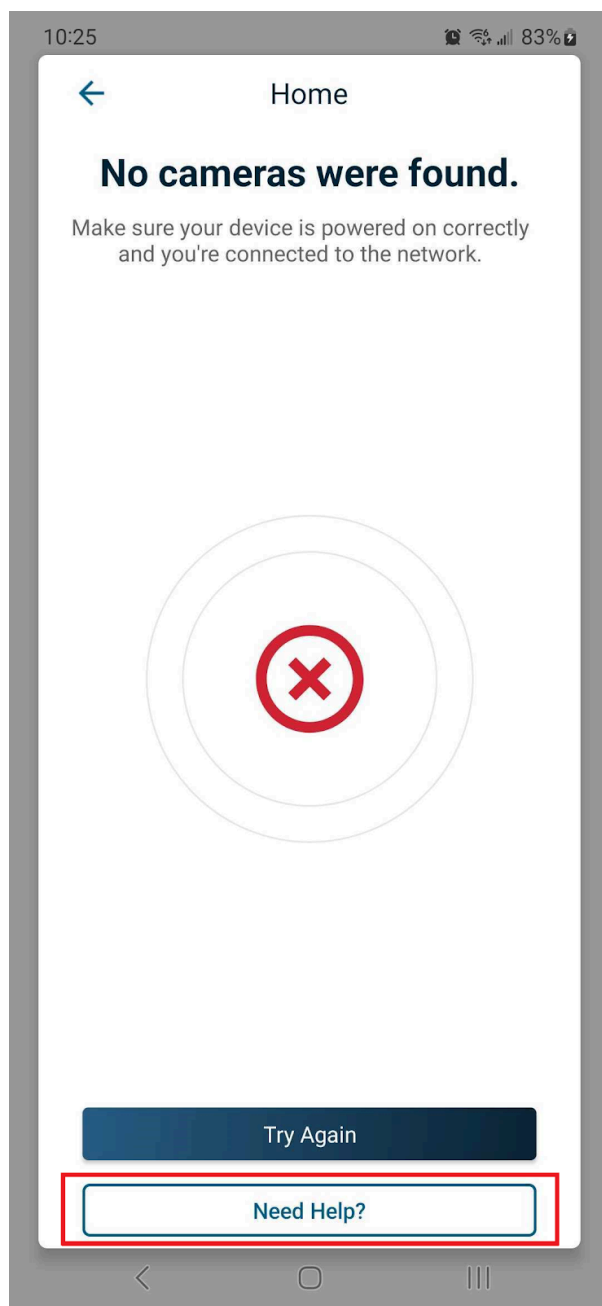


2. Tap **START WI-FI SCAN**.

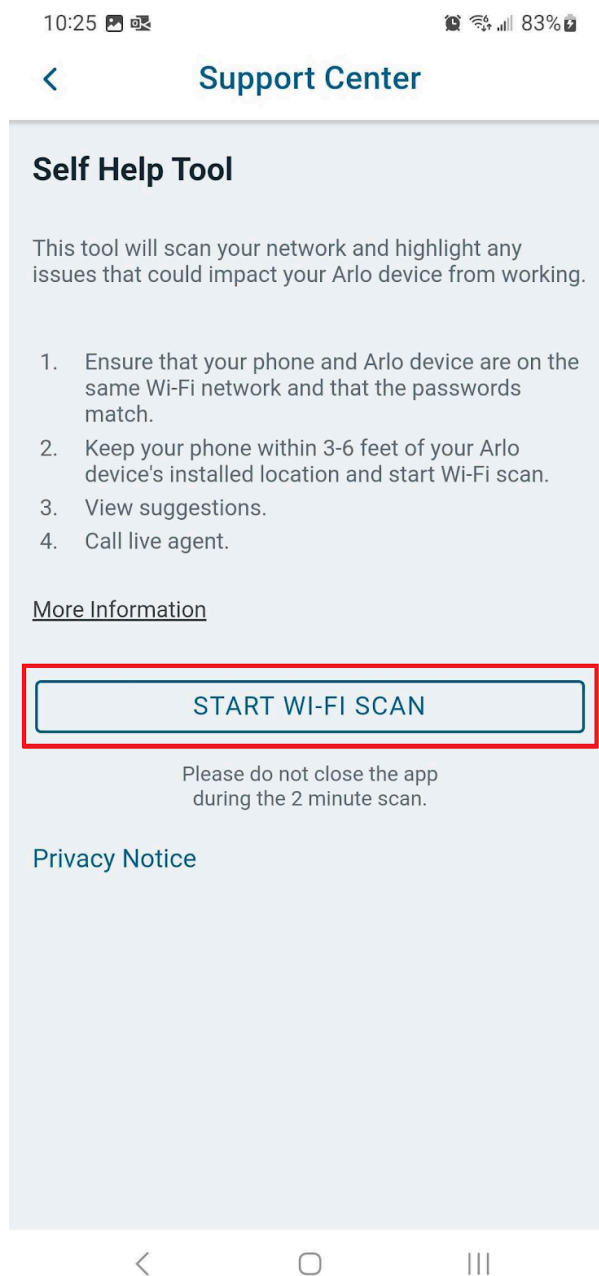


- Do not close the Arlo Secure App while the scan is in progress.

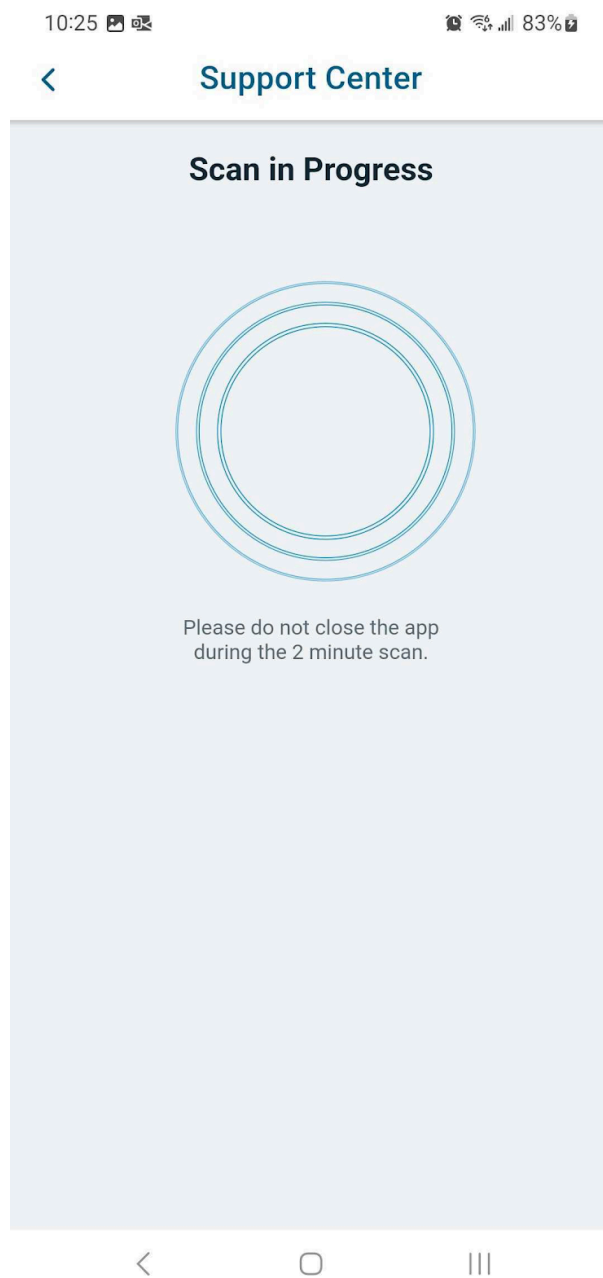


3. Tap **SEE RECOMMENDATIONS** after getting the speed test results.

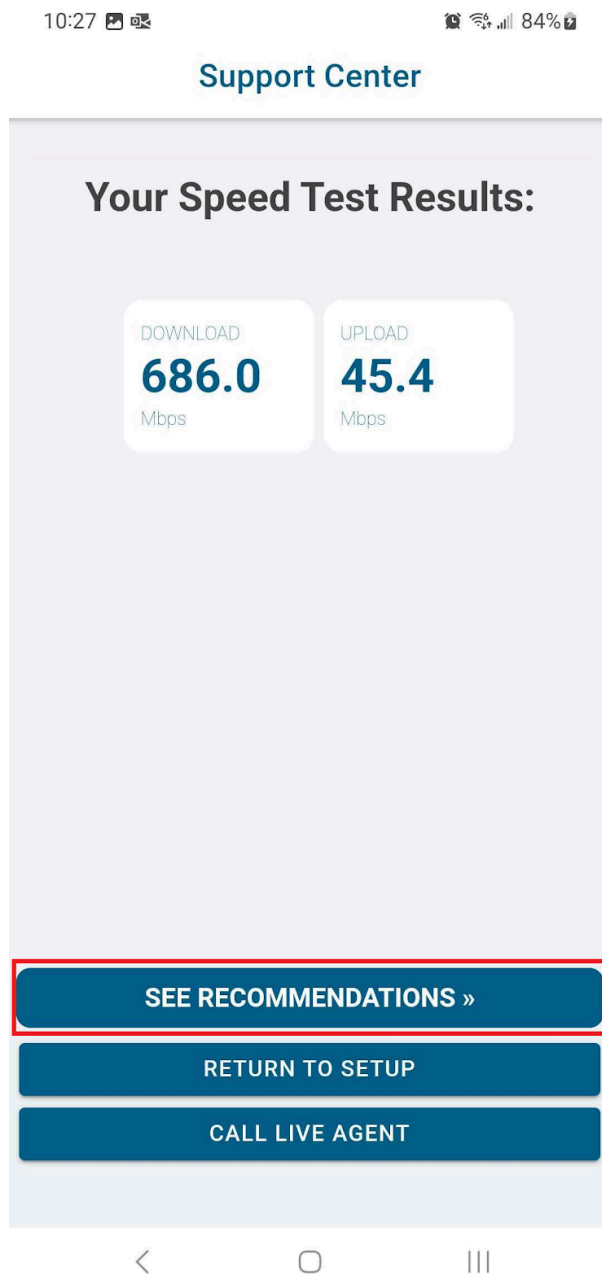

4. Tap the recommendation radio button.

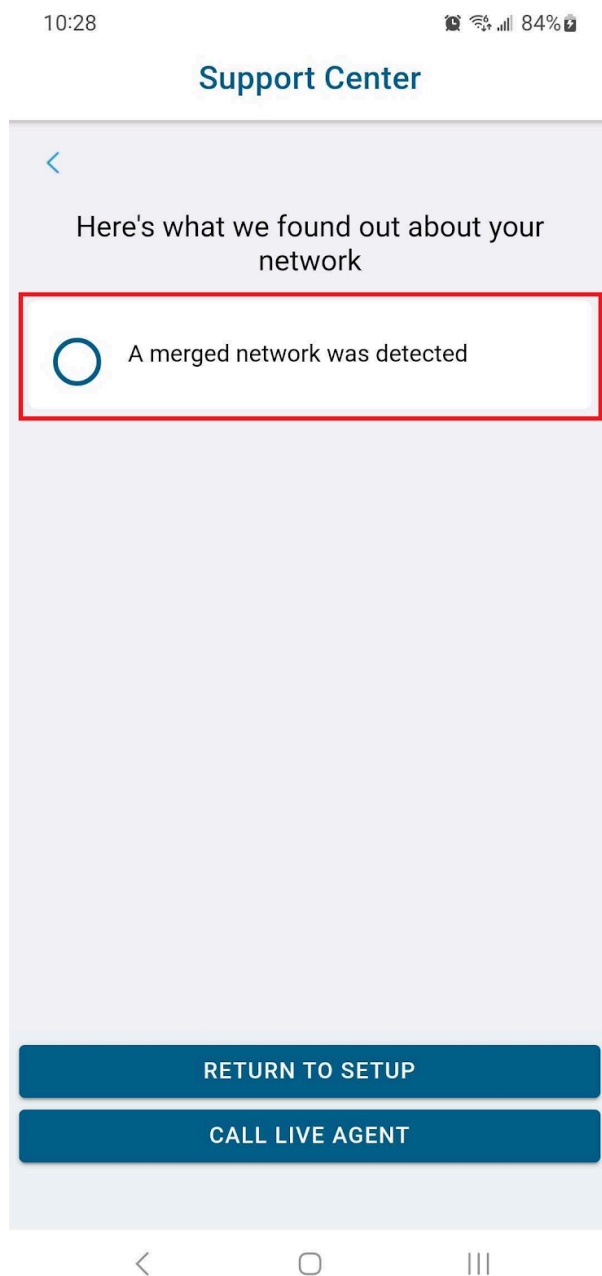

- Follow the suggestions to fix the issue.

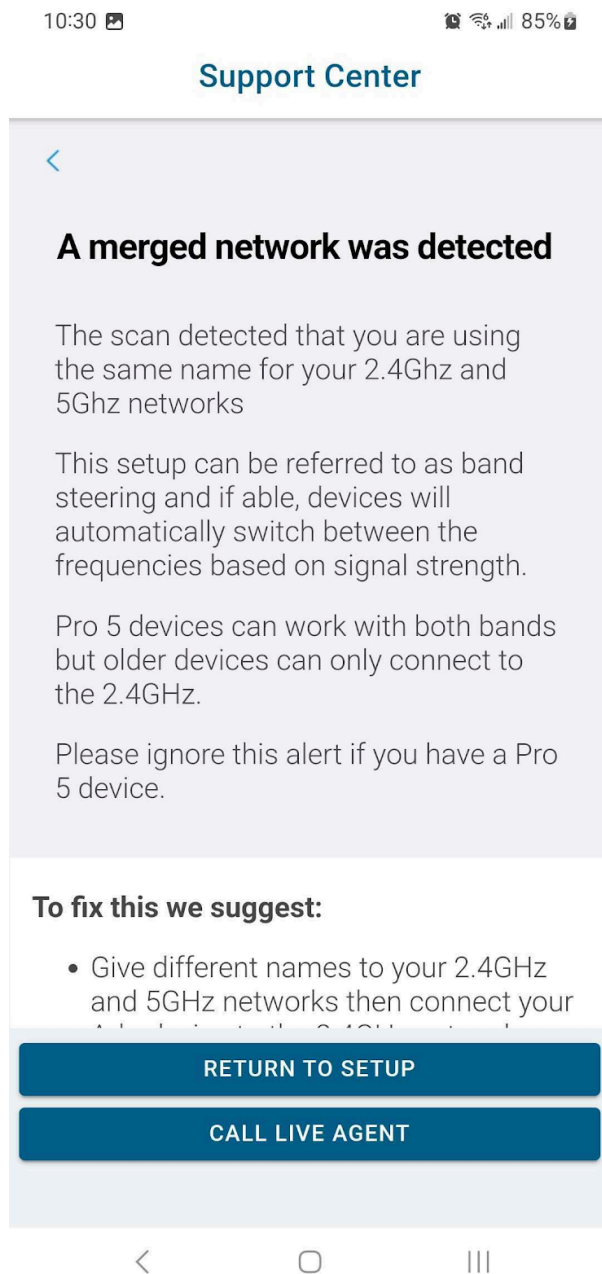

The Arlo Wi-Fi Troubleshooting Tool is also accessible through the Support Center:

For the Arlo Secure App experience with **Feed**:

1. Launch the Arlo Secure App.
2. Tap .
3. Tap **Support Center**.

4. Select your Arlo product.
5. Select the issue and tap **Submit**.
6. Tap **Start Wi-Fi Scan**.
Note: Do not close the Arlo Secure App while scanning is in progress.
7. Tap **While using app** or **Only this time** to allow Arlo to access the device location.
8. Tap **Continue Troubleshooting**.
Note: Tap the troubleshooting guide to view more details.
9. Tap **Return to Setup** to continue installation or **Still Having Issues** to contact Support.
10. Tap **Next**.
11. Tap > in Network Scan to send a report of your Wi-Fi scan or tap **Send Picture** to upload a photo.
Note: You must have an active Arlo Secure subscription or an Arlo trial plan to perform the scan and reach Customer Support.

For the Arlo Secure App experience with **Library**:

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap **Support**.
4. Select your Arlo product.
5. Select the issue and tap **Submit**.
6. Tap **Start Wi-Fi Scan**.
Note: Do not close the Arlo Secure App while scanning is in progress.
7. Tap **While using app** or **Only this time** to allow Arlo to access the device location.
8. Tap **Continue Troubleshooting**.
Note: Tap the troubleshooting guide to view more details.
9. Tap **Return to Setup** to continue installation or **Still Having Issues** to contact Support.
10. Tap **Next**.
11. Tap > in Network Scan to send a report of your Wi-Fi scan or tap **Send Picture** to upload a photo.

Note: You must have an active Arlo Secure subscription or an Arlo trial plan to perform the scan and reach Customer Support.

Last Updated: 11/28/2023 | Article ID: 000063045

The network name was entered incorrectly error appears when trying to install my Arlo camera; how do I troubleshoot this issue?

The network name was entered incorrectly error appears when trying to install my Arlo camera; how do I troubleshoot this issue?

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

If the **network name was entered incorrectly** error appears when trying to install your Arlo camera, you have entered the incorrect Wi-Fi network SSID name during the installation process.

- This error means you manually entered a Wi-Fi SSID, but no matching Wi-Fi network exists.

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the **Need Help?** button in the Arlo Secure App or on my.arlo.com.


- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To correct the network name error:

1. Tap **Try Again**.

The network name was entered incorrectly.

The network that was entered could not be found by the Camera. There may be issues with network names that use special characters.

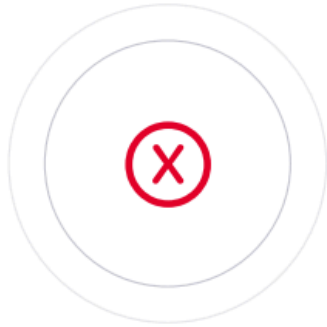

Try Again

Need Help?

2. Verify the correct SSID network.
3. Ensure your mobile device is connected to the same 2.4GHz network.
4. Re-enter or select the correct network name.

Last Updated:10/07/2024 | Article ID: 000063165

GEN INFO / HOW TO

Arlo SmartHub and Base Station Compatibility

Arlo SmartHub and Base Station Compatibility

This article applies to:

Arlo SmartHubs and Arlo Base Stations create a separate secure network for compatible Arlo cameras and doorbells. For more information, visit: [What are the benefits of using an Arlo SmartHub or Base Station?](#)

All devices on the same Location can communicate with each other and can be configured for cross-triggering. For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

The following devices are **unable to pair** directly with Arlo SmartHubs or Arlo Base Stations:

- Arlo Q
- Arlo Q Plus
- Arlo Baby
- Arlo Go
- Arlo Go 2
- Arlo Bridge
- Arlo Security Light
- Arlo Chime
- Arlo Chime 2
- Arlo All-in-One Sensor
- Arlo Keypad Sensor Hub
- Arlo Cellular and Battery Backup
- Arlo Wire-Free Outdoor Siren
- Arlo Video Doorbell HD (2nd Generation)
- Arlo Video Doorbell 2K (2nd Generation)
- Arlo Essential Indoor Camera HD (2nd Generation)
- Arlo Essential Indoor Camera 2K (2nd Generation)
- Arlo Essential Outdoor Camera HD (2nd Generation)
- Arlo Essential Outdoor Camera 2K (2nd Generation)

- Arlo Essential XL Outdoor Camera HD (2nd Generation)
- Arlo Essential XL Outdoor Camera 2K (2nd Generation)

Compatible devices for each Arlo SmartHub and Arlo Base Station are listed below:

Arlo SmartHubs

VMB5000



- **Compatible with:**
 - Arlo Ultra 2
 - Arlo Ultra
 - Arlo Pro 5S
 - Arlo Pro 4
 - Arlo Pro 3
 - Arlo Pro 3 Floodlight Camera
 - Arlo Pro 2
 - Arlo Pro
 - Arlo Essential Video Doorbell (Wired)
 - Arlo Essential Video Doorbell (Wire-Free)
 - Arlo Essential Indoor Camera

- Arlo Essential Camera
- Arlo Essential Spotlight Camera
- Arlo Essential XL Spotlight Camera
- Arlo Wire-Free Camera
- Arlo Audio Doorbell
- **Maximum streaming resolution:** 4K with a compatible Arlo camera
- **Local storage:** microSD cards, microSDHC, or microSDXC; up to class 10 UHS-3 V90
- **Integrated siren:** No
- **Additional specifications:**
 - Wi-Fi - Frequency: 2.4 GHz/5GHz - Range: 300 feet line of sight
 - MicroSD slot for local storage
 - Ethernet interface port
 - Status LED
 - IP Configuration DHCP
 - Internal antenna

VMB4540



- **Compatible with:**
 - Arlo Ultra 2

- Arlo Ultra
- Arlo Pro 5S
- Arlo Pro 4
- Arlo Pro 3
- Arlo Pro 3 Floodlight Camera
- Arlo Pro 2
- Arlo Pro
- Arlo Essential Video Doorbell (Wired)
- Arlo Essential Video Doorbell (Wire-Free)
- Arlo Essential Indoor Camera
- Arlo Essential Camera
- Arlo Essential Spotlight Camera
- Arlo Essential XL Spotlight Camera
- Arlo Wire-Free Camera
- Arlo Audio Doorbell
- **Maximum streaming resolution:** 4K with a compatible Arlo camera
- **Local storage:** USB Type A, 2.0 compatible
- **Integrated siren:** No
- **Additional specifications:**
 - Wi-Fi - Frequency: 2.4GHz - Range: 300 feet line of sight
 - USB slot for local storage
 - Ethernet interface port
 - Status LED
 - IP Configuration DHCP
 - Internal antenna

Arlo Base Stations

VMB4500



- **Compatible with:**
 - Arlo Ultra 2
 - Arlo Ultra
 - Arlo Pro 5S
 - Arlo Pro 4
 - Arlo Pro 3
 - Arlo Pro 3 Floodlight Camera
 - Arlo Pro 2
 - Arlo Pro
 - Arlo Essential Video Doorbell (Wired)
 - Arlo Essential Video Doorbell (Wire-Free)
 - Arlo Essential Indoor Camera
 - Arlo Essential Camera
 - Arlo Essential Spotlight Camera
 - Arlo Essential XL Spotlight Camera
 - Arlo Wire-Free Camera
 - Arlo Audio Doorbell
- **Maximum streaming resolution:** 4K with a compatible Arlo camera
- **Local storage:** USB Type A, 2.0 compatible
- **Integrated siren:** 90 dB
- **Additional specifications:**

- Wi-Fi - Frequency: 2.4GHz - Range: 300 feet line of sight
- Ethernet interface port
- Status LED
- IP Configuration DHCP
- Internal antenna

VMB4000



- **Compatible with:**

- Arlo Ultra 2
- Arlo Ultra
- Arlo Pro 5S
- Arlo Pro 4
- Arlo Pro 3
- Arlo Pro 3 Floodlight Camera
- Arlo Pro 2
- Arlo Pro
- Arlo Essential Video Doorbell (Wired)
- Arlo Essential Video Doorbell (Wire-Free)
- Arlo Essential Indoor Camera
- Arlo Essential Camera
- Arlo Essential Spotlight Camera
- Arlo Essential XL Spotlight Camera

- Arlo Wire-Free Camera
- Arlo Audio Doorbell
- **Maximum streaming resolution:** 4K with a compatible Arlo camera
- **Local storage:** USB Type A, 2.0 compatible
- **Integrated siren:** 100 dB
- **Additional specifications:**
 - Wi-Fi - Frequency: 2.4GHz 802.11n - Range: 300 feet line of sight
 - Ethernet interface port
 - Indicator LEDs: - Power - Internet - Camera
 - IP Configuration DHCP
 - Internal antenna
 - Processor & Memory: - 900MHz ARM Cortex A7 - 128MB flash; 128MB RAM

VMB3500



- **Compatible with:**
 - Arlo Pro 2
 - Arlo Pro
 - Arlo Wire-Free Camera
 - Arlo Audio Doorbell
- **Maximum streaming resolution:** 1080p with a compatible Arlo camera
- **Local storage:** No
- **Integrated siren:** No

VMB3000



- **Compatible with:**
 - Arlo Pro 2
 - Arlo Pro
 - Arlo Wire-Free Camera
 - Arlo Audio Doorbell
- **Maximum streaming resolution:** 1080p with a compatible Arlo camera
- **Local storage:** No
- **Integrated siren:** No
- **Additional specifications:**
 - Wireless: Frequency: 2.4GHz 802.11n
 - Range: 300 feet line of sight
 - Fast Ethernet interface port
 - Indicator LEDs: Power - Internet - Camera - Smart Home - USB
 - IP Configuration DHCP
 - Internal antenna
 - Processor & Memory: - 500MHz MIPS 74K processor - 128MB flash; 128MB RAM

How to add an additional Arlo device to an existing Arlo system

How to add an additional Arlo device to an existing Arlo system

This article applies to:

The number of devices you can add to your Arlo system may depend on the type of device and Arlo plan status. For more information, visit: [What are the available Arlo subscription plans and how much cloud recording is available?](#)

To add a new Arlo device to your existing Arlo account:

For the Arlo Secure App experience with **Feed**:

1. Launch the Arlo Secure App.
2. Tap **Devices**.

Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Select the Arlo device you want to add.
5. Select the Arlo model.
6. Follow the in-app instructions to add the new Arlo device to your system.

For the Arlo Secure App experience with **Library**:

1. Launch the Arlo Secure App.
2. Scroll down and tap **Add New Device**.
3. Select the Arlo device you want to add.
4. Select the Arlo model.
5. Follow the in-app instructions to add the new Arlo device to your system.

What are the minimum requirements for installing and using an Arlo system?

What are the minimum requirements for installing and using an Arlo system?

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AAD1001](#) [SH1001](#) [MS1001](#) [VMB5000](#)
[VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VMC3030](#)
[VMC3040](#) [VMC3040S](#) [ABC1000](#)

- To install and use an Arlo system, you must have a high-speed internet connection and meet the requirements listed below.

Connectivity Requirements

All Arlo cameras require a high-speed internet connection, but each Arlo camera uses a different amount of bandwidth. Bandwidth use is measured on a per-camera basis. If you have multiple Arlo cameras on the same network, you can estimate the total bandwidth use of your entire Arlo system by adding the average bandwidth use of each camera.

Your Arlo system requires the following:

- A high-speed internet connection that can sustain the following average bandwidth use per Arlo device:
 - **Arlo Ultra Series:** 3 Mbps upload per camera
 - **Arlo Pro Series** (Pro 3 and newer): 2 Mbps upload per camera
 - **Arlo Wired Floodlight Camera:** 2 Mbps upload per camera

- **Arlo Video Doorbells:** 2 Mbps upload per Video Doorbell
- **Arlo Essential 2nd Generation Cameras:** 2 Mbps upload per camera
- **All other Arlo cameras:** 1 Mbps upload per camera
- For Arlo SmartHub or Arlo Base Station connections, a router with an available Ethernet port is required.
- For direct to Wi-Fi connections, a Wi-Fi router with a 2.4GHz band is required.
- For Arlo Essential 2nd Generation devices, a Bluetooth capable mobile device is required for the installation process.
- The Arlo Wired Floodlight Camera requires a 100-240V AC 50-60 Hz hardwired power source.

Arlo works with the minimum requirements, but the functionality and video quality might be negatively affected.

- With a lower upstream bandwidth, there is a greater possibility that video quality might be pixelated and unclear.
- You might also experience a delay in starting a live stream.

Arlo Secure App Requirements

The Arlo Secure App requires:

- **iOS version 15** or higher for Apple devices
- **Android version 8** or higher for Android devices

Note: If you use Arlo on an earlier OS version than the minimum versions listed, Arlo systems and devices might not function as expected.

To download the Arlo Secure App to your mobile device, go to the App Store® on your iOS device, or Google Play on your Android device and search for **Arlo Secure**.

You can also download the Arlo Secure App by tapping or clicking the appropriate button below:

- App Store® is a registered trademark of Apple Inc.

- Google Play and the Google Play logo are trademarks of Google LLC.

Arlo Web Portal Requirements

The Arlo web portal requires a computer running Windows or macOS and the most current version of one of the following web browsers:

- Chrome on Windows or macOS
- Firefox on Windows or macOS
- Microsoft Edge on Windows
- Safari on macOS

Last Updated: 10/03/2024 | Article ID: 000062043

How do I connect my Arlo device directly to a Wi-Fi router?

How do I connect my Arlo device directly to a Wi-Fi router? - Arlo Secure 4.0

This article applies to:

[AVD2001](#) [AVD1001](#) [AC2001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#)
[VMB3010](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2020](#) [VMC2040](#) [VMC2030](#)
[VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How do I connect my Arlo device directly to a Wi-Fi router?](#)*

When you first set up your Arlo camera, you have the option to connect the camera directly to your Wi-Fi router or to an Arlo SmartHub or Base Station. You can use the Arlo Secure App to connect directly to your Wi-Fi router.

To move your Arlo camera from an Arlo SmartHub or Base Station connection to a Wi-Fi router connection, visit: [How do I connect my Arlo device directly to my Wi-Fi router if it is currently connected to a SmartHub or Base Station? - Arlo Secure 4.0](#)

Note: When your Arlo camera is disconnected from an Arlo SmartHub or Base Station, you can no longer store Arlo recordings to a local storage device.

Before you begin:

- Your mobile device must be connected to your 2.4 GHz Wi-Fi network, and you must connect your Arlo camera to the same 2.4 GHz Wi-Fi network.
 - For more information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)
- Arlo Pro 5 cameras must be installed on a 2.4 GHz Wi-Fi first before connecting to a 5 GHz Wi-Fi network. If the SSID and password are the same for your 2.4 GHz and 5 GHz networks, the camera will automatically join both networks during installation.
 - For more information, visit: [How does the Arlo Pro 5S Camera use 5GHz Wi-Fi networks?](#)
- Band Steering automatically connects your devices to the best available Wi-Fi frequency in your home. Most Wi-Fi modems come with two frequencies (2.4 GHz and 5 GHz) and ask you to choose between them when connecting a device to your home network.
 - Disable Band Steering prior to installing your Arlo device.
 - Upon successful installation and setup, you can re-enable Band Steering.

Note: Contact your router manufacturer for specific Band Steering instructions

To connect your Arlo camera directly to your 2.4 GHz Wi-Fi network:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap .

4. Select your Arlo device.
5. Select your Arlo model.
6. Follow the in-app instructions.
7. If Arlo detects that you have an Arlo SmartHub or Base Station, tap **Connect without SmartHub**.
8. Tap **Continue** on the Connect to a 2.4 GHz network screen.
9. Enter your 2.4 GHz Wi-Fi **SSID** and **Password**.
10. Follow the in-app instructions to finish setting up your device.

Related links:

[My Arlo camera will not scan the QR code during setup](#)

[What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0](#)

Last Updated:04/25/2024 | Article ID: 000062879

The Arlo Secure app won't read the printed QR code on my Arlo device

The Arlo Secure App will not read the printed QR code on my Arlo device

This article applies to:

[AC2001](#) [SH1001](#) [ABB1000](#) [VMC2040](#) [ABC1000](#)

When you set up some Arlo devices, you are required to use your mobile device to scan a QR code that is printed on the Arlo device. If the Arlo Secure App is not reading the QR code located on your Arlo device:

Move your mobile device closer to or further from the QR code.

- Your mobile device might need to be a certain distance from the QR code to properly focus.
- Slowly move the phone camera closer to and farther away from the QR code to enable the camera to focus better.
- Try scanning the QR code at a different angle.

Scan the QR code in an evenly lit area.

- Avoid scanning the QR code in the dark or directly under a bright light.
- Bright lighting can cause reflect off the Arlo device and inhibit your mobile device camera from seeing the entire QR code.

Clean the camera lens on your mobile device.

- The camera lens might have debris or a smudge on it, hindering its ability to scan the QR code.
- Use a lint-free cloth to remove anything that might prevent the camera from scanning the QR code.

Try setting up your Arlo device with a different mobile device.

- For example, if you tried using a tablet to set up your Arlo device, try using a smartphone instead.

Take a picture of the QR code, and scan the picture of the QR code.

- If a different smartphone or tablet does not work, take a clear picture of the QR code with a different device.
- Enlarge the picture on the screen.
- Scan the picture with the device that you are using to set up the Arlo device.

If your QR code is scratched, damaged, or unreadable, contact [Arlo Support](#).

- Once your product is verified, Arlo Support will send an email with an undamaged version of the QR code.

My Arlo camera will not scan the QR code during setup

My Arlo camera will not scan the QR code during setup

This article applies to:

[AVD2001](#) [AVD1001](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2020](#) [VMC2030](#)
[VMC2032](#) [VML2030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

During the setup process, the Arlo Secure App asks you to scan a QR code with your Arlo camera.

- The camera makes a chime sound to let you know scanning was successful.

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the **Need Help?** button in the Arlo Secure App or on my.arlo.com.

- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

Notes:

- If you hear a chime but cannot connect your camera, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0](#)
- If you are having issues scanning a QR code that is printed on an Arlo Keypad, Arlo Chime 2, Arlo Essential Indoor Camera, Arlo Baby, or Arlo Bridge, visit: [The Arlo Secure App won't read the printed QR code on my Arlo device](#)

If you do NOT hear a chime during the Arlo Secure App on-screen QR code scan:

Remove the plastic film from the camera lens.

- Arlo products have protective plastic film on the camera to protect the lens during shipping.

Increase the brightness on your mobile device.

- If you are in a bright area, try raising the brightness on your mobile device to the highest level.

With the QR code facing your camera, slowly move your phone closer and then farther away from the camera lens.

- Try positioning your mobile device approximately 6 inches (15 cm) from the camera lens, and slowly move it closer.
- If that does not work, try moving it farther away from the camera lens or try scanning from different angles.

Disable 'Dark Mode' if you are using an iOS device.

- In your iOS Settings, scroll down and tap **Display & Brightness**.
- Under the Appearance options, tap **Light**.

Scan the QR code in an evenly lit area.

- Avoid scanning the QR code in the dark or in direct sunlight.
- Make sure there are no bright lights, glares, or reflections facing the camera.
- Turn on outdoor lights if you are installing outside at night.
- Provide shade for your Arlo device if it is exposed to direct sunlight during installation.

Clean the camera lens and phone screen.

- Use a lint-free cloth to remove any debris or smudges that might be preventing the camera from scanning the QR code.

Ensure that you connected the camera to Wi-Fi with the correct password.

- If the password was not entered correctly, restart the setup process, and re-enter the Wi-Fi password.

Try using a device with a larger screen.

- Use a tablet or iPad, if available.

Try using an Android device for the install process.

- The Android version of the Arlo Secure App allows users to zoom in on the QR code if necessary.

Factory reset your device.

- If you are still unable to scan the QR code, visit: [How to factory reset Arlo devices](#)

Last Updated: 10/07/2024 | Article ID: 000062338

I am unable to install my Arlo Go, Arlo Security Light, or Arlo Bridge

How to set up Arlo Cameras

How to set up Arlo Cameras

This article applies to:

[VMC5040](#) [VMC4040P](#) [VMC4041P](#) [VMC4050P](#) [VMC2020](#) [VMC2030](#) [VMC2032](#)

*This article is for the Arlo Secure experience with **Library**. If you have the Arlo Secure experience with **Feed**, visit: [How to set up Arlo Cameras - Arlo Secure 4.0](#)*

This article applies to Arlo Ultra, Arlo Ultra 2, Arlo Pro 3, Arlo Pro 4, and Arlo Essential Wire-Free series cameras. To connect and install other Arlo devices, visit the links under: [Set up other Arlo devices](#)

For the best results use the Arlo Secure App for Arlo camera setup.

An Arlo SmartHub or Base Station is **required** for Arlo Pro 3, Arlo Ultra, and Arlo Ultra 2 cameras. To check compatibility, visit: [Arlo SmartHub and Base Station Compatibility](#)

An Arlo SmartHub or Base Station is **optional** for Arlo Pro 4 and Arlo Essential wire-free series cameras. For more information, visit: [What are the benefits of using an Arlo SmartHub or Base Station?](#)

To set up your camera using a SmartHub or Base Station:

Note: Arlo Ultra, Ultra 2, and Pro 3 must be installed using an Arlo SmartHub or Base Station.

1. Launch the Arlo Secure App.
2. Scroll down to the bottom of the screen and tap **Add New Device**.
3. Tap **Cameras**.
4. Tap **Ultra, Pro, or Essential**.
5. Select your camera model.
6. Select an Arlo SmartHub or Arlo Base Station.

Note: If an Arlo SmartHub or Base Station is not installed, tap **Add New SmartHub**.

Plug the Ethernet Cable into your SmartHub or Base Station and tap **Continue**.

Plug the AC adapter into the wall outlet, make sure the lights on the Arlo SmartHub or Base Station turn on, and tap **Continue**.

If you have trouble connecting the Arlo SmartHub or Base Station, visit: [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)

7. Insert the battery into the camera, and tap **Continue**.
8. Arlo will begin looking for your camera.

Note: Make sure the camera is within 3 to 6 feet of your Arlo SmartHub or Base Station during the setup process. Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

If the search is taking too long, tap **Manually Pair Device**. Press the **Sync** button on the camera and tap **Continue**.

9. Name your Arlo camera and tap **Continue**.
10. Position your Arlo camera and tap **Continue**.
11. Tap **Finish**.

To set up Arlo Pro 4 or Arlo Essential wire-free cameras directly to your Wi-Fi:

1. Launch the Arlo Secure App.
2. Scroll down to the bottom of the screen and tap **Add New Device**.
3. Tap **Cameras**.
4. Tap **Pro** or **Essential**.
5. Select your camera.
6. Select **Connect without SmartHub**, tap **Continue**.

7. Check your mobile device settings to ensure you are connected to a **2.4 GHz network**.
 8. Return to the Arlo Secure App and tap **Continue**.
 9. Enter your Wi-Fi **SSID** (network name) and **password**,
 10. Tap **Continue**.
 11. For **Arlo Essential Wire-Free cameras**:
 - Press and hold the **Sync** button on the bottom of the camera for two seconds.
 13. For **Arlo Pro 4**:
 - Insert the battery into the camera and tap **Continue**.
 - When the LED on the front of the camera is blinking blue, tap **Continue**.
 - If the LED is not blinking blue, tap **LED is not blinking blue**.
 - Press and hold the **Sync** button on the inside of the camera and tap **Continue**.
 - When the LED begins blinking blue, tap **Continue**.
 14. Hold the QR code about four to six inches in front of your Arlo camera.
 15. When you hear a chime, tap **Continue**. If you are having trouble, visit: [My Arlo camera will not scan the QR code during setup](#)
 16. Arlo will begin looking for your camera.
- Note:** Make sure the camera is within 3 to 6 feet of your Wi-Fi router during the setup process. Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.
17. Name your Arlo camera and tap **Continue**.
 18. Position your Arlo camera and tap **Continue**.
 19. Tap **Finish**.

To set up other Arlo devices, visit:

- Arlo **Essential Video Doorbell Wire-Free**: [How do I install my Arlo Essential Video Doorbell Wire-Free?](#)
- Arlo **Essential Video Doorbell Wired**: [How do I install my Arlo Essential Video Doorbell Wired?](#)
- Arlo **Go 2**: [How do I set up my Arlo Go 2 Camera?](#)

- Arlo **Essential Indoor Camera**: [How to set up the Arlo Essential Indoor Camera](#)
- Arlo **Pro 3 Floodlight Camera**: [How to set up the Arlo Pro 3 Floodlight Camera](#)
- Arlo **Chime** and **Arlo Chime 2**: [How do I install my Arlo Chime or Chime 2?](#)
- Arlo **Pro** and **Arlo Pro 2**: [How to set up the Arlo Pro and Pro 2 Camera](#)
- Arlo **Go**: [How do I set up my Arlo Go camera?](#)
- Arlo **Wire-Free**: [How to set up the Arlo Wire-Free Camera](#)
- Arlo **Q** and **Arlo Q Plus**: [How to set up an Arlo Q or Arlo Q Plus Camera](#)
- Arlo **Baby**: [How to set up the Arlo Baby Camera](#)
- Arlo **Audio Doorbell**: [How do I set up my Arlo Audio Doorbell?](#)
- Arlo **Security Light**: [How do I set up my Arlo Security Light system?](#)

For more information, visit:

- [Arlo Camera Placement Tips](#)
- [What are the minimum requirements for installing and using my Arlo system?](#)
- [How do I connect my Arlo doorbell or camera to a SmartHub or Base Station?](#)
- [How can I install my Arlo Video Doorbell without an existing doorbell or chime?](#)
- [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)
- [How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to a SmartHub or Base Station?](#)

To troubleshoot setup issues, visit:

- [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)
- [What to do when your Arlo camera will not sync to a Base Station or SmartHub during an install or setup](#)
- [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)

- [Arlo can't discover my Base Station during installation; what do I do?](#)
- [My Arlo camera will not scan the QR code during setup](#)

Last Updated: 04/25/2024 | Article ID: 000062755

How to set up the Arlo Wire-Free Camera

How to set up the Arlo Wire-Free Camera

This article applies to:

[VMC3030](#)

The following instructions apply to setting up the original Arlo Wire-Free Camera (VMC3030).

Note: To complete the setup process, you will need an Arlo SmartHub or Base Station. If you are setting up multiple cameras, only sync one camera at a time.

To setup other Arlo camera models, visit: [How to set up Arlo Cameras](#)

To set up the Arlo Wire-Free Camera:

1. Launch the Arlo Secure app.
2. Scroll down to the bottom of the screen and tap **Add New Device**.
3. On the **Select your Arlo device** screen, tap **Cameras**.
4. On the **Select your Arlo model** screen, tap **Others**.
5. On the **Legacy** screen, tap **Arlo**.
6. Select an Arlo SmartHub or Arlo Base Station.


Note: If a SmartHub or Base Station is not installed, tap Add New SmartHub.

- Plug the Ethernet Cable into your SmartHub or Base Station and tap **Continue**.
- Plug the AC adapter into the wall outlet, make sure the lights on the SmartHub or Base Station come on, and tap **Continue**.


- If you have trouble connected the SmartHub or Base Station, visit: [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)

7. Insert the batteries into the camera:

Unlock the battery compartment by sliding and holding the latch.

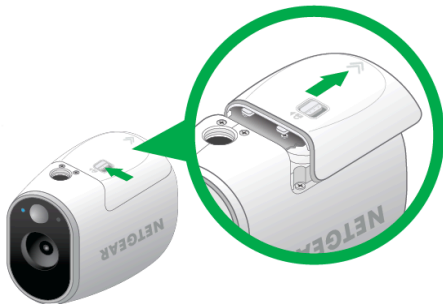

Insert the batteries as shown and close the battery door.

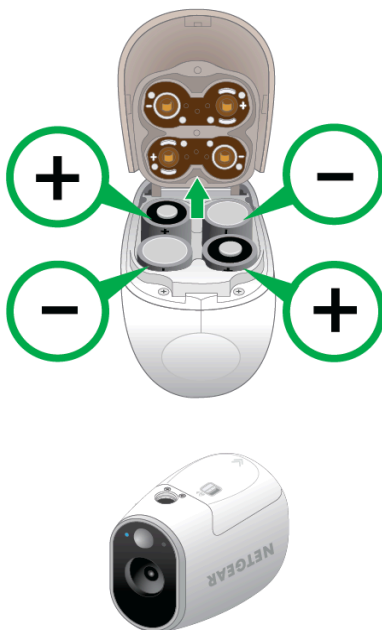

8. Tap **Continue**.
9. Press the **SYNC** button on the camera for about two seconds and then release the button.



10. When the LED on the camera is blinking Blue, tap **Continue**.



11. Arlo will begin looking for your camera:

Note: Make sure the camera is within 3 to 6 feet of your Arlo SmartHub or Base Station during the setup process. Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

- If your camera will not sync to the Arlo SmartHub or Base Station, visit:
[What to do when your Arlo camera will not sync to a Base Station or SmartHub during an install or setup](#)

12. Name your Arlo camera and tap **Continue**.

13. Tap **Finish**.

How to set up an Arlo Q or Arlo Q Plus Camera

How to set up an Arlo Q or Arlo Q Plus Camera

This article applies to:

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [How to set up an Arlo Q or Arlo Q Plus Camera - Arlo Secure 4.0](#)*

To set up an Arlo Q or Arlo Q Plus Camera:

1. Launch the Arlo Secure App.
2. Scroll down to the bottom of the screen and tap **Add New Device**.
3. On the **Select your Arlo device** screen, tap **Cameras**.
4. On the **Select your Arlo model** screen, tap **Others**.
5. On the **Legacy** screen, tap **Q & Q Plus**.
6. On the **Select your connection type** screen, tap **Wi-Fi**, **Ethernet** (Q Plus Only), or **PoE** (Q Plus Only).

Note: The Ethernet and PoE options are for Arlo Q Plus only. For more information on Ethernet and PoE connections, visit: [What is the difference between Arlo Q Plus PoE and Ethernet?](#)

7. For Wi-Fi connections, power your camera by plugging it into a wall outlet.
8. When the LED light turns solid amber, tap **Continue**.

Note: Make sure the camera is within 3 to 6 feet of your Wi-Fi router during the setup process. Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

9. Enter your Wi-Fi credentials, to include **SSID** (network name) and Wi-Fi **password**.
10. Tap **Continue**.
11. Hold the **Sync** button on your camera for about two seconds, and then release.

- The Blue LED will start blinking to confirm it is ready.

12. Tap **Continue**.

13. Hold the QR code about eight inches in front of your camera.

- You should hear a chime.
- If you didn't hear a chime, visit: [My Arlo camera will not scan the QR code during setup](#)

14. Tap **Continue**.

- The **Looking for device** screen displays.
- If Arlo does not discover your device, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)

15. After Arlo discovers your device, select an Arlo Camera to claim from the **Available Devices** list.

Note: Verify the Serial Number displayed in the list matches the Serial Number on the bottom of your camera.

16. Type a name for your Arlo device.

17. Tap **Continue**.

- Your camera is now active.

18. Tap **Finish**.

For more information, visit:

- [How do I mount my Arlo Q or Arlo Q Plus camera?](#)
- [Arlo Q FAQ](#)
- [Arlo Q Plus FAQ](#)
- [How can I troubleshoot Arlo Q Plus camera connections using PoE or Ethernet?](#)
- [How to factory reset an Arlo Q or Arlo Q Plus Camera](#)

Last Updated: 04/18/2024 | Article ID: 1001944

How to set up the Arlo Baby Camera

How to set up the Arlo Baby Camera

This article applies to:

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [How to set up the Arlo Baby Camera - Arlo Secure 4.0](#)*

To set up the Arlo Baby Camera:

Note: Make sure the camera is within 3 to 6 feet of your Wi-Fi router during the setup process. Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

1. Launch the Arlo Secure App.
2. Scroll down to the bottom of the screen and tap **Add New Device**.
3. Tap **Cameras**.
4. Tap **Others**.
5. Tap **Baby**.
6. Tap **I Understand**.
7. Plug your camera into an AC power outlet and ensure that the power switch is turned on.
8. When the camera LED turns solid amber, tap **Continue**.
9. Tap **QR code setup** at the bottom of the screen.
10. Enter your Wi-Fi credentials, to include **Network Name** (SSID) and **Password**.
11. Tap **Continue**.
12. Hold the **Sync** button on your camera for about two seconds, and then release.
The Blue LED will start blinking.
13. Tap **Continue**.
14. Hold the QR code about eight inches in front of your camera.

You should hear a chime.

If you didn't hear a chime, visit: [My Arlo camera will not scan the QR code during setup](#)

15. Tap **Continue**.

The **Looking for device** screen displays.

If Arlo does not discover your device, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)

16. After Arlo discovers your device, type a **Name** for your camera.

17. Tap **Continue**.

Your camera is now active.

18. Tap **Finish**.

For more information, visit:

- [Where do I place my Arlo Baby camera and how do I position it?](#)
- [How do I mount my Arlo Baby camera?](#)

Last Updated:06/05/2024 | Article ID: 1282700

How do I set up my Arlo Security Light system?

How do I set up the Arlo Security Light system?

This article applies to:

[AL1101](#) [ABB1000](#)

To set up the Arlo Security Light system:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap  or **Add New Device +**.
4. Tap **Lights**.
5. Tap **Security Light**.
6. Scan the **QR code** on your **Arlo Bridge**.

7. Follow the in-app instructions to add the Arlo Bridge and each Arlo Security Light.

For more information, visit:

- [How do I position my Arlo Security Light and Arlo Bridge?](#)
- [What do the LEDs on my Arlo Security Light system mean?](#)
- [My Arlo Security Light is offline; what do I do?](#)

Last Updated:06/19/2024 | Article ID: 000062012

How to set up the Arlo Pro and Pro 2 Camera

How to set up the Arlo Pro and Pro 2 Camera

This article applies to:

[VMC4030P](#) [VMC4030](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, please visit: [How to set up the Arlo Pro and Pro 2 Camera – Arlo Secure 4.0](#)*

Note:

- To complete the setup process, you will need an Arlo SmartHub or Base Station.
- Install your SmartHub or Base Station first before installing your cameras.

For more information, visit: [How do I connect my Arlo SmartHub or Base Station to the Internet?](#)

- If you are setting up multiple cameras, only sync one camera at a time.

Note: To complete the setup process, you will need an Arlo SmartHub or Base Station. If you are setting up multiple cameras, only sync one camera at a time.

To setup other Arlo camera models, visit: [How to set up Arlo Cameras](#)

To set up an Arlo Pro or Pro 2 Camera:

1. Launch the Arlo Secure app.
2. Scroll down to the bottom of the screen and tap **Add New Device**.
3. On the **Select your Arlo device** screen, tap **Cameras**.
4. On the **Select your Arlo model** screen, tap **Pro**.
5. On the **Pro** screen, tap **Arlo**.
6. Select an Arlo SmartHub or Arlo Base Station.

Note: If a SmartHub or Base Station is not installed, tap **Add New SmartHub**.

Plug the Ethernet Cable into your SmartHub or Base Station and tap **Continue**.

Plug the AC adapter into the wall outlet, make sure the lights on the SmartHub or Base Station come on, and tap **Continue**.

If you have trouble connecting the SmartHub or Base Station, visit: [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)

7. Insert the battery into the camera:

Unlock the battery compartment by pressing the latch button and pulling back gently.



Insert the battery as shown and close the battery door.



8. Tap **Continue**.
9. Press the **SYNC** button on the camera for about two seconds and then release the button.



10. When the LED on the camera is blinking Blue, tap **Continue**.



11. Arlo will begin looking for your camera:

Note: Make sure the camera is within 3 to 6 feet of your Arlo SmartHub or Base Station during the setup process. Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

If your camera will not sync to the Arlo SmartHub or Base Station, visit: [What to do when your Arlo camera will not sync to a Base Station or SmartHub during an install or setup](#)

- Name your Arlo camera and tap **Continue**.
- Tap **Finish**.

Last Updated:05/01/2024 | Article ID: 1146973

How to set up the Arlo Pro 3 Floodlight Camera

How to set up the Arlo Pro 3 Floodlight Camera

This article applies to:

[FB1001](#)

*This article is for the Arlo Secure experience with **Library**. If you have the Arlo Secure experience with **Feed**, visit: [How to set up the Arlo Pro 3 Floodlight Camera? - Arlo Secure 4.0](#)*

- For the best results use the Arlo Secure App to setup your Arlo device.
- An Arlo SmartHub or Arlo Base Station is optional. For more information, visit: [What are the benefits of using an Arlo SmartHub or Base Station?](#)

To set up the Arlo Pro 3 Floodlight Camera:

1. Launch the Arlo Secure App.
2. Scroll down to the bottom of the screen and tap **Add New Device**.
3. Tap **Lights**.
4. Tap **Pro 3 Floodlight Camera**.
5. Review the Meet your Arlo Floodlight screens, watch the installation video, and tap **Continue**.
6. Select **Connect without SmartHub** (or select an Arlo SmartHub or Arlo Base Station if desired).
7. If you selected **Connect without SmartHub**, tap **Continue**.
8. Check your mobile device settings to ensure you are connected to a **2.4 GHz network**.
9. Return to the Arlo Secure App and tap **Continue**.
10. Enter your Wi-Fi **SSID** (network name) and **password**,
11. Tap **Continue**.
12. Insert the battery into the Arlo Floodlight and tap **Continue**.
13. Keep the Arlo Floodlight separate from the housing and tap **Continue**.
14. When the LED on the front of the Arlo Floodlight is blinking blue, tap **Continue**.

15. Hold the QR code about four to six inches in front of your Arlo Floodlight Camera lens.
16. When you hear a chime, tap **Continue**. If you are having trouble, visit: [My Arlo camera will not scan the QR code during setup](#)
17. Arlo will begin looking for your camera.
18. After the camera is found, name your Arlo camera and tap **Continue**.
19. Now that the Arlo Floodlight is paired with the Arlo Secure App, tap **Continue** to proceed with mounting the Arlo Floodlight.
20. Place the Arlo Floodlight in an area with strong bandwidth and tap **Continue**.
21. Make sure the Arlo Floodlight battery is charged and tap **Continue**.
22. Review the screens for installing the wall plate, securing the housing, and adjusting the angle of the Arlo Floodlight, then click **Continue**.
23. Check the position of your Arlo Floodlight and tap **Continue**.
24. Follow the instructions for testing the light and tap **Continue**.
25. Tap **Finish**.

For more information, visit:

- [How do I wall-mount my Arlo Pro 3 Floodlight Camera?](#)
- [How should I position my Arlo Pro 3 Floodlight Camera?](#)
- [How do I re-position my Arlo Pro 3 Floodlight Camera if it is already mounted?](#)
- [How do I completely remove my Arlo Pro 3 Floodlight Camera from the wall?](#)
- [What are the minimum requirements for installing and using my Arlo system?](#)
- [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)
- [How do I connect my Arlo device directly to my WiFi router if the camera is currently connected to a SmartHub or Base Station?](#)
- [How do I charge my Arlo Pro 3 Floodlight Camera?](#)
- [Arlo Pro 3 Floodlight Camera FAQ](#)
- [Arlo Pro 3 Floodlight Camera Product Tour](#)

To troubleshoot setup issues, visit:

- [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)

- [What to do when your Arlo camera will not sync to a Base Station or SmartHub during an install or setup](#)
- [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)
- [Arlo can't discover my Base Station during installation; what do I do?](#)
- [My Arlo camera will not scan the QR code during setup](#)

Last Updated: 11/29/2022 | Article ID: 000062766

How do I set up my Arlo Go 2 Camera?

How do I set up my Arlo Go 2 Camera?

This article applies to:

[VML2030](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [How do I set up my Arlo Go 2 Camera? - Arlo Secure 4.0](#)*

The Arlo Go 2 gives you the flexibility of using 2.4 GHz Wi-Fi or LTE for connectivity. You can also use LTE as a backup in case your Wi-Fi internet connection is interrupted.

Note: When using both 2.4 GHz Wi-Fi and LTE mode, Wi-Fi will always be the primary mode of connection.

The Arlo Go 2 camera works with the same Arlo Secure App as all other Arlo cameras and devices. However, to connect your Go 2 camera to the mobile network, an activated SIM card with a mobile data plan must be inserted into the Go 2 camera.

Note: We recommend that you charge the battery before mounting your camera. Your camera LED indicator light will blink amber if your battery needs charging. The indoor charging cable that

came with your camera works with most USB power adapters. For more information, visit: [How do I insert the battery in my Arlo Go 2 camera?](#)

To set up your Arlo Go 2 camera using LTE only:

1. Launch the Arlo Secure App.
2. Under Devices tab, tap **Add New Device**.
3. Tap **Cameras**.
4. Tap **Go 2**.
5. Tap **Continue**.
6. Follow the instructions for installing your SIM card as shown on the Arlo Secure App, then tap **Continue**.

For more information, visit: [How do I install a SIM card in my Arlo Go 2 Camera?](#)

The LED in front of your Arlo Go 2 should blink blue. If the LED is not blinking blue, press the Sync Button at the bottom of the inside of your camera.

7. Tap **Continue** to proceed with onboarding your Arlo Go 2.
8. Hold the QR code shown in the Arlo Secure App, 4-6 inches in front of your Arlo Go 2.

The Arlo Go 2 will play a chime once the QR code is recognized. If your camera does not play a chime, visit: [My Arlo camera will not scan the QR code during setup](#)

9. Tap **Continue**.

To set up your Arlo Go 2 camera using 2.4 GHz Wi-Fi, with or without LTE:

Note: Before setting up your Arlo Go 2, make sure that your mobile device is connected to a 2.4 GHz Wi-Fi.

1. Launch the Arlo Secure App.
2. Under Devices tab, tap **Add New Device**.
3. Tap **Cameras**.
4. Tap **Go 2**.
5. Tap **Set Up with Wi-Fi**.
6. Follow the instructions for installing your SIM card as shown on the Arlo Secure App, then tap **Continue**.

Note: You may skip this step if you are not using a SIM card.

The LED in front of your Arlo Go 2 should blink blue. If the LED is not blinking blue, press the Sync Button at the bottom of the inside of your camera.

7. Tap **Continue** to proceed with onboarding your Arlo Go 2.
8. A reminder to connect to a 2.4 GHz Wi-Fi will be shown in the Arlo Secure App. Tap **Continue** to proceed.
9. Enter your Wi-Fi credentials, then tap **Continue**.
10. Hold the QR code shown in the Arlo Secure App, 4-6 inches in front of your Arlo Go 2.

The Arlo Go 2 will play a chime once the QR code is recognized. If your camera does not play a chime, visit: [My Arlo camera will not scan the QR code during setup](#)

11. Tap **Continue**.

If the Arlo Go 2 is installed too far from your Wi-Fi router, it may cause the battery to drain quicker. It is advised to switch to LTE mode instead. For more information, visit: [How do I control whether my Go 2 Camera connects to Mobile or Wi-Fi?](#)

Last Updated:08/07/2023 | Article ID: 000062621

How to set up the Arlo Essential Indoor Camera

How to set up the Arlo Essential Indoor Camera

This article applies to:

[VMC2040](#)

*This article is for the Arlo Secure App with **Library**. If you have the Arlo Secure App with **Feed**, visit: [How to set up the Arlo Essential Indoor Camera - Arlo Secure 4.0](#)*

For the best results use the Arlo Secure App for Arlo camera setup. An Arlo SmartHub or Base Station is optional.

- For more information, visit: [What are the benefits of using an Arlo SmartHub or Base Station?](#)

To set up the Arlo Essential Indoor Camera:

1. Launch the Arlo Secure App.
2. Scroll down to the bottom of the screen and tap **Add New Device**.
3. Tap **Cameras**.
4. Tap **Essential**.
5. Tap **Essential Indoor Camera**.
6. Review the Meet your Arlo Essential Indoor Camera screen and tap **Continue**.
7. Find a location to place the camera that is near an outlet and within range of your Wi-Fi network.
8. Tap **Continue**.
9. Select **Connect without SmartHub** (or select an Arlo SmartHub or Arlo Base Station if desired).
10. If you selected **Connect without SmartHub**, tap **Continue**.
11. Check your mobile device settings to ensure you are connected to a **2.4 GHz network**.
12. Return to the Arlo Secure app and tap **Continue**.
13. Enter your Wi-Fi **SSID** (network name) and **password**.
14. Tap **Continue**.
15. Use the provided cable and power adapter to connect to an outlet, then plug the micro-USB portion of the cable into your camera.
16. Once the Privacy Shield on the camera opens, tap **Continue**.
17. Press the **Sync** button on the camera.
18. When the LED on the front of the camera is flashing blue, tap **Continue**.
19. Hold the QR code about four to six inches in front of your Arlo camera.
20. When you hear a chime, tap **Continue**.

If you are having trouble, visit: [My Arlo camera will not scan the QR code during setup](#)

Arlo will begin looking for your camera.

21. After the camera is found, name your Arlo camera and tap **Continue**.

22. Position your Arlo camera and tap **Continue**.

23. Tap **Finish**.

For more information, visit:

- [How do I mount my Arlo Essential Indoor Camera?](#)
- [What are the minimum requirements for installing and using my Arlo system?](#)
- [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)
- [How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to a SmartHub or Base Station?](#)
- [What do the LED behaviors on my Arlo Essential Indoor Camera mean?](#)
- [Arlo Camera Placement Tips](#)

To troubleshoot setup issues, visit:

- [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)
- [What to do when your Arlo camera will not sync to a SmartHub or Base Station during an install or setup](#)
- [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)
- [Arlo can't discover my Base Station during installation; what do I do?](#)
- [My Arlo camera will not scan the QR code during setup](#)

Last Updated:05/30/2024 | Article ID: 000062765

Which Arlo Essential Camera option should I select in the Arlo Secure App during setup?

How do I set up and install my Arlo Wire-Free Outdoor Siren?

How do I set up and install my Arlo Wire-Free Outdoor Siren?

This article applies to:

[SH1001](#)

The Arlo Wire-Free Outdoor Siren is part of the Arlo Home Security System and pairs to the Arlo Keypad Sensor Hub.

Note: Ensure the Arlo Keypad Sensor Hub is online before attempting to install the Arlo Wire-Free Outdoor Siren.

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the **Need Help?** button in the Arlo Secure App or on my.arlo.com. You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To setup and install your Arlo Wire-Free Outdoor Siren:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap .
4. Select **Security System**.
5. Tap **Add Another Device**.
6. Select **Wire-Free Outdoor Siren**.
7. Tap **Continue**.
8. Twist off the back cover from the Arlo Wire-Free Outdoor Siren and remove the battery cover.
9. Press down on the batteries with your thumb or fingers and pull out the tabs.
10. Replace the battery cover and keep the back cover separate from the Arlo Wire-Free Outdoor Siren.
11. When the LED on the front of the Arlo Wire-Free Outdoor Siren flashes blue, tap **Continue**.
Arlo will begin looking for the Arlo Wire-Free Outdoor Siren.
12. Name the Arlo Wire-Free Outdoor Siren and tap **Continue**.
13. Find an accessible location to install the Arlo Wire-Free Outdoor Siren and tap **Continue**.
14. If you are wall-mounting the Arlo Wire-Free Outdoor Siren, screw the back cover onto the wall.

15. Twist the Arlo Wire-Free Outdoor Siren onto the back cover and tap **Continue**.
16. Test the Arlo Wire-Free Outdoor Siren from a distance by tapping **Turn Siren on** in the Arlo Secure App.
17. Tap **Continue**.
18. Tap **Finish**.
19. If the Siren test did not work, tap **Devices**.
20. Tap the Arlo Wire-Free Outdoor Siren device card.
21. Tap .
22. Tap **Connected To**.
23. Tap **Device Rangefinder**.

The Status will state Within Range or Out of Range.

If the Arlo Wire-Free Outdoor Siren is out of range, move it closer to the Arlo Keypad Sensor Hub, or away from obstructions that could prevent signals from reaching the Siren.

If you are having issues setting up your Arlo Wire-Free Outdoor Siren, visit: [My Arlo Wire-Free Outdoor Siren will not connect to my Arlo Keypad Sensor Hub](#)

Last Updated: 10/07/2024 | Article ID: 000063079

How to set up Arlo Cameras - Arlo Secure 4.0

How to set up Arlo Cameras - Arlo Secure 4.0

This article applies to:

[VMC5040](#) [VMC4040P](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2020](#) [VMC2030](#) [VMC2032](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How to set up Arlo Cameras](#)*

This article applies to Arlo Ultra, Arlo Ultra 2, Arlo Pro 3, Arlo Pro 4, Arlo Pro 5S, and Arlo Essential Wire-Free series cameras. To connect and install other Arlo devices, visit the links under: [Set up other Arlo devices](#)

- For the best results use the Arlo Secure App for Arlo camera setup.

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the **Need Help?** button in the Arlo Secure App or on my.arlo.com.

- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

Notes:

An Arlo SmartHub or Base Station is **required** for Arlo Pro 3, Arlo Ultra, and Arlo Ultra 2 cameras.

- To check compatibility, visit: [Arlo SmartHub and Base Station Compatibility](#)

An Arlo SmartHub or Base Station is **optional** for Arlo Pro 4, Pro 5S, and Arlo Essential Wire-Free series cameras.

- For more information, visit: [What are the benefits of using an Arlo SmartHub or Base Station?](#)

Arlo SecureLink is a technology that uses the sub-GHz wireless communication to communicate between Arlo devices. The Arlo Security Keypad Sensor Hub uses Arlo SecureLink to talk with devices such as the Arlo All-in-One Sensor and the Arlo Pro 5S Camera.

- For more information, visit: [How do I pair my Arlo Pro 5S to my Arlo Keypad Sensor Hub using Arlo SecureLink?](#)

To set up an Arlo camera with an Arlo SmartHub or Base Station:

Note: Arlo Ultra, Arlo Ultra 2, and Arlo Pro 3 must use an Arlo SmartHub or Base Station.

1. Launch the Arlo Secure App.
2. Tap **Devices**.

Note: Make sure the correct Location where you want to add the camera is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Tap **Cameras**.
5. Tap **Ultra, Pro**, or **Essential**.
6. Select your camera.
7. Select an Arlo SmartHub or Arlo Base Station.

Note: If an Arlo SmartHub or Base Station is not installed, tap **Add New SmartHub**.

Plug the Ethernet Cable into your Arlo SmartHub or Base Station and tap **Continue**.

Plug the AC adapter into the wall outlet, make sure the LEDs on the Arlo SmartHub or Base Station turn on, and tap **Continue**.

If you have trouble connecting the SmartHub or Base Station, visit: [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)

8. Insert the battery into the camera, and tap **Continue**.

Arlo will begin looking for your camera.

Make sure the camera is within 3 to 6 feet of your Arlo SmartHub or Base Station during the setup process.

Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

If the search is taking too long, tap **Manually Pair Device**.

Press the **Sync** button on the camera and tap **Continue**.

9. Name your Arlo camera and tap **Continue**.
10. Position your Arlo camera and tap **Continue**.
11. Tap **Finish**.

Note: Your camera will be added to Arm Away mode after installation where Motion Detection, Recording, Variable Length recording is enabled. For more information, visit [About Arlo Routines, Modes, Rules, and Automations](#)

To set up Arlo Pro 4, Arlo Pro 5S, or Arlo Essential wire-free camera directly to your Wi-Fi router:

1. Launch the Arlo Secure App.
2. Tap **Devices**.

3. Tap .
4. Tap **Pro** or **Essential**.
5. Select your camera.
6. Select **Connect without SmartHub** and tap **Continue**.
7. Check your mobile device settings to ensure you are connected to a **2.4 GHz network**.

Note: Arlo Pro 5S cameras work with 2.4 GHz and 5 GHz frequency bands after installation is complete on 2.4 GHz. For more information, visit: [How does the Arlo Pro 5S Camera use 5GHz Wi-Fi networks?](#)

8. Return to the Arlo Secure App and tap **Continue**.
9. Enter your Wi-Fi **SSID (Network Name)** and **Password**.
10. Tap **Continue**.
11. For **Arlo Essential wire-free cameras**:

Press and hold the **Sync** button on the bottom of the camera for two seconds.

12. For **Arlo Pro 4** and **Arlo Pro 5S**:

Insert the battery into the camera and tap **Continue**.

When the LED on the front of the camera is blinking blue, tap **Continue**.

If the LED is not blinking blue, tap **LED is not blinking blue**.

Press and hold the **Sync** button on the inside of the camera and tap **Continue**.

When the LED begins blinking blue, tap **Continue**.

13. Hold the QR code about four to six inches in front of your Arlo camera.
14. When you hear a chime, tap **Continue**.

Note: If you are having trouble, visit: [My Arlo camera will not scan the QR code during setup](#)

15. Arlo will begin looking for your camera.

Make sure the camera is within 3 to 6 feet of your Wi-Fi router during the setup process.

Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

16. Name your Arlo camera and tap **Continue**.
17. Position your Arlo camera and tap **Continue**.
18. Tap **Finish**.

Note: Your camera will be added to Arm Away mode after installation where

Motion Detection, Recording, Variable Length recording is enabled. For more information, visit [About Arlo Routines, Modes, Rules, and Automations](#)

To set up other Arlo devices, visit:

- [Arlo Wired Floodlight Camera](#)
- [Arlo Essential Outdoor Camera \(2nd Generation\)](#)
- [Arlo Video Doorbell \(2nd Generation\)](#)
- [Arlo Essential Video Doorbell Wire-Free](#)
- [Arlo Essential Video Doorbell Wired](#)
- [Arlo Go 2](#)
- [Arlo Essential Indoor Camera \(2nd Generation\)](#)
- [Arlo Essential Indoor Camera](#)
- [Arlo Pro 3 Floodlight Camera](#)
- [Arlo Chime and Arlo Chime 2](#)
- [Arlo Pro and Arlo Pro 2](#)
- [Arlo Q and Arlo Q Plus](#)
- [Arlo Baby](#)
- [Arlo Audio Doorbell](#)

For more information, visit:

- [Arlo Camera Placement Tips](#)
- [What are the minimum requirements for installing and using my Arlo system?](#)
- [How do I connect my Arlo doorbell or camera to a SmartHub or Base Station?](#)
- [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)
- [How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to a SmartHub or Base Station? - Arlo Secure 4.0](#)

To troubleshoot setup issues, visit:

- [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0](#)
- [What to do when your Arlo camera will not sync to a Base Station or SmartHub during an install or setup - Arlo Secure 4.0](#)

- [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)
- [Arlo can't discover my Base Station during installation; what do I do?](#)
- [My Arlo camera will not scan the QR code during setup](#)

Last Updated: 10/07/2024 | Article ID: 000062870

How to set up the Arlo Wire-Free Camera - Arlo Secure 4.0

How to set up the Arlo Wire-Free Camera - Arlo Secure 4.0

This article applies to:

[VMC3030](#)

*This article is for the new experience of Arlo Secure with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How to set up the Arlo Wire-Free Camera](#)*

The following instructions apply to setting up the original Arlo Wire-Free Camera (VMC3030). To setup other Arlo camera models, visit: [How to set up Arlo Cameras - Arlo Secure 4.0](#)

Note: To complete the VMC3030 setup process, you will need an Arlo SmartHub or Arlo Base Station. If you are setting up multiple cameras, only sync one camera at a time.

To set up the Arlo Wire-Free Camera:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap .
4. Tap **Cameras**.
5. Tap **Others**.
6. Tap **Arlo**.

7. Select an Arlo SmartHub or Arlo Base Station or tap **Continue** if only one Arlo SmartHub or Arlo Base Station is installed.

Note: If an Arlo SmartHub or Arlo Base Station is not installed, tap **Add New Base Station**.


Plug the Ethernet Cable into your Arlo SmartHub or Arlo Base Station and tap **Continue**.

Plug the AC adapter into the wall outlet, make sure the LEDs on the Arlo SmartHub or Arlo Base Station illuminate, and tap **Continue**.


If you have trouble connecting the Arlo SmartHub or Arlo Base Station, visit: [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)

8. Insert the batteries into the camera:

Unlock the battery compartment by sliding and holding the latch.

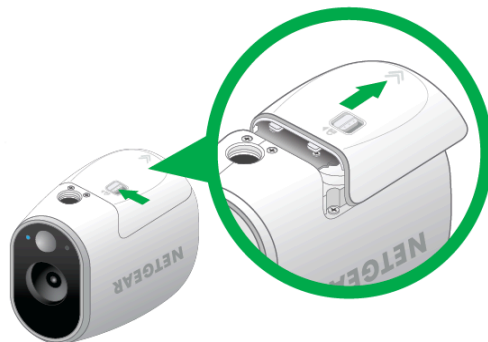

Insert the batteries as shown and close the battery door.

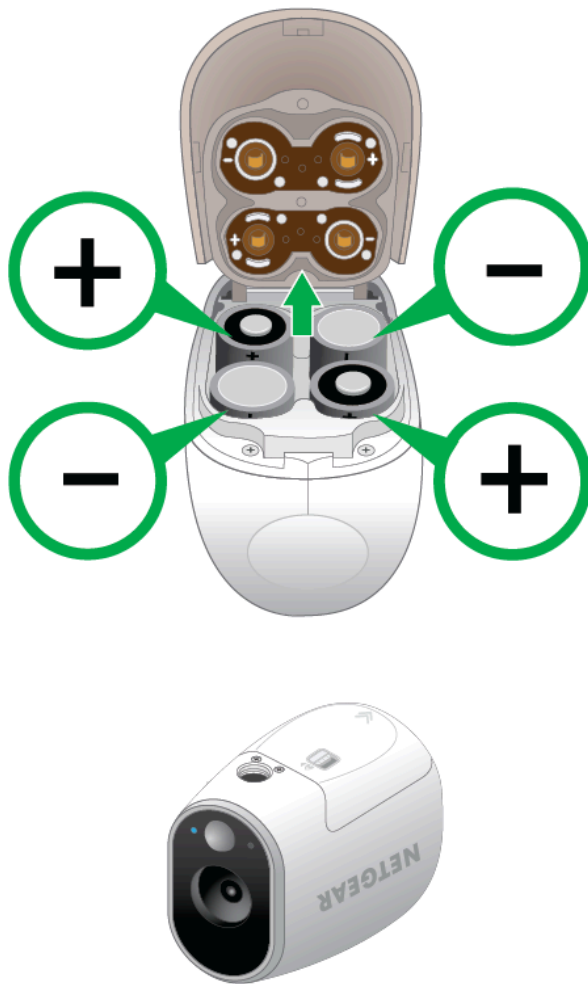

9. Tap **Continue**.

10. Press the **SYNC** button on the camera for approximately two seconds and then release the button.



11. When the LED on the camera is blinking Blue, tap **Continue**.



12. Arlo will begin looking for your camera.

Note: Make sure the camera is within 3 to 6 feet of your Arlo SmartHub or Arlo Base Station during the setup process. Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

If your camera will not sync to the Arlo SmartHub or Arlo Base Station, visit: [What to do when your Arlo camera will not sync to a SmartHub or Base Station during an install or setup](#)

13. Name your Arlo camera and tap **Continue**.

14. Tap **Finish**.

Last Updated:05/13/2024 | Article ID: 000063037

How to set up the Arlo Pro and Pro 2 Camera - Arlo Secure 4.0

How to set up the Arlo Pro and Pro 2 Camera - Arlo Secure 4.0

This article applies to:

[VMC4030P](#) [VMC4030](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How to set up the Arlo Pro and Pro 2 Camera](#)*

The following instructions apply to setting up the Arlo Pro or Arlo Pro 2 camera. To setup other Arlo camera models, visit: [How to set up Arlo Cameras - Arlo Secure 4.0](#)

To complete the Arlo Pro or Arlo Pro 2 setup process, you will need an Arlo SmartHub or Base Station. Install the Arlo SmartHub or Base Station first before installing your cameras. For more information, visit: [How do I connect my Arlo SmartHub or Base Station to the Internet? - Arlo Secure 4.0](#)

If you are setting up multiple cameras, only sync one camera at a time.

To set up an Arlo Pro or Pro 2 Camera:

1. Launch the Arlo Secure App.
2. Tap **Devices**.

Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Tap **Cameras**.
5. Tap **Pro**.
6. Tap **Pro 2** or **Pro**.
7. Select an Arlo SmartHub or Arlo Base Station. If only one Arlo SmartHub or Base Station is installed, tap **Continue** when Arlo has detected the device.

Note: If an Arlo SmartHub or Base Station is not installed, tap **Add New SmartHub**.

Plug the Ethernet Cable into your Arlo SmartHub or Base Station and tap **Continue**.

Plug the AC adapter into the wall outlet, make sure the LEDs on the Arlo SmartHub or Base Station illuminate, and tap **Continue**.

If you have trouble connecting the Arlo SmartHub or Base Station, visit: [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)

8. Insert the battery into the camera, and tap **Continue**.

Unlock the battery compartment by pressing the latch button and pulling back gently.

Insert the battery as shown and close the battery door.



9. Press the **Sync** button on the camera for about two seconds and then release the button.



10. When the LED on the camera is blinking Blue, tap **Continue**.



11. Arlo will begin looking for your camera.

Note: Make sure the camera is within 3 to 6 feet of your Arlo SmartHub or Base Station during the setup process. Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

If the search is taking too long, tap **Manually Pair Device**. Press the **Sync** button on the camera and tap **Continue**.

12. Name your Arlo camera and tap **Continue**.
13. Position your Arlo camera and tap **Continue**.
14. Tap **Finish**.

Note: Your camera will be added to the  Arm Away mode after installation. Motion Detection, Recording, Variable Length recording are enabled. For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

How to set up an Arlo Q or Arlo Q Plus Camera - Arlo Secure 4.0

This article applies to:

[VMC3040](#) [VMC3040S](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How to set up an Arlo Q or Arlo Q Plus Camera](#)*

To set up an Arlo Q or Arlo Q Plus Camera:

Note: Make sure the camera is within 3 to 6 feet of your Wi-Fi router during the setup process. Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

1. Launch the Arlo Secure App.
2. Tap **Devices**.

Note: Make sure the correct Location where you want to add the camera is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Tap **Cameras**.
5. Tap **Others**.
6. Tap **Q & Q Plus**.
7. Tap **Wi-Fi**, **Ethernet** (Q Plus Only), or **PoE** (Q Plus Only).

Note: The Ethernet and PoE options are for Arlo Q Plus only. For more information on Ethernet and PoE connections, visit: [What is the difference between Arlo Q Plus PoE and Ethernet?](#)

8. For Wi-Fi connections, power your camera by plugging it into a wall outlet.
9. When the LED turns solid amber, tap **Continue**.
10. Enter your Wi-Fi credentials, to include **Network Name** (SSID) and **Password**.

11. Tap **Continue**.
12. Hold the **Sync** button on your camera for about two seconds, and then release.
The Blue LED will start blinking to confirm it is ready.
13. Tap **Continue**.
14. Hold the QR code about eight inches in front of your camera.
If you did not hear a chime, visit: [My Arlo camera will not scan the QR code during setup](#)
15. Tap **Continue**.
If Arlo does not discover your device, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)
16. After Arlo discovers your device, select an Arlo Camera to claim from the **Available Devices** list.
Note: Verify the Serial Number displayed in the list matches the Serial Number on the bottom of your camera.
17. Type a name for your Arlo camera.
18. Tap **Continue**.
19. Tap **Finish**.

For more information, visit:

- [Arlo Q FAQ](#)
- [Arlo Q Plus FAQ](#)
- [How do I mount my Arlo Q or Arlo Q Plus camera?](#)
- [How to factory reset an Arlo Q or Arlo Q Plus Camera](#)
- [How can I troubleshoot Arlo Q Plus camera connections using PoE or Ethernet?](#)

Last Updated: 05/09/2024 | Article ID: 000063032

How to set up the Arlo Baby Camera - Arlo Secure 4.0

How to set up the Arlo Baby Camera - Arlo Secure 4.0

This article applies to:

[ABC1000](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How to set up the Arlo Baby Camera](#)*

To set up the Arlo Baby Camera:

Note: Make sure the camera is within 3 to 6 feet of your Wi-Fi router during the setup process. Avoid placing the camera within close proximity to other Wi-Fi devices to avoid signal interference during the setup process.

1. Launch the Arlo Secure App.
2. Tap **Devices**.

Note: Make sure the correct Location where you want to add the camera is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Tap **Cameras**.
5. Tap **Others**.
6. Tap **Baby**.
7. Tap **I Understand**.
8. Plug your camera into an AC power outlet and ensure that the power switch is turned on.
9. When the camera LED turns solid amber, tap **Continue**.
10. Tap **QR code setup** at the bottom of the screen.
11. Enter your Wi-Fi credentials, to include **Network Name** (SSID) and **Password**.
12. Tap **Continue**.
13. Hold the **Sync** button on your camera for about two seconds, and then release.
The Blue LED will start blinking.
14. Tap **Continue**.
15. Hold the QR code about eight inches in front of your camera.

You should hear a chime.

If you didn't hear a chime, visit: [My Arlo camera will not scan the QR code during setup](#)

16. Tap **Continue**.

The **Looking for device** screen displays.

If Arlo does not discover your device, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0](#)

17. After Arlo discovers your device, type a **Name** for your camera.

18. Tap **Continue**.

Your camera is now active.

19. Tap **Finish**.

For more information, visit:

- [Where do I place my Arlo Baby camera and how do I position it?](#)
- [How do I mount my Arlo Baby camera](#)

Last Updated:06/05/2024 | Article ID: 000063021

How to set up the Arlo Pro 3 Floodlight Camera - Arlo Secure 4.0

How to set up the Arlo Pro 3 Floodlight Camera - Arlo Secure 4.0

This article applies to:

[FB1001](#)

*This article is for the Arlo Secure App with **Feed**. If you have the Arlo Secure App with **Library**, visit: [How to set up the Arlo Pro 3 Floodlight Camera?](#)*

For the best results use the Arlo Secure App for Arlo camera setup.

An Arlo SmartHub or Base Station is optional.

- For more information, visit: [What are the benefits of using an Arlo SmartHub or Base Station?](#)

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the Need Help? button in the Arlo Secure App or on my.arlo.com.

- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To set up Arlo Pro 3 Floodlight cameras directly to your

Wi-Fi router:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)
3. Tap .
4. Tap **Lights**.
5. Tap **Pro 3 Floodlight Camera**.
6. Review the Meet your Arlo Floodlight screens, watch the installation video, and tap **Continue**.
7. Tap **Connect without SmartHub**.
8. Check your mobile device settings to ensure you are connected to a **2.4 GHz network**.
9. Return to the Arlo Secure App and tap **Continue**.
10. Enter your Wi-Fi **SSID** (network name) and **Password**.
11. Tap **Continue** and wait until the firmware update is complete.
12. Insert the battery into the Arlo Floodlight and tap **Continue**.
13. Keep the Arlo Floodlight separate from the housing and tap **Continue**.
14. When the LED on the front of the Arlo Floodlight is blinking blue, tap **Continue**.

15. Hold the QR code about four to six inches in front of your Arlo Floodlight Camera lens.

When you hear a chime, tap **Continue**. If you are having trouble, visit: [My Arlo camera will not scan the QR code during setup](#)

16. Arlo will begin looking for your camera.

After the camera is found, name your Arlo camera and tap **Continue**.

17. Now that the Arlo Floodlight is paired with the Arlo Secure App, tap **Continue** to proceed with mounting the Arlo Floodlight.

18. Place the Arlo Floodlight in an area with strong bandwidth and tap **Continue**.

19. Make sure the Arlo Floodlight battery is charged and tap **Continue**.

20. Review the screens for installing the wall plate, securing the housing, and adjusting the angle of the Arlo Floodlight, then tap **Continue**.

21. Check the position of your Arlo Floodlight and tap **Continue**.

22. Follow the instructions for testing the light and tap **Continue**.

23. Tap **Finish**.

Note: Your camera will be added to the  Arm Away mode after installation. Motion Detection, Recording, and Variable Length recording are enabled. For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

To set up the Arlo Pro 3 Floodlight Camera with an Arlo

SmartHub or Base Station:

1. Launch the Arlo Secure App.

2. Tap **Devices**.

Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .

4. Tap **Lights**.

5. Tap **Pro 3 Floodlight Camera**.

6. Review the Meet your Arlo Floodlight screens, watch the installation video, and tap **Continue**.
7. Tap **Continue** to add your device to an existing Arlo SmartHub or set up a new Arlo SmartHub or Base Station.
8. Insert the battery into the Arlo Floodlight and tap **Continue**.
9. Keep the Arlo Floodlight separate from the housing and tap **Continue**.
10. Follow the in-app instructions to complete the setup.

Note: Your camera will be added to the  Arm Away mode after installation. Motion Detection, Recording, and Variable Length recording are enabled. For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

For more information, visit:

- [How do I wall-mount my Arlo Pro 3 Floodlight Camera?](#)
- [How should I position my Arlo Pro 3 Floodlight Camera?](#)
- [How do I re-position my Arlo Pro 3 Floodlight Camera if it is already mounted?](#)
- [How do I completely remove my Arlo Pro 3 Floodlight Camera from the wall?](#)
- [What are the minimum requirements for installing and using my Arlo system?](#)
- [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)
- [How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to a SmartHub or Base Station? - Arlo Secure 4.0](#)
- [How do I charge my Arlo Pro 3 Floodlight Camera?](#)
- [Arlo Pro 3 Floodlight Camera FAQ](#)
- [Arlo Pro 3 Floodlight Camera Product Tour](#)

To troubleshoot setup issues, visit:

- [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0](#)
- [What to do when your Arlo camera will not sync to a SmartHub or Base Station during an install or setup - Arlo Secure 4.0](#)
- [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)
- [Arlo can't discover my Base Station during installation; what do I do?](#)
- [My Arlo camera will not scan the QR code during setup](#)

How to set up the Arlo Essential Indoor Camera - Arlo Secure 4.0

How to set up the Arlo Essential Indoor Camera (2nd Generation)

This article applies to:

The Arlo Essential Indoor Camera (2nd Generation) is installed via Bluetooth.

You will need the following before installing your Arlo Essential Indoor Camera (2nd Generation):

- 2.4Ghz Wi-Fi network
- Bluetooth-enabled mobile device
- Arlo Secure App 4.0

To set up the Arlo Essential Indoor Camera (2nd Generation) directly to your Wi-Fi router:

1. Launch the Arlo Secure App.
2. Tap **Devices**.


Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Tap **Cameras > Essential Series > Essential Camera (2nd Generation)**.

Note: If you are using the previous 3.0 Arlo Secure experience, the Arlo Secure App will upgrade you to the new Arlo Secure experience.

5. Grant the Bluetooth permission to continue.

6. Press and hold the **Pairing Button** on the camera for 3 seconds to enter pairing mode.

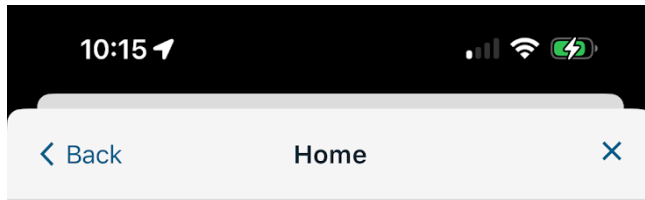

Press and hold the Pairing Button for 3 seconds on your camera.

When the LED light on the front of the camera is flashing blue, you're good to go.



Continue

7. Once the Essential Camera is detected, tap **Continue**.
8. Find a location to place the camera that is near an outlet and within range of your Wi-Fi network.
9. Select the 2.4GHz Wi-Fi network that you want to use and tap **Continue**.

10. Enter your Password and tap **Continue**.

Arlo will begin looking for your camera.

11. After the camera is found, name your Arlo camera and tap **Continue**.

12. If available, your camera will perform a firmware update.

13. Position your Arlo camera and tap **Continue**.

For more information, visit:

- [How do I enable Bluetooth on my mobile device for the Arlo Secure App](#)
- [What are the minimum requirements for installing and using my Arlo system?](#)
- [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)
- [Arlo Camera Placement Tips](#)

Last Updated:05/09/2024 | Article ID: 000063197

How do I set up my Arlo Go 2 Camera? - Arlo Secure 4.0

How do I set up my Arlo Go 2 Camera? - Arlo Secure 4.0

This article applies to:

[VML2030](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How do I set up my Arlo Go 2 Camera?](#)*

Arlo Go 2 gives you the flexibility of using 2.4 GHz Wi-Fi or LTE for connectivity. You can also use LTE as a backup in case your Wi-Fi internet connection is interrupted.

Note: When using both 2.4 GHz Wi-Fi and LTE mode, Wi-Fi will always be the primary mode of connection.

Arlo Go 2 works with the same Arlo Secure App as all other Arlo cameras and devices. However, to connect your Go 2 camera to the mobile network, an activated SIM card with a mobile data plan must be inserted into the camera.

Note: We recommend that you charge the battery before mounting your camera. Your camera LED indicator light will blink amber if your battery needs charging. The indoor charging cable that came with your camera works with most power adapters.

- For more information, visit: [How do I insert the battery in my Arlo Go 2 camera?](#)

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the **Need Help?** button in the Arlo Secure App or on my.arlo.com.

- You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To set up your Arlo Go 2 camera using LTE only:

1. Launch the Arlo Secure App.
2. Tap **Devices**.

Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Tap **Cameras**.
5. Tap **Go 2**.
6. Tap **Continue**.
7. Follow the instructions for installing your SIM card as shown on the Arlo Secure App and tap **Continue**.

For more information, visit: [How do I install a SIM card in my Arlo Go 2 Camera?](#)

The LED in front of your camera should blink blue. If the LED is not blinking blue, press the Sync button on the inside of your camera.

8. Tap **Continue**.

9. Hold the QR code in the Arlo Secure App, 4 to 6 inches in front of your camera.
You should hear a chime from your Arlo device. If you didn't hear a chime, visit:
[My Arlo camera will not scan the QR code during setup](#)
10. Tap **Continue**.
11. Name your Arlo camera and tap **Continue**.
12. Position your Arlo camera and tap **Continue**.
13. Tap **Finish**.

To set up your Arlo Go 2 camera with Wi-Fi:

Note: Before setting up your Arlo Go 2, make sure that your mobile device is connected to a Wi-Fi network. For more information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)

1. Launch the Arlo Secure App.
2. Tap **Devices**.
Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)
3. Tap .
4. Tap **Cameras**.
5. Tap **Go 2**.
6. Tap **Set Up with Wi-Fi**.
7. Follow the instructions for installing your SIM card as shown in the Arlo Secure App and tap **Continue**.
Note: You may skip this step if you are not using a SIM card.
The LED in front of your camera should blink blue. If the LED is not blinking blue, press the Sync button on the inside of your camera.
8. Tap **Continue**.
9. Verify your mobile device is connected to a 2.4 GHz Wi-Fi network and tap **Continue**.
10. Enter your Wi-Fi credentials, then tap **Continue**.

11. Hold the QR code in the Arlo Secure App, 4 to 6 inches in front of your camera.

You should hear a chime from your Arlo device. If you didn't hear a chime, visit:

[My Arlo camera will not scan the QR code during setup](#)

12. Tap **Continue**.

13. Name your Arlo camera and tap **Continue**.

14. Position your Arlo camera and tap **Continue**.

15. Tap **Finish**.

If the Arlo Go 2 camera is installed too far from your Wi-Fi router, it may cause the battery to drain quicker. For more information, visit: [How do I control whether my Go 2 Camera connects to Mobile or Wi-Fi?](#)

Last Updated: 10/07/2024 | Article ID: 000062873

How do I mount my Arlo Q or Arlo Q Plus Camera?

How do I mount my Arlo Q or Arlo Q Plus Camera?

This article applies to:

To mount your Arlo Q or Arlo Q Plus Camera:

1. Remove the mounting plate from the camera base.
2. Place the wall plate and secure it in the wall with four screws.

Note: If you are mounting the camera to drywall, use the provided plastic

anchors.



3. Slide the camera into the wall plate.

Note: Arlo Q and Arlo Q Plus cameras come with a magnetic plate that can attach to any flat steel or iron surface.

Caution: Do not attempt to mount Arlo Q or Arlo Q Plus cameras to a half-dome Arlo Wire-Free camera mount. This might result in the camera falling from the mount.

Last Updated:06/12/2024 | Article ID: 1111433

How do I mount my Arlo Baby camera?

How do I mount my Arlo Baby camera?

This article applies to:

You can place your Arlo Baby camera on any stable horizontal surface, such as a shelf or a table, or you can mount it on a wall using the included mounting plate and screws.

Follow these steps to mount your Arlo Baby camera on a wall using the included mounting plate and screws.


To mount the camera on a wall:

1. Make sure that the camera has a good view of the area that you want to monitor using Arlo Baby.

For more information about placing and positioning your Arlo Baby camera, visit:

[Where do I place my Arlo Baby camera and how do I position it?](#)

2. Place the wall plate and secure it with three screws.

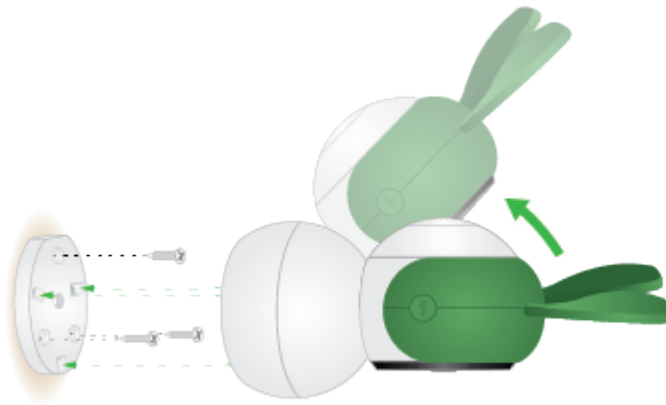

3. Align the wall plate with the holes on the base of the camera and rotate the base until it snaps into place.
4. Use Arlo Baby's tilt and swivel functions to position the camera so that it captures the area that you want to monitor.



Last Updated:05/15/2024 | Article ID: 1282669

How do I mount my Arlo camera using the magnetic wall mount?

How do I mount my Arlo camera using the magnetic wall mount?

This article applies to:

[VMC5040](#) [VMC4040P](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#)

The magnetic mount is concave and fits perfectly with the shape of the rear of your camera. This allows a more precise fit between the mount and camera, and it enables dynamic ways to mount

an Arlo Ultra and Arlo Pro series camera, including: walls and underneath ceilings. The strong magnetic force between these cameras and the mount provides peace of mind that the camera will stay in position.

To mount your Arlo camera:

1. Fasten the mounting screw into a wall or ceiling.
Note: Do not attach the magnetic wall mount to a drop ceiling.
2. Use the plastic stopper to help guide how far to screw into the wall or ceiling.
3. If you plan to connect an Arlo Ultra or Pro series camera to a charging cable, wrap the excess charging cable around the back side of the mount.



4. Snap the magnetic mount around the screw and stopper.
The mount clicks into place when it is placed properly on the screw.
5. Attach your camera to the indoor wall mount.

6. Adjust the camera to your preferred viewing angle.



You can replace the batteries on an Arlo Ultra and Pro series camera without removing your camera housing from the indoor wall mount.

WARNING: When inserting the camera into the camera housing, do not push down on the lens or soft area below the lens.

To replace the batteries on an Arlo Ultra or Pro series without removing the camera from the wall mount:

1. Press the button on the charging port underneath the camera.
A clicking sound occurs, and the camera slides partially out of the camera housing.
2. Pull the camera until it is entirely removed from the camera housing.
3. Remove the battery by pulling on it until it slides out of the camera.
4. Align the new battery and insert it into the battery compartment.

Note: The battery only inserts one way.

The camera LED blinks blue.

5. Insert the camera back into the camera housing until it clicks into place.
Do this by pushing down on both the left and right sides of the camera.

For more information, visit [How do I replace the batteries on my Arlo Ultra camera?](#).

For information about mounting Arlo Pro, Pro 2, or Arlo Wire-Free (VMC3030) Cameras, visit: [How do I mount my Arlo Wire-Free or Arlo Pro Wire-Free camera using the indoor wall mount?](#).

Last Updated:04/23/2024 | Article ID: 000062133

Where do I place my Arlo Baby camera and how do I position it?

Where do I place my Arlo Baby camera and how do I position it?

This article applies to:

Follow these guidelines on placement and positioning to get the best performance from your Arlo Baby camera.

Where do I place my Arlo Baby camera?

Place your Arlo Baby camera within 300 feet (90 meters) of your Wi-Fi router. The maximum line-of-sight range of 300 feet (90 meters) is reduced by each wall, ceiling, or other major obstruction between the camera and the router. The following materials reduce signal strength the most:

- Unusually thick walls and ceilings
- Brick
- Concrete
- Stone
- Ceramic
- Glass, especially mirrors
- Metal
- Large quantities of water, such as the water in a fish tank or water heater

Try to place Arlo Baby as far as possible from the following sources of Wi-Fi interference:

- Other Wi-Fi devices (except your router)
- Cellular devices
- Bluetooth devices
- Microwaves
- Cordless phones

After you pick a location for Arlo Baby, check the camera's LED behavior.

- If Arlo Baby's LED blinks purple, Arlo Baby is too far away from your Wi-Fi router or your Wi-Fi environment has too much interference.
- For more information about improving Arlo Baby's Wi-Fi connection, visit: [My Arlo Baby has a poor Wi-Fi connection and the LED is blinking purple; what do I do?](#)

You can place Arlo Baby on a flat surface, such as a shelf or table, or you can mount it on a wall using the included mounting kit.

- For more information about mounting Arlo Baby, visit: [How do I mount my Arlo Baby camera?](#)

How do I position my Arlo Baby camera?

When positioning your Arlo Baby camera, keep these tips in mind:

- Make sure the Arlo Baby camera USB cable and power adapter are out of the reach of children.
- Never place the camera or cord in or near a crib or playpen.
- Never mount the camera directly above a crib or playpen to avoid the risk of injury.
- Avoid positioning the camera in an area that gets a lot of light shining directly into the camera lens.
- Avoid aiming the camera at windows since this can generate unwanted reflections and false positive motion alerts.
- Avoid positioning the camera so that the lens is pointed down at the edge of a table or other flat surface since this can generate unwanted reflections.
- Try to aim your camera away from walls, and make sure that no walls that are close to the camera are within the camera's field of view. Infrared lights can

reflect off walls and negatively impact video quality, and the negative impact is greater when the camera is closer to the wall.

- You can swivel the camera head and tilt it up and down.



- You can pan and zoom the camera and change the field of view.
 - Arlo Baby provides a 110-degree viewing angle as the default, but you can change the field of view to 90, 100, 120 or 130 degrees.
- When positioning your camera, start a live stream from your Arlo Baby camera.
 - Aim the camera while watching the video feed on your Arlo Secure App to make near-real-time adjustments to the camera's position.

Last Updated:06/26/2024 | Article ID: 1282672

INTERNAL KB

How to troubleshoot Arlo Firmware Update Error 4208

How to troubleshoot Firmware Update error – Error 4208 (INTERNAL)

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [VMB5000](#) [VMB4540](#)
[VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#)
[VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#)
[VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

1. Check the device charge. The device should have at least 15% battery charge prior to updating.
2. Check network connectivity. Make sure that the internet is working and the device is connected.
3. Move the device closer to the Base Station/Smart Hub/router if the update error is experienced in the camera. Place the camera within **3 feet (1 meter)** from the Base Station/SmartHub/router.
4. Remove the device from the app and re-add.
5. Verify the internet speed via speedtest.
6. Consult/Escalate to L2 if the issue persists.

Last Updated:12/10/2021 | Article ID: 000062670

How to troubleshoot issues with Arlo Ultra Offline September 15, 2023

How to troubleshoot issues with Arlo Ultra Offline September 15, 2023

This article applies to:

[VMC5040](#)

An issue occurred on September 15, 2023 for Arlo Ultra and Ultra 2 cameras that may cause the camera to go offline and remain in the offline state. To recover from this state, the camera will need to be reset to factory defaults and re-added to your Arlo account.

To factory reset and re-add your Arlo Ultra or Ultra 2 camera:

1. Your Arlo Ultra camera needs a minimum charge before starting the reset process. Attach your Ultra camera charging cable for at least 30 minutes before continuing.
2. Remove the battery from the Arlo Ultra camera. Press the release button to remove the camera housing to access the battery.



3. Set your Arlo SmartHub or Arlo Base Station to **Disarmed** or **Standby**.

Note: If your Arlo Ultra camera is set to record on Standby mode, switch to a mode where the camera does not record, or temporarily delete the rule.

4. Remove the Arlo Ultra camera from your account in the Arlo Secure App.

For the Arlo Secure experience with **Feed**:

- Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
- Tap or click **Devices**.
- Tap or click on the camera you want to reset.
- Tap or click .
- Tap or click the Device Name.
- Tap or click **Remove Device**.
- Tap or click **Yes** to confirm that you want to remove the camera from your account.

For the Arlo Secure experience with **Library**:

- Launch the Arlo Secure App or log in to my.arlo.com.
- Tap or click **Settings > My Devices** and select the camera you just reset.
- Tap or click **Remove Device**.
- Tap or click **Yes** to confirm.

5. Wait for the LED on your Arlo SmartHub to display Solid Blue.

For Arlo Base Stations, wait for the Camera LED (furthest right) to stop blinking. The LED should be solid green, or off.

6. Reset the camera.

WARNING: The following steps must be performed in a fast sequence. Read through the steps before proceeding.

- A. Locate the Sync button on the camera, and place your finger on the button without pressing it.

- B. Hold the camera so that you can see the face of the camera and its LED (see #4 in the following diagram).



- C. Insert the battery into the camera.
- D. The Blue LED will quickly flash and turn off, two seconds after the battery is inserted.
- E. Once the Blue LED flashes, quickly press and hold the Sync button until the Amber LED blinks, then release the button.
- F. The camera will reboot. The Blue LED will begin blinking to indicate the camera has been reset.
- G. Re-add the Arlo Ultra camera to your account.

For the Arlo Secure experience with **Feed**:

- Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
- Tap or click **Devices**.
- Tap or click .
- Select your Arlo device.
- Follow the prompts to connect the camera to your Arlo SmartHub or Base Station.

For the Arlo Secure experience with **Library**:

- Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
- Tap or click **Devices**.
- Tap or click **Add New Device**.

- Select your Arlo device.
 - Select your Arlo model.
 - Follow the prompts to connect the camera to your Arlo SmartHub or Base Station.
8. After installation is complete, the **Firmware Update is Required** notification will appear in the Arlo Secure App. Update the camera firmware.
- During the firmware update, the camera LED will alternate between Blue and Amber.
 - When the Blue and Amber pattern stops, the firmware update is complete.

If the camera is still offline, continue with the following steps.

9. Press the **Sync** button on the camera, then the **Sync** button on the Arlo SmartHub or Base Station.
- After pressing the button, the LED on the camera and Arlo SmartHub will slowly blink Blue. On Arlo Base Stations, the Camera LED will slowly blink green.
 - Once syncing is complete, the camera and Arlo SmartHub LED will rapidly blink Blue for 10 seconds. On Arlo Base Stations, the Camera LED will rapidly blink green for 10 seconds.
10. Close the Arlo Secure App and reopen the app. On my.arlo.com log out and log back in.
- If you continue to experience offline issues after the reset, contact [Arlo Support](#).

Last Updated: 10/09/2023 | Article ID: 000063208

BASE STATION

Arlo Base Station (Three LED) Offline Troubleshooting (INTERNAL)

Arlo Base Station (Three LED)

Offline Troubleshooting

(INTERNAL)

This article applies to:

[VMB4000](#) [VMB3500](#)

To troubleshoot offline Base Stations with three LEDs:

1. Check the status in the CS Diag tool and the history in Splunk.
2. Check the LED pattern:

- **Power:**
 - **Off** - Base Station is powered off.
 - **Green** - Base Station is powered on.
 - **Blinking Green** - A firmware update is in progress.
- **Internet:**
 - **Green** - Base Station is connected to the Internet.
 - **Blinking Green** - Base Station is sending data over the Internet.
 - **Amber** - Base Station is connected to the router but does not have an Internet connection.
 - **Off** - Base Station is not connected to a router.

- If the **Power LED** is **Off**, see the following article: [How to troubleshoot Arlo Base Station or SmartHub power issues \(INTERNAL\)](#)
- If the **Internet LED** is **Off**, make sure the Ethernet cable is securely connected to the Base Station and router (use the Ethernet cable that came with the system).

If the Internet LED is **Amber**, continue to step 3:

3. Try plugging the Ethernet cable into a different LAN port in the router or use a known working LAN cable.
4. Power cycle the Base Station:
 - Unplug the AC power adapter and Ethernet cable for **one minute**.
 - Reconnect the Ethernet cable, then reconnect the power adapter.
 - Wait until the Base Station powers back on (the LED should turn solid **Green**).
5. Check if other devices can connect to the Internet on the same router. Use an Ethernet-connected device and turn off the Wi-Fi to ensure that it is connecting via Ethernet.
6. Factory reset the device:
 - **WARNING:** Performing a factory reset returns the Arlo SmartHub or Base Station to its default settings. All devices paired to the Arlo SmartHub or Base Station must be re-added to the account
 - Press and hold the **Reset** button on the back of the Base Station for **10 seconds** using a paper clip or pen until the LEDs blink **Amber**.
 - Once the LEDs stop blinking, the Base Station reboots and the device is removed from the Arlo account.
 - Re-onboard the Base Station once the LED turns solid **Blue**.

Last Updated:04/19/2024 | Article ID: 000062631

Arlo Base Station (Single LED) and SmartHub Offline Troubleshooting (INTERNAL)

To troubleshoot offline Base Stations and SmartHubs with one LED:

1. Check the status in the CS Diag tool and the history in Splunk.

2. Check the LED pattern:



- Solid Blue - the SmartHub is connected to the internet.
 - Slow Blinking Blue - Ready to sync and pair with a camera or connecting with a camera.
 - Fast Blinking Blue - SmartHub has successfully paired with a camera.
 - Solid Amber - An error has occurred or something is wrong with the connection.
 - Slow Blinking Amber - The camera connection can't be found, is out of range, or some other connection error has occurred.
 - Alternating Blue and Amber - A firmware update is in progress or a reset is in progress.
 - If all LED lights are off, see the following article: [How to troubleshoot Arlo Base Station or SmartHub power issues \(INTERNAL\)](#)
3. Make sure that the Ethernet cable is securely connected to the Base Station/SmartHub and router.
 4. Make sure you are using the Ethernet cable that came with the system.
 5. Try plugging the Ethernet cable into a different LAN port in the router or use a known working LAN cable.
 6. If the LED is stuck alternating Blue and Amber, reset the device by unplugging the AC adapter for 10-20 seconds. Then plug it back in and try again.
 7. Check if other devices can connect to the internet on the same router. Use an Ethernet-connected device and turn off the Wi-Fi to ensure that it is connecting via Ethernet.
 8. Factory reset the device:
 - **WARNING:** Performing a factory reset returns the Arlo SmartHub or Base Station to its default settings. All devices paired to the Arlo SmartHub or Base Station must be re-added to the account.
 - Press and hold the Reset button on the back of the Base Station/SmartHub station 10 seconds using a paper clip or pen until the LEDs blink amber.

- Once the LED light stops blinking, the Base Station/SmartHub reboots and the device is removed from the Arlo account.
- Re-onboard the Base Station/SmartHub once the LED light turns solid Blue.
- For more information, visit: [How can I factory reset my Arlo SmartHub or base station?](#)

How to troubleshoot Arlo Base Station offline in CS Diag Tool (INTERNAL)

How to troubleshoot Arlo Base Station offline in CS Diag Tool (INTERNAL)

This article applies to:

[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#)

Symptoms:

- Power and Internet LEDs are green.
- Cameras show **Getting Status. Your Base station is not connected to the Internet. Please check your connection.**
- Restart button is not available under **Base Station Settings**.
- CS Diag Tool displays **Provisioned - Offline**.

Workaround:

1. Log in to the account where Base Station was activated using a mobile app.
2. Tap **SmartHub / Base Station / Bridge** settings on the Devices screen.
3. Select the Base Station you wish to remove.
4. Tap **Remove Device**.
5. Make sure the mobile device is on the same network as the Base Station.
6. Tap **Add New Device +** on the Devices screen to re-add the Base Station.
7. Select **Base Station/Hub** and follow the on-screen instructions.

CONNECTED TO BS/SH

How to troubleshoot Video Doorbell AVD1001 offline when connected to a Base Station/Smarthub (INTERNAL)

How to troubleshoot Video Doorbell AVD1001 offline when connected to a Base Station/Smarthub (INTERNAL)

This article applies to:

[AVD1001](#)

To troubleshoot Video Doorbell (AVD1001) offline issues when connected to a Base Station/Smarthub:

1. Make sure the Base Station/Smarthub is online.
 - Check the status in the **CS Diag Tool** and check the history in **Splunk**.
2. Verify the router is working and other devices can connect to the Internet.
3. Check the circuit breakers in the home and ensure they are set to ON.
4. Ensure the AC adapter/transformer is securely plugged in and the doorbell is getting power.
5. Confirm wiring at the back of the doorbell is secured upon mounting.
6. Try relocating the Base Station/SmartHub closer to the Video Doorbell.
 - The Video Doorbell should be located within **300 feet** (90 meters) from the Arlo Base Station/SmartHub.

- The signal is reduced by each wall, ceiling, or other major obstruction between the doorbell and SmartHub/Base Station.
- 7. Turn the circuit breaker off for **10 to 15 minutes** and allow the internal Video Doorbell battery to completely deplete.
- 8. Turn the circuit breaker on and wait until the Video Doorbell establishes a connection.
- 9. If the above steps do not get the Video Doorbell back online, **factory reset** the device.
 - Use a paper clip or the release pin to press and hold the **Reset** button at the back of the Video Doorbell for **10 seconds**.
 - After factory reset, the device returns to default settings and is removed from the account.
 - On-board the Video Doorbell and follow the Arlo app setup process.

Last Updated:10/11/2021 | Article ID: 000062641

Arlo Video Doorbell AVD2001 Offline Troubleshooting - Connected to a Base Station/SmartHub (INTERNAL)

Arlo Video Doorbell AVD2001

Offline Troubleshooting -

Connected to a Base

Station/SmartHub (INTERNAL)

This article applies to:

[AVD2001](#)

1. Check status on CS Diag Tool and History in Splunk.

- Make sure the Base Station/SmartHub is online. If the Base Station/SmartHub is online and is connected to the internet, follow Step 2. Otherwise, see article ["The Arlo Base station is Offline - Single LED Smarthub"](#) or ["The Arlo Base station is Offline - Three-LED Smarthub"](#).

2. Check the signal history in Splunk. Temperature also affects the doorbell and can cause it to go offline. Due to operation limitations, recommended temperature is **-4F to 140F** (or -20C to 60C).

3. Check the battery charge. For initial installation, recommend to charge the battery to 100% prior to onboarding.

4. Try moving or relocating the base near the doorbell if the device is connected to an Arlo SmartHub or base station. The Arlo device should be located within **300 feet (90 meters)** from the Arlo SmartHub or base station. The maximum range is reduced by each wall, ceiling, or other major obstruction between the camera and SmartHub or base station.

5. Reset the doorbell by removing the battery, wait for 15 seconds and reinstall battery.

6. Factory reset the device. Use a paper clip or the release pin to press and hold the **RESET** button for 10 seconds. After factory reset, the device returns to default settings and it is removed from the account. Onboard the doorbell and follow the Arlo app setup process.

NOTE: A factory reset deletes all cameras connected to the base station or SmartHub from the Arlo account. They will need to set up the Arlo system again.

Last Updated:11/09/2021 | Article ID: 000062643

How to Troubleshoot Offline Issues on Arlo Essential Cameras - Connected to Base/SmartHub (INTERNAL)

How to Troubleshoot Offline Issues on Arlo Essential Cameras -

Connected to Base/SmartHub

(INTERNAL)

This article applies to:

[VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#)

1. Check status in CS Diag tool and history in Splunk.
2. Check status of the Base Station or SmartHub. If the base or SmartHub is offline, refer to "[The Arlo Base station is Offline - Single LED Smarthub](#)" or "[The Arlo Base station is Offline - Three-LED Smarthub](#)".
3. Check the LED status of the camera:
 -  **Slow Blinking Blue** - the camera is in the process of pairing with the base.
 -  **Fast Blinking Blue** - the camera is paired with the base station/SmartHub.
 -  **Blinking Amber** - the camera is out of range, a connection error has occurred during pairing or the battery charge is low.
 -  **Alternating Blue and Amber** - A firmware update is in process.
4. Check if the camera is responding and has power. Press the **SYNC** button for 1-2 seconds to wake the camera. The LED will flash Blue for 2 minutes. Charge the camera using the USB cable that comes with the unit if the device is not responding.
5. Other WiFi streaming devices can affect the camera. Relocate or change the position of the camera or base station/SmartHub to isolate interference or location problems. The base station/SmartHub and the router should be **3 feet (1 meter)** away from each other.
6. Factory reset the camera. To reset:
 - Press and hold the **SYNC** button for 15 seconds.
 - Release **SYNC** when the camera LED blinks amber.
 - Remove the device from the Arlo app and add the device.
 - Follow the in-app instructions to set the camera.

How to Troubleshoot Offline Issues on Arlo Cameras (INTERNAL)

How to Troubleshoot Offline Issues on Arlo Cameras (INTERNAL)

This article applies to:

[VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4030](#) [VMC3030](#)

1. Verify if the camera has power and is responsive. The battery should be charged prior to onboarding. Charge the battery if the camera is unresponsive.
2. Check if the internet connection is stable and if the base station is online (if applicable). If not, use "[The Arlo Base station is Offline - Single LED Smarthub](#)" or "[The Arlo Base station is Offline - Three-LED Smarthub](#)".
3. Remove the battery for 10 seconds and re-insert. The camera LED will flash BLUE, if it does not flash, charge the battery.
4. Place the camera within **3 feet (1 meter)** from the router or base station. Other WiFi streaming devices can also affect the camera. Relocate or change the position of the camera to isolate interference or location problems.
5. Remove the camera from the Arlo application and reset by pressing the **SYNC** button for **15 seconds**.
6. Re-onboard by following the in-app instructions.
7. Factory reset the camera.
 - Press and hold the **SYNC** button for 10-15 seconds.
 - The camera LED will turn On solid Blue for 2 seconds and then blinks amber 3 times.
 - Continue holding the **SYNC** button through all the **LED** behaviors. The camera will shut down.
 - Press **SYNC** to wake up the camera and re-onboard.

Note: The factory reset instructions will not work with Pro and Pro 2. The camera will only return to its factory setting if the above steps are done while the camera is online and the Base Station/SmartHub is removed.

Related external KB Article:

- [My Arlo camera is offline; how can I troubleshoot it?](#)

Last Updated:06/15/2022 | Article ID: 000062648

How to troubleshoot offline issues for Arlo VMC3030 Wire-Free Cameras connected to Base Stations/SmartHubs (INTERNAL)

How to troubleshoot offline issues for Arlo VMC3030 Wire-Free Cameras connected to Base Stations/SmartHubs (INTERNAL)

This article applies to:

[VMC3030](#)

To troubleshoot offline issues for Arlo Wire-Free Cameras connected to Base Stations/SmartHubs:

1. Ensure the camera has power and is responsive.
 - Press the **Sync** button for **1 to 2 seconds**.
 - The LED will flash **Blue** for **2** minutes.
 - If the camera is not responding, change the batteries.

- **Note:** The Arlo Wire-Free camera comes with non-rechargeable batteries.

- Rechargeable batteries can be purchased separately.

2. Check the LED status of the camera:

● **Solid Blue** - the camera is on

⚙️ **Fast Blinking Blue** - the camera is synced to the Base Station/SmartHub

● **Solid Amber** - the camera is booting up

☀️ **Blinking Amber once every minute** - the battery is low

☀️ **Fast Blinking Amber** - the camera failed to sync to the Base Station/SmartHub

⚙️ **Alternating Blue and Amber** - A firmware update is in progress

1. Check the status in the **CS Diag** tool and check the history in **Splunk**.
2. Check the status of the Base Station/SmartHub.
 - If the Base Station/SmartHub is **offline**, follow the steps in one of the following applicable articles:
 - [Arlo Base Station \(Single LED\) and SmartHub Offline Troubleshooting \(INTERNAL\)](#)
 - [Arlo Base Station \(Three LED\) Offline Troubleshooting \(INTERNAL\)](#)
3. **Power cycle** the camera and Base Station/Smarthub:
 - Remove the **camera battery** and reinstall.
 - Unplug the Base Station/Smarthub power adapter from the wall outlet.
 - Wait for **one minute** and reconnect.
4. **Factory reset** the camera:
 - Press and hold the **Sync** button for **10 to 15 seconds**.
 - The camera LED will turn **solid Blue** for **2 seconds** and then **blink Amber 3 times**.
 - Continue holding the **Sync** button through all the LED behaviors.
 - Press to **Sync** button to begin the onboarding process.
5. **Factory reset** the Base Station/SmartHub.

- Press and hold the **Reset** button on the back of the Base Station/SmartHub for **10 seconds** using a paper clip or pen until the LEDs **blink Amber**.
- Once the LEDs stop blinking, the Base Station/SmartHub reboots and the device is removed from the Arlo account.
- Re-onboard the Base Station/SmartHub.

Last Updated:10/31/2022 | Article ID: 000062638

CONNECTED D2AP

Arlo Video Doorbell AVD1001 Offline Troubleshooting - Connected to a Router (INTERNAL)

Arlo Video Doorbell AVD1001

Offline Troubleshooting -

Connected to a Router (INTERNAL)

This article applies to:

[AVD1001](#)

1. Check status on CS Diag Tool and History in Splunk.
2. Check if the doorbell is getting enough power and the power kit is installed correctly.

If the the doorbell is not receiving enough power, see article "[How do I enable Bypass Mode on my Arlo Essential Video Doorbell Wired?](#)".

3. Make sure that the router is working and other devices can connect to the internet. The Video Doorbell requires a **2.4GHz WiFi network**. Ensure that the device and the video doorbell is on the same network and the credentials entered is correct.
4. Reset the device. Turn the circuit breaker off for 10-15 minutes until the battery dies and re-onboard.

5. Factory reset the device. There is a **RESET** pinhole at the back of the doorbell. Use a paper clip or the release pin to press and hold the **RESET** button for 10 seconds. After factory reset, the device returns to default settings and it is removed from the account. Onboard the doorbell and follow the Arlo app setup process.

If the doorbell is having difficulty reading or scanning the code, see article "[My Arlo camera won't scan the QR code during setup](#)".

Related external KB Articles:

- [Arlo Doorbell Offline: How to Troubleshoot](#)
- [My Arlo Essential Video Doorbell wasn't found during setup: what do I do?](#)

Last Updated:06/15/2022 | Article ID: 000062642

Arlo Video Doorbell AVD2001 Offline Troubleshooting - Connected to a Router (INTERNAL)

Arlo Video Doorbell AVD2001

Offline Troubleshooting -

Connected to a Router (INTERNAL)

This article applies to:

[AVD2001](#)

1. Check status on CS Diag Tool and signal history in Splunk.

NOTE: The **LED** lights in the doorbell will function normally even if it goes offline after onboarding. The doorbell lights will show a slow breathing white light when motion is detected.

2. Check if router is working and other devices can connect to the internet. Verify if the battery is charged or the doorbell is getting power. The device should illuminate when the doorbell is pressed.

If the **LED** is Off and the doorbell does not respond, charge the battery to 100%. Recommend using the USB charging cable that comes with the device. For optimal charging, use a **5V 2A** adapter.

3. Temperature also affects the doorbell and can cause it to go offline. Due to operation limitations, recommended temperature is **-4F to 140F** (or -20C to 60C).

4. Try relocating the router. The maximum range is reduced by each wall, ceiling, or other major obstruction between the camera and the router. Make sure that there are no other equipment or major obstructions that can interfere with the doorbell and the router.

5. Power cycle the doorbell. Remove the battery for 15 seconds, re-insert and wait until the device comes back up.

6. Factory reset the device. There is a reset pinhole at the back of the doorbell. Use a paper clip or the release pin to press and hold the **RESET** button for 10 seconds. After factory reset, the device returns to default settings and it is removed from the account. Onboard the doorbell and follow the Arlo app setup process.

Last Updated:10/18/2021 | Article ID: 000062644

How to troubleshoot wireless Essential camera offline issues when connected to a router
(INTERNAL)

How to troubleshoot wireless Essential camera offline issues when connected to a router (INTERNAL)

This article applies to:

[VMC2020](#) [VMC2030](#) [VMC2032](#)

To troubleshoot wireless Essential camera offline issues when connected to a router:

1. Confirm the router is working and other devices can access the internet.
 - The device and the camera should be on the **same 2.4GHz** frequency.
 - If using a mesh system, turn off all of the access points except the main router and try on-boarding.
2. Ensure the camera has power and is responsive.
 - Press the camera **Sync** button for **1 to 2 seconds**.
 - The LED will flash **Blue** for **2 minutes**.
 - If the camera is not responding and there is no power, recharge the camera using the USB cable that was included with the device.
3. Check the camera LED status:

 **Slow Blinking Blue** - the camera is in the process of pairing to a WiFi network.

 **Fast Blinking Blue** - the camera is paired with a WiFi network.

 **Blinking Amber** - the camera is out of range, a connection error has occurred during pairing, or the battery charge is low.

 **Alternating Blue and Amber** - a firmware update is in process.

1. Check **CS Diag tool** and **Splunk** history.
 - Check for signal history, Wi-Fi history, and camera offline time.
2. Other WiFi streaming devices can affect the camera.
 - Relocate or change the position of the camera and/or router to isolate interference or location problems.
3. Make sure the camera and the router are approximately **3 feet** (1 meter) apart during the synching/onboarding process.
4. **Factory reset** the camera.
 - Press and hold the **Sync** button for about **15 seconds**.
 - Release the Sync button when the camera LED begins blinking **Amber**.
 - Remove the device from the Arlo account and re-add the device.
 - Follow the in-app instructions to set up the camera.

NOTE: The factory reset for Essential Wire-Free may take 15 to 45 seconds to complete.

Related external KB Articles:

- [My Arlo camera is offline; how can I troubleshoot it?](#)
- [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)

Last Updated:06/15/2022 | Article ID: 000062640

How to Troubleshoot Offline Issues on Arlo Wired Cameras (INTERNAL)

How to Troubleshoot Offline Issues on Arlo Wired Cameras (INTERNAL)

This article applies to:

[VMC2040](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

1. Check status in CS Diag tool and history in Splunk.
2. Ensure that the camera has power. Check if the power adapter is connected to a known working outlet and the cord is securely plugged in. Check the camera LED status:

For Arlo Q/Q+

- **Solid Amber** - the camera is booting.
- ☀ **Slow Blinking Amber** - the camera is powered On and ready for setup.
- ☀ **Fast Blinking Amber** - the camera is not connected to a WiFi network yet.
- **Solid Blue** - the camera is powered on and is connected to Arlo servers.
- ☀ **Slow Blinking Blue** - the camera is connecting to a WiFi network.
- ☀ **Fast Blinking Blue** - the camera is connecting to Arlo servers.

 **Solid Purple** - the camera is connected to a WiFi network but is not connected to the internet.

 **Blinking Purple** - the camera is too far away from the router.

 **Blinking Blue and Amber** - A firmware update is in progress.

For Essential Indoor

 **Solid Amber** - the camera is offline (internet connectivity error). The network connection is weak.

 **Solid Flashing Amber** - the camera is not found (setup error).

 **Solid Blue** - AC power is plugged in (solid for 2 seconds then off).

 **Slow Flashing Blue** - the camera is in pairing mode (connecting to WiFi).

 **Fast Flashing Blue** - the camera is found (successfully paired with a WiFi network).

 **Alternating Blue and Amber** - A firmware update is in progress.

Off - the camera is disarmed (motion or/and audio detection off) or the camera is powered off.

If the camera LED is solid amber, please continue to Step 3.

3. Ensure that the camera is in the same room as the router but should be at least **3 feet (1 meter)** away from each other. Relocate other devices that may cause interference.

4. Verify if the router is working. Access the internet using other WiFi streaming device.

5. Power cycle the device. Unplug the AC adapter for 10-15 seconds and re-plug.

6. Factory reset the device by holding the **SYNC** button for 15 seconds and release. If the device still appears on the Arlo app, remove the device and re-onboard.

Note: If the device is updating the firmware. **DO NOT UNPLUG**. Wait until the LED turns solid BLUE.

CONNECTED TO LTE

Arlo Go V2 Offline troubleshooting – Connected to LTE (INTERNAL)

Arlo Go V2 Offline troubleshooting – Connected to LTE (INTERNAL)

This article applies to:

[VML2030](#)

1. Check history in **CS Diag Tool** and **Splunk**.

- Check for **signal history**, **Wi-Fi history**, and **camera offline** time.

2. Check the device's battery level and streaming time.

3. Logout and log back in to the app.

If the device is on multi-mode, use [Arlo Go 2 does not switch from Wifi to LTE](#).

4. **Power cycle** the device:

- Press the release button on the bottom of the camera to release from its housing.
- Slide the camera until it separates from the housing.
- Remove the battery for 15 seconds.
- Reinsert and wait until the unit turns back on.

5. Check the device's location in **CS Diag tool** (location is not enabled by default) and check cellular coverage [here](#).

6. Check if the SIM is fully inserted and it is in the right slot. The SD and SIM slot is right next to each other. The SIM should eject when the SIM is pressed and should click when pressed again.

If the SIM is loose, power cycle after the SIM is reinserted.

7. Confirm if the APN on the camera is correct. To check:

- Open the Arlo app.
- Click or tap **Settings** and go to **My Devices**.
- Select the camera.
- Tap **Connected To**.

- Click on **Cellular Network**.
- Select **APN Settings**.

8. Refer to the carrier for data plan or SIM card issues such as plan allowance or SIM provisioning.

Last Updated:02/04/2022 | Article ID: 000062667

Arlo Go V2 does not switch from Wi-Fi to LTE (INTERNAL)

Arlo Go V2 does not switch from Wi-Fi to LTE (INTERNAL)

This article applies to:

[VML2030](#)

The Arlo Go V2 not switching from Wi-Fi to LTE is a failover issue. This will only happen if the Wi-Fi goes down or the network connection is lost. Use the troubleshooting steps below to address failover issue:

1. Check camera location. The camera should have strong Wi-Fi signal and within the coverage area.
2. Check **CS Diag Tool** and **Splunk** if the device has been setup. Onboarded status on Wi-Fi and LTE should show **TRUE**. If not, advice the customer to setup.
3. Confirm the device's **Network Mode**. Both Wi-Fi and Cellular Network should be enabled. To check:
 - Open the Arlo app.
 - Click or tap **Settings** and go to **My Devices**.
 - Select the camera.

- Tap **Connected To**.
- Select the option preferred:
 - **Wi-Fi Network**
 - **Cellular Network**

4. **Power cycle** the device by removing the battery, re-plug and wait until it establishes a connection.

5. Check if the Arlo camera is preferring LTE mode instead of Wi-Fi. If this is the case, disable **Wi-Fi Network** under Network Mode and re-enable.

6. Confirm that **TCP ports 80 and 443 are enabled**. Suggest to update the firewall settings in the Wi-Fi network to allow access.

Last Updated:02/16/2022 | Article ID: 000062666

Arlo Go 2 does not switch from LTE to Wi-Fi (INTERNAL)

Arlo Go 2 does not switch from LTE to Wi-Fi (INTERNAL)

This article applies to:

[VML2030](#)

1. Check the camera location. The camera should be installed in an area with strong cellular coverage and strong Wi-Fi signal.

2. Check **CS Diag Tool** and **Splunk** if the device has been setup. Onboarded status on WiFi and LTE should show **TRUE**. If not, advice the customer to setup.

3. Confirm the device's **Network Mode**. Both Wi-Fi and Cellular Network should be enabled. To check:

- Open the Arlo app.
- Click or tap **Settings** and go to **My Devices**.
- Select the camera.

- Tap **Connected To**.
- Select the option preferred:
 - **WiFi Network**
 - **Cellular Network**

4. **Power cycle** the device by removing the battery, re-plug and wait until it establishes a connection.

5. Check if the SIM is fully inserted and it is in the right slot. The SD card and SIM card slot is right next to each other. The SIM should eject when the SIM is pressed and should click when pressed again.

If the SIM is loose, **power cycle** after the SIM is reinserted.

6. Check your camera settings if the **APN is correct**. To check:

- Open the Arlo app.
- Click or tap **Settings** and go to **My Devices**.
- Select the camera.
- Tap **Connected To**.
- Click on **Cellular Network**.
- Select **APN Settings**.

Last Updated:02/16/2022 | Article ID: 000062685

How do I update APN settings for my Arlo Go 2 LTE Camera?

In most situations, the access point network (APN) settings are automatically set up and you do not need to enter them for the activated SIM card in your Arlo Go 2 Camera. If your mobile network provider instructs you to enter the APN settings, you can use the Arlo Secure App to do so.

To update APN settings for an activated SIM card in your Arlo Go 2 LTE Camera:

For the Arlo Secure App Experience with Feed:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap your Arlo Go 2 Camera device card.
4. Tap .
5. Tap Cellular Network.
6. Tap APN Settings.
7. Enter the APN settings.

For the Arlo Secure App Experience with Library:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap the Settings icon for your Go 2 camera.
4. Tap Connected to.
5. Tap Cellular Network.
6. Tap APN Settings.
7. Enter the APN settings.

CHIME / SENSORS / SAFE BUTTON / SECURELINK

How to troubleshoot offline issues on the Arlo Chime/Chime 2 (INTERNAL)

How to troubleshoot offline issues on the Arlo Chime/Chime 2 (INTERNAL)

This article applies to:

[AC2001](#) [AC1001](#)

1. Check the device's **LED status**:

- **Slow flash white** – while audio streaming.
- **Slow flash amber** – device is offline.
- **Alternating white and amber** – firmware update Check history in Splunk.

2. Check the **internet connection**. Make sure that the router is working and **other devices can connect to the internet**.

- **For Chime**: Confirm if the *SmartHub/Base Station* is online.
- **For Chime 2**: Check if the router is online and if the *Wi-Fi network* is available.

3. Confirm that the **outlet is working**.

4. Make sure the device is **within range** of the router/Base Station/SmartHub.

5. **Reset the device.** To reset:

- Plug the chime into a wall outlet.
- Press and hold the **sync** button located on the side of the Arlo Chime/Chime 2 for 10 seconds until the LED starts flashing.
- Release the **sync** button once the LED starts to flash.

6. Try to **re-onboard** the device.

Last Updated:05/06/2022 | Article ID: 000062738

Arlo Wire-Free Outdoor Siren Offline (INTERNAL)

Arlo Wire-Free Outdoor Siren Offline (INTERNAL)

This article applies to:

[SLB1001](#)

Follow these troubleshooting steps if the customer's Arlo Wire-Free Outdoor Siren is offline:

Ask the customer to check if the Arlo Wire-Free Outdoor Siren has power:

- Remove the back of the Siren and press the **SYNC** button. If the Siren has power, it will beep when the SYNC button is pressed.
- If no beep is heard, have the customer replace the Siren batteries. For more information, visit: [How do I change the batteries in my Arlo Wire-Free Outdoor Siren?](#)

Check the status of the Arlo Keypad Sensor Hub:

- Check the status of the Arlo Keypad Sensor Hub in the CS Diag Tool.
Note: Upon logging into the CS Diag tool, look at the Arlo Wire-Free Outdoor Siren STATUS column to verify the status.
- If the Keypad Sensor Hub is offline, use: [Arlo Keypad Sensor Hub Offline \(INTERNAL\)](#)

Check for signal interference:

- To reduce interference, have the customer install the Arlo Wire-Free Outdoor Siren at least 10 feet (3 meters) from any router, Arlo SmartHub, or Arlo Base Station.
- Allow at least 6½ feet (2 meters) between each Arlo device to prevent Wi-Fi signals between the devices from interfering with each other.

Make sure the Wire-Free Outdoor Siren is within range:

- Ask the customer to move the Siren closer to the Keypad Sensor Hub and use the range finder to determine if the Siren is out of range.
1. Launch the Arlo Secure App.
 2. Tap **Devices**.
 3. Tap the Siren device card.
 4. Tap .
 5. Tap **Connected to**.
 6. Tap **Device Rangefinder**.

The Arlo Secure App status will state Within Range or Out of Range. If the Arlo Secure App states Out of Range, move the Siren closer to the Keypad Sensor Hub. The Siren LED turns Green if it is within range, and Red if it is out of range.

- If the Siren shows as online when moved closer to the Keypad Sensor Hub, have the customer install the Siren closer to the Keypad Sensor Hub.

Reset the power on the Siren.

- Remove the batteries, and re-install after 30 seconds.

Reset and re-pair the device.

To remove the Wire-Free Outdoor Siren from the Devices list:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Siren device card.
4. Tap .
5. On the Siren Settings screen, tap on the name of the device to access the Device Info screen.
6. Tap **Remove Device** at the bottom of the screen.
7. Tap **Yes** to confirm.

To factory reset the Wire-Free Outdoor Siren:

1. Remove the back cover from the Siren.
2. Press the **SYNC** button quickly five times. An Audible beep should be heard for every successful button press.
3. The LED indicator will blink amber five times to confirm the factory reset.
4. The Siren will go to pairing mode (Blue LED blinks slow) after the factory reset.

To add the device back to the Arlo system, visit: [How do I setup and install my Arlo Wire-Free Outdoor Siren?](#)

If the case needs to be escalated to L2, use the following escalation template:

- Device(s) affected:
- D2AP: Router info. Mesh system or other special considerations?
- When did the issue start?
- Changes to system?
- Physical setup: How far is the Siren from the Keypad Sensor Hub? How many walls/other devices?
- Gather logs

Last Updated:07/18/2023 | Article ID: 000063138

Arlo All-in-One Sensor (INTERNAL)

Arlo Keypad Sensor Hub Offline (INTERNAL)

Arlo Keypad Sensor Hub Offline

(INTERNAL)

This article applies to:

[SH1001](#) [LBB1001](#)

1. Check if the Arlo Keypad Sensor Hub is on and has power.
 - Make sure the cable is securely plugged into the wall outlet.
 - The keypad buttons should pulsate white to indicate it is ready for setup.
2. Make sure the customer is on the correct Wi-Fi network.
3. The Arlo Keypad Sensor Hub will only work with 2.4GHz Wi-Fi network. If the customer is using both 2.4GHz and 5GHz, make sure they are on 2.4GHz.
4. Confirm the internet is working. Try accessing the internet using a different device.
5. Confirm the router is working properly.
 - Reset the router.
 - Unplug the AC adapter for 30 seconds.
 - Reconnect the router and wait for the router to boot up.
6. Factory reset the Arlo Keypad Sensor Hub:
 - Set your Arlo system to Standby. You cannot factory reset the Arlo Keypad Sensor Hub in either the Arm Away or Arm Home modes.
 - Press and hold the X and check button for 10 seconds.
 - After reset, devices must be setup again.
7. If these steps do not work, please consult L2.

For customers with a Battery Backup installed, check and provide this additional information:

- Check with the customer to see if Wi-Fi is down.

- Check the Battery Level of the Battery Backup in **CS Diag tool**. The battery backup has a 12-hour battery life limit. If they go beyond, there might be not enough power.
- Check the SIM **Signal Strength** on the location in **CS Diag Tool**.
- The customer must have a Professional Monitoring subscription for SIM to work.

How to troubleshoot Arlo Safe Button offline issues (INTERNAL)

How to troubleshoot Arlo Safe Button offline issues (INTERNAL)

This article applies to:

[ASB1001](#)

If the Arlo Safe Button on the mobile device shows NOT CONNECTED, follow these troubleshooting steps:

1. Make sure the Arlo Safe Button is On.
2. Check if the Bluetooth is enabled on the mobile device.
3. Make sure the Arlo Safe Button is listed as *paired* in the mobile device's Bluetooth setting.
4. Make sure the Arlo Safe Button is within range of the mobile device.
5. Other devices such as microwave, Wi-Fi jammers, or other devices with Bluetooth or Wi-Fi can cause interference on the Arlo Safe Button. Try moving the Arlo Safe Button or mobile device to a new location.
6. Remove the device from the app and re-pair. To remove:
 - Launch the Arlo Safe app.
 - Tap .
 - Tap **My Device**.
 - Tap **Remove Device**.
 - Tap **Remove**.
 - Tap **Reset Arlo Safe Device**.

For iOS device: Go to Bluetooth settings and forget device.

7. Factory reset the Arlo Safe Button. To reset:

- Remove the screwcap from the button.
- Place the screwcap back on the button.
- Press and hold the button on the bottom of the Arlo Safe Button for 15 seconds until it vibrates twice, and then release. The Arlo Safe Button will automatically enter pairing mode. If it does not vibrate, the button may have been factory reset already.

Note: Make sure the Arlo Safe Button is close and within range of the mobile device while re-pairing.

If these steps fail, collect the following information and consult L2:

- Safe App version
- Safe Button firmware version
- Mobile device model/OS version
- S/N (if available)

Last Updated:09/25/2023 | Article ID: 000062853

How to Troubleshoot SecureLink Connection Issues on Pro 5S (INTERNAL)

How to Troubleshoot SecureLink Connection Issues on Pro 5S (INTERNAL)

This article applies to:

[SH1001](#) [VMC4060P](#)

Follow these troubleshooting steps for unable to connect and other Connection issues:

Note: Pairing the Pro 5S V2 may take 4-5 tries when pairing with a Maple Hub.

1. Check if there are other devices or equipment that can interfere with the Pro 5S Camera or Keypad Sensor Hub. Ensure that other electronic or Wi-Fi devices are at least **3 feet (1 meter)** from both the camera and hub. Relocate the camera or hub if necessary.
2. Check the status of the Keypad Sensor Hub and the Pro 5S in **CS Diag tool**. Make sure the devices are installed and online.
3. Try moving the camera and the Keypad Security Hub closer to each other or try changing the position of the camera. The recommended range is around 300 feet (90 meters) but there might be interference or location problems.
4. Restart the Arlo Keypad Sensor Hub:
 - Set the Arlo system to  **Standby**. Press and hold the number **5** button on the keypad for 10 seconds and release.
Note: You cannot reset the power of the Arlo Keypad Sensor Hub in either Arm Away or Arm Home modes.
5. Power cycle the Arlo Pro 5S:
 - Release the camera from its housing.
 - Pull the camera all the way out of the camera housing.
 - Remove the battery and re-insert.
6. If these steps do not work, consult L2. Please make sure that the following information is handy prior to consult or escalation:
 - LED status of the Arlo Keypad Sensor Hub
 - How far the Pro 5S is to the Arlo Keypad Sensor Hub
 - Where the Pro 5S is placed, location and position (immediate surroundings, nearby devices)
 - Status of the device in Arlo account (app/web) under device settings
 - Status of the device in **CS Diag tool**
 - Collect app logs:
 - [iOS](#)

- [Android](#)

Last Updated:06/03/2024 | Article ID: 000063007

EXTERNAL KB

BLUETOOTH

How can I optimize mobile signal strength for my Arlo Go series camera?

How can I optimize mobile signal strength for my Arlo Go series camera?

This article applies to:

Arlo Go and Arlo Go 2 cameras use a SIM card inside the camera to connect to a cellular network. Arlo Go 2 can also connect over Wi-Fi, like other Arlo cameras. For best results when connecting to the cellular network, Arlo recommends placing your camera in a location where it has at least three bars of signal strength. Cellular or LTE coverage fluctuates based on network traffic and weather conditions. If you place your camera near the edge of a coverage area, your connection weakens or drops whenever the cellular network is carrying a lot of traffic in that area. Heavy rain, thunderstorms, and high humidity can also weaken your connection.

To check your Arlo Go or Arlo Go 2 mobile signal strength:

For the Arlo Secure App experience with **Feed**:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select your Arlo Go or Arlo Go 2 camera.

4. Tap .
5. Check the signal strength to the right of **Cellular Network**.

For the Arlo Secure App experience with **Library**:

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap **My Devices**.
4. Select your Arlo Go or Arlo Go 2 camera.
5. Tap **Signal Strength**.

Note: If signal strength is consistently less than three bars, consider moving your camera to a location with better signal strength.

If your camera is using a mobile connection in an area with low mobile signal strength (two bars or less), you might experience these problems:

- You are sometimes unable to view your camera live, or the video stream fluctuates.
- You might experience lag when waiting for recorded videos to be uploaded to your Arlo Feed or Arlo Library.
- Notifications are sometimes delayed.
- Your camera battery depletes more quickly than usual because your camera spends so much time attempting to reconnect to the network.

If your camera is offline, visit:

- [My Arlo Go 2 camera was working, but now it is offline; what should I do?](#)
- [My Arlo Go camera is offline; how can I troubleshoot it?](#)

To optimize mobile broadband connectivity for your Arlo Go or Arlo Go 2 camera:

1. Check your service provider's data coverage map for the area in which you want to use your camera.
2. Check the mobile network signal strength in the location where you want to use your camera after setup.

3. Place your camera in an area where it has at least three bars of signal strength.
In an area with low signal strength, camera battery life is much shorter because the camera spends so much time trying to connect to the network.
4. Make sure your camera is at least 6 feet (2 meters) away from any major electrical equipment, large metal or concrete objects, or other sources of signal interference.

Note: For information about roaming, contact your mobile service carrier. Some service providers do not allow roaming. In cases where roaming is allowed, it comes with additional charges and often requires additional services from your service provider. To check which service provider your Arlo Go or Arlo Go 2 camera is using, visit: [Who is the mobile carrier for my Arlo Go Series camera?](#)

Last Updated:05/06/2024 | Article ID: 1172805

How to extend the Wi-Fi range of an Arlo camera if it is out of range or has low signal strength

How to extend the Wi-Fi range of an Arlo camera if it is out of range or has low signal strength

This article applies to:

If your Arlo camera is out of range or has low signal strength:

Make sure your home network and devices meet the minimum requirements for Arlo.

- Arlo works with the minimum requirements, but the functionality, signal strength, and video quality might be negatively affected at lower bandwidths.
 - For more information, visit: [What are the minimum requirements for installing and using my Arlo system?](#)

Place your Arlo cameras in a location with a strong Wi-Fi signal.

- Check for potential issues with your Wi-Fi network.
 - For more information, visit: [How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?](#)
- Minimize the number of networks, Wi-Fi devices, and transmitted frequencies in the area where you place your Arlo SmartHub, Arlo Base Station, and Arlo cameras.
 - The distance between Wi-Fi devices can affect the Wi-Fi signal strength.
 - For more information, visit: [Arlo Camera Placement Tips](#)

For optimal performance, make sure your cameras display full signal strength in the area where you intend to install them.

- The cameras can work when signal strength is at one or two bars, but they might go out of range intermittently due to fluctuations in the environment.

Place your Arlo cameras no more than a maximum of 300 feet (90 meters) from the Arlo SmartHub, Arlo Base Station, or Wi-Fi router.

- The maximum line-of-sight range of 300 feet is reduced by each wall, ceiling, or other major obstruction between the camera and Arlo SmartHub, Arlo Base Station, or Wi-Fi router.

To reduce Wi-Fi interference, place the Arlo SmartHub or Arlo Base Station a minimum of 6 feet (1.8 meters) away from your Wi-Fi router.

- The best place for a Wi-Fi router is in a central area with minimal obstructions between it and the Arlo devices.

Try to place your Arlo cameras 10 feet (3 meters) away from the Arlo SmartHub or Arlo Base Station, and allow at least 6½ feet (2 meters) between cameras.

- The following materials can reduce Wi-Fi signal strength if they are located between Arlo SmartHubs, Arlo Base Stations, and Arlo cameras:
 - Unusually thick walls and ceilings
 - Brick
 - Concrete
 - Stone
 - Ceramic

- Glass (especially mirrors)
- Metal
- Large quantities of water, such as the water in a fish tank or water heater

Keep the Arlo camera battery charged above 25%.

- Low battery power can cause intermittent streaming issues and fluctuations with Wi-Fi connections.

Make sure your Arlo devices are using the latest firmware.

- For more information, visit: [How do I update my Arlo firmware manually?](#)

Secure your home network by utilizing proper password protection.

- Keeping neighbors and unauthorized users off your wireless network will help keep your Wi-Fi signal strength at an optimal level.

Change the wireless channel on your Wi-Fi router.

- Selecting a less crowded channel can reduce the amount of interference and improve your signal strength.
- Check the instructions that came with your router for assistance with adjusting the channel settings.

For Arlo cameras connected directly to a Wi-Fi router, try changing the Wi-Fi network that your camera is connected to.

- For more information, visit: [How do I change the Wi-Fi network that my Arlo device is connected to?](#)

For Arlo Pro 5S Cameras, connect to both a 2.4 GHz and 5 GHz network.

- Arlo Pro 5S Cameras are able to connect to both 2.4 and 5 GHz networks, and will connect to the network with the least interference.
 - For more information, visit: [How does the Arlo Pro 5S Camera use 5GHz Wi-Fi networks?](#)

Last Updated:06/10/2024 | Article ID: 5568

How do I use the Device Rangefinder to install my Arlo Wire-Free Outdoor Siren?

How do I use the Device Rangefinder to install my Arlo Wire-Free Outdoor Siren?

This article applies to:

[SH1001](#) [SLB1001](#)

When installing your Arlo Wire-Free Outdoor Siren, or moving it after it has been installed, you can use the Device Rangefinder to determine whether the Outdoor Siren is in range of your Arlo Keypad Sensor Hub.

If you are installing the Arlo Wire-Free Outdoor Siren for the first time, and your Siren does not play audio when you tap **Turn Siren On**:

1. Tap **Continue**.
2. Tap **Finish**.
3. Follow the steps below to open the Device Rangefinder for your Arlo Wire-Free Outdoor Siren.

To determine if the Arlo Wire-Free Outdoor Siren is within range of the Arlo Keypad Sensor Hub, use the Device Rangefinder in the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Arlo Wire-Free Outdoor Siren device card.



4. Tap  .
5. Tap **Connected to**.
6. Tap **Device Rangefinder**.

The Status will state Within Range or Out of Range.

If the Arlo Wire-Free Outdoor Siren is out of range, move it closer to the Arlo

Keypad Sensor Hub, or away from obstructions that could prevent signals from reaching the Siren.

7. Tap **Continue**.

If the Arlo Wire-Free Outdoor Siren is out of range regardless of how close it is to the Arlo Keypad Sensor Hub, visit: [My Arlo Wire-Free Outdoor Siren is offline, how do I troubleshoot it?](#)

For more information, visit: [Where do I place my Arlo Wire-Free Outdoor Siren?](#)

Last Updated:06/10/2024 | Article ID: 000063059

OFFLINE

Camera / Doorbell

My Arlo camera is offline; how can I troubleshoot it?

My Arlo camera is offline; how can I troubleshoot it?

This article applies to:

[AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#)
[VMC4041P](#) [VMC4050P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#)
[VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [My Arlo camera is offline; how can I troubleshoot it? - Arlo Secure 4.0](#)*

If your camera will not connect to the Internet during setup, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)

If your Arlo camera or device was working before and now it is offline, follow these troubleshooting steps:

Check Arlo service status.

- Check Arlo's status at status.arlo.com to stay up to date with our latest service updates.

Is your Arlo device receiving power?

- If your Arlo device uses a battery, make sure the battery is charged (and properly inserted, if the battery is removeable).
 - The Arlo Secure App lets you know if your battery is low.
- If your Arlo device is plugged in to an electrical outlet or solar panel charger, make sure that the connections are secure, and that the outlet or solar panel is receiving power.
 - We recommend you only use Arlo cable accessories that are compatible with your Arlo product.
 - Avoid using third-party charging cables.

Turn your Arlo device off and on.

- If your Arlo device uses a removeable battery, remove the battery for ten seconds, then reinsert the battery.
- If you are using a wired device, unplug the power for ten seconds, then plug the device back in.

Is your router, Arlo SmartHub, or Arlo Base Station connected to the Internet?

- Wi-Fi router:
 - If other devices connected to the same network are also having issues, your Wi-Fi router may not be connected to the Internet.
 - If your router is not connected to the Internet, you can try unplugging your router, waiting 30 seconds, and plugging it back in.
 - If your router still does not connect to the Internet, contact your internet service provider (ISP).
- Arlo SmartHub or Arlo Base Station:

- Check the status of your Arlo SmartHub or Base Station. If your Arlo SmartHub or Arlo Base Station is offline, visit: [My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?](#)

Is your Arlo device in range of your Wi-Fi router, Arlo SmartHub, or Arlo Base Station?

- Move the camera closer to the Wi-Fi router, Arlo SmartHub or Base Station.
- To learn more about camera placement best practices, visit: [Arlo Camera Placement Tips](#)

Is your Arlo device connected to the correct Wi-Fi network?

- If you have recently moved your Arlo camera to a location with a different Wi-Fi network, visit: [How do I change the Wi-Fi network that my Arlo device is connected to?](#)

Is there Wi-Fi signal interference?

- If you have recently installed another Wi-Fi network, try unplugging the new router to check if it is causing interference.

Is your camera too hot or too cold?

- If your outdoor camera is too hot or cold, the Arlo Secure App displays a warning, and the camera shuts down temporarily until it reaches a safe operating temperature.
- For more information, visit:
 - [How do I keep my Arlo batteries charged in cold weather?](#)
 - [Are Arlo cameras weatherproof?](#)

Perform a factory reset on your device.

- If you tried all the above options, and the Arlo Secure App still shows that your device is offline, remove your device from the Arlo Secure App, factory reset the Arlo device, and reinstall it to your account.
- For more information, visit:
 - [How do I remove a device from my Arlo account?](#)
 - [How to factory reset Arlo devices](#)

My Arlo camera is offline; how can I troubleshoot it? - Arlo Secure 4.0

My Arlo camera is offline; how can I troubleshoot it? - Arlo Secure 4.0

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#)
[VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [My Arlo camera is offline; how can I troubleshoot it?](#)*

If your camera will not connect to the Internet during setup, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)

If your Arlo camera or device **was working before and now it is offline**, follow the troubleshooting steps below.

Is your Arlo device receiving power?

- If your Arlo device uses a battery, make sure the battery is charged (and properly inserted, if the battery is removeable).
 - The Arlo Secure App lets you know if your battery is low.
- If your Arlo device is plugged in to an electrical outlet or solar panel charger, make sure that the connections are secure, and that the outlet or solar panel is receiving power.
 - We recommend you only use Arlo cable accessories that are compatible with your Arlo product.
 - Avoid using third-party charging cables.
 - The Arlo Wired Floodlight Camera is only hardwired to existing electrical for continuous power and protection.

Use the Arlo Wi-Fi troubleshooting tool.

- To use the Arlo Wi-Fi Troubleshooting Tool, visit: [How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?](#)

Turn your Arlo device off and on.

- If your Arlo device uses a removeable battery, remove the battery for ten seconds, then reinsert the battery.
- If you are using a wired device, unplug the power for ten seconds, then plug the device back in.
- For the Arlo Wired Floodlight Camera, you can either reboot the device using the pairing button or shut it off at the circuit breaker.

Is your router, Arlo SmartHub, or Arlo Base Station connected to the Internet?

- Wi-Fi router:
 - If other devices connected to the same network are also having issues, your Wi-Fi router may not be connected to the Internet.
 - If your router is not connected to the Internet, you can try unplugging your router, waiting 30 seconds, and plugging it back in.
 - If your router still does not connect to the Internet, contact your internet service provider (ISP).
- Arlo SmartHub or Arlo Base Station:
 - Check the status of your Arlo SmartHub or Base Station. If your Arlo SmartHub or Arlo Base Station is offline, visit: [My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?](#)

Is your Arlo device in range of your Wi-Fi router, Arlo SmartHub, or Arlo Base Station?

- Move the camera closer to the Wi-Fi router, Arlo SmartHub or Base Station.
- To learn more about camera placement best practices, visit: [Arlo Camera Placement Tips](#)

Is your Arlo device connected to the correct Wi-Fi network?

- If you have recently moved your Arlo camera to a location with a different Wi-Fi network, visit: [How do I change the Wi-Fi network that my Arlo device is connected to?](#)

Is there Wi-Fi signal interference?

- If you have recently installed another Wi-Fi network, try unplugging the new router to check if it is causing interference.

Are you using an Arlo Pro 5S Camera connected to an Arlo Home Security System with SecureLink?

- If your Arlo Pro 5S Camera is offline when connected with SecureLink to my Arlo Home Security System, visit: [My Arlo Pro 5S Camera is offline when connected with SecureLink to my Arlo Home Security System, how do I troubleshoot it?](#)

Is your camera too hot or too cold?

- If your outdoor camera is too hot or cold, the Arlo Secure App displays a warning, and the camera shuts down temporarily until it reaches a safe operating temperature.
- For more information, visit:
 - [How do I keep my Arlo batteries charged in cold weather?](#)
 - [Are Arlo cameras weatherproof?](#)

Check Arlo service status.

- Check Arlo's status at status.arlo.com to stay up to date with our latest service updates.

Perform a factory reset on your device.

- If you tried all the above options, and the Arlo Secure App still shows that your device is offline, remove your device from the Arlo Secure App, factory reset the Arlo device, and reinstall it to your account.
- For more information, visit:
 - [How do I remove a device from my Arlo account?](#)
 - [How to factory reset Arlo devices](#)

My Arlo Pro 5S Camera is offline when connected with SecureLink to my Arlo Home Security System, how do I troubleshoot it?

My Arlo Pro 5S Camera is offline when connected with SecureLink to my Arlo Home Security System; how do I troubleshoot it?

This article applies to:

[SH1001](#) [VMC4060P](#)

If your Arlo Pro 5S Camera is offline when it is connected to an [Arlo Keypad Sensor Hub](#) using SecureLink, try the following steps to troubleshoot the connection issue:

1. Ensure the camera battery is charged and the camera is on.
2. Make sure the Arlo Pro 5S camera is within range of the Keypad Sensor Hub. Arlo recommends devices are placed within 300 feet (90 meters) of each other. Relocate or change the position of the camera to isolate interference or location problems.
3. Ensure that other electronic or Wi-Fi devices are at least **3 feet (1 meter)** from both the camera and Keypad Sensor Hub. Relocate the camera or Keypad Sensor Hub if necessary.
4. Make sure the Keypad Sensor Hub is online. If the Keypad Sensor Hub is offline, visit: [My Arlo Keypad Sensor Hub is offline, how can I troubleshoot it?](#)

5. Try disabling and enabling the SecureLink connection on the Arlo Pro 5S:
 - Launch the Arlo Secure App.
 - Tap **Devices**.
 - Select the Arlo Pro 5S camera.
 - Tap .
 - Tap **Connected To**.
 - Tap **SecureLink Connection**.
 - Toggle the **Enabled** switch to **off**, and then **on**.
6. Reset the power on both the Arlo Keypad Sensor Hub and the Pro 5S Camera:

For Arlo Keypad Sensor Hub:

- Set your Arlo system to  **Standby**.
- Press and hold the **5** button on the keypad for 10 seconds and release.

For Arlo Pro 5S Camera:

- Release the camera from its housing.
- Pull the camera all the way out of the camera housing.
- Remove the battery and re-insert.

7. Factory reset the Arlo Keypad Sensor Hub:

WARNING: Resetting your Arlo Keypad Sensor Hub returns it to default settings.

- Your Arlo Keypad Sensor Hub is also removed from your Arlo account when you reset it.
- You must follow the in-app setup process to use your Arlo Keypad Sensor Hub after a reset.
- All paired All-in-One Sensors must be reset and paired again after the Keypad Sensor Hub is reinstalled.
 - To reset your All-in-One Sensor, visit: [How do I factory reset the Arlo All-in-One Sensor?](#)
- All Pro 5S cameras connected with SecureLink will need to be paired again.
 - To pair your Arlo Pro 5S camera with SecureLink, visit: [How do I pair my Arlo Pro 5S Camera to my Arlo Keypad Sensor Hub using Arlo SecureLink?](#)

To reset your Arlo Keypad Sensor Hub to defaults by removing it in the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap .
4. Tap  of the Arlo Keypad Sensor Hub.
5. Tap **Yes**.

To reset the Arlo Keypad Sensor Hub to defaults using the Keypad:

1. Set the Mode on the Arlo Keypad Sensor Hub to **Standby** .
2. On the Arlo Keypad Sensor Hub, press and hold both the  button and  button for 10 seconds.

All the keyboard LEDs flash 5 times. The Arlo Keypad Sensor Hub resets and shows as offline in the Arlo Secure App.

Last Updated:05/07/2024 | Article ID: 000062980

How to troubleshoot issues with Arlo Ultra Offline September 15, 2023

How to troubleshoot issues with Arlo Ultra Offline September 15, 2023

This article applies to:

[VMC5040](#)

An issue occurred on September 15, 2023 for Arlo Ultra and Ultra 2 cameras that may cause the camera to go offline and remain in the offline state. To recover from this state, the camera will need to be reset to factory defaults and re-added to your Arlo account.

To factory reset and re-add your Arlo Ultra or Ultra 2 camera:

1. Your Arlo Ultra camera needs a minimum charge before starting the reset process. Attach your Ultra camera charging cable for at least 30 minutes before continuing.
2. Remove the battery from the Arlo Ultra camera. Press the release button to remove the camera housing to access the battery.



3. Set your Arlo SmartHub or Arlo Base Station to **Disarmed** or **Standby**.
Note: If your Arlo Ultra camera is set to record on Standby mode, switch to a mode where the camera does not record, or temporarily delete the rule.
4. Remove the Arlo Ultra camera from your account in the Arlo Secure App.

For the Arlo Secure experience with **Feed**:

- Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
- Tap or click **Devices**.
- Tap or click on the camera you want to reset.

- Tap or click .
- Tap or click the Device Name.
- Tap or click **Remove Device**.
- Tap or click **Yes** to confirm that you want to remove the camera from your account.

For the Arlo Secure experience with **Library**:

- Launch the Arlo Secure App or log in to my.arlo.com.
 - Tap or click **Settings > My Devices** and select the camera you just reset.
 - Tap or click **Remove Device**.
 - Tap or click **Yes** to confirm.
5. Wait for the LED on your Arlo SmartHub to display Solid Blue.
- For Arlo Base Stations, wait for the Camera LED (furthest right) to stop blinking. The LED should be solid green, or off.
6. Reset the camera.

WARNING: The following steps must be performed in a fast sequence. Read through the steps before proceeding.

- A. Locate the Sync button on the camera, and place your finger on the button without pressing it.
- B. Hold the camera so that you can see the face of the camera and its LED (see #4 in the following diagram).



- C. Insert the battery into the camera.

- D. The Blue LED will quickly flash and turn off, two seconds after the battery is inserted.
- E. Once the Blue LED flashes, quickly press and hold the Sync button until the Amber LED blinks, then release the button.
- F. The camera will reboot. The Blue LED will begin blinking to indicate the camera has been reset.
- G. Re-add the Arlo Ultra camera to your account.

For the Arlo Secure experience with **Feed**:

- Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
- Tap or click **Devices**.
- Tap or click .
- Select your Arlo device.
- Follow the prompts to connect the camera to your Arlo SmartHub or Base Station.

For the Arlo Secure experience with **Library**:

- Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
- Tap or click **Devices**.
- Tap or click **Add New Device**.
- Select your Arlo device.
- Select your Arlo model.
- Follow the prompts to connect the camera to your Arlo SmartHub or Base Station.

8. After installation is complete, the **Firmware Update is Required** notification will appear in the Arlo Secure App. Update the camera firmware.
 - During the firmware update, the camera LED will alternate between Blue and Amber.
 - When the Blue and Amber pattern stops, the firmware update is complete.

If the camera is still offline, continue with the following steps.

-
9. Press the **Sync** button on the camera, then the **Sync** button on the Arlo SmartHub or Base Station.
 - After pressing the button, the LED on the camera and Arlo SmartHub will slowly blink Blue. On Arlo Base Stations, the Camera LED will slowly blink green.
 - Once syncing is complete, the camera and Arlo SmartHub LED will rapidly blink Blue for 10 seconds. On Arlo Base Stations, the Camera LED will rapidly blink green for 10 seconds.
 10. Close the Arlo Secure App and reopen the app. On my.arlo.com log out and log back in.
 - If you continue to experience offline issues after the reset, contact [Arlo Support](#).

Last Updated: 10/09/2023 | Article ID: 000063208

Arlo Doorbell Offline: How to Troubleshoot

How to troubleshoot Arlo Doorbell Offline

This article applies to:

[AVD2001](#) [AVD1001](#) [AAD1001](#)

Learn what to do if your Arlo Video Doorbell or Arlo Audio Doorbell loses connection to Wi-Fi.

In this article:

- Wire-Free Arlo Video Doorbell (AVD2001)
 - [Troubleshoot Wi-Fi connection](#)
 - [Troubleshoot Arlo SmartHub or Base Station connection](#)

- Wired Arlo Video Doorbell (AVD1001)
 - [Troubleshoot Wi-Fi Connection](#)
 - [Troubleshoot Arlo SmartHub or Base Station connection](#)
 - Arlo Audio Doorbell (AAD1001)
 - [Troubleshoot Arlo Base Station connection](#)
-

Arlo Wire-Free Video Doorbell Offline (AVD2001)

Troubleshoot a Wi-Fi connection

If your Arlo Essential Wire-Free Video Doorbell is offline and you need to reconnect it to Wi-Fi, follow these troubleshooting steps:

1. Check your Wi-Fi connection.

Make sure that your Wi-Fi router is working, and that other devices can connect to the Internet.

2. Verify that the Arlo Video Doorbell battery is fully charged.

Press the doorbell button and wait for the LED to illuminate.

- If the LED is off and the Arlo Video Doorbell does not respond, charge the battery to 100%.
- For more information, visit: [How do I charge my Arlo Essential Video Doorbell Wire-Free?](#)

3. Check the outdoor temperature around the Arlo Video Doorbell.

Temperature affects the device and can cause it to go offline. We recommend an outdoor temperature range of -4F to 113F (or -20C to 45C). For more information, visit: [Are Arlo cameras weatherproof?](#)

4. If possible, move your Wi-Fi router closer to the Arlo Video Doorbell to increase Wi-Fi signal strength.

- The maximum range is reduced by each wall, ceiling, or other major obstruction between the Arlo Video Doorbell and the router.
- Make sure that there are no other equipment or major obstructions that can interfere with the Arlo Video Doorbell and the Wi-Fi router.
- For more information, visit: [Arlo Camera Placement Tips](#)

5. **Reset your Arlo Video Doorbell.**

Try turning your Arlo Video Doorbell off and on to reset it:

- Remove the battery for 15 seconds, re-insert, and wait until the device comes back online.

6. **Perform a factory reset on your Arlo Video Doorbell.**

Try a factory reset to resolve internet connection problems.

- **WARNING:** A factory reset deletes your Arlo Video Doorbell from your Arlo account. You will need to set up your Arlo Video Doorbell again.
- For instructions, visit: [How do I reset my Arlo Essential Video Doorbell?](#)

Troubleshoot an Arlo SmartHub or Base Station connection

If your Arlo Essential Wire-Free Video Doorbell is offline and you need to reconnect it to an Arlo SmartHub or Base Station:

1. **Make sure the Arlo SmartHub or Base Station is online.**

For more information, visit: [My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?](#)

2. **Verify that the Arlo Video Doorbell battery is fully charged.**

Press the doorbell button and wait for the LED to illuminate. If the LED is off and the Arlo Video Doorbell does not respond, charge the battery to 100%. For more information, visit: [How do I charge my Arlo Essential Video Doorbell Wire-Free?](#)

3. **Check the outdoor temperature around the Arlo Video Doorbell.**

Temperature affects the Arlo Video Doorbell and can cause it to go offline. We recommend an outdoor temperature range of -4F to 113F (or -20C to 45C). For more information, visit: [Are Arlo cameras weatherproof?](#)

4. **Move your Arlo SmartHub or Base Station closer to the Arlo Video Doorbell.**

The Arlo Video Doorbell should be located within 300 feet (90 meters) from the Arlo SmartHub or Base Station.

- If possible, move your Arlo SmartHub or Base Station closer to the Arlo Video Doorbell to increase the Wi-Fi signal strength.
- The maximum range is reduced by each wall, ceiling, or other major obstruction between the Arlo Video Doorbell and the Arlo SmartHub or Base Station.

- Make sure there is no obstructions or equipment that can interfere with the Arlo Video Doorbell and the Arlo SmartHub or Base Station.
- For more information, visit: [Arlo Camera Placement Tips](#)

5. **Reset your Arlo Video Doorbell.**

Try turning your Arlo Video Doorbell off and on to reset it:

- Remove the battery for 15 seconds, re-insert, and wait until the device comes back online.

6. **Perform a factory reset on your Arlo Video Doorbell.**

- Try a factory reset to resolve internet connection problems.
- **WARNING:** A factory reset deletes your Arlo Video Doorbell from your Arlo account. You will need to set up your Arlo Video Doorbell again.
- For instructions, visit [How do I reset my Arlo Essential Video Doorbell?](#)

Arlo Wired Video Doorbell Offline (AVD1001)

Troubleshoot a Wi-Fi connection

If your Arlo Wired Video Doorbell is offline and you need to reconnect it to Wi-Fi:

1. **Ensure the Arlo Video Doorbell is getting enough power and the power kit is installed correctly.**

The proper voltage for the Arlo Wired Video Doorbell is between 16-24V AC. For more information, visit: [How do I install the Power Kit for my Arlo Essential Video Doorbell Wired?](#)

2. **Check your Wi-Fi connection.**

Make sure that your Wi-Fi router is working, and that other devices can connect to the Internet.

3. **Check your network information and login credentials.**

Ensure the Arlo Video Doorbell is on the same network as your mobile device and that your Wi-Fi credentials are entered into the Arlo Secure App correctly.

- If you made updates to your network recently, like changing your Wi-Fi password or switching ISPs, you will need to connect your Arlo

products to the new network. For more information, visit: [How do I change or update the Wi-Fi network that my Arlo device is connected to?](#)

4. **Reset your Arlo Video Doorbell.**

Try turning your Arlo Video Doorbell off and on to reset it:

- Turn the circuit breaker off and wait until the battery dies.
 - This will take around 10 to 15 minutes.
- Turn the power back on and wait for the Arlo Video Doorbell to restart.
- If the Arlo Video Doorbell is still offline after startup, continue troubleshooting.

5. **Perform a factory reset on your Arlo Video Doorbell.**

Try a factory reset to resolve internet connection problems.

- **WARNING:** A factory reset deletes your Arlo Video Doorbell from your Arlo account. You will need to set up your Arlo Video Doorbell again.
- For instructions, visit: [How do I reset my Arlo Essential Video Doorbell?](#)

Troubleshoot an Arlo SmartHub or Base Station connection

If your Arlo Essential Wired Video Doorbell is offline and you need to reconnect it to an Arlo SmartHub or Base Station:

1. **Make sure the Arlo SmartHub or Base Station is online.**

For more information, visit: [My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?](#)

2. **Ensure the Arlo Video Doorbell is getting enough power and the power kit is installed correctly.**

The required voltage for the Arlo Wired Video Doorbell is between 16-24V AC.

For more information, visit: [How do I install the Power Kit for my Arlo Essential Video Doorbell Wired?](#)

3. **Check the outdoor temperature around the Arlo Video Doorbell.**

Temperature affects the video doorbell and can cause it to go offline. We recommend an outdoor temperature range of -4F to 113F (or -20C to 45C). For more information, visit: [Are Arlo cameras weatherproof?](#)

4. **Move your Arlo SmartHub or Base Station closer to the doorbell.**

The Arlo Video Doorbell should be located within 300 feet (90 meters) from the Arlo SmartHub or Base Station.

- If possible, move your Arlo SmartHub or Base Station closer to the Arlo Video Doorbell to increase the Wi-Fi signal strength.
- The maximum range is reduced by each wall, ceiling, or other major obstruction between the camera and the router.
- Make sure there are no obstructions or equipment that can interfere with the Arlo Video Doorbell and the Wi-Fi router.
- For more information, visit: [Arlo Camera Placement Tips](#)

5. **Reset your Arlo Video Doorbell.**

Try turning your Arlo Video Doorbell off and on to reset it:

- Turn the circuit breaker off and wait until the battery power runs out.
 - This takes about 10 to 15 minutes.
- Turn the circuit breaker on and wait for the Arlo Video Doorbell to restart.
- If the Arlo Video Doorbell is still offline after startup, continue troubleshooting.

6. **Perform a factory reset on your Arlo Video Doorbell.**

- Try a factory reset to resolve internet connection problems.
- **WARNING:** A factory reset deletes your Arlo Video Doorbell from your Arlo account. You will need to set up your Arlo Video Doorbell again.
- For instructions, visit: [How do I reset my Arlo Essential Video Doorbell?](#)

Arlo Audio Doorbell Offline (AAD1001)

If your Arlo Audio Doorbell is offline and you need to connect it to the Arlo Base Station:

1. **Check the LED(s) on your Arlo Base Station to verify that it is receiving power and is connected to the Internet.**

For more information, visit: [My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?](#)

2. **Make sure your Arlo Audio Doorbell is powered on.**

To check, walk by your Arlo Audio Doorbell. The LED ring illuminates when the Arlo Audio Doorbell detects motion, which indicates that it's powered on.

3. **Check the Arlo Audio Doorbell batteries.**

Make sure you use new AA batteries to power your Arlo Audio Doorbell.

4. **Reset your Arlo Audio Doorbell.**

Open the battery cover and press-and-hold the sync button for 10 seconds. For more information, visit: [How do I reset my Arlo Audio Doorbell?](#)

Last Updated:06/12/2024 | Article ID: 000062061

How to troubleshoot Arlo Q or Arlo Baby not connected to the Internet with solid purple LED

How to troubleshoot Arlo Q or Arlo Baby not connected to the Internet with solid purple LED

This article applies to:

If the Arlo camera LED is solid purple, your camera has been configured but is unable to connect to Arlo servers or Wi-Fi. When this happens, the Arlo camera might appear offline.

Check for potential issues with your Wi-Fi network.

- For more information, visit: [How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?](#)

Make sure the Internet connection and Wi-Fi network are both operational.

- Check the status of the Internet on your Wi-Fi router, or test your internet connection with another device.
 - If your Wi-Fi router is not connected to the Internet, reset the router and/or modem, or contact your router manufacturer or internet service provider (ISP).

If Wi-Fi is connected and working on other devices, turn your Arlo device off and back on (power cycle) to try to force it to reconnect to your Wi-Fi network.

- This is useful if your internet service or Wi-Fi router just recently came back online after an outage or power interruption.
- To power cycle an Arlo Baby camera, visit: [How do I restart power on my Arlo Baby camera?](#)
- To power cycle Arlo Q, unplug the AC power adapter for one minute and then reconnect it to the outlet.

Next, try to change the Wi-Fi network your Arlo camera is connected to through the Device Settings.

*For the Arlo Secure App experience with **Feed**:*

Note: Go to your mobile device settings and make sure it is connected to the same **2.4 GHz Wi-Fi network** that you want the Arlo camera connected to.

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select the Arlo Q or Arlo Baby camera.
4. Tap .
5. Tap **Connected to**.
6. Tap **Change Network** at the bottom of the screen.
7. Follow the in-app instructions for your specific camera.

*For the Arlo Secure App experience with **Library**:*

Note: Go to your mobile device settings and make sure it is connected to the same **2.4 GHz Wi-Fi network** that you want the Arlo camera connected to.

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap **My Devices**.
4. Select the Arlo Q or Arlo Baby camera.
5. Tap **Connected to**.
6. Tap **Change Network** at the bottom of the screen.
7. Follow the in-app instructions for your specific camera.

For more information, visit:

- [What do the different LED behaviors on my Arlo camera mean?](#)

- [How do I reset Arlo Baby to factory default settings?](#)
- [How to factory reset an Arlo Q or Arlo Q Plus Camera](#)
- [My Arlo Baby has a poor Wi-Fi connection and the LED is blinking purple; what do I do?](#)
- [Why is Arlo Baby's LED blinking blue when Arlo Baby is already connected to the Internet?](#)

Last Updated:06/04/2024 | Article ID: 1282710

BS/SH

My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?

My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?

This article applies to:

If you were previously able to connect your Arlo SmartHub or Arlo Base Station to the Internet but it is now offline and unable to reconnect:

1. **Check the Internet LED on your Arlo SmartHub or Arlo Base Station.**
 - If the Internet LED is solid amber  or blinking amber , there is a problem with your connection.
 - If the Internet LED is blue  or green , the Arlo SmartHub or Arlo Base Station is online.
 - If no LEDs are illuminated, go to step 3 to troubleshoot power.

- For more information about LEDs, visit: [What do the LEDs on my Arlo SmartHub or Base Station mean?](#)

2. Check the Ethernet (LAN) cable connection.



- Unplug both ends of the Ethernet cable and inspect the entire length of the cable to make sure it is not damaged, frayed, or torn.
- Try a different Ethernet cable to see if that restores your internet connection.
- Reconnect the Ethernet cable, and check that it is securely connected to your Arlo SmartHub/Base Station and Wi-Fi router.
- After connecting your Ethernet cable, ensure that the LEDs on your Wi-Fi router are on.
- If the Wi-Fi router LEDs are off, skip to step 4.

3. Check the power adapter.



- Unplug both ends of the power adapter and inspect the entire length of the cord to make sure it is not damaged, frayed, or torn.
- Plug the power adapter back into the electrical outlet and make sure the adapter is securely connected to the back of your Arlo SmartHub/Base Station.
- Make sure the Arlo SmartHub/Base Station is not plugged into an outlet that is controlled by a switch.
- Try a different power outlet.
- If you are using a surge protector or power strip, connect the power adapter directly to a wall outlet.
- If the Internet LED is blue ■ or green ■, your internet connection is restored.
- If the Internet LED is amber ■ or off continue troubleshooting.

4. Power your Arlo SmartHub or Arlo Base Station off and back on.

- Make sure your Ethernet and power cables are securely connected to the back of the Arlo SmartHub or Arlo Base Station.
- Unplug the power adapter from the wall outlet, wait 30 seconds, and then reconnect it to the wall outlet.

Note: The Ethernet cable must be plugged in before the power adapter is reconnected.

- Wait for approximately two minutes.
- If the Internet LED is blue  or green , the connection is restored.
- If the Internet LED is still amber , continue troubleshooting.

5. Remove Wi-Fi extender or mesh node connections.

- If your Arlo SmartHub or Arlo Base Station is connected to a Wi-Fi extender or mesh node, connect it directly to your Wi-Fi router instead.

Note: Arlo does not recommend connections to extenders or mesh nodes. Direct connections to the Wi-Fi router provide a more stable and reliable signal for your Arlo devices.

6. Check VPN settings.

- Ensure that your Wi-Fi router is not using a VPN.

7. Test your Ethernet cable on another device.

- Try to connect to the Internet from a desktop or laptop computer that is connected directly to your Wi-Fi router with the Ethernet cable.
- If you can browse the Internet from a laptop or desktop computer, continue troubleshooting your Arlo SmartHub or Arlo Base Station.
- If you cannot browse the Internet from a laptop or desktop computer, you need to restore your Wi-Fi router connection to the Internet.
- For help with this, contact your internet service provider or the Wi-Fi router manufacturer.

8. Perform a factory reset on the Arlo SmartHub or Arlo Base Station.

WARNING: A factory reset removes all cameras connected to your Arlo SmartHub/Base Station from your Arlo account. You will need to re-add the Arlo devices to your account after the factory reset.

- For factory reset instructions, visit: [How do I factory reset my Arlo SmartHub or Base Station?](#)

If your Arlo SmartHub or Arlo Base Station is still offline after attempting the troubleshooting steps, contact [Arlo Support](#).

Last Updated:05/16/2024 | Article ID: 996

My Arlo All-in-One Sensor is offline, how can I troubleshoot it?

My Arlo All-in-One Sensor is offline, how can I troubleshoot it?

This article applies to:

[SH1001](#) [MS1001](#)

If your Arlo All-In-One Sensor was working before and now it is offline, follow these troubleshooting steps:

- **Is your Arlo device receiving power?**

Press the button of your Sensor to check the LED indicator.

1.  **Solid Blue.** All-In-One Sensor is online.
2.  **Orange.** All-In-One Sensor has power but is did not communicate with the Keypad Sensor Hub.
3.  **Off/No LED.** All-In-One Sensor battery is dead.

- **Your Arlo Keypad Sensor Hub might be offline. Check the status of your Keypad Sensor Hub by doing the following:**

1. Launch the Arlo Secure App or log in to [my.arlo.com](#).

2. Tap or click Devices and verify if the device is online/offline. To check and troubleshoot, visit: [My Arlo Keypad Sensor Hub is offline; how can I troubleshoot it?](#)

- **Is there Wi-Fi signal interference?**

Environments with multiple Wi-Fi networks, Wi-Fi devices, or frequencies can cause signal interference. Minimize the number of networks, Wi-Fi devices, and transmitted frequencies in the area where you place your All-in-One Sensor.

For help with adjusting Wi-Fi settings such as the channel for your router, check the instructions that came with your router or contact your internet service provider (ISP) if they installed your router.

We recommend that you place your All-In-One Sensor at least 10 feet (3 meters) from your router or Arlo SmartHub or Base Station, if you use one. Allow at least 6½ feet (2 meters) between each Arlo device to prevent Wi-Fi signals between the devices from interfering with each other.

- **Is your All-In-One Sensor within range?**

Use the range finder to determine if your Sensor is within range.

1. Launch the Arlo Secure App or login to my.arlo.com.
2. Tap or click **Devices**.
3. Tap or click  on the All-In-One Sensor.
4. Tap or click **Device Rangefinder**.
5. Press the button on the bottom of the device.

The Range finder button on the Arlo Secure App should be green and say **Within Range**. If the button in the Arlo Secure App is red and shows **Out of Range** and the LED on the All-in-One Sensor is blinking amber, try moving your sensor closer to the Security Keypad Hub.

6. To know more about All-in-One Sensor placement tips, visit: [How do I install and physically place the Arlo All-in-One Sensor?](#)

- **Power cycle your device.**

Remove the battery for ten seconds, then reinsert the battery with the + symbol facing outward.

- **Reset and re-pair your device.**

To remove your All-On-One Sensor from the Devices list, do the following:

1. Launch the Arlo Secure App or login to my.arlo.com.
2. Tap or click **Devices**.
3. Tap or click the  of the Arlo Keypad Sensor Hub.
4. Tap or click **Deactivate** to confirm.

To pair the Arlo All-in-One Sensor to the Arlo Keypad Sensor Hub, visit: [How do I pair the All-in-One Sensor to the Arlo Keypad Sensor Hub?](#)

To Reset your All-in-One Sensor, press and hold the **SYNC** button on the bottom of the All-in-One sensor for 10 seconds. The LED blinks amber 5 times. The All-in-One Sensor resets.

To Re-pair your All-in One Sensor, visit: [How do I pair the All-In-One Sensor to the Arlo Keypad Sensor Hub?](#)

If these troubleshooting steps do not work, contact [Arlo Support](#).

Last Updated:05/01/2024 | Article ID: 000062926

My Arlo Keypad Sensor Hub is offline, how can I troubleshoot it?

My Arlo Keypad Sensor Hub is offline, how can I troubleshoot it?

This article applies to:

[SH1001](#) [LBB1001](#)

If you were previously able to connect your Arlo Keypad Sensor Hub to the internet but cannot reconnect, try these troubleshooting steps:

Make sure the Arlo Keypad Sensor Hub has power.

- If there are LEDs on your keypad do not turn on, visit: [My Arlo Keypad Sensor Hub will not power on, how can I troubleshoot it?](#)

Restart your Keypad Sensor Hub.

- **Note:** The Arlo Keypad Sensor Hub must be in Standby Mode before you begin the restart.
1. Set the Mode on the Arlo Keypad Sensor Hub to Standby by pressing . Enter your PIN, if needed.
 2. Press and hold the **5** button on the keypad for 10 seconds. The Keypad Sensor Hub Mode LEDs will illuminate white and cycle in a pattern while the device resets.

Check your Wi-Fi network information and login credentials.

- If you made updates or changes to your Wi-Fi network or router recently, like changing your Wi-Fi password or switching ISPs, you will need to connect your Arlo products to the new network.
- For more information, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)

Check peripheral devices.

- If your Keypad Sensor Hub is connected to a Wi-Fi extender, switch, powerline adapter, or mesh Wi-Fi node, make sure the device is online. If needed, try connecting your Keypad Sensor Hub directly to the Wi-Fi router to see if the connection is more stable.

Check VPN settings.

- Ensure that your Wi-Fi router is not using a VPN. If necessary, try disabling your VPN.

Perform a factory reset on your Keypad Sensor Hub.

- Try a factory reset to resolve internet connection problems.

WARNING: Resetting your Arlo Keypad Sensor Hub returns it to default settings.

- Your Arlo Keypad Sensor Hub is also removed from your Arlo account when you reset it.
- You must follow the in-app setup process to use your Arlo Keypad Sensor Hub after a reset.
- All paired All-in-One Sensors must be reset and paired again after the Keypad Sensor Hub is reinstalled.
 - To reset your All-in-One Sensor, visit: [How do I factory reset the Arlo All-in-One Sensor?](#)
- All Arlo Pro 5 cameras connected with SecureLink will need to be paired again.
 - To pair your Arlo Pro 5 camera with SecureLink, visit: [How do I pair my Arlo Pro 5 Camera to my Arlo Keypad Sensor Hub using Arlo SecureLink?](#)

To reset the Arlo Keypad Sensor Hub using the Keypad:

1. Set the Mode on the Arlo Keypad Sensor Hub to Standby by pressing .
2. On the Arlo Keypad Sensor Hub, press and hold both the  button and  button for 10 seconds.

All the keyboard LEDs flash five times. The Arlo Keypad Sensor Hub resets and shows offline in the Arlo Secure App.

To reset your Arlo Keypad Sensor Hub by removing it in the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap .
4. Tap  of the Arlo Keypad Sensor Hub.
5. Tap **Deactivate** to confirm.

After you reset your Arlo Keypad Sensor Hub, you must add it to your account again by following these steps:

1. Launch the Arlo Secure App.

2. Tap **Devices**.
3. Tap  and select **Add New Device**.
4. Select the Arlo device you want to add.
5. Tap **Continue**.
6. Follow the instructions in the app to add your new Arlo device.

If you are still unable to get your Keypad Sensor Hub online, visit: [Arlo Support](#)

Last Updated: 04/24/2024 | Article ID: 000062965

Why is my Arlo Chime or Chime 2 offline?

Why is my Arlo Chime or Chime 2 offline?

This article applies to:

[AC2001](#) [AC1001](#)

If the Arlo Chime or Chime 2 appears offline:

1. Check your Internet connection.
 - Make sure other devices on your Wi-Fi network can connect to the Internet.
2. Make sure the router is online and the Wi-Fi network is available.
3. If your Arlo Chime is connected to an Arlo SmartHub or Base Station, make sure the SmartHub or Base Station is online.
 - Check the LED status on your Arlo SmartHub or Base Station.
 - For more information, visit: [What do the LEDs on my Arlo SmartHub or Base Station mean?](#)
4. Make sure the Arlo Chime is connected to a working power outlet.
 - Make sure the power outlet is not controlled by a wall switch.

5. Ensure the Arlo Chime is within range of the Wi-Fi router or Arlo SmartHub/Base Station.
6. Reset the Arlo Chime:
 - Plug the Arlo Chime into a wall outlet.
 - Press and hold the **SYNC** button located on the side of the Arlo Chime for 10 seconds, until the LED starts flashing.
 - Release the **SYNC** button once the LED starts to flash.
7. Reinstall the device using the Arlo Secure App.
 - For more information, visit: [How do I install my Arlo Chime or Chime 2?](#)

Last Updated:05/21/2024 | Article ID: 000062737

My Arlo Wire-Free Outdoor Siren is offline, how do I troubleshoot it?

My Arlo Wire-Free Outdoor Siren is offline, how do I troubleshoot it?

This article applies to:

[SLB1001](#)

If your Arlo Wire-Free Outdoor Arlo Siren was working before and is now offline, use the following troubleshooting steps to get it back online.

Your Arlo Keypad Sensor Hub may be offline.

To check the status of your Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App.
2. Tap **Devices** and verify the Arlo Keypad Sensor Hub is online.
3. If your Keypad Sensor Hub is offline, visit: [My Arlo Keypad Sensor Hub is offline: how can I troubleshoot it?](#)

Is there Wi-Fi signal interference?

- Environments with multiple Wi-Fi networks, Wi-Fi devices, or frequencies can cause signal interference.
 - Minimize the number of networks, Wi-Fi devices, and transmitted frequencies in the area where you place your Arlo Wire-Free Outdoor Siren.
 - For help with adjusting Wi-Fi settings such as the channel for your router, check the instructions that came with your router or contact your internet service provider (ISP) if they installed your router.
- We recommend that you place your Arlo Wire-Free Outdoor Siren at least 10 feet (3 meters) from your router and Arlo Keypad Sensor Hub.
 - Allow at least 6½ feet (2 meters) between each Arlo device to prevent Wi-Fi signals between the devices from interfering with each other.

Is the Arlo Wire-Free Outdoor Siren within range?

Use the range finder to determine if your Arlo Wire-Free Outdoor Siren is within range.

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Arlo Wire-Free Outdoor Siren device card.
4. Tap .
5. Tap **Connected to**.
6. Tap **Device Rangefinder**.

The Status will state Within Range or Out of Range.

If the Arlo Wire-Free Outdoor Siren is out of range, move it closer to the Arlo Keypad Sensor Hub, or away from obstructions that could prevent signals from reaching the Siren.

Reset the power on your Arlo Wire-Free Outdoor Siren.

1. Twist the back of the Siren to remove the Mounting Plate.
2. Press the clip to release the battery cover.

3. Pull the ribbon to remove the battery from the battery compartment.
4. Re-install the batteries after 30 seconds.
5. Re-install the battery cover and the Mounting Plate.

Factory reset the Arlo Wire-Free Outdoor Siren.

Factory resetting your Arlo Wire-Free Outdoor Siren returns it to default settings. The Arlo Wire-Free Outdoor Siren is also removed from your Arlo account after a factory reset. You must follow the in-app setup process to use your Arlo Wire-Free Outdoor Siren after a factory reset.

To factory reset your Arlo Wire-Free Outdoor Siren with the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Arlo Wire-Free Outdoor Siren device card.
4. Tap .
5. Tap the name of your device to access the Device Info screen.
6. Tap **Remove Device** at the bottom of the screen.
7. Tap **Yes** to confirm.

To factory reset the Arlo Wire-Free Outdoor Siren using the device:

1. Remove the back cover of the Arlo Wire-Free Outdoor Siren.
2. Quickly press the SYNC button five times.
3. You will hear an audible beep for each button press.
4. The LED indicator will flash amber five times to confirm the factory reset.
5. After the reset, the siren LED will slowly flash blue to indicate it is in pairing mode.

Note: After the factory reset, re-add the Arlo Wire-Free Outdoor Siren to your Arlo account. For more information, visit: [How do I setup and install my Arlo Wire-Free Outdoor Siren?](#)

Last Updated:08/16/2023 | Article ID: 000063061

NETWORK RELATED

How do I change the Wi-Fi network that my Arlo device is connected to?

How do I change the Wi-Fi network that my Arlo device is connected to?

This article applies to:

[AVD2001](#) [AVD1001](#) [AC2001](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC2020](#) [VMC2040](#) [VMC2030](#)
[VMC2032](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [How do I change the Wi-Fi network that my Arlo device is connected to? - Arlo Secure 4.0](#)*

Most Arlo devices must be connected to a 2.4GHz Wi-Fi network to operate. When you first set up your device, you are prompted to connect to a Wi-Fi network, but you can change this network after setup.

Before you start:

- Your mobile device must be connected to the same 2.4GHz Wi-Fi network that you are attempting to connect your Arlo device.
- Your Arlo device must be in [disarmed mode](#) to accept a Wi-Fi network change.
- Ensure that Arlo wire free cameras are charged at 30% battery or above before you change their Wi-Fi networks.

To change the Wi-Fi network that your Arlo device is connected to:

1. Launch the Arlo Secure App.
2. Tap **Settings > My Devices**.
3. Select the name of your Arlo device.
4. Tap **Connected to**, directly below the **Device On** switch.
5. Tap **Change Network** at the bottom of the screen.

6. Follow the in-app instructions for your specific device or continue to the next step.
7. Go to your phone settings and make sure you are connected to a 2.4 GHz Wi-Fi network.
8. Return to the Arlo Secure App.
9. Tap **Continue** to allow Arlo to find the same 2.4 GHz network your phone is connected to.
10. Enter your Wi-Fi **SSID** and **Password**.
11. Press the **Sync** button on your device.
12. When the LED on the front of the Arlo device is flashing, tap **Continue**.
13. Hold the QR code in front of your Arlo device and tap **Continue** when you hear a chime sound.
14. After Arlo discovers your device and a successful connection message displays, tap **Finish**.

To troubleshoot Wi-Fi network changes, visit:

- [My Arlo camera will not scan the QR code during setup](#)
- [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)

Last Updated:05/17/2024 | Article ID: 000062357

How do I connect my Arlo camera to a hidden Wi-Fi network?

How do I connect my Arlo camera to a hidden Wi-Fi network?

This article applies to:

You can connect your Arlo camera to a hidden wireless (Wi-Fi) network (one that does not broadcast its SSID).

To connect your Arlo camera to a hidden network:

You need to know the name (SSID) of the hidden network. If you don't know the SSID, access your router's user interface to determine the SSID.

1. During the Arlo camera setup process, enter the hidden **Network Name** (SSID), then enter the **password** for that network.
2. Click or tap **Continue** to sync the camera.
3. Follow the onscreen instructions.

Last Updated:05/10/2024 | Article ID: 1001960

How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to a SmartHub or Base Station?

How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to a SmartHub or Base Station?

This article applies to:

[AVD2001](#) [AVD1001](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, please visit: [How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to a SmartHub or Base Station? - Arlo Secure 4.0](#)*

Follow these instructions if your Arlo camera is currently set up and connected to a VMB5000, VMB4540, VMB4500, or VMB4000 SmartHub or Base Station, and you want to connect the camera or doorbell directly to your 2.4 GHz Wi-Fi network.

If your Arlo camera is not already set up, review the instructions on the in-package quick start guide.

Before you begin:

- You must have an Arlo camera that can directly connect to a Wi-Fi router.
- Your mobile device must be connected to your 2.4 GHz Wi-Fi network, and you must connect your Arlo camera to the *same* 2.4 GHz Wi-Fi network. For more information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)
- To avoid losing your Arlo plan trial, make sure that you add your Arlo camera to the account that it was originally connected to.
- When your Arlo camera is not connected to an Arlo SmartHub or Base Station, you can't store Arlo recordings to a local storage device.

To connect your Arlo camera to your 2.4 GHz Wi-Fi router:

To switch your Arlo camera from an Arlo SmartHub or Base Station connection to a direct-to-Wi-Fi connection, you must remove the Arlo camera from your account and re-onboard it.

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap on **My Devices**.
4. Select your Arlo camera.
5. Scroll to the bottom of the Device Settings screen, and tap **Remove Device**.
Your device is reset and removed from your account.
6. From the Devices screen, tap **Add New Device**, and select your camera.
7. If Arlo detects a SmartHub or Base Station, tap **Connect without SmartHub** or **Connect without a Base Station**.

Follow the in-app instructions to connect your camera or doorbell directly to a 2.4 GHz Wi-Fi network.

How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?

How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [SH1001](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#)
[VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

If you want to connect an Arlo camera directly to a Wi-Fi router (without an Arlo SmartHub or Arlo Base Station), you must connect your mobile device to 2.4 GHz Wi-Fi during the setup process.

Many routers broadcast Wi-Fi networks in both 2.4 GHz and 5 GHz bands.

- Your Arlo device directly connects to a 2.4 GHz Wi-Fi network.
- This means that you must first connect your mobile device to your 2.4 GHz Wi-Fi network, then connect your Arlo device to that **same** 2.4 GHz Wi-Fi network during the setup process in the Arlo Secure App.

Arlo Pro 5S can operate on 2.4 GHz or 5 GHz, but only after installation has been completed on the 2.4 GHz band.

- If the 2.4 GHz and 5 GHz Wi-Fi bands have the same SSID and password, the camera will connect to both networks during installation.
- If they are different, you can configure the network connection after installation.
- For more information, visit: [How does the Arlo Pro 5S Camera use 5 GHz Wi-Fi networks?](#)

Arlo Video Doorbells, Arlo Essential Series Cameras, Arlo Pro 4, Arlo Pro 5S, Arlo Pro 3 Floodlight Camera, Arlo Q, Arlo Q Plus, and Arlo Baby can connect directly to a 2.4 GHz Wi-Fi network.


- To check for potential issues with your Wi-Fi network, visit: [How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?](#)

Find your 2.4 GHz Wi-Fi network

When connecting your mobile device and Arlo device to a Wi-Fi network, ensure that you select the SSID that indicates it is a 2.4 GHz network. This is typically indicated by a 2, 2.4, or 2G at the end of the SSID.

If you have both 2.4 GHz and 5 GHz Wi-Fi networks:

- Your **2.4 GHz** network name or SSID might have a 2, 2.4, or 2G at the end.
- Your **5 GHz** network name or SSID might have a 5 or 5G at the end.

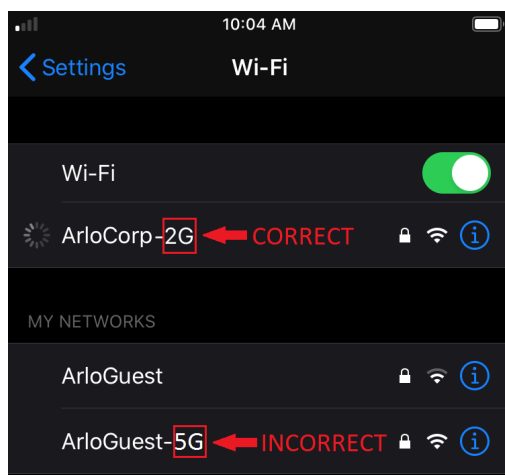

Some Wi-Fi routers have only one Wi-Fi network name that is used for both 2.4 GHz and 5 GHz Wi-Fi bands.

- If you are having trouble connecting and your Wi-Fi network name doesn't indicate whether it's 2.4 GHz or 5 GHz, read the [Troubleshooting](#) section in this article.

Connect to your 2.4 GHz network

To connect your iOS (Apple) device to a 2.4 GHz network:

1. Open the **Settings** app for your iOS device.
2. Tap **Wi-Fi**.

3. Tap the **Wi-Fi** switch to the on position.

Note: Wi-Fi is enabled when the Wi-Fi button is green.

4. Select a **2.4 GHz** Wi-Fi network.

This is commonly indicated by a 2, 2.4, or 2G at the end of the network name or SSID.

5. If prompted, enter the password for the network.

When you are connected to the Wi-Fi network, a **blue checkmark** appears to the left of the network name.

To connect your Android device to a 2.4 GHz network:

1. Open the **Settings** app for your Android device.
2. Tap **Connections**.
3. Tap **Wi-Fi**.
4. To see available networks, tap the **Wi-Fi** switch to On.
5. Select a 2.4 GHz Wi-Fi network.

This is commonly indicated by a 2, 2.4, or 2G at the end of the network name or SSID.

6. If prompted, enter the password for the network.

When your device is connected to the Wi-Fi network, the word **Connected** appears under the network name.

Troubleshooting

If your Wi-Fi network name or SSID doesn't indicate whether it's 2.4 GHz or 5 GHz:

- Try opening your router settings, and look for a 2.4 GHz Wi-Fi network that your mobile device can connect to. If you need help with this, contact your router manufacturer.
- Contact your Internet Service Provider (ISP), and ask for help connecting your mobile device to a 2.4 GHz Wi-Fi network.

If your router uses the same Wi-Fi network name or SSID for both 2.4 GHz and 5 GHz Wi-Fi bands:

- Routers can use the same network name or SSID to broadcast both 2.4 GHz and 5 GHz Wi-Fi networks.

- If your mobile device is connected to a mesh network, your Arlo device will not be able to connect to the 5 GHz band, so it will automatically connect to the 2.4 GHz band.
- **For networks that have the same SSID for 2.4/5 GHz:**
 - Try temporarily disabling 5 GHz in the router settings.
- **For Mesh systems:**
 - If you are having difficulty connecting, try temporarily turning off the access points, and connect the camera to the main router first.
 - Once installation is complete, power on the access points again.
- Band Steering automatically connects your devices to the best available Wi-Fi frequency in your home.
 - Most Wi-Fi modems come with two frequencies (2.4 GHz and 5 GHz) and ask you to choose between them when connecting a device to your home network.
 - Disable Band Steering prior to installing your Arlo device.
 - Upon successful installation and setup, you can re-enable Band Steering.

Note: Contact your router manufacturer for specific Band Steering instructions.

If your Arlo device still is not found during setup:

- Ensure that you entered the correct SSID and password in the Arlo Secure App during the setup process.
- Note:** The SSID is case-sensitive. Ensure that it is EXACTLY correct when you enter it in the Arlo Secure App.
- Ensure that your mobile device is NOT connected to a VPN.
 - Ensure that **auto-join** settings are turned off on your mobile device.
 - Ensure that Wi-Fi Assist and Adaptive Wi-Fi features are turned off on your mobile device.

Wi-Fi Assist and Adaptive Wi-Fi features use cellular data when your Wi-Fi connection is poor. This can interfere with the Arlo device setup process.

- To turn off Wi-Fi Assist on iOS, visit:
<https://support.apple.com/en-ca/HT205296>

- To turn off Adaptive Wi-Fi on Android, visit:
<https://www.verizon.com/support/knowledge-base-237485/>
- Visit [Arlo Support](#) to speak with an expert.

Last Updated:04/16/2024 | Article ID: 000062370

How do I control whether my Arlo Go 2 Camera connects to Mobile or Wi-Fi?

How do I control whether my Arlo Go 2 Camera connects to Mobile or Wi-Fi?

This article applies to:

[VML2030](#)

Arlo Go 2 gives you the flexibility of using 2.4 GHz Wi-Fi or LTE for connectivity. You can also use LTE as a backup in case your Wi-Fi internet connection is interrupted.

Note: When using both 2.4 GHz Wi-Fi and LTE mode, Wi-Fi will always be the primary mode of connection.

During setup, you can connect the Arlo Go 2 Camera to either a mobile, Wi-Fi network or both:

- **Mobile (LTE):** To access the mobile network, your Arlo Go 2 Camera requires an activated SIM card with a mobile data plan. The SIM card must be installed in the Arlo Go 2 Camera.
- **Wi-Fi:** Your camera connects to an available 2.4 GHz Wi-Fi network.

When setting up Arlo Go 2 for the first time, you will be asked if you want to connect via LTE or Wi-Fi. If you want to use both, you should setup the Wi-Fi connection as it will also include steps on how to install your SIM for the LTE connection.

For more information on how to setup your Arlo Go 2 Camera, visit: [How do I set up my Arlo Go 2 Camera?](#)

To check for potential issues with your Wi-Fi network, visit: [How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?](#)

To change the network mode:

For the Arlo Secure App experience with **Feed**:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Arlo Go 2 device card.
4. Tap .
5. Tap **Cellular Network** or **Wi-Fi Network**.
6. Tap **Set as Default Connection**.

For the Arlo Secure App experience with **Library**:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the **Settings** (gear) icon for your Arlo Go 2 camera.
4. Tap **Connected to**.
5. Select **Wi-Fi** or **Cellular Network**.

For more information, visit: [What are the benefits of connecting my Go 2 Camera via mobile or Wi-Fi?](#)

Last Updated: 05/09/2024 | Article ID: 000062618

How do I change the Wi-Fi network that my Arlo Pro 5S Camera is connected to?

How do I change the Wi-Fi network that my Arlo Pro 5S Camera is connected to?

This article applies to:

[VMC4060P](#)

The Arlo Pro 5S can use both 2.4GHz and 5GHz Wi-Fi networks to operate. When you first set up your device, you are prompted to connect to a Wi-Fi network, but you can change this network after setup.

Note: This article applies only to the Arlo Pro 5S Camera. If you want to change the Wi-Fi network for other devices, visit: [How do I change the Wi-Fi network that my Arlo device is connected to?](#)

Before you start:

- You must use the Arlo Secure App on an iOS or Android device. The Wi-Fi network cannot be changed on my.arlo.com.
- Your mobile device must be connected to the same 2.4GHz Wi-Fi network that you are attempting to connect to your Arlo device.
- When changing networks, you will need to re-establish the connection to both the 2.4GHz and 5GHz networks, starting with 2.4 GHz. For more information, visit: [How does the Arlo Pro 5S Camera use 5GHz Wi-Fi networks?](#)
- Your Location with the Arlo Pro 5S camera must be in  Standby Mode to accept a Wi-Fi network change.
- Ensure that your camera has at least 30% battery charge or more before you change the Wi-Fi network.

To change the Wi-Fi network(s) that your Arlo Pro 5S

Camera is connected to:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap on your Arlo Pro 5S.
4. Tap  in the upper right.
5. Tap **Wi-Fi Network**.
6. Tap **Change Network** at the bottom of the screen.
7. Follow the in-app instructions for your specific device or continue to the next step.
8. Go to your phone settings and make sure you are connected to a **2.4 GHz Wi-Fi network**.
9. Return to the Arlo Secure App.
10. Tap **Continue** to allow Arlo to find the same 2.4 GHz network your phone is connected to.
11. Enter your **Wi-Fi SSID** and **Password**.
12. Press the housing release button on your camera, and remove the camera from its housing. Press the **Sync** button on your camera.
13. When the LED on the front of the Arlo device is flashing, tap **Continue**.
14. Hold the QR code in front of your Arlo device and tap **Continue** after you hear a chime sound from your camera.
15. After Arlo discovers your camera and a successful connection message is displayed, tap **Finish**.

Once the 2.4 GHz Wi-Fi connection is complete, you may also add a 5GHz Wi-Fi network connection. To add a 5GHz Wi-Fi connection:

1. Open the Arlo Secure App.
2. Tap on **Devices**.
3. Tap on the camera to edit.
4. Tap  to enter **Device Settings**.
5. Tap on **Wi-Fi Network**.
6. Under 5 GHz Network Connection, tap on **Set up**.

7. Follow the on-screen instructions to complete the 5GHz network setup.

To troubleshoot changing Wi-Fi networks, visit:

- [My Arlo camera won't scan the QR code](#)
- [How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?](#)
- [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0](#)

Last Updated:05/09/2024 | Article ID: 000062992

What are the benefits of connecting my Go 2 Camera via mobile or Wi-Fi?

What are the benefits of connecting my Arlo Go 2 Camera via mobile or Wi-Fi?

This article applies to:

[VML2030](#)

How you connect your Arlo Go 2 Camera depends on your location and your security needs. Arlo Go 2 is designed to be flexible. You can set up your camera in one spot and use it there, or you can take it with you from place to place.

- **Note:** During initial setup, the Arlo Go 2 Camera first connects to the mobile LTE network, and then you have the option to also set up with Wi-Fi or skip the Wi-Fi connection step.

Connecting Arlo Go 2 only to the mobile LTE network works well when:

- The Arlo Go 2 Camera is in a location where Wi-Fi is unavailable or the Wi-Fi signal is weak, such as a cottage, cabin, large property, farm, or marina.
- You travel and want to bring your Arlo Go 2 Camera with you in your RV, on road trips, or on hunting trips.
- You plan to use your Arlo Go 2 Camera to temporarily monitor different locations for popup retail or job sites.
- You want continuous security coverage, even if the power goes out or during an internet service outage.

Connecting Arlo Go 2 to Wi-Fi works well when:

- Your Wi-Fi signal is strong at the Arlo Go 2 Camera location.
- Your Arlo Go 2 Camera mainly uses Wi-Fi at your home or business, but you want peace of mind in case of a power or internet service outage. The Arlo Go 2 camera automatically uses its mobile LTE connection if internet access via Wi-Fi becomes temporarily unavailable. When your Wi-Fi is available again, your Go 2 camera switches back to its Wi-Fi connection.

Unless you change its settings to specify Cellular Network, the Arlo Go 2 Camera prioritizes finding and connecting to a Wi-Fi network.

- If you want Arlo Go 2 to always connect to the mobile network, turn off Wi-Fi Network in the Arlo Secure App. This prevents your Arlo Go 2 from constantly attempting to find the Wi-Fi network it connected to before, which can affect battery life.
- For more information, visit: [How do I control whether my Arlo Go 2 Camera connects to Mobile or Wi-Fi?](#)

Last Updated:06/04/2024 | Article ID: 000062598

How can I troubleshoot Arlo Q Plus camera connections using PoE or Ethernet?

How can I troubleshoot Arlo Q Plus camera connections using PoE or Ethernet?

This article applies to:

If you tried to set up your Arlo Q Plus camera using a Power over Ethernet (PoE) or an Ethernet connection and cannot connect:

- Ensure your wired network has an active Internet connection.
- Try the Arlo Q Plus camera setup process using a PC or Mac that is connected to the same Ethernet switch as the camera.
- Check that your router or switch has access to a DHCP server that provides an IP address for your camera.
 - For more information, see your router or switch documentation.

Last Updated:06/06/2024 | Article ID: 1085351

How does the Arlo Pro 5S Camera use 5GHz Wi-Fi networks?

How does the Arlo Pro 5S Camera use 5GHz Wi-Fi networks?

This article applies to:

[VMC4060P](#)

If you are connecting your Arlo Pro 5S Camera directly to a Wi-Fi router, you can connect to both 2.4GHz and 5GHz Wi-Fi networks.

- Connect your camera to both your 2.4GHz and 5GHz Wi-Fi networks to get the best connectivity.
- If your 2.4GHz and 5GHz Wi-Fi networks share the same SSID (Wi-Fi Name) and password, the camera will automatically join both networks during installation.

Note: Your mobile device and Arlo camera must connect to a 2.4GHz Wi-Fi network during the initial installation.

- For more information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)

If your 2.4GHz and 5GHz Wi-Fi networks do not share the same SSID (Wi-Fi Name) and password, you will be asked if you want to set up a 5GHz network:

1. In your camera's notifications, under Set up a 5GHz network, tap **Set Up Now**.
2. Tap **Continue** to allow your camera to connect to your 5GHz network.
3. Select a Wi-Fi network and tap **Continue**.
4. Enter password and tap **Continue**.
5. Arlo will begin looking for your camera.
6. Tap **Finish**.

To connect your 5GHz Wi-Fi network after installation:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select the Pro 5S camera.
4. Tap  to enter Device Settings.
5. Tap **Wi-Fi Network**.
6. Under 5 GHz Network Connection, tap **Set up**.
7. Follow the on-screen instructions to complete the 5GHz network setup.

How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?

How do I use the Arlo Wi-Fi Troubleshooting Tool to diagnose issues with my network or installation?


This article applies to:

[FLW2001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#)
[VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)


The Arlo Wi-Fi Troubleshooting Tool allows you to run a quick scan of your home network and highlight any issue or network configuration that could impact or prevent your Arlo device from working properly.

If Arlo is having issues discovering your Arlo camera or device during initial installation:


1. Tap **NEED HELP?**

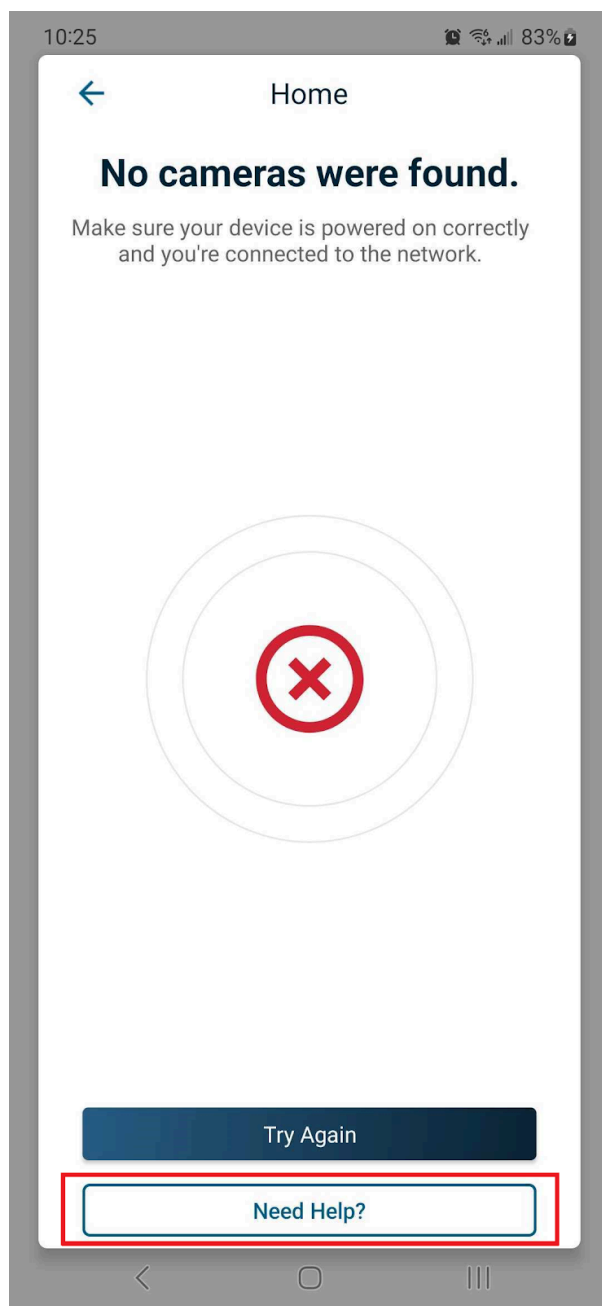


2. Tap **START WI-FI SCAN**.

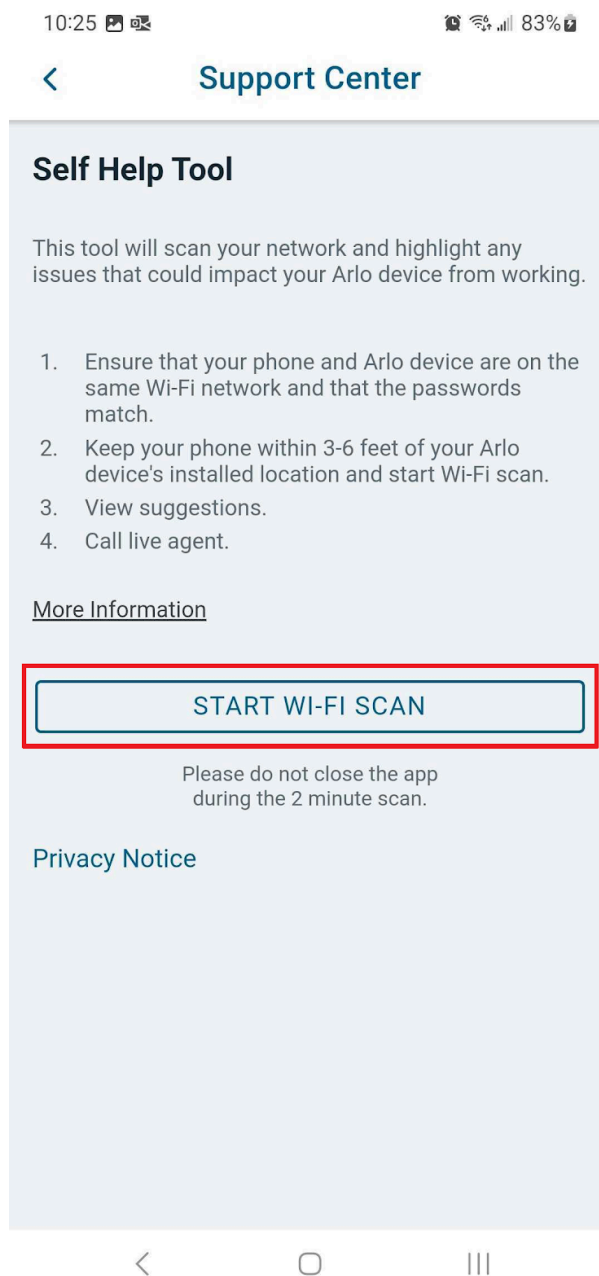


- Do not close the Arlo Secure App while the scan is in progress.

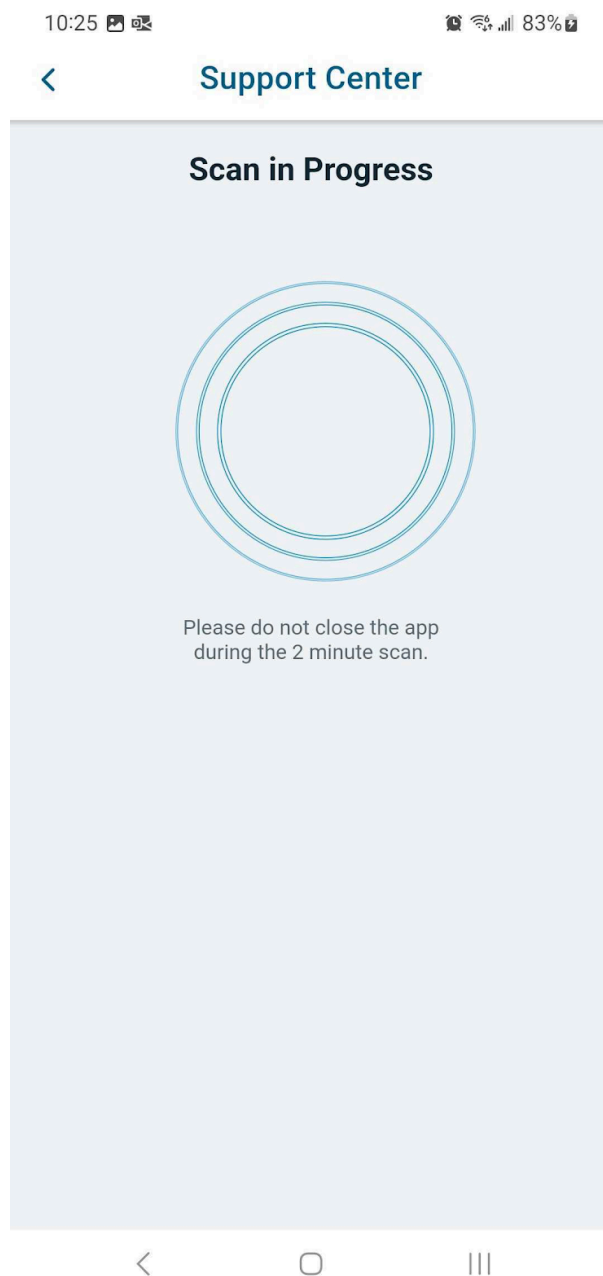


3. Tap **SEE RECOMMENDATIONS** after getting the speed test results.

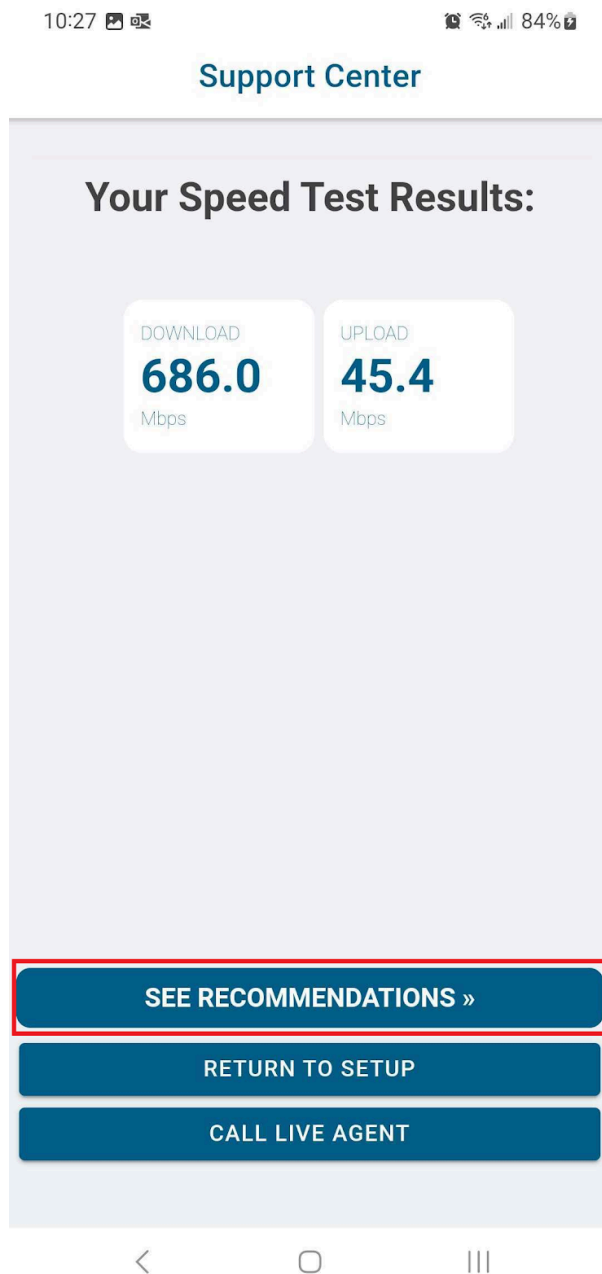

4. Tap the recommendation radio button.

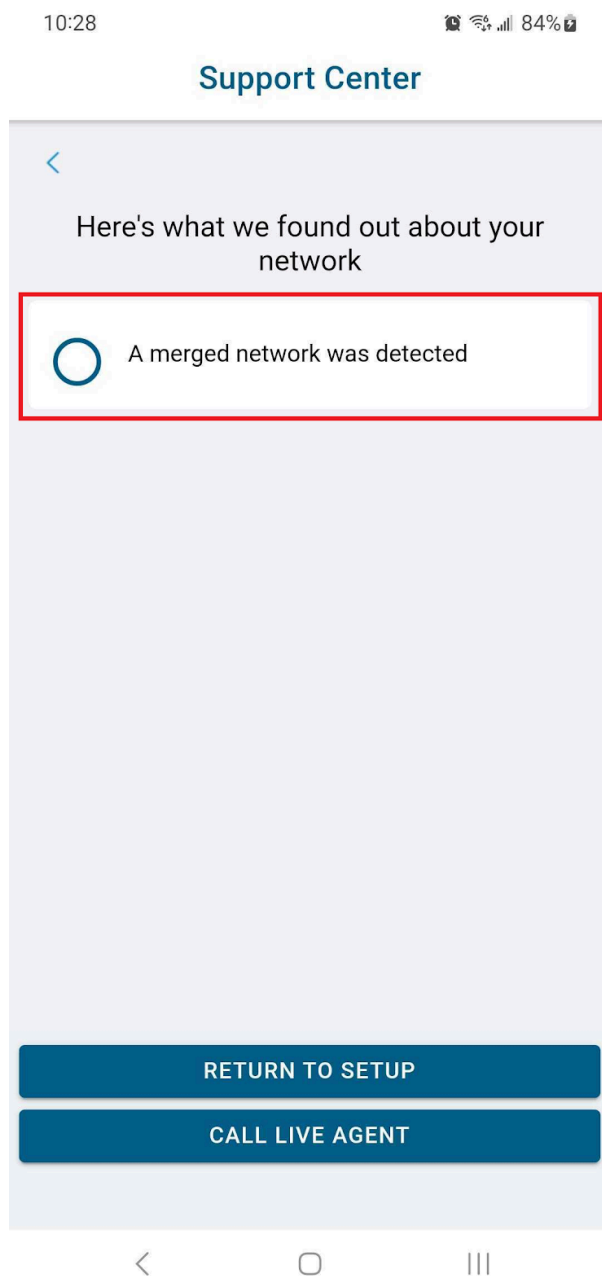

- Follow the suggestions to fix the issue.

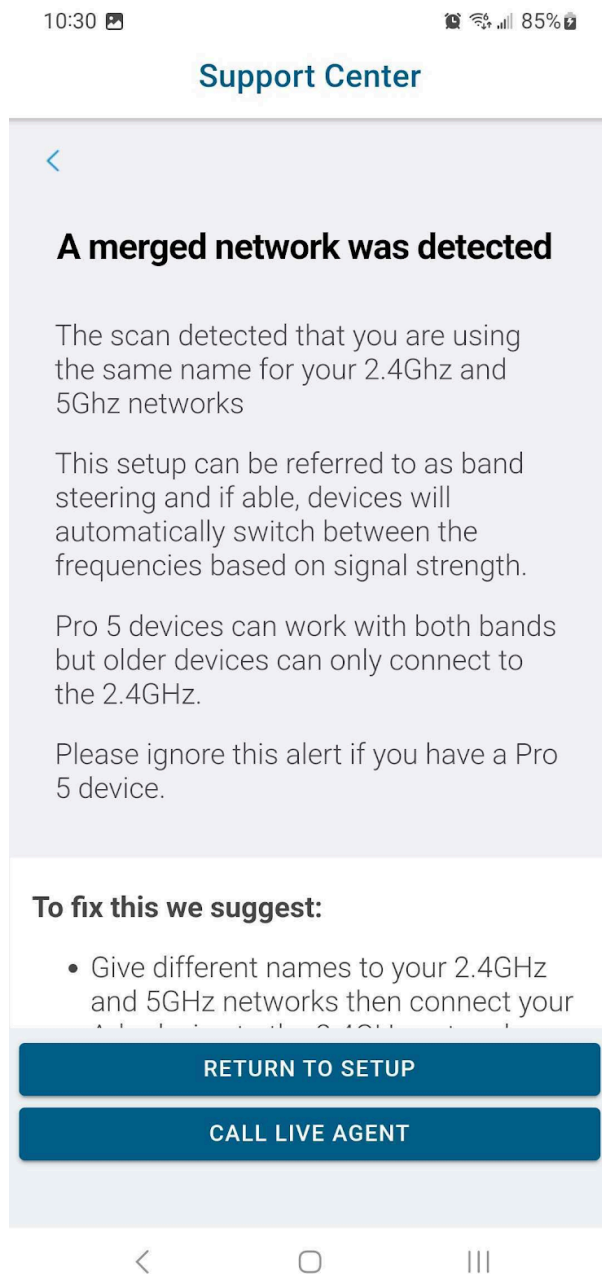

The Arlo Wi-Fi Troubleshooting Tool is also accessible through the Support Center:

For the Arlo Secure App experience with **Feed**:

1. Launch the Arlo Secure App.
2. Tap .
3. Tap **Support Center**.

4. Select your Arlo product.
5. Select the issue and tap **Submit**.
6. Tap **Start Wi-Fi Scan**.
Note: Do not close the Arlo Secure App while scanning is in progress.
7. Tap **While using app** or **Only this time** to allow Arlo to access the device location.
8. Tap **Continue Troubleshooting**.
Note: Tap the troubleshooting guide to view more details.
9. Tap **Return to Setup** to continue installation or **Still Having Issues** to contact Support.
10. Tap **Next**.
11. Tap > in Network Scan to send a report of your Wi-Fi scan or tap **Send Picture** to upload a photo.
Note: You must have an active Arlo Secure subscription or an Arlo trial plan to perform the scan and reach Customer Support.

For the Arlo Secure App experience with **Library**:

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap **Support**.
4. Select your Arlo product.
5. Select the issue and tap **Submit**.
6. Tap **Start Wi-Fi Scan**.
Note: Do not close the Arlo Secure App while scanning is in progress.
7. Tap **While using app** or **Only this time** to allow Arlo to access the device location.
8. Tap **Continue Troubleshooting**.
Note: Tap the troubleshooting guide to view more details.
9. Tap **Return to Setup** to continue installation or **Still Having Issues** to contact Support.
10. Tap **Next**.
11. Tap > in Network Scan to send a report of your Wi-Fi scan or tap **Send Picture** to upload a photo.

Note: You must have an active Arlo Secure subscription or an Arlo trial plan to perform the scan and reach Customer Support.

Last Updated: 11/28/2023 | Article ID: 000063045

How do I connect my Arlo SmartHub or Base Station to the Internet?

How do I connect my Arlo SmartHub or Base Station to the Internet?

This article applies to:

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, please visit: [How do I connect my Arlo SmartHub or Base Station to the Internet? - Arlo Secure 4.0](#)*

To connect your Arlo SmartHub or Base Station to the Internet and add it to your Arlo system:

1. Launch the Arlo Secure App.
2. Tap **Add New Device**.
3. Tap **Base Station/Hub**.
4. Connect the SmartHub or Base Station to your Wi-Fi router using an Ethernet cable.

Note: You must connect the SmartHub or Base Station to your router with an Ethernet cable **before you power it on**. The SmartHub or Base Station might not connect to your network if you power it on before connecting it to your router.

5. Connect the power adapter to the SmartHub or Base Station and plug it into an electrical outlet.
6. Some older model Base Stations have an On-Off button. Turn the Base Station on by pressing the **On-Off** button after you plug it into an electrical outlet.
7. If you have a SmartHub or Base Station with one LED, wait for the LED to turn blue.

If you have a Base Station with three LEDs, wait for the Power LED on the front of the Base Station to turn green.

Continue to follow the in-app instructions to complete the set-up process.

If you are unable to connect your Arlo SmartHub or Base Station, visit:

- SmartHubs and Base Stations with **one LED**: [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)
- Base Stations with **three LEDs**: [Arlo can't discover my Base Station during installation; what do I do?](#)

For more information, visit:

- [Arlo SmartHub and Base Station Compatibility](#)
- [What do the LEDs on my Arlo SmartHub or Base Station mean?](#)
- [What are the benefits of using an Arlo SmartHub or Base Station?](#)
- [My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?](#)
- [What to do when your Arlo camera will not sync to a SmartHub or Base Station during an install or setup](#)

Last Updated:04/25/2024 | Article ID: 1179139

4.0

How do I connect my Arlo device directly to a Wi-Fi router? - Arlo Secure 4.0

How do I connect my Arlo device directly to a Wi-Fi router? - Arlo Secure 4.0

This article applies to:

[AVD2001](#) [AVD1001](#) [AC2001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#)
[VMB3010](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2020](#) [VMC2040](#) [VMC2030](#)
[VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How do I connect my Arlo device directly to a Wi-Fi router?](#)*

When you first set up your Arlo camera, you have the option to connect the camera directly to your Wi-Fi router or to an Arlo SmartHub or Base Station. You can use the Arlo Secure App to connect directly to your Wi-Fi router.

To move your Arlo camera from an Arlo SmartHub or Base Station connection to a Wi-Fi router connection, visit: [How do I connect my Arlo device directly to my Wi-Fi router if it is currently connected to a SmartHub or Base Station? - Arlo Secure 4.0](#)

Note: When your Arlo camera is disconnected from an Arlo SmartHub or Base Station, you can no longer store Arlo recordings to a local storage device.

Before you begin:

- Your mobile device must be connected to your 2.4 GHz Wi-Fi network, and you must connect your Arlo camera to the same 2.4 GHz Wi-Fi network.
 - For more information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)
- Arlo Pro 5 cameras must be installed on a 2.4 GHz Wi-Fi first before connecting to a 5 GHz Wi-Fi network. If the SSID and password are the same for your 2.4 GHz and 5 GHz networks, the camera will automatically join both networks during installation.

- For more information, visit: [How does the Arlo Pro 5S Camera use 5GHz Wi-Fi networks?](#)
- Band Steering automatically connects your devices to the best available Wi-Fi frequency in your home. Most Wi-Fi modems come with two frequencies (2.4 GHz and 5 GHz) and ask you to choose between them when connecting a device to your home network.
 - Disable Band Steering prior to installing your Arlo device.
 - Upon successful installation and setup, you can re-enable Band Steering.

Note: Contact your router manufacturer for specific Band Steering instructions

To connect your Arlo camera directly to your 2.4 GHz Wi-Fi network:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap .
4. Select your Arlo device.
5. Select your Arlo model.
6. Follow the in-app instructions.
7. If Arlo detects that you have an Arlo SmartHub or Base Station, tap **Connect without SmartHub**.
8. Tap **Continue** on the Connect to a 2.4 GHz network screen.
9. Enter your 2.4 GHz Wi-Fi **SSID** and **Password**.
10. Follow the in-app instructions to finish setting up your device.

Related links:

[My Arlo camera will not scan the QR code during setup](#)

[What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router - Arlo Secure 4.0](#)

Last Updated: 04/25/2024 | Article ID: 000062879

How do I change the Wi-Fi network that my Arlo device is connected to? - Arlo Secure 4.0

How do I change the Wi-Fi network that my Arlo device is connected to? - Arlo Secure 4.0

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#)
[VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3050](#) [VMC2050](#) [VML2030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App with **Feed**. If you have the Arlo Secure App with **Library**, visit: [How do I change the Wi-Fi network that my Arlo device is connected to?](#)*

Most Arlo devices must be connected to a 2.4 GHz Wi-Fi network to operate. When you first set up your device, you are prompted to connect to a Wi-Fi network, but you can change this network after setup.

Before you start:

- Your mobile device must be connected to the same 2.4 GHz Wi-Fi network that you are attempting to connect to your Arlo device.
- The Arlo Pro 5S Camera can be connected to a 5 GHz Wi-Fi network, but **only after installation on 2.4 GHz Wi-Fi is complete**.
 - For more information, visit: [How does the Arlo Pro 5S Camera use 5GHz Wi-Fi networks?](#)
- Your Arlo device must be in Standby Mode to accept a Wi-Fi network change.
 - For more information, visit: [Arm or Disarm Arlo Devices](#)
- Ensure that Arlo wire-free camera batteries are charged to 30% or above before you change the Wi-Fi network.
- Band Steering automatically connects your devices to the best available Wi-Fi frequency in your home. Most Wi-Fi modems come with two frequencies (2.4

GHz and 5 GHz) and ask you to choose between them when connecting a device to your home network.

- Disable Band Steering prior to installing your Arlo device.
- Upon successful installation and setup, you can re-enable Band Steering.

Note: Contact your router manufacturer for specific Band Steering instructions.

To change the Wi-Fi network that your Arlo device is connected to:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select your Arlo device.
4. Tap .
5. Tap **Connected to** or **Wi-Fi Network**.
6. Tap **Change Network**.
7. Go to your phone settings and make sure your mobile phone is connected to a 2.4 GHz Wi-Fi network.
8. Return to the Arlo Secure App.
9. Tap **Continue** to allow Arlo to find the same 2.4 GHz network your phone is connected to.
10. Enter your Wi-Fi SSID **Network Name** and **Password**.
11. Tap **Continue**.
12. Press the **Sync** button on your Arlo device.
13. When the LED on the front of the Arlo device is flashing, tap **Continue**.
14. Hold the QR code in front of your Arlo device and tap **Continue** when you hear a chime sound.
If the QR code will not scan, visit: [My Arlo camera will not scan the QR code during setup](#)
15. After Arlo discovers your device and a successful connection message is displayed, tap **Finish**.
If Arlo did not discover your device, visit: [What to do when Arlo is unable to discover your device during an install or setup directly to a Wi-Fi router](#)

How do I connect my Arlo SmartHub or Base Station to the Internet? - Arlo Secure 4.0

How do I connect my Arlo SmartHub or Base Station to the Internet? - Arlo Secure 4.0

This article applies to:

[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How do I connect my Arlo SmartHub or Base Station to the Internet?](#)*

To connect your Arlo SmartHub or Base Station to the Internet and add it to your Arlo system:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Confirm your Location is set to where you want to install the device.

For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

4. Tap .
5. Scroll down and select **Base Station/Hub**.
6. Connect the Arlo SmartHub or Base Station to your Wi-Fi router with an Ethernet cable.

Note: You must connect the Arlo SmartHub or Base Station to your Wi-Fi router with an Ethernet cable **before** you power it on.

The Arlo SmartHub or Base Station might not connect to your network if you power it on before connecting it to your Wi-Fi router.

7. Connect the AC power adapter to the Arlo SmartHub or Base Station and plug it into an electrical outlet.
8. If you have an older model Arlo Base Station with an On-Off button, turn the Arlo Base Station on by pressing the **On-Off** button after you plug it into an electrical outlet.
9. If you have an Arlo SmartHub or Base Station with **one LED**, wait for the LED to turn **blue**.

If you have an Arlo Base Station with **three LEDs**, wait for the Power LED on the front of the Arlo Base Station to turn **green**.

10. Follow the in-app instructions to complete the set-up process.

If you are unable to connect your Arlo Smart Hub or Base Station, visit:

- Arlo SmartHubs and Base Stations with **one LED**:
 - [Arlo can't discover my SmartHub or Base Station during installation; what do I do?](#)
- Arlo Base Stations with **three LEDs**:
 - [Arlo can't discover my Base Station during installation; what do I do?](#)

For more information, visit:

- [Arlo SmartHub and Base Station Compatibility](#)
- [What do the LEDs on my Arlo SmartHub or Base Station mean?](#)
- [What are the benefits of using an Arlo SmartHub or Base Station?](#)
- [My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?](#)
- [What to do when your Arlo camera will not sync to a SmartHub or Base Station during an install or setup - Arlo Secure 4.0](#)

How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to an Arlo SmartHub or Base Station? - Arlo Secure 4.0

How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to an Arlo SmartHub or Base Station? - Arlo Secure 4.0

This article applies to:

[AVD2001](#) [AVD1001](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

*This article is for the Arlo Secure App with **Feed**. If you have the Arlo Secure App with **Library**, visit: [How do I connect my Arlo device directly to my Wi-Fi router if the camera is currently connected to a SmartHub or Base Station?](#)*

Follow these instructions if your Arlo Camera or Arlo Video Doorbell is currently set up and connected to a VMB5000, VMB4540, VMB4500, or VMB4000 Arlo SmartHub or Base Station, and you want to connect the camera or doorbell directly to your 2.4 GHz Wi-Fi network.

If your Arlo camera is not already set up, visit: [How to set up Arlo Cameras](#)

Before you begin:

- You must have an Arlo Camera or Arlo Video Doorbell that can directly connect to a Wi-Fi router.
- Your mobile device must be connected to your 2.4 GHz Wi-Fi network, and you must connect your Arlo device to the *same* 2.4 GHz Wi-Fi network. For more

information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)

- To avoid losing your Arlo plan trial, make sure you add your Arlo device to the account that it was originally connected to.
- When your Arlo device is not connected to an Arlo SmartHub or Base Station, you cannot store recordings to a local storage device.
- Arlo Pro 5S and Arlo Pro 5 cameras can use the 5 GHz network, however, the camera needs to connect to a 2.4 GHz Wi-Fi network first when re-adding it to your Arlo account. For more information, visit: [How does the Arlo Pro 5S camera use 5 GHz Wi-Fi networks?](#)

To connect your Arlo Camera or Arlo Video Doorbell to a 2.4 GHz

Wi-Fi router:

To switch your Arlo device from an Arlo SmartHub or Base Station connection to a direct Wi-Fi connection, you must remove the Arlo Camera or Arlo Video Doorbell from your account and then re-add it to the account using the **Connect without SmartHub** option.

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap your Arlo Camera or Arlo Video Doorbell device card.
4. Tap .
5. Tap your Arlo device name at the top of the Device Settings screen.
6. Tap **Remove Device** at the bottom of the Device Info screen.
7. Tap **Yes** to confirm the deactivation of your device.
8. Return to the **Devices** screen.
9. Make sure you have the correct Location selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)
10. Tap .
11. Select your Arlo device.
12. Select your Arlo model.
13. If Arlo detects that you have an Arlo SmartHub or Base Station, tap **Connect without SmartHub**.
14. Tap **Continue** on the Connect to a 2.4 GHz network screen.

15. Enter your 2.4 GHz Wi-Fi **SSID** and **Password**.

16. Follow the in-app instructions to finish setting up your Arlo device.

Last Updated:10/09/2024 | Article ID: 000062892

HSS

How do I change the Wi-Fi network on my Arlo Keypad Sensor Hub?

How do I change the Wi-Fi network on my Arlo Keypad Sensor Hub?

This article applies to:

[SH1001](#)

To change the Wi-Fi network on the Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Arlo Keypad Sensor Hub.
4. Tap .
5. Tap **Wi-Fi Network**.
6. Tap **Change Network**.

Note: Your mobile device must be connected to your 2.4 GHz Wi-Fi network, and you must connect your Arlo camera to the same 2.4 GHz Wi-Fi network. For more information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)

7. Follow the in-app instructions to complete the Wi-Fi network change.

Last Updated:06/27/2024 | Article ID: 000063013

My Arlo Cellular and Battery Backup is not connecting to the cellular network, how can I troubleshoot it?

My Arlo Cellular and Battery Backup is not connecting to the cellular network; how can I troubleshoot it?

This article applies to:

[LBB1001](#)

The optional Arlo Cellular and Battery Backup keeps your Arlo Home Security System connected and powered during internet or power outages for up to 12 hours. This device includes a pre-installed SIM card.

- **Note:** The cellular service feature of the Arlo Cellular and Battery Backup requires an [Arlo Premium Plan](#) after the trial plan period expires.

If your Arlo Cellular and Battery Backup is not connecting to the cellular network:

Make sure the Cellular and Battery Backup is **securely attached** to the Arlo Keypad Sensor Hub.

- For more information, visit: [How do I set up the Arlo Cellular and Battery Backup?](#)

Confirm the Arlo Cellular and Battery Backup is **properly set up** and detected in the Arlo Secure App.

- For more information, visit: [How do I set up the Arlo Cellular and Battery Backup?](#)

Confirm the SIM card is **properly installed** in the Arlo Cellular and Battery Backup.

- The SIM card should be pre-installed to automatically provide cellular backup during an internet outage.

If you are using a new SIM card, ensure the settings for your Arlo Cellular and Battery Backup are **correct** and that your cellular service is **active**.

- For more information, visit: [How do I configure the SIM settings in my Arlo Cellular and Battery Backup?](#)

Last Updated:09/20/2024 | Article ID: 000062789

My Arlo Keypad Sensor Hub won't connect to my Wi-Fi network, what do I do?

My Arlo Keypad Sensor Hub will not connect to my Wi-Fi network, what do I do?

This article applies to:

[SH1001](#)

Use the following troubleshooting if you attempted to connect your Arlo Keypad Sensor Hub directly to your Wi-Fi router and Arlo failed to discover the device:

Make sure your Wi-Fi network SSID (network name) and password do not contain spaces in the beginning or end of the name or password.

- The Arlo Keypad Sensor Hub will not be able to connect to your network if the network name or password contains spaces leading up to or trailing after the network name or password.
- You will need to remove any spaces before or after your network name and password before connecting the Arlo Keypad Sensor Hub to your Wi-Fi network.

Make sure you typed the correct Wi-Fi network SSID (network name) and password.

- The network SSID and password are case-sensitive and must be EXACTLY correct.
- Tap the password eye icon to view your password before submitting.

Ensure your mobile device and the Arlo Keypad Sensor Hub are within range of your Wi-Fi router.

- During setup, place the Arlo Keypad Sensor Hub within 10-15 feet (3-4.5 meters) of your Wi-Fi router.
- After the Arlo Keypad Sensor Hub is set up and connected, you can move it anywhere within range of your Wi-Fi router.

Make sure the Mode Button LEDs fade in and out while the Arlo Keypad Sensor Hub is being discovered.

- The Arlo Keypad Sensor Hub can time out if the LEDs fade in and out longer than two minutes without successfully connecting to your Wi-Fi network.
- Make sure the Mode button LEDs fade in and out for the entirety of the connection process.

Ensure you are not using a VPN on your mobile device.

- If a VPN is used, disable the VPN connection.

If you are unable to scan the QR code on your Arlo Keypad Sensor Hub, try moving your mobile device closer to or further from the QR code.

- For more information, visit: [The Arlo Secure App will not read the printed QR code on my Arlo device](#)

If you have checked and verified all of the above, factory reset your Arlo device.

- For more information, visit: [How do I factory reset the Arlo Keypad Sensor Hub?](#)

Last Updated:05/09/2024 | Article ID: 000062804

How can I factory reset my Arlo SmartHub or Base Station?

How can I factory reset my Arlo SmartHub or Base Station?

This article applies to:

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [How can I factory reset my Arlo SmartHub or Base Station? - Arlo Secure 4.0](#)*

WARNING:

- Performing a factory reset returns your Arlo SmartHub or Base Station to its default settings.
- After performing a reset, the Arlo SmartHub or Base Station must be removed and reconnected to your Arlo account.
- All devices paired to the Arlo SmartHub or Base Station must also be reset and reconnected to your Arlo account.

To perform a factory reset on your Arlo SmartHub or Base Station:

1. Use a pen or straightened paperclip to press and hold the **Reset** button on the back of the Arlo SmartHub or Base Station for about 10 seconds.
2. Release the **Reset** button.

After the reset is complete, the LED on the front of the Arlo SmartHub or Base Station flashes amber. When the LED stops flashing amber, your Arlo SmartHub or Base Station reboots.

3. Remove the the Arlo SmartHub or Base Station from the account to prevent potential problems:
 - Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.

- Tap or click **Settings** > **My Devices** and select the device that you want to remove.
 - Scroll to the bottom of the page and tap or click **Remove Device**.
 - Tap or click **Yes** to confirm you want to remove the device.
4. Follow the steps below to re-add and set up your Arlo SmartHub or Base Station.

To re-add and set up your Arlo SmartHub or Base

Station:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. On the **Devices** page, tap **Add New Device**.
3. Select **Base Station/Hub**.
4. Follow the prompts to reconnect your Arlo SmartHub or Base Station to your Arlo account.
5. Use the Arlo Secure App to add and set up the rest of your Arlo devices.

Last Updated:04/18/2024 | Article ID: 1057976

How do I factory reset my Arlo SmartHub or Base Station? - Arlo Secure 4.0

How do I factory reset my Arlo SmartHub or Base Station? - Arlo Secure 4.0

This article applies to:

[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How can I factory reset my Arlo SmartHub or Base Station?](#)*

WARNING:

- Performing a factory reset returns your Arlo SmartHub or Base Station to its default settings.
- After performing a reset, the Arlo SmartHub or Base Station must be removed and reconnected to your Arlo account.
- All devices paired to the Arlo SmartHub or Base Station must also be reset and reconnected to your Arlo account.

To perform a factory reset on your Arlo SmartHub or

Base Station:

1. Use a pen or straightened paperclip to press and hold the **Reset** button on the back of the Arlo SmartHub or Base Station for about 10 seconds.
2. Release the **Reset** button.

After the reset is complete, the LED on the front of the Arlo SmartHub or Base Station flashes amber. When the LED stops flashing amber, your Arlo SmartHub or Base Station reboots.

3. Remove the Arlo SmartHub or Base Station from the account to prevent potential problems:
 - Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
 - Tap or click **Devices**.
 - Make sure the correct Location is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)
 - Tap or click on the Arlo SmartHub or Base Station that you want to remove.
 - Tap or click on the device name at the top of the Device Settings screen.
 - Tap or click **Remove Device** at the bottom of the Device Info screen.

To reconnect your Arlo SmartHub or Base Station to your Arlo account:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click **Devices**.

Note: Make sure the correct Location is selected. For more information, visit:

[How do I switch my Location in the Arlo Secure App?](#)

3. Tap or click .
4. Select **Base Station/Hub**.
5. Follow the prompts to reconnect your Arlo SmartHub or Base Station to your Arlo account.

Last Updated:04/18/2024 | Article ID: 000062881

How do I factory reset and re-sync my Arlo camera?

How do I factory reset and re-sync my Arlo camera?

This article applies to:

[VMC5040](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC2020](#) [VMC2030](#) [VMC2032](#)
[VML2030](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, please visit: [How do I factory reset and re-sync my Arlo camera? - Arlo Secure 4.0](#)*

Factory resetting your Arlo wire-free camera returns it to default settings and removes the camera from your account. This means that you must follow the Arlo Secure App setup process to use your camera after a factory reset.

Factory reset a camera from your Arlo account

To factory reset your camera while it is connected to the cloud:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click **Settings** > **My Devices** and select the camera you want to reset.
3. Tap or click **Remove Device**.
4. Tap or click **Yes** to confirm that you want to remove the camera from your account.
5. Return to the **Devices** page.
6. Tap **Add New Device**.
7. Select your Arlo device.
8. Select your Arlo model.
9. Follow the prompts to reconnect your camera to your Wi-Fi network, Base Station, or SmartHub.

Factory reset an Arlo camera with the Sync button

To factory reset your camera if it is offline or does not have battery power:

1. Unmount your camera and find the **Sync** button. The location of the Sync button varies for different camera models:

Pro 3, Pro 4, Floodlight, Ultra, and Go 2 models:

Release the camera from the camera housing to access the Sync button.

Example:



Essential Wire-Free and other models:

Find the Sync button on the camera housing. Examples:



2. Press and hold the **Sync** button for about 15 seconds, until the camera LED begins blinking Amber, then release the button.

For **Essential Wire-Free**: Press and hold the **Sync** button for about 15 seconds, until the camera LED begins **blinking Blue**, then release the button. Ensure the camera LED

blinks Amber three times. The factory reset may take 15 to 45 seconds to complete.

Note: If you accidentally hold the Sync button too long, return to step 1.

3. Launch the Arlo Secure App or log in to my.arlo.com.
4. Tap or click **Settings > My Devices** and select the camera you just reset.
5. Tap or click **Remove Device**.
6. Tap or click **Yes** to confirm.
7. Return to the **Devices** page and tap or click **Add New Device**.
8. Select your Arlo device.
9. Select your Arlo model.
10. Follow the prompts to connect the camera to your Wi-Fi network, Base Station, or SmartHub.
11. If needed, insert the camera back into its camera housing until it clicks back into place.

Last Updated: 04/23/2024 | Article ID: 000062438

How do I factory reset and re-sync my Arlo camera? - Arlo Secure 4.0

How do I factory reset and re-sync my Arlo camera? - Arlo Secure 4.0

This article applies to:

[VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#)
[VMC2020](#) [VMC2030](#) [VMC2032](#) [VML2030](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, please visit: [How do I factory reset and re-sync my Arlo camera?](#)*

Factory resetting your Arlo wire-free camera returns it to default settings and removes the camera from your account. This means that you must follow the Arlo Secure App setup process to use your camera after a factory reset.

Factory reset a camera from your Arlo account

To factory reset your camera while it is connected to the cloud:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click **Devices**.
3. Tap or click on the camera you want to reset.
4. Tap or click .
5. Tap or click the **Device Name**.
6. Tap or click **Remove Device**.
7. Tap or click **Yes** to confirm that you want to remove the camera from your account.
8. Return to the Devices page.
Note: Make sure you are on the correct Location.
9. Tap or click .
10. Select your Arlo device.
11. Follow the prompts to reconnect your camera to your Wi-Fi network, SmartHub, or Base Station.


Note: If your camera is Offline when you remove it, the camera will not be reset. Follow the instructions below to complete the factory reset of your camera.

Factory reset an Arlo camera with the Sync button


To factory reset your camera if it is offline:

Note: If your camera is offline because of a depleted battery, charge your camera's battery first before performing a factory reset.

1. Unmount your camera and find the **Sync Button**. The location of the Sync button varies for different camera models:
Pro 3, Pro 4, Pro 5S, Pro 3 Floodlight, Ultra, Ultra 2, and Go 2 models:
Release the camera from the camera housing to access the Sync button.
Example:

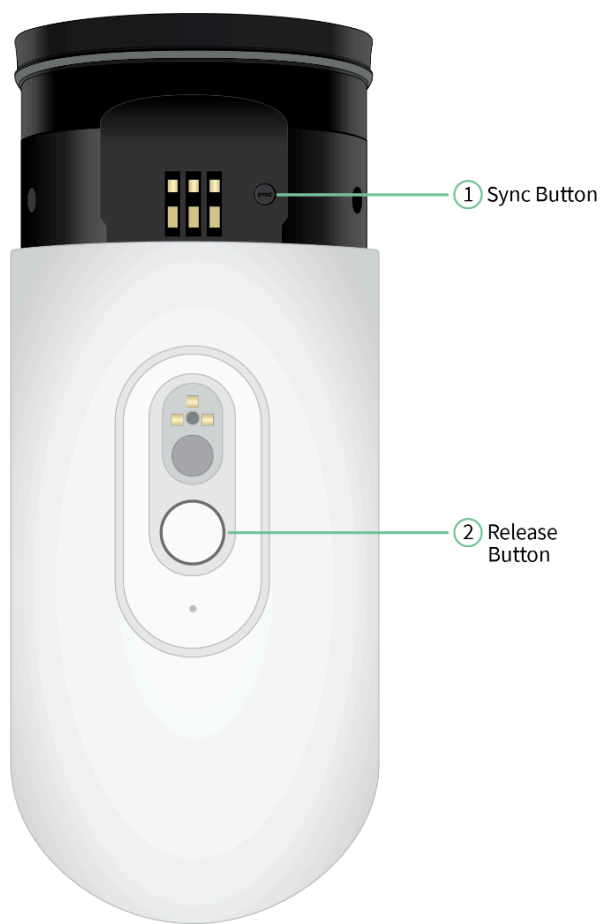

Essential Wire-Free

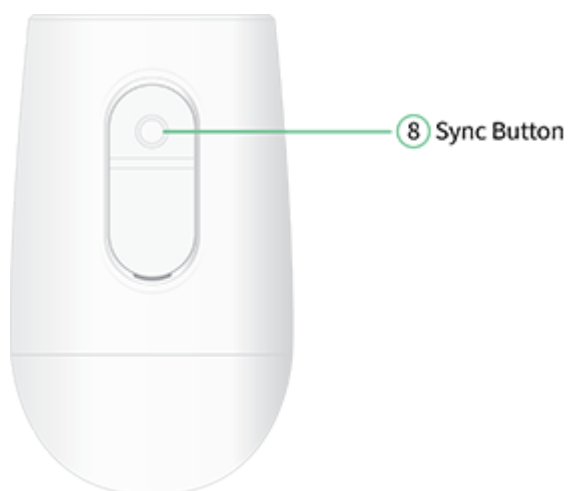

Other Models

Find the Sync button on the camera housing. Example:



2. Press and hold the **Sync** button for about 15 seconds, until the camera LED begins blinking Blue, then release the button.

For **Essential Wire-Free**: Press and hold the **Sync** button for about 15 seconds, until the camera LED begins **blinking Blue**, then release the button. Ensure the camera LED **blinks Amber three times**. The factory reset may take 15 to 45 seconds to complete.

Note: If you accidentally hold the Sync button too long (greater than 30 seconds), wait one minute, then try again.

3. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
4. Tap or click **Devices**.
5. Tap or click on the camera you want to reset.
6. Tap or click .
7. Tap or click the **Device Name**.
8. Tap or click **Remove Device**.
9. Tap or click **Yes** to confirm that you want to remove the camera from your account.
10. Return to the **Devices** page.

Note: Make sure you are on the correct Location.

11. Tap or click .
12. Select your Arlo device.

13. Follow the prompts to connect the camera to your Wi-Fi network, SmartHub, or Base Station.
14. If needed, insert the camera back into its camera housing until it clicks back into place.

For instructions on resetting other Arlo devices, visit: [How to factory reset Arlo devices](#)

Last Updated:04/25/2024 | Article ID: 000062880

How to factory reset Arlo devices

How to factory reset Arlo devices

This article applies to:

[FLW2001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [MS1001](#) [VMB5000](#)
[VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [ABB1000](#) [ASB1001](#) [VMC5040](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2020](#) [VMC2040](#) [VMC2030](#)
[VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#)
[VMC3040](#) [VMC3040S](#) [ABC1000](#)

- Use the following links to factory reset Arlo Cameras, Doorbells, Chimes, SmartHubs, Base Stations, Bridges, Keypad Sensor Hubs, All-in-One Sensors, and Safe Buttons.

Arlo Pro 3, Arlo Pro 4, Arlo Pro 5S, Arlo Ultra, Arlo Ultra 2, Arlo Essential, Arlo Essential Spotlight, Arlo Essential Spotlight XL, Arlo Pro 3 Floodlight, and Arlo Go 2 cameras:

- [How do I factory reset and re-sync my Arlo camera? - Arlo Secure 4.0](#)
- [How do I factory reset and re-sync my Arlo camera?](#)

Arlo SmartHubs and Arlo Base Stations:

- [How do I factory reset my Arlo SmartHub or Base Station? - Arlo Secure 4.0](#)
- [How can I factory reset my Arlo SmartHub or Base Station?](#)

Arlo Wired Floodlight Camera

- [How do I factory reset my Arlo Wired Floodlight Camera?](#)

Arlo Essential Outdoor Camera (2nd Generation):

- [How do I factory reset my Arlo Essential Outdoor Camera \(2nd Generation\)?](#)

Arlo Essential Indoor Camera:

- [How do I factory reset my Arlo Essential Indoor Camera?](#)

Arlo Video Doorbells:

- [How do I reset my Arlo Essential Video Doorbell? - Arlo Secure 4.0](#)
- [How do I reset my Arlo Essential Video Doorbell?](#)

Arlo Chimes:

- [How do I reset my Arlo Chime or Arlo Chime 2?](#)

Arlo Home Security System:

- [How do I factory reset the Arlo Keypad Sensor Hub?](#)
- [How do I factory reset the Arlo All-in-One Sensor?](#)
- [How do I factory reset the Arlo Wire-Free Outdoor Siren?](#)
- [How do I factory reset the Arlo Wire-Free Keypad?](#)

Arlo Go:

- [How do I reset my Arlo Go camera to factory default settings?](#)

Arlo Q and Arlo Q Plus:

- [How to factory reset an Arlo Q or Arlo Q Plus Camera](#)

Arlo Baby:

- [How do I reset Arlo Baby to factory default settings?](#)

Arlo Bridge:

- [How do I perform a factory reset on my Arlo Bridge?](#)

Arlo Audio Doorbell:

- [How do I reset my Arlo Audio Doorbell?](#)

Arlo Safe Button:

- [How do I factory reset the Arlo Safe Button?](#)

Last Updated:09/30/2024 | Article ID: 000062659

How do I factory reset my Arlo Essential Indoor Camera?

How do I factory reset my Arlo Essential Indoor Camera?

This article applies to:

[VMC2040](#) [VMC3060](#) [VMC2060](#)

Factory resetting your Arlo Essential Indoor Camera returns it to the default settings.

- After a factory reset, you will need to set up your Arlo Essential Indoor Camera again using the Arlo Secure App.

To Factory Reset your Arlo Essential Indoor (2nd Generation) Camera:

1. Press and hold the **Pairing Button** on the camera for about 15 seconds.



2. Wait to ensure that the camera LED rapidly blinks amber after 15 seconds, then release the button.
3. Your camera is reset to the factory default settings.
4. Follow the instructions below to remove your camera from the Arlo Secure App and then re-add it to your Arlo system.

To Factory Reset your Arlo Essential Indoor Camera:

1. Press and hold the **Sync Button** on the camera for about 15 seconds.



2. Wait to ensure that the camera LED rapidly blinks blue after 15 seconds, then release the button.
3. Your camera is reset to the factory default settings.
4. Follow the instructions below to remove your camera from the Arlo Secure App and then re-add it to your Arlo system.

To remove the Arlo Essential Indoor Camera from the Arlo Secure App:

For the Arlo Secure experience with **Feed**:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Arlo Essential Indoor Camera device card.
4. Tap .
5. Tap the name of your Arlo Essential Indoor Camera at the top of the Device Settings screen.
6. Tap **Remove Device**.

For the Arlo Secure experience with **Library**:

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap **My Devices**.
4. Select your Arlo Essential Indoor Camera.
5. Scroll down and tap **Remove Device**.

To re-add your Arlo Essential Indoor Camera to the Arlo Secure App:

For the Arlo Secure experience with **Feed**, visit:

- [How to set up the Arlo Essential Indoor Camera - Arlo Secure 4.0](#)
- [How to set up the Arlo Essential Indoor Camera \(2nd Generation\)](#)

For the Arlo Secure experience with **Library**, visit:

- [How to set up the Arlo Essential Indoor Camera](#)

Last Updated:06/11/2024 | Article ID: 000062560

How do I perform a factory reset on my Arlo Bridge?

How do I perform a factory reset on my Arlo Bridge?

This article applies to:

[AL1101](#) [ABB1000](#)

If your Arlo Bridge is already set up and you want to perform a factory reset using the Arlo Secure App:

Note: Your Arlo Bridge must be completely set up to reset your bridge using the Arlo Secure App.

- Delete your Arlo Bridge from your account using the Arlo Secure App. For more information, visit: [How do I remove a device from my Arlo account?](#)

The factory reset automatically begins.

In about 90 seconds, the LED changes to blinking amber. This indicates that the factory reset is complete.

If you want to reset the Arlo Bridge in the middle of the set up process:

1. Unplug the Arlo Bridge and then plug it back into an outlet.
2. Wait until the status LED changes to solid purple.
3. Press and hold the **Sync** button on the bridge for about 15 seconds until the status LED changes to solid amber and then release the **Sync** button.

In about 90 seconds, the LED changes to blinking amber. This indicates that the factory reset is complete.

Last Updated:05/31/2024 | Article ID: 000061857

How to factory reset an Arlo Q or Arlo Q Plus Camera

How to factory reset an Arlo Q or Arlo Q Plus Camera

This article applies to:

[VMC3040](#) [VMC3040S](#)

WARNING: Factory resetting the Arlo Q or Arlo Q Plus Camera returns it to the default settings. This means that you must follow the setup process in the Arlo Secure app to use the camera after a factory reset.

To perform a factory reset on the Arlo Q or Arlo Q Plus Camera:

1. Use a pen or straightened paperclip to press and hold the **Reset** button on the side of the camera for about 10 seconds (until the LED flashes amber).



2. Release the **Reset** button.
3. The LED will turn solid amber for 10 seconds and then flash indicating that the camera is powered on and ready for setup.

Note: A factory reset will not remove the camera from the Arlo Secure App. You must remove Arlo Q from the Device list and reinstall the camera.

Last Updated:05/01/2024 | Article ID: 000062665

How do I factory reset my Arlo Essential Outdoor Camera (2nd Generation)?

How do I factory reset my Arlo Essential Outdoor Camera (2nd Generation)?

This article applies to:

[VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

Factory resetting your Arlo Essential Outdoor Camera (2nd Generation) returns it to default settings.

- You must follow the Arlo Secure App setup process to use your camera after a factory reset.

To factory reset the Arlo Essential Outdoor Camera (2nd Generation) using the device Pairing Button:

1. Press and hold the **Pairing Button** on the top of the camera for 15 seconds.



2. When the camera LED starts blinking amber, release the Pairing Button to trigger a factory reset.

To factory reset the Arlo Essential Outdoor Camera (2nd Generation) using the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select the camera you wish to reset.
4. Tap .
5. Tap the Device Name.
6. Tap **Remove Device**.
7. Tap **Yes** to confirm.

To reconnect the Arlo Essential Outdoor Camera (2nd Generation) to your Arlo account:

1. Launch the Arlo Secure App.
Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)
2. Tap .
3. Select **Cameras > Essential Series > Essential Cameras 2nd Generation**.

4. Follow the in-app instructions.

For more information, visit: [How to set up the Arlo Essential Outdoor or Outdoor XL Camera 2nd Generation](#)

Last Updated: 10/04/2024 | Article ID: 000063225

How do I factory reset the Arlo Keypad Sensor Hub?

How do I factory reset the Arlo Keypad Sensor Hub?

This article applies to:

[SH1001](#)

If you are having issues with your Arlo Keypad Sensor Hub, first try to **restart** the device. If problems persist you may need to perform a **factory reset**.

To restart your Arlo Keypad Sensor Hub using the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select the Arlo Keypad Sensor Hub.
4. Tap .
5. On the Security Hub Settings screen, tap on the name of your device to access the **Device Info** screen.
6. Tap **Restart** at the bottom of the screen.
7. Tap **Yes** to confirm.

The Keypad Sensor Hub Mode LEDs will illuminate white and cycle in a pattern while the device resets.

To restart your Arlo Keypad Sensor Hub using the Keypad:

1. Press  on the Arlo Keypad Sensor Hub to set the Mode to **Standby**.
2. Enter your **PIN** on the Keypad and press  .
3. Press and hold the **5** button on the keypad for 10 seconds.

The Keypad Sensor Hub Mode LEDs will illuminate white and cycle in a pattern while the device resets.

To factory reset the Arlo Keypad Sensor Hub using the Keypad:

WARNING: Factory resetting your Arlo Keypad Sensor Hub returns it to default settings.

- Your Arlo Keypad Sensor Hub is also removed from your Arlo account after a factory reset.
- You must follow the in-app setup process to use your Arlo Keypad Sensor Hub after a factory reset.
- All paired Arlo All-in-One Sensors must be factory reset and paired again after the Arlo Keypad Sensor Hub is reinstalled.
 - To factory reset your All-in-One Sensor, visit: [How do I factory reset the Arlo All-in-One Sensor?](#)
- All Pro 5S cameras connected with SecureLink will need to be paired again.
 - To pair your Arlo Pro 5S camera with SecureLink, visit: [How do I pair my Arlo Pro 5S Camera to my Arlo Keypad Sensor Hub using Arlo SecureLink?](#)

1. Press  on the Arlo Keypad Sensor Hub to set the Mode to **Standby**.
2. Enter your **PIN** on the Keypad and press  .
3. On the Arlo Keypad Sensor Hub, press and hold the  and  buttons at the same time for 10 seconds.

The Keypad LEDs will flash white five times to indicate a factory reset.

Note: After factory resetting the Arlo Keypad Sensor Hub, you must re-add it to your Arlo account. For more information on this process, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)

To factory reset your Arlo Keypad Sensor Hub using the Arlo Secure App:

WARNING: Factory resetting your Arlo Keypad Sensor Hub returns it to default settings.

- Your Arlo Keypad Sensor Hub is also removed from your Arlo account after a factory reset.
- You must follow the in-app setup process to use your Arlo Keypad Sensor Hub after a factory reset.
- All paired Arlo All-in-One Sensors must be factory reset and paired again after the Arlo Keypad Sensor Hub is reinstalled.
 - To factory reset your All-in-One Sensor, visit: [How do I factory reset the Arlo All-in-One Sensor?](#)
- All Pro 5S cameras connected with SecureLink will need to be paired again.
 - To pair your Arlo Pro 5S camera with SecureLink, visit: [How do I pair my Arlo Pro 5S Camera to my Arlo Keypad Sensor Hub using Arlo SecureLink?](#)

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select the Arlo Keypad Sensor Hub.
4. Tap .
5. On the Security Hub Settings screen, tap on the name of your device to access the **Device Info** screen.
6. Tap **Remove Device** at the bottom of the screen.
7. Tap **Yes** to confirm.

Note: After you Factory Reset your Arlo Keypad Sensor Hub, you must re-add it to your Arlo account. For more information on this process, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)

How do I factory reset the Arlo All-in-One Sensor?

How do I factory reset the Arlo All-in-One Sensor?


This article applies to:

[SH1001](#)

Factory resetting the Arlo All-in-One Sensor returns it to default settings. After a factory reset, you must follow the setup process to pair the sensor with your Arlo Home Security System.

To reset the Arlo All-in-One Sensor:

1. Press and hold the **SYNC** button on the bottom of the sensor for 10 seconds.

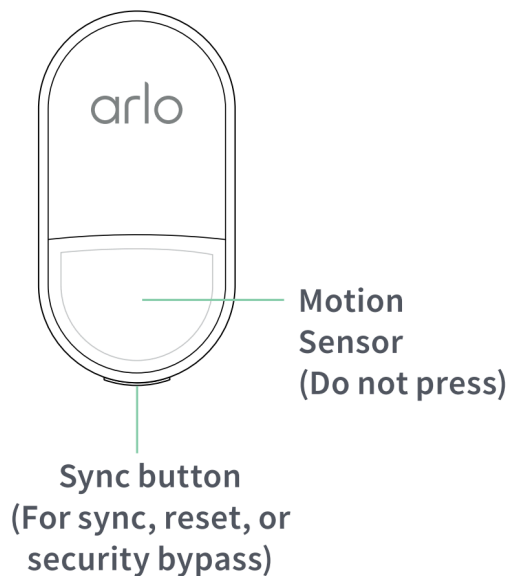

The amber LED blinks slowly for five seconds to indicate a successful factory reset.

2. To pair the sensor to your Arlo Home Security System after a successful factory reset, visit: [How do I pair the All-in-One Sensor to the Arlo Keypad Sensor Hub?](#)

How do I factory reset the Arlo Wire-Free Outdoor Siren?

How do I factory reset the Arlo Wire-Free Outdoor Siren?

This article applies to:

[SLB1001](#)

If you are having issues with your Arlo Wire-Free Outdoor Siren, restart the device. If problems persist, perform a factory reset.

To restart the Arlo Wire-Free Outdoor Siren with the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Arlo Wire-Free Outdoor Siren device card.
4. Tap .
5. Tap the name of your device to access the Device Info screen.
6. Tap **Restart** at the bottom of the screen.
7. Tap **Yes** to confirm.

To restart the Arlo Wire-Free Outdoor Siren using the device:

1. Remove the batteries from the Arlo Wire-Free Outdoor Siren.
2. Wait one minute and then reinstall the batteries.

To factory reset the Arlo Wire-Free Outdoor Siren using the device:

WARNING: Factory resetting your Arlo Wire-Free Outdoor Siren returns it to default settings. The Arlo Wire-Free Outdoor Siren is also removed from your Arlo account after a factory reset. You must follow the in-app setup process to use your Arlo Wire-Free Outdoor Siren after a factory reset.

1. Remove the back cover of the Arlo Wire-Free Outdoor Siren.

2. Quickly press the **SYNC** button five times.
 - You will hear an audible beep for each button press.
 - The LED indicator will flash amber five times to confirm the factory reset.
 - After the reset, the siren LED will slowly flash blue to indicate it is in pairing mode.

Note: After the factory reset, re-add the Arlo Wire-Free Outdoor Siren to your Arlo account.

To factory reset your Arlo Wire-Free Outdoor Siren with the Arlo Secure App:

WARNING: Factory resetting your Arlo Wire-Free Outdoor Siren returns it to default settings. The Arlo Wire-Free Outdoor Siren is also removed from your Arlo account after a factory reset. You must follow the in-app setup process to use your Arlo Wire-Free Outdoor Siren after a factory reset.

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Arlo Wire-Free Outdoor Siren device card.
4. Tap .
5. Tap the name of your device to access the Device Info screen.
6. Tap **Remove Device** at the bottom of the screen.
7. Tap **Yes** to confirm.

Note: After the factory reset, re-add the Arlo Wire-Free Outdoor Siren to your Arlo account.

Last Updated: 05/20/2024 | Article ID: 000063071

43

Battery / Charging

INTERNAL KB

Arlo Essential camera battery won't charge (INTERNAL)

Arlo Essential camera battery won't charge (INTERNAL)

This article applies to:

[VMC2020](#) [VMC2030](#) [VMC2032](#)

1. Check if the micro USB cable fits and is securely plugged in to the port of the camera. The camera LED should turn BLUE to indicate that the charger is connected.
2. Clean the USB connector. Wipe the metal contacts with a cloth. Dust and dirt may accumulate over time.
3. Try a different micro USB cable to charge the camera.
4. Try charging the device on a different outlet.
5. Use a different power adapter, preferably one that is rated 2A to charge the camera. .5A rating may take days to charge from 0 – 100.

Related external KB Articles:

- [How do I charge my Arlo Essential wire-free camera?](#)
- [How to troubleshoot Arlo Essential wire-free camera battery charging issues](#)

Last Updated:06/15/2022 | Article ID: 000062674

Arlo camera battery won't charge (INTERNAL)

Arlo camera battery won't charge (INTERNAL)

This article applies to:

[AVD2001](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#)
[VMC4030](#) [VML2030](#) [VML4030](#)

1. Check if the battery is installed correctly. Try removing the battery and re-insert.
2. Make sure that the magnetic power cable snaps when connecting to the camera's power input.
3. Clean the charging contacts with a cloth.
4. Try a different power adapter and cable to charge the camera.

Note: Use the Arlo specific power adapter to charge the battery of the following:

Arlo Pro: VMA4800

Arlo Go: VMA4900

5. Charge the camera on a different known working outlet.
6. Charge the battery on a different camera or try the charger on a different camera to isolate issue.
7. Remove the battery from the camera and connect the power adapter. Check if the camera is working without battery.
8. Process an RMA for the affected device or part.

Related external KB Articles:

- [How to troubleshoot Arlo Baby camera battery charging issues](#)
- [How to troubleshoot Arlo Essential wire-free camera battery charging issues](#)
- [My Arlo Pro or Arlo Pro 2 camera battery isn't charging; what do I do?](#)
- [My Arlo camera battery won't charge when using a magnetic charging cable](#)
- [How to troubleshoot Arlo Essential Wire-Free Video Doorbell battery charging issues](#)
- [My Arlo Pro or Arlo Pro 2 battery is dead; what do I do?](#)
- [What do I do if my Arlo Charging Station won't charge my Arlo Go or Arlo Pro batteries?](#)

Last Updated:06/15/2022 | Article ID: 000062671

How to troubleshoot Arlo camera rapid battery drain issues (INTERNAL)

How to troubleshoot Arlo camera rapid battery drain issues

(INTERNAL)

This article applies to:

[AVD2001](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#)
[VMC4030](#) [VMC2020](#) [VMC2030](#) [VMC2032](#) [VML2030](#) [VML4030](#) [VMC3030](#)

Follow the steps below if the Arlo camera is experiencing rapid battery drain:

1. Check **CS Diag Tool** and **Splunk**. Check for the following information:

- **PIREvents** – check how many PIREvents. If PIREvents are high, inform the customer *how many* they get in a day. Explain that the camera is very active and getting triggered frequently causing the battery to drain faster.
- **MotionStreamedTime** – check if stream time is high and if it corresponds with the PIR Events. Also confirm if this matches the library recordings. If all of these are high, then the customer's usage is causing the battery drain. If there's a mismatch between PIREvents and library recordings, check the Activity Zones setup on the device.

Note: How Activity Zones work - An activity zone focuses motion detection on a specific area within the camera's field of view. When the PIR is triggered, the camera starts to record. The recording is sent to the Smart server to determine if the motion is within the zone. If there is no relevant motion within the Activity Zone created, the video is discarded. If there's activity within the Activity Zone, the video is saved to the Library.

How Activity Zones can unexpectedly reduce battery life – If a camera is pointed at an area with a lot of motion, the camera will be triggered by PIR. The camera records video and sends it to the Smart servers, which uses battery life. If the relevant motion is not within the Activity Zone, it is discarded. This means the camera is working often and using battery, but generates few recordings. To resolve this, adjust the camera location or positioning to reduce PIR triggers.

- **Library Recording History** – if the library is full, check for Smart Notifications and the Rule setup to see if Push Notifications are disabled. The customer might be unaware that the camera is recording because there's no notification.
- If PIREvents are low, but MotionStreamedTime is high, check the recording length set in **Modes** and **Rules**. Is there cross-triggering? Adjust the motion sensitivity setting, video setting and recording length. And make sure that the camera is not pointed at moving objects, like flags, plants or water that can trigger motion.

2. Check the **camera location**. If the camera is pointed at busy streets or walkways, it will trigger a lot of motion. Vehicles can cause unwanted PIR triggers as cars generate a lot more heat than a human. Anything with large, hot objects can read further than the expected **23 feet (6.5 meters)** away.

3. **Verify distance** of the camera from the Base Station/SmartHub/Router. Check the signal strength and verify the router location. If the device is trying or attempting to connect because of poor signal, the battery may deplete. Try moving it closer if too far away. Make sure the camera and the Base Station/SmartHub/router or other devices are approximately **3 feet (1 meter)** apart or move it closer if too far away.

4. Check **Wi-Fi connection attempts** in **Splunk**. If the camera goes offline frequently, it will constantly wake up and attempt to connect to the Base Station/SmartHub or Wi-Fi. This can be caused by poor signal, interference from other devices, saturated Wi-Fi networks, or possible router/modem/WiFi.

5. Ensure that the camera is not installed near Wi-Fi streaming devices or other equipment that may cause interference. Make sure the devices are **3 feet (1 meter)** apart.

6. Make sure that the camera is not pointed at moving objects, like flags, plants or reflective surfaces like water, mirrors, or large windows that can trigger motion.

7. **Swap batteries** with a known working camera to rule out battery issues.

8. Try **swapping location** with a known working camera to isolate location issues.

9. **Check internet speed** by doing a speed test. Low upload bandwidth can cause the camera to take longer to send videos causing the camera to stay on longer.

Related external KB Articles:

- [How do I change my Arlo camera's power management settings?](#)
- [How can I extend Arlo camera battery life?](#)

Arlo Video Doorbell (AVD1001) Low Battery Message Troubleshooting (INTERNAL)

Arlo Video Doorbell (AVD1001) Low Battery Message Troubleshooting (INTERNAL)

This article applies to:

[AVD1001](#)

If the customer received any in-app message or email regarding low battery on their Video Doorbell (AVD1001), perform the following transformer checks:

1. Ask if there was any extended power outage and make sure the circuit breaker is ON.
2. Ask if there are multiple devices connected to same transformer as the Video Doorbell. If so, the transformer may require a possible upgrade.
3. Ask for the approximate age and condition of the transformer.
4. Ask the customer to check the wiring of the transformer and take a picture of it.
5. Ask the customer to check the voltage rating of the transformer.
6. Ask the customer to check the wiring behind the Video Doorbell.
7. Get a screenshot of the low battery message and attach it to the case.
8. If there is still an issue after checking the above steps, reach out to L3 for recommendations.

Collect Logs:

- If the Video Doorbell is connected to a Base Station/SmartHub, collect Base Station/SmartHub logs.
- If the Video Doorbell is connected to an Access Point/Router, collect system logs when the device is back online and attach them to the case.

Arlo camera is not charging using a Solar Panel (INTERNAL)

Arlo camera is not charging using a Solar Panel (INTERNAL)

This article applies to:

[AAD1001](#) [AL1101](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#)
[VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VML2030](#) [VML4030](#)
[ABC1000](#)

1. Confirm if the **solar panel is detected**. Check the app or the web app. If the solar panel is not detected, unplug the cable and re-insert. Make sure it snaps when connected.
2. Confirm that the solar panel used is **compatible** with the camera:

VMA5600/VMA5600B: Works with Go 2, Pro3, Pro4, Ultra, Ultra 2 and Floodlight

VMA3600/VMA3600B: Works with Essential, Essential Spotlight and Essential Spotlight XL

VMA4600: Works with Pro, Pro 2, Go and Arlo light

Note: The VMA3600 and VMA4600 **will only work** with the cameras listed. Though both use a MicroUSB, the plastic housing around the connectors will not fit.

3. Check **Charger Tech** and **Charging State** in **CS Diag Tool** if the solar panel is connected and charging.
4. Check the app or web if the **solar panel icon is present**.

5. Check the **location** of the solar panel. Make sure that it pointed towards the sun.

- Northern latitudes (US, Canada, Europe and Japan) - solar panel should be pointed South.
- Southern latitude (Australia, New Zealand, South America and South Africa) - solar panel should be pointed North.
- Near the equator - solar panel should be pointed up.

6. Weather conditions can also affect charging. If the day is overcast, the solar panel will not have enough sunlight to charge the camera.

- Charging of solar panel can also be affected by seasons changing – summer, winter, fall, autumn
- Latitude – customers living in the tropics experience longer days than those living in cold-mid latitude regions.

The temperature can also affect the camera, if the temperature of the camera or battery is freezing or too hot, the solar panel will not charge.

7. Ensure that the solar panel is mounted properly.
8. **Try cleaning the panel** with a damp cloth, remove debris and other dirt to the panel.
9. Confirm that the wires are intact. Check for exposed or damaged wires that can prevent the solar panel from charging.

Last Updated:09/25/2023 | Article ID: 000062672

Arlo Cellular and Battery Backup Issues (INTERNAL)

Arlo Cellular and Battery Backup Issues (INTERNAL)

This article applies to:

[SH1001](#) [LBB1001](#)


If the customer is having one of the following issues in the Arlo Cellular and Battery Backup device, follow these troubleshooting steps:

Battery Backup Not Detected

- Confirm the Battery Backup is installed and connected securely.
 - The Battery Backup attaches in only one orientation.
 - The customer should hear and feel a "click" when installed properly.
 - Ensure there are no gaps between the Battery Backup and the Keypad Sensor Hub.
- Make sure the Keypad Sensor Hub is online.
 - If the Keypad Sensor Hub is offline, visit: [Arlo Keypad Sensor Hub Offline \(INTERNAL\)](#)
- Check the **Battery Backup** status in **CS Diag** tool.
- Reset the power on the Keypad Sensor Hub and Cellular and Battery Backup.
 - Unplug the Keypad Sensor Hub power adapter.

- Release the hub by pressing the release button with a paper clip or pin.

WARNING: Do not try to press the motion sensor. It is **NOT** a button, and pressing may damage the sensor.

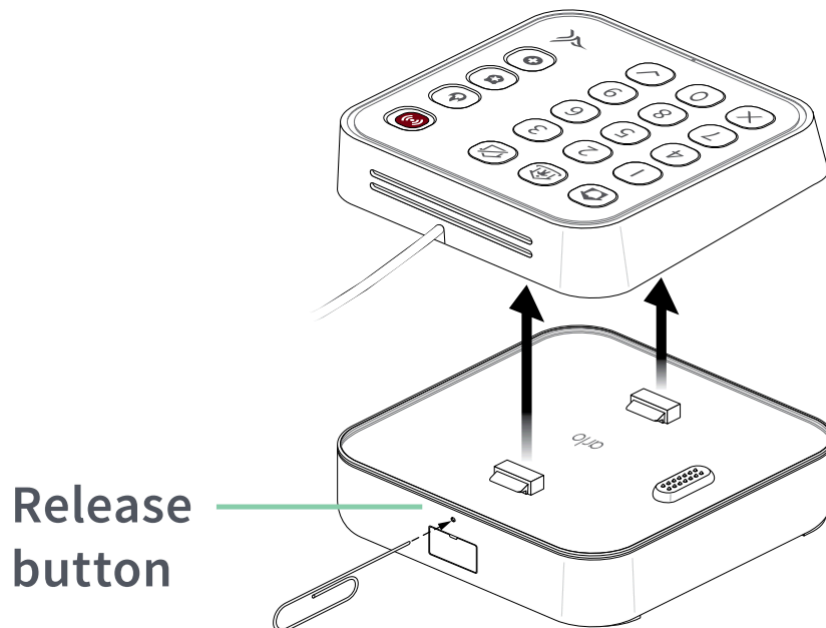

- Check for debris or dirt that has accumulated between the Arlo Keypad Sensor Hub and Battery Backup. Clean the contacts using a pencil eraser and make sure the contacts connect.
- Lift up the hub gently and re-attach.
- Reconnect the power adapter.

SIM not working

- Make sure the customer has either an Arlo Safe & Secure Pro plan at their location, or are on a Professional Monitoring trial (included with their Arlo Keypad Sensor Hub). This is required for the included SIM to work.
- Check LTE **Signal Strength** in the **CS Diag** tool.
 - If LTE Signal Strength is low, have the customer move the Keypad Sensor Hub to a different physical location in their home to improve the signal.
- Reset the power on the Keypad Sensor Hub and Cellular and Battery Backup.
 - See reset instructions above in **Battery Backup Not Detected**.
- Ask the customer if they removed the SIM card from the Cellular and Battery Backup, or replaced the SIM card with any other SIM card.
- Try to take the SIM out and re-insert. Make sure it is inserted properly.

- If the customer has replaced the SIM with their own (not recommended), they will need to configure the SIM with the APN information given to them by their mobile service provider. Refer to service provider for assistance.

Battery Backup not working

- Make sure the Battery Backup is charged. The Battery Backup should fully charge in 3 to 4 hours.
 - The Battery Backup arrives in-box with a partial charge to preserve battery life.
- Check the physical connection to the Arlo Keypad Sensor Hub. Have the customer confirm the Battery Backup is securely attached with no gaps between the Battery Backup and the Keypad Sensor Hub. If the Battery Backup is not securely connected, the battery will not charge.
- Check the **Battery Level** of the Battery Backup in the **CS Diag** tool. The Battery Backup has a 12-hour battery life. If the user's power outage goes beyond 12 hours, the Battery Backup may run out of power.
- Reset the power on the Keypad Sensor Hub and the Cellular and Battery Backup.
 - See reset instructions above in **Battery Backup Not Detected**.

Additional Details on Backup Operation:

- **When power is lost, the Battery Backup provides power to the Keypad Sensor Hub:**
 - The Keypad Sensor Hub will disconnect from Wi-Fi and use LTE only. The Keypad Sensor Hub will not search for Wi-Fi while on backup. This is to reduce power usage of the Cellular and Battery Backup.
 - Connected All-in-One Sensors will continue to operate normally while the Battery Backup is providing the Keypad Sensor Hub power.
 - SecureLink connected Arlo Pro 5S cameras will operate in a snapshot-only mode.
 - The Cellular and Battery Backup will stay powered for approximately 12 hours on a full charge.
- **When power returns:**

- The Keypad Sensor Hub will begin searching for Wi-Fi. The Keypad Sensor Hub will still use LTE until Wi-Fi is reconnected and can reach Arlo's backend servers.
- The Battery Backup will begin recharging automatically. A full charge from a fully depleted battery will take around 3 to 4 hours.
- SecureLink connected Arlo Pro 5S cameras will continue to operate in snapshot-only mode until Wi-Fi is reconnected and can reach Arlo's backend servers.
- **If the Wi-Fi signal is lost, but the power stays on:**
 - The Keypad Sensor Hub will begin communicating with the Cellular and Battery Backup for an LTE signal when the Keypad Sensor Hub is unable to communicate with Arlo's backend servers.
 - The Keypad Sensor Hub will begin searching for Wi-Fi to return.
 - SecureLink connected Arlo Pro 5S cameras will begin to operate in snapshot-only mode until Wi-Fi is reconnected.
 - When the devices are again able to reach Arlo's backend servers, the system returns to normal operation.
- **If power is lost and LTE signal is lost, such as a broad power outage or emergency**
 - or - **the customer does not have an active Arlo Safe & Secure Pro plan or Professional Monitoring trial:**
 - The Battery Backup powers the Keypad Sensor Hub.
 - The Keypad Sensor Hub will search periodically for the LTE signal to return.
 - Arlo Home Security System will continue to operate local functions, such as:
 - Alert tones for an open or closed door, window, or garage door.
 - Light and siren in response to Panic Button.
 - Light and siren in response to configured triggers from the All-in-One Sensor.

If these steps do not work, please consult L2.

How to troubleshoot Arlo Base Station or SmartHub power issues (INTERNAL)

How to troubleshoot Arlo Base Station or SmartHub power issues (INTERNAL)

This article applies to:

[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#)

Use the following steps to troubleshoot issues with Base Station/SmartHub power:

1. Ensure the customer is using the **correct AC adapter**.
2. Make sure the AC adapter is securely plugged into the **Base Station/SmartHub** and the **electrical wall outlet**.
3. Ensure the ON/OFF button is in the **ON** position (VMB3000 and VMB4000).
4. Try plugging the device into a **different electrical outlet** to confirm the outlet is working.
5. Try using a **different AC power adapter** with the same specifications (if available) to confirm the power adapter is operational.
6. If the above steps do not work and the product is within warranty, process an **RMA** for the **AC adapter**.

EXTERNAL KB

HOW TO

How long do Arlo camera batteries last?

How long do Arlo camera batteries last?

This article applies to:

[AVD4001](#) [AVD3001](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#)
[VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2030](#) [VMC2032](#) [VMC3050](#) [VMC2050](#) [VMC3052](#)
[VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#)

The following Arlo camera battery life expectations are based on average use and depend on settings and environment. Average use assumes that you are using the **Optimized** or **Best Battery Life** Power Management settings and that your cameras record less than three minutes per day. Increasing the length, quality, or quantity of video recordings decreases your battery life.

- For more information, visit: [How do I change my Arlo camera Power Management settings? - Arlo Secure 4.0](#)

Approximate Arlo Camera Battery Life:

Arlo Essential Outdoor 2K (2nd Generation)

- 4 months with average use

Arlo Essential XL Outdoor 2K (2nd Generation)

- 16 months with average use

Arlo Essential Outdoor HD (2nd Generation)

- 4 months with average use

Arlo Essential XL Outdoor HD (2nd Generation)

- 16 months with average use

Arlo Video Doorbell 2K (2nd Generation)

- 4 months with average use

Arlo Video Doorbell HD (2nd Generation)

- 4 months with average use

Arlo Pro 5S

- 8 months with average use
- 12 months when connected with Arlo SecureLink
- For more information, visit: [What is Low Power Mode and how does it work with my Arlo Pro 5S Camera?](#)

Arlo Pro 4

- 6 months with average use

Arlo Ultra

- 5 months with average use

Arlo Go 2

- 6 months with average use
- Battery life when using cellular signal can vary depending on mobile signal strength

Arlo Pro 3 Floodlight

- 6 months with average use

Arlo Pro 3

- 6 months with average use

Arlo Essential

- 6 months with average use

Arlo Essential Spotlight

- 6 months with average use

Arlo Essential Spotlight XL

- 12 months with average use

Arlo Pro 2

- 5 months with average use

Arlo Pro

- 5 months with average use

Arlo Go

- 3 months with average use
- Battery life varies depending on mobile signal strength

Arlo Wire-Free (VMC3030)

- 4 months with average use

The following factors can reduce battery life:

- Cold temperatures below 32°F (0°C)
- Low-light environments that require camera sensors to work harder
- Weak connection to the Arlo SmartHub, Arlo Base Station, or Wi-Fi router
 - Weak connections are caused by distance, Wi-Fi interference, or solid object obstructions between the camera and Arlo SmartHub, Arlo Base Station, or Wi-Fi router
- Frequent use of the camera spotlight or floodlight
 - Applicable to camera models that have a built-in floodlight or spotlight feature
- Long video recordings
- Low cellular signal strength (Arlo Go and Arlo Go 2 only)

For more information, visit: [How can I extend Arlo camera battery life?](#)

Last Updated:09/12/2024 | Article ID: 1202753

How can I extend Arlo camera battery life?

How can I extend Arlo camera battery life?

This article applies to:

The battery life of your Arlo camera varies depending on usage. The most common cause of battery drain is excessive usage. The best way to improve battery life is to reduce unwanted videos. Use the following tips to help reduce battery drain and maximize Arlo camera battery life.

Arlo Settings and Configuration

Configure your camera to record shorter videos.

- Battery-powered cameras are not intended for continuous recording.
- For more information, visit: [How do I adjust Arlo video recording length? - Arlo Secure 4.0](#)

Use the Optimized or Best Battery Life Power Management setting.

- The Best Battery Life setting reduces video quality but improves battery life.
- The Optimized setting balances battery life and video quality.
- For more information, visit: [How do I change my Arlo camera Power Management settings? - Arlo Secure 4.0](#)

Set a schedule to activate and deactivate cameras automatically.

- Schedules help to manage battery life by keeping cameras active only when desired.
- For more information, visit: [How do I add a Schedule Automation to my Arlo system?](#)

Decrease Motion Sensitivity to improve battery life.

- Excessive motion detection will drain your battery quickly.
- For more information, visit: [How do I change the motion sensitivity on my Arlo camera? - Arlo Secure 4.0](#)

Adjust the light settings for Spotlight cameras and Floodlights.

- Increased light duration and brightness can reduce battery life.
- For more information, visit:
 - [How do I activate the spotlight on my Arlo camera? - Arlo Secure 4.0?](#)
 - [How do I adjust the light settings on my Arlo Pro 3 Floodlight Camera? - Arlo Secure 4.0](#)

Ensure your Arlo camera is running the latest firmware.

- It is important to have the most current firmware installed for your Arlo camera for optimal operation.
- Firmware updates are typically automatic.
 - If your firmware has not been updated, you can complete the process manually.
 - For more information, visit: [How do I update my Arlo firmware manually? - Arlo Secure 4.0](#)

Low Power Mode.

- Some Arlo cameras use Low Power Mode, which allows your Arlo device to extend its battery life.
- For more information, visit: [What is Low Power Mode and how does it work with my Arlo Camera?](#)

Camera Positioning and Placement

Only point your camera at areas of interest.

- Arlo motion detection turns on when the camera senses motion.
- For example, if your camera faces a busy street, motion detection activates each time a car passes by.
 - This can drain the battery prematurely.
 - Adjust your field of view away from busy streets or active areas, focusing only on what is important.
 - For more information, visit: [Arlo Camera Placement Tips](#)

Position your camera within range of your Wi-Fi router, Arlo SmartHub, or Arlo Base Station.

- If your camera is too far away from your Wi-Fi router, Arlo SmartHub, or Arlo Base Station, you will have poor signal strength, which can drain your camera battery more quickly.
- For more information, visit: [Arlo Camera Placement Tips](#)

Do not place your Arlo camera too close to Wi-Fi routers, Arlo SmartHubs, Arlo Base Stations, or other Arlo devices.

- Avoid placing cameras too close to other Wi-Fi devices to avoid interference, which can reduce battery life.
- Make sure your camera is at least 3 feet (1 meter) away from your Wi-Fi router, Arlo SmartHub, or Arlo Base Station, and at least 6.5 feet (2 meters) away from other Arlo devices.

Place your camera in an area that gets enough light.

- Dark environments will cause infrared sensors to work harder, which will reduce your Arlo camera battery life.

If possible, keep the camera in a location with temperatures above 32°F (0°C).

- For your safety and to avoid permanent damage to the batteries, Arlo camera batteries do not charge at temperatures below freezing, even if your camera is plugged in.
- For more information, visit: [How do I keep my Arlo batteries charged in cold weather?](#)

Batteries, Charging Cables, Solar Panels, Arlo SmartHubs, and Arlo Base Stations

If your Arlo camera uses rechargeable batteries, only use the rechargeable batteries that came with your camera, and only use replacement batteries from Arlo.

- For more information, visit: [What type of batteries does my Arlo camera use?](#)

Use the Arlo XL Rechargeable Battery & Housing to increase battery life for Arlo Ultra, Arlo Ultra 2, Arlo Pro 3, Arlo Pro 4, and Arlo Pro 5S cameras.

- For more information, visit: [VMA5410 XL Rechargeable Battery and Housing](#)

Add a compatible Arlo Solar Panel to your camera to help keep the battery charged.

- For more information, visit: [Arlo Solar Panel Compatibility](#)

Use outdoor charging cables to keep the battery charged.

- For more information, visit:

- [Arlo Outdoor Magnetic Charging Cable for Arlo Ultra, Ultra 2, Pro 3, Pro 4, Pro 5S, Go 2, and Pro 3 Floodlight](#)
- [Arlo Essential Outdoor Charging Cable for Arlo Essential, Essential Spotlight, and Essential XL Spotlight](#)
- [Arlo Outdoor Power Adapter for Arlo Pro, Arlo Pro 2, and Arlo Go](#)

If your Arlo device is connected directly to Wi-Fi, try connecting it to an Arlo SmartHub or Arlo Base Station to improve battery life.

- For more information, visit:
 - [Arlo SmartHub and Base Station Compatibility](#)
 - [How do I connect my Arlo Camera or Video Doorbell to an Arlo SmartHub or Base Station?](#)

Arlo Go and Arlo Go 2 Mobile Cameras

Position your Arlo Go or Go 2 camera in a location with at least three bars of LTE signal strength.

- Weak signal strength (two bars or less) will drain the camera battery.
- For more information, visit: [How can I optimize mobile connectivity for my Arlo Go camera?](#)

For Arlo Go 2 cameras connected via Wi-Fi and LTE, position the camera within range of your Wi-Fi router to avoid battery drain from frequent network switching.

- For more information, visit:
 - [How do I control whether my Go 2 Camera connects to Mobile or Wi-Fi?](#)
 - [What are the benefits of connecting my Go 2 Camera via mobile or Wi-Fi?](#)

Last Updated:04/22/2024 | Article ID: 291

How do I insert the rechargeable battery into my Arlo Security Light?

How do I insert the rechargeable battery into my Arlo Security Light?

Before you insert the rechargeable battery for the first time, we recommend that you follow the instructions in your Arlo app to set up your Arlo Security Light system.

To insert the rechargeable battery:

1. Unlock the battery compartment cover by pressing and releasing the back of your Arlo Security Light.
2. Align the battery contacts.
3. Insert the battery all the way into the battery compartment.



4. Place the battery compartment cover back on your Arlo Security Light. You might need to hold the battery in place while you close the cover.

What are average battery life and data usage for an Arlo Go camera?

What are average battery life and data usage for an Arlo Go camera?

This article applies to:

[VML4030](#)

Arlo Go camera batteries last approximately three months with average use, depending on mobile signal strength. Average data usage is 850MB per month and it typically ranges between 750MB up to 2GB.

Average use assumes that you are using **Optimized** or **Best Battery Life** video settings and that your cameras record for approximately five minutes per day, and signal strength is at 1-2 bars. Increasing the length or quantity of video recordings in your camera's modes and rules decreases your battery life.

The following factors can also reduce battery life:

- Temperatures below 32°F (0°C)
- Low-light environments that require infrared sensors to work harder
- Low LTE signal strength as the camera spends much time attempting to reconnect to the network.
- Frequent motion triggering
- Longer video recordings

For more information, visit:

- [How can I extend Arlo camera battery life?](#)
- [How do I change my Arlo camera's power management settings?](#)

Last Updated:05/13/2024 | Article ID: 000062753

What type of battery does my Arlo camera use?

What type of battery does my Arlo camera use?

This article applies to:

For proper operation, use the battery that was included with your Arlo device.

To purchase spare or replacement batteries, visit: [Arlo Accessories](#)

Arlo Ultra, Arlo Ultra 2, Arlo Pro 3, Arlo Pro 4, and Arlo Pro 5S

Arlo Ultra, Arlo Ultra 2, Arlo Pro 3, Arlo Pro 4, and Arlo Pro 5S cameras use a 3.85V 4800mAh 18.48Wh rechargeable lithium polymer battery.

To purchase spare or replacement batteries, visit: [VMA5400 Rechargeable Battery](#)

These cameras are also compatible with the Arlo XL Rechargeable Battery & Housing. For more information, visit: [VMA5410 XL Rechargeable Battery and Housing](#)

To change the battery, visit: [How do I change the battery in my Arlo Ultra, Arlo Ultra 2, Arlo Pro 3, Arlo Pro 4, or Arlo Pro 5S camera?](#)

Arlo Essential Outdoor Camera (2nd Generation), Arlo Essential XL Outdoor Camera (2nd Generation), and Arlo Video Doorbell

The Arlo Essential Outdoor Camera HD (2nd Generation) and Arlo Essential Outdoor Camera 2K (2nd Generation) use a 3.69V 4650mAh rechargeable lithium-ion battery.

The Arlo Essential XL Outdoor Camera HD (2nd Generation) and Essential XL Outdoor Camera 2K (2nd Generation) use a 3.69V 18600mAh rechargeable lithium-ion battery.

The Arlo Video Doorbell HD (2nd Generation) and Arlo Video Doorbell 2K (2nd Generation) use a 3.69V 4730mAh rechargeable lithium-ion battery.

The battery is rechargeable but not removable. For more information, visit: [How do I charge my Arlo Essential Outdoor Series Camera \(2nd Generation\)?](#)

Arlo Essential Camera, Arlo Essential Spotlight Camera, and Arlo Essential XL Spotlight Camera

The Arlo Essential Camera (VMC2020) and Arlo Essential Spotlight Camera (VMC2030) use a 3.63V 5080mAh 18.44Wh rechargeable lithium polymer battery.

The Arlo Essential XL Spotlight Camera (VMC2032) uses an extended length version of the same battery type that lasts longer before needing to be recharged.

The battery is rechargeable but not removable. For more information, visit: [How do I charge my Arlo Essential wire-free camera?](#)

Arlo Pro 3 Floodlight

The Arlo Pro 3 Floodlight (FB1001) uses a 3.63V 13000mAh 47.19Wh rechargeable lithium polymer battery.

For more information, visit:

- [How do I change the battery in my Arlo Pro 3 Floodlight Camera?](#)
- [How do I charge my Arlo Pro 3 Floodlight Camera?](#)

Arlo Go 2

The Arlo Go 2 camera (VML2030) uses a 3.63V 13000mAh 47.19Wh rechargeable lithium polymer battery.

For more information, visit: [How do I insert the battery in my Arlo Go 2 camera?](#)

Arlo Essential Video Doorbell Wire-Free

Arlo Essential Video Doorbell Wire-Free (AVD2001) uses a 3.63V 6500mAh 23.59Wh rechargeable lithium polymer battery.

To purchase spare or replacement batteries, visit: [Wire-Free Video Doorbell Rechargeable Battery \(VMA2400\)](#)

The battery must be removed from the Arlo Video Doorbell and charged indoors. For more information, visit: [How do I charge my Arlo Essential Video Doorbell Wire-Free?](#)

Arlo Pro and Arlo Pro 2

Arlo Pro and Arlo Pro 2 cameras use a 7.2V 2440mAh 17.57Wh rechargeable lithium ion battery.

Arlo Go

The Arlo Go camera uses a 7.2V 3660mAh 26.35Wh rechargeable lithium ion battery.

The Arlo Go battery has a higher capacity than the Arlo Pro and Arlo Pro 2 camera battery. Arlo Go and Arlo Pro/Pro 2 batteries are not interchangeable. Do not attempt to power an Arlo Pro or Arlo Pro 2 camera with an Arlo Go battery. Do not attempt to power an Arlo Go camera with an Arlo Pro battery.

To purchase spare or replacement batteries, visit: [Arlo Go Rechargeable Battery \(VMA4410\)](#)

Arlo Wire-Free

The Arlo Wire-Free camera (VMC3030) uses four CR123 lithium 3-volt photo batteries. Replacement batteries are available at third party retailers that specialize in battery sales.

Arlo has partnered with Tenenergy to offer rechargeable CR123 batteries that are compatible with Arlo Wire-Free cameras. Tenenergy batteries and chargers are available directly from [Tenenergy](#) or from other third party retailers. If you choose to buy Tenenergy rechargeable RCR123A batteries, make sure you purchase batteries that are marked: [Works with Arlo](#).

For more information, visit:

- [How do I charge my Arlo Ultra 2, Ultra, Pro 5S, Pro 4, Pro 3, or Go 2 camera with the magnetic charger?](#)
- [Safe Handling and Usage Guidelines for Arlo Rechargeable Batteries](#)
- [Safety Rules for Arlo Non-Rechargeable Batteries](#)
- [Arlo Solar Panel Compatibility](#)

Last Updated:04/26/2024 | Article ID: 290

What do the Arlo camera battery level icons and notifications mean?

What do the Arlo camera battery level icons and notifications mean?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2030](#) [VMC2032](#) [VMC3050](#) [VMC2050](#)
[VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#)

You will receive a low battery notification when Arlo camera battery charge drops to 15%.

Temperature variations can affect the accuracy of the displayed camera battery level in the Arlo Secure App. Battery levels are most accurate between 65-75°F (18-24°C).

Camera battery level is less accurate when frequently streaming the camera or operating it in cold or hot weather conditions.

- For more information, visit: [How do I keep my Arlo batteries charged in cold weather?](#)

To view your Arlo camera battery level:

1. Launch the Arlo Secure App.
2. Tap **Devices**.

The Arlo camera battery level displays on the bottom of the device card. Battery level is also displayed on the Device Settings screen.

Note: If your Arlo camera is offline, the battery icon is hidden.

The following represents the remaining battery level based on the battery icon shown in the Arlo Secure App:

76%-100% 

51%-75% 

 26%-50%



1%-25%



0%

If your battery-powered camera is plugged in, the following icons display instead:

Battery Icon	Meaning
	Battery Full (Plugged in)
	Battery Charging (Plugged in)
	Battery Not Charging (Plugged in but not charging due to temporary condition, such as low light on solar panel or temperatures too cold for charging)

If the charging disabled icon  is displayed, the battery is too hot or too cold to charge safely. Batteries cannot charge safely in temperatures below 32°F (0°C) or above 113°F (45°C). Arlo cameras can still function in temperatures below freezing, but charging is disabled for safety reasons. Bring your camera indoors and allow it to reach a safe temperature before attempting to charge again.

The charging disabled icon can also mean an incompatible charging cable is connected to your Arlo camera. You must use the power adapter and charging cable that came with your Arlo camera.

Note: Video Doorbells that are hardwired will not show a charging icon. Trickle charging starts when the battery level is less than 65% and stops at 80%.

If an Arlo Solar Panel is used, the following icons display:

Solar Icon	Battery Icon	Meaning
		Battery Fully Charged (It is possible that these icons will only display for a few minutes and then revert to gray)
		Battery Charging
 		Battery Not Charging (If the battery is too cold or too hot, the battery will not charge)
No Icon		Battery or Charger Status Unavailable

If the Arlo Solar Panel is not keeping your Arlo camera charged, visit: [How to troubleshoot Arlo Solar Panel charging issues](#)

How do I charge my Arlo Ultra 2, Ultra, Pro 5S, Pro 4, Pro 3, or Go 2 camera with the magnetic charger?

How do I charge my Arlo Ultra 2, Ultra, Pro 5S, Pro 4, Pro 3, or Go 2 camera with the magnetic charger?

This article applies to:

[VMC5040](#) [VMC4040P](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VML2030](#)

The magnetic charging cable provides easy snap on charging with the ability to charge your camera while recording.

Note: The magnetic charging cable (VMC5000C) that was included with your camera is for **indoor use only**. If you wish to charge your camera outside, you must use the [Outdoor Magnetic Charging Cable \(VMC5600C\)](#).

The magnetic charging cable also works with the [XL Rechargeable Battery and Housing](#).

Simply align the metal contacts and allow the magnets to snap into place. When you attach the magnetic charging cable to your Arlo camera, make sure it is free from dirt and debris to ensure a safe and secure connection.





For more information on Arlo battery charging, visit:

- [How do I charge my Arlo Pro 3 Floodlight Camera?](#)
- [My Arlo camera battery won't charge when using a magnetic charging cable](#)
- [What power adapter can I use to charge my Arlo Pro or Arlo Go batteries?](#)
- [My Arlo Pro or Arlo Pro 2 battery is dead; what do I do?](#)
- [My Arlo Pro or Arlo Pro 2 camera battery isn't charging; what do I do?](#)
- [How do I charge the Arlo Essential Camera, Arlo Essential Spotlight Camera, or Arlo Essential XL Spotlight Camera?](#)
- [How to troubleshoot Arlo Essential wire-free camera battery charging issues](#)

Last Updated:05/17/2024 | Article ID: 000062136

How long should I charge my Arlo camera?

How long should I charge my Arlo camera?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2030](#) [VMC2032](#) [VMC3050](#) [VMC2050](#)
[VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#)

To charge your Arlo camera, use the included USB cable. Alternatively, you can use the [Arlo Dual Charging Station](#) (sold separately), which can recharge two batteries simultaneously.

Battery charging may take a few hours or more, depending on the quality of charger used, and size of the battery. Charge the battery until full. Look for the solid blue light to indicate full charge, or verify in the Arlo Secure App.

Note: The battery in wire-free/outdoor Arlo Essential cameras and Arlo Video Doorbell (2nd Generation) cannot be removed.

The USB charging cable that came in the box with your camera is for **indoor use only**. You must dismount your camera and bring it indoors to charge it with the included charging cable. Connect the charging cable to a 5V, 2A power adapter to properly charge the camera.

Arlo Essential XL Cameras (2nd Generation) need longer charging time, up to 4x that of the regular Essential Camera (2nd Generation) batteries.

Arlo XL Batteries will need a longer charging time, up to 2.5x that of regular batteries.

Arlo Pro, Arlo Pro 2, and Arlo Go cameras must use the charger that came with the product. For more information, visit: [My Arlo Pro or Pro 2 camera battery isn't charging; what do I do?](#)

For more information, visit:

- [How can I extend Arlo camera battery life?](#)
- [How do I charge my Arlo Essential wire-free camera?](#)
- [What do the different LED behaviors on my Arlo camera mean?](#)
- [How do I change my Arlo camera Power Management settings?](#)
- [How do I change the battery in my Arlo Ultra, Arlo Ultra 2, Arlo Pro 3, Arlo Pro 4, or Arlo Pro 5S camera?](#)

Last Updated:04/26/2024 | Article ID: 000062751

How do I keep my Arlo batteries charged in cold weather?

How do I keep my Arlo batteries charged in cold weather?

This article applies to:

Arlo camera batteries might report low power in cold weather due to slower internal chemical reactions at low air temperatures.

Arlo Ultra series cameras, Arlo Pro series cameras, Arlo Go series cameras, Arlo Essential wire-free cameras, and the Arlo Essential Video Doorbell Wire-Free all have a minimum operating temperature of **-4°F** (-20°C).

The original Arlo Wire-Free Camera (VMC3030) has a minimum operating temperature of **14°F** (-10°C).

The Arlo Solar Panel has a minimum operating temperature of **32°F** (0°C).

Note: For your safety and to avoid permanent damage, Arlo batteries do not charge at temperatures below freezing, even if your camera is plugged into AC power or using an Arlo Solar Panel.

Follow these tips to keep your batteries charged in cold weather:

- If your camera stops charging because the battery is too cold, bring the camera to a location where the temperature is above freezing and plug it in.
 - Your camera resumes charging as soon as the battery reaches a safe temperature.
- If your cameras are in a location that routinely experiences temperatures below freezing, you might need to bring your cameras inside to charge more frequently than in warmer months.
 - You can also use an [Arlo Charging Station](#) or [Arlo Dual Charging Station](#) to keep spare batteries charged for your Arlo Ultra series, Arlo Pro series, or Arlo Go series cameras.

- The [Arlo Solar Panel](#) might not be able to keep your camera fully charged on days that are cloudy, rainy, or otherwise don't provide enough solar energy.
 - The Arlo Solar Panel might be unable to keep your camera charged during periods of heavy use.
 - The total energy that an Arlo Solar Panel can produce depends on external factors such as temperature, shade, weather, and the amount of dust or debris on its surface.
 - If the Arlo Solar Panel is not keeping your battery charged, clean off any accumulated dust or debris and ensure it is receiving enough sunlight.

If your camera battery level drops suddenly in cold weather:

1. Return the camera to room temperature and power cycle the camera by removing and reinstalling the batteries without the camera plugged in.
After the camera is back online, check if the battery capacity notification is restored to normal.
2. If your camera is still reporting low battery in cold weather, place your camera in a warmer location to see if the problem is duplicated in that setting.
3. If you still have problems with your battery power, visit [Arlo Support](#) to speak with an expert.

For more information about the Arlo Solar Panel, visit:

- [How do I position the Arlo Solar Panel to get the most sunlight?](#)
- [Arlo Solar Panel Compatibility](#)

For more information about battery icons, battery notifications, and battery life, visit:

- [What do the Arlo camera battery level icons and notifications mean?](#)
- [How can I extend Arlo camera battery life?](#)

For more information about Arlo Wire-Free Camera (VMC3030) batteries, visit:

- [What do I need to know about Arlo Wire-Free Camera \(VMC3030\) batteries?](#)
- [Safety Rules for Arlo Non-Rechargeable Batteries](#)

How do I charge my Arlo Essential wire-free camera?

How do I charge the Arlo Essential Camera, Arlo Essential Spotlight Camera, or Arlo Essential XL Spotlight Camera?

This article applies to:

[VMC2020](#) [VMC2030](#) [VMC2032](#)

To charge the Arlo Essential Camera, Arlo Essential Spotlight Camera, or Arlo Essential XL Spotlight Camera indoors, use the included USB charging cable.

Note: The battery in the Arlo Essential Camera, Arlo Essential Spotlight Camera, and Arlo Essential XL Spotlight Camera cannot be removed.

Go to the Settings page for your Arlo camera to view the battery percentage:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select the camera.
4. Tap .

The battery percentage is displayed.

To charge the camera outdoors, use one of the following accessories:

- [VMA3600 Essential Solar Panel](#)
- [VMA3700 Essential Outdoor Charging Cable](#)

USB Charging

The USB charging cable that came in the box with your camera is for **indoor use only**. You must dismount your camera and bring it indoors to charge it with the included charging cable. Connect the charging cable to a 5V, 2A power adapter. Power adapters less than 2A will take longer to properly charge the camera.

To charge the camera with the included indoor USB charging cable:

1. Remove your camera from the mount.
Note: You do not need to unscrew the mount from the wall. You only need to unscrew the camera from the mount.
2. Bring the camera indoors.
3. Pull the flap at the bottom of the camera to reveal the USB charging port.
4. Plug the USB charging cable into the camera.



Note: The included charging cable is **not meant for outdoor use**. To use your camera outdoors while it charges, you must use the **VMA3700 Essential Outdoor Charging Cable** or **VMA3600 Essential Solar Panel**.

- The [VMA3700 Essential Outdoor Charging Cable](#) is weather-resistant and can continuously charge your camera battery when connected to an outlet.

Solar Panel Charging

- The [VMA3600 Essential Solar Panel](#) keeps your battery charged with direct sunlight.
- The weather resistant design, 8-foot power cable, and adjustable mount makes installation easy anywhere.



Last Updated:06/06/2024 | Article ID: 000062402

What is Low Power Mode and how does it work with my Arlo cameras?

What is Low Power Mode and how does it work with my Arlo cameras?

This article applies to:

[AVD4001](#) [AVD3001](#) [VMC4060P](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

Lower Power Mode is a feature that allows your Arlo device to extend its battery life. Instead of video recording, your device will take snapshots when Low Power Mode is activated. When the camera enters Low Power Mode, you will receive a push notification about this status and the Feed will also have an event indicating when Low Power Mode is activated. Snapshots will be available in the Feed.

The following Arlo devices have Low Power Mode capability:

- Arlo Essential Outdoor Camera HD (2nd Generation)
- Arlo Essential Outdoor Camera 2K (2nd Generation)
- Arlo Essential XL Outdoor Camera HD (2nd Generation)
- Arlo Essential XL Outdoor Camera 2K (2nd Generation)
- Arlo Video Doorbell HD (2nd Generation)
- Arlo Video Doorbell 2K (2nd Generation)
- Arlo Pro 5S Camera

What happens when Low Power Mode is enabled?

- When motion is detected and the camera is triggered to record, it will take a snapshot of the motion.
- You will receive a push notification with the snapshot. The snapshot will also be saved in your Feed.
- If motion continues after the snapshot is received, your camera will take additional snapshots. The camera will wait at least ten seconds between snapshots.
- You can still view your camera live stream by tapping on the push notification or from within the Arlo Secure App.
- SecureLink capable cameras: If your Arlo camera is connected to an Arlo Home Security System with SecureLink, the SecureLink capable camera will only communicate using the SecureLink connection, to save additional power.

Activate Low Power Mode

Low Power Mode can be activated automatically, when your camera battery reaches a specific level, or can be activated manually in the Power Management settings. When activated

automatically, Low Power Mode will turn off when the battery recharges to 10% above your set Low Power Mode Threshold.

To enable Automatic Low Power Mode:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Arlo device card.
4. Tap .
5. Tap **Power Management**.
6. Tap the **Auto Low Power Mode** switch to turn the feature on.
7. Move the slider left or right to increase or decrease the **Low Power Mode Threshold**.

- Your camera will automatically switch to Low Power Mode when the battery drops below the desired threshold to extend the camera battery life.
- When the battery recharges 10% above your set threshold, the camera will automatically switch back into its set Power Mode.
- When you disable the Auto Low Power Mode, the threshold slider will disappear.

To manually enable Low Power Mode:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Tap the Arlo device card.
4. Tap .
5. Tap **Power Management**.
6. Tap **Low Power Mode**.
7. Tap **Confirm**.

Note: When Low Power Mode is enabled manually, you will need to select a different Power Mode to return to normal video recording.

Last Updated:05/01/2024 | Article ID: 000062833

How do I change my Arlo camera Power Management settings?

How do I change my Arlo camera Power Management settings?

This article applies to:

[AVD2001](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4030](#)
[VMC2020](#) [VMC2030](#) [VMC2032](#) [VML2030](#) [VML4030](#) [VMC3030](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, please visit: [How do I change my Arlo camera Power Management settings? - Arlo Secure 4.0](#)*

Arlo wire-free cameras allow you to choose power management settings to optimize battery life and video quality.

The following factors can reduce battery life:

- Frequent use of the camera's floodlight or spotlight
- **Note:** For applicable models that have a built-in floodlight or spotlight feature.
- Extremely cold temperatures (below 32°F or 0°C)
- Low lighting
- Frequent motion detection or audio triggering
- Longer video recordings
- Weak connection to a SmartHub, Base Station, or router
- Low cellular signal strength (Arlo Go and Go 2 only)

To change your Power Management settings:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click the **Settings** icon under the camera for which you want to change the power management settings.
3. Tap or click **Video Settings**.
4. Tap or click **Power Management**.
5. Select a power setting:

- To extend your battery life, select **Best Battery Life**. This setting reduces video quality but improves battery life.
- For the best video quality, select **Best Video**. This setting reduces battery life but provides the best video quality.
- To balance battery life and video quality, select **Optimized**.

For more information about battery life, visit: [How can I extend Arlo camera battery life?](#)

For more information about video quality, visit: [How do I get better picture quality from my Arlo camera?](#)

For more information and to purchase accessories for your device, visit: [Arlo Accessories](#)

Last Updated:05/01/2024 | Article ID: 1110197

How do I change my Arlo camera Power Management settings? - Arlo Secure 4.0

How do I change my Arlo camera Power Management settings? - Arlo Secure 4.0

This article applies to:

[VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#)
[VMC2020](#) [VMC2030](#) [VMC2032](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VMC3030](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How do I change my Arlo camera Power Management settings?](#)*

Arlo Wire-Free cameras allow you to choose Power Management settings to optimize battery life and video quality.

The following factors can reduce battery life:

- Frequent use of the camera spotlight or floodlight (For applicable models that have a built-in floodlight or spotlight feature)
- Weak connection to an Arlo SmartHub, Base Station, or router
- Extremely cold temperatures (below 32°F or 0°C)
- Low cellular signal strength (Arlo Go series only)
- Frequent motion detection or audio triggering
- Longer video recordings
- Low lighting

To change Arlo camera Power Management settings:

1. Launch the Arlo Secure App.
2. Tap **Devices**.
3. Select a wire-free camera.
4. Tap .
5. Tap **Power Management**.
6. Select **Best Video**, **Optimized**, **Best Battery Life**, or **Low Power Mode**:
 - **Best Video**. May reduce battery life but provides the best video quality.
 - **Optimized**. Balances video quality and battery life.
 - **Best Battery Life**. May reduce video quality but provides the best battery life.
 - **Low Power Mode**. Extends battery life by taking snapshots instead of video (available on some Arlo cameras).

For more information, visit:

- [How can I extend Arlo camera battery life?](#)
- [How do I get better picture quality from my Arlo camera?](#)
- [What is Low Power Mode and how does it work with my Arlo cameras?](#)

Last Updated:05/01/2024 | Article ID: 000062887

How do I replace Arlo Audio Doorbell batteries?

How do I replace Arlo Audio Doorbell batteries?

This article applies to:

- The Arlo Audio Doorbell requires the use of two AA batteries.


To replace Arlo Audio Doorbell batteries:

1. Loosen the screw on the bottom of the battery cover.



2. Detach the Arlo Audio Doorbell from the battery cover.

3. Remove the old batteries and insert two new AA batteries with the + and - in the correct positions.

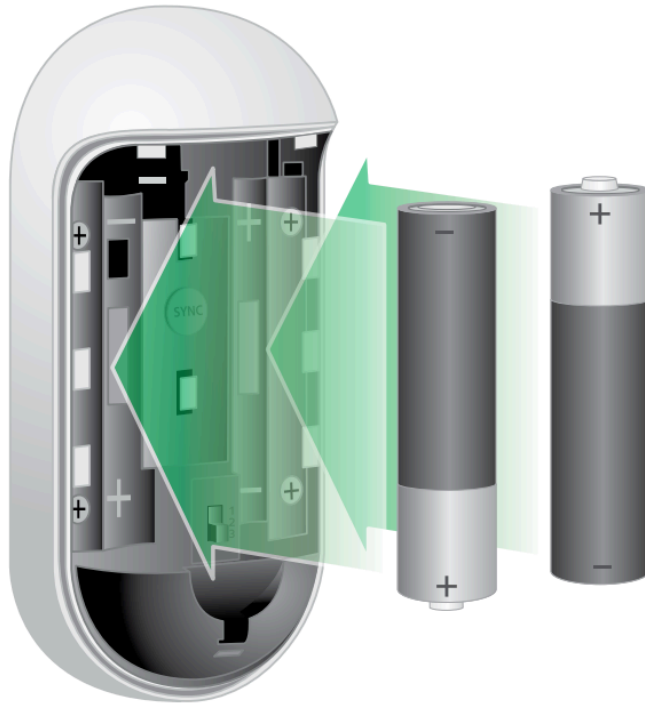

4. Attach the Arlo Audio Doorbell to the battery cover.



5. Tighten the screw on the bottom of the battery cover.

What do I do when I receive a Low Battery Alert on my Arlo device?

What do I do when I receive a Low Battery Alert on my Arlo device?

This article applies to:

Arlo sends a Low Battery Alert in the Arlo Secure App and a notification to your email address to notify you that the battery in your device has depleted. Depending on the device, you may need to recharge your device, recharge your battery, or replace the battery.

Select your device:

- [Arlo Ultra, Ultra 2, Pro 5S, Pro 4, & Pro 3](#)
- [Arlo Essential Outdoor & XL Outdoor \(2nd Generation\)](#)
- [Arlo Essential Camera, Essential Spotlight Camera, & Essential XL Spotlight Camera](#)
- [Arlo Video Doorbell \(2nd Generation\)](#)
- [Arlo Essential Video Doorbell Wire-Free](#)
- [Arlo Pro 3 Floodlight](#)
- [Arlo Go 2](#)
- [Arlo All-in-One Sensor](#)
- [Arlo Wire-Free Outdoor Siren](#)
- [Arlo Pro 2 & Pro](#)
- [Arlo Audio Doorbell](#)
- [Arlo Go](#)
- [Arlo Baby](#)
- [Arlo Wire-Free](#)

Arlo Ultra, Arlo Ultra 2, Arlo Pro 5S, Arlo Pro 4, & Arlo Pro 3

Battery Type: Rechargeable 3.85V, 4800mAh, 18.5Wh Lithium Polymer Battery

[Charging Instructions](#)

[Replacement Battery](#)

Note: Arlo Ultra, Arlo Ultra 2, Arlo Pro 5S, Arlo Pro 4, and Arlo Pro 3 cameras are also compatible with the [Arlo XL Rechargeable Battery & Housing](#).

Arlo Essential Outdoor Camera (2nd Generation) & Arlo Essential XL Outdoor Camera (2nd Generation)

The Arlo Essential Outdoor Camera (2nd Generation) 2K and HD models use a 3.69V 4650mAh rechargeable lithium-ion battery.

The Arlo Essential XL Outdoor Camera (2nd Generation) 2K and HD models use a 3.69V 18600mAh rechargeable lithium-ion battery.

The batteries in the Arlo Essential Outdoor and Arlo Essential XL Outdoor Cameras are rechargeable, but not replaceable.

[Charging Instructions](#)

Arlo Essential Camera, Arlo Essential Spotlight Camera, & Arlo Essential XL Spotlight Camera

The Arlo Essential Camera (VMC2020) and Arlo Essential Spotlight Camera (VMC2030) use a 3.63V 5080mAh 18.44Wh rechargeable lithium polymer battery.

The Arlo Essential XL Spotlight Camera (VMC2032) uses an extended length version of the same battery type that lasts longer before needing to be recharged.

The batteries in the Arlo Essential Camera, Arlo Essential Spotlight Camera, and Arlo Essential XL Spotlight Camera are rechargeable, but not replaceable.

[Charging Instructions](#)

Arlo Video Doorbell (2nd Generation)

Battery Type: 3.69V 4730mAh Rechargeable Lithium-ion Battery

The batteries in the Arlo Video Doorbell (2nd Generation) 2K and HD models are rechargeable, but not replaceable.

[Charging Instructions](#)

Arlo Essential Video Doorbell Wire-Free

Arlo Essential Video Doorbell Wire-Free (AVD2001) uses a 3.63V 6500mAh 23.59Wh rechargeable lithium polymer battery.

[Charging Instructions](#)

[Replacement Battery](#)

Arlo Pro 3 Floodlight

Battery Type: Rechargeable 3.63V 13000mAh 47.19Wh Lithium Polymer Battery

[Charging Instructions](#)

[Replacement Battery](#)

Arlo Go 2

Battery Type: Rechargeable 3.63V 13000mAh 47.19Wh Lithium Polymer Battery

[Charging Instructions](#)

[Replacement Battery](#)

Arlo All-in-One Sensor

The Arlo All-in-One Sensor uses a replaceable coin cell CR2477 lithium battery. Arlo recommends using non-rechargeable batteries from high quality manufacturers such as Panasonic®, Energizer®, or Duracell®.

[Battery Replacement Instructions](#)

Arlo Wire-Free Outdoor Siren

The Arlo Wire-Free Outdoor Siren uses two replaceable CR123A batteries. Arlo recommends using non-rechargeable batteries from high quality manufacturers such as Panasonic®, Energizer®, or Duracell®.

[Battery Replacement Instructions](#)

Arlo Pro 2 & Arlo Pro

Arlo Pro and Arlo Pro 2 cameras use a 7.2V 2440mAh 17.57Wh rechargeable lithium-ion battery.

[Charging Instructions](#)

Arlo Go

Battery Type: 7.2V 3660mAh 26.35Wh Rechargeable Lithium-ion Battery

[Charging Instructions](#)

[Replacement Battery](#)

Arlo Baby

The Arlo Baby Camera uses rechargeable Lithium-ion batteries. The batteries are not replaceable.

[Charging Instructions](#)

Arlo Audio Doorbell

The Arlo Audio Doorbell uses two AA batteries. Arlo recommends using non-rechargeable batteries from high quality manufacturers such as Panasonic®, Energizer®, or Duracell®.

[Battery Replacement Instructions](#)

Arlo Wire-Free Camera (VMC3030)

The Arlo Wire-Free Camera (VMC3030) uses four CR123A batteries. Arlo recommends using non-rechargeable batteries from high quality manufacturers such as Panasonic®, Energizer®, or Duracell®. Arlo has partnered with Tenergy to offer rechargeable CR123 batteries that are compatible with Arlo Wire-Free Cameras. Tenergy batteries and chargers are available directly from [Tenergy](#) or from other third party retailers. If you choose to buy Tenergy rechargeable RCR123A batteries, make sure you purchase batteries that are marked: [Works with Arlo](#).

[Battery Replacement Instructions](#)

Last Updated:05/10/2024 | Article ID: 000063281

Why is my Arlo Pro 3 Floodlight Camera not working while it is charging?

Why is my Arlo Pro 3 Floodlight Camera not working while it is charging?

This article applies to:

[FB1001](#)

The camera and light are inactive on the Arlo Pro 3 Floodlight Camera while using the [USB Charging Cable](#) or [Indoor Magnetic Charging Cable](#).

To use the floodlight, record audio, and record video **while the Arlo Pro 3 Floodlight Camera is charging**, you must use the [Outdoor Magnetic Charging Cable](#) or [Arlo Solar Panel](#).

For more information, visit: [How do I charge my Arlo Pro 3 Floodlight Camera?](#)

Last Updated:03/21/2024 | Article ID: 000062385

How do I charge my Arlo Pro 3 Floodlight Camera?

How do I charge my Arlo Pro 3 Floodlight Camera?


This article applies to:

[FB1001](#)

The Arlo Pro 3 Floodlight Camera has a **USB charging port** on the camera and a **magnetic charging port** on the camera housing.

- This enables you to charge your camera indoors or outdoors without having to unscrew or disassemble any mounting components.

USB Charging

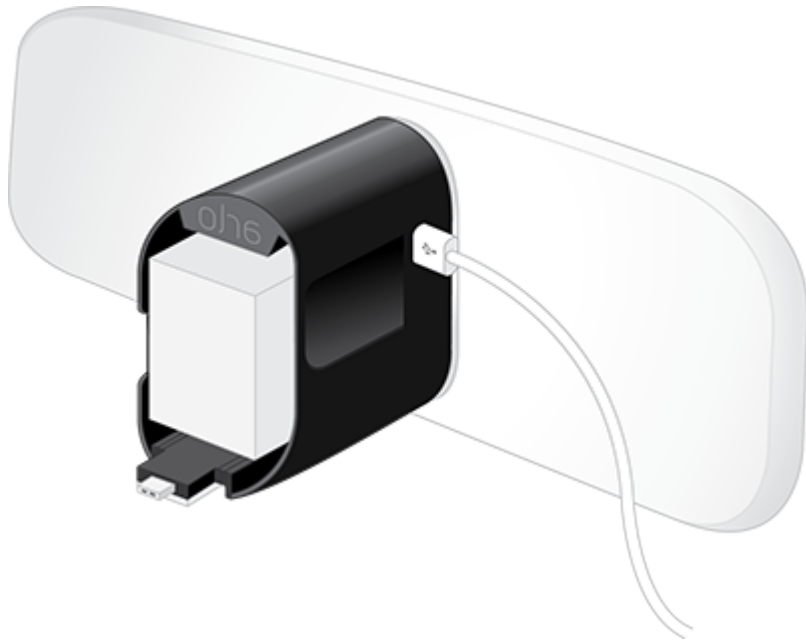

The USB charging cable enables you to charge your camera without removing or disassembling any mounting components. This charging cable came in the box with your Arlo Pro 3 Floodlight Camera.

To charge your camera with the included USB charger:

1. Press the button on the charging port underneath the camera housing.
A clicking sound occurs, and the camera slides partially out of the camera housing.
2. Pull the camera until it is entirely removed from the camera housing.
3. Bring the camera indoors.
4. Plug the USB charger into the camera.

Note: When you charge your Arlo camera with the USB charging cable, the camera and light do not work. This is because the USB charging cable is meant for indoor charging only.

- To use your camera while it charges, you must use an outdoor magnetic charging cable or Arlo Solar Panel (both sold separately).

Outdoor Magnetic Charging



The [Outdoor Magnetic Charging Cable](#) is sold separately. Connecting this cable provides continuous power while your Arlo Pro 3 Floodlight Camera is mounted outdoors. This means your camera and floodlight continue to operate during charging.

Continuous power also unlocks these features in the Arlo Pro 3 Floodlight Camera:

- The maximum brightness on your floodlight increases from 2000 to 3000 lumens (lm).
 - **Note:** A battery must be inserted into the camera for the maximum brightness to increase.
- If your Arlo Pro 3 Floodlight Camera is connected to an Arlo SmartHub or Arlo Base Station, you can enable continuous video recording (CVR).
 - For more information, visit: [What is Continuous Video Recording \(CVR\) and how do I use it?](#)

To charge your camera with the Outdoor Magnetic Charging Cable:

1. Make sure that your camera is free of debris to ensure a safe and secure connection.
2. Connect the outdoor magnetic charging cable to your camera and plug it into an electrical outlet.

- Your Arlo Pro 3 Floodlight Camera charges automatically as long as AC power is provided.

Indoor Magnetic Charging

You can also use the [Indoor Magnetic Charging Cable](#) to charge your camera indoors using the magnetic charging port.

- To charge your camera indoors with an indoor magnetic charging cable, you must remove your Arlo Pro 3 Floodlight Camera completely from the wall.
- For more information, visit: [How do I completely remove my Arlo Pro 3 Floodlight Camera from the wall?](#)

Solar Panel Charging



You can use the [Arlo Solar Panel](#) to connect your Arlo Pro 3 Floodlight Camera to continuous power.

- The solar panel uses direct sunlight to keep your battery charged.
- The solar panel is weather resistant, comes with an 8-foot magnetic power cable, and an adjustable mount.

Note: The maximum brightness of your floodlight does not increase when your Arlo Pro 3 Floodlight Camera is connected to an Arlo Solar Panel.

TROUBLESHOOTING

How to fix the Arlo Camera AC Power Disconnected Error Message

How to fix the Arlo Camera AC Power Disconnected Error Message

This article applies to:

[VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#)

Some Arlo wire-free cameras are capable of using Activity Zones when you are not subscribed to Arlo Secure. To do so, the camera **must be connected to AC power** using either an Indoor or Outdoor Charging Cable. The Arlo Pro 3 Floodlight Camera must use the [Outdoor Magnetic Charging Cable](#).

The **AC Power Disconnected** error message will appear under the following circumstances:

- Your Arlo Secure trial or subscription ended and Activity Zones were enabled on your wire-free camera while the camera was on battery power
- You did not have an Arlo Secure trial or subscription and your camera lost AC power while Activity Zones were enabled on your wire-free camera

Note: Activity Zones are processed by the Arlo servers when you are subscribed an Arlo Secure plan.

- If you are not subscribed to Arlo Secure plan, your camera processes Activity Zones and requires AC power to do so.

To fix the AC Power Disconnected error message:

- Ensure you are subscribed to an Arlo Secure plan
- If you do not have an Arlo Secure subscription, make sure that the AC power stays connected to the camera

- Delete the Activity Zones from the camera
 - For more information, visit: [How to delete Arlo Activity Zones](#)

If you are subscribed to an Arlo Secure plan and still see the *AC Power Disconnected* error message:

Ensure your camera is still under a subscription plan.

For the Arlo Secure experience with **Feed**:

1. Log in to your account at my.arlo.com.
2. Click **Secure**.
3. Select **My Arlo Account** to manage your subscriptions.

For the Arlo Secure experience with **Library**:

1. Log in to your account at my.arlo.com.
2. Click **Settings**.
3. Click **Arlo Secure** to manage your subscriptions.

Reset the camera power.

1. Remove the batteries from the camera for 30 seconds.
2. Reinstall the batteries and wait for the camera to power back on.

Log out of the Arlo Secure App.

1. Tap **Log Out**.
2. Log back in with your **email address** and **password**.

Force close the Arlo Secure App.

- For iPhone, visit:
 - [Quit and reopen an app on iPhone](#)
- For Android (varies by device):
 - For Samsung, tap **III** and swipe up on the Arlo Secure App
 - For Google, visit: [Find, open & close apps on Android](#)

Log in to the Arlo Secure App using a different device.

- Use a different smartphone or a tablet to log in to the Arlo Secure App
- Log in to my.arlo.com on a web browser

If you are still having issues, visit: [Arlo Support](#)

Last Updated:06/10/2024 | Article ID: 000063033

How to troubleshoot Arlo Baby camera battery charging issues

How to troubleshoot Arlo Baby camera battery charging issues

This article applies to:

[ABC1000](#)

Arlo Baby is intended for use as an AC-powered camera but includes a built-in rechargeable battery that can be used for short periods of time.

Warning: Keep the USB cable and power adapter out of the reach of children. For more details, visit [Safety Instructions for Arlo Baby](#)

If you are having problems charging the Arlo Baby battery:

Make sure you are properly charging the camera.

- If the battery is not charging, try plugging the AC power adapter into a different power outlet.
- For more information, visit [How do I charge my Arlo Baby camera?](#)

Use the USB charging cable and AC power adapter that came in the box with your Arlo Baby camera.


- **Warning:** Other power adapters and power adapter cables are not compatible with Arlo Baby and can cause permanent damage to your camera.
- For more information, visit: [What USB cable and power adapter can I use with my Arlo Baby camera?](#)

Check the charging cable connection between the camera and power adapter to make sure it fits securely into each port.

- Make sure the metal contacts of the USB charging cable and camera are free from dirt and debris to ensure a secure connection.
- The camera LED will flash blue for three seconds when the charging cable is properly connected.
 - For more information, visit: [What do the different LED behaviors on my Arlo camera mean?](#)
- A battery charging icon will also display for your camera in the Arlo Secure App.
 - For more information, visit: [What do the Arlo Baby status icons mean?](#)

To avoid draining the battery, turn the battery switch off.

- For more information, visit: [How do I turn Arlo Baby on or off?](#)
- **Note:** The battery is turned off when the green color is not visible near the battery switch.

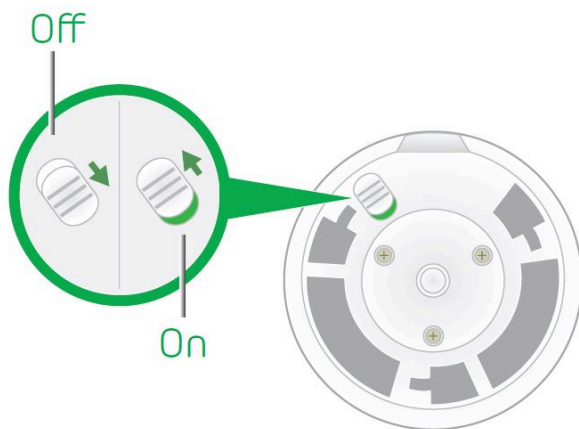

Last Updated:06/22/2024 | Article ID: 000062699

How to troubleshoot Arlo Essential wire-free camera battery charging issues

How to troubleshoot Arlo Essential wire-free camera battery charging issues

This article applies to:

[VMC2020](#) [VMC2030](#) [VMC2032](#)

If you are having problems charging the battery for the Arlo Essential Camera, Arlo Essential Spotlight Camera, or Arlo Essential XL Spotlight Camera, try the following:

1. Ensure you are using the micro USB charging cable that was included in the box with your camera.

Note: The micro USB charging cable that came with your camera is for **indoor use only**.

Warning: If the charging cable is damaged, do not use the cable to charge the camera.

2. Ensure you are using the correct type of AC power adapter.

Note: The AC power adapter should have an output of at least 1.0A. Using a power adapter rated lower than 1.0A is not sufficient enough to properly charge the camera in a timely manner. The preferred AC power adapter should have an output of 5.0V and 2.0A.

3. Check the charging cable connection between the camera and power adapter to make sure it fits securely into each port.

Note: The camera LED will flash blue for three seconds when the charging cable is properly connected. A battery charging icon will also display for your camera in the Arlo app. For more details, see [What do my Arlo camera's battery level icons and notifications mean?](#)

4. If the camera is not charging, try plugging the AC power adapter into a different power outlet.

5. If the camera is still not charging, try using a different micro USB cable from another Arlo camera.
6. If the above steps do not resolve the issue, ensure the metal contacts of the USB charging cable are free from dirt and debris to ensure a secure connection.

For more information, see the following:

- [How do I charge my Arlo Essential wire-free camera?](#)
- [How to troubleshoot Arlo Solar Panel charging issues](#)

Last Updated:05/01/2024 | Article ID: 000062697

My Arlo camera battery won't charge when using a magnetic charging cable

My Arlo camera battery will not charge when using a magnetic charging cable

This article applies to:

[VMC5040](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VML2030](#)

This article covers troubleshooting for cameras that use the 8-ft. Indoor Magnetic Charging Cable (VMA5000C and VMA5001C) and the 25-ft. Outdoor Magnetic Charging Cable (VMA5600C and VMA5601C).

- The charging cable that was included with your camera is for **Indoor Use Only**
- If you wish to charge your camera outside, you must use the weather-resistant outdoor cable

Note: Magnetic charging cables are also compatible with the Arlo XL Rechargeable Battery & Housing. For more information, visit: [Arlo XL Rechargeable Battery & Housing](#)

- If the magnetic charging cable is damaged, do not use the cable to charge the camera
- Replacement charging cables can be purchased on [Arlo.com](https://www.arlo.com)

If you are having problems charging an Arlo Pro 3, Arlo Pro 3 Floodlight, Arlo Pro 4, Arlo Pro 5S, Arlo Ultra, Arlo Ultra 2, or Arlo Go 2 battery with a magnetic charging cable:

1. Remove and reinstall the battery and charger to ensure a proper connection with the metal contacts of the camera. Make sure that the charger and magnetic contacts of the camera are clean to ensure a connection.

Note: The camera LED will flash blue for three seconds when the charging cable is properly connected. A battery charging icon will also display for your camera in the Arlo Secure App. For more details, visit: [What do the Arlo camera battery level icons and notifications mean?](#)

2. Use at least a 5V/2.0A adapter with the Indoor Magnetic Charging Cable.

Note: The Arlo Pro 3 Floodlight operates in a reduced mode when connected to the Indoor Magnetic Charging Cable.

For more information, visit: [Why is my Arlo Pro 3 Floodlight Camera not working while it is charging?](#)

3. Try plugging the AC power adapter into a different power outlet.
4. Try using a different magnetic charging cable from another Arlo camera.
5. Try swapping batteries with a known working Arlo camera of the same model.

For more information, visit:

- [How do I change the battery in my Arlo Ultra, Arlo Ultra 2, Arlo Pro 3, Arlo Pro 4, or Arlo Pro 5S camera?](#)
- [How do I charge my Arlo Ultra 2, Ultra, Pro 5S, Pro 4, Pro 3, or Go 2 camera with the magnetic charger?](#)
- [How do I change the battery in my Arlo Pro 3 Floodlight Camera?](#)
- [How to troubleshoot Arlo Solar Panel charging issues](#)
- [How do I insert the battery in my Arlo Go 2 camera?](#)
- [How do I charge my Arlo Pro 3 Floodlight Camera?](#)
- [How can I extend Arlo camera battery life?](#)

Arlo displays the message “Camera needs new batteries” after I replaced my batteries; what do I do?

Arlo displays the message “Camera needs new batteries” after I replaced my batteries; what do I do?

This article applies to:

The Arlo Secure App may take a moment to update after replacing your Arlo Wire-Free Camera (VMC3030) batteries. If you get the **Camera needs new batteries** error message after replacing the batteries, give the Arlo Secure App up to three minutes to refresh the battery status.

If you still get the “Camera needs new batteries” error message:

Try replacing your Arlo Wire-Free Camera (VMC3030) batteries with another fresh set of batteries.

Try logging out of the Arlo Secure App and then log in again. To log out:

For the Arlo Secure App experience with **Feed**:

1. Tap .
2. Tap your Name at the top of the Settings screen.
3. Tap **Log out** at the bottom of the Account Profile screen.

For the Arlo Secure App experience with **Library**:

1. Tap **Settings**.
2. Tap **Profile**.

3. Tap **Log Out**.

If you still see the **Camera needs new batteries** error message after logging out and logging back in, contact [Arlo Support](#).

Last Updated:05/10/2024 | Article ID: 1179527

Solar Panel / Charger

Arlo Solar Panel Compatibility

Arlo Solar Panel Compatibility

This article applies to:

[AL1101](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#)
[VMC4030](#) [VMC2020](#) [VMC2030](#) [VMC2032](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#)
[VML4030](#)

With the Arlo Solar Panel connected to the camera and receiving average sun exposure, your camera battery stays charged, so you don't need to worry about recharging it. The solar panel is a great low-maintenance solution for outdoor camera installations in hard-to-reach areas.

Although the Arlo Solar Panel is designed to keep your Arlo camera's battery fully charged, heavy usage of your camera can drain the camera battery faster than the solar panel can recharge it. The 2-watt Arlo Solar Panel is designed to provide year-round trickle charging to keep your Arlo camera battery charged, not to charge your camera battery from low to full.

VMA6600 Essential Solar Panel (2nd Generation)

The VMA6600 Essential Solar Panel (2nd Generation) works with the following cameras:

- Essential Outdoor Camera 2K (2nd Generation) VMC3050
- Essential XL Outdoor Camera 2K (2nd Generation) VMC3052
- Essential Outdoor Camera HD (2nd Generation) VMC2050
- Essential XL Outdoor Camera HD (2nd Generation) VMC2052

The VMA6600 Essential Solar Panel uses a USB-C connector.

VMA5600 Solar Panel



The VMA5600 Solar Panel works with the following cameras:

- Arlo Ultra 2 VMC5040
- Arlo Ultra VMC5040
- Arlo Pro 5S VMC4060P
- Arlo Pro 4 VMC4041P & VMC4050P
- Arlo Pro 3 VMC4040P
- Arlo Go 2 VML2030
- Arlo Pro 3 Floodlight Camera FB1001

The VMA5600 Solar Panel uses a magnetic charging connector.

The VMA5600 Solar Panel also works with the [Arlo XL Housing](#) and XL versions of these cameras.

For more information, visit: [VMA5600 features and specifications](#)

VMA4600 Solar Panel



The VMA4600 Solar Panel works with the following products:

- Arlo Pro 2 VMC4030P
- Arlo Pro VMC4030
- Arlo Go VML4030
- Arlo Security Light AL1101

The VMA4600 Solar Panel uses a Micro-USB connector.

WARNING: The VMA4600 Solar Panel is not compatible with Arlo Essential series cameras.

For more information, visit: [VMA4600 features and specifications](#)

VMA3600 Solar Panel



The VMA3600 Solar Panel works with the following cameras:

- Arlo Essential Camera VMC2020
- Arlo Essential Spotlight Camera VMC2030
- Arlo Essential XL Spotlight Camera VMC2032

The VMA3600 Solar Panel uses a Micro-USB connector.

WARNING: The VMA3600 Solar Panel is not compatible with Arlo Pro series cameras, Arlo Go cameras, or Arlo Security Lights.

For more information, visit: [VMA3600 features and specifications](#)

Last Updated:05/20/2024 | Article ID: 1319889

How do I position the Arlo Solar Panel to get the most sunlight?

How do I position the Arlo Solar Panel to get the most sunlight?

This article applies to:

The amount of energy that the Arlo Solar Panel can produce depends on several factors: average sun exposure, weather conditions, tilt angle, and dust or debris. A solar panel in the same location might produce a different amount of energy at noon in December than at noon in June.

Similarly, the same panel might produce more energy in one geographic location and less in another. In both situations, the difference is based mainly on the amount of sunlight that the solar panel receives. To see a world map of average sun exposure, visit:

<http://globalsolaratlas.info/?m=sg:dni>

To optimize the effectiveness of your solar panel, do the following:

- Choose a location for your solar panel that gets plenty of sunlight; try to avoid spots that are in the shade for a significant portion of the day.
- Mount your solar panel facing true south (in the northern hemisphere) or true north (in the southern hemisphere) and tilt it to the appropriate angle for your latitude.
- Wipe the panel every few months to remove dust or debris that might affect the solar energy-harvesting efficiency of the panel.

For more information about the Arlo Solar Panel, see the following knowledge base articles:

- [How do I install and mount my Arlo Solar Panel?](#)
- [Arlo Solar Panel Compatibility](#)

To purchase the Arlo Solar Panel, visit: [Arlo Accessories](#)

Last Updated:05/01/2024 | Article ID: 1310968

How do I install and mount my Arlo Solar Panel?

How do I install and mount my Arlo Solar Panel?

This article applies to:

There are four Arlo Solar Panels designed to work with Arlo cameras. To know which Arlo Solar Panel is compatible with your camera, visit: [Arlo Solar Panel Compatibility](#)


You can use Arlo Solar Panels in any outdoor location that falls within the solar panel's operating temperature range of 32° to 113°F (0° to 45°C). For safety reasons, the Arlo Solar Panel cannot charge your camera battery at temperatures below freezing.

To set up your Arlo Solar Panel:


1. Choose a good outdoor location for your Arlo Solar Panel, within 4.5 feet (1.3 meters) of your Arlo camera.

The Arlo Solar Panel can absorb the most solar energy when it is in full sunlight for as much of the day as possible. You can mount the Arlo Solar Panel on your wall, fence, roof, gutter, or eaves. Make sure that you mount your Arlo Solar Panel facing true south (in the northern hemisphere) or true north (in the southern hemisphere).

2. Secure the mount with the screws provided in the package.

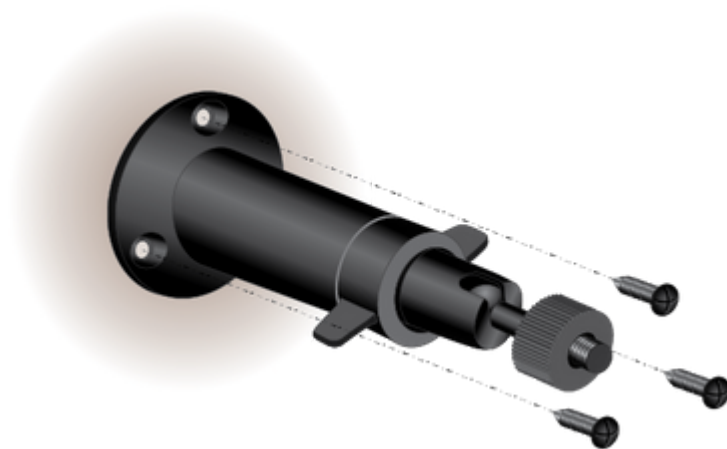

3. Attach your Arlo Solar Panel to the mount.
4. Adjust the angle of the Arlo Solar Panel on the mount to the appropriate angle for your latitude.

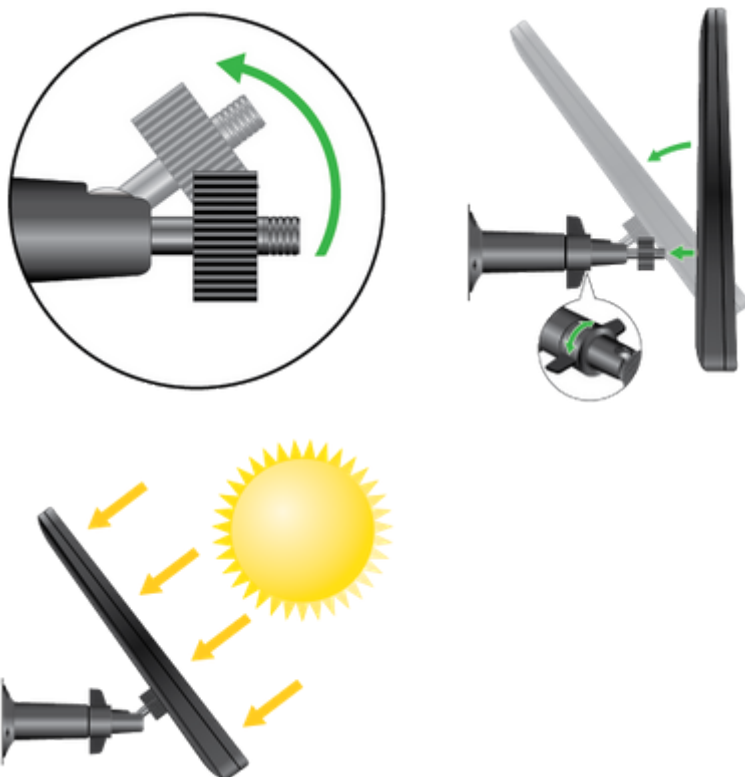

5. Make sure that your Arlo camera battery is fully charged.

Note: Your Arlo Solar Panel is designed to keep your camera battery charged, not to charge the battery from low to full.

6. Connect the Arlo Solar Panel cable to your Arlo camera.



WARNING: Do not unplug the cable from your Arlo Solar Panel. This can damage the cable and the Arlo Solar Panel.

Note: The charging icon will not immediately appear in the Arlo Secure App. If you want to confirm that your camera is charging, you can wait for the charging icon to appear, or you can

check the camera's battery percentage in the Arlo Secure App from day to day. For more information on battery charging icons, visit: [What do my Arlo camera's battery level icons and notifications mean?](#)

For more information about the Arlo Solar Panel, visit:

- [How do I position the Arlo Solar Panel to get the most sunlight?](#)
- [How to troubleshoot Arlo Solar Panel charging issues](#)

Last Updated:05/07/2024 | Article ID: 1310992

How to troubleshoot Arlo Solar Panel charging issues

How to troubleshoot Arlo Solar Panel charging issues

This article applies to:

If the Arlo Solar Panel is not keeping your Arlo camera charged, follow the troubleshooting steps below.

- **Note:** Charge your Arlo camera before using it with the Arlo Solar Panel.
The Arlo Solar Panel is meant to keep your camera charged, not to charge it from low to full battery.
Ensure your Arlo camera is [compatible with the Arlo Solar Panel](#).

To troubleshoot Arlo Solar Panel charging:

1. Check the solar icons in the Arlo Secure App to determine the charging state.

If an Arlo Solar Panel is used, the following icons display:

- **Solar Icon:** A green icon of a sun with rays.
- **Battery Icon:** A green icon of a battery with a lightning bolt.

- **Meaning:** Battery Fully Charged

Note: It is possible that these icons will only display for a few minutes and then revert to gray.



- **Solar Icon:**



- **Battery Icon:**
- **Meaning:** Battery Charging



- **Solar Icons:**



- **Battery Icons:**
- **Meaning:** Battery Not Charging
- Note:** If the battery is too cold or too hot, it will not charge.

-
- **Solar Icon:** No Icon



- **Battery Icon:**
- **Meaning:** Battery or Charger Status Unavailable

2. Unplug the Arlo Solar Panel cable from your camera.

Check the condition of the Arlo Solar Panel cable to confirm there are no exposed or damaged wires.

Reconnect the Arlo Solar Panel cable to your camera.

3. Ensure your Arlo Solar Panel is pointed toward the sun and is not obstructed by trees, buildings, etc.

For more information, visit: [How do I position the Arlo Solar Panel to get the most sunlight?](#)

4. Check the outside air temperature and verify your Arlo camera is not used below 32°F (0° C) or above 113°F (45° C).

The Arlo Solar Panel will not charge your Arlo camera battery in temperatures below 32°F (0° C) or above 113°F (45° C).

5. Ensure the Arlo camera battery is fully inserted and that you are charging it with the Arlo Solar Panel.

The Arlo Solar Panel charges the battery, but it cannot power the camera if the battery is not installed.

6. Make sure your camera battery is fully charged when you connect the Arlo Solar Panel to your camera.

The Arlo Solar Panel is designed to provide trickle charging to keep your camera battery charged, not to charge your camera battery from low to full.

7. Reduce your camera usage for a day or two and note your camera battery level. Heavy usage of your camera can drain the camera battery faster than the Arlo Solar Panel can recharge it, especially with poor sun exposure.
8. Remove dirt and debris from the surface of the Arlo Solar Panel.

Last Updated:05/28/2024 | Article ID: 000045870

HSS

How do I install a new SIM card into my Arlo Cellular and Battery Backup?

How do I install a new SIM card into my Arlo Cellular and Battery Backup?

This article applies to:

[SH1001](#) [LBB1001](#)

The Arlo Cellular and Battery Backup includes a **pre-installed SIM card** that will automatically provide a cellular connection for your Arlo Home Security System during an internet outage.


The cellular service feature of the Arlo Cellular and Battery Backup requires an [Arlo Premium Plan](#) after the trial period expires.

- **Note:** The Arlo Cellular and Battery Backup includes a pre-installed SIM card. If installing a new SIM card is necessary or you received a **No SIM Inserted** error message, follow the instructions below.

To install a new SIM card into the Arlo Cellular and Battery Backup:

1. Remove the Arlo Cellular and Battery Backup from the Arlo Keypad Sensor Hub by using a paper clip or pin to press the **release button**.

2. Gently grasp the sides of the Arlo Keypad Sensor Hub and pull it upwards to separate the devices.

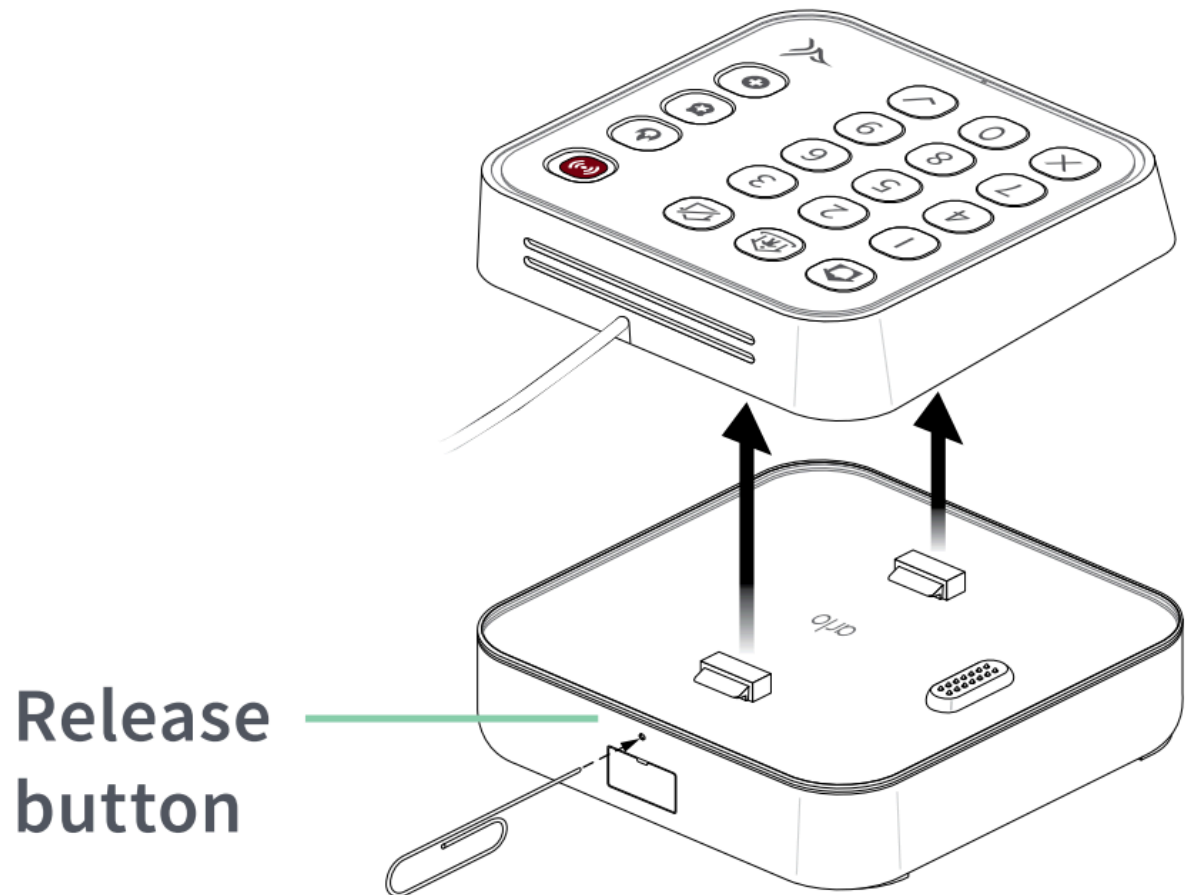

3. Open the **SIM card door** (located below the release button) using a paper clip or pin.
4. Press the **SIM card** in to release it from the locked position.
5. Gently grasp the side of the **SIM card** and pull it out of the Arlo Cellular and Battery Backup.
6. Insert the **new SIM card** with the integrated circuit facing up.
7. Push the **SIM card** all the way into the Arlo Cellular and Battery Backup until you hear an audible click.

Note: Ensure the SIM card is locked into place and sits flush with the exterior of the Arlo Cellular and Battery Backup.

8. Close the **SIM card door**.
9. Attach the Arlo Cellular and Battery Backup device to the Arlo Keypad Sensor Hub.

For more information, visit: [How do I set up the Arlo Cellular and Battery Backup?](#)

Note: Make sure the Arlo Keypad Sensor Hub is set up in the Arlo Secure App before installing the Arlo Cellular and Battery Backup. For more information, visit: [How do I set up and install my Arlo Keypad Sensor Hub?](#)

10. After installing a new SIM card, you may need to reconfigure the cellular settings. For more information, visit: [How do I configure the SIM settings in my Arlo Cellular and Battery Backup?](#)

If you received a *No SIM Inserted* error message:

- Ensure the SIM card is fully inserted into the Arlo Cellular and Battery Backup.
 - When installing the SIM card you should hear an audible click and the SIM card should be flush with the outside case of the Arlo Cellular and Battery Backup.
- Make sure your Arlo system is using an Arlo Professional Monitoring trial plan or the Arlo Premium Plan after the trial expires.
 - For more information, visit: [Arlo Secure Subscription Plans](#)
- Confirm the Arlo Cellular and Battery Backup is properly set up and detected in the Arlo Secure App.
 - For more information, visit: [How do I set up the Arlo Cellular and Battery Backup?](#)
- Make sure the Arlo Cellular and Battery Backup is securely attached to the Arlo Keypad Sensor Hub.
 - For more information, visit: [What is the Arlo Cellular and Battery Backup and how does it work?](#)
- Ensure the SIM card settings are correct.
 - For more information, visit: [How do I configure the SIM settings in my Arlo Cellular and Battery Backup?](#)

For more information, visit: [My Arlo Cellular and Battery Backup is not connecting to the cellular network, how can I troubleshoot it?](#)

Last Updated:09/20/2024 | Article ID: 000063055

What is the Arlo Cellular and Battery Backup and how does it work?

What is the Arlo Cellular and Battery Backup and how does it work?

This article applies to:

[SH1001](#) [LBB1001](#)

The Arlo Cellular and Battery Backup connects to the Keypad Sensor Hub to provide battery power for the Arlo Home Security System in the event of a power outage. With an Arlo Professional Monitoring Plan, if your power and internet access go down, the Home Security System keeps working on battery power and uses the activated SIM inside the backup for cellular network access to send alerts.

The Arlo Cellular and Battery Backup is for indoor use only. It is not weather-resistant.

To install the Cellular and Battery Backup:

1. Make sure your Keypad Sensor Hub is set up and plugged in.

2. Attach the Keypad Sensor Hub to the Cellular and Battery Backup.




The battery begins charging.

Note: Open the Arlo Secure App if you want to check the status of the Cellular and Battery Backup.

To release the Cellular and Battery Backup from the Keypad Sensor Hub:

If you need to release the Cellular and Battery Backup from the Keypad Sensor Hub, insert a release tool or paper clip into the release pin hole.

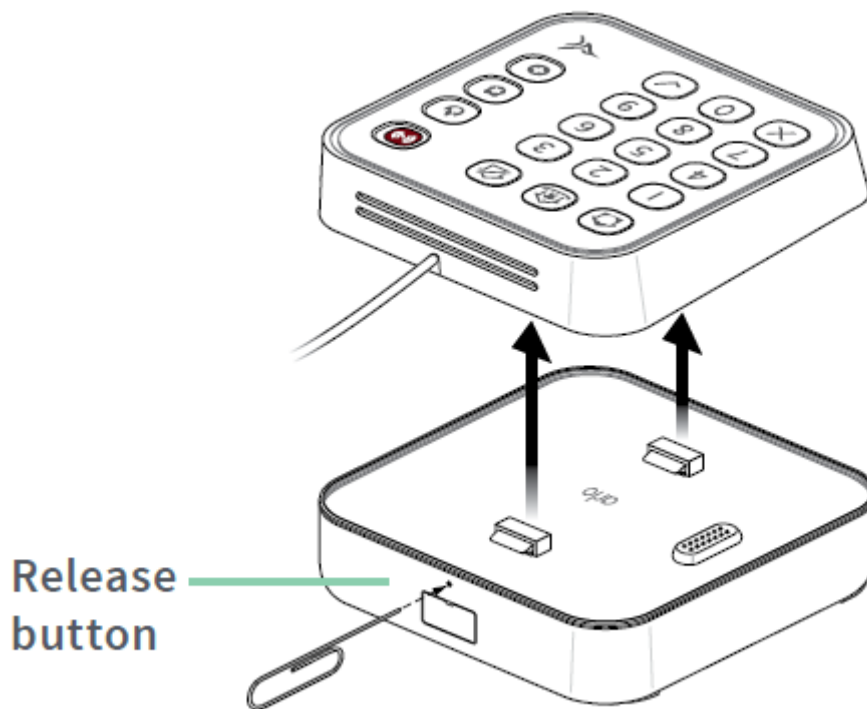

Frequently Asked Questions:

How long does the battery last in the Arlo Cellular and Battery Backup?

The battery will last approximately twelve (12) hours on a full charge, depending on usage.

How long does it take to fully charge the Cellular and Battery Backup?

The Cellular and Battery Backup takes around eight (8) hours to charge from a fully depleted battery.

Does my Cellular and Battery Backup arrive fully charged?

No. The Cellular and Battery Backup will have a partial charge. The battery inside the backup will begin charging immediately upon installation.

When I have a Cellular and Battery Backup installed, what happens when I lose power?

- When power is lost, the Cellular and Battery Backup will immediately activate to continue powering on your Keypad Sensor Hub. All Keypad Sensor Hub functions continue to operate.
- Paired Arlo All-in-One Sensors will continue their sensing functions.
- Arlo SecureLink capable cameras, such as Arlo Pro 5S, will continue to respond to motion and sound triggers, including Smoke/CO alarms. SecureLink capable cameras will send snapshots of motion captured.

- The Cellular and Battery Backup will communicate to Arlo using its LTE connection (Professional Monitoring Subscription required). The Cellular and Battery Backup will not connect to Wi-Fi during a power outage.

What happens when my power returns?

- Your Keypad Sensor Hub will search for your Wi-Fi router to reconnect. Once connected, Arlo SecureLink capable cameras will resume recordings in response to motion or sound events.
- The Cellular and Battery Backup will begin recharging automatically.

What happens when I lose my internet connection, but still have power?

- Your Keypad Sensor Hub will switch over to using its LTE connection automatically.

Last Updated:05/10/2024 | Article ID: 000062865

How do I set up the Arlo Cellular and Battery Backup?

How do I set up the Arlo Cellular and Battery Backup?

This article applies to:

[SH1001](#) [LBB1001](#)


The optional Arlo Cellular and Battery Backup keeps your Arlo Home Security System connected and powered during internet or power outages for up to 12 hours. This device includes a pre-installed SIM card that will automatically provide cellular backup during an internet outage. The cellular service feature of the Arlo Cellular and Battery Backup requires an Arlo [Premium plan](#) after the trial period expires.

- **Note:** Make sure the Arlo Keypad Sensor Hub is set up in the Arlo Secure App before installing the Cellular and Battery Backup. For more information, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)

To install the Arlo Cellular and Battery Backup:

1. Make sure the Keypad Sensor Hub is set up and plugged in.
2. Place the Cellular and Battery Backup on a flat surface.
3. Attach the Keypad Sensor Hub to the Cellular and Battery Backup device by holding the sides of the Keypad Sensor Hub and aligning it over the locking tabs while pressing down.


Note: Gently grasp the sides of the Keypad Sensor Hub and do not press on the motion sensor.

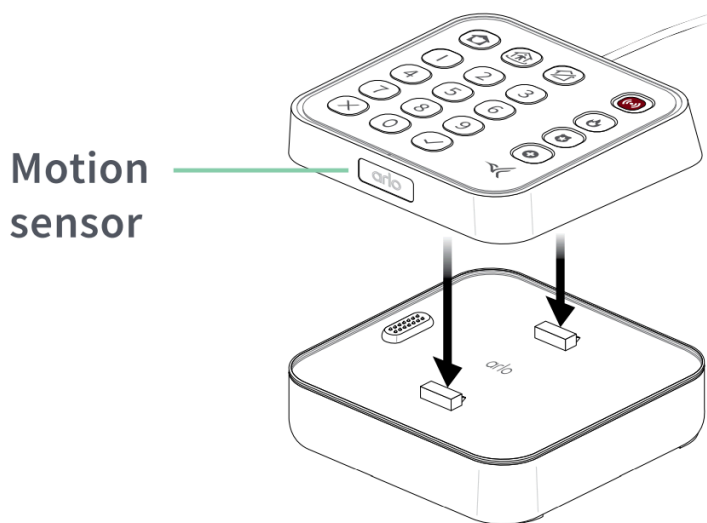

4. Launch the Arlo Secure App and go to the Device Settings for the Keypad Sensor Hub to check the connection status of the Cellular and Battery Backup.

To remove the Arlo Cellular and Battery Backup:

1. Use a paper clip or pin to press the release button.
2. Gently grasp the sides of the Keypad Sensor Hub and pull it upwards to separate the devices.

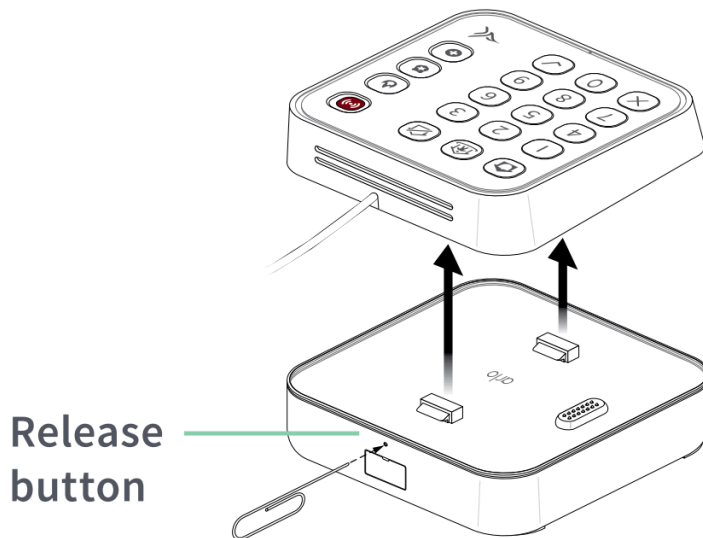

Last Updated:09/20/2024 | Article ID: 000062988

How do I configure the SIM settings in my Arlo Cellular and Battery Backup?

How do I configure the SIM settings in my Arlo Cellular and Battery Backup?

This article applies to:

[LBB1001](#)

The Arlo Cellular and Battery Backup device includes a pre-installed SIM card. The pre-installed SIM card in your Arlo Cellular and Battery Backup device does not require configuration and will automatically activate when subscribed to Arlo Professional Monitoring plan.

If you need to adjust the cellular settings due to installation of a **new SIM card**, use the following

instructions.

Note: Ensure the new SIM card is installed before adjusting the settings. The pre-installed SIM card settings are not available for reconfiguration.

To install a new SIM:

1. Remove the Arlo Cellular and Battery Backup from your Arlo Keypad Sensor Hub using a paperclip. For more information visit: [How do I set up the Arlo Cellular and Battery Backup?](#)
2. Ensure the new SIM card is installed before adjusting the settings.
3. Reinstall the Cellular and Battery Backup onto the Arlo Keypad Sensor Hub.

To configure the cellular settings for your Arlo Cellular and Battery Backup device:

1. Launch the Arlo Secure App.
2. Tap **Devices** at the bottom of the screen.
3. Tap .
4. Tap  for the Keypad Sensor Hub.
5. Tap **Connected to**.
6. Tap **Edit APN Information**.
7. Verify your SIM card APN information and tap **Done**.
8. Tap **Continue**.
9. If the Cellular Status is **Active**, tap **Finish**.
10. If an active SIM card is not located, tap **Try Again**.

Last Updated:05/08/2024 | Article ID: 000062790

How do I change the batteries in my Arlo Wire-Free Outdoor Siren?

How do I change the batteries in my Arlo Wire-Free Outdoor Siren?

This article applies to:

[SLB1001](#)


The Arlo Wire-Free Outdoor Siren uses two **CR123A** batteries.

Arlo recommends using non-rechargeable batteries from high quality manufacturers such as:

- Panasonic®
- Energizer®
- Duracell®

To replace the Arlo Wire-Free Outdoor Siren batteries:

1. Twist the back of the Siren to remove the mounting plate.

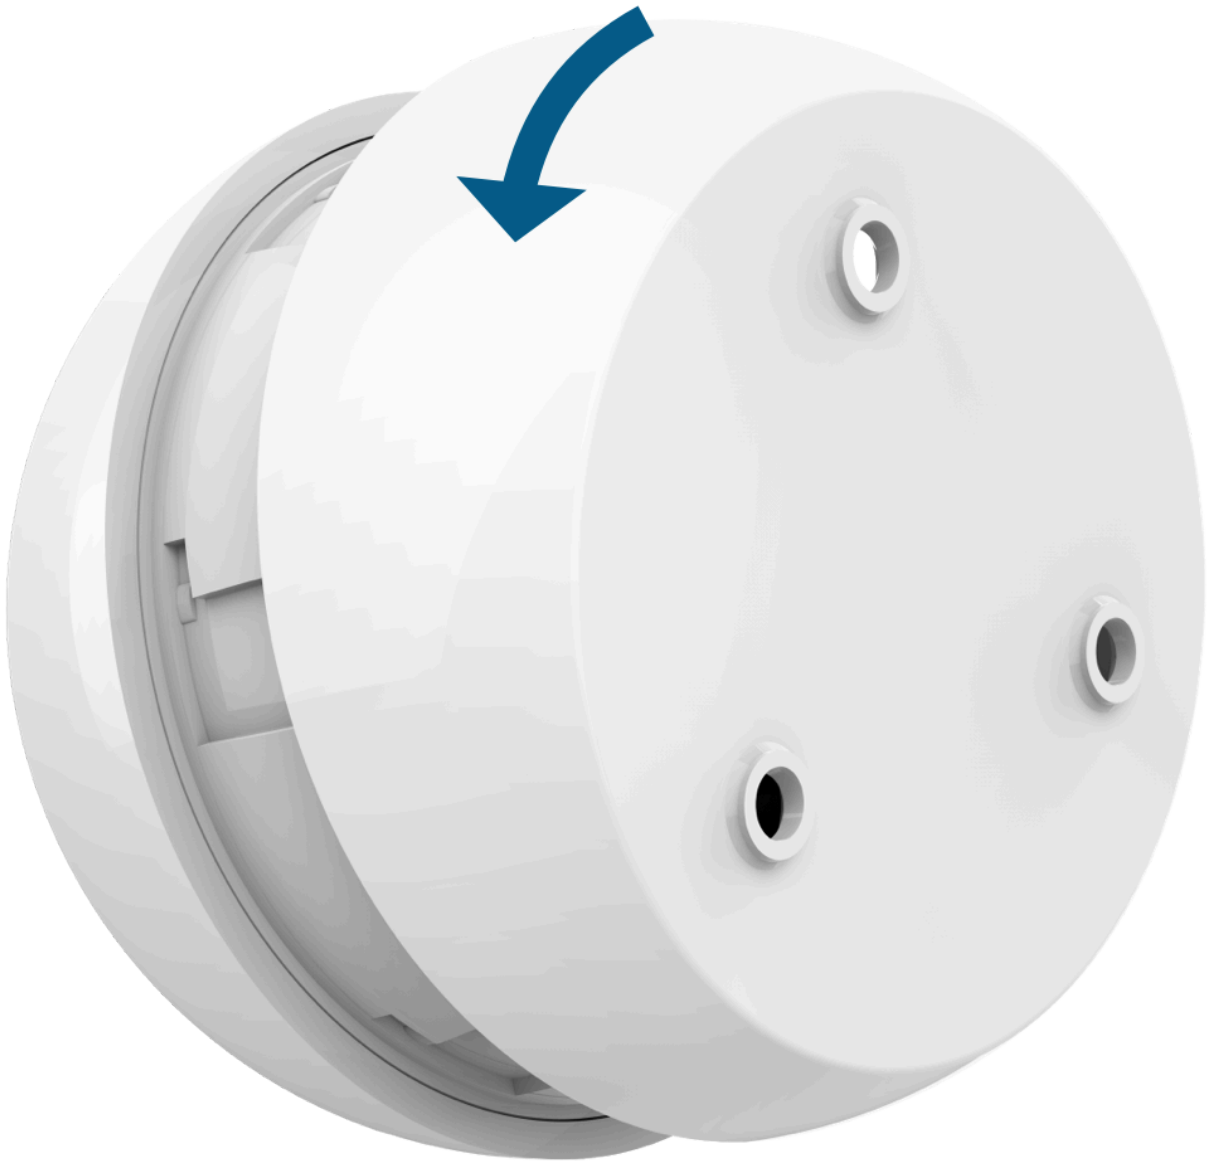

Note: If your Arlo Wire-Free Outdoor Siren has power, you will receive a Tamper Detection notification. For more information, visit: [What is the Tamper Detection feature on my Arlo Wire-Free Outdoor Siren and how does it work?](#)

2. Press the clip to release the battery cover.



3. Pull the ribbon to remove each battery from the battery compartment.
4. Insert the new batteries.
5. Attach the battery cover and the mounting plate.

How do I replace the battery in the Arlo All-in-One Sensor?

How do I replace the battery in the Arlo All-in-One Sensor?


This article applies to:

[MS1001](#)


The Arlo Home Security System All-in-One Sensor uses a replaceable coin cell CR2477 lithium battery.

To replace the battery in the All-in-One Sensor:

1. Slide the front cover of the sensor down and separate it from the back housing.

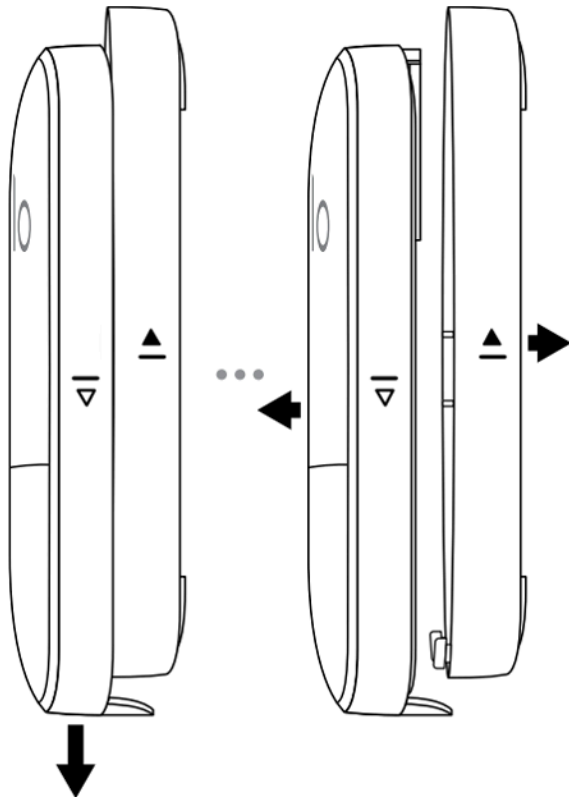

2. Replace the battery. Ensure the + symbol faces outward.
3. Reattach the back housing of the sensor and slide the front cover up to lock it into place.

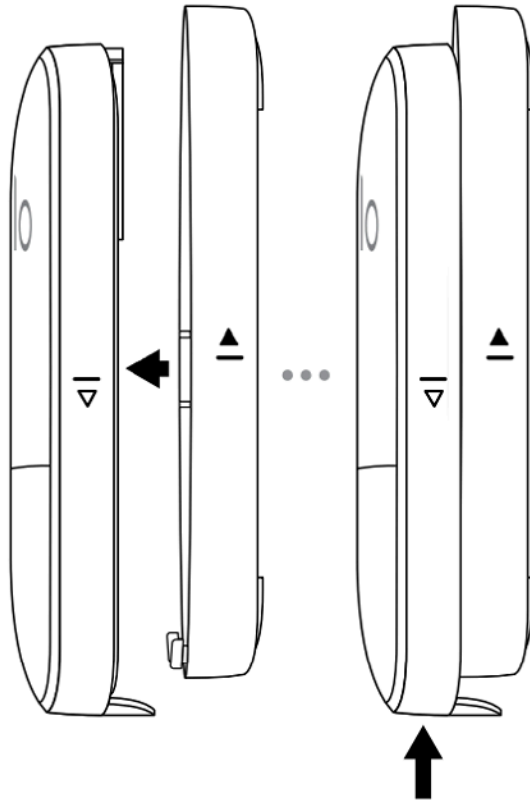

Last Updated:05/09/2024 | Article ID: 000062963

43

Subscriptions / Plans

INTERNAL KB

Unable to Cancel Existing Plan/Subscription (INTERNAL)

Unable to Cancel Existing Plan/Subscription (INTERNAL)

This article applies to:

To cancel a plan:

1. Login to my.arlo.com.

Note: Arlo subscription plans can be changed through the Android Arlo Secure App or at my.arlo.com. If the customer has an iOS or Android device, they can only **cancel** using the web app.

2. Click **Settings**.

Web:

App:

3. Scroll down and click **Subscription**.

Web:

4. Click on **Cancel Subscription** and follow instructions on-screen.

Once the *Cancel Subscription* is selected, a warning screen will show. Click **Continue to Cancel**.

Related External KB Article:

- [How do I change or cancel my Arlo subscription plan? - Arlo Secure 4.0](#)
- [How do I change or cancel my Arlo subscription plan?](#)

Last Updated:07/16/2024 | Article ID: 000062658

Unable to Subscribe to a Plan (INTERNAL)

Unable to Subscribe to a Plan (INTERNAL)

This article applies to:

[AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#)
[VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#)
[VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#)
[VMC3040](#) [VMC3040S](#) [ABC1000](#)

1. Log in to my.arlo.com or launch the mobile application.

Note: If the customer has an iOS device, advise to use the web or an Android device.

2. Click **Settings**.

Web:

App:

3. Scroll down and click **Subscription**.

Web:

App:

4. Click on **SUBSCRIBE NOW** and follow in-app instructions.

If the customer is still unable to subscribe to the plan because the payment won't go through:

- Verify if the card details are entered correctly (name, card number, expiry date).
- Check the address for possible mismatch.
- Try a different card If there is an error message when clicking "Subscribe".

If there is an error when subscribing, gather all necessary details and capture a screenshot of the error prior to escalating to L2.

Last Updated:10/02/2023 | Article ID: 000062656

CVR Functional Issues Troubleshooting Guide (INTERNAL)

CVR Functional Issues

Troubleshooting Guide (INTERNAL)

This article applies to:

[VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2040](#)
[VMC3040](#) [VMC3040S](#) [ABC1000](#)

Note: Follow the troubleshooting guide below for issues on CVR prior to escalating. Utilize the [Master Escalation Template](#) when escalating the case to the next level.

CVR gaps and CVR timeline audio dropout

1. Check the *Camera Offline* and *Streamed* time in **Splunk**. Make sure there are no gaps and the device is always online. Verify if there were any changes made when the issue started.
2. Check the *Signal Strength* in **Splunk**. Check camera distance from the router and/or the Base Station.
3. Confirm battery level and power connection in Splunk.
4. Make sure there's enough bandwidth. A high-speed Internet connection to sustain the following average bandwidth use per camera:
 - Arlo Ultra Series: 3 Mbps upload per camera
 - Arlo Pro Series (Pro 3 and newer: 2 Mbps upload per camera
 - All other Arlo cameras: 1 Mbps upload per camera
5. Make sure there are no other devices nearby that can cause major interference. Appliances or other Wi-Fi streaming devices can affect the camera. The camera should be located within 300 feet (90 meters) from the Arlo SmartHub or Base Station and 6 feet (2 meters) away from other Wi-Fi devices.
6. Power cycle the camera and the Base Station.
7. Consult/Escalate to L2.

CVR timeline is empty

1. Check the *Camera Offline* and *Streamed* time in **Splunk**. Make sure there are no gaps and the device is always online. Verify if there were any changes made when the issue started.
2. Check to see if there was any recent change related to the payment subscription.
3. Check the *Signal Strength* in **Splunk**. Check camera distance from the router and/or the Base Station.
4. Make sure there's enough bandwidth. Check the internet speed and ask for the network topology from the customer.
 - Was there any change in router/network settings, providers, etc.?
 - Was there any change in camera location?

5. Make sure there are no other devices nearby that can cause major interference. Appliances or other Wi-Fi streaming devices can affect the camera. The camera should be located within 300 feet (90 meters) from the Arlo SmartHub or Base Station and 6 feet (2 meters) away from other Wi-Fi devices.
6. Try a different device or login to the web client to check if the issue occurs on all platforms.
7. Consult/Escalate to L2.

Image stuck on CVR timeline

1. Ask the customer to access the Arlo account using different platforms (Android, iOS, Web Client) and verify if the issue occurs on all platforms.
2. Make sure the mobile device has data or is connected to Wi-Fi.
3. Force kill the Arlo Secure app from the mobile device settings and re-open.
4. Logout of the Arlo Arlo Secure app and log back in.
5. Power cycle the camera and the Base Station/SmartHub.
 - Unplug the AC adapter for 15 seconds and remove the battery from the camera.
 - Reinsert the battery and re-plug the AC power adapter. Wait until the camera is back online.
 - Re-login to the Arlo Secure app and test.
6. Consult/Escalate to L2.

CVR historical playback not working as expected

1. Check **CS Diag** tool if there is an active subscription.
2. Make sure the mobile device has data or is connected to Wi-Fi.
3. Ask the customer to access the Arlo account using different platforms (Android, iOS, Web Client) and verify if the issue occurs on all platforms.
4. Try to logout of the Arlo Arlo Secure app and log back in.
5. Force kill the Arlo Secure app from the mobile device settings and re-open.

6. Check how many devices are connected on the same network. Ask the customer to try disconnecting other devices and test. Too many devices connected on the same network can cause network congestion.
7. Consult/Escalate to L2.

Logs:

1. Collect Base Station/camera logs from the CS Diag Tool.
 - If the device is offline, collect the logs when the devices are back online and attach them to the case.
2. Capture client logs from the applicable app:
 - [How to collect Arlo iOS app logs \(INTERNAL\)](#)
 - [How to collect Arlo Android app logs \(INTERNAL\)](#)
3. Collect HAR file logs:
 - [How to save HAR file logs for Arlo CVR troubleshooting \(INTERNAL\)](#)

Related external KB Articles:

- [How to troubleshoot issues with Continuous Video Recording \(CVR\)](#)
- [What is continuous video recording \(CVR\) and how do I use it?](#)

Last Updated:06/15/2022 | Article ID: 000062410

How to purchase or cancel an Arlo CVR plan (INTERNAL)

How to purchase or cancel an Arlo CVR plan (INTERNAL)

This article applies to:

[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#)
[VMC4041P](#) [VMC4050P](#) [VMC2040](#) [VMC3060](#) [VMC2060](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

To purchase an Arlo CVR plan:

For the Arlo Secure experience with **Feed**:

1. Log in to my.arlo.com.
2. Click **Secure**.
3. Click **My Arlo Account**.
4. Under CVR Plan, click **Subscribe Now**.

For the Arlo Secure experience with **Library**:

1. Log in to my.arlo.com.
2. Click **Settings**.
3. Under Subscription, click **Arlo Secure**.
4. Under CVR Plan, click **Subscribe Now**.

To cancel an Arlo CVR plan:

For the Arlo Secure experience with **Feed**:

1. Log in to my.arlo.com.
2. Click **Secure**.
3. Click **My Arlo Account**.
4. Click **Cancel Subscription**.
5. Select your CVR plan and click **Continue with Cancellation**.

For the Arlo Secure experience with **Library**:

1. Log in to my.arlo.com.
2. Click **Settings**.
3. Under Subscription, click **Arlo Secure**.
4. Click **Cancel Subscription**.
5. Select your CVR plan and click **Continue with Cancellation**.

If the customer is unable to cancel the CVR plan, consult or escalate with L2:

1. Check if there is a known issue or outage.
2. Verify the steps completed by the customer.

3. Ask the customer to try a different client (Android or Web).
4. Collect a screenshot of the error (if any).
5. Check the CS Diag Tool for subscription status.
6. Collect logs:
 - HAR File Logs: [How to save HAR file logs for Arlo CVR troubleshooting \(INTERNAL\)](#)
 - Android App Logs: [How to collect Arlo Android app logs \(INTERNAL\)](#)

Last Updated:05/22/2023 | Article ID: 000063058

Arlo Trial Plan Reset Process (INTERNAL)

Arlo Trial Plan Reset Process

(INTERNAL)

This article applies to:

[AVD2001](#) [AVD1001](#) [VMC5040](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC2020](#)
[VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

All support personnel must identify the exact scenario of customers when it comes to the trial plan. There are multiple case scenarios where trial plan reset is necessary for some customers even after it has been used previously. Below are the approved common case scenario descriptions for a trial plan reset:

1. The customer accidentally canceled the plan.
2. Customer initially installed the device(s) to the incorrect account and later reinstalled them to the correct one.
3. Customer initially installed the device(s) but trial plan did not apply or was not claimed and is not found on any other account.
4. Customer purchased a refurbished device and installed it for the first time in his/her account.

5. Customer received a brand new (NAS SKU) replacement unit, and it did not come with a trial plan.
6. Customer received a refurbished replacement unit (NAB SKU) and still within the trial period.
7. The customer is impacted by a known issue and unable to maximize their trial plan.

Note: For NAS replacement SKUs should come with its standard trial plan (3- or 1-month trial plan)

To know more about the guidelines, see [Arlo Trial Plan Reset](#).

Last Updated:09/25/2023 | Article ID: 000062372

Refund Requests for Canceled Subscriptions (INTERNAL)

Refund Requests for Canceled Subscriptions (INTERNAL)

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [VMB5000](#) [VMB4540](#)
[VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#)
[VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#)
[VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

If a customer contacted Support requesting for a refund on a canceled plan or subscription.

Check the following in CEP and CS Diag Tool:

- Customer Account
- Subscription renewal date or subscription period
- Subscription Status / Entitlement

L1 Support should confirm status of subscription. Inform the customer that even though the subscription is canceled they may use the service until the end of the subscription period. They will remain to have access to their accounts and enjoy the benefits of having a subscription.

If a customer insists, empathize and de-escalate. Explain that we recently made changes in our Terms and Conditions and the information can be found under “Changes to your Arlo Service”

If the customer is pursuing to get a refund, please escalate issue to CCT. Document the following information:

- Customer Account/E-mail address
- Type of Subscription and subscription fee
- Subscription period
- Cancellation date

And make sure that the CEP disposition is correct:

- Case Sub-Type: Subscription - Transactional
- Problem : Prorated Service Refund Request
- Symptoms: No Refund Received
- Root Cause: Escalate to CCT

Last Updated:11/09/2021 | Article ID: 000062660

EXTERNAL KB

What are the available Arlo subscription plans and how much cloud recording is available?

What Arlo subscription plans and cloud recording options are available? (United States)

This article applies to:

[Arlo Secure Plans](#) [Arlo Secure App](#)

An [Arlo Secure subscription](#) enables features like 30-Day Video Cloud Storage, Object Detection, Activity Zones, 24/7 Emergency Response, and more. You can purchase a plan for multiple cameras or a single camera.

An [Arlo Safe subscription](#) gives you expanded use of Arlo's personal safety app for total protection and peace of mind. You will receive additional features such as Cloud Witness™ Incident Recording, Crash Detection & Response, 24/7 Personal Safety Expert, Family Place Alerts, Family Check-Ins, and Family Safety Monitoring.

Note: This article applies to customers in the United States. For details in other regions, visit:

- [Canada, Australia, and New Zealand](#)
- [Europe and United Kingdom](#)
- [Japan, Hong Kong, Singapore, and South Africa](#)
- [Taiwan](#)

Arlo Secure Plans

- **Arlo Basic**

Includes 30-Day Video Cloud Storage, Filtered Alerts, Activity Zones, and Interactive Notifications.

- **Arlo Plus**

Includes Arlo Basic features, Package Detection, Advanced Video AI Object Detection, and Advanced Audio AI Detection.

- **Arlo Premium with Professional Monitoring**

Includes Arlo Plus features, [24/7 Professional Monitoring](#), 24/7 Emergency Response, Arlo Safe Family plan, and more.

For more information, visit: [Arlo Secure Plans](#)

When the trial included with your camera purchase ends, you can purchase an Arlo Plan to continue using features like 30-day cloud recording. You can also choose not to have a service plan and still have access to local storage and two-way audio.

- For more information, visit: [What options will I have when my Arlo trial ends?](#)

Arlo Safe Plans

Arlo Safe is a personal safety app for total protection and peace of mind with one-touch emergency activation on your phone. If you ever feel in danger, are involved in a car accident, or want to check in with a family member, help is there.

Note: Arlo Safe is only available in the United States.

Arlo Safe offers a Free Plan, an Individual Plan, and a Family Plan. The ability to automatically notify emergency contacts is offered for free. Additional features are available with an Individual Plan and Family Plan. The Arlo Safe Family Plan is also included as part of the Arlo Secure Premium Plan.

For more information, visit:

- [Arlo Safe Plans](#)
- [What is included in my Arlo Safe subscription?](#)

Continuous Video Recording (CVR)

Some Arlo cameras can record non-stop to the Arlo cloud when plugged into AC power.

- To enable your Arlo cameras to record 24/7, you need to purchase a CVR plan for each Arlo camera.
- For more information on CVR features, visit: [What is Continuous Video Recording \(CVR\) and how do I use it?](#)

Last Updated:09/20/2024 | Article ID: 000063083

When can I use a promo code or coupon for a subscription plan?

When can I use a promo code or coupon for a subscription plan?

This article applies to:

You can use Arlo promotional codes and coupons either right away or after your free Arlo trial ends.

To use a subscription promo code or coupon:

1. Launch the Arlo Secure App for Android or log in to my.arlo.com on a web browser.
Note: Purchases are not supported by the iOS (Apple) version of the app.
2. Tap or click **Settings** > **Subscription** > **Subscribe Now**.
3. Choose the plan you want and continue through the prompts.
4. Input your payment information.
5. Tap or click **Enter a Promo Code**, paste your code, and tap or click **Apply**.
6. Continue through the checkout process.

Last Updated:05/01/2024 | Article ID: 000062194

NEW PLANS / PRICING

What Arlo business subscription plans are available?

What Arlo business subscription plans are available?

The following Arlo subscription plans are available for businesses:

See the following table for worldwide service plan pricing:

For more information about home subscription plans, visit [What are the available Arlo](#)

[subscription plans and how much cloud storage is available?](#).

For more information about how you can use Arlo to monitor your organization or business,

visit [How can I use Arlo to monitor my organization or business?](#).

Arlo Smart and Business Subscription Plan Changes

Arlo Secure Pricing Update Feb 3, 2023

SECURE

What is Arlo Secure and how can I benefit from it?

What is Arlo Secure and how can I benefit from it?

This article applies to:

[Arlo Secure Plans](#) [Arlo Secure App](#)

[Arlo Secure](#) gives you the ability to:

- Record and store videos with up to 4K video resolution to Arlo's secure cloud for 30 days
- Get smarter, interactive alerts that identify people, vehicles, animals, and packages for you
- Reduce unwanted alerts with Activity Zones so you only get the alerts that matter

Experience security like never before and get peace of mind from anywhere with Arlo Secure.


Note: Unlimited camera support plans apply only to Arlo cameras on the same Arlo account per Location. For more information, visit: [What Arlo subscription plans and cloud recording options are available?](#)

To subscribe, visit: [Arlo Secure Plans](#)

Arlo Secure provides intelligent motion alerts that also allow you to:

- Activate a siren
- Call a friend
- Call emergency responders

Access these options from Arlo push notifications on your mobile device:

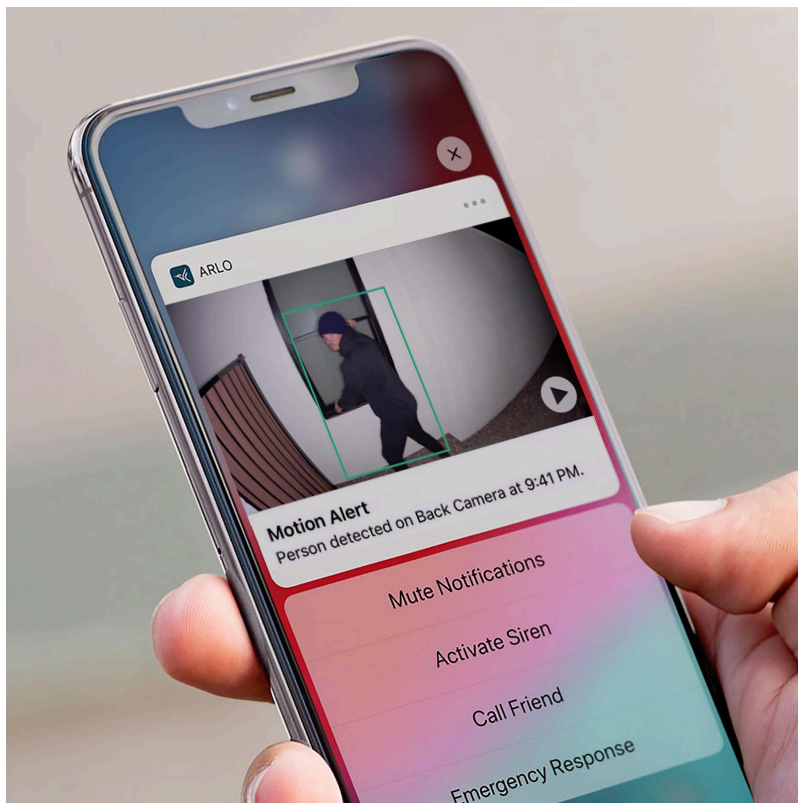

Arlo Secure Features:

4K and 2K Cloud Recording

- Record to the Arlo cloud in your camera's highest video resolution
- For more information, visit: [What do I need to record 4K or 2K videos to the Arlo cloud?](#)

Unlimited Camera Support

- Choose from a Single Camera or Unlimited Camera plan to add as many cameras to your Location as you need
- For more information, visit: [Arlo Secure Plans](#)

Advanced Detection

- Using advanced AI, Arlo cameras can notify you what it has detected
- Detection options include, people, animals, vehicles, packages, smoke alarms, and carbon monoxide alarms
- For more information, visit: [What are Arlo Smart Notifications and how do I set them up?](#)

Animated Preview

- Expand your Arlo push notifications to gain a better understanding of what triggered a motion detection alert
- For more information, visit: [What is the Animated Preview feature on motion alerts, and how does it work?](#)

Activity Zones

- Reduce unwanted notifications by highlighting areas for focused motion detection
- For more information, visit: [What are Arlo Activity Zones and how do I create them?](#)

Support Center

- Get support assistance for your Arlo device directly from the Arlo Secure App
- For more information, visit: [What is the Support Center in the Arlo Secure App?](#)

Emergency Response

- Emergency Response allows you to quickly get help from first responders during an emergency, activate a siren, or call a friend
- Premium plan is required for Emergency Response

- For more information, visit: [What is the Arlo Emergency Response feature and how does it work?](#)

Professional Monitoring

- 24/7 around-the-clock Professional Monitoring from Live Security Experts
- For more information, visit: [What is Arlo Professional Monitoring?](#)

Last Updated:09/11/2024 | Article ID: 000056583

How do I subscribe to Arlo Secure?

How do I subscribe to Arlo Secure?

This article applies to:

[Arlo Secure Plans](#) [Arlo Secure App](#)

An [Arlo Secure subscription](#) enables you to record in 2K or 4K video resolution, activate advanced object detection, create cloud activity zones, respond to emergencies, and much more. You can purchase a plan for multiple cameras or a single camera. This provides a flexible and customizable experience for your Arlo system.

- For more information, visit: [What Arlo subscription plans and cloud recording options are available?](#)

Note: Arlo Secure plans can be purchased in the **Arlo Secure App** or on **my.arlo.com**. Plans are billed either monthly or annually. If you have an annual plan, all other plans in the account must also be annual plans.

- For more information, visit: [Arlo Secure Subscription Plans](#)

To purchase an Arlo Secure plan on my.arlo.com:

1. Log in to [my.arlo.com](#).
2. Click **My Arlo Account > Arlo Secure**.
3. Select **Get Premium**, **Get Plus**, or **Get Basic Unlimited**.
4. Toggle the billing period switch to **Monthly** or **Yearly**.

5. Follow the instructions to purchase the plan.

To purchase an Arlo Secure plan within the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap .
3. Tap **Settings**.
4. Select your Location.
5. Tap **Plan**.
6. Select **Premium**, **Plus** or **Basic**.
7. Tap **Get Premium**, **Get Plus**, or **Get Basic**.
8. Choose **Annual** or **Monthly**.
9. Follow the instructions to purchase the plan.

Last Updated:09/11/2024 | Article ID: 000056588

How do I redeem my prepaid Arlo Secure subscription code?

How do I redeem my prepaid Arlo Secure subscription code?

This article applies to:

Prepaid Subscription cards for Arlo Secure can be purchased from select retailers. You can purchase an Arlo Secure plan to unlock 2K or 4K video recording, 30 days of cloud recording, advanced object detection, cloud activity zones, and much more. You can use these prepaid subscription cards either right away, or after your Arlo Secure trial ends.

- For more information, visit: [Arlo Secure Subscription Plans](#)

For the Arlo Secure App with *Feed*

To use a subscription promo code or coupon on [my.arlo.com](#):

1. Log in to [my.arlo.com](#).

2. Click **Secure > My Arlo Account**.
3. Under Subscription, click **Redeem Service Code**.
4. Enter your code and click **Redeem**.

If you are currently on an Arlo Secure trial, click **Change Plan**.

5. Follow the instructions to purchase an Arlo Secure plan.

To use a subscription promo code or coupon on the Arlo Secure App for Android:

1. Launch the Arlo Secure App on Android.
2. Tap .
3. Tap **Subscription**.
4. Under Arlo Secure, tap **Enter Arlo Secure Code**.

If you are currently on an Arlo Secure trial, tap **Change Plan**.

5. Follow the in-app instructions to purchase an Arlo Secure plan.

For the Arlo Secure App with *Library*

To use a subscription promo code or coupon:

1. Launch the Arlo Secure App for Android or log in to my.arlo.com on a web browser.

Note: Purchases are not supported by the iOS (Apple) version of the app.

2. Tap or click **Settings > Subscription > Subscribe Now**.
3. Choose the plan you want and continue through the prompts.
4. Input your payment information.
5. Tap or click **Enter a Promo Code**, paste your code, and tap or click **Apply**.
6. Continue through the checkout process.

For more information about subscription plans, visit: [What Arlo subscription plans and cloud recording options are available?](#)

Last Updated:06/07/2024 | Article ID: 000063048

ARLO MOBILE - FOR ARLO GO1

What Arlo Mobile service plans are available?

What Arlo Mobile service plans are available?

This article applies to:

Arlo Mobile is an LTE service plan offered exclusively for Arlo Go Mobile HD Security Cameras. Arlo Mobile service uses AT&T's nationwide 4G LTE network. Service is only available in the continental United States, Hawaii, and Alaska.

Your Arlo Mobile-ready camera comes pre-activated with 15 minutes' worth of video upload time. No service activation is required out of the box. After you use up your video minutes, you can easily purchase more by signing up for an Arlo Mobile service plan in the Arlo Secure App or at my.arlo.com. To sign up for an Arlo Mobile service plan, log in to your Arlo account and select **Settings > Subscription > Change Plan**.

Arlo Mobile Service Plans:

15-minutes of video upload time per month / **30** 30-second video clips per month

120-minutes of video upload time per month / **240** 30-second video clips per month

225-minutes of video upload time per month / **450** 30-second video clips per month

The numbers of minutes and video clips per month assume that your Arlo Go camera is set to highest video quality and that video clips are set to 30 seconds each in modes and rules. If you use lower video quality settings and set your Arlo Go to record shorter clips, your Arlo Go can upload significantly more video than indicated in the plan descriptions. For more information about Arlo Mobile plan minutes, visit: [How can I get the most out of my Arlo Mobile minutes plan for my Arlo Go camera?](#)

Note: Arlo Mobile Users still have the option to choose [Arlo Secure plans](#). Arlo subscription plans offer additional cloud storage and support for a specific number of Arlo cameras, while Arlo Mobile plans offer LTE data for Arlo Go cameras.

How do I cancel my Arlo Mobile service plan and what kind of refund do I receive?

How do I cancel my Arlo Mobile service plan and what kind of refund do I receive?

Note: This information only applies to Arlo Go owners who are using Arlo Mobile as their

mobile service provider. For information about canceling your Arlo Go service plan with a

different service provider, contact your service provider.

You must use the Arlo app or log in to your Arlo account on a computer to cancel your Arlo

Mobile service plan. Arlo support experts and community moderators are not able to cancel

or change your Arlo Mobile plan.

Arlo Mobile is a prepaid service, so Arlo Mobile does not provide prorated refunds for partial

months of service when you cancel your Arlo Mobile service plan. If you pay for a single

month, you do not receive a refund when you cancel your Arlo Mobile service plan. If you

cancel an annual Arlo Mobile service plan at least one month before the end of the plan

year, a refund for the remaining full months is automatically credited to your original method

of payment.

For information about canceling an Arlo Premier or Elite subscription plan, see [How do I](#)

[change or cancel my Arlo subscription plan?](#).

To cancel your Arlo Mobile service plan:

1. Launch the Arlo app or log in to your Arlo account on the web.
2. Tap or click **Settings > Subscription**.
3. If you are using the Arlo app, tap **Edit Account**.
4. Tap or click **Manage** next to **Manage Arlo Mobile Plan**.
5. Tap or click **Edit Plan**.
6. Select **Cancel my existing plan** and tap or click **Continue**.
7. Follow the on-screen prompts to finish canceling your Arlo Mobile service plan.

For more information about Arlo Mobile, see the following knowledge base articles:

- [How do I add more minutes to my Arlo Mobile service plan?](#)
- [What Arlo Mobile service plans are available?](#)

CVR

How to troubleshoot issues with Arlo Continuous Video Recording (CVR)

How to troubleshoot issues with Arlo Continuous Video Recording (CVR)

This article applies to:

[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#)
[VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2040](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

Use the following information if you are experiencing issues with Continuous Video Recording (CVR) on your Arlo device.

If you have missing footage on the CVR timeline, a frozen CVR timeline, or the historical playback is not working as expected:

- Make sure your CVR subscription is active.
 - For more information, visit: [What is Continuous Video Recording \(CVR\) and how do I use it? - Arlo Secure 4.0](#)
- Ensure the Arlo camera is connected to AC power.
 - CVR requires an [outdoor or indoor charging cable](#).
- Verify the camera is online.
 - If you have had an internet or power outage, CVR may have stopped recording.
- Check your internet bandwidth.
 - Low bandwidth can cause slow speed or buffering, which affects recordings.
 - Perform a speed test at [speedtest.net](#).
 - For more information, visit: [What are the minimum requirements for installing and using my Arlo system?](#)
- Move the Arlo camera away from other devices that can cause interference.
 - Appliances or other Wi-Fi streaming devices can affect your camera.

- Arlo cameras should be located no more than 300 feet (90 meters) from the Arlo SmartHub or Arlo Base Station and 6 feet (2 meters) away from other Wi-Fi devices.
- Disconnect other devices connected to your network.
 - Too many devices can cause network congestion and interfere with CVR.
- Reset the camera.
 - Unplug the AC power adapter for 15 seconds and remove the battery from the camera.
 - Reinsert the battery and reconnect the AC power adapter.
- Make sure your mobile device is connected to Wi-Fi.
- Force close the Arlo Secure App on your mobile device and launch the app again.
- Log out of the Arlo Secure App and log back in.
- Try logging in on a different mobile device or log in to my.arlo.com.

Last Updated:05/09/2024 | Article ID: 000062743

What is Continuous Video Recording (CVR) and how do I use it?

What is Continuous Video Recording (CVR) and how do I use it?

This article applies to:

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [What is Continuous Video Recording \(CVR\) and how do I use it? - Arlo Secure 4.0](#)*

Continuous video recording (CVR) is an optional feature for Arlo cameras. With CVR activated on one of your cameras, you can record 24/7. CVR allows you to rewind so you can catch anything you missed.

CVR-capable cameras record continuously, in addition to the recordings based on the modes and rules that you set in the Arlo Secure App.

Note: Arlo does not currently support downloading CVR videos. You can only watch them from the cloud. CVR recordings are in 1080p. When you have a CVR subscription, you can access either 14 or 30 days of continuous video recordings.

To use CVR, you need the following:

- A compatible Arlo camera:
 - Arlo Ultra Series: Arlo Ultra or Arlo Ultra 2
 - Arlo Pro Series: Arlo Pro 2, Arlo Pro 3, Arlo Pro 4, or Arlo Pro 3 Floodlight Camera
 - Arlo Indoor Cameras: Arlo Q, Arlo Q Plus, Arlo Baby, or Arlo Essential Indoor Camera
- A 14-day or 30-day CVR subscription plan
- An [outdoor or indoor charging cable](#)
 - Arlo cameras must be plugged in to AC power to support CVR
 - An [outdoor charging cable](#) must be used for the Arlo Pro 3 Floodlight
- A compatible Arlo SmartHub or Arlo Base Station
 - An Arlo SmartHub or Arlo Base Station is not required for Arlo Q, Arlo Q Plus, Arlo Baby, or Arlo Essential Indoor Cameras

To add a CVR plan to your Arlo account:

1. Log in to my.arlo.com.
2. Click **Settings**.
3. Under Subscription, click **Arlo Secure**.
4. Next to CVR Plan, click **Subscribe Now**.

To access the CVR timeline for your Arlo camera:


1. Launch the Arlo Secure App or log in to my.arlo.com.
2. Tap or click **Devices**.
3. Tap or click the (...) icon on a camera with a CVR subscription.
4. Tap or click **Timeline**.
5. Tap or click **Done** when you are finished viewing the CVR Timeline.

To navigate through the timeline in the Arlo Secure App, tap and hold the timeline. Drag it to the left to go back in time. Drag it to the right to move towards more recent recordings.



On my.arlo.com, click to navigate to a specific time or click and drag to scroll through the timeline.

To jump to a specific day in the timeline, click the Calendar icon. A timeline displays with a series of dates. As the camera records CVR content, the calendar is updated to indicate when motion or sound was detected during the continuous recording. Your Arlo camera must be using modes and rules that are set to detect motion or audio for the Audio and Motion indicators to display.

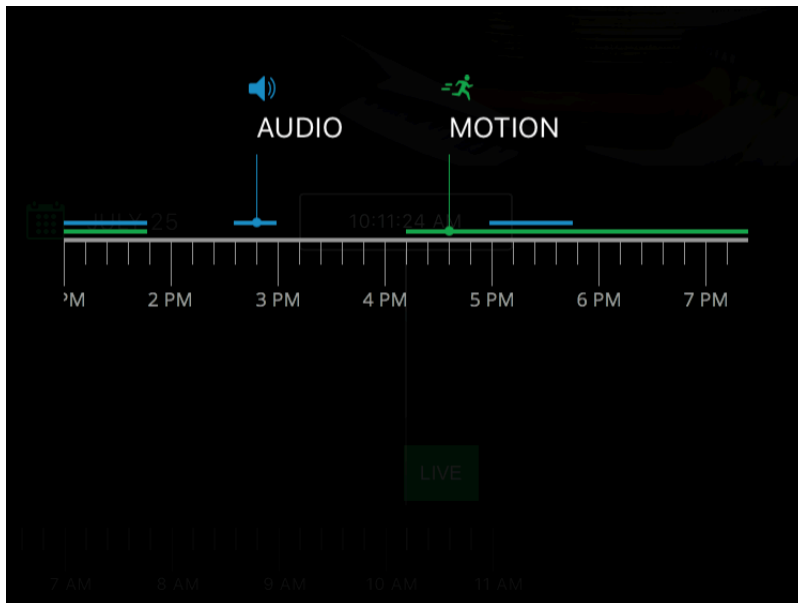

On the Arlo Secure App, pinch to zoom and see a detailed view of the timeline.

While in the CVR interface, you can easily go to landscape mode by rotating your device.

On my.arlo.com, click 24 hr, 1 hr, or 5 min to change your timeline detail.

Last Updated:10/06/2023 | Article ID: 1018425

What is Continuous Video Recording (CVR) and how do I use it? - Arlo Secure 4.0

What is Continuous Video Recording (CVR) and how do I use it? - Arlo Secure 4.0

This article applies to:

[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#)
[VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2040](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#)
[VMC3052](#) [VMC2052](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App with **Feed**. If you have the Arlo Secure App with **Library**, visit: [What is continuous video recording \(CVR\) and how do I use it?](#)*

Continuous video recording (CVR) is an optional feature for Arlo cameras. With CVR activated on one of your cameras, you can record 24/7. CVR allows you to rewind so you can catch anything you missed.

CVR-capable cameras record continuously, in addition to the recordings based on the modes and rules that you set in the Arlo Secure App.

- **Note:** Arlo does not currently support downloading CVR videos. You can only watch them from the cloud. CVR recordings are in 1080p. When you have a CVR subscription, you can access either 14 or 30 days of continuous video recordings.

To use CVR, you need the following:

- A compatible Arlo camera:
 - Arlo Ultra Series:
 - Arlo Ultra
 - Arlo Ultra 2
 - Arlo Pro Series:
 - Arlo Pro 2
 - Arlo Pro 3
 - Arlo Pro 4
 - Arlo Pro 5S
 - Arlo Pro 3 Floodlight Camera
 - Arlo Indoor Cameras:
 - Arlo Q
 - Arlo Q Plus
 - Arlo Baby
 - Arlo Essential Indoor Camera
 - Arlo Essential Indoor Camera 2K (2nd Generation)
 - Arlo Essential Indoor Camera HD (2nd Generation)
 - Arlo Essential Outdoor Series (2nd Generation):
 - Arlo Essential Outdoor Camera 2K (2nd Generation)
 - Arlo Essential XL Outdoor Camera 2K (2nd Generation)
 - Arlo Essential Outdoor Camera HD (2nd Generation)

- Arlo Essential XL Outdoor Camera HD (2nd Generation)
- A 14-day or 30-day CVR subscription plan
- An [outdoor or indoor charging cable](#)
 - Arlo cameras must be plugged in to AC power to support CVR
 - An [outdoor charging cable](#) must be used for the Arlo Pro 3 Floodlight
- A compatible Arlo SmartHub or Arlo Base Station
 - **Note:** An Arlo SmartHub or Arlo Base Station is **not required** for:
 - Arlo Q
 - Arlo Q Plus
 - Arlo Baby
 - Arlo Essential Indoor Camera
 - Arlo Essential Indoor Camera 2K (2nd Generation)
 - Arlo Essential Indoor Camera HD (2nd Generation)
 - Arlo Essential Outdoor Camera 2K (2nd Generation)
 - Arlo Essential XL Outdoor Camera 2K (2nd Generation)
 - Arlo Essential Outdoor Camera HD (2nd Generation)
 - Arlo Essential XL Outdoor Camera HD (2nd Generation)

To add a CVR plan to your Arlo account:

1. Log in to my.arlo.com.
2. Click **Secure**.
3. Click **My Arlo Account**.
4. Under CVR Plan, click **Subscribe Now**.

To access the CVR timeline for your Arlo camera:


1. Launch the Arlo Secure App or log in to my.arlo.com.
2. Tap or click **Devices**.
3. Select the Arlo camera with CVR.
4. Tap or click **CVR**.

To navigate through the timeline in the Arlo Secure App, tap and hold the timeline. Drag it to the left to go back in time. Drag it to the right to move towards more recent recordings.



On my.arlo.com, click to navigate to a specific time or click and drag to scroll through the timeline.

To jump to a specific day in the timeline, click the Calendar icon. A timeline displays with a series of dates. As the camera records CVR content, the calendar is updated to indicate when motion or sound was detected during the continuous recording. Your Arlo camera must be using modes and rules that are set to detect motion or audio for the Audio and Motion indicators to display.

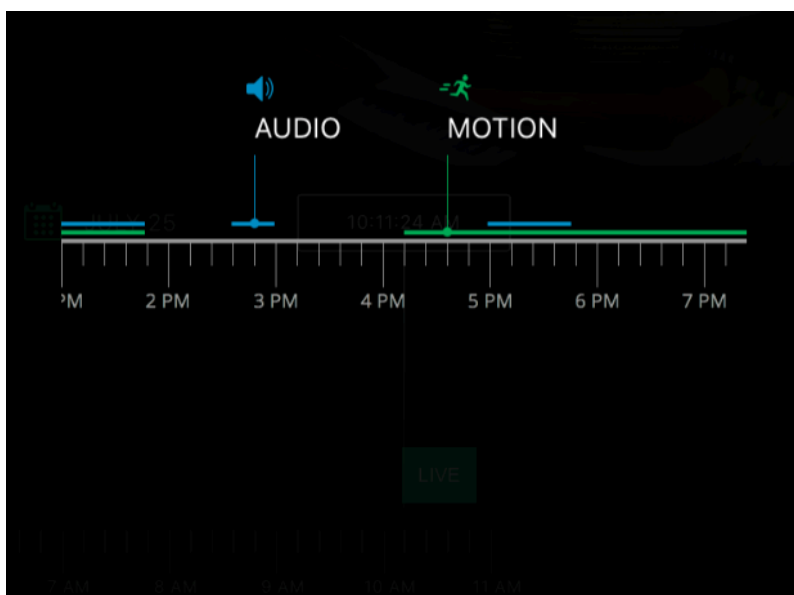

On the Arlo Secure App, pinch to zoom and see a detailed view of the timeline.

While in the CVR interface, you can easily go to landscape mode by rotating your device.

On my.arlo.com, click 24 hr, 1 hr, or 5 min to change your timeline detail.

TRIAL

What is included in the Arlo Secure trial?

What is included in the Arlo Secure trial?

This article applies to:

[Arlo Secure Plans](#)

When you purchase an Arlo device, the trial activates automatically after you set up the device in the Arlo Secure App.

Note: The trial will only work in the country for which it was activated. If you want to use Arlo Secure in a different country, you will need to cancel the trial. The trial allows recording in the maximum resolution your Arlo camera is capable of.

- For more information, visit:
 - [How do I change or cancel my Arlo subscription plan?](#)
 - [What options will I have when my Arlo trial ends?](#)

The Arlo Secure trial includes:

United States:

- 30-Day Video History
- Person Recognition*, Vehicle Recognition, and Custom Detection
- Smoke/CO Alarm Detection
- Person, Vehicle, Animal, and Package Detection
- Activity Zones
- Interactive Notifications
- 24/7 Emergency Response

Europe:

- 30-Day Video History
- Person, Vehicle, Animal, and Package Detection
- Smoke and CO Alarm Detection
- Activity Zones
- Interactive Notifications

Canada, Australia, New Zealand, Singapore, Japan, Hong Kong, South Africa:

- 30-Day Video History
- Person Recognition*, Vehicle Recognition, and Custom Detection
- Smoke/CO Alarm Detection
- Person, Vehicle, Animal, and Package Detection
- Activity Zones
- Interactive Notifications

*[Person Recognition is not supported in certain regions.](#)

Last Updated:09/20/2024 | Article ID: 000063174

What options will I have when my Arlo trial ends?

What options will I have when my Arlo trial ends?

This article applies to:

[Arlo Secure Plans](#)

When the trial that was included with your Arlo device purchase ends, you have the option to purchase a [monthly or annual plan](#) to continue using paid features like 30-Day Video History and Activity Zones.

You can also choose not to have a service plan.

Without a service plan, your Arlo device will continue to have the following features:

- Live Streaming
- Push Notifications
- Two-way Audio
- Auto Zoom & Tracking*
- Local Storage Recording*

*Auto Zoom & Tracking and Local Storage Recording are not available for all Arlo devices.

Note: Without an Arlo plan or trial you will **not** have access to features such as 30-Day Video History and Activity Zones.

For more information, visit:

- [What Arlo subscription plans and cloud recording options are available?](#)
- [How do I change or cancel my Arlo subscription plan?](#)
- [How do I subscribe to Arlo Secure?](#)

For the Arlo Home Security System, including the Arlo Keypad Sensor Hub and Arlo All-in-One Sensor, visit: [What is Arlo Professional Monitoring?](#)

Last Updated:09/11/2024 | Article ID: 000062312

What happens when my Arlo trial expires and I am already subscribed to Arlo Secure?

What happens when my Arlo trial expires and I am already subscribed to Arlo Secure?

This article applies to:

[Arlo Secure Plans](#)

If you are already subscribed to an Arlo (unlimited camera) plan and your Arlo trial expires, the device that was on a trial will automatically be added to your existing plan.

You can also add the device to any new [Arlo Secure Plan](#).

For more information on Arlo plans, visit: [What Arlo subscription plans and cloud recording options are available?](#)

Last Updated:09/11/2024 | Article ID: 000062371

CHANGES/CANCELLATION

How do I change or cancel my Arlo subscription plan?

How do I change or cancel my Arlo subscription plan?

This article applies to:

[Arlo Secure Plans](#) [Arlo Secure App](#)

*This article is for the Arlo Secure App with **Library**. If you have the Arlo Secure App with **Feed**, visit: [How do I change or cancel my Arlo subscription plan? - Arlo Secure 4.0](#)*

When you cancel your Arlo subscription plan, all of your recordings in the Arlo cloud are deleted **within 48 hours** of the subscription end date. If you want to save your recordings, download them within this time period.

You can continue to use the subscription until your account automatically closes **at the end** of your current billing period. You will not be charged again unless you restart your subscription.

- For more information about Arlo Secure plans, visit: [What are the available Arlo subscription plans and how much cloud recording is available?](#)

Note: Arlo subscription plans can be **changed** through the **Android Arlo Secure App** or at **my.arlo.com**. Depending on your region, you may need the new Arlo Secure App experience to take advantage of the features of your new plan.

- Plans cannot be modified using the iOS Arlo Secure App.
- Arlo subscription plans can only be **canceled** at **my.arlo.com**.
- Arlo Support experts and community moderators are **not** able to cancel or change your service.

To change your Arlo subscription plan:

1. Log in to my.arlo.com.
2. Click **Settings > Subscription**.
3. Click **Change Plan** next to the Arlo plan you want to change.
4. Choose the services that you want to add or remove.

Note: Plans are billed either monthly or annually. For annual plans, all other plans in the account must also be annual plans. For more information, visit: [Arlo Secure Subscription Plans](#)

5. Follow the onscreen instructions.

Note:

- For users in US, CA, AU, NZ, HK, JA, SG and SA, you will need to upgrade your Arlo Secure App to get all the updated features of your new plan. For more information, visit: [How do I upgrade my Arlo Secure App to the new Arlo experience?](#)
- Make sure to add your camera to the subscription. Check the **Manage Cameras** section of your account to set the camera to active. For more information, visit: [How do I re-add my Arlo camera or video doorbell to an active Arlo Secure plan?](#)

To cancel your Arlo subscription plan:

1. Log in to my.arlo.com.
2. Click **Settings > Subscription**.
3. Click **Cancel Subscription**.
4. Follow the onscreen instructions.

To cancel your free Arlo trial:

1. Log in to my.arlo.com.
2. Click **Settings > Subscription**.
3. Click **Manage**.
4. Click **Cancel Trial** to cancel a trial for a single camera or click **Cancel All Trials** to cancel the trials on all your cameras at once.
5. Read the notice and confirm your cancellation.

How do I check my current subscription in the Arlo Secure App?

How do I check my current subscription in the Arlo Secure App?

This article applies to:

To check your subscription using the Arlo Secure App:

For the Arlo Secure App with **Feed**:

1. Launch the Arlo Secure App.
2. Tap .
3. Select the Location where the plan is used under Locations and Plans.
4. Tap **Plans**.

For the Arlo Secure App with **Library**:

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap **Subscription**.

For more information, visit: [What Arlo subscription plans and cloud recording options are available?](#)

How do I re-add my Arlo device to an active Arlo Secure plan? - Arlo Secure 4.0

How do I re-add my Arlo device to an active Arlo Secure plan? - Arlo Secure 4.0

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AAD1001](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#)
[VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#)
[VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How do I re-add my Arlo camera or video doorbell to an active Arlo Secure plan?](#)*

Arlo Secure plans support unlimited devices for a single Location set in the Arlo Secure App. If you have recently removed a device from your Arlo account and you want to re-add it to your Arlo Secure plan, simply reinstall the device. The Arlo device will automatically join your existing Arlo Secure plan. For more information on how to install your Arlo device, visit: [How to set up Arlo Cameras - Arlo Secure 4.0](#)

If you have a legacy Arlo Smart plan and have moved to the Arlo Secure 4.0 experience and want to change or activate devices for your subscription plan, you will need to change your plan to an Arlo Secure plan. We recommend Arlo Secure plans as they support unlimited devices at your Location.

If you have an Arlo Secure Single Camera plan, you may subscribe to an additional Arlo Secure Single Camera plan to cover the additional device or subscribe to an Arlo Secure Unlimited Cameras plan to cover all devices at your Location. For more information on Arlo Secure plans, visit: [What are the available Arlo subscription plans and how much cloud recording is available?](#)

How do I change or cancel my Arlo subscription plan? - Arlo Secure 4.0

How do I change or cancel my Arlo subscription plan? - Arlo Secure 4.0 and 5.0

This article applies to:

[Arlo Secure Plans](#) [Arlo Secure App](#)

*This article is for the Arlo Secure App with **Feed**. If you have the Arlo Secure App with **Library**, visit: [How do I change or cancel my Arlo subscription plan?](#)*

When you cancel your Arlo subscription plan, all recordings in the Arlo cloud are deleted **within 48 hours** of the subscription end date. If you want to save your recordings, download them within this time period.

You can continue to use the subscription until your account automatically closes **at the end** of your current billing period. You will not be charged again unless you restart your subscription. For more information about Arlo Secure plans, visit: [What are the available Arlo subscription plans and how much cloud recording is available?](#)

- For existing users, Arlo subscription plans can **only be changed through my.arlo.com**.
- If you subscribed to the new Arlo plans through the in-app payment option, plans can **only be changed or canceled through the Arlo Secure App**.
- Arlo Support experts and community moderators are **not able to cancel or change your service**.

To change your plan on my.arlo.com:

1. Log in to [my.arlo.com](#).
2. Click **Secure > My Arlo Account**.
3. Click **Change Plan** next to the Arlo plan you want to change.

4. Choose the services that you want to add or remove.

Note: Plans are billed either monthly or annually. For annual plans, all other plans in the account must also be annual plans. For more information, visit: [Arlo Secure Subscription Plans](#)

5. Follow the on-screen instructions.

To cancel your plan on my.arlo.com:

1. Log in to [my.arlo.com](#).
2. Click **Secure > My Arlo Account**.
3. Click **Cancel Subscription**.
4. Follow the on-screen instructions.

To cancel your Arlo trial on my.arlo.com:

1. Log in to [my.arlo.com](#).
2. Click **Secure > My Arlo Account**.
3. Click **Change Plan**.
4. Click **Cancel Trial** to cancel a trial for a single camera or click **Cancel All Trials** to cancel the trials on all your cameras at once.
5. Read the notice and confirm your cancellation.

To change your plan using the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap .
3. Select the Location.
4. Tap **Plans**.
5. Tap **Modify Plan**.
6. Follow the on-screen instructions.

To cancel your plan using the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap .
3. Select the Location.
4. Tap **Plans**.

5. Tap **Modify Plan**.
6. Tap **Cancel Plan**.
7. Follow the on-screen instructions.

Last Updated:09/11/2024 | Article ID: 000063052

ARLO SAFE

What is included in my Arlo Safe subscription?

What is included in the Arlo Safe subscription?

This article applies to:

[Arlo Safe Plans](#) [Arlo Safe App](#)

Arlo Safe offers a Free Plan, an Individual Plan, and a Family Plan. Arlo Safe is also available with the [Arlo Premium Plan](#). The ability to automatically notify emergency contacts is offered for free. Additional features are available with paid plans. For more information, visit: [Arlo Safe Plans](#)

- **Note:** Arlo Safe is only available in the US.

Arlo Safe Features:

Alerts to Emergency Contacts:

Automatically notify your emergency contacts when you have an emergency. If needed, they can send help directly to you.

One Tap Protection:

With a quick tap, connect with our professional security experts to get emergency help.

Guardian Mode Protection:

You are never alone. Our professional security experts are with you every step of the way. Simply release a button to get emergency help.

Cloud Witness™ Incident Recording:

Record events as they happen and store them in the cloud for future use.

Crash Detection & Response:

Automatically alert emergency response agents during a car accident to send help quickly.

24/7 Personal Safety Expert:

Triple redundant, five diamond, UL certified monitoring centers ensure you get an immediate response from medically trained, security experts.

Family Place Alerts:

Save your family's most popular locations like school, home, and work. Be notified when members arrive or leave those places.

Family Check-Ins:

Check in with family members and see their location for ultimate peace of mind.

Family Safety Monitoring:

Keep in touch with family members. Locate, live view, text or call directly from the app and send help to them during an emergency.

Unlimited Users:

Invite and connect the entire family, with the Family Plan.

Arlo Safe Widgets:

Enables you to quickly request help with the tap of a button directly from your device home or lock screen. Connects you to a live security expert who will send emergency help directly to you.

	Free	Individual Plan	Family Plan	Premium Plan
Trial Length	-	-	30 Days	30 Days

Users	1	1	Unlimited	Unlimited
Features	Alerts to Emergency Contacts	Alerts to Emergency Contacts	Alerts to Emergency Contacts	Alerts to Emergency Contacts
	-	Guardian Mode and One Tap Protection	Guardian Mode and One Tap Protection	Guardian Mode and One Tap Protection
	-	Cloud Witness™ Incident Recording	Cloud Witness™ Incident Recording	Cloud Witness™ Incident Recording
	-	Crash Detection & Response	Crash Detection & Response	Crash Detection & Response
	-	24/7 Personal Safety Expert	24/7 Personal Safety Expert	24/7 Personal Safety Expert
	-	-	Family Place Alerts	Family Place Alerts
	-	-	Family Check-Ins	Family Check-Ins
	-	-	Family Safety Monitoring	Family Safety Monitoring

	-	-	-	Arlo Secure features including 30-Day Video History, 24/7 Professional Monitoring, 24/7 Emergency Response, Arlo Intelligence, and more
--	---	---	---	---

Last Updated:09/20/2024 | Article ID: 000062713

What Arlo subscription plans and cloud recording options are available? (Europe)

What Arlo subscription plans and cloud recording options are available? (Europe)

This article applies to:

An [Arlo Secure subscription](#) enables you to record in 2K or 4K video resolution, activate advanced object detection, create cloud activity zones, and much more.

- You can purchase a plan for multiple cameras or a single camera.
- This provides a flexible and customizable experience for your Arlo system.

Arlo Secure

With an Arlo Secure subscription, you can record to the Arlo cloud with up to 2K video resolution on a single camera or multiple cameras. Your clips are saved for up to 30 days after recording.

To sign up, visit: [Arlo Secure Subscription Plans](#)

Note: Subscription details can also be found on [my.arlo.com](#) and in the Android Arlo Secure App.

Features:

- 30 Days cloud recording up to 2K resolution
- Person, Vehicle, Animal, and Package Detection
- Cloud Activity Zones
- Interactive Notifications
- Arlo Secure Multi-Camera plans support up to four (4) cameras
- Arlo Secure Single Camera plans support one camera

Note:

- Multi-camera support plans apply only to Arlo cameras at a single residential location and on the same Arlo account.
- Due to hardware limitations, Arlo Ultra cameras cannot stream to the cloud in 2K and simultaneously record locally in quality higher than 2K. However, Arlo Ultra can simultaneously stream to the cloud and locally in 4K.

Arlo Secure Plus

With an Arlo Secure Plus subscription, you can record to the Arlo cloud with up to 4K video resolution on unlimited cameras. Your clips will be saved for 60 days after recording. Arlo Secure Plus is available for unlimited cameras at a individual location. To sign up, visit: [Arlo Secure Subscription Plans](#)

Note: Subscription details can also be found on [my.arlo.com](#) and in the Android Arlo Secure App.

Features:

- All the features of the Arlo Secure plan, plus...
 - 60 Days cloud recording up to 4K resolution
 - Unlimited camera support
 - **Note:** Unlimited camera support plans apply only to Arlo cameras at a single residential location and on the same Arlo account.

- Extended Warranty
 - If you have paid for Arlo Secure Plus for 6 months or more, you can enjoy an extended warranty.
 - Your standard warranty period is extended by up to one year.

How Extended Warranty Eligibility Works

Example 1: Let's say your new Arlo camera has a 12-month warranty. If you subscribe to Arlo Secure Plus for 6 of those months, you are eligible for the extended warranty. We will extend the warranty by 12 months automatically, for a total of 24 months of warranty coverage.

Example 2: Let's say your new Arlo camera has a 24-month warranty. If you subscribe to Arlo Secure Plus for 6 of those months, we will automatically extend the warranty by 12 months. This totals 36 months of warranty coverage.

Note:

- To make an extended warranty claim, you must contact Arlo Support.
 - The Support team will evaluate the warranty claim to ensure that eligibility conditions have been met.
- The Arlo Secure Plus Extended Warranty is only available in Europe.

No Plan

When the trial that was included with your camera purchase ends, you have the option to purchase an Arlo Secure or Arlo Secure Plus Plan to continue using features like cloud recording. You can also choose not to have a service plan.

- For more information, visit: [What options will I have when my Arlo trial ends?](#)

Included features:

Arlo Ultra, Pro series (Pro 3 and later), Essential Series, Go 2, and Video Doorbells:

- Live streaming up to 4K resolution
- Push notifications
- Two-way audio
- Auto Zoom & Tracking*
- Local Storage recording**

Arlo Pro, Pro 2, Q, Q+, Go, Baby, and Arlo Wire-Free (VMC3030):

- Live streaming up to 1080p resolution
- 7-day free cloud recording in up to 1080p resolution, maximum five (5) cameras
- Push notifications
- Two-way audio
- Local Storage recording**

- Auto Zoom & Tracking not available for all Arlo devices.

** - Local Storage requires an Arlo SmartHub or Arlo Base Station for most Arlo cameras.

- For more information, visit: [How do I set up local storage backups using my Arlo SmartHub or Base Station?](#)

CVR (Continuous Video Recording) – 24/7 recording

Some Arlo cameras can record non-stop to the Arlo cloud when plugged into AC power. To enable your Arlo cameras to record 24/7, you need to purchase a CVR plan for each Arlo camera.

- For more information on CVR features, visit: [What is Continuous Video Recording \(CVR\) and how do I use it?](#)

Plan Availability

Arlo Secure and Arlo Secure Plus for Europe are available in the following countries:

- Austria
- Belgium
- Bulgaria
- Croatia
- Cyprus
- Czechia
- Denmark
- Estonia
- Finland
- France
- Germany
- Greece
- Hungary

- Ireland
- Italy
- Latvia
- Lithuania
- Luxembourg
- Malta
- Netherland
- Norway
- Poland
- Portugal
- Romania
- Slovakia
- Slovenia
- Spain
- Sweden
- Switzerland
- United Kingdom

Last Updated:06/14/2024 | Article ID: 000063227

What Arlo subscription plans and cloud recording options are available? (Taiwan)

What Arlo subscription plans and cloud recording options are available? (Taiwan)

This article applies to:

Customers in Taiwan can purchase an Arlo Smart Premier annual plan for the price of NTD 3,380 per year.

For more information, visit: <https://www.netbridgetech.com.tw/arlo-smart-tw/>

Last Updated:06/21/2024 | Article ID: 000063228

What Arlo subscription plans and cloud recording options are available? (Japan, Hong Kong, Singapore)

What Arlo subscription plans and cloud recording options are available? (Japan, Hong Kong, Singapore, South Africa)

This article applies to:

[Arlo Secure Plans](#)

An Arlo Secure subscription enables features like 30-Day Video Cloud Storage, Object Detection, Activity Zones, and more. You can purchase a plan for multiple cameras or a single camera.

Note: This article applies to customers in Japan, Hong Kong, Singapore, and South Africa. For details in other regions, visit:

- [United States](#)
- [Canada, Australia, and New Zealand](#)
- [Europe and United Kingdom](#)
- [Taiwan](#)

Arlo Secure Plans

- **Arlo Basic**

Includes 30-Day Video Cloud Storage, Filtered Alerts, Activity Zones, and Interactive Notifications.

- **Arlo Plus**

Includes Arlo Basic features, Package Detection, Advanced Video AI Object Detection, and Advanced Audio AI Detection.

For more information, visit: [Arlo Secure Plans](#)

When the trial included with your camera purchase ends, you can purchase an Arlo Plan to continue using features like 30-day cloud recording. You can also choose not to have a service plan and still have access to local storage and two-way audio.

- For more information, visit: [What options will I have when my Arlo trial ends?](#)

CVR (Continuous Video Recording) – 24/7 Recording

Some Arlo cameras can record non-stop to the Arlo cloud when plugged into AC power.

- To enable your Arlo cameras to record 24/7, you need to purchase a CVR plan for each Arlo camera.
- For more information on CVR features, visit: [What is Continuous Video Recording \(CVR\) and how do I use it?](#)

Last Updated:09/11/2024 | Article ID: 000063229

What Arlo subscription plans and cloud recording options are available? (Australia, Canada, and New Zealand)

What Arlo subscription plans and cloud recording options are available? (Australia, Canada, and New Zealand)

This article applies to:

[Arlo Secure Plans](#) [Arlo Secure App](#)

An Arlo Secure subscription enables features like 30-Day Video Cloud Storage, Object Detection, Activity Zones, 24/7 Emergency Response, and more. You can purchase a plan for multiple cameras or a single camera.

Note: This article applies to customers in the Australia, Canada, and New Zealand. For details in other regions, visit:

- [United States](#)
- [Europe and United Kingdom](#)
- [Japan, Hong Kong, Singapore, and South Africa](#)
- [Taiwan](#)

Types of Arlo Secure Plans

- **Arlo Basic**
Includes 30-Day Video Cloud Storage, Filtered Alerts, Activity Zones, and Interactive Notifications.
- **Arlo Plus**
Includes Arlo Basic features, Package Detection, Advanced Video AI Object Detection, and Advanced Audio AI Detection.

For more information about available Arlo Secure Plans, visit: [Arlo Secure Plans](#)

When the trial included with your camera purchase ends, you can purchase an Arlo Plan to continue using features like 30-day cloud recording. You can also choose not to have a service plan and still have access to local storage and two-way audio.

- For more information, visit: [What options will I have when my Arlo trial ends?](#)

Continuous Video Recording (CVR)

Some Arlo cameras can record non-stop to the Arlo cloud when plugged into AC power.

- To enable your Arlo cameras to record 24/7, you need to purchase a CVR plan for each Arlo camera.
- For more information on CVR features, visit: [What is Continuous Video Recording \(CVR\) and how do I use it?](#)

47

Secure App (Integrations / Logs / Profile Management)

PROFILE / DEVICE / ACCOUNT MANAGEMENT

Privacy Center FAQs (INTERNAL)

Privacy Center FAQs (INTERNAL)

This article applies to:

What is Privacy?

Privacy setting in the Arlo app let users take control of their data. This will let the users deactivate, delete their own Arlo accounts and data saved in cloud, and control their logins.

What are the new features offered in the Privacy Setting?

- Account Deletion
- Reset and Erase devices
- Disconnect Partners
- Device List

Note: Privacy Center feature availability varies by region.

Who can delete an Arlo account?

Only the admin or main account can delete data and deactivate an Arlo account. Grant access accounts cannot delete another account.

Who can reset and erase Arlo devices from an account?

Only the admin or main account can reset and erase Arlo devices from privacy settings. Grant access users may still delete videos from the library if granted admin privilege.

Is local storage deletion available?

Yes, this feature is available for Base Stations and SmartHubs. Local storage deletion is not available on Go, Go 2 and Q Plus.

What partner services can be disconnected using Privacy settings?

Partners such as Alexa, Google and IFTTT (subject to change in the future) can be disconnected.

Note: Homekit cannot be disconnected. This should be done separately.

How to deactivate or delete an Arlo account using the Arlo app?

To deactivate or delete an account:

1. Open the Arlo app or login to my.arlo.com
2. Tap or click on **Settings**.
3. Tap or click on **Privacy**.
4. Tap or click **Permanently Delete Arlo Account**.

Note: All plans or subscriptions should be cancelled prior to deleting.

How to Reset and Erase a device from the Arlo app?

To Reset and Erase:

1. Open the Arlo app or login to my.arlo.com
2. Tap or click on **Settings**.
3. Tap or click on **Privacy**.
4. Tap or click on **Content** tab.
5. Tap or click on **Reset and Erase Arlo Devices**.
6. Select the device you want to **Reset**, **Erase** or **Reset & Erase**. You may also select **Reset and Erase All Devices** if you want to reset and erase all at one time.

Note: If a device is offline when Reset & Erase is performed,

- For Reset, the device will be removed from the account. The device will require a factory reset before it can be onboarded onto another account.
- For Erase, the Cloud Library will be deleted. Local storage will not be deleted on an offline device.

How to Disconnect Partners using the Arlo app?

To disconnect connected accounts:

1. Open the Arlo app or login to my.arlo.com
2. Tap or click on **Settings**.
3. Tap or click on **Privacy**.
4. Tap or click on **Partners** tab.
5. Tap or click **Connected Accounts**.
6. Tap or click **Remove** to remove an account or **Remove All Connected Accounts** to remove all.

How to view and logout devices connected to the system?

To view the devices list:

1. Open the Arlo app or login to my.arlo.com
2. Tap or click on **Settings**.
3. Tap or click on **Privacy**.
4. Tap or click on **Account** tab.
5. Tap or click on **Active Device Sessions**.

To logout an active session:

1. Follow the steps to view the devices list.
2. Tap or click **Logout** on the device they want to log off or **Log Out of All Active Sessions** to logout on all devices.

Why is the number of logged in devices show differently on my mobile device and my.arlo.com?

When logged into my.arlo.com, the trusted device list will include the browser that the user is logged into, causing the number of devices to increase by one (1).

When the users switches to their mobile device, Android or iOS, the user is logged out of my.arlo.com. The browser no longer appears, causing the number of devices to decrease by one (1).

What to inform customers asking why their library recordings were deleted?

"The Privacy setting in the Arlo app provides our users to have control over their account and content. Once an account is deactivated, all the recordings get deleted permanently. The app

also prompts you about permanent deletion. This includes settings and any content saved in the Arlo cloud. Once deactivated, this information cannot be retrieved.”

Related external KB Article:

- [About the Arlo Privacy Center](#)

Last Updated:07/25/2023 | Article ID: 000062691

How do I download the Arlo Secure App to my mobile device?

How do I download the Arlo Secure App to my mobile device?

This article applies to:

To download the Arlo Secure App to your mobile device, go to the App Store® on your iOS device, or Google Play on your Android device and search for **Arlo Secure**.

You can also download the Arlo Secure App by tapping or clicking the appropriate button below:

App Store® is a registered trademark of Apple Inc.

Google Play and the Google Play logo are trademarks of Google LLC.

Last Updated:07/14/2023 | Article ID: 000063145

What do the icons in the Arlo Secure App mean?

What do the icons in the Arlo Secure App mean?

This article applies to:

[Arlo Secure App](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, please visit: [What do the icons in the Arlo Secure App mean? - Arlo Secure 4.0](#)*

Arlo Secure App icons appear in various places such as the camera feed and Device Settings. Status icons appear on the device card under the camera feed or in the Device Settings.

Status Icons



Sound Detection. If this icon is light gray, sound detection is disabled in the device's currently selected mode. If the icon is black, sound detection is enabled. If the icon is orange, the camera is currently detecting sound.



Motion Detection. If this icon is light gray, motion detection is disabled in the device's currently selected mode. If the icon is black, motion detection is enabled. If the icon is orange, the camera is currently detecting motion.



Wi-Fi Signal Strength. Shows the signal strength for the Wi-Fi connection between the SmartHub/Base Station or Wi-Fi router, and the Arlo device.



USB Device. If this icon is showing, a USB storage device is connected. If the icon is orange, the storage on the USB device is almost full.



SD Card. If this icon is showing, a SD or microSD card is connected. If the icon is orange, the storage on the SD or microSD card is almost full.



Battery. Shows an estimate of your battery charge. For more information about battery icons and notifications, visit: [What do my Arlo camera's battery level icons and notifications mean?](#)



Ethernet Connection. This icon displays when your SmartHub or Base Station is connected to Ethernet.

Camera Feed Icons



Play Button. Tap or click to view a live feed.



Stop. Tap or click to stop a live feed.



Volume. Tap or click to adjust the volume on your Arlo device.



Push to Talk. Tap or click and hold to speak to someone through your Arlo device.



Record. Tap or click to record a live feed.



Snapshot. Tap or click to take a picture of a live feed.



Spotlight. Tap or click to activate an Arlo Light or the spotlight on your camera. Not all cameras have an integrated spotlight. For more information, visit: [How does the spotlight on my Arlo camera work?](#)



Expand. Tap or click to view a live feed in full screen.



Minimize. Tap or click to exit a full-screen recording.

Other Arlo Secure App Icons



Edit (Pencil). Tap or click to edit rules and names of devices.



Settings. Tap or click to access the device settings of a device.



Add. Tap or click to add a new device or other option.



Emergency. Tap or click to Activate Siren, Call a Friend, or activate Emergency Response.



Learn More. Tap or click to learn more about a feature or camera.

Last Updated:04/25/2024 | Article ID: 000062050

How do I change my Arlo email address?

How do I change my Arlo email address?

This article applies to:

[Arlo Secure App](#)

Your email address is the user ID for your Arlo account. If you change your account email, you must confirm your new email to receive alerts.

To change your email address:

For the Arlo Secure App experience with **Feed**:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.

2. Tap  in the Arlo Secure App or click **Settings** on my.arlo.com.
3. Tap or click **Account Profile and Security** below your name at the top of the screen.
4. Tap or click **Name, Email**.
5. Enter the new email address and current password.
6. Tap or click **Save**.

Arlo will send you an email to confirm your email address change.

If you do not receive an email, check your spam or junk folders. Tap or click **Resend Email** to have the verification email sent again.

For the Arlo Secure App experience with **Library**:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click **Settings**.
3. Tap or click **Profile**.
4. Tap **Name, Email** in the Arlo Secure App or click **Change Email Address** on my.arlo.com.
5. Tap **Email Address** if you are using the Arlo Secure App.
6. Enter your new email and current password.
7. Tap or click **Change Email Address**.

Arlo will send you an email to confirm your email address change.

If you do not receive an email, check your spam or junk folders. Tap or click **Resend Email** to have the verification email sent again.

Last Updated:04/30/2024 | Article ID: 4118

How do I edit my Profile in the Arlo Secure App?

How do I edit my Profile in the Arlo Secure App?

This article applies to:

[Arlo Secure App](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [How do I update my Arlo Account Profile photo, name, email, and password? - Arlo Secure 4.0](#)*

You can customize your name in the Arlo Profile settings and add an optional profile picture or address. You can also add two-step verification to your Arlo account.

- For more information, visit: [What is two-step verification and how do I set it up with Arlo?](#)

To edit your profile settings:

1. Launch the Arlo Secure App or log in to [my.arlo.com](#).
2. Tap or click **Settings**.
3. In the Account section, tap or click **Profile**.
4. Tap or click **Edit Profile**.

From the Edit Profile screen, you can enter your name, optionally add a profile photo and home address, and opt-in or out of Arlo news and support updates.

5. When you finish editing your profile, tap **Save** at the bottom of the screen.

Your Profile settings are saved.

To add a profile picture:

1. Launch the Arlo Secure App or log in to [my.arlo.com](#).
2. Tap or click **Settings**.
3. Under the Account section, tap or click **Profile**.
4. Tap or click **Edit Profile**.
5. Tap or click the profile picture at the top of the Edit Profile page.
6. Select **Take Photo** or **Choose from Library**.

Note: If you already have a profile picture, you can also select **Remove Current Photo**.

7. Upload your preferred profile picture.
8. Tap or click **Save** at the bottom of the screen.

Your Arlo profile will now show your profile photo.

Why can't I delete a Location from my Arlo Account?

Why can't I delete a Location from my Arlo Account?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [SH1001](#) [MS1001](#) [VMB5000](#)
[VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#)
[VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

You can delete a Location after all Arlo devices and service plans are removed from the Location.

For details on deleting a Location, visit: [How do I add, edit, or delete a Location in Arlo Secure App 4.0?](#)

You must have at least one Location on your Arlo account. You cannot delete all Locations.

If you are unable to delete a Location:

Ensure you are deleting a Location from your main account.

- Grant access accounts cannot delete a Location

Make sure all Arlo devices are removed from the Location.

- You cannot delete a Location if there are cameras assigned to it
- To remove a device, visit: [How do I remove a device from my Arlo account?](#)

Log out of the Arlo Secure App.

1. Tap **Log Out**.

2. Log back in with your **email address** and **password**.

Force close the Arlo Secure App.

- For iPhone, visit:
 - [Quit and reopen an app on iPhone](#)
- For Android (varies by device):
 - For Samsung, tap **III** and swipe up on the Arlo Secure App
 - For Google, visit: [Find, open & close apps on Android](#)

Log in to the Arlo Secure App using a different device.

- Use a different smartphone or a tablet to log in to the Arlo Secure App
- Log in to my.arlo.com on a web browser

If you are still having issues, visit:

- [Arlo Support](#)

Last Updated:05/10/2024 | Article ID: 000062809

How many cameras are supported on my Arlo account?

How many cameras are supported on my Arlo account?

This article applies to:

[Arlo Secure Plans](#) [Arlo Secure App](#)

The amount of cameras supported on your Arlo account is unlimited with or without an [Arlo Secure plan](#).

- For more information, visit: [What Arlo subscription plans and cloud recording options are available?](#)

While you may add an unlimited amount of cameras to your Arlo account, you must also meet minimum requirements with bandwidth use measured on a per-camera basis.

- For more information, visit: [What are the minimum requirements for installing and using my Arlo system?](#)

You can live stream up to fifteen (15) Arlo cameras at the same time on the Arlo Secure App, or five (5) on [my.arlo.com](#), depending on your system setup.

- For more information, visit: [How many Arlo cameras can I view at the same time?](#)

With an Arlo Secure plan:

- **30-Day Video History**
Securely store your videos recordings on the cloud to view, share, and save from anywhere.
- **Smart Detection**
Alerts that filter out unwanted motion and tell you when a person, animal, vehicle, or package is detected.
- **Interactive Notifications**
Get more details with animated previews and take immediate action with one tap from your phone's lock screen.
- **24/7 Emergency Response**
Quickly get help from 24/7 Live Security Experts with one tap who will immediately send first responders to your home.
- **Arlo Intelligence**
Receive notifications for Smart Detection, Advanced Video, and Advanced Audio Detection for the maximum amount of protection.
- **Activity Zones**
Highlight specific areas in your camera's view to only get alerts for events that matter most.
- **Priority Care and Support**
Connect with Arlo technical experts via phone, live chat, or through the support center.

Without an Arlo Secure plan, you will still have access to the following features:

- Live Streaming
- Push Notification
- Two-way Audio
- Auto Zoom & Tracking (not available on all cameras)
- Local Storage Recording (not available on all cameras)

Last Updated:09/11/2024 | Article ID: 1108731

How do I prepare my Arlo System for the new Arlo experience?

How do I prepare my Arlo system for the new Arlo experience?

This article applies to:

[AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#)
[VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#)
[ABC1000](#)

The new Arlo experience is a complete redesign of the Arlo Secure App with amazing new features and new looks for your favorites. There are new tools to give you better control, customization, and access to immediate help during emergencies.

Note: Availability of the new Arlo experience depends on your region and the devices on your current account.

To prepare your Arlo system for the new Arlo experience:

Ensure all your Arlo devices are using the most current firmware available.

For more information, visit:

- [What do I need to know about Arlo camera firmware updates?](#)

- [How do I update my Arlo firmware manually?](#)

Make sure all Arlo devices on your account are powered on and have a battery level of 15% or more.

For more information, visit:

- [What do the Arlo camera battery level icons and notifications mean?](#)
- [How do I charge my Arlo Ultra 2, Ultra, Pro 5S, Pro 4, Pro 3, or Go 2 camera with the magnetic charger?](#)
- [How long should I charge my Arlo camera?](#)
- [How do I charge my Arlo Essential wire-free camera?](#)
- [My Arlo Pro or Arlo Pro 2 camera battery isn't charging; what do I do?](#)

Make sure all Arlo devices on your account are online.

For more information, visit:

- [My Arlo camera is offline; how can I troubleshoot it?](#)
- [My Arlo SmartHub or Base Station is offline; how can I troubleshoot it?](#)
- [Arlo Doorbell Offline: How to Troubleshoot](#)
- [My Arlo Go 2 camera was working, but now it is offline; what should I do?](#)
- [Why is my Arlo Chime or Chime 2 offline?](#)

To upgrade to the new Arlo experience, visit: [How do I upgrade my Arlo Secure App to the new Arlo experience?](#)

Note: If you granted access to friends on your Arlo account, they will also need to upgrade their Arlo Secure App to the new Arlo experience. For more information on the process of adding users and allowing access rights, visit: [How do I add friends on my Arlo Secure App?](#)

Last Updated:04/25/2024 | Article ID: 000062796

How do I change the payment method for my Arlo account?

How do I change the payment method for my Arlo account?

This article applies to:

[Arlo Secure Plans](#) [Arlo Secure App](#)

Arlo accepts multiple payment methods for orders placed on [Arlo.com](#), and Arlo subscriptions on the Arlo Secure App and [my.arlo.com](#).

- For more information about Arlo subscriptions, visit: [What Arlo subscription plans and cloud recording options are available?](#)

You can use the following payment options:

- Visa
- MasterCard
- Apple Pay (US and Australia only)
Note: Apple Pay is for Visa, Mastercard, and American Express only.
- PayPal (US, Canada, UK, EU, Australia, Hong Kong, Singapore, Japan, and New Zealand only)
- American Express (US and Canada only)
- Discover (US only)

For existing users, Arlo subscription plans can only be changed through my.arlo.com. If you are a new subscriber and you subscribed through the in-app payment option, the payment method can only be changed through your iOS or Android mobile device settings.


To change the payment method for your Arlo account:

Using a web browser:

1. Log in to [my.arlo.com](#).

Note: Use the Safari browser when using Apple Pay on a Mac desktop or laptop.

2. Click the drop-down on the upper-left of the screen and select **My Arlo Account** to manage your subscription.

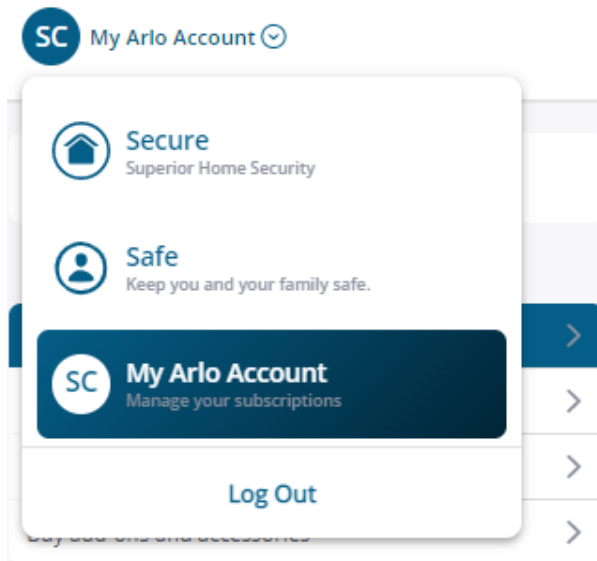

3. Select **Arlo Secure** or **Arlo Safe**.
4. Click **Update** in **Payment Information**.
5. Follow the on-screen instructions to change your payment method.

Using an Android mobile device:

1. Launch the Play Store.
2. Tap the Profile icon.
3. Tap **Payments & Subscriptions**.
4. Tap **Payment Methods**.
5. Follow the on-screen instructions to change your payment method.

Using an iOS mobile device:

1. Launch the **Settings** App.
2. Tap the Profile name at the top of the screen.
3. Tap **Payments & Shipping**.
4. Select a **Payment Method** or tap **Add Payment Method**.
5. Follow the on-screen instructions to change your payment method.

What do I need to know about Arlo camera firmware updates?

What do I need to know about Arlo camera firmware updates?

This article applies to:

[Arlo Secure App](#)

Do I need to do anything to keep my camera on the latest version?

- No, for your convenience, Arlo cameras will update their firmware automatically.
- If you have a camera that has been offline, or want an immediate update, you can also update your firmware manually through the Arlo Secure App.
- For more information, visit: [How do I update my Arlo firmware manually?](#)

Does my camera need to be charged for a firmware update?

- Yes. Your camera needs to have at least 15% battery.
- Also, camera needs to be online and connected to an Arlo SmartHub, Base Station, or Wi-Fi router.

Note: If a firmware update is released while your camera is turned off or the battery is low, the firmware update happens automatically within 24 hours after you turn the camera back on, ensure that it is connected to the Arlo SmartHub or Base Station, and ensure that the battery is not low.

- Arlo Go firmware updates happen automatically as long as the camera is connected to the LTE network, powered on, and has at least 15% battery.
- Your camera might go offline if it was turned off or had less than 15% battery during a firmware update. If this happens, recharge or replace the low battery, make sure that the camera is on, and then resync the camera with the Arlo SmartHub or Base Station. The firmware update starts automatically.

What time does the firmware update?

- The firmware update happens between 3:00 a.m. – 5:00 a.m. based on your time zone to minimize camera downtime during the day.
- For information about updating your firmware manually, visit: [How do I update my Arlo firmware manually?](#)

Does the Arlo SmartHub or Base Station need to be connected to power, internet, or Wi-Fi during a firmware update?

- Yes. Your Arlo SmartHub or Base Station needs to be connected to power, internet, or Wi-Fi during a firmware update.

Can I view my camera during a firmware update?

- No. You cannot view your camera's live stream until the firmware is updated, but motion and sound detection still work and your cameras still record based on the currently selected mode.

What is an indication from my Arlo camera when a firmware update is happening?

- While the firmware is downloading, the LED on the camera alternates blue and amber.
- After this, the camera LED turns off for about one to two minutes while the camera installs the firmware.
- After the camera firmware update finishes, the camera syncs to the Arlo SmartHub, Arlo Base Station, or Wi-Fi router, and the LED blinks blue rapidly.
- **WARNING:** Do not open the battery door, remove the battery, or interrupt power while an Arlo camera is updating and installing firmware.

Last Updated:06/03/2024 | Article ID: 2160

How do I update my Arlo firmware manually?

How do I update my Arlo firmware manually?

This article applies to:

*This article is for the Arlo Secure App with **Library**. If you have the Arlo Secure App with **Feed**, visit: [How do I update my Arlo firmware manually? - Arlo Secure 4.0](#)*

Firmware updates are released automatically to all connected Arlo devices.

- Automatic updates happen between 3:00 a.m. and 5:00 a.m. to minimize camera downtime.
- You can wait until the update happens automatically, or you can update your firmware manually.
- During firmware updates, your camera will continue to detect motion and sound, and your camera still records based on the currently selected mode.

To update your Arlo device firmware manually:

1. Launch the Arlo Secure App or log in to my.arlo.com.
2. Tap or click **Settings > My Devices**.
3. Select the device that you want to update.
4. Tap or click **Device Info > Firmware > Update**.

WARNING: Do not open the battery door or remove the battery while an Arlo camera is updating and installing firmware.

5. Wait for the camera firmware update to complete.

While the firmware is downloading, the LED on the camera blinks alternating blue and amber. After this, the camera's LED turns off for about one to two minutes while the camera installs the firmware. After the camera firmware update finishes, the camera syncs to the SmartHub or Base Station again and the LED blinks blue rapidly

Note: For Arlo Q, Q Plus, Go and Go 2, the camera's LED blinks amber and blue while the firmware is downloading and installing. After the firmware is installed, the camera reboots and the LED is off. When the LED lights again and the

pattern stops changing, your camera is available to stream.

Note: If you turn off your Arlo Go camera's LED in the camera settings, the LED does not blink to show that a firmware update is in progress. While the LED is turned off, always make sure that you can view your camera live from the Arlo Secure app or a web browser before interrupting power to the camera. If you remove the battery or otherwise interrupt power while a firmware update is in progress, your camera might become unusable.

To update your Arlo SmartHub or Base Station firmware manually:

1. Launch the Arlo Secure App or log in to my.arlo.com.
2. Tap or click **Settings > My Devices**.
3. Select your SmartHub or Base Station.
4. Tap or click **Device Info > Firmware > Update**.

WARNING: Do not turn off your SmartHub or Base Station while the firmware update is in progress.

5. Wait for the Arlo SmartHub or Base Station firmware update to complete.

The Arlo SmartHub LED pattern is alternating blue and amber like most cameras. When the SmartHub is back online and LED light is showing solid blue, the firmware update is complete. The Arlo Base Station LED blinks green while the firmware is downloading and installing. After the firmware is installed, the Base Station reboots and the Power LED lights amber. When the Power and Internet LEDs light solid green, the firmware update is complete.

Do not turn off or disconnect your Arlo device while a firmware update is in progress. Wait for your Arlo cameras to be viewable in your Devices feed before powering off or disconnecting any of your Arlo devices.

- For more information on SmartHub or Base Station LED patterns, visit: [What do the LEDs on my Arlo SmartHub or Base Station mean?](#)
- For more information about camera firmware updates, visit: [What do I need to know about Arlo camera firmware updates?](#)
- For more information how to troubleshoot Firmware Update Error 4208, visit: [How to troubleshoot Firmware Update Error 4208](#)

Note: Arlo firmware updates happen automatically as long as the device is connected to an Arlo SmartHub, Arlo Base Station, or Wi-Fi network, and has at least 15% battery charge prior to updating.

Last Updated:06/03/2024 | Article ID: 4736

How do I enable Bluetooth on my mobile device for the Arlo Secure App?

How do I enable Bluetooth on my mobile device for the Arlo Secure App?

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)

The Arlo Secure App uses Bluetooth on your mobile device to discover and install 2nd Generation Arlo Essential Cameras, 2nd Generation Arlo Video Doorbells, and the Arlo Wired Floodlight Camera.

iOS

To turn on Bluetooth on your iOS device:

1. Go to **Settings** > **Bluetooth**, and turn on Bluetooth.

To enable the Bluetooth permission on your iOS device:

1. Go to **Settings** > **Privacy & Security**, and tap **Bluetooth**.
2. Tap **Arlo Secure** to enable the Bluetooth permission.

Android

To turn on Bluetooth on your Android device:

1. Swipe down from the top of the screen.
2. Tap **Bluetooth**.

Note: In addition to Bluetooth, Android versions 8-11 require **Location** to be enabled.

To turn on Location on your Android device:

1. Swipe down from the top of the screen.
2. Tap **Location**.

To enable permissions on your Android device:

Note: Instructions may vary by device and Android version. Android versions 8-11 require the **Location permission**. Android versions 12 and 13 require the **Nearby devices permission**.

1. Go to **Settings > Apps**.
2. Tap **Arlo Secure**.
3. Tap **Permissions**.
4. Tap **Location**.
5. Tap **Allow all the time**.
6. Tap the back arrow.
7. Tap **Nearby devices**.
8. Tap **Allow**.

Last Updated:09/30/2024 | Article ID: 000063162

How do I change the displayed temperature to Celsius or Fahrenheit on my Arlo system?

How do I change the displayed temperature to Celsius or Fahrenheit on my Arlo system?

This article applies to:

[MS1001](#) [ABC1000](#)

You can change the units of temperature measurement for your Arlo All-in-One Sensor and Arlo Baby camera.

To change the displayed temperature to Celsius or Fahrenheit:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap  in the Arlo Secure App or click **Settings** on my.arlo.com.
3. Tap or click your Location name under LOCATIONS AND PLANS.
4. Tap or click **Location Settings**.
5. Select **Fahrenheit (°F)** or **Celsius (°C)**.

Last Updated:05/17/2024 | Article ID: 000062899

Why am I unable to upgrade my Arlo Secure App to the new Arlo experience?

Why am I unable to upgrade my Arlo Secure App to the new Arlo experience?

This article applies to:

[Arlo Secure App](#) [FLW2001](#) [AVD4001](#) [AVD3001](#) [VMC4060P](#) [VMC3060](#) [VMC2060](#) [VMC3050](#)
[VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#)
[ABC1000](#)

There are a few reasons why you might be unable to upgrade your Arlo Secure App to the new Arlo experience:

The new Arlo experience will not be released to all regions at the same time.

- Release dates vary by region.
- The Arlo Secure App will notify you when the new Arlo experience is available.

The new Arlo experience will not be released to all users in a particular region at the same time.

- The new Arlo experience will be released to batches of users over time.
- The Arlo Secure App will notify you when the new experience is available.

Arlo Go Cameras are not currently compatible with the new Arlo experience at this time, but will be at a future date not yet determined.

- Arlo Go Camera
Model number: VML4030

For more information, visit:

- [How do I prepare my Arlo System for the new Arlo experience?](#)
- [How do I upgrade my Arlo Secure App to the new Arlo experience?](#)

Last Updated: 10/08/2024 | Article ID: 000062795

What is the new Arlo experience?

What is the new Arlo experience?

This article applies to:

[Arlo Secure App](#)

The new Arlo experience is a complete redesign of the Arlo Secure App with amazing new features and new looks for your favorites. There are new tools to give you better control, customization, and access to immediate help during emergencies.

Features:

- **Event Feed:** View in-depth details like, who accessed a door or who Armed or Disarmed your system.
- **Notifications:** See what triggered an alert from your phone so you can activate the siren, call a friend, or request emergency response, from anywhere.
- **Emergency Response:** 24/7 Live Security Experts monitor your home, so you don't have to.
- **Dashboard:** Personalize your dashboard with your favorite security widgets for quick access to Arlo devices and information.
- **Modes:** Quickly and easily control arm, disarm, and standby modes with one-tap.
- **Locations:** Manage your security systems and customize settings, emergency response, and sirens for each address.
- **Automations:** Create schedules for hands-free arming and disarming of your security system.

What has changed from the previous Arlo experience?

The menu at the bottom of your screen includes:

- Dashboard
- Feed
- Emergency
- Devices
- Routines

The Library is now known as Feed. The Feed still has your cloud recordings and doorbell messages. Feed will now also include alerts for your All-in-One Sensors, and changes to your Routines, Modes, and Automations.

- For more information, visit: [How do I use the Feed in my Arlo account?](#)

A Location switcher is at the top of your screen to select locations where you may have set up Arlo devices, such as your permanent residence or vacation cabin.

- For more information, visit: [What are Locations in the Arlo Secure App and how do I use them?](#)

Devices shared with you by friends or family will appear in their own location, separate from your own. Use the location switcher to view cameras shared with you.

Emergency Response has moved to the bottom menu and is labeled Emergency.

- For more information, visit: [How do I dispatch Emergency Response services from the Arlo Secure App?](#)

Devices can now be accessed from the Devices menu or the all-new customizable Dashboard that includes widgets for quick access to Arlo devices and information.

The Dashboard will begin blank, and needs to be set up on each mobile device from which you access your Arlo account.

- For more information, visit: [What is the Dashboard on my Arlo Secure App and how does it work?](#)

Modes are now found near the top of your screen. The available Modes are labeled as Arm Away, Arm Home, and Standby. Configuration of Modes and Rules is now controlled under the Routines menu.

- For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

Last Updated:02/24/2024 | Article ID: 000062797

Locations

What are Locations in the Arlo Secure App and how do I use them?

What are Locations in the Arlo Secure App and how do I use them?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [MS1001](#)
[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#)
[VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#)

[VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)
[VML2030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

Arlo Secure App 4.0 and 5.0 enables you to add multiple Locations in one Arlo account. If you have multiple devices in different areas, you can group your devices based on physical location, such as Home, Office, or Cabin. These Locations can also be shared to your friends.

Important reminders when setting up a Location:

- You must have at least one Location on your Arlo account.
- Your device must belong to a Location upon installation.
- Make sure the Arlo Secure App is granted location permissions in your mobile device settings.

Can I add a device to a Location?

Yes. You can add a device to any Location. In the Arlo Secure App, select the Location using the location switcher, then add the device. For more information, visit: [How to add an additional Arlo device to an existing Arlo system](#)

Note: Only the owner of the Arlo device and Location can add devices. Shared users cannot add a device to a shared Location. For more information, visit: [What privileges do my friends have when I grant them access rights in my Arlo account?](#)

Can I move a device from one Location to another?

Yes. You can remove a device and add it to a different Location.

Note: You can only move Arlo Ultra, Arlo Pro, Arlo Pro 2, Arlo Pro 3, and Arlo Wire-Free cameras into a Location with an Arlo SmartHub or Arlo Base Station.

Can I delete a Location?

Yes. Locations can be deleted but you must have at least one Location in your Arlo Secure App. You must also make sure that there are no devices in the Location prior to deleting. You cannot delete a Location with devices.

To add, edit, or delete a Location in Arlo Secure App 4.0, visit: [How do I add, edit, or delete a Location in the new Arlo Secure App experience?](#)

How many Locations can I create in my Arlo account?

You can set up as many Locations as you want on your Arlo account as long as it is in the same country the account is registered to. For example, if you have a US based account, you can only assign a US address to the Location.

What address should I use when defining my Location?

You must use your exact physical address. The address will be used for Emergency Response.

For more information, visit: [What is the Arlo Emergency Response feature and how does it work?](#)

Note: Emergency Response is only available for [Arlo Premium subscribers](#) in the United States.

Does my Arlo Premium plan or Professional Monitoring apply to multiple Locations?

No. Each Location in your Arlo Secure App requires a separate subscription for service.

Last Updated:09/20/2024 | Article ID: 000062778

How do I switch my Location in the Arlo Secure App?

How do I switch my Location in the Arlo Secure App?

This article applies to:


[FLW2001](#) [AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#)
[MS1001](#) [LBB1001](#) [KB1001](#) [SLB1001](#) [NT1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#)
[VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

You can view and manage your devices based on Locations in Arlo Secure App 4.0.

- For more information on Locations, visit: [What are Locations in the Arlo Secure App and how do I use them?](#)
- To add additional Locations, visit: [How do I add, edit, or delete a Location in Arlo Secure App 4.0?](#)

To switch Locations:

1. Launch the Arlo Secure App.
2. Tap  at the top of the screen and select the desired Location (Office, Home, Cabin, etc.).

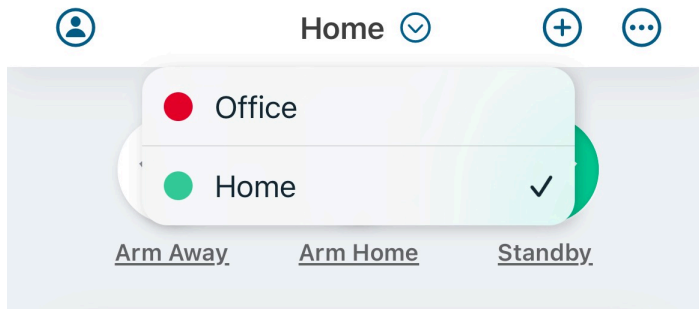

Last Updated:05/24/2024 | Article ID: 000062808

Devices

What is the Devices tab in the Arlo Secure App?

What is the Devices tab in the Arlo Secure App?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [MS1001](#)
[VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#)
[VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#)
[VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)
[VML2030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

The Devices tab in the Arlo Secure App provides access to all of your Arlo devices for your Location. If you have Arlo devices in more than one Location use the Location switcher to find the rest of your devices. For more information on Locations, visit: [How do I switch my Location in the Arlo Secure App?](#)

On the Devices tab you can:

- Tap or click the Play icon in the center of the Device card to livestream your camera
- Tap or click elsewhere on the Device card to see the Device Detail screen
- Tap or click the Add icon  to add additional Arlo devices
- Tap or click the Edit icon  to edit or remove an Arlo device
- Tap or click the Edit icon  and then the Settings icon  to change Device Settings

If you would like to have a customized view with only the devices you want to see most often, you may also set up a Dashboard within the Arlo Secure App. For more information, visit: [What is the Dashboard on my Arlo Secure App and how does it work?](#)

Last Updated:05/10/2024 | Article ID: 000062929

How do I remove a device from my Arlo account?

How do I remove a device from my Arlo account?

This article applies to:

[AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#)
[VMC4041P](#) [VMC4050P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VML2030](#)
[VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App with **Library**. If you have the Arlo Secure App with **Feed**, visit: [How do I remove a device from my Arlo account? - Arlo Secure 4.0](#)*

WARNING: Removing a device from your account erases all modes and settings on that device and resets the device to factory default settings. If you remove a device from your account and later add it back, you must complete the setup process just like you did when you set up your system for the first time.

To remove a device from your Arlo account:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click **Settings**.
3. Tap or click **My Devices** and select the device that you want to remove.
4. Scroll to the bottom of the page and tap or click **Remove Device**.
5. Tap or click **Yes** to confirm that you want to remove the device.

Note: If you remove a SmartHub or Base Station from your account, all the cameras synced to that SmartHub/Base Station are deleted from your account at the same time.

To remove all devices from your Arlo account and erase your recordings:

1. Launch the Arlo Secure App or log in to your Arlo account at arlo.com.
2. Tap or click **Settings**.
3. Tap or click **Privacy** to open the [Arlo Privacy Center](#).
4. Tap or click **Content**.
5. Tap or click **Erase & Reset Arlo Devices**.
6. Follow the prompts to confirm that you want to erase and reset all your Arlo devices.

Note: Privacy Center feature availability varies by region.

Follow the new device setup process to add the device back to your Arlo account. For more information, visit: [How to add an additional Arlo device to an existing Arlo system?](#)

Last Updated:08/13/2024 | Article ID: 1713

How do I deactivate a camera from my Arlo account?

How do I deactivate a camera from my Arlo account?

This article applies to:

If you have more cameras than your subscription plan supports, you might need to deactivate a camera.

For more information about subscription plans, visit [What are the available Arlo subscription plans and how much cloud storage is available?](#).

To deactivate a camera from your Arlo account:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click **Settings > Subscription > Manage Camera**.
3. Tap or click and hold the three lines to the right of the camera that you want to deactivate.
4. Drag the selected camera to the **Drag a camera here to deactivate** field.
5. Tap or click **Continue**.

Your camera is deactivated.

Last Updated:05/09/2024 | Article ID: 1113092

Dashboard

How do I add or remove a widget to the Dashboard in my Arlo Secure App?

How do I add, remove, or rearrange widgets to the Dashboard in my Arlo Secure App?

This article applies to:

[Arlo Secure App](#)

Dashboard widgets give you quick access to the devices and information you need most. You can choose your favorites from the library of widgets.

Widget examples include:

- Camera cards for your Arlo Cameras and Video Doorbells
- Information cards for your Arlo All-in-One Sensors and other devices that show items such as open/close status, motion detection, water leak status, temperature, etc.

To add a widget for the first time:

1. Launch the Arlo Secure App.
2. Tap **Dashboard**.
3. Tap **Add a Widget**.
4. Select the device you want to create the widget for.
5. Tap **Next**.
6. Choose the widget for your device. Examples include:
 - Large or Small Camera Widget
 - Water, Temperature, Motion, Light, etc.
7. Tap **Next**. The Dashboard with widget displays.

To add additional widgets:

1. Launch the Arlo Secure App.
2. Tap **Dashboard**.
3. Tap .
4. Tap .
5. Select the device you want to create the widget for.
6. Tap **Next**.
7. Choose the widget for your device. Examples include:
 - Large or Small Camera Widget
 - Water, Temperature, Motion, Light, etc.
8. Tap **Next**.

9. Tap **Done**. The Dashboard with new widget displays.

To rearrange widgets:

1. Launch the Arlo Secure App.
2. Tap **Dashboard**.
3. Tap .
4. Tap and hold the widget, then drag and drop the widget to the desired location.
5. Tap **Done**. The updated Dashboard displays.

To remove a widget:

1. Launch the Arlo Secure App.
2. Tap **Dashboard**.
3. Tap .
4. Tap  on the widget you want to remove.
5. Tap **Delete**.
6. Tap **Done**. The Dashboard with removed widget displays.

Last Updated:10/10/2024 | Article ID: 000062914

Why does my Dashboard have no widgets on my Arlo Secure App?

Why does my Dashboard have no widgets on my Arlo Secure App?

This article applies to:

[VMB3000](#)

[VMB3010](#)

[VMB3500](#)

[VMB4000](#)

[VMB4500](#)

[VMB4540](#)

[VMB5000](#)

[VMC4040P](#)

[AVD1001](#)

[FB1001](#)

[VMC2030](#)

[VMC2020](#)

[AVD2001](#)

[VMC2032](#)

[VMC4041P](#)

[VMC4050P](#)

[VMC5040](#)

[VMC2040](#)

[VMC4060P](#)

[MS1001](#)

[SH1001](#)

The Dashboard is the main screen that displays when you open the Arlo Secure App. The Dashboard is fully customizable so that you can view the Arlo devices that matter most to you. The Dashboard setup is customized for each mobile device, and each Arlo account.

Your dashboard setup is tied to both the Arlo Secure App instance on the mobile device where the setup took place and the Arlo account used to log in. If you set up your dashboard on your mobile device, and you log in on a different mobile device with an Arlo Secure App, your Dashboard on your different device will be empty. Similarly, if you log into a different account for your Arlo system, you will also see an empty dashboard. Your devices and

other widgets will still be available in other areas such as Devices, Feed, Routines, etc.

Similarly, if you uninstall the Arlo Secure App from your mobile device, or clear app data for the Arlo Secure App, the Dashboard setup will be lost on that device.

You may also set up your Dashboard by visiting [arlo.com](#).

For more information, visit the following:

- [How to Use the Dashboard on my Arlo Secure App and how does it work?](#)
- [How do I add or remove a widget to the Dashboard in my Arlo Secure App?](#)

What is the Dashboard on my Arlo Secure App and how does it work?

What is the Dashboard on my Arlo Secure App and how does it work?

This article applies to:

[Arlo Secure App](#)

The Arlo Secure App Dashboard is customizable and allows you to add widgets for Arlo devices.

- Widgets can be added for Arlo devices such as Arlo Cameras, Arlo Video Doorbells, and Arlo All-in-One Sensors.

Dashboard widgets give you quick access to devices and information.

- You can choose your favorites from the library of widgets.
- Widgets display in the middle of the screen under Arm Away, Arm Home, and Standby.
- For more information, visit: [How do I add or remove a widget to the Dashboard in my Arlo Secure App?](#)

The Dashboard also allows you to create and select a Location for your devices such as Home or Work.

- Each Location selected will have its own Dashboard.
- The Location name displays at the top of your Dashboard.
- You can select different Locations which have unique Dashboards for each Location you create.
- For more information, visit:
 - [What are Locations in the Arlo Secure App and how do I use them?](#)
 - [How do I create, delete, or edit a Location in the Arlo Secure App?](#)

The Dashboard also provides access to different modes for your Arlo system that represent a different level of security.

- The security modes include:



Arm Away



Arm Home



Standby

- For more information on modes, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

Last Updated:05/22/2024 | Article ID: 000062915

Emergency Response

How do I cancel Emergency Response dispatch on the Arlo Secure App?

How do I cancel Emergency Response dispatch on the Arlo Secure App?

This article applies to:

Arlo Emergency Response allows you to quickly get help from first responders in an emergency. This service is available 24/7 to ensure proper help is on the way to help address the situation.

To access this feature, you need an Arlo Secure subscription plan. To learn more, visit: [Arlo Secure Plans](#)

To cancel Emergency Response dispatch:

1. Tap **Emergency** at the bottom of your screen.
2. Tap **Cancel Fire**, **Cancel Police**, or **Cancel Medical**.

3. Tap **Yes, Cancel...** to confirm.

Once the request is successfully canceled, you will see a confirmation message.

Last Updated:05/10/2024 | Article ID: 000062920

What is the Arlo Emergency Response feature and how does it work?

What is the Arlo Emergency Response feature and how does it work?

This article applies to:

[Arlo Secure App](#)

This article is for users with an existing Arlo Secure Plus or Arlo Safe & Secure Pro plan, and are using the app version with **Library**. If you are not subscribed to the plans mentioned above, and are using the app version with Library, you need to upgrade to the new Arlo Secure App experience and subscribe to a Premium plan. For more information about upgrading your Arlo Secure App, visit: [How do I upgrade my Arlo Secure App to the new Arlo experience?](#)


For users with **Feed**, visit: [What is the Arlo Emergency Response feature and how does it work? - Arlo Secure 5.0](#)

With Emergency Response, you have one-tap access to fire, police, or medical responders from the Arlo Secure App.

- Emergency Response is available for Arlo Secure Plus, Arlo Safe & Secure Pro and Premium subscribers in the United States only.

How Emergency Response Works

If you see something concerning in your Arlo motion alert, press and hold the notification to access Emergency Response.

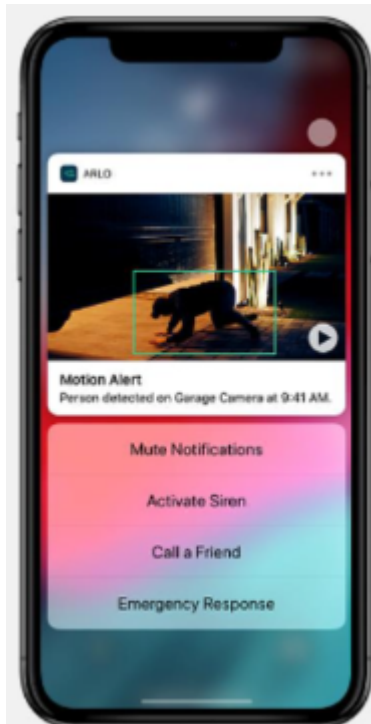

Then choose from these options:

- **Fire**
 - Arlo's 24/7 Emergency Response monitoring team calls the fire department for you and provides the location information you set in the Arlo Secure App.
- **Police**
 - Arlo's 24/7 Emergency Response monitoring team calls the police department for you and provides the location information you set in the Arlo Secure App.
- **Medical**
 - Arlo's 24/7 Emergency Response monitoring team calls emergency medical responders for you and provides the location information you set in the Arlo Secure App.

After emergency responders are dispatched to your home, Arlo's 24/7 monitoring team provides updates to you via your preferred method of communication (text or call). In non-emergency situations, you can also call a friend from the Arlo Secure App. The Call a Friend option automatically calls a designated friend or family member from your phone's contacts.

Set up Emergency Response

To access Emergency Response, you need to subscribe to a Premium plan. For more information, visit: [How do I subscribe to Arlo Secure?](#)

To get started, set up your Emergency Response Location in the Arlo Secure App. This information helps emergency responders locate your home or property. You can include your physical address, directions to your home, gate access code, medical information of family members, pet details, and more.

To set up an Emergency Response location:

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap **Emergency Response**.
4. Continue through the prompts to choose an icon for your location, input your family's details, and set a descriptive name for your location, like Lake Street House.

If you need to grant access to emergency response to someone else, visit: [How do I add friends on my Arlo Secure App?](#)

Last Updated:09/20/2024 | Article ID: 000062594

4.0

How do I upgrade my Arlo Secure App 4.0 to the new experience?

How do I upgrade my Arlo Secure App to the new Arlo experience?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [MS1001](#)
[LBB1001](#) [KB1001](#) [SLB1001](#) [NT1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#)

[VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#)
[VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

The new Arlo experience is a complete redesign of the Arlo Secure App with amazing new features and new looks for your favorites. There are new tools to give you better control, customization, and access to immediate help during emergencies.

The new Arlo experience will not be released to all regions at the same time.

- Release dates vary by region.
- The Arlo Secure App will notify you when the new Arlo experience is available.

The new Arlo experience will not be released to all users in a particular region at the same time.

- The new Arlo experience will be released to batches of users over time.
- The Arlo Secure App will notify you when the new Arlo experience is available.

You are eligible to upgrade to the new Arlo experience when your Arlo Secure App displays a message to upgrade.

- When you receive an in-app message that the new Arlo experience is available, tap **Upgrade Now**.

Before you upgrade to the new Arlo experience, you will need to:

- Make sure all Arlo devices on your account are online.
- Ensure all your Arlo devices are using the **most current firmware** available.
- Make sure all Arlo devices on your account are **powered on** and have a **battery level of 15%** or more.
- For more information, visit:
 - [How do I prepare my Arlo System for the new Arlo experience?](#)
 - [What is the new Arlo experience?](#)
 - [Why am I unable to upgrade my Arlo Secure App to the new Arlo experience?](#)

Important Notes:

- The upgrade to the new Arlo Secure App experience is free of charge.
- Once you upgrade your Arlo Secure App to the new Arlo experience, you will not be able to revert your app to the previous experience.
- Currently, Arlo Go Cameras are not compatible with the new Arlo experience.
 - For more information, visit: [I am unable to install my Arlo Go Camera](#)
- If you have set up custom modes, they will not transfer over to the new experience.
 - For more information about the new Arlo modes, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

To upgrade to the new Arlo experience:

1. Launch the Arlo Secure App.
2. Tap **Upgrade Now**.
3. Read and swipe through the carousel of screens about personalizing your home security with new tools and features.
4. Tap **Start Upgrade**.
5. When the **Ready to upgrade?** message displays, tap **Upgrade**.
6. If you receive warnings regarding firmware, devices offline, custom modes, or unsupported devices; tap **Maybe Later** and address the issues listed in the warnings or tap **Upgrade Anyways** if you are ok with proceeding with the upgrade.

Note: If a device is offline, it will need to be reset to defaults and re-added after you upgrade to the new experience. For more information, visit: [How to factory reset Arlo devices](#)

7. Tap **Start Upgrade**.
8. Tap **Finish**.
9. If the upgrade could not be completed, tap **Try Again** or **Need Help**.

For more information on the new Arlo experience, visit:

- [What is the Dashboard on my Arlo Secure App and how does it work?](#)
- [What are Locations in the Arlo Secure App and how do I use them?](#)
- [How do I use the Feed in my Arlo account?](#)
- [About Arlo Routines, Modes, Rules, and Automations](#)
- [How do I dispatch Emergency Response services from the Arlo Secure App?](#)

Last Updated:08/14/2024 | Article ID: 000062798

What is new in the Arlo Secure App 4.0?

What is the new Arlo experience?

This article applies to:

[Arlo Secure App](#)

The new Arlo experience is a complete redesign of the Arlo Secure App with amazing new features and new looks for your favorites. There are new tools to give you better control, customization, and access to immediate help during emergencies.

Features:

- **Event Feed:** View in-depth details like, who accessed a door or who Armed or Disarmed your system.

- **Notifications:** See what triggered an alert from your phone so you can activate the siren, call a friend, or request emergency response, from anywhere.
- **Emergency Response:** 24/7 Live Security Experts monitor your home, so you don't have to.
- **Dashboard:** Personalize your dashboard with your favorite security widgets for quick access to Arlo devices and information.
- **Modes:** Quickly and easily control arm, disarm, and standby modes with one-tap.
- **Locations:** Manage your security systems and customize settings, emergency response, and sirens for each address.
- **Automations:** Create schedules for hands-free arming and disarming of your security system.

What has changed from the previous Arlo experience?

The menu at the bottom of your screen includes:

- Dashboard
- Feed
- Emergency
- Devices
- Routines

The Library is now known as Feed. The Feed still has your cloud recordings and doorbell messages. Feed will now also include alerts for your All-in-One Sensors, and changes to your Routines, Modes, and Automations.

- For more information, visit: [How do I use the Feed in my Arlo account?](#)

A Location switcher is at the top of your screen to select locations where you may have set up Arlo devices, such as your permanent residence or vacation cabin.

- For more information, visit: [What are Locations in the Arlo Secure App and how do I use them?](#)

Devices shared with you by friends or family will appear in their own location, separate from your own. Use the location switcher to view cameras shared with you.

Emergency Response has moved to the bottom menu and is labeled Emergency.

- For more information, visit: [How do I dispatch Emergency Response services from the Arlo Secure App?](#)

Devices can now be accessed from the Devices menu or the all-new customizable Dashboard that includes widgets for quick access to Arlo devices and information.

The Dashboard will begin blank, and needs to be set up on each mobile device from which you access your Arlo account.

- For more information, visit: [What is the Dashboard on my Arlo Secure App and how does it work?](#)

Modes are now found near the top of your screen. The available Modes are labeled as Arm Away, Arm Home, and Standby. Configuration of Modes and Rules is now controlled under the Routines menu.

- For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

Last Updated:02/24/2024 | Article ID: 000062797

Why am I unable to upgrade my Arlo Secure App 4.0 to the new experience?

Why am I unable to upgrade my Arlo Secure App to the new Arlo experience?

This article applies to:

[Arlo Secure App](#) [FLW2001](#) [AVD4001](#) [AVD3001](#) [VMC4060P](#) [VMC3060](#) [VMC2060](#) [VMC3050](#)
[VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#)
[ABC1000](#)

There are a few reasons why you might be unable to upgrade your Arlo Secure App to the new Arlo experience:

The new Arlo experience will not be released to all regions at the same time.

- Release dates vary by region.
- The Arlo Secure App will notify you when the new Arlo experience is available.

The new Arlo experience will not be released to all users in a particular region at the same time.

- The new Arlo experience will be released to batches of users over time.
- The Arlo Secure App will notify you when the new experience is available.

Arlo Go Cameras are not currently compatible with the new Arlo experience at this time, but will be at a future date not yet determined.

- Arlo Go Camera
Model number: VML4030

For more information, visit:

- [How do I prepare my Arlo System for the new Arlo experience?](#)
- [How do I upgrade my Arlo Secure App to the new Arlo experience?](#)

Last Updated:10/08/2024 | Article ID: 000062795

How do I remove a device from my Arlo account? - Arlo Secure 4.0

How do I remove a device from my Arlo account? - Arlo Secure 4.0

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [MS1001](#)
[SLB1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#)

[VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#)
[VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)
[VML2030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How do I remove a device from my Arlo account?](#)*

WARNING: Removing a device from your account erases all modes and settings on that device and resets the device to factory default settings. If you remove a device from your account and later add it back, you must complete the setup process just like you did when you set up your system for the first time.

To remove a device from your Arlo account:

1. Launch the Arlo Secure app or log in to [my.arlo.com](#).
2. Tap or click **Devices**.
3. Select your Arlo device.
4. Tap or click .
5. Tap or click the Arlo device name at the top of the Device Settings screen.
6. Tap or click **Remove Device**.

Note: If you remove an Arlo SmartHub or Base Station from your account, all the cameras synced to that Arlo SmartHub or Base Station are deleted from your account at the same time.

To remove all devices from your Arlo account and erase your recordings:

1. Launch the Arlo Secure app or log in to [my.arlo.com](#).
2. Tap  in the Arlo Secure App or click **Settings** on [my.arlo.com](#).
3. Tap or click **Privacy Center** to open the [Arlo Privacy Center](#).
4. Tap or click **Content**.
5. Tap or click **Reset & Erase Arlo Devices**.
6. Tap or click **Reset & Erase All Devices** at the bottom of the screen.
7. Select **Reset & Erase All** when the pop-up displays.
8. Follow the prompts to confirm that you want to erase and reset all Arlo devices.

Note: Privacy Center feature availability varies by region.

Last Updated:04/25/2024 | Article ID: 000062922

How do I update my Arlo Account Profile photo, name, email, and password? - Arlo Secure 4.0

How do I update my Arlo Account Profile photo, name, email, and password? - Arlo Secure 4.0

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#)
[MS1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#)
[VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#)
[VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)
[VML2030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App experience with **Feed**. If you have the Arlo Secure App experience with **Library**, visit: [How do I edit my Profile in the Arlo Secure App?](#)*

You can update your name, email address, password, and profile photo in the Arlo Account Profile settings.

You can also update two-step verification for your Arlo account. For more information, visit: [What is two-step verification and how do I set it up with Arlo?](#)

To update your Arlo Account Profile Name, Email, and Password:

Using the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap .

3. Tap **Account Profile and Security** at the top of the Settings screen under your name.
4. **Name, Email.**
5. Make any necessary updates and tap **Save**.
6. Tap **Change Password**.
7. Enter **Current Password**, **New Password**, and **Confirm New Password**.
8. Tap **Save**.

Using a Web browser:

1. Log in to my.arlo.com.
2. Click **Settings**.
3. Click **Name, Email**.
4. Make any necessary updates and click **Save**.
5. Click **Change Password**.
6. Enter **Current Password**, **New Password**, and **Confirm New Password**.
7. Click **Change Password**.

To add or change a Profile Photo:

1. Launch the Arlo Secure App.
2. Tap .
3. Tap **Account Profile and Security** at the top of the Settings screen under your name.
4. Tap the profile icon or photo at the top of the screen above your name.
5. Select **Take Photo** or **Choose from Library**.

Note: If you already have a profile photo, you can also select **Remove Current Photo**.

Last Updated:05/07/2024 | Article ID: 000062932

How do I change the Location of my Arlo device on Arlo Secure 4.0?

How do I change the Location of my Arlo device on Arlo Secure 4.0?

This article applies to:

[FLW2001](#) [AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#)
[MS1001](#) [LBB1001](#) [KB1001](#) [SLB1001](#) [NT1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#)
[VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

You can change your Arlo device Location in the Arlo Secure App or on my.arlo.com. You need to have at least two Locations configured in your Arlo account to be able to change Locations. If you are moving a device to a new Location, create the Location first before moving devices. For more information, visit: [How do I create, delete, or edit a Location in the Arlo Secure App?](#)

To change the Location of your Arlo device on a web browser:

1. Log in to your account at my.arlo.com.
2. Click **Settings**.
3. Under **Locations and Plans**, select the Location name where the device is currently located.
4. Click **Devices**.
5. Select the device you want to change.
6. Click the camera name at the top of the screen.
7. Click **Change Device Location**.

Note: The Change Device Location option will only appear if you have two or more Locations.

8. Select the desired Location to move your device to.

Note: Make sure you have an active subscription in your Location. Moving devices may affect Modes and Rules.

9. Click **Done**.

To change the Location of your Arlo device on a mobile device:

1. Launch the Arlo Secure App.
2. Tap .
3. Under **Locations and Plans**, select the Location name where the device is currently located.
4. Tap **Devices**.
5. Select the device you want to change.
6. Tap the camera name at the top of the Device Settings screen.
7. Tap the current Location name.
8. Select the new Location where you want to move the device to.

Note: Location options will only appear if you have two or more Locations. Make sure you have an active subscription in your Location. Moving devices may affect Modes and Rules.

Last Updated:05/10/2024 | Article ID: 000062824

How do I add, edit, or delete a Location in Arlo Secure App 4.0?

How do I add, edit, or delete a Location in Arlo Secure App 4.0?

This article applies to:

[VMB3000](#)

[VMB3010](#)

[VMB3500](#)

[VMB4000](#)

[VMB4500](#)

[VMB4540](#)

[VMB5000](#)

[VMC4040P](#)

[AVD1001](#)

[VMC2030](#)
[VMC2020](#)
[AVD2001](#)
[VMC2032](#)
[VMC4041P](#)
[VMC4050P](#)
[AAD1001](#)
[AC1001](#)
[VMC5040](#)
[VML2030](#)
[AC2001](#)
[VMC2040](#)
[VMC2040](#)
[VMC4060P](#)
[MS1001](#)
[SH1001](#)
[VMC3030](#)
[VMC3040](#)
[ABC1000](#)
[VMC4030](#)
[VMC4030P](#)

You can add different Locations in the Arlo Secure App (version 4.0). You can also edit or delete the Location.

Note: The address must be located in the same country where your Arlo account is registered.

To add a Location in the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap 
3. Tap  next to LOCATIONS AND PLANS.
4. Enter a name for the Location (Home, Office, etc.).
5. Tap **Continue**.
6. Enter a physical address for the Location.
7. Tap **Continue**.

8. Select a time zone for the Location.
9. Tap **Finish**.

To edit a Location in the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap 
3. Select the Location under LOCATIONS AND PLANS.
4. Tap **Location Name**, **Address**, or **Location Settings** and make the necessary edits.
5. Tap **Save** or **<**.

To delete a Location in the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap 
3. Select the Location under LOCATIONS AND PLANS.
4. Tap **Delete Location**.
5. Tap **Remove** to confirm.

What do the icons in the Arlo Secure App mean? - Arlo Secure 4.0

What do the icons in the Arlo Secure App mean? - Arlo Secure 4.0

This article applies to:

[Arlo Secure App](#)

*This article is for the Arlo Secure App with **Feed**. If you have the Arlo Secure App with **Library**, visit: [What do the icons in the Arlo Secure App mean?](#)*

Arlo Secure App icons appear in various places such as the camera feed and Device Settings.

- Status icons appear on the device card under the camera feed or in the Device Settings.

Status Icons

Motion Detection

- If the icon is light gray, motion detection is disabled.
- If the icon is black, motion detection is enabled.
- If the icon is orange, the camera is currently detecting motion.

Sound Detection

- If the icon is light gray, sound detection is disabled.
- If the icon is black, sound detection is enabled.
- If the icon is orange, the camera is currently detecting sound.

Battery

- Shows an estimate of your battery charge.
- For more information, visit: [What do the Arlo camera battery level icons and notifications mean?](#)

Wi-Fi Signal Strength

- Shows the signal strength for the Wi-Fi connection between the Arlo device and the Arlo SmartHub, Arlo Base Station or Wi-Fi router.

USB Device

- If the icon is showing, a USB storage device is connected.
- If the icon is orange, the storage on the USB device is almost full.

SD Card

- If the icon is showing, a SD or microSD card is connected.
- If the icon is orange, the storage on the SD or microSD card is almost full.

Ethernet Connection

- This icon displays when your Arlo SmartHub or Base Station is connected to Ethernet.

Camera Feed Icons

Play Button

- Tap to view a live feed.



Stop

- Tap to stop a live feed.



Volume

- Tap to unmute the volume on your Arlo device.



Push to Talk

- Tap and hold to speak to someone through your Arlo device.



Record

- Tap to record a live feed.



Snapshot

- Tap to take a picture of a live feed.



Spotlight

- Tap to activate the spotlight on your camera.
- For more information, visit: [How does the spotlight on my Arlo camera work?](#)



Expand

- Tap to view a live feed in full screen.



Minimize

- Tap to exit a full-screen recording.



Emergency

- Tap to open the Emergency Response screen.

Other Arlo Secure App Icons



Edit

- Tap to edit names of devices, Activity Zones, etc.



Settings

- Tap to access settings for devices, modes, etc.



Add

- Tap to add a new Device, Widget, Space, and more.



Learn More

- Tap to learn more about a feature or camera.



Profile Settings

- Tap to access Account Profile Settings, Notification Settings, Support Center, App Settings, Location Settings, and more.



Drop-down

- Tap to switch Locations and Device View.



Edit

- Tap to edit various settings for Dashboard, Feed, Devices, Modes, and more.



Arm Away

- Tap to enable this Arlo mode when you are not at home.
- This represents the highest level of security.



Arm Home

- Tap to enable this Arlo mode when you are at home.
- This mode has reduced monitoring and represents an intermediate level of security.



Standby

- Tap to enable this Arlo mode for the lowest level of security.



Fire

- Tap to dispatch emergency response services from the fire department.



Police

- Tap to dispatch emergency response services from the police.



Medical

- Tap to dispatch emergency response services from an ambulance.



Dashboard

- Tap to view the Dashboard screen.
- This customizable screen includes widgets for quick access to Arlo devices and information.



Feed

- Tap to view the Feed screen.
- This screen was formerly known as Library.
- It includes your cloud recordings, doorbell messages, alerts for your All-in-One Sensors, and more.



Emergency

- Tap to view the Emergency Response screen.
- This screen provides options to react to an emergency.



Devices

- Tap to view the Devices screen.
- This screen allows you to view your Arlo devices.



Routines

- Tap to view the Routines screen.
- This screen provides the ability to configure modes and rules for your Arlo devices.



Alert

- Indicates an issue with an Arlo device that may prevent it from operating, such as an offline device.
- Tap to bring up the alert notification that describes the issue.

Last Updated:06/13/2024 | Article ID: 000062941

What is the Support Center in the Arlo Secure App? - Arlo Secure 4.0

How to access the Arlo Support Center

This article applies to:

[Arlo Secure Plans](#) [Arlo Secure App](#)

*This article is for the Arlo Secure App with **Feed**. If you have the Arlo Secure App with **Library**, visit: [What is the Support Center in the Arlo Secure App?](#)*

Use the **Support Center** in the **Arlo Secure App** (or on my.arlo.com) to contact Arlo Support and get help with your Arlo products. Additional assistance is available from the [Arlo Community](#) and [Arlo Support website](#).


- For more information, visit: [Arlo Support Options](#)

To access the Support Center in the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap .
3. Tap **Support Center**.

Options include Contact Support, your subscription plan, Manuals & Product

Documents, and your Arlo device.

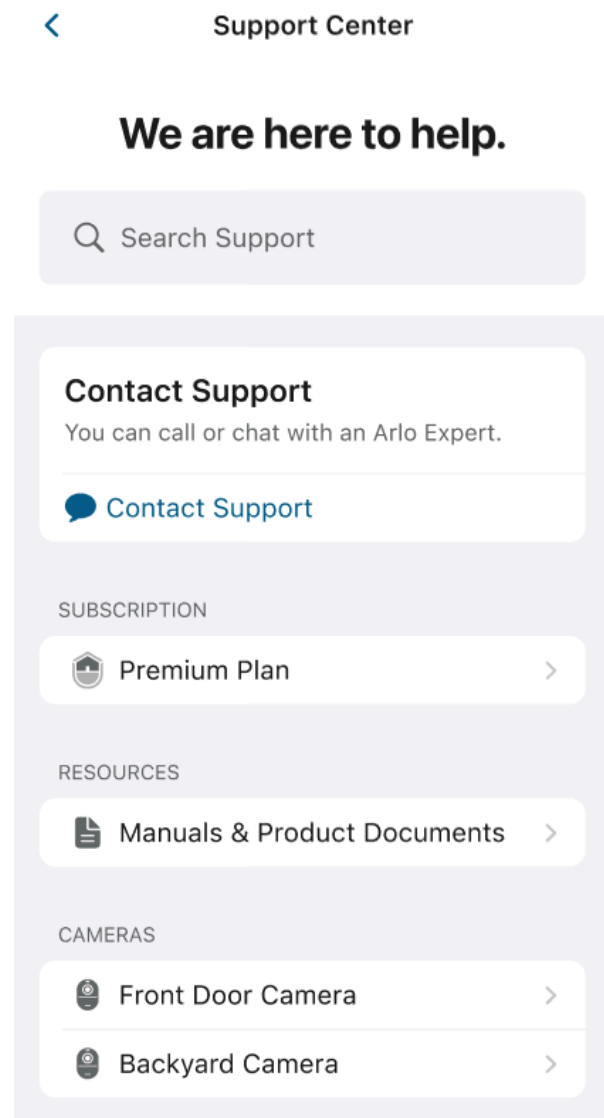

4. Tap **Contact Support** to Call a Live Agent, Start a Chat, or Browse Support Articles.
5. Tap **Call a Live Agent** and follow the in-app instructions to request a call with the next available agent or tap **Start a Chat** to ask a question.
- **Note:** If Support Center options are unavailable, you can still access the [Arlo Support website](#) for assistance or the [Arlo Community](#), where you can seek advice and solutions from experts and other Arlo customers.

To access the Support Center on my.arlo.com:

1. Log in to my.arlo.com.

2. Click **Support Center** in the left-hand menu.

Options include Phone Support, Chat Support, Arlo Community, Manuals & Documents, your products, and Arlo Support Articles.

Support Center

[Wi-Fi Issue](#) [Camera Offline](#) [Battery Issues](#) [Grant Access](#) [Onboarding Issues](#) [Activity Zone](#) [Feed](#) [Subscription](#)

Get help for your Arlo devices, subscriptions, and so much more



PHONE SUPPORT

Available 7-days a week
6AM-6PM PT

[Request a Call From a Live Agent](#)



CHAT SUPPORT

Available 7-days a week

[Start Chat](#)



ARLO COMMUNITY

Learn from Arlo experts and users like you

[Ask Community](#)



MANUALS & DOCUMENTS

Your product's manuals, quick start guides and data sheets

[Explore](#)

Browse By Your Products



Ultra Camera
Ultra



Arlo Baby
Baby Camera



Arlo Go 2
Go 2 LTE/Wi-Fi Camera



Arlo Keypad Sensor...
Arlo Keypad Sensor Hub



Chime 2
Arlo Chime 2

Top Support Articles

 [How do I subscribe to Arlo Secure?](#)



Last Updated:10/07/2024 | Article ID: 000062993

What is the Arlo Emergency Response feature and how does it work? - Arlo Secure 4.0

What is the Arlo Emergency

Response feature and how does it work? - Arlo Secure 5.0

This article applies to:

[SH1001](#) [KB1001](#)

*This article is for the Arlo Secure App with **Feed**. If you have the Arlo Secure App with **Library**, visit: [What is the Arlo Emergency Response feature and how does it work?](#)*


Arlo Emergency Response allows you to quickly get help from first responders (police, fire, or medical) in an emergency. This service is available 24/7 to ensure proper help is on the way to help address the situation.

Emergency Response must be set up first before it will be available for use in the Arlo Secure App. To set up Emergency Response, visit: [How do I set up Emergency Response for my Location on the Arlo Secure App?](#)

Note: Emergency Response is available for Premium subscribers. To subscribe, visit: [Arlo Secure Subscription Plans](#)

How Emergency Response Works

Arlo provides you with features to quickly respond to an emergency. You will find the Emergency tab at the center-bottom of the Arlo Secure App. The Emergency screen provides options to Activate Siren (if you have an Arlo device with a siren), Call a Friend, and Call Fire, Police, or Medical.

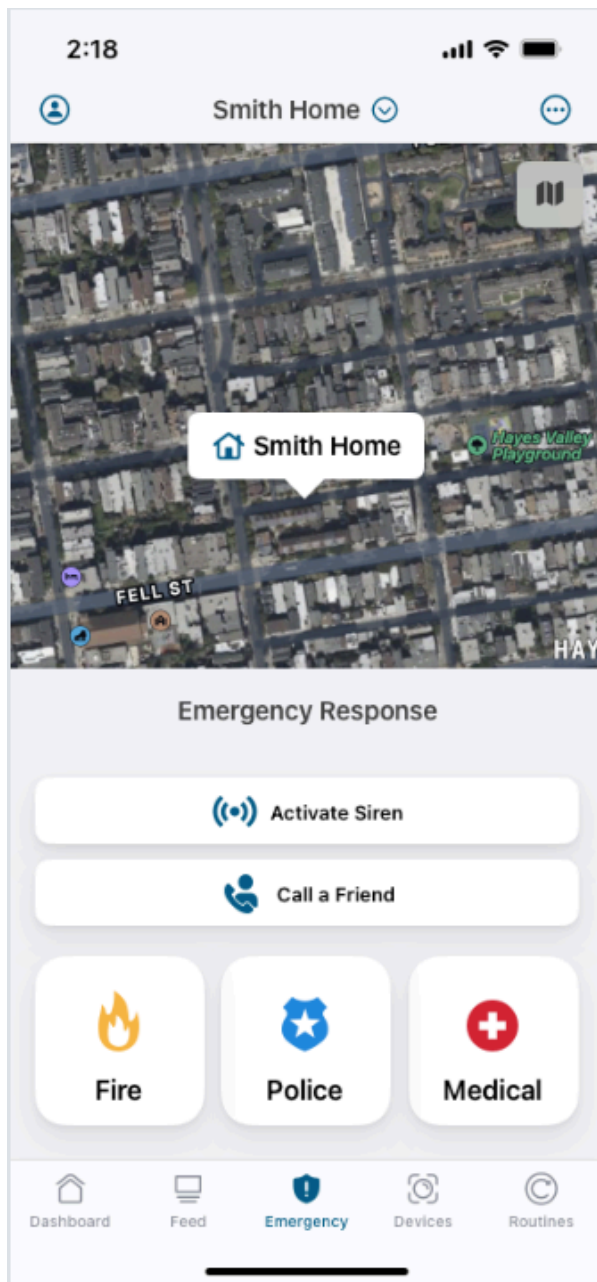

If you tap Fire, Police, or Medical, an emergency agent will contact first responders to share your location and any additional information needed for the emergency response. First responders will use the information to quickly respond to your location.

To dispatch Emergency Response service from the Arlo Secure App, visit: [How do I dispatch Emergency Response services from the Arlo Secure App?](#)

To dispatch Emergency Response service from the Arlo Keypad, visit: [How do I call for emergency dispatch on an Arlo Keypad?](#)

For information on Panic, visit: [What is the Panic Button on my Arlo Keypad and how do I use it?](#)

For information on Professional Monitoring, visit: [What is Arlo Professional Monitoring?](#)

Last Updated:09/20/2024 | Article ID: 000062921

COLLECTING LOGS

How to collect Arlo iOS app logs (INTERNAL)

How to collect Arlo iOS app logs (INTERNAL)

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SLB1001](#) [VMB5000](#)
[VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#)
[VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#)
[VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)
[VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

To collect Arlo iOS app logs:

1. Log into the Arlo iOS app and triple tap the **Arlo** icon at the top of the screen.

Note: If the user is unable to log in, skip to the bottom of this article for an alternate method.

2. Tap **Email logs** in the pop-up displayed at the bottom of the screen.

3. Have the customer email the logs to themselves.

4. Once the email is received, ask the customer to attach the logs to their support ticket.

To collect Arlo iOS app logs WITHOUT logging into the Arlo account:

1. On the login screen, tap the **Arlo bird** icon four times.

2. Tap **Email logs** in the pop-up displayed at the bottom of the screen.

3. Follow steps **3** and **4** from the above procedure.

Tips (for reference only):

- Logs will help troubleshoot:
 - Arlo app cosmetic issues
 - Arlo app crash issues
 - Device offline issues

- Geofencing
- Image/video quality issues
- Issues related to Modes
- CVR
- Streaming
- Delay on Notifications
- Logs are currently encrypted and cannot be decrypted by anyone else other than Engineering because of security issues.
 - Logs can be decoded only through the Arlo Proprietary tool.
- Logs do not contain customer passwords or library contents.
 - Logs contain OS, model, phone version, serial number, user ID, firmware version, etc.
- Log title contains details that make it easy for Support to see what version of the app is used and when problem happened:
 - App version (x.x.x)
 - App build (x)
 - Date (M/DD/YY) and time
- Logs get overwritten (because of file size) in 2 hrs, 4 hrs, 1 day, based on the activity in the app.
 - It is best to ask the customer to reproduce the issue and immediately send logs to the support team.

Last Updated:09/27/2023 | Article ID: 000062258

How to collect Arlo Android app logs (INTERNAL)

How to collect Arlo Android app logs (INTERNAL)

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SLB1001](#) [VMB5000](#)
[VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#)
[VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#)
[VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)
[VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

To collect Arlo Android app logs:

1. Log into the Arlo Android app and tap **Settings**.

2. Tap **About**.

3. Tap **Version** four times.

4. Ask the customer to send the logs via email using the preferred email server.

5. When the email is received, attach the logs to the case.

Tips (for reference only):

- Logs will help troubleshoot:
 - Arlo app cosmetic issues
 - Arlo app crash issues

- Device offline issues
- Geofencing
- Image/video quality issues
- Issues related to Modes
- CVR
- Streaming
- Delay on Notifications
- Logs are currently encrypted and cannot be decrypted by anyone else other than Engineering because of security issues.
 - Logs can be decoded only through the Arlo Proprietary tool.
- Logs do not contain customer passwords or library contents.
 - Logs contain OS, model, phone version, serial number, user ID, firmware version, etc.
- Log title contains details that make it easy for Support to see what version of the app is used and when problem happened:
 - App version (x.x.x)
 - App build (x)
 - Date (M/DD/YY) and time
- Logs get overwritten (because of file size) in 2 hrs, 4 hrs, 1 day, based on the activity in the app.
 - It is best to ask the customer to reproduce the issue and immediately send logs to the support team.

To collect Arlo Android app logs WITHOUT logging into the Arlo account:

1. On the login screen, tap the **Arlo** logo seven times. (NOTE: If the customer is having trouble, ask them to keep tapping the logo rapidly until the pop-up explaining how to send logs appears.)

2. Follow steps **3** and **4** from the above procedure.

Last Updated:09/25/2023 | Article ID: 000062317

How to collect Arlo Secure Android app logs (INTERNAL) - Arlo Secure 4.0

How to collect Arlo Secure Android app logs (INTERNAL) - Arlo Secure 4.0

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [MS1001](#)
[LBB1001](#) [KB1001](#) [SLB1001](#) [NT1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#)
[VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#)
[VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

To collect Arlo Android app logs:

1. Log into the Arlo Secure Android App and tap **Settings**.

2. Tap **About**.

3. Tap **Version** three times.

4. Ask the customer to send the logs via e-mail using the preferred e-mail server.

5. When the e-mail is received, attach the logs to the case.

Tips (for reference only):

- Logs will help troubleshoot:
 - Arlo app cosmetic issues
 - Arlo app crash issues
 - Device offline issues
 - Geofencing
 - Image/video quality issues
 - Issues related to Modes
 - CVR
 - Streaming

- Delay on Notifications
- Logs are currently encrypted and cannot be decrypted by anyone else other than Engineering because of security issues.
 - Logs can be decoded only through the Arlo Proprietary tool.
- Logs do not contain customer passwords or library contents.
 - Logs contain OS, model, phone version, serial number, user ID, firmware version, etc.
- Log title contains details that make it easy for Support to see what version of the app is used and when problem happened:
 - App version (x.x.x)
 - App build (x)
 - Date (M/DD/YY) and time
- Logs get overwritten (because of file size) in 2 hrs, 4 hrs, 1 day, based on the activity in the app.
 - It is best to ask the customer to reproduce the issue and immediately send logs to the support team.

To collect Arlo Android app logs WITHOUT logging into the Arlo account:

1. On the login screen, tap the **Arlo** logo seven times. (NOTE: If the customer is having trouble, ask them to keep tapping the logo rapidly until the pop-up explaining how to send logs appears).

2. Follow steps **4** and **5** from the above procedure.

Last Updated:09/27/2023 | Article ID: 000062953

How to collect Arlo iOS Secure App logs (INTERNAL) - App 4.0

How to collect Arlo iOS Secure App logs (INTERNAL) - App 4.0

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AC2001](#) [AAD1001](#) [AC1001](#) [SH1001](#) [MS1001](#)
[LBB1001](#) [KB1001](#) [SLB1001](#) [NT1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#)
[VMB3000](#) [VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#)

[VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

To collect Arlo iOS Secure App logs:

1. Log into the Arlo Secure iOS App.
2. Tap **Devices**.
3. Tap the **Arlo** icon at the top of the screen three times.

Note: If the user is unable to log in, skip to the bottom of this article for an alternate method.

4. Tap Email logs in the pop-up displayed at the bottom of the screen.

5. Ask the customer to send the logs via e-mail using the preferred e-mail server.
6. When the e-mail is received, attach the logs to the case or support ticket.

To collect Arlo iOS Secure App logs WITHOUT logging into the Arlo account:

1. Tap the house icon on the login screen three times.

2. Tap **E-mail logs**.

3. Follow steps 5 and 6 from the above procedure.

Tips (for reference only):

- Logs will help troubleshoot
 - Arlo Secure App cosmetic issues
 - Arlo Secure App crash issues
 - Device offline issues

- Geofencing
 - Image/video quality issues
 - Issues related to Modes
 - CVR
 - Streaming
 - Delay on Notifications
- Logs are currently encrypted and cannot be decrypted by anyone else other than Engineering because of security issues.
 - Logs can be decoded only through the Arlo Proprietary tool.
- Logs do not contain customer passwords or library contents.
 - Logs contain OS, model, phone version, serial number, user ID, firmware version, etc.
- Log title contains details that make it easy for Support to see what version of the app is used and when problem happened:
 - App version (x.x.x)
 - App build (x)
 - Date (M/DD/YY) and time
- Logs get overwritten (because of file size) in 2 hrs, 4 hrs, 1 day, based on the activity in the app.
 - It is best to ask the customer to reproduce the issue and immediately send logs to the support team.

Last Updated:10/02/2023 | Article ID: 000062961

INTEGRATIONS

When adding my Arlo Base Station to HomeKit, what should I do if I receive an Uncertified Accessory Error message?


What should I do if I receive an Uncertified Accessory Error message when adding my Arlo SmartHub or Base Station to Apple Home?

This article applies to:

[AVD2001](#) [AVD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#)

To use Apple Home with Arlo, you must have at least one compatible Arlo SmartHub or Base Station and one compatible Arlo camera. For a list of compatible devices, visit: [How do I connect my Arlo device to Apple Home?](#)

If you receive an error message that says your Arlo SmartHub or Base Station is an Uncertified Accessory, try removing your Arlo SmartHub or Base Station and reconnect to Apple Home. Read below for detailed troubleshooting instructions.

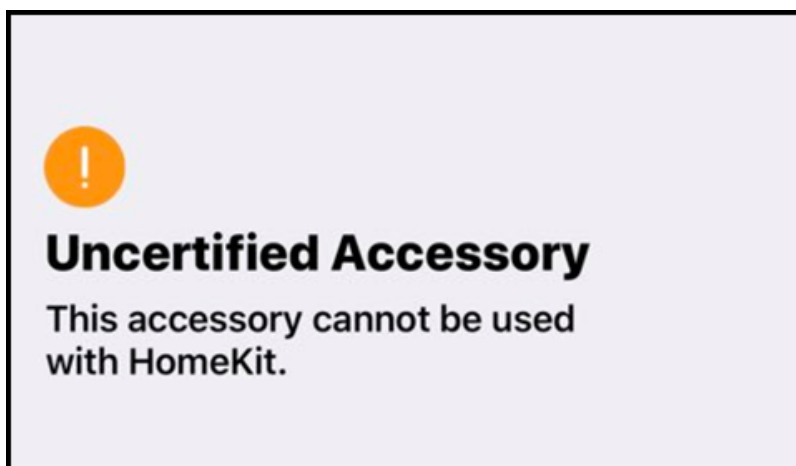

To troubleshoot the Uncertified Accessory HomeKit error:

1. Launch the Arlo Secure App on your Apple device.
2. Tap **Settings > My Devices**.
3. Select your Arlo SmartHub or Base Station.
4. Tap **HomeKit**.
5. Tap **[SmartHub/Base Station name] > Remove Device**.
6. Restart your Arlo SmartHub or Base Station.
7. Connect your Arlo system to Apple Home again.

Note: If the **Uncertified Accessory** error continues to display after performing the troubleshooting steps noted above, contact Arlo Support for further assistance.

Last Updated:05/21/2024 | Article ID: 000062294

“Uncertified Accessory” Error When Pairing an Arlo Base Station in Apple HomeKit
(INTERNAL)

Uncertified Accessory Error When Pairing an Arlo Base Station in Apple HomeKit (INTERNAL)

This article applies to:

[AVD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#)
[VMC4041P](#) [VMC4050P](#) [VMC4030](#)

The Reset Token button in the CS Diag tool is meant to allow Customer Support to be able to assist customers who have encountered the “Uncertified accessory” issue when trying to pair an Arlo Base Station in HomeKit.

1. Verify the customer is getting the “*Uncertified Accessory*” message when trying to pair HomeKit using the Arlo Secure App and that their Base Station is online.

2. Try **removing the Base Station** and connect the HomeKit again. To remove:

- Launch the Arlo Secure App on the Apple device.
- Tap **Settings > My Devices**.
- Select the Arlo Base Station.
- Tap **HomeKit**.
- Tap the Base Station name > **Remove Device**.
- Restart the Arlo Base Station.
- Add the Arlo Base Station to the HomeKit again.

3.**Reset the token in CS Diag tool**. Click the **Token Reset** button on the base station information line for the problem base station.

4. Enter your initials and click **YES**.

Note: There may be a delayed response after clicking the button, **make sure to click YES once**.

5. Click **CLOSE** once the confirmation message is received.

6. **Reboot the Arlo Base Station.** Unplug the AC power adapter for 10-15 seconds and reconnect. The Base Station will get a new HomeKit token.
7. **Pair the Base Station** in HomeKit using the Arlo Secure App.
8. **Factory reset** the Base Station/SmartHub.
 - Press and hold the **Reset** button on the back of the Base Station/SmartHub station 10 seconds using a paper clip or pen until the LEDs blink amber.
 - Once the LED light stops blinking, the Base Station/SmartHub reboots and the device is removed from the Arlo account.
 - Re-onboard the Base Station/SmartHub once the LED light turns solid Blue.
9. **Consult/Escalate** to L2 if the Reset Token and Factory reset are unsuccessful. Make sure to pull the logs so L3 can confirm whether the reset attempt was successful.

NOTE: Please select the exact Symptoms in the disposition when tagging the case.

Last Updated:07/21/2023 | Article ID: 000062725

How do I manage Apple HomeKit settings in the Arlo app?

How do I manage Apple HomeKit settings in the Arlo Secure App?

This article applies to:

[AVD2001](#) [AVD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [ABC1000](#)

You can use the Arlo Secure App to change the HomeKit settings of the Arlo devices you connected to Apple Home. This article shows you how to edit a HomeKit Home, Room, and connected Arlo device.

- To connect your Arlo device to Apple Home, visit: [How do I connect my Arlo device to Apple Home?](#)

Manage HomeKit-enabled devices

To change the room an Arlo device is in:

1. Launch the Arlo Secure App.
2. Tap **Settings** > **HomeKit**.
3. Select a device under DEVICES ADDED TO HOMEKIT.
4. Under ROOMS, select a new room for the device.

Your settings are automatically saved.

To rename an Arlo device for HomeKit:

1. Launch the Arlo Secure App.
2. Tap **Settings** > **HomeKit**.
3. Select a device under DEVICES ADDED TO HOMEKIT.
4. Tap the device's name next to Device Name.
5. Type a new name for the device.
6. Tap **Done** on your device's keyboard.

Your settings are automatically saved.

To remove a device from HomeKit:

1. Launch the Arlo Secure App.
2. Tap **Settings** > **HomeKit**.
3. Select a device under DEVICES ADDED TO HOMEKIT.
4. Tap **Remove Device** at the bottom of the screen.
5. Read the pop-up banner.
6. If you're sure you want to remove the device, tap **Remove Device**.

The device is removed from HomeKit.

Manage HomeKit Homes

To add a Home:

1. Launch the Arlo Secure App.
2. Tap **Settings** > **HomeKit**.
3. Tap the **Settings** icon at the upper-right corner.

4. Tap the **+** icon next to New Home.
5. Type a name for the Home.
6. Tap **Continue**.

Your new Home is added.

To edit a Home name:

1. Launch the Arlo Secure App.
2. Tap **Settings > HomeKit**.
3. Tap the **Settings** icon at the upper-right corner.
4. Select a Home from the list.
5. Tap the Home's name next to Home Name.
6. Type a new Home name.
7. Tap **Done** on your device's keyboard.

Your settings are automatically saved.

To delete a Home:

1. Launch the Arlo Secure App.
2. Tap **Settings > HomeKit**.
3. Tap the **Settings** icon at the upper-right corner.
4. Select a Home from the list.
5. Tap **Remove Home** at the bottom of the screen.

The Home is deleted.

Manage HomeKit Rooms

To add a Room:

1. Launch the Arlo Secure App.
2. Tap **Settings > HomeKit**.
3. Tap the **Settings** icon at the upper-right corner.
4. Select a Home from the list.
5. Under the ROOMS section, tap the **+** icon next to New Room.
6. Type a name for the Room.
7. Tap **Continue**.

Your new Room is added.

To edit a Room name:

1. Launch the Arlo Secure App.
2. Tap **Settings > HomeKit**.
3. Tap the **Settings** icon at the upper-right corner.
4. Select a Home from the list.
5. Under the ROOMS section, tap the Room's name next to a Room Name.
6. Type a new Room name.
7. Tap **Done** on your device's keyboard.

Your settings are automatically saved.

To delete a Room:

1. Launch the Arlo Secure App.
2. Tap **Settings > HomeKit**.
3. Tap the **Settings** icon at the upper-right corner.
4. Select a Home from the list.

Apple Home and Apple HomeKit are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

Last Updated:06/05/2024 | Article ID: 000062280

What Arlo features are supported on my Apple Watch?

What Arlo features are supported on my Apple Watch?

This article applies to:

[AVD2001](#) [AVD1001](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#)
[VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3040](#) [VMC3040S](#)
[ABC1000](#)

All Arlo cameras can send motion and audio notifications to your Apple Watch. Additionally, you can control your Apple Home compatible Arlo cameras with an Apple Watch and Apple Home.



- **Motion and Audio Notifications**

With any Arlo camera, you can receive motion and audio notifications on your Apple Watch. If you are an Arlo Secure subscriber, you can receive rich notifications on your Apple Watch. Rich notifications include an image preview and a description of what caused the camera to start recording (person, vehicle, animal, or package delivery). For more information about Arlo Secure, visit: [What is Arlo Secure and how can I benefit from it?](#)

- **Arlo with Apple Home**

You can control your Apple Home compatible Arlo cameras with Apple Home on your Apple Watch. For more information, visit: [How do I connect my Arlo device to Apple Home? - Arlo Secure 4.0](#)

Apple Home and Apple Watch are a trademarks of Apple Inc., registered in the U.S. and other countries and regions.

How do I connect my Arlo device to Apple HomeKit?

How do I connect my Arlo device to Apple Home?

This article applies to:

[AVD2001](#) [AVD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [ABC1000](#)

*This article is for the Arlo Secure App with **Library**. If you have the Arlo Secure App with **Feed**, visit: [How do I connect my Arlo device to Apple Home? - Arlo Secure 4.0](#)*

With Apple Home and a compatible Arlo device, you can use voice commands to access and control multiple Arlo devices from one place. To take full advantage of these features, you need a supported and connected Arlo system. For more information, visit: [What are the benefits of connecting my Arlo device to Apple Home?](#)

You can also connect an Arlo Baby camera with the Apple Home App. For more information, visit: [How do I set up a new Arlo Baby camera with Apple Home?](#)

You must be on the same Wi-Fi network as your Arlo SmartHub or Arlo Base Station when you first connect Arlo to Apple Home. After your Arlo device is added to Apple Home, you must have an Apple Home Hub to access your Arlo devices on Apple Home when you are outside of your local network. For more information, visit: <https://support.apple.com/en-us/HT207057>

You need the following to use Arlo with Apple Home:

- One of the following compatible devices:
 - Arlo Ultra 2
 - Arlo Ultra
 - Arlo Pro 5S
 - Arlo Pro 4
 - Arlo Pro 3
 - Arlo Pro 3 Floodlight Camera

- Arlo Pro 2
- Arlo Pro
- Arlo Essential Camera
- Arlo Essential Spotlight Camera
- Arlo Essential XL Spotlight Camera
- Arlo Essential Indoor Camera
- Arlo Essential Video Doorbell Wired (AVD1001)
- Arlo Essential Video Doorbell Wire-Free (AVD2001)
- The Apple Home App
- The Arlo Secure App
- An Arlo SmartHub or Arlo Base Station (VMB5000, VMB4540, VMB4500, or VMB4000)

Note: To use Apple Home, your Arlo device must be connected to an Arlo SmartHub or Arlo Base Station. You can't use Apple Home with your Arlo device if the device is connected directly to a Wi-Fi router.

You can connect your Arlo device to the Apple Home app in two ways:

- *With* an Apple Home setup code on the Arlo Base Station or device.
- *Without* an Apple Home setup code.

Note: Ensure Home Data is enabled on your iOS mobile device.

Open the iOS **Settings** on your iPhone or iPad and tap **Arlo Secure > Home Data**.

To set up an Arlo device *with* a setup code:

1. Set up your Arlo device and Arlo SmartHub or Base Station with the Arlo Secure App.
 2. Launch the Apple Home App.
 3. Tap **+** > **Add Accessory**.
 4. Scan the Apple home setup code on your Base Station, device, or Quick Start Guide.
 5. Follow the setup flow to name devices and place them in Apple Home rooms.
- Your devices are ready to use with Apple Home.

To setup an Arlo device *without* a setup code:

1. Launch the Arlo Secure App on your Apple device.

2. Tap **Settings > My Devices**.
3. Select an Arlo SmartHub or Arlo Base Station.
4. Tap **HomeKit**.
5. Select the Arlo SmartHub or Arlo Base Station you want to add to Apple Home.
If you receive an Uncertified Accessory Error message, visit: [When adding my Arlo Base Station to Apple Home, what should I do if I receive an Uncertified Accessory Error message?](#)
6. Select a Home or tap **Add New Home**.
If you don't have a Home set up in the Arlo Secure App, you are directed to create a Home.
7. Select a Room or tap **Add a New Room**.
If you don't have a Room set up in the Arlo Secure App, you are directed to create a Room.
8. Tap **Continue to add devices to HomeKit** to add devices or additional Base Stations.
9. Continue through the setup flows to confirm the name and room placement for each device.
Note: The name that you give each device is used for Siri commands. Choose a unique name that is easy to remember and pronounce.
10. Confirm the name of the device.
11. Tap **Skip**, or rename any other devices as needed.
12. Tap **Finish**.
Your devices are ready to use with Apple Home.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Apple Home is a trademark of Apple Inc., registered in the U.S. and other countries and regions.

Last Updated: 05/21/2024 | Article ID: 000062279

How to troubleshoot Apple HomeKit issues for Arlo devices

How to troubleshoot Apple HomeKit issues for Arlo devices

This article applies to:

[AVD2001](#) [AVD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [ABC1000](#)

If the DEVICES ADDED TO HOMEKIT screen is blank or HomeKit devices are not behaving as expected:

1. Make sure the mobile device and the Arlo devices added to Apple HomeKit are on the **same Wi-Fi network**.
2. **Close the Arlo Secure App** out completely and reopen a fresh session.
3. Ensure the **latest firmware is installed** for the Arlo devices.
4. Ensure the **latest version of the iOS Arlo Secure App** is used.
5. **Power** the Arlo devices **off and back on**.
6. **Power** the mobile device **off and back on**.
7. Avoid local streaming from the Arlo Secure App and Apple Home App **at the same time**.

When using a Wi-Fi connection at home to stream video on a mobile device, you are using local streaming.

If you try to use local streaming from the Arlo Secure App and the Apple Home App at the same time, it may cause a busy signal or a streaming error.

If you receive an Uncertified Accessory error message, visit:

- [What should I do if I receive an Uncertified Accessory Error message when adding my Arlo SmartHub or Base Station to Apple Home?](#)

If you are having issues with Apple HomeKit discovering your devices:

- Bonjour is used to discover Arlo devices for HomeKit. Bonjour uses multicast DNS (mDNS).
 - Try enabling **Multicast** routing/pass-through on your Wi-Fi router to assist with service discovery.
- Bonjour broadcasts discovery packets via UDP port 5353.
 - You may need to enable **Port Forwarding** on your Wi-Fi router.

For more information, visit:

- [How do I connect my Arlo device to Apple Home?](#)
- [How do I manage Apple HomeKit settings in the Arlo Secure App?](#)

Apple Home and Apple HomeKit are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

Last Updated:06/04/2024 | Article ID: 000062688

How do I stop using SmartThings and resume using the Arlo Secure App?

How do I stop using SmartThings and resume using the Arlo Secure App?

This article applies to:

Use the SmartThings App to remove Arlo and then resume using your Arlo devices with the Arlo Secure App.

To remove Arlo from the SmartThings App:

1. Launch the SmartThings App.
2. Tap **Menu**.
3. Tap the **Settings** (gear) icon.

4. Tap **Linked services**.
5. Tap **Arlo**.
6. Scroll down to the bottom of the screen and tap **DELETE**.
7. Tap **OK**.

You will need to set up Arlo in the SmartThings App again if you want to use it in the future.

Last Updated:06/10/2024 | Article ID: 1134950

How do I integrate my Arlo cameras into the Samsung SmartThings app?

How do I integrate my Arlo cameras into the Samsung SmartThings App?

This article applies to:

To integrate your Arlo cameras in the Samsung SmartThings App, you need to name your Arlo cameras in the Arlo Secure App, disarm your Arlo cameras in the Arlo Secure App, then use the SmartThings App to integrate your cameras with Samsung SmartThings.

Note: Legacy devices such as the VMC3030 are not officially supported but may still work with the SmartThings App.

Before integrating your cameras with the SmartThings App, make sure that your cameras have easy-to-understand names. If you do not rename your cameras, the camera's serial number becomes the camera's name in the SmartThings App.

Integrating your cameras requires that you have a SmartThings account. If you don't have a SmartThings account, visit [SmartThings Support](#) to create an account.

To integrate your Arlo cameras into the SmartThings

App:

1. Ensure you have named your cameras in the Arlo Secure App.
To name or rename your cameras, visit: [How do I rename my Arlo camera, doorbell, or device?](#)
2. Make sure your cameras are disarmed in the Arlo Secure App.
To disarm your cameras: visit: [Arm or Disarm Arlo Devices](#)
3. Launch the **SmartThings** App.
4. Tap **Devices**.
5. Tap **Add devices +**.
6. Under Arlo, tap **Link**.
If Arlo is not listed, tap the search icon next to Add device and search for Arlo.
7. Enter your Arlo email address and password.
8. Tap **Log in**.

Last Updated:04/22/2024 | Article ID: 1132961

What are the benefits of connecting my Arlo device to Apple HomeKit?

What are the benefits of connecting my Arlo device to Apple Home?

This article applies to:

[AVD2001](#) [AVD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#) [ABC1000](#)

You can conveniently control your Arlo devices from the Apple Home App.

When you connect your Arlo device to Apple Home, you can:

- Use Siri to voice control your Arlo devices
- View your Arlo device in the Apple Home App
- Use Apple TV to view your Arlo device on your TV

For more information, visit: [Can I live stream my Arlo camera on Apple TV?](#)

- View live feeds and screenshots in the Apple Home App
- Listen and talk using two-way audio in the Apple Home App
- Receive Arlo motion and audio notifications in the Apple Home App

To connect Arlo devices to the Apple Home App, visit:

- [How do I connect my Arlo device to Apple Home? - Arlo Secure 4.0](#)

Apple Home is a trademark of Apple Inc., registered in the U.S. and other countries and regions.

Last Updated:05/08/2024 | Article ID: 000062509

How do I connect Amazon Alexa to my Arlo account?

How do I connect Amazon Alexa to my Arlo account?

This article applies to:

Arlo can be connected to Amazon Alexa to enable various voice commands for your Arlo devices. To link Alexa to Arlo, view the following YouTube video or follow the instructions below:

To link Alexa with your Arlo account using the Arlo Secure App*:

** Available in the Arlo Secure App experience with **Feed** only*

1. Launch the Arlo Secure App.
2. Tap .

3. Tap **Connected Accounts**.
4. Tap **Alexa**.
5. Tap **Allow**.
6. If you have the Alexa App installed and set up, tap **Link** when the Account Linking screen displays.
If you do not have the Alexa App installed, sign into your Amazon account when prompted and tap **Allow**.
7. Tap **Finish**.

Note: The Alexa App can only be linked to one Arlo account. If you are unable to link, check if the Alexa App is already linked to another Arlo account.

For more information about using the Arlo Alexa Skill, visit: [What Alexa commands can I use with Amazon devices to view my Arlo cameras?](#)

To remove Alexa from your Arlo account*:

** Available in the Arlo Secure App experience with **Feed** only*

1. Launch the Arlo Secure App.
2. Tap .
3. Tap **Connected Accounts**.
4. Tap **Privacy Settings**.
5. Tap **Remove**.

If you have the Arlo Secure App experience with Library, use the Amazon Alexa App to enable the Arlo Skill:

1. Ensure your Arlo devices are powered on and connected to the cloud.
2. Launch the Amazon Alexa App.
3. Tap **More**.
4. Tap **Skills & Games**.
5. Tap **Search Alexa Skills**.
6. Type **Arlo**.
7. Select **Arlo** in the Search Results.
8. Tap **Enable to Use**.
9. Log in to your Arlo account when the Link Account screen for Arlo displays.

10. Follow the prompts to link Arlo with Alexa.

For additional information on using Arlo devices with Amazon Alexa, visit:

- [How do I trigger an Amazon Alexa device when motion is detected on my Arlo camera?](#)
- [How do I use 2-way talk with my Arlo camera and an Amazon Alexa device?](#)
- [How can I use my Arlo Doorbell with Amazon Alexa?](#)

Amazon and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

Last Updated:04/25/2024 | Article ID: 000044726

What Alexa commands can I use with Amazon devices to view my Arlo cameras?

What Alexa commands can I use with Amazon devices to view my Arlo cameras?

This article applies to:

To use your Arlo cameras with your Amazon devices, you must enable the Arlo Alexa Skill.

- To enable the Arlo Alexa skill, visit: [How do I connect Amazon Alexa to my Arlo account?](#)

After you enable the Arlo Alexa Skill, you can use the following commands:

- *Alexa, show me <camera name>*
Use this command to start streaming a camera live.
- *Alexa, stop*
Use this command to stop an activity and return to your device's home screen.

- *Alexa, hide <camera name>*

Use this command to stop streaming from a camera and return to your device's home screen.

- *Alexa, go home*

Use this command to return to your device's home screen.

- *Alexa, show me the last motion detected by <camera name>*

Use this command to show the last motion detected by your camera.

Note: You must have an Arlo subscription plan or trial to use this command.

- *Alexa, turn on <security light>*

Use this command to turn on your Arlo Security Light.

Note: This command is only applicable for Arlo Light AL1101.

Amazon and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

Last Updated:05/09/2024 | Article ID: 000044725

How do I use 2-way talk with my Arlo camera and an Amazon Alexa device?

How do I use 2-way talk with my Arlo camera and an Amazon Alexa device?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [AAD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC2020](#)
[VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#)
[VML2030](#) [VML4030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

You can hear and speak directly to visitors from your Alexa device. This requires that you connect your Alexa device to an Arlo Video Doorbell, or Camera and say something like “Alexa, talk to the front door.” You can also ask Alexa to live stream video from your Arlo camera to display on Alexa devices with a screen.

To use 2-way talk with your Arlo and Alexa device, you must have the following:

- An Arlo Camera that is connected to an Arlo SmartHub or Arlo Base Station (VMB4000, VMB4500, VMB4540, VMB5000)

Note: 2-way talk with an Alexa device works on Arlo Video Doorbell when connected directly to Wi-Fi, an Arlo SmartHub, or an Arlo Base Station

- The Amazon Alexa App
- An Alexa enabled device (Echo, Fire TV, Fire Stick, etc.)
- The Arlo Alexa Skill

For more information, visit: [How do I connect Amazon Alexa to my Arlo account?](#)

You can use your Arlo and Alexa devices to begin a 2-way conversation from inside your home. Additionally, to ensure everything is secure at home, simply ask Alexa to display your camera view on your Echo Show, and speak directly with visitors.

To engage in 2-way talk, say one of the following commands to your Alexa device:

- Alexa, show me the front door camera
- Alexa, answer the front door.
- Alexa, talk to the front door.
- Alexa, talk to the backyard camera.
- Alexa, talk to the baby monitor.
- Alexa, get the call going with the front door.
- Alexa, please call front door.
- Alexa, respond to the front door.
- Alexa, speak to the front door.
- Alexa, talk to my front door camera.
- Alexa, talk to the person at the main door.

Amazon and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

How do I connect my Arlo devices to Google Home or Google Assistant?

How do I connect my Arlo devices to Google Home?

This article applies to:

When you connect Arlo to your Google Home environment, you can view a live camera feed on Google video devices and smart displays.

To use your Arlo devices with Google, you need to have the following:

- A compatible Arlo device
- A Google Home Hub, a Chromecast device, a TV with Chromecast, Google Smart Display, or a media player with Chromecast
- The Google Home App

Note: If you have a voice-enabled speaker that you plan to use with Google Home, set up that device before continuing.

To connect Arlo devices to Google:

1. Launch the Google Home App on your mobile device.
2. Tap the **Add** icon.

Note: You can only add Arlo devices from the main Arlo account. Grant Access users cannot add Arlo devices to Google Home.

3. Tap **Set up device** and choose **Works with Google**.
4. Use the search icon to find and tap Arlo.
5. Input your Arlo login credentials and verify permissions to link Arlo with your Google account. If the Arlo Secure App is already installed and logged in on the

same device, Google automatically opens the Arlo Secure App so you can verify your login.

6. Choose the Arlo devices you want to connect to Google Home and assign each one a group. Tip: make your device names specific and easy to say and remember, like "Arlo Backyard".
7. After connection, Arlo will load the camera live view in the Google Home App.
8. To test your camera stream on a Chromecast device, say "Hey Google, show [name of room where camera is placed] on [name of Google device]".
9. To end the stream, say "Hey Google, stop [name of Chromecast device]".

Note: You might experience a brief delay when live streaming Arlo through a third-party voice assistant system.

Google Home is a trademark of Google LLC.

Last Updated: 04/19/2024 | Article ID: 000055108

What is the Assistant PIN feature and how do I use it with Arlo?

What is the Assistant PIN feature and how do I use it with Arlo?

This article applies to:

[AVD4001](#) [AVD3001](#) [AVD2001](#) [AVD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#)
[VMB3000](#) [VMB3010](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [VMC4041P](#) [VMC4050P](#) [VMC4030](#)
[VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#)
[VMC2052](#) [VMC3040](#) [VMC3040S](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [What is the Assistant PIN feature and how do I use it with Arlo? - Arlo Secure 4.0](#)*

With Assistant PIN (Personal Identification Number), you can use your voice to arm or disarm your Arlo system. To use this feature, you need a supported and connected Arlo device and a compatible Amazon Alexa device.

Note: Assistant PIN is currently only compatible with Amazon Alexa.

To use Assistant PIN to arm or disarm your system, you need the following:

- A connected Arlo SmartHub or Arlo Base Station with one or more Arlo devices connected to it
 - Compatible Arlo SmartHub and Arlo Base Station models: VMB3000, VMB3500, VMB4000, VMB4500, VMB4540, and VMB5000
- The Arlo Secure App
- A compatible Amazon Alexa device
 - Echo Show
 - Echo Spot
 - Fire TV (all generations)
 - Fire TV stick (second generation only)
 - Fire TV Edition smart TVs

Note: Availability of these Amazon devices varies by country.

- The Arlo Alexa Skill in the Amazon Alexa App

Before you set up an Assistant PIN, you must connect your Arlo system to your Amazon Alexa account. To do this, you must add the Arlo Alexa Skill in the Amazon Alexa App. For more information, visit: [How do I connect Amazon Alexa to my Arlo account?](#)

After you set up Assistant PIN, you must say your PIN when asking Alexa to disarm your devices. Ensure that you can remember the PIN.

To set up a new PIN:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Select **Settings** > **Profile** > **Assistant PIN**.
3. Enter a four-digit PIN.
4. Reenter the PIN to confirm it.

Your PIN is now set up.

To change your PIN:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Select **Settings** > **Profile** > **Assistant PIN** > **Change PIN**.
3. Enter your Arlo account password.
4. Enter a new four-digit PIN.

To delete your PIN:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Select **Settings** > **Profile** > **Assistant PIN**.
3. Select **Delete PIN**.
4. Enter your Arlo account password.

Your PIN is now deleted.

When Assistant PIN is activated, you can tell Alexa to arm or disarm the devices in your Arlo system. Before Alexa arms or disarms your Arlo devices, you are prompted to say your Assistant PIN. If the PIN is correct, Alexa completes the command.

To setup the Assistant PIN with Alexa:

1. Ask Alexa to “discover devices”.
2. In the Alexa App, select your newly discovered Arlo SmartHub or Arlo Base Station and enable the **Disarm by voice** toggle. In the detail view, select **Existing security system**.

You can say the following commands to Alexa to arm or disarm your Arlo devices:

- *Alexa, arm <Arlo SmartHub or Base Station name>.*
Alexa arms the devices connected to this Arlo SmartHub or Base Station.
- *Alexa, disarm <Arlo SmartHub or Base Station name>.*
Alexa asks for your PIN. After you say the correct Assistant PIN, Alexa disarms the devices connected to this Arlo SmartHub or Arlo Base Station.

Note: To ensure that Alexa recognizes your command, name your Arlo SmartHub or Arlo Base Station something that is simple and easy to say.

Troubleshooting

I can't add an Assistant PIN or change an existing PIN.

- Only the owner of the Arlo account can set up and modify the Assistant PIN.

- If you are logged in to the Arlo Secure App as a [Friend](#) on someone's account, you must ask the account owner to set up or change the PIN.

Note: When an Assistant PIN is created, anyone can attempt to arm or disarm the Arlo system. However, they must say the correct PIN when prompted.

Alexa doesn't recognize my Arlo SmartHub or Arlo Base Station name when I issue voice commands.

- You might need to simplify the name of the Arlo SmartHub or Arlo Base Station that you are asking Alexa to arm or disarm.
- For example, you can name your Arlo SmartHub or Arlo Base Station something like 'Home Base Station' or 'Arlo SmartHub'. For help renaming your Arlo SmartHub or Arlo Base Station, visit: [How do I rename my Arlo camera, doorbell, or device?](#)

My Assistant PIN no longer arms or disarms my Arlo SmartHub or Arlo Base Station.

- This might happen if you fail to say the correct PIN three times when you disarm your Arlo system with Assistant PIN.
- To re-enable Assistant PIN, the owner of the Arlo account must update the settings in the Amazon Alexa App.

To do this, open the Alexa App, and tap **Devices**. Select your Arlo SmartHub or Arlo Base Station, and adjust the setting for Voice Code to **Existing security system PINs**, not **Alexa-specific code**.

Note: These steps are subject to changes within the Alexa App.

Amazon and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

Last Updated:04/25/2024 | Article ID: 000062369

How do I connect my Arlo device to Apple Home? - Arlo Secure 4.0

How do I connect my Arlo device to Apple Home? - Arlo Secure 4.0

This article applies to:

[AVD2001](#) [AVD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMC5040](#) [VMC4030P](#)
[VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#)
[VMC2030](#) [VMC2032](#)

*This article is for the Arlo Secure App with **Feed**. If you have the Arlo Secure App with **Library**, visit: [How do I connect my Arlo device to Apple Home?](#)*

With Apple Home you can use voice commands to access and control multiple Arlo devices from one place. To take full advantage of these features, you need a supported and connected Arlo system. For more information, visit: [What are the benefits of connecting my Arlo device to Apple Home?](#)

You can also connect an Arlo Baby camera with the Apple Home App. For more information, visit: [How do I set up a new Arlo Baby camera with Apple Home?](#)

You must be on the same Wi-Fi network as your Arlo SmartHub or Arlo Base Station when you first connect Arlo to Apple Home. After your Arlo device is added to Apple Home, you must have an Apple Home Hub to access your Arlo devices on Apple Home when you are outside of your local network. For more information, visit: <https://support.apple.com/en-us/HT207057>

You need the following to use Arlo with Apple Home:

- One of the following compatible devices:
 - Arlo Ultra 2
 - Arlo Ultra
 - Arlo Pro 5S
 - Arlo Pro 4
 - Arlo Pro 3
 - Arlo Pro 3 Floodlight Camera
 - Arlo Pro 2
 - Arlo Pro
 - Arlo Essential Camera
 - Arlo Essential Spotlight Camera
 - Arlo Essential XL Spotlight Camera
 - Arlo Essential Indoor Camera
 - Arlo Essential Video Doorbell Wired (AVD1001)
 - Arlo Essential Video Doorbell Wire-Free (AVD2001)
- The Apple Home App

- The Arlo Secure App
- An Arlo SmartHub or Arlo Base Station (VMB5000, VMB4540, VMB4500, or VMB4000)

Note: To use Apple Home, your Arlo device must be connected to an Arlo SmartHub or Arlo Base Station. You can't use Apple Home with your Arlo device if the device is connected directly to a Wi-Fi router.

You can connect your Arlo device to the Apple Home App in two ways:

- *With* an Apple Home setup code on the Arlo device.
- *Without* an Apple Home setup code.

Note: Ensure Home Data is enabled on your iOS mobile device.

Open the iOS **Settings** on your iPhone or iPad and tap **Arlo Secure** > **Home Data**.

To set up an Arlo device *with* a setup code:

1. Set up your Arlo devices and Arlo SmartHub or Arlo Base Station with the Arlo Secure App.
2. Launch the Apple Home App.
3. Tap **+** > **Add Accessory**.
4. Scan the Apple Home setup code on your Arlo SmartHub, Arlo Base Station, Arlo device, or Quick Start Guide.
5. Follow the setup flow to name devices and place them in Apple Home rooms.

To setup an Arlo device *without* a setup code:

1. Launch the Arlo Secure App on your Apple device.
2. Tap **Devices**.
3. Select an Arlo SmartHub or Arlo Base Station.
4. Tap the name of your Arlo Smarthub or Arlo Base Station.
5. Tap **HomeKit**.
6. Select the Arlo SmartHub or Arlo Base Station you want to add to Apple Home.

If you receive an Uncertified Accessory Error message, visit: [When adding my Arlo Base Station to Apple Home, what should I do if I receive an Uncertified Accessory Error message?](#)

7. Select a Home or tap **Add New Home**.

If you don't have a Home set up in the Arlo Secure App, you are directed to create a Home.

8. Select a Room or tap **Add a New Room**.

If you don't have a Room set up in the Arlo Secure App, you are directed to create a Room.

9. Tap **Continue to add devices to HomeKit** to add devices or additional Arlo Base Stations.

10. Continue through the setup flows to confirm the name and room placement for each device.

Note: The name that you give each device is used for Siri commands. Choose a unique name that is easy to remember and pronounce.

11. Confirm the name of the device.

12. Tap **Skip**, or rename any other devices as needed.

13. Tap **Finish**.

Your devices are ready to use with Apple Home.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Apple Home is a trademark of Apple Inc., registered in the U.S. and other countries and regions.

Last Updated:05/21/2024 | Article ID: 000063184

46

Notifications

INTERNAL KB

How to Troubleshoot Missing or No Push Notifications (INTERNAL) - Arlo Secure 4.0

How to Troubleshoot Missing or No Push Notifications (INTERNAL) - Arlo Secure 4.0

This article applies to:

[AVD2001](#) [AVD1001](#) [AAD1001](#) [SH1001](#) [MS1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#)
[VMB3500](#) [VMB3000](#) [VMB3010](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)
[VMC4050P](#) [VMC4060P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#)
[VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#) [VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

To troubleshoot missing or no push notifications:

1. Check status of the camera in **CS Diag** tool and check **Splunk** history.
2. Check what **Mode** is in use, and what **Rules** are set up within the Mode.

3. Make sure **Push Notification** is enabled on the Arlo Secure App and the mobile device. To enable push notification:

- Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
- Tap or click **Routines**.
- Tap or click .
- Tap or click  of the mode you want to edit.
- Tap or click **Add a Rule**.
- Choose a device that will be used for the rule and tap or click **Save**.
- Tap or click the rule card for the selected device.
- Tap or click the slider for **Motion Detection** or **Audio Detection**.

Note: Arlo Smart Options require a subscription to Arlo Secure.

- Tap or click **Send Notification**.
 - Tap or click the sliders under **Push Notification**.
 - Tap or click **Save**.
 - Arm the Mode.
4. Check the mobile device's settings such as Do Not Disturb, Focus Mode, or Battery-saving.
 5. Check the app setting, Mute Notification should be off. To turn Off: Launch the Arlo Secure App.
 - Tap .
 - Tap **Notifications**
 - If **Mute Notifications** is not set to **Off**, tap **Mute Notifications**.
 - Tap **Unmute**.
 6. Make sure that the Arlo Secure App is updated and the mobile device's software is running on the newest version.
 7. If these steps do not work, please consult L2 and make sure these steps are followed:
 - Check if PN are enable in camera modes and armed.
 - Check mobile phone settings to see if PN is enabled for Arlo Secure App.
 - Check mobile phone power setting mode and see if its disable.
 - Check if phone has internet connection (Cellular or Wi-Fi).
 - Log out of the Arlo Secure App and log back in (Do not just minimize the app, but explicitly log out and back in).
 - Attempt to trigger motion and monitor for a push notification.
(Note: if user receive a push notification at this point, you do not need to proceed to the next step).
 - Toggle push notification off and then back on and repeat the steps 1-4.

Collect Logs:

- BS logs from CS Diagtool (For BS/SH offline, collect the logs once devices are back online and attach to the case).
- Client logs from apps:

- iOS: [How to collect Arlo iOS app logs \(INTERNAL\)](#)
- Android: [How to collect Arlo Android app logs \(INTERNAL\)](#)

Related external KB Articles:

- [Why am I not receiving Arlo notifications on my iOS device? - Arlo Secure 4.0](#)
- [Why am I not receiving Arlo notifications on my Android device? - Arlo Secure 4.0](#)
- [How do I enable or disable Arlo push notifications on my iOS device? - Arlo Secure 4.0](#)
- [How do I enable or disable push notifications on my Android device? - Arlo Secure 4.0](#)

Last Updated:01/03/2024 | Article ID: 000062911

How to Troubleshoot Missing or No Push Notifications (INTERNAL)

How to Troubleshoot Missing or No Push Notifications (INTERNAL)

This article applies to:

[AVD2001](#) [AVD1001](#) [AAD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#)
[VMB3010](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#) [VMC4030](#)
[VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VMC3060](#) [VMC2060](#) [VMC3050](#) [VMC2050](#) [VMC3052](#)
[VMC2052](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)

1. Check status of the camera in **CS Diag** tool and check **Splunk** history. The camera should be Online and **ARMED**.

2. Verify the camera rule settings. Check the camera's **CURRENT MODE** in **CS Diag** Tool.

Note: You need to check the mode for the Base Station for cameras paired to a Base Station.

3. Make sure push notification is enabled on the Arlo app and the mobile device. To enable push notification:

- Launch the Arlo app.
- Tap **Mode** and select the device.
- Tap the pencil icon.
- Tap the pencil icon to edit rules.
- Tap **Push Notification**.
- Tap **Done** to save the setting.

4. Check the mobile device's settings such as Do Not Disturb, Focus Mode, or Battery-saving.

5. Check the camera mode and rules. Push Notification when there's motion or sound detected

for the camera should be enabled.

6. Check the app setting, Mute Notification should be off. To turn Off:

- Launch the Arlo App.
- Tap **Settings**.
- Tap **Mute Notifications**.
- Tap **Unmute**.

7. Make sure that the Arlo app is updated and the mobile device's software is running on the newest version.

Related external KB Articles:

- [Why am I not receiving Arlo notifications on my iOS device?](#)
- [Why am I not receiving Arlo notifications on my Android device?](#)
- [Why am I still receiving Arlo email alerts even though I turned off Arlo Smart notifications?](#)
- [How do I enable or disable Arlo push notifications on my iOS device?](#)
- [How do I enable or disable push notifications on my Android device?](#)

Last Updated:06/15/2022 | Article ID: 000062695

EXTERNAL KB

HOW TO

How can I receive fewer Arlo notifications?

How can I receive fewer Arlo notifications?

This article applies to:

*This article is for the Arlo Secure with **Arm** and **Disarm**. If you have the new experience of Arlo Secure with **Arm Away**, **Arm Home**, and **Standby**, please visit: [How can I receive fewer Arlo notifications? - Arlo Secure 4.0](#)*

Arlo only sends notifications according to the rules in the mode that is currently active. To reduce unwanted notifications, you might need to adjust the position of one or more cameras, reduce motion or audio sensitivity, change your notification settings, or create a custom mode.

To reduce the number of unwanted notifications that you receive:

1. **Position your camera** so that it does not pick up the motion that is triggering the camera to notify you.

For example, if Arlo is notifying you about cars passing in the street, aim your camera so that the street is outside the camera's field of view. For more information about camera positioning, visit: [How do I position my Arlo wire-free camera?](#)

2. **Create activity zones** for your camera to focus on.

For more information about activity zones, visit: [What are activity zones and how do I create them?](#)

3. If you are unable to position your camera so that the field of view only includes motion that you care about, **reduce your camera's motion sensitivity** instead. You must reduce your camera's motion sensitivity in the rules for each mode in which you receive unwanted notifications.

For more information about how to adjust your camera's motion sensitivity, visit: [How do I change the motion sensitivity on my Arlo camera?](#)

For more information about finding the right motion sensitivity setting, visit: [How do I use the motion detection test for my Arlo device?](#)

If you are receiving unwanted sound-triggered notifications, **reduce the audio sensitivity settings** on the camera or cameras that are triggering too often.

4. You can also edit your modes and rules to record based only on motion if all of the sound-based notifications are unwanted.

For more information about changing audio sensitivity settings, visit [How do I change the audio sensitivity on my Arlo camera?](#)

For more information about disabling sound detection, visit: [How do I enable or disable motion or sound detection?](#)

If you like the amount of videos that Arlo is recording, but you want to receive fewer notifications, either **edit the notification settings in your modes and rules** or **create a different custom mode** for when you want recordings without notifications.

For example, you can create a mode that records but does not send notifications so that you can watch pet videos in your Arlo library without getting notified every time your pet moves or makes noise.

For more information about changing notifications settings, visit: [How do I set up notifications or alerts?](#)

Arlo Secure Smart Notification Options

With an Arlo Secure subscription, you can use Smart Notifications to select which notifications you receive. You can purchase a plan for multiple cameras, a single camera, or both. This provides a flexible and customizable experience for your Arlo system. You can activate any combination of the following features in the Arlo Secure App to determine what kind of motion alerts you want to receive.

- **Person Detection.** With the Arlo Person Detection feature, you receive real-time alerts when people approach your home. The person detection feature also allows you to search your recording library for videos containing people. For more information about camera positioning, visit: [What is Arlo's person detection feature?](#)
- **Package Detection.** The Package Detection feature allows you to receive rich notifications when your Arlo camera sees a package being picked up or dropped off. With Package Detection turned on in the Arlo Secure App, your camera detects packages as small as a shoe box. For more information, visit: [What is the Arlo package detection feature?](#)
- **Animal and Vehicle Detection.** The Vehicle Detection feature detects cars, trucks, buses, motorbikes, and bicycles, and allows you to receive rich notifications when your Arlo camera detects a vehicle. The animal detection feature allows you to receive rich notifications when your Arlo camera detects an animal. It detects any animal larger than a small rodent.

For more information on animal detection, visit: [What is the Arlo animal detection feature?](#)

For more information on vehicle detection, visit: [What is the Arlo vehicle detection feature?](#)

Alarm Detection. The Alarm Detection feature notifies you on the Arlo Secure App when an Arlo camera hears a smoke and/or carbon monoxide (CO) detector's alarm. Your Arlo camera records until activity stops or for a fixed length of time. For more information, visit: [What is the Arlo smoke and CO alarm detection feature?](#)

When [motion detection is enabled for your Arlo camera](#), you can choose what type of motion you want to be notified about.

For more information about motion detection and activity zones, visit:

- [How does motion detection work on Arlo cameras?](#)
- [My Arlo Activity Zones are not working, how can I troubleshoot this?](#)

To edit advanced motion alert settings on your Arlo camera:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click **Settings**.
3. Under Arlo Smart or Arlo Secure, tap or click **Smart Notifications**.
4. Select a camera for which you want to receive Arlo notifications.
5. Tap or click the sliders to choose what type of motion you want Arlo to notify you about.
 - **People**
 - **Vehicles**
 - **Animal**
 - **Alarm Detection**
 - **All Other Motion**
6. Under Alert Options, decide if you want to receive [video previews](#) in your motion alerts.

Note: To turn on Package Detection, open the Arlo Secure App and go to **Settings > Package Detection**. On the **Manage Package Detection** screen, choose which cameras you want to activate for package detection. For more information, visit: [What is the Arlo package detection feature?](#)

Setting a schedule for your Arlo camera (Optional)

You can set a schedule to activate and deactivate cameras automatically. Schedules recur weekly. For example, the schedule for Tuesday repeats every Tuesday as long as the schedule is turned on.

Arlo is preconfigured with the following schedule:

- **Monday through Friday, 8:00 a.m. to 5:00 p.m.** All motion sensors are on.
- **All other times.** All motion sensors are off.

The following instructions are the same if you're logged in to your Arlo account using the Android app, iOS app, or web browser.

To set a schedule for a camera:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click **Mode**.
3. Select a device.
4. Tap or click **Schedule**.
5. Tap the **pencil** icon or click > next to Schedule.

The Schedule page displays.

6. Tap or click **Add**.

The Add Schedule page displays.

7. Set the days and times for your new schedule.

Note: To add an overnight schedule such as 8:00 p.m. to 6:00 a.m., you need to add two separate schedules, as shown in the screenshot below. First, add 8:00 p.m. to 11:59 p.m., then add 12:00 a.m. to 6:00 a.m.

8. Tap or click **Done**.

Your new schedule is saved.

Last Updated:05/02/2024 | Article ID: 1178858

How to Mute Arlo Notifications

How to Mute Arlo Notifications

This article applies to:

[AVD2001](#) [AVD1001](#) [AAD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#)
[VMB3010](#) [AL1101](#) [ABB1000](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#)

[VMC4050P](#) [VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VML2030](#) [VML4030](#)
[VMC3030](#) [VMC3040](#) [VMC3040S](#) [ABC1000](#)


*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, please visit: [How to Mute Arlo Notifications – Arlo Secure 4.0](#)*

The Mute Notifications feature in the Arlo Secure App allows you to temporarily mute your Arlo notifications for 30 minutes, 1 hour, 3 hours, or 24 hours. This means you can quickly turn off unwanted notifications without adjusting mode settings in the Arlo Secure App or settings in your mobile device.

If your Arlo Secure App is currently muted, a notification banner shows at the top of the Arlo app.

Important notes:

- Mute Notifications affects your entire Arlo account.
 - Muting notifications in the Arlo Secure App on a mobile device automatically mutes notifications on any other devices that are signed in to the same account, such as a tablet or another phone.
 - Friends who have been granted access to your Arlo devices are not affected because they are signed in to their own separate account. For more information, visit [How do I add friends to my Arlo account?](#).
- The Arlo Baby camera can't be muted. To prevent notifications on the Arlo Baby, select **Monitoring Off** in the Arlo app, edit an existing mode, or create a new mode.

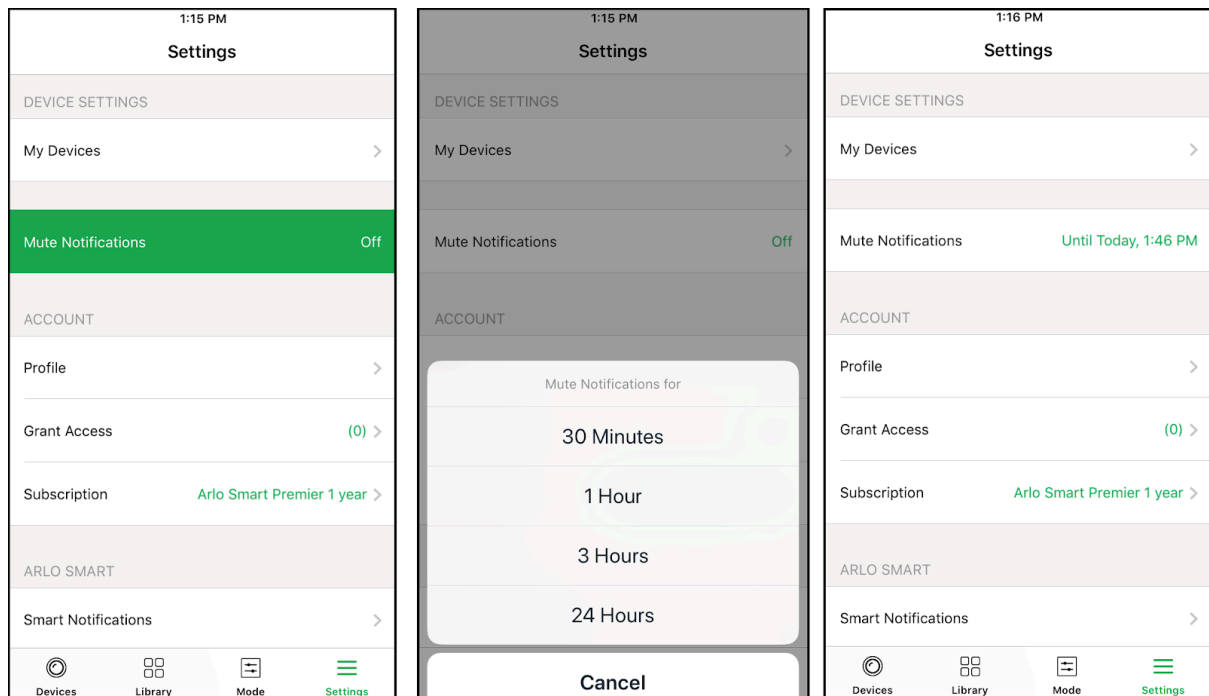

Mute notifications

You can mute Arlo notifications in two ways:

- In the Arlo Secure App, navigate to settings and tap **Mute Notifications**.
- iOS only: When a notification displays on your mobile device, expand it and select **Mute Notifications**.

To mute notifications in the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap **Settings**.
3. Tap **Mute Notifications**.

A pop-up displays.

Note: If Mute is currently deactivated, it says 'Off' next to Mute Notifications. If Mute is activated, it indicates the time when mute was activated.

4. Select the amount of time to mute the Arlo Secure App.

Push notifications aren't sent from the Arlo Secure App for the amount of time you selected.

To mute notifications from a push notification (Arlo Plans with iOS only):

1. When you receive an Arlo notification, expand the push notification banner with 3D touch or a long press.

2. Tap **Mute Notifications**.

The Arlo app opens, and a pop-up banner displays.

3. Select the amount of to mute the Arlo Secure App.

Push notifications aren't sent from the Arlo Secure App for the amount of time you selected.

To extend Mute Notifications in the Arlo Secure App:

1. Launch the Arlo Secure App.

2. Tap **Settings**.

The Mute Notifications section displays the time when mute will expire.

3. Tap **Mute Notifications**.

A pop-up displays.

4. Tap **Add 15 Minutes** to extend the amount of time that notifications are muted.

Unmute notifications

You can unmute Arlo notifications in two ways:

- Mute Notifications automatically stops when the amount of time that you selected expires.
- In the Arlo Secure App, navigate to settings and tap **Mute Notifications**.

To unmute notifications in the Arlo Secure App:

1. Launch the Arlo Secure App.

2. Tap **Settings**.

The Mute Notifications section displays the time when mute will expire.

3. Tap **Mute Notifications**.

A pop-up displays.

4. Tap **Unmute**.

Push notifications are sent from the Arlo Secure App.

Last Updated:05/06/2024 | Article ID: 000062283

How do I enable or disable push notifications on my Android device?

How do I enable or disable push notifications on my Android device?

This article applies to:

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, please visit: [How do I enable or disable push notifications on my Android device? - Arlo Secure 4.0](#)*

You can enable and disable push notifications at three levels: the mode level, the Arlo Secure App level, and the Android system level.

- To receive some Arlo notifications, but only in certain modes, edit the notification settings for each Arlo mode that isn't sending you the desired notifications.
- To start or stop receiving all Arlo notifications for a while, enable or disable Arlo notifications in the Arlo Secure App.
- If you always want to receive Arlo notifications or never want to receive Arlo notifications, enable or disable notifications at the Android system level.

To enable or disable push notifications for a mode:

1. Launch the Arlo Secure App on your Android device.
2. Tap **Mode**.
3. Select the device for which you want to edit notification settings.
4. Tap the **pencil** icon next to the mode that you want to edit.
5. Tap the **pencil** icon next to the rule that you want to edit.
6. Select or clear the check box next to **Push Notifications**.

You still receive email alerts if they are selected for that mode.

To enable or disable Arlo notifications at the Arlo Secure App level:

1. Launch the Arlo Secure App on your Android device.
2. Tap the **menu** icon (...).

3. Tap **Settings > Notifications**.
4. Tap **GO TO SETTINGS**.
5. Tap **Notifications**.
6. Tap **Show notifications** toggle button to on.
7. Tap **Allow sound and vibration** radio button.

You do not receive Arlo push notifications until you log back in to the Arlo Secure App. You still receive email alerts if they are selected in your camera's active mode.

To enable or disable push notifications at the Android system level:

1. On your Android device, tap **Settings > Notifications**.
2. Tap **All apps**.
3. Tap on the Arlo Secure App.
4. Tap on toggle button to enable or disable push notifications.

For more information on Arlo push notifications, see [Why am I not getting Arlo notifications on my Android or iOS device?](#)

Last Updated:04/25/2024 | Article ID: 000039087

How do I enable or disable Arlo push notifications on my iOS device?

How do I enable or disable Arlo push notifications on my iOS device?

This article applies to:

*This article is for the Arlo Secure experience with **Library**. If you have the Arlo Secure experience with **Feed**, visit: [How do I enable or disable Arlo push notifications on my iOS device? - Arlo Secure 4.0](#)*

You can enable or disable push notifications on two levels: the mode level and the iOS system level.

- If you want to receive some Arlo notifications, but only in certain modes, you must edit the notification settings for each mode that is not sending you the desired notifications.
- If you always want to receive Arlo notifications or never want to receive Arlo notifications, you can enable or disable notifications at the iOS system level.

To enable or disable push notifications for a mode:

1. Launch the Arlo Secure App on your iOS device.
2. Tap **Mode**.
3. Tap the device for which you want to edit notification settings.
4. Tap the **pencil** icon next to the mode that you want to edit.
5. Tap the **pencil** icon next to the rule that you want to edit.
6. Select or clear the check box next to **Push Notification**.

To enable Arlo notifications at the Arlo Secure App level, log in to the Arlo Secure App. If you are logged in and you are not receiving push notifications, visit:

- [Why am I not receiving Arlo notifications on my iOS device?](#)
- [Why am I not receiving Arlo notifications on my Android device?](#)

To enable or disable Arlo notifications at the iOS system level:

1. On your iOS device, tap **Settings**.
 2. Tap **Notifications**.
 3. Tap **Arlo** in the Notifications list.
 4. Tap the **Allow Notifications** switch to turn push notifications from Arlo on or off.
- If you turn off Arlo push notifications at the system level, you do not receive any push notifications even if you selected them in the mode that is active on your Arlo camera.

Last Updated: 11/09/2023 | Article ID: 1133

How do I set up Push Notifications or Email Alerts?

How do I set up Push Notifications?

This article applies to:

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [How do I set up Push Notifications? - Arlo Secure 4.0](#)*

With Arlo cameras, you can choose to receive desktop and push notifications when motion or sound is detected on your Arlo device.

To edit the notifications associated with an Arlo device, you must edit the modes and rules for that camera. For more information, visit: [About Arlo Modes and Rules](#)

To set up push notifications:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click **Mode** and select the Arlo device for which you want to set up notifications.
3. Tap or click the **pencil** icon next to the mode that you want to change.
Inside the Edit Mode screen, the collection of rules that make up that mode displays.
4. Tap or click the **pencil** icon next to the rule for which you want to set up notifications.
5. Under Alert, select the check box next to **Push Notification** to receive push notifications on your mobile device.
6. Tap or click **Save**.

Last Updated:04/18/2024 | Article ID: 1019297

How do I set up Push Notifications or Email Alerts for my Arlo All-in-One Sensor?

How do I set up Push Notifications for my Arlo All-in-One Sensor?

This article applies to:

[MS1001](#)

With the Arlo Home Security System, you can choose to receive push notifications when activity is detected by one of your devices.

To edit the notifications associated with a device, you must edit the modes and rules for that device.

- For more information about modes and rules, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

To set up Push Notifications:

1. Launch the Arlo Secure App.
2. Tap **Routines**.
3. Select a mode.
4. Tap **Add Device Rules**.
5. Choose a device that will be used for the rule and tap or click **Save**.
6. Select the Rule under Device Rules.
7. Tap **Send Notification**.
8. Tap **Notify Everyone**.
9. Tap **Save**.
10. Arm the **Mode**.

Your Arlo All-in-One Sensor needs to first be installed and configured before configuring notifications. For more information on how to setup your All-in-One Sensor, visit:

- [How do I install and configure my Arlo All-in-One Sensor as an Open/Close Sensor for windows or doors?](#)
- [How do I install and configure my Arlo All-in-One Sensor as a Garage Door Sensor?](#)

- [How can I configure my Arlo All-in-One Sensor for Smoke/CO Alarm detection?](#)
- [How do I install and configure my Arlo All-in-One Sensor as a Motion Sensor?](#)
- [How to configure the All-in-One Sensor as a Water Leak Sensor](#)

Last Updated:06/03/2024 | Article ID: 000063008

How can I receive text notifications from my Arlo system instead of email notifications?

How can I receive text notifications from my Arlo system instead of email notifications?

To receive text message notifications instead of email notifications, you must convert a phone number into an email address. This is useful if you use a feature phone (as opposed to a smartphone) because feature phones are usually capable of sending and receiving text messages.

Before you convert a phone number into an email address, you need the email-to-text message format for your mobile phone service provider.

Refer to the following list of email-to-text message formats by provider:

- **Alltel.** cellnumber@message.alltel.com
- **AT&T.** cellnumber@txt.att.net
- **Cingular.** cellnumber@cingularme.com
- **Metro PCS.** cellnumber@MyMetroPcs.com
- **Nextel.** cellnumber@messaging.nextel.com
- **Powertel.** cellnumber@ptel.net
- **Sprint.** cellnumber@messaging.sprintpcs.com
- **SunCom.** cellnumber@tms.suncom.com
- **T-Mobile.** cellnumber@tmomail.net

- **US Cellular.** cellnumber@email.uscc.net
- **Verizon.** cellnumber@vtext.com
- **Virgin Mobile.** cellnumber@vmobl.com

Check with your mobile phone service provider to confirm the format.

To receive text message notifications from your Arlo camera

1. Launch the Arlo app or log in to your Arlo account at my.arlo.com.
2. Tap or click **Mode**.
3. Select a device.
4. Tap or click the **pencil** icon next to the Mode you wish to have text messages sent from.
5. Tap or click the **pencil** icon next to the rule that you want to edit.
6. Select the **Email Alerts** check box.
7. Tap or click the **pencil** icon next to the Email Alerts check box.
8. Tap or click **Edit** in the upper-right corner.
9. Enter the email-to-text message format for your mobile phone service provider and click the **+** icon to add the entry.
10. Click **Save** to save the text message number.

Note: To receive text message notifications from other Arlo Wire-Free or Arlo Q cameras, repeat steps 2 through 5. The text message number appears in the list of Email alert addresses.

What are Critical Alerts and how do I set them up on my Arlo Secure App for iOS?

What are Critical Alerts and how do I set them up on my Arlo Secure App for iOS?

This article applies to:

[Arlo Secure App](#)

Critical Alerts are notifications for emergency and security events that override Mute, Silent Mode, and Do Not Disturb on your iOS device. Critical Alerts are not enabled by default. Arlo Emergency Response must be set up for Critical Alerts to work.

To activate Critical Alerts on an Android device, visit: [What are Critical Alerts and how do I set them up on my Arlo Secure App for Android?](#)

There are two types of Critical Alert notifications:

- Emergency Response (Fire, Police, Medical)
 - [Emergency Response](#) notifications occur when Fire, Police, or Medical services are called.
- Security System Push Notifications (Panic and Water Leak)
 - Security System notifications occur when a [water leak is detected by an Arlo All-in-One Sensor](#) or when a [Panic is triggered by the Arlo Home Security System](#).

Requirements:

- iOS version 12.0 or later.
- Your Arlo account must be on the [new Arlo Secure experience](#), and updated to the latest version of the Arlo Secure App.
- You must have an active [Premium plan](#).
- [Emergency Response](#) must be configured.

Note: Critical Alerts are available in the United States only.

Enabling Critical Alerts requires two steps:

1. Enable Critical Alerts for your Location in the Arlo Secure App.
2. Enable the permission for Critical Alerts on each mobile device where you want to receive the alerts.

Critical Alerts are set up by Location. If you have more than one Location, you will need to enable Critical Alerts on each one. Only Admin users can enable or disable Critical Alerts for the Location.

- For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

To enable Critical Alerts on your iOS device:

Enable Critical Alerts for the Location on your device. If you want multiple devices to have critical alerts, you need to repeat the permissions process on each device.


1. Launch the Arlo Secure App.



2. Tap .
3. Tap **Notifications**.
4. If the **Personalize your notifications to recognize important events** pop-up displays, tap **Continue**.
5. If the **You can always be notified of critical events** pop-up displays, tap **Continue**.
6. Tap **Critical Alerts**.




You must enable the Critical Alerts permission on the device. A permission request will display when enabled. You can also enable the permission through your iOS device settings. You must enable the Critical Alerts permission separately on each device where you want to receive Critical Alerts.

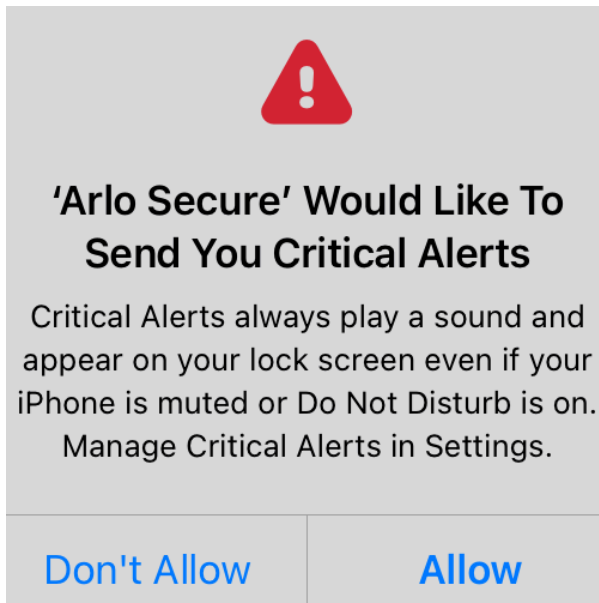

7. To select which notifications are received, tap **Customize Alerts**.

8. Tap **Emergency Response** or **Security System**.

Note: One of these options must be selected to receive Critical Alerts.

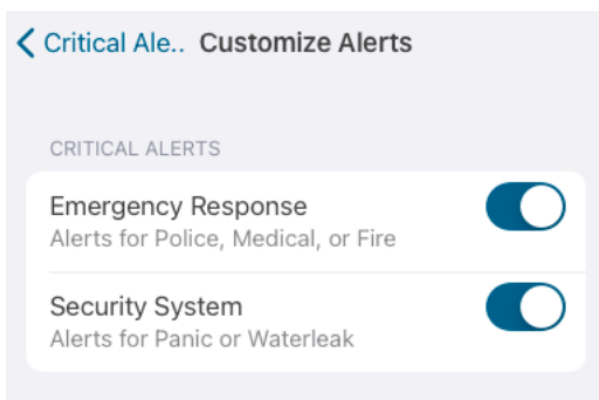

Shared users can also access Critical Alerts. To add friends on your Arlo Secure App, visit: [How do I add friends on my Arlo Secure App? - Arlo Secure 4.0](#)

Last Updated:09/20/2024 | Article ID: 000063063

What are Critical Alerts and how do I set them up on my Arlo Secure App for Android?

What are Critical Alerts and how do I set them up on my Arlo Secure App for Android?

This article applies to:

[Arlo Secure App](#)

Critical Alerts are notifications for emergency and security events that override Mute, Silent Mode, and Do Not Disturb on your Android device. Critical Alerts are not enabled by default. Arlo Emergency Response must be set up for Critical Alerts to work.

To activate Critical Alerts on an iOS device, visit: [What are Critical Alerts and how do I set them up on my Arlo Secure App for iOS?](#)

There are two types of Critical Alert notifications:

- Emergency Response (Fire, Police, Medical)
 - Emergency Response notifications occur when Fire, Police, or Medical services are called.
- Security System Push Notifications (Panic and Water Leak)
 - Security System notifications occur when a water leak is detected by an Arlo All-in-One Sensor or when a Panic is triggered by the Arlo Home Security System.

For more information, visit:

- [What is the Arlo Emergency Response feature and how does it work?](#)
- [What is the Panic Button on my Arlo Keypad Sensor Hub and how do I use it?](#)
- [How to configure the All-in-One Sensor as a Water Leak Sensor?](#)

Requirements:

- Critical Alerts require Android 7 or later.

Note: Some Android devices may not support Critical Alerts.

- You must have an active [Premium plan](#).
- [Emergency Response](#) must be set up.
- Your Arlo account must be on the [new Arlo Secure experience](#).

Note: Critical Alerts are available in the United States only.


Critical Alerts are set up by Location. If you have more than one Location, you will need to enable Critical Alerts on each one. Only Admin users can enable or disable critical alerts for the location. Do Not Disturb mode must be enabled.

- Android device settings screen may vary. Consult your device manual or manufacturer's website for specific instructions.

To enable Critical Alerts on your Android device:

If you have more than one Location, you will need to enable Critical Alerts on each one. If you want multiple devices to have Critical Alerts, you need to repeat the process on each device.


1. Launch the Arlo Secure App.
2. Tap .
3. Tap **Notifications**.
4. If the **Personalize your notifications to recognize important events** pop-up displays, tap **Continue**.
5. If the **You can always be notified of critical events** pop-up displays, tap **Continue**.
6. Tap **Critical Alerts**.

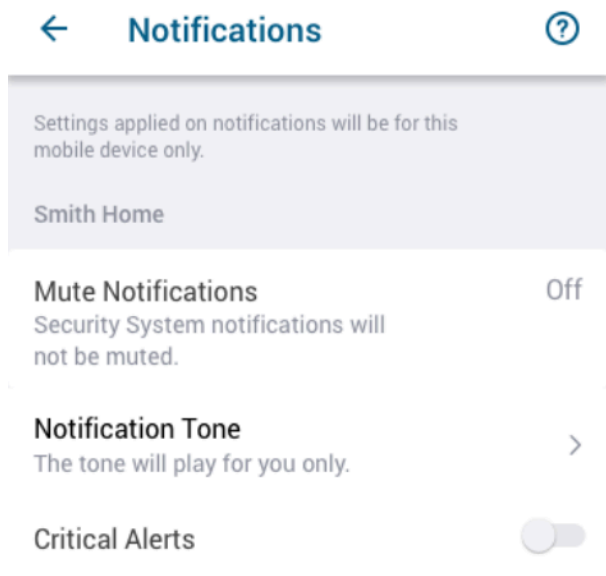

You must enable the Critical Alerts permission on the device. A permission request will display when enabled. You can also enable the permission through your Android device settings. You must enable the Critical Alerts permission separately on each device where you want to receive Critical Alerts.

7. To select which notifications are received, tap **Customize Alerts**.
8. Tap **Emergency Response** or **Security System**.

Note: One of these options must be selected to receive Critical Alerts.

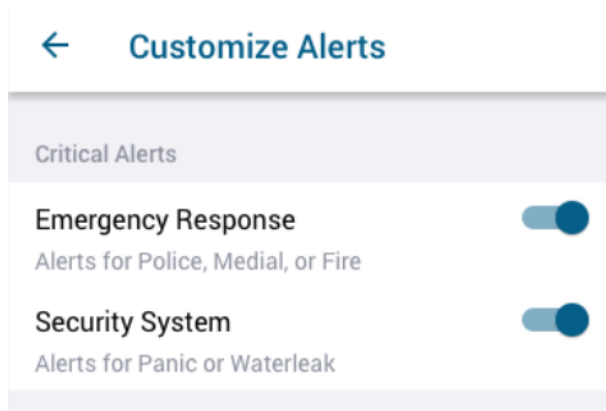

Shared users can also access Critical Alerts. To add friends on your Arlo Secure App, visit: [How do I add friends on my Arlo Secure App?](#)

TROUBLESHOOTING

Why am I not receiving Arlo notifications on my Android device?

Why am I not receiving Arlo notifications on my Android device?

This article applies to:

[AVD2001](#) [AVD1001](#) [AAD1001](#) [VMB5000](#) [VMB4540](#) [VMB4500](#) [VMB4000](#) [VMB3500](#) [VMB3000](#)
[VMB3010](#) [AL1101](#) [VMC5040](#) [VMC4030P](#) [VMC4040P](#) [FB1001](#) [VMC4041P](#) [VMC4050P](#)
[VMC4030](#) [VMC2020](#) [VMC2040](#) [VMC2030](#) [VMC2032](#) [VML2030](#) [VML4030](#) [VMC3030](#) [VMC3040](#)
[VMC3040S](#) [ABC1000](#)

*This article is for the Arlo Secure App experience with **Library**. If you have the Arlo Secure App experience with **Feed**, visit: [Why am I not receiving Arlo notifications on my Android device? - Arlo Secure 4.0](#)*

To ensure that you receive mobile notifications on your Android device:

- Make sure you are logged in to the Arlo Secure App to receive push notifications.
- Check if you have the latest version of the Arlo Secure App.
- Enable push notifications for the Arlo Secure App on your Android device.

For more information, visit: [How do I enable or disable push notifications on my Android device?](#)

- Unmute Mute Notifications:
 - Launch the Arlo Secure App.
 - Tap **Settings**.
 - Tap **Mute Notifications**.
 - Tap **Unmute**.

- Enable Push Notifications in your Arlo device's modes and rules.
For more information, visit: [How do I set up notifications or alerts?](#)
- Make sure your device is not in Power Saving mode.
- Make sure your device does not have Do Not Disturb enabled.

If you still have problems receiving Android notifications, contact [Arlo Support](#).

Last Updated:05/01/2024 | Article ID: 000062235

ARLO SAFE APP

HOW TO

How do I subscribe to Arlo Safe?

How do I subscribe to Arlo Safe?

This article applies to:

ASB1001

You can purchase an Arlo Safe plan by visiting Arlo Safe Plans and clicking Subscribe Now or by following the steps below.

Note: You can't purchase or change an Arlo Safe plan on the Arlo Safe App for iOS.

To purchase an Arlo Safe plan on my.arlo.com:

1. Log in to my.arlo.com.
2. In the dropdown menu in the upper-left, select My Arlo Account.
3. Under Subscription, click Arlo Safe.
4. Under Arlo Safe Subscription, click Subscribe Now.

If you are currently on an Arlo Safe trial, click Change Plan.

5. Follow the instructions to purchase an Arlo Safe plan.

To purchase an Arlo Safe plan on the Arlo Safe App for Android:

1. Launch the Arlo Safe App on Android.

2. Tap .
3. Tap Subscription.
4. Tap Subscribe Now.

If you are currently on an Arlo Safe trial, tap Change Plan.

5. Follow the in-app instructions to purchase an Arlo Safe plan.

For more information about Arlo Safe plans, visit: [What is included in my Arlo Safe subscription?](#)

Last Updated:04/10/2023 | Article ID: 000062867

How do I set up Family Safety in Arlo Safe?

How do I set up Family Safety in Arlo Safe?

This article applies to:

Arlo Safe is only available in the US.

An Arlo Safe user can only be part of one family. Family Place Alerts, Family Check-Ins, and Family Safety Monitoring requires a subscription to Arlo Safe.

- For more information, visit: [What is included in my Arlo Safe subscription?](#)

To set up Family Safety in Arlo Safe:

1. Launch the Arlo Safe App.
2. Tap Family Safety.
3. Tap + to add a family member.

The following note displays:

Note: Your friend must have a mobile phone number so they can download the Arlo Safe app and use this feature.

4. Tap OK.

5. Type a name or number in the To field.

Select the desired contact from the list that displays or click the + icon to display your Contact list and tap on a name.

6. Edit the first and last name if needed.
7. Toggle Give Admin Rights on or off.

This feature gives admin rights so your friend can add/remove users, use tracking settings, and set user preferences.

8. Tap Continue.
9. Select Live Tracking (Enable this mode to receive notifications of friend's latest location) or Check in Only (Enable this mode to check in with friends and view their location).
10. Tap Continue.

The Invite Sent message displays for two seconds and then fades.

The invitee must download the Arlo Safe app to accept your invitation.

If you have notifications turned on, you will be notified when the invitee accepts your invitation to join your family.

11. If you need to remove a user from the My Family list, tap the family member name and tap Remove User.
12. When the Are you sure you want to remove user? message is displayed, tap Remove User.

Last Updated:05/10/2024 | Article ID: 000062720

How do I use the Check-In feature in Arlo Safe?

How do I use the Check-In feature in Arlo Safe?

This article applies to:

To send a Check-in Request:

1. Launch the Arlo Safe App.
2. Tap Family Safety.
3. Tap the family member name.
4. Tap Send Check in Request.

A Check in request will be sent to the family member.

To respond to a Check-in Request:

A push notification will be received on your device.

1. Launch the Arlo Safe App.
2. Tap Check in.

To review the Check-in Details after a family member has checked in:

A push notification will be received on your device.

1. Launch the Arlo Safe App.
2. Tap View Details.

Last Updated:05/13/2024 | Article ID: 000062722

How do I change my Safety PIN in Arlo Safe?

How do I change my Safety PIN in Arlo Safe?

This article applies to:

To change the Safety PIN:

1. Launch the Arlo Safe app.
2. Tap .
3. Tap Safety PIN.
4. Enter the 4-digit code you want to use.
5. Enter the same number again.
6. Tap Save.

Last Updated:05/29/2024 | Article ID: 000062723

What is Car Safety and Crash Detection in Arlo Safe and how do I set it up?

What is Car Safety and Crash Detection in Arlo Safe and how do I set it up?

This article applies to:

Arlo Safe uses sensors in your phone to detect a crash. Arlo Safe automatically alerts emergency response personnel during a car accident to send help so you don't have to call.

Crash Detection servers analyze GPS and motion data to detect whether you have been involved in a car accident.

Note: Arlo Safe is only available in the US. Crash Response requires a subscription to Arlo Safe. For more information, visit: [What is included in the Arlo Safe subscription?](#)

Requirements:

Permissions for Location, Motion Sensors, and Push Notifications must be enabled on your mobile device to use Car Safety in the Arlo Safe App.

- Ensure Location is set to Always On.
- o For iOS devices:

Ensure Location Access is set to Always and Precise Location is set to On.

Enable the Arlo Safe App under Motion & Fitness:

Go to Settings.

Tap Privacy & Security.

Tap Motion & Fitness.

Toggle Fitness Tracking to the On position.

Toggle Arlo Safe to the On position.

o For Android devices:

In Location settings, ensure Location is set to On, and Improve Accuracy is enabled for Wi-Fi Scanning and Bluetooth Scanning.

In the Android Settings for Apps, ensure the Arlo Safe App has the Location Permission set to Allow all the time.

- Ensure Cellular Data set to On.
- Ensure Wi-Fi is enabled (Enabling Wi-Fi on your mobile device improves location accuracy, even if you are not connected to a Wi-Fi network).

Your mobile phone needs a minimum battery life of 20%.

Your car must be moving at least 25 mph for 30 seconds and come to an abrupt stop to detect a crash.

- Note: Crash Detection does not replace 911.

To set up Car Safety in Arlo Safe:

1. Launch the Arlo Safe App.
2. Tap Car Safety.

Note: If the Permission Needed (Please allow Arlo Safe to access your motion) pop-up displays, tap Open Settings and toggle Motion to On.

For iOS devices, ensure Fitness Tracking is enabled: Tap Settings > Privacy & Security > Motion & Fitness.

3. The How it Works pop-up displays.

Read the notes and tap OK, I've Got It.

The Automatic Crash Response screen displays.

4. Slide the switch to the right to enable Crash Response.
5. When the You're all set! pop-up displays, tap OK.
6. If you wish to disable Automatic Crash Response, slide the switch to the left.
Are you sure? displays.
7. Tap Turn Off.

Note: Turning off Crash Response means Arlo Safe will not be able to detect an accident or send help automatically.

Last Updated:06/25/2024 | Article ID: 000062718

How do I add Places for location notifications in Arlo Safe?

How do I add Places for location notifications in Arlo Safe?

This article applies to:

Arlo Safe allows you to add locations like home, school, or work to receive notifications when others arrive or leave.

- You can add a maximum of 10 places.

To add a Place:

1. Launch the Arlo Safe App.
2. Tap Family Safety.
3. Tap Places.
4. Tap +Add a Place.
5. Enter an address or location and select the desired location.

Note: You can also tap Current Location to use the address where you are currently located or tap Locate on Map. Move the map to the desired location and tap Continue.

6. Enter the Name of the place on the Place Details screen.
7. Move the Geofencing slider left or right to set a radius for the location notifications and tap Continue.
8. On the Set Notifications screen, toggle Arrives and Leaves on or off for each family member to receive notifications for arrivals and departures of the location.
9. Tap Complete.

To edit a Place:

1. Launch the Arlo Safe App.
2. Tap Family Safety.
3. Tap Places.
4. Select a location from the list.
5. Edit the Place details and tap Save.

To remove a Place:

1. Launch the Arlo Safe App.
2. Tap Family Safety.
3. Tap Places.
4. Select a location from the list.
5. Scroll to the bottom of the screen and tap Remove Place.

Last Updated:06/14/2024 | Article ID: 000062724

How do I set up Personal Safety in Arlo Safe?

How do I set up Personal Safety in Arlo Safe?

This article applies to:

Arlo Safe allows you to add up to two trusted family members or friends to be notified in the event of an emergency.

To set up Personal Safety in Arlo Safe:

1. Launch the Arlo Safe app.
2. Tap Safety Contacts.
3. Tap + Add Safety Contact.

Note: Your safety contact must have a mobile phone so they can be notified in an emergency.

4. Tap Done.

Note: If you do not give Arlo Safe permission to access your contacts, you will have to manually enter the contact information.

If Contacts is not enabled, open your phone settings, select Arlo Safe and toggle Contacts to On.

5. Type a name or mobile phone number in the To field.
6. Select the desired contact from the list that displays or click the + icon to display your Contact list and tap on a name.

The Give your contact a name screen displays.

7. Edit the first and last name if needed and click Add this Name.
8. If you need to delete a Safety Contact, tap Safety Contacts.
9. Tap the Contact name.
10. Tap Remove User.

11. When the confirmation pop-up displays, tap Remove Safety Contact.

Last Updated:06/24/2024 | Article ID: 000062719

How do I dispatch emergency services to my location with the Arlo Safe app?

How do I dispatch emergency services to my location with the Arlo Safe App?

This article applies to:

Location Permissions must be enabled on your mobile phone to use Emergency Service dispatch in the Arlo Safe App.

Note: Arlo Safe is only available in the US.

Emergency dispatch requires a subscription to Arlo Safe.

- For more information, visit: [What is included in my Arlo Safe subscription?](#)

To dispatch emergency services to your location:

1. Launch the Arlo Safe App.
2. Tap the red Shield icon at the top right of the screen.
3. Tap Fire, Police, or Medical.
4. Swipe the emergency icon to the right to dispatch the emergency service.

To cancel emergency dispatch services:

1. Tap Cancel Request.
2. Enter your PIN.
3. Tap Continue.

Last Updated:05/10/2024 | Article ID: 000062721

How do I add an Arlo Safe widget to my Android device home screen?

How do I add an Arlo Safe widget to my Android device home screen?

This article applies to:

The Arlo Safe App offers a widget that can be added to your Android device home screen. The Personal Safety widget for Arlo Safe functions the same as the Personal Safety Button in the Arlo Safe App. You can quickly tap the button to call for emergency response, record video, and notify your emergency contacts.

The Arlo Safe App must be updated to version 1.2 or later to use Arlo Safe widgets.

Note: An Arlo Safe subscription plan (or trial plan) is required to use the Personal Safety Button for emergency service dispatch and recording.

To add an Arlo Safe widget to your Android device home screen:

1. Tap and hold an available area on your device home screen.
2. Tap Widgets.
3. Tap Arlo Safe.
4. Tap + Add Widget.

The widget displays on your home screen.

For more information on the Arlo Safe Widgets, visit:

- [What widgets are available for the Arlo Safe App and how do I use them?](#)
- [How do I cancel an emergency initiated from my Arlo Safe widget?](#)
- [Arlo Safe FAQ](#)

How do I add an Arlo Safe widget to my iOS device home screen or lock screen?

How do I add an Arlo Safe widget to my iOS device home screen or lock screen?

This article applies to:

The Arlo Safe App offers widgets that can be added to your home screen or lock screen for iOS devices. The Personal Safety widget for Arlo Safe functions the same as the Personal Safety Button in the Arlo Safe App. You can quickly tap the button to call for emergency response, record video, and notify your emergency contacts.

Note: An Arlo Safe subscription plan (or trial plan) is required to use the Personal Safety Button for emergency service dispatch and recording.

Requirements:

- The Arlo Safe App must be updated to version 1.2 or later to use Arlo Safe widgets.
- Home screen widgets require iOS 14.4 and above.
- Lock screen widgets require iOS 16 and above.

To add an Arlo Safe widget to your iOS device home screen:

1. Tap and hold on an empty area on your device home screen.
2. Tap + in the upper-left corner of the screen.
3. Tap Arlo Safe.
4. Tap + Add Widget.

The Arlo Safe widget displays on your home screen.

To add an Arlo Safe widget to your iOS device locked screen:

1. Tap and hold on an empty area on the iOS device lock screen until the Customize button appears.
2. Tap Customize.
3. Tap Add Widgets.
4. Tap Arlo Safe.

5. Tap or drag the Arlo Safe widget.
6. Tap X to close out the Arlo Safe and Add Widget screens.
7. Tap Done.

The widget will display on your lock screen.

For more information on Arlo Safe widgets, visit:

- [What widgets are available for the Arlo Safe App and how do I use them?](#)
- [How do I cancel an emergency initiated from my Arlo Safe widget?](#)
- [Arlo Safe FAQ](#)

Last Updated:06/25/2024 | Article ID: 000063076

What widgets are available for the Arlo Safe App and how do I use them?

What widgets are available for the Arlo Secure App and how do I use them?

This article applies to:

The Arlo Secure App offers a widget that can be added to your home screen for iOS and Android devices. The widget allows you to change the Arlo Modes (Arm Away, Arm Home, Standby) without interaction with the main app.

Adding a widget

- [How do I add an Arlo Secure App Widget for my iOS device home screen?](#)
- [How do I add an Arlo Secure App Widget on my Android device home screen?](#)

Note: Your Arlo Secure App must be updated to the new Arlo Secure App experience with Feed to use the Arlo Secure App Widget.

Arlo Secure App Widget for iOS:

Arlo Secure App Widget for Android:

To change the Location on the widget:

1. Simply press and hold the Arlo Secure widget.
2. Select the Location.

Note: When changing Locations, only the users Locations and shared Locations with admin access will be available.

If you receive an error message, visit: [How do I resolve Arlo Secure App Widget error messages?](#)

Last Updated:09/30/2024 | Article ID: 000063379

How do I cancel an emergency initiated from my Arlo Safe widget?

How do I cancel an emergency initiated from my Arlo Safe widget?

This article applies to:

Arlo Safe allows you to quickly get help from first responders in an emergency. This service is available 24/7 to ensure proper help is on the way to help address the situation.

To access this feature, you need an Arlo Safe plan. To learn more, visit: [Arlo Safe Plans](#)

To cancel an emergency initiated from your Arlo Safe widget:

1. Launch the Arlo Safe App.

Note: You cannot cancel the emergency from the widget, you must open the Arlo Safe App.

2. Tap Cancel Request.

3. Enter your PIN to cancel the call.

Emergency Canceled. We're glad you're safe! will appear on your Arlo Safe App.

4. Tap Continue.

Last Updated:04/30/2024 | Article ID: 000063078

What is included in my Arlo Safe subscription?

What is included in the Arlo Safe subscription?

This article applies to:

Arlo Safe Plans Arlo Safe App

Arlo Safe offers a Free Plan, an Individual Plan, and a Family Plan. Arlo Safe is also available with the Arlo Premium Plan. The ability to automatically notify emergency contacts is offered for free. Additional features are available with paid plans. For more information, visit: [Arlo Safe Plans](#)

- Note: Arlo Safe is only available in the US.

Arlo Safe Features:

Alerts to Emergency Contacts:

Automatically notify your emergency contacts when you have an emergency. If needed, they can send help directly to you.

One Tap Protection:

With a quick tap, connect with our professional security experts to get emergency help.

Guardian Mode Protection:

You are never alone. Our professional security experts are with you every step of the way. Simply release a button to get emergency help.

Cloud Witness™ Incident Recording:

Record events as they happen and store them in the cloud for future use.

Crash Detection & Response:

Automatically alert emergency response agents during a car accident to send help quickly.

24/7 Personal Safety Expert:

Triple redundant, five diamond, UL certified monitoring centers ensure you get an immediate response from medically trained, security experts.

Family Place Alerts:

Save your family's most popular locations like school, home, and work. Be notified when members arrive or leave those places.

Family Check-Ins:

Check in with family members and see their location for ultimate peace of mind.

Family Safety Monitoring:

Keep in touch with family members. Locate, live view, text or call directly from the app and send help to them during an emergency.

Unlimited Users:

Invite and connect the entire family, with the Family Plan.

Arlo Safe Widgets:

Enables you to quickly request help with the tap of a button directly from your device home or lock screen. Connects you to a live security expert who will send emergency help directly to you.

	Free	Individual Plan	Family Plan	Premium Plan
Trial Length	-	-	30 Days	30 Days
Users	1	1	Unlimited	Unlimited
Features				

	Alerts to Emergency Contacts	Alerts to Emergency Contacts	Alerts to Emergency Contacts
	Emergency Contacts	Alerts to Emergency Contacts	
-	Guardian Mode and One Tap Protection	Guardian Mode and One Tap Protection	
-	Cloud Witness™ Incident Recording	Cloud Witness™ Incident Recording	
-	Crash Detection & Response	Crash Detection & Response	Crash Detection & Response
-	24/7 Personal Safety Expert	24/7 Personal Safety Expert	24/7 Personal Safety Expert
-	-	Family Place Alerts	Family Place Alerts
-	-	Family Check-Ins	Family Check-Ins
-	-	Family Safety Monitoring	Family Safety Monitoring
-	-	-	Arlo Secure features including 30-Day Video History, 24/7 Professional Monitoring, 24/7 Emergency Response, Arlo Intelligence, and more

Last Updated:09/20/2024 | Article ID: 000062713

How do I activate an alarm for a family member in Arlo Safe?

How do I activate an alarm for a family member in Arlo Safe?

This article applies to:

To activate an alarm for a family member in Arlo Safe:

Note: Arlo Safe is only available in the US.

Emergency dispatch services require an Arlo Safe subscription.

For more information, visit: [What is included in my Arlo Safe subscription?](#)

1. Launch the Arlo Safe App.
2. Tap Family Safety.
3. Tap on a family member name.
4. Tap Send Help.

Last Updated:06/21/2024 | Article ID: 000062717

TROUBLESHOOTING

Why am I unable to track family members on the Arlo Safe app?

Why am I unable to track family members on the Arlo Safe app?

This article applies to:

If you are having trouble tracking family members, try the following:

1. Ensure your family member has the Arlo Safe App installed on their device.
2. Make sure your family member is actually set up as a family member. For more information, visit: [How do I set up Family Safety in Arlo Safe?](#)
3. Ensure the family member's mobile device is powered on with sufficient battery charge.
 - The device may show an inaccurate location without sufficient battery charge.
 - If the device is off, you will not be able to track or locate the family member.
4. Make sure your family member has a strong cellular or Wi-Fi network connection.
5. Verify their account was added to your My Family list.
 - Launch the Arlo Safe app.
 - Tap Family Safety.

- Their account should appear under My Family.
6. If the family member has an Invite Pending status:
- Tap the family member name.
-
- Tap Resend Invite.
 - The user must accept the invitation to be your Family Member.
7. Make sure Location Services or Location Permissions are enabled on the family member's device.
8. Ensure the family member has Live tracking enabled on their Arlo Safe app:
- Launch the Arlo Safe app.
 - Tap Family Safety.
 - Tap the family member name.
 - Under Tracking Settings, select Live Tracking.

Note: If the family member does not have Live Tracking enabled, manual Check-In is required.

Last Updated:05/10/2024 | Article ID: 000062704

Why am I unable to log into the Arlo Safe App on my iPhone or iPad?

Why am I unable to log in to the Arlo Secure App on my iPhone or iPad?

This article applies to:

Arlo Secure App

This article is for the Arlo Secure App experience with Library. If you have the Arlo Secure App experience with Feed, please visit: [Why am I unable to log in to the Arlo Secure app on my iPhone or iPad? - Arlo Secure 4.0](#)

If you are unable to access the Arlo Secure App with an iOS device, try the following troubleshooting:

- Make sure your mobile device is connected to the Internet.
- Verify your credentials. Make sure the username and password entered is correct.
- If you are using face recognition, make sure this is enabled for the Arlo Secure App:
 1. Launch the Arlo Secure App.
 2. Tap Settings.
 3. Tap Profile.
 4. Tap Login Settings.
 5. Log in with Face ID toggle switch should be on.
- To check on your iOS device:
 1. Tap Settings.
 2. Scroll to Face ID & Passcode.
 3. Enter your passcode.
 4. Tap Other Apps.

You will see apps that have requested to use Face ID. The toggle should be green indicating that you can use Face ID to unlock the app.

- Try resetting your password. Tap Forgot Password? to reset.
- Make sure you are receiving the two-factor authentication and the code entered is correct.
 - o If you are having issues with 2FA, visit: [Why isn't two-step verification working?](#) or [What is two-step verification and how do I set it up?](#)
- Try a different two-factor authentication method if email isn't working, try SMS or Push Notification.
- Trust the browser. If you are using an autosaved password, make sure the password is correct. Remove the password in case auto-fill is set up.
- Try using a browser to login.
- Force kill the Arlo Secure App. Re-open the Arlo Secure App and re-login.
- Restart your device and log in to the Arlo Secure App.
- Try deleting the Arlo Secure App and reinstall.
- Make sure the Arlo Secure App is on the latest version.

- If you are still having issues, contact Arlo Support.

Last Updated:05/01/2024 | Article ID: 000062762

Arlo Safe is causing my mobile device battery to drain; what do I do?

Arlo Safe is causing my mobile device battery to drain; what do I do?

This article applies to:

The Arlo Safe app is designed to check the device's location, and only updates the location when a significant change in location occurs. This is to reduce the battery usage on your mobile device.

If you are in transit, such as in a car or train, the location will update every 15 minutes, or when the app is being actively used.

If Arlo Safe is causing your mobile device battery to drain, try the following:

1. Check your network or data connection.
 - o Poor Network connection or weak signal strength can drain your battery fast as it tries to connect.
 - o If you are indoors or there's overhead obstructions, GPS will constantly try to update.
 - o The Arlo Safe app will also refresh periodically with the regular change in location.
2. Restart your mobile device.
3. Make sure you have installed the most current version of the Arlo Safe app.
4. Make sure you are using the most current iOS or Android operating system software on your mobile device.
5. Try decreasing the screen brightness and adjusting the display timeout on your mobile device.
6. Try using a dark theme or dark mode on your mobile device.
7. Keep your mobile device charged.
8. Check to make sure other apps are not draining your battery.

9. When travelling for extended periods, such as in a car or train, temporarily disable Live Tracking and switch to Check-In mode.

- o Live tracking will update more often while travelling, which causes additional battery usage.

Last Updated:05/13/2024 | Article ID: 000062709

I am unable to reach Dispatch on Arlo Safe, what do I do?

I am unable to reach Dispatch on Arlo Safe, what do I do?

This article applies to:

If you are having an emergency and unable to reach dispatch, please dial 911.

Note: Arlo Safe is only available in the US.

Emergency dispatch requires a subscription to Arlo Safe. For more information, visit: [What is included in my Arlo Safe subscription?](#)

Once you are safe, try the following troubleshooting steps to determine why you are unable to reach Dispatch:

1. Verify that you are subscribed to Arlo Safe. Emergency dispatch services require a subscription.
2. Make sure the Hold Until Safe button is pressed, and the alarm is not canceled.
3. Ensure the phone number saved under your profile is correct.
4. To check the phone number:
 - o Tap .
 - o Tap EditProfile.
 - o Tap the phone number to edit.
 - o Enter your updated phone number.
 - o A verification code will be sent to you by text message.
 - o Enter the code and click Continue.
5. Make sure you have a strong cellular or Wi-Fi network connection.

6. For Android devices: Disable phone spam blocker apps and/or settings.
7. Ensure the Arlo Safe contact is unblocked and able to send notifications.
8. Make sure the Arlo Safe app is updated to the latest version.
9. You can test the feature to make sure it is working properly. Once the text message is received, tap I'm safe, I don't need help to cancel the alarm.

Last Updated:05/15/2024 | Article ID: 000062707

My friends are not being notified by Arlo Safe, what do I do?

My friends are not being notified by Arlo Safe

This article applies to:

If your friends, family, or contacts are not receiving notifications from Arlo Safe:

- Make sure your Arlo Subscription is still active:
 1. Tap .
 2. Tap Subscription.
- Ensure permissions have been allowed in the Arlo Safe App for accessing Contacts on your device.

To enable permissions on iOS:

1. Go to your device Settings.
2. Scroll down to Arlo Safe.
3. Tap Contacts.

To enable permissions on Android:

1. Go to your device Settings.
2. Scroll down to Apps.
3. Select Arlo Safe.
4. Tap Permissions.

5. Tap Contacts.
6. Tap Allow.
- Verify the Safety Contact number is entered correctly:
 1. Launch the Arlo Safe App.
 2. Tap Safety Contacts.
 3. Review the Safety Contact details for accuracy.
- Ensure push notifications are enabled on your friend or family member's device.
- Disable phone spam blocker apps and/or settings.
- Make sure the Arlo Safe contact is unblocked and able to send notifications.
- Ensure there is a sufficient mobile data or Wi-Fi connection.
- Delete and re-add the contact. To add the contact, visit: [How do I set up Personal Safety in Arlo Safe?](#)

Last Updated:05/08/2024 | Article ID: 000062706

Why am I unable to locate a person in Arlo Safe?

Why am I unable to locate a person in Arlo Safe?

This article applies to:

- To locate a person in Arlo Safe, you must have an active Arlo Safe subscription plan or free trial.

If you are unable to locate a person in Arlo Safe:

1. Ensure your friend or family member has downloaded and installed the Arlo Safe App to their mobile phone.
2. Make sure your friend or family member has their mobile phone powered on and they are logged into Arlo Safe.

Note: The location will be based on the last device logged in to Arlo Safe.

3. Ensure they have a network connection on their device.

4. Make sure they have Cellular Data set to On for the Arlo Safe App.
5. Ensure Notifications is set to On for the Arlo Safe App.
6. Make sure Privacy > Location Services is set to On in their mobile phone settings.
7. Ensure they have not enabled Airplane Mode, Data Saver, or Power Saver functions on their mobile phone.
8. Make sure Location settings is set to Always On for the Arlo Safe App.
9. Check that Location Services is turned On for the mobile device.

-

- o For iOS devices:

Tap Settings > Privacy & Security > Motion & Fitness

Toggle Fitness Tracking to On.

Toggle Arlo Safe to On.

Go back to Privacy & Security.

Tap Location Services

Toggle Location Services to On.

Scroll down and tap Arlo Safe.

Select Always and toggle Precise Location to On.

- o For Android devices:

In Location Settings, set Location to On.

Ensure Improve Accuracy is enabled for Wi-Fi Scanning and Bluetooth Scanning.

In the Android Settings for Apps, ensure Arlo Safe has the Location Permission set to Allow all the time.

If the information above does not resolve the location issue:

- Ensure the phone number used for your friend or family member is correct and that it is a mobile phone number.
- Force close the Arlo Safe App on your device and reopen the app.
- Have your friend or family member force close and reopen the Arlo Safe App on their phone.

- Power off your device and power it back on.
- Have your friend or family member power off their device and power it back on.

Last Updated:06/20/2024 | Article ID: 000062715

Why is my location not updating or incorrect in Arlo Safe?

Why is my location not updating or incorrect in Arlo Safe?

This article applies to:

If your location is not updating or incorrect in Arlo Safe:

Make sure you are logged in on the correct device.

- Your location will follow the device where your account is currently logged in.

Ensure you have cellular data enabled and that you have a stable connection.

- GPS location may not update if the cellular data connection is unstable.
- Make sure Data Saver is set to Off.

Confirm Location Services is turned On or activated.

For iOS devices:

- Ensure Location Access is set to Always and Precise Location is set to On.
- Make sure to enable the Arlo Safe app under Motion and Fitness.
- To enable Motion and Fitness on your mobile device:
 1. Go to Settings.
 2. Tap Privacy & Security.
 3. Tap Motion & Fitness.
 4. Toggle the switch next to Fitness Tracking to the On position.
 5. Ensure the toggle for Arlo Safe is in the On position.

For Android devices:

- In Location settings, ensure Location is set to On, and Improve Accuracy is enabled for Wi-Fi Scanning and Bluetooth Scanning.

- In the Android Settings for Apps, ensure the Arlo Safe App has the Location Permission set to Allow all the time.

Enable Wi-Fi on your mobile device.

- Turning on Wi-Fi on your device improves location accuracy, even if you are not connected to a Wi-Fi network.

Calibrate the Google Map settings:

1. Open Google Maps App.
2. Enter a destination in the search bar or tap a location on the map.
3. Tap your location.
4. Select Calibrate with Live View and follow the steps in the app.

Restart your mobile device.

Make sure the Arlo Safe App is updated to the latest version.

Make sure the mobile device software is up to date.

Try disabling the Battery Saver or Power Saving mode.

- These modes limit some of the background data used by Arlo Safe.
- Check the Power Saver settings to ensure Arlo Safe is not set to go to Sleep or Hibernate.

Location can affect accuracy of GPS data.

- If you are indoors or there are overhead obstructions this may not allow GPS data to update.

Make sure you are not using a VPN.

Make sure your mobile device is not connected to a mobile Wi-Fi hotspot.

- Location information from your Wi-Fi hotspot may not provide an accurate location.

What does the Request Not Allowed Error mean in the Arlo Safe App?

What does the Request Not Allowed Error mean in the Arlo Safe App?

This article applies to:

Note: If you require emergency assistance, please dial the local emergency number in your family member's current location.

If you tapped Send Help in the Arlo Safe App and received a Request Not Allowed error, the person you are requesting help for is outside of the Arlo Safe service area.

Arlo Safe emergency dispatch is only available in the US. You will be unable to send help for someone through the Arlo Safe App if their location is outside of the US.

Last Updated:06/05/2024 | Article ID: 000062849

Why am I unable to log into the Arlo Safe App on my Android device?

Why am I unable to log into the Arlo Safe App on my Android device?

This article applies to:

If you are unable to access the Arlo Safe App with an Android device, try the following troubleshooting:

1. Make sure your mobile device is connected to the Internet.
2. Verify your credentials. Make sure the username and password entered is correct.
3. Try resetting your password. Tap Forgot Password? to reset.
4. Make sure you are receiving the two-factor authentication and the code entered is correct.

Note: If you are having issues with 2FA, visit: [Why isn't two-step verification working?](#) or [What is two-step verification and how do I set it up?](#)

5. Try a different two-factor authentication method if email isn't working, try SMS or Push Notification.
6. Trust the browser. If you are using an autosaved password, make sure the password is correct. Remove the password in case auto-fill is set up.

7. Try using a browser to log in.
8. Force kill the Arlo Safe App. Re-open the Arlo Safe App and re-login.
9. Restart your device and re-login to the Arlo Safe App.
10. Try deleting the Arlo Safe App and re-install.
11. Make sure the Arlo Safe App is on the latest version.

If you are still having issues, please contact Arlo Support.

Last Updated:05/16/2024 | Article ID: 000062854

I am receiving false alarms from Arlo Safe, what do I do?

I am receiving false alarms from Arlo Safe, what do I do?

This article applies to:

A text notification will be sent to you if there is an active alarm.

If you believe you are receiving false notifications, try the following:

1. Check to see if there is an active alarm.
 - A. Launch the Arlo Safe app and cancel the alarm by entering your PIN. The Arlo Safe app will display a pop-up to tell you the alarm is canceled.
 - B. Tap Continue.
2. There may be an alarm created by a family member.
 - A. Try to cancel the alarm by tapping Cancel Request.
2.
 - B. Notify the family member to cancel the alarm on their device. In most cases the alarm can only be canceled by the person who created it.
3. If you are still receiving alarm notifications, force close the Arlo Safe App.

4. Log out of Arlo Safe and log back in.
5. If none of the options above solve the issue, uninstall the Arlo Safe App and reinstall the app to your mobile device.

Last Updated:05/10/2024 | Article ID: 000062710

ARLO SAFE BUTTON

HOW TO

How do I pair my Arlo Safe Button with my mobile device?

How do I pair my Arlo Safe Button with my mobile device?

This article applies to:

ASB1001

To connect your Arlo Safe device to your phone:

1. Launch the Arlo Safe app.
2. Tap .
3. On Device, tap Add.

Note: Ensure Bluetooth is enabled on your mobile device. If the Arlo Safe app detects that Bluetooth is off, a prompt to turn Bluetooth on will display.

4. Install the battery in your Arlo Safe Button. For more information, visit: What kind of battery does my Arlo Safe Button use and how do I replace it?
5. Press the button on the bottom of your Arlo Safe Button. Your device will vibrate once to confirm.
6. Tap Continue in the Arlo Safe app.
7. Once the Arlo Safe Button is discovered, tap Continue.
8. Name your Arlo Safe Button (Maximum of 8 characters).

9. The device will automatically check for updates.

IMPORTANT: Do not close the Arlo Safe app or move the Arlo Safe Button away from your mobile device during this process.

10. Once the update is complete, tap OK.

Your Arlo Safe Button is ready for use.

Last Updated:05/09/2024 | Article ID: 000062836

How do I factory reset the Arlo Safe Button?

How do I factory reset the Arlo Safe Button?

This article applies to:

ASB1001

To reset the Arlo Safe Button using the Arlo Safe App:

1. Launch the Arlo Safe App.
2. Tap .
3. Tap My Device.
4. Select the device.
5. Tap Remove Device.
6. Tap Remove to confirm that you want to remove the device.
7. Tap Reset Arlo Safe Device.

- Note: If the Arlo Safe Button is disconnected or the battery is dead, the reset will not be completed. Use the steps below.

To factory reset the Arlo Safe Button when not paired with the app:

1. In the Bluetooth Settings for your mobile device, remove the Arlo Safe Button from your Bluetooth device list.

On iOS devices:

- a. Go to Settings on your iOS device.

- b. Tap Bluetooth.
- c. Find the Arlo Safe Button in My Devices, then tap the info button for your Arlo Safe Button.
- d. Tap Forget this Device.

On Android devices:

- a. Go to Settings on your Android device.
 - b. Tap Connections.
 - c. Tap Bluetooth.
 - d. Find the Arlo Safe Button in Paired Devices, then tap the gear icon for your Arlo Safe Button.
 - e. Tap Unpair.
 - f. Tap Unpair again to confirm.
2. Remove and reinstall the battery.
 3. Press and hold the button on the bottom of the Arlo Safe Button for 15 seconds until the Arlo Safe Button vibrates twice, and then release.

The Arlo Safe Button will automatically enter pairing mode.

Last Updated:06/20/2024 | Article ID: 000062841

How do I update the firmware on my Arlo Safe Button?

How do I update the firmware on my Arlo Safe Button?

This article applies to:

ASB1001

Firmware updates for the Arlo Safe Button are manually triggered to avoid unnecessary downtime. You can choose to update the firmware when it first becomes available, or you can manually update the firmware at a time of your choosing.

Note: Your Arlo Safe Button needs to have sufficient battery charge to update the firmware. If your Arlo Safe Button does not show as "high", replace the battery before proceeding. For

more information, visit: [What kind of battery does my Arlo Safe Button use and how do I replace it?](#)

To update your firmware when the Arlo Safe app detects an update:

A push notification is sent by the Arlo Safe app when new firmware for your Arlo Safe Button is available.

1. Tap the push notification to open the Arlo Safe app and start the firmware update.
2. Tap Update Now.

Note: Do not close the Arlo Safe app or move the device away from your phone during this process.

3. Tap OK.
4. Once the update is complete, your Arlo Safe Button is ready for use.

To update your Arlo Safe Button firmware manually:

1. Launch the Arlo Safe app.
2. Tap .
3. Tap My Devices.
4. Tap Device Info.
5. If the firmware is up to date, the version number will be displayed next to Firmware. If a new firmware version is available, Update Now will be displayed.
6. Tap Update Now.

Note: Do not close the Arlo Safe app or move the device away from your phone during this process.

7. Tap OK.
8. Once the update is complete, your Arlo Safe Button is ready for use.

Last Updated:05/29/2024 | Article ID: 000062842

How do I use the Personal Safety Button in Arlo Safe?

How do I use the Personal Safety Button in Arlo Safe?

This article applies to:

An Arlo Safe subscription plan (or trial plan) is required to use the Personal Safety Button for emergency service dispatch and recording.

To use the Personal Safety Button:

1. Launch the Arlo Safe App.
2. Tap the blue circle in the center of the screen.

The button will turn red, the mobile phone will vibrate, and an alarm is created. You will receive a call from the emergency service dispatch.

Note: A text message may also be sent to confirm the emergency.

3. If you are safe and wish to cancel the alarm, enter your Safety PIN.
4. Emergency Canceled displays. Tap Continue.

If you allow the alarm to continue without entering the PIN, Emergency help has been requested will display.

5. If you wish to cancel the emergency service dispatch, tap Cancel Request.
6. If there is a true emergency and you need to record audio and video, tap Record Event.

When you end the recording you will receive an email with a link to your recording. The recording will be stored in the Arlo Cloud for thirty (30) days.

Note: Without an Arlo subscription plan (or trial plan) your contacts will be notified but emergency service dispatch will not be contacted.

What kind of battery does my Arlo Safe Button use and how do I replace it?

What kind of battery does my Arlo Safe Button use and how do I replace it?

This article applies to:

ASB1001

The Arlo Safe Button uses:

- One ½ AA 3.6V Lithium battery (ER14250).

To replace the battery:

1. Unscrew the lid on the Arlo Safe Button.
2. Remove the old battery.
3. Insert the new battery with the positive (+) end facing up towards the cap.
4. Screw the lid back into place.

Note: Ensure the lid is fully screwed into place. If the lid is ajar, the battery may not provide power.

For more information, visit: [Safety Rules for Arlo Non-Rechargeable Batteries](#)

Last Updated:06/21/2024 | Article ID: 000062837

How do I use the Arlo Safe Button in an emergency?

How do I use the Arlo Safe Button in an emergency?

This article applies to:

ASB1001

Your Arlo Safe Button device needs to be near your phone to get help to you. It works just like the Personal Safety Button in your Arlo Safe app.

There are two ways to get help from your Arlo Safe device:

One Tap Protection

1. When you need help immediately, quickly press and release the button on your Arlo Safe Button.

2. You will receive a message that your alarm was received.
3. In the event of a real emergency, emergency services will be dispatched to your exact location.

Note: Enter your PIN in the Arlo Safe app to cancel the emergency.

Guardian Mode Protection

1. When you feel unsafe, press and keep holding the button down on your Arlo Safe device.
2. When you release the button, an alarm will be triggered, and you will receive a message that your alarm was received.
3. In the event of a real emergency, emergency services will be dispatched to your exact location.

Note: Enter your PIN in the Arlo Safe app to cancel the emergency.

Last Updated:05/13/2024 | Article ID: 000062838

TROUBLESHOOTING

My Arlo Safe Button is not responding, what do I do?

My Arlo Safe Button is not responding, what do I do?

This article applies to:

ASB1001

IMPORTANT: If you are currently experiencing an emergency, use the Arlo Safe app to dispatch help, or dial 911.

Once you are safe, continue with the following if your Arlo Safe Button is not responding:

1. Make sure Bluetooth is enabled on your mobile device.
2. Ensure Airplane mode is turned off or disabled.
3. Make sure your mobile device has a working internet connection, either with your mobile service provider or with Wi-Fi.

4. Bring the Arlo Safe Button and your mobile device closer together. The Arlo Safe Button can work up to 300 ft (90 meters) from your mobile device; however, walls, glass, electronic devices, and other interference may reduce the effective range of your devices.

5. Remove the old battery and replace it with a fresh battery.

6. Remove, reset, and re-pair your Arlo Safe Button with your mobile device.

For more information, visit: [How do I pair my Arlo Safe Button with my mobile device?](#)

7. Try pairing your Arlo Safe Button with a different mobile device.

If you are still unable to get your Arlo Safe Button to respond, contact Arlo Support.

Last Updated:05/15/2024 | Article ID: 000062840

My Arlo Safe Button won't pair with my mobile device, what do I do?

My Arlo Safe Button won't pair with my mobile device, what do I do?

This article applies to:

ASB1001

If you are trying to pair your Arlo Safe Button with your mobile device for the first time, visit: [How do I pair my Arlo Safe Button with my mobile device?](#)

If you are unable to pair your Arlo Safe Button with your mobile device:

Bluetooth may not be enabled on your mobile device.

- An active Bluetooth connection is required to pair your Arlo Safe Button.
- Turn on Bluetooth in your mobile device settings.

The Arlo Safe Button might be too far from the mobile device.

- Try moving your Arlo Safe Button closer to your mobile device during the pairing process.

The Arlo Safe Button battery is possibly drained or not installed properly.

- Try reinstalling the Arlo Safe Button battery to make sure it is installed properly.
- You will not be able to pair the Arlo Safe Button with your mobile device if the Arlo Safe Button battery has a charge of 20% or less.

- For more information, visit: [What kind of battery does my Arlo Safe Button use and how do I replace it?](#)

The firmware update for the Arlo Safe Button may have been interrupted.

- If you have already paired the Arlo Safe Button with a different mobile device, try reconnecting it with the previous device, then update the firmware.
- For more information, visit: [How do I update the firmware on my Arlo Safe Button?](#)

The Arlo Safe Button could be offline or not responding.

- You may need to perform a factory reset on your Arlo Safe Button.
- For more information, visit: [How do I factory reset the Arlo Safe Button?](#)

Last Updated:05/02/2024 | Article ID: 000062835

I am unable to update the firmware on my Arlo Safe Button, what do I do?

I am unable to update the firmware on my Arlo Safe Button, what do I do?

This article applies to:

ASB1001

Use the following troubleshooting steps if you are unable to update the Arlo Safe Button firmware:

Make sure your Arlo Safe Button has the latest firmware version.

1. Launch the Arlo Safe app.
2. Tap .
3. Tap My Device.
4. Tap Device Info.
5. If the firmware is up to date, the version number will be displayed next to Firmware. If a new firmware version is available, Update Now will be displayed.

The battery level is too low.

- The firmware update will not be initiated if the Arlo Safe Button has less than "high" battery level. For more information, visit: [What kind of battery does my Arlo Safe Button use and how do I replace it?](#)

- To check the Arlo Safe Button battery status:

1. Launch the Arlo Safe app.
2. Tap .
3. Tap My Device.
4. Tap Device Info.

The Arlo Safe Button is too far from the mobile device.

- Try moving your Arlo Safe Button closer to your mobile device during the firmware update.

The mobile device is not connected to the Internet.

- Make sure your mobile device is connected to the Internet via Wi-Fi or LTE.
- Force close and reopen the Arlo Safe app.

The Arlo Safe Button is unpaired, disconnected, or offline.

- For more information, visit: [My Arlo Safe Button is not responding, what do I do?](#)

Last Updated:05/29/2024 | Article ID: 000062843

My Arlo Safe Button reports that it is disconnected, what do I do?

My Arlo Safe Button reports that it is disconnected, what do I do?

This article applies to:

ASB1001

IMPORTANT: If you are currently experiencing an emergency, use the Arlo Safe App to dispatch help, or dial 911.

If the Arlo Safe Button reports that it has disconnected:

1. Bring the Arlo Safe Button and your mobile device closer together.

The Arlo Safe Button can work up to 300 ft (90 meters) from your mobile device, however, walls, glass, electronic devices, and other interference may reduce the effective range of your devices.

2. Signal interference from other devices with Bluetooth or Wi-Fi may cause the Arlo Safe Button to disconnect.

Try moving your Arlo Safe Button or mobile device to a new location.

3. RFID blocking wallets, bags, or purses can reduce or block the signal of the Arlo Safe Button.

Keep your Arlo Safe Button in pockets without RFID blocking.

4. Make sure Bluetooth is enabled on your mobile device and that your Arlo Safe Button is paired to the mobile device.

5. Remove, reset, and re-pair your Arlo Safe Button with your mobile device.

For more information, visit: [How do I pair my Arlo Safe Button with my mobile device?](#)

6. Remove the old battery and replace it with a fresh battery.

7. Try pairing your Arlo Safe Button with a different mobile device.

Last Updated:06/06/2024 | Article ID: 000062844

44

HSS: Keypad / Sensor / Outdoor Siren

GENERAL INQUIRY

Arlo Home Security System FAQ

Arlo Home Security System FAQ

This article applies to:

SH1001 MS1001 LBB1001 KB1001 NT1001

Which Arlo cameras or doorbells work with the Arlo Home Security System?

- All Arlo cameras and doorbells work seamlessly with your Arlo Home Security System through the Arlo Secure App.

- Arlo SecureLink enabled cameras, such as the Arlo Pro 5S, can directly connect to the Arlo Keypad Sensor Hub for easy setup.

Do I need to own Arlo cameras to use the Arlo Home Security System?

- No. The Arlo Home Security System can work independently without Arlo cameras, Arlo SmartHubs, or Arlo Base Stations.
- If you do have an Arlo camera, it will work seamlessly with the Arlo Home Security System and the Arlo Secure App.

What devices can be added to the Arlo Home Security System?

- The following devices are compatible with the Arlo Home Security System and can be connected to the Arlo Keypad Sensor Hub:
 - o Arlo All-in-One-Sensor
 - o Arlo Cellular and Battery Backup
 - o Arlo Pro 5S Camera
 - o Arlo Wire-Free Outdoor Siren
 - o Arlo Wire-Free Keypad

What is the Arlo Wire-Free Outdoor Siren?

- The Arlo Wire-Free Outdoor Siren provides you with the ability to deter burglars and alert neighbors with a loud siren and built-in strobe light.
- The weather resistant design allows you to extend your security system outdoors.
- The Arlo Wire-Free Outdoor Siren seamlessly connects with the Arlo Home Security System and can be customized to trigger automatically when unusual activity is detected by your system or manually from the Arlo Secure App.
- For more information, visit: [Arlo Wire-Free Outdoor Siren FAQ](#)

What is the Arlo Cellular and Battery Backup?

- The optional Arlo Cellular and Battery Backup connects to the Arlo Keypad Sensor Hub.
- It includes a pre-installed SIM card and keeps your Arlo Home Security System connected and powered during internet or power outages for up to 12 hours.
- For more information, visit: [What is the Arlo Cellular and Battery Backup and how does it work?](#)

How do security accessories such as the Arlo Wire-Free Outdoor Siren or Arlo All-in-One Sensor pair to the Arlo Keypad Sensor Hub?

- The Arlo Home Security System uses Arlo SecureLink technology to pair devices to the Arlo Keypad Sensor Hub. Arlo SecureLink offers longer range and better efficiency for wireless devices.
- For more information, visit: [What is Arlo SecureLink and how does it work with my Arlo system?](#)

Can I enable more than one detection function on my All-in-One Sensor?

- Yes, you can use several different detection functions at once. For example, the All-in-One Sensor can be configured to protect windows and doors by combining motion and open/close detection.
- You can also place the sensor under a sink for example and combine water leak and temperature detection.
- The All-in-One Sensor can also detect Smoke and CO alarms if you have the Arlo Premium plan.

Is an Arlo Secure plan required to use the Arlo Home Security System?

- No, but Arlo Professional Monitoring is highly recommended for additional security features.
- The Arlo Home Security System includes a trial of Arlo Professional Monitoring.
- After the Professional Monitoring trial expires, an Arlo Premium plan is required for the Arlo Professional Monitoring service to work.
- For more information, visit: [What is Arlo Professional Monitoring?](#)

Is a trial of Arlo Professional Monitoring included with the Arlo Home Security System?

- Yes. A trial is included with the purchase of a new Arlo Home Security System.
- After the Arlo Professional Monitoring trial expires, an Arlo Premium plan is required for the Arlo Professional Monitoring service to work.
- For more information, visit: [What is Arlo Professional Monitoring?](#)

What is included with Arlo Professional Monitoring?

- Arlo Professional Monitoring includes features such as One Tap Direct Dispatch, 24/7 Live Security Experts, Video Verification,¹ and Cellular and Battery Backup.²
 - o ¹ Requires an Arlo camera, sold separately.
 - o ² Requires the Arlo Cellular and Battery Backup accessory, sold separately.

What is Arlo Video Verification?

- Video Verification allows Live Security Experts to access cameras during an emergency to take necessary action.
- Security Experts can only access cameras you have authorized for this purpose.

What type of Wi-Fi network do I need to use for the Arlo Keypad Sensor Hub?

- The Arlo Keypad Sensor Hub uses your existing 2.4GHz Wi-Fi network.

Last Updated:09/20/2024 | Article ID: 000062858

Arlo Keypad Sensor Hub Product Tour

Arlo Keypad Sensor Hub Product Tour

This article applies to:

SH1001

The Arlo Keypad Sensor Hub is part of the Arlo Home Security System. The Keypad Sensor Hub lets you change security modes of your security system to: Arm Away, Arm Home and Standby, turn the siren on and off, and request assistance from a 24/7 Live Security Expert. The Keypad Sensor Hub also includes a motion sensor, and a microphone that listens for smoke/CO2 detection alarms.

Note: Do not press the motion sensor. It is not a button. Do not block the motion sensor.

The Arlo Keypad Sensor Hub has the following integrated features:

Arm Away: Use this mode for security when no one is inside the home. Open access and indoor motion detection will trigger the alarm by default.

Arm Home: Use this mode for security when someone is home. Open access will trigger the alarm by default, while motion detection inside the home will not.

Standby: Use this mode when you don't want to trigger the alarm. You can choose to still receive notifications when an event is detected.

Panic: Press and hold for 2 seconds to activate the customizable panic response (siren, connected lights, and/or request assistance from a 24/7 Live Security Expert).

Fire: Press and hold this button for 2 seconds to request assistance for a fire emergency.

Police: Press and hold this button for 2 seconds to request assistance from the police.

Medical: Press and hold this button for 2 seconds to request assistance for a medical emergency.

Note: A subscription plan that supports professional monitoring is required for some features. For more information, visit: [What is Arlo Professional Monitoring?](#)

For more information on the Arlo Keypad Sensor Hub, visit: [What do the buttons on the Arlo Keypad do?](#)

Last Updated:05/08/2024 | Article ID: 000063025

What is the difference between Professional Monitoring and Self-Monitoring for my Arlo Home Security System?

What is the difference between Professional Monitoring and Self-Monitoring for my Arlo Home Security System?

This article applies to:

SH1001 MS1001 LBB1001 KB1001 NT1001

Arlo Professional Monitoring services can alert 24/7 Live Security Experts when a security event occurs at your home.

Without a Professional Monitoring plan, your Arlo Home Security System is self-monitored. The Arlo Secure App alerts you with security events, but it does not notify 24/7 Live Security Experts.

Professional Monitoring requires an Arlo Premium with Professional Monitoring plan after the trial expires.

- For more information, visit: [What is Arlo Professional Monitoring?](#)

Professional Monitoring

If the Arlo Home Security System detects an alarm event:

- The Arlo Secure App alerts you on your mobile device.
- With the Arlo Cellular and Battery Backup (sold separately), the system keeps working if power and internet go down and sends alerts via the cellular network.
- 24/7 Live Security Experts monitor your home and contact you.
- 24/7 Live Security Experts can access cameras to verify your alarm event and enable priority emergency response if pre-authorized.
- Emergency responders are sent to your home, if needed.
- The Panic Button triggers a call to 24/7 Live Security Experts, and activates sirens and lights as configured.

Self-Monitoring

If the Arlo Home Security System detects an alarm event:

- The Arlo Secure App alerts you on your mobile device.
- The Panic Button activates sirens and lights as configured.

Last Updated:09/20/2024 | Article ID: 000062981

What is Arlo Video Verification and how does it work?

What is Arlo Video Verification and how does it work?

This article applies to:

SH1001

Video Verification enables live professional monitoring agents to view videos or snapshots from your Arlo system to help determine if there is an issue requiring immediate response during Panic alarms.

- Professional monitoring agents cannot access video recordings if an alarm is triggered by a sensor.
 - o Video recordings are only available if the alarm is triggered by a camera.

- Video Verification requires Arlo Professional Monitoring.
- Video Verification requires Arlo cameras or Arlo Video Doorbells to be installed and active at your Location.
- If power or Wi-Fi is out and an Arlo Cellular and Battery Backup is installed, the system will provide snapshots instead of videos.

To enable Video Verification:

1. Launch the Arlo Secure App.
2. Tap .
3. Select Location.
4. Tap Emergency Response.
5. Tap Video Verification.
6. Enable the cameras you want to use for Video Verification.

Last Updated:08/22/2024 | Article ID: 000062863

TROUBLESHOOTING

Arlo All-in-One Sensor Temperature, Ambient Light, and Smoke/CO Detection Troubleshooting (INTERNAL)

Follow these troubleshooting steps if the customer's All-in-One Sensor is not detecting Temperature, Ambient Light, and/or Smoke/CO:

- Have the customer ensure that Temperature, Ambient Light sensor, and/or Smoke/CO Alarm detection is enabled. To enable Temperature, Ambient Light, Smoke/CO Alarm detection, do the following:
1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
 2. Tap or click Devices.
 3. Tap or click .
 4. Tap or click of the All-in-One Sensor.

5. Tap or click Temperature; Ambient Light; Smoke/CO Alarm
6. Slide the toggle for Enable Detection to the right (on).

For Smoke/CO Alarm Detection, continue with the succeeding steps:

7. Slide the toggle for Enable Detection to the right (on). When the smoke or carbon monoxide detector goes off in the house, Arlo will notify the customer.

Note: The microphone is used for Smoke / CO alarm detection. Enabling the sensor's Smoke / CO alarm detection capabilities will turn on the microphone.

8. Tap or click Yes when customer is asked Are you sure you want to enable the microphone? message appears.
9. Place the Sensor within 6 feet (1.8 m) of the Smoke or CO alarm that they want to detect.

Note: Make sure the alarm follows national standards for T3 or T4 beep patterns and tap Continue.

10. Press the button on the bottom of the device and tap Continue.

Note: Customer has 5 minutes to complete test before button needs to be pressed again.

11. Press the test button on the Smoke / CO detector to active the test beep and tap Finish.

Note: If the sensor detects no sound, No Smoke / CO Alarm Detected will appear. If the sensor detects sound, Smoke / CO Alarm Detect will appear.

- Make sure that the Arlo Security Keypad Hub is online, and the All-in-One Sensor is within range of your Security Keypad Hub. For more information, visit: [How do I use Device Range finder to install my Sensor?](#)

Temperature is incorrect.

- Make sure that customer is looking at the correct Sensor.
- On the Arlo Secure App, confirm the Dashboard is set up correctly to show the correct sensor. For more information, visit: [What is the Dashboard on my Arlo Secure app and how does it work?](#)
- Ensure that the All-in-One sensor is online. For more information, visit: [My All-in-One Sensor is offline, how can I troubleshoot it?](#)
- Check the placement of the All-in-One Sensor. All-in-One Sensors placed under heating or cooling vents or near drafty doors or windows may report incorrect temperatures.

Is the customer not receiving temperature alerts?

- Make sure customer is logged into the Arlo Secure App on their iOS device. If customer is logged out of the Arlo Secure App, customer will not receive notifications on the device.

- Confirm the All-in-One Sensor alert setup. To configure Temperature alerts for the All-in-One Sensor:

1. Launch the Arlo Secure App or log in to the Arlo account at my.arlo.com.
2. Tap or click Devices
3. Tap or click .
4. Tap or click of the All-in-One Sensor.
5. Tap or click Sensors.
6. Tap or click the sensor you want to edit.
7. Tap or click Temperature Detection.
8. Tap or click the pencil icon next to Temperature falls below threshold and Temperature rises above threshold to edit the settings.
9. Select the check box next to Push Notifications and Email Alerts to receive the preferred mode of alerts.
10. Tap or click the pencil icon next to Email Alerts and add the email address then Save. If Email Alerts is active, customer will receive alerts using the email address that was saved.

- Ensure that the All-in-One sensor is online. For more information, visit: [My All-in-One Sensor is offline, how can I troubleshoot it?](#)

- For more information on Arlo notifications, visit the following:

[Why am I not receiving Arlo notifications on my Android device?](#)

[Why am I not receiving Arlo notifications on my iOS device?](#)

[Is the customer not receiving alerts when brightness rises above or falls below the threshold?](#)

- Confirm that the sensor will trigger an alert. To check and adjust, do the following:

1. Launch the Arlo Secure App or log in to the Arlo account at my.arlo.com.
2. Tap or click Devices
3. Tap or click .
4. Tap or click of the All-in-One Sensor.

5. Tap or click Ambient Light
6. Under Brightness Increase and Brightness Decrease, select the check box so the sensor will trigger when the light brightness rises above or falls below the selected threshold.

Is the light threshold/sensitivity set?

- Ensure that ambient light threshold/sensitivity is set. To adjust the threshold/sensitivity, do the following:
 1. Launch the Arlo Secure App or log in to the Arlo account at my.arlo.com.
 2. Tap or click Devices
 3. Tap or click .
 4. Tap or click of the All-in-One Sensor.
 5. Tap or click Ambient Light
 6. Move the slider left or right to increase or decrease ambient light threshold for brightness

Reset the power on your All-in-One Sensor.

1. Slide the front cover down and lift it off the back housing.
2. Remove the battery for ten seconds.
3. Reinsert the battery, with the symbol facing out.

Reset and re-pair your device.

1. To Reset the All-in-One Sensor, press and hold the SYNC button on the bottom of the All-in-One sensor for 10 seconds. The LED blinks amber 5 times.

The All-in-One Sensor resets.

2. To Re-pair the All-In One Sensor, visit: How do I pair the All-in-One Sensor to the Arlo Keypad Sensor Hub?

Check in CS Diag Tool for the Sensor and its status.

- Upon logging in to CS Diag tool, look at the device's STATUS column to verify the status.

If the case needs to be escalated to L2, use the following escalation template:

- Device(s) affected:

- D2AP: Router info. Mesh system or other special considerations?
- When did issue start?
- Changes to system?
- Physical setup: How many walls/other devices?
- Gather logs

Arlo All-in-One Sensor Water Leak Detection Troubleshooting (INTERNAL)

Follow these troubleshooting steps if the customer's All-in-One Sensor is not detecting Water Leak:

1. Make sure that the Arlo Security Keypad Hub is online, and the All-in-One Sensor is within range of the Security Keypad Hub. For more information, visit: [How do I use Device Rangefinder to install my Arlo All-in-One Sensor?](#)
2. Ensure that the All-in-One sensor is online. For more information, visit: [My All-in-One Sensor is offline, how can I troubleshoot it?](#)
3. Have the customer confirm that the Sensor is placed on a flat surface without a gap. Ensure that there are no objects or debris under the Sensor.
4. Ensure the Sensor is not submerged in water. The All-in-One Sensor is not designed to be submerged and may stop operating.
5. Confirm that the water detection is set up and configured to notify the customer when water leaks are detected. For more information, visit: [How do I install and configure my Arlo All-in-One Sensor as a Water Leak Sensor?](#)
6. Confirm that the Water Leak Sensor is enabled in Device Settings.
 - a. Launch the Arlo Secure App or login to the Arlo account at my.arlo.com.
 - b. Tap or click Devices.
 - c. Tap or click .
 - d. Tap or click Water Leak Detection.
 - e. Slide the Enable Detection On slider to turn on Water Leak Detection.
 - f. Set up the water leak detection preference and add an action for notification.
 - g. Tap or click Done once completed.

7. Ensure that Water Detection is enabled in Rules, and Notification is enabled. For more information, visit: [How do I set up Push Notifications or Email Alerts?](#)
8. Have the customer open the door and remove the battery from the Sensor for a few seconds, then replace the battery and close the battery door. The symbol of the battery should be facing outside.
9. Check in CS Diag Tool for the Sensor and its status.

Note: Upon logging in to CS Diag tool, look at the device's STATUS column to verify the status.

10. Verify the customer's Sensor placement.
 - a. Ensure that the sensor is placed on a flat surface without a gap. Sensor detects water under device.
 - b. The Sensor must never be submerged in water. It will break if submerged.
 - c. The Sensor must be placed near the water heater, washer, restroom, sink, or anywhere where the customer wants leak detection.
11. If the case needs to be escalated to L2, use the following escalation template:
 - Device(s) affected:
 - D2AP: Router info. Mesh system or other special considerations?
 - When did issue start?
 - Changes to system?
 - Physical setup: How far is device from BS/SH/Router? How many walls/other devices
 - Gather logs
 - Serial number of the All-in-One Sensor and Keypad Sensor Hub.
 - Collect photos of the customer's sensor placement

Arlo All-in-One Sensor Open/Close Detection Troubleshooting (INTERNAL)

Follow these troubleshooting steps if the customer's All-in-One Sensor is not detecting door, garage door, and window:

1. Make sure the All-in-One Sensor is online and within range. To ensure that the device is online and within range

- o Check the device status on the Arlo Secure App.
 - o Press the button on your All-in-One Sensor and confirm that blue LED is solid.
2. Check the status of the Sensor in CS Diag Tool.

Note: Upon logging in to CS Diag tool, look at the device's STATUS column to verify the status.

3. Verify setup of All-in-One Sensor in Device Settings, Open/Close needs to be enabled. To verify if Open/Close Detection is enabled, do the following:

- o Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
- o Tap or click Devices.
- o Tap or click your All-in-One Sensor.
- o Tap or click Sensor Settings > Sensor Setup.
- o Tap or click Open/Close Detection.
- o Slide the toggle for Enable Detection to the right (on) or left (off).
- o Tap or click to save your settings.

Open/Close Detection is now enabled.

4. Check the Modes and Rules settings and make sure that alerts are enabled. For more information, visit: [About Arlo Modes, Rules, and Automations](#).

5. If the customer is not using a magnet, confirm that Sensor is installed on a tilting or sectional garage door, or a tilting door/window. For more information on placement, visit: [How do I install and physically place the Arlo All-in-One Sensor?](#)

6. Run through Open/Close setup wizard (via Device Settings) to recalibrate Open/Close status. To recalibrate Open/Close status, do the following:

- o Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
- o Tap or click Devices.
- o Tap or click your All-in-One Sensor.
- o Tap or click Setup Assistant > Motion.

- o Customer will be prompted “Where do you want to install your Sensor?”. Select Door or Window.
 - o Tap or click Continue.
 - o Close the door/window then tap or click OK, I closed the door/window then tap or click Continue.
 - o Have the customer press the button on the bottom of the device then tap or click Continue.
 - o Test Sensor by opening and closing the door or window then tap or click Continue.
7. Have the customer remove the battery from the Sensor and place it back in. The (+) symbol of the battery should be facing outside.
8. If these steps do not work, consult L2 and make sure the following information is handy:
- o Device(s) affected
 - o D2AP: Router info. Mesh system or other special considerations?
 - o When did the issue start?
 - o Were there any changes to system?
 - o Physical setup: How far is the Sensor from the Keypad Sensor Hub? How many walls/other devices
 - o Gather logs

Arlo All-in-One Sensor Motion Detection Troubleshooting (INTERNAL)

Answer

Follow these troubleshooting steps if the customer’s All-in-One Sensor is not detecting motion:

2. Make sure that the Arlo Security Keypad Hub is online, and the All-in-One Sensor is within range of your Security Keypad Hub. For more information, visit: [How do I use Device Rangefinder to install my Arlo All-in-One Sensor?](#)
3. Ensure that the All-in-One Sensor is online. For more information, visit: [My All-in-One Sensor is offline, how can I troubleshoot it?](#)
4. Make sure that the position of the sensor is in the corner of the room to maximize the area of detection.

5. Make sure that the sensor is 6ft (1.8m) from the floor for optimal coverage.
6. Motion detection does not work through windows reliably. Ensure that the sensor isn't looking through glass or other transparent objects. Motion sensor decreases in performance when it is aimed to look through glass, plastic, or a mirror.
7. Confirm that the Motion Sensor is enabled in Device Settings.
 - a. Tap or click Devices.
 - b. Tap or click .
 - c. Tap or click for the All-in-One Sensor.
 - d. Tap or click Motion Detection.
 - e. Slide the Enable Detection On slider to turn on Motion Detection.
 - f. Set up your Arlo Multi-Sensor to detect motion and tap Got It.
 - g. Make sure that Motion Detection and Blink on Motion Detection sliders are turned On, and Pet Friendly slider is turned Off.
8. Confirm that Motion Detection is enabled in Rules, and Notification is enabled. For more information, visit: [How do I set up Push Notifications or Email Alerts? - Arlo Secure 4.0](#)
9. Test and adjust the Motion Detection Sensitivity.
 - a. Tap or click Devices.
 - b. Tap or click .
 - c. Tap or click for the All-in-One Sensor.
 - d. Tap or click Sensor Settings.
 - e. Tap or click Motion.
 - f. Slide the Enable Detection On slider to turn on motion detection.
 - g. Tap or click Motion Detection Sensitivity.
 - h. You can test your Sensor by waving your hand in front of it. You may adjust the sensitivity by moving the slider left or right to increase or decrease motion detection sensitivity.
10. Open the door and remove the battery from the Sensor for a few seconds, then replace the battery and close the battery door. The symbol of the battery should be facing outside.

11. Factory reset the device. For more information, visit: [How can I reset the All-in-One Sensor to its factory settings?](#)

12. Check in CS Diag Tool for the Sensor and its status.

Note: Upon logging in to CS Diag tool, look at the device's STATUS column to verify the status.

13. If the case needs to be escalated to L2, use the following escalation template:

- Device(s) affected:
- Router info. Mesh system or other special considerations?
- When did the issue start?
- Were any changes made to system, network, or home?
- Physical setup: How far is the Sensor from the Keypad Sensor Hub? How many walls between the Sensor and Keypay Sensor Hub? Are any other electronic devices located near either device?
- Gather logs

How to troubleshoot an Arlo All-in-One Sensor that will not power on

How to troubleshoot an Arlo All-in-One Sensor that will not power on

This article applies to:

MS1001

If the Arlo All-in-One Sensor will not power on:

Install a new CR2477 Lithium battery.

Ensure the battery is properly inserted with the positive (+) side facing outward.

Reset the Arlo All-in-One Sensor:

1. Open the Arlo All-in-One Sensor back housing and remove the battery.
2. Press the SYNC button while reinstalling the battery.
3. Hold the SYNC button until the LED starts to flash blue and amber, then release.
4. When the Arlo All-in-One Sensor LED slowly blinks blue, pair it to Arlo Keypad Sensor Hub.

If the Arlo All-in-One Sensor still will not turn on, contact Arlo Support.

Last Updated:10/19/2023 | Article ID: 000063151

My Arlo Wire-Free Outdoor Siren will not connect to my Arlo Keypad Sensor Hub, what do I do?

My Arlo Wire-Free Outdoor Siren will not connect to my Arlo Keypad Sensor Hub, what do I do?

This article applies to:

SH1001 SLB1001

If your Arlo Wire-Free Outdoor Siren will not connect to your Arlo Keypad Sensor Hub:

Make sure your Arlo Keypad Sensor Hub is installed and activated.

- If you have not onboarded your Arlo Keypad Sensor Hub, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)

Ensure your Arlo Keypad Sensor Hub is online.

- If the Arlo Sensor Hub is offline, visit: [My Arlo Keypad Sensor Hub is offline, how can I troubleshoot it?](#)

Make sure the Arlo Keypad Hub and the Siren Arlo Wire-Free Outdoor Siren have power.

- Ensure the batteries are properly installed in the Arlo Wire-Free Outdoor Siren and the battery tabs are removed.

Ensure the Arlo Wire-Free Outdoor Siren is within range and not too far away from the Arlo Keypad Sensor Hub.

- Move the Arlo Wire-Free Outdoor Siren closer to the Arlo Keypad Sensor Hub.

Check the Arlo Keypad Sensor Hub LED behavior.

- For more information, visit: [What do the LED behaviors on my Arlo Keypad Sensor Hub mean?](#)

Reset the Arlo Wire-Free Outdoor Siren.

- Open the back housing of the Arlo Wire-Free Outdoor Siren.

- Press the SYNC button five times.
- The LED will blink amber five times to indicate the device was successfully reset.

If you have completed these troubleshooting steps and your Arlo Wire-Free Outdoor Siren was still unable to connect to your Arlo Keypad Sensor Hub, contact Arlo Support to speak to an expert.

Last Updated:05/29/2024 | Article ID: 000063060

How do I factory reset the Arlo Keypad Sensor Hub?

How do I factory reset the Arlo Keypad Sensor Hub?

This article applies to:

SH1001

If you are having issues with your Arlo Keypad Sensor Hub, first try to restart the device. If problems persist you may need to perform a factory reset.

To restart your Arlo Keypad Sensor Hub using the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Select the Arlo Keypad Sensor Hub.
4. Tap .
5. On the Security Hub Settings screen, tap on the name of your device to access the Device Info screen.
6. Tap Restart at the bottom of the screen.
7. Tap Yes to confirm.

The Keypad Sensor Hub Mode LEDs will illuminate white and cycle in a pattern while the device resets.

To restart your Arlo Keypad Sensor Hub using the Keypad:

1. Press on the Arlo Keypad Sensor Hub to set the Mode to Standby.
2. Enter your PIN on the Keypad and press .

3. Press and hold the 5 button on the keypad for 10 seconds.

The Keypad Sensor Hub Mode LEDs will illuminate white and cycle in a pattern while the device resets.

To factory reset the Arlo Keypad Sensor Hub using the Keypad:

WARNING: Factory resetting your Arlo Keypad Sensor Hub returns it to default settings.

- Your Arlo Keypad Sensor Hub is also removed from your Arlo account after a factory reset.

- You must follow the in-app setup process to use your Arlo Keypad Sensor Hub after a factory reset.

- All paired Arlo All-in-One Sensors must be factory reset and paired again after the Arlo Keypad Sensor Hub is reinstalled.

o To factory reset your All-in-One Sensor, visit: [How do I factory reset the Arlo All-in-One Sensor?](#)

- All Pro 5S cameras connected with SecureLink will need to be paired again.

o To pair your Arlo Pro 5S camera with SecureLink, visit: [How do I pair my Arlo Pro 5S Camera to my Arlo Keypad Sensor Hub using Arlo SecureLink?](#)

1. Press **5** on the Arlo Keypad Sensor Hub to set the Mode to Standby.
2. Enter your PIN on the Keypad and press **5**.
3. On the Arlo Keypad Sensor Hub, press and hold the **5** and **5** buttons at the same time for 10 seconds.

The Keypad LEDs will flash white five times to indicate a factory reset.

Note: After factory resetting the Arlo Keypad Sensor Hub, you must re-add it to your Arlo account. For more information on this process, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)

To factory reset your Arlo Keypad Sensor Hub using the Arlo Secure App:

WARNING: Factory resetting your Arlo Keypad Sensor Hub returns it to default settings.

- Your Arlo Keypad Sensor Hub is also removed from your Arlo account after a factory reset.

- You must follow the in-app setup process to use your Arlo Keypad Sensor Hub after a factory reset.

- All paired Arlo All-in-One Sensors must be factory reset and paired again after the Arlo Keypad Sensor Hub is reinstalled.

o To factory reset your All-in-One Sensor, visit: [How do I factory reset the Arlo All-in-One Sensor?](#)

- All Pro 5S cameras connected with SecureLink will need to be paired again.

o To pair your Arlo Pro 5S camera with SecureLink, visit: [How do I pair my Arlo Pro 5S Camera to my Arlo Keypad Sensor Hub using Arlo SecureLink?](#)

1. Launch the Arlo Secure App.

2. Tap Devices.

3. Select the Arlo Keypad Sensor Hub.

4. Tap .

5. On the Security Hub Settings screen, tap on the name of your device to access the Device Info screen.

6. Tap Remove Device at the bottom of the screen.

7. Tap Yes to confirm.

Note: After you Factory Reset your Arlo Keypad Sensor Hub, you must re-add it to your Arlo account. For more information on this process, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)

Last Updated:04/28/2023 | Article ID: 000062967

My Arlo Keypad Sensor Hub will not power on; how can I troubleshoot it?

My Arlo Keypad Sensor Hub will not power on; how can I troubleshoot it?

This article applies to:

SH1001

If your Arlo Keypad Sensor Hub will not power on, try the following troubleshooting steps:

Check the LED lights of your Arlo Keypad Sensor Hub

- If the LED lights turn on, but your Keypad Sensor Hub appears to be offline, visit: [My Arlo Keypad Sensor Hub is offline, how can I troubleshoot it?](#)

Check the Arlo Cellular and Battery Backup, if installed

- If you have a Cellular and Battery Backup installed, and your Keypad Sensor Hub is not powered on, visit: [My Arlo Cellular and Battery Backup is not powering the Keypad Sensor Hub, how can I troubleshoot it?](#)

Check the power adapter

- Unplug the power adapter and inspect the entire length of the cord to make sure it's not damaged.
- Confirm the power outlet is working by plugging in a different device.
- Plug the power adapter into a different power outlet
- Make sure the Keypad Sensor Hub isn't plugged into an outlet that can be turned on and off with a switch
- If you are using a surge protector or power strip, connect the power adapter directly to a wall outlet instead

Turn your Keypad Sensor Hub off and on to reset it

- Unplug the power adapter from the wall outlet, wait 30 seconds, and reconnect it to the outlet
- The Keypad Sensor Hub takes one to two minutes to restart

Last Updated: 05/13/2024 | Article ID: 000062956

My Arlo All-in-One Sensor is not found when trying to install it, how can I troubleshoot it?

My Arlo All-in-One Sensor is not found when trying to install it, how can I troubleshoot it?

This article applies to:

SH1001 MS1001

Try the following troubleshooting steps if your Arlo All-in-One Sensor is not found when adding it to your Arlo account:

Make sure you are meeting the minimum requirements for your Arlo system to operate.

- For more information visit: [What are the minimum requirements for installing and using my Arlo system?](#)

The Arlo Keypad Sensor Hub must be installed first.

- The Arlo Keypad Sensor Hub must be installed and added to your Arlo account before you can add your Arlo All-in-One Sensor.
- For more information on installing your Keypad Sensor Hub, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)

Make sure the Arlo Keypad Sensor Hub is online

Check for the following Arlo Keypad Sensor Hub LED behaviors to ensure that the Arlo Keypad Sensor Hub is online

- No LEDs – the Keypad Sensor Hub has no power
- If the Keypad Sensor Hub has no power, visit: [My Arlo Keypad Sensor Hub will not power on, how can I troubleshoot it?](#)
- All of the buttons blink 5 times - the Keypad Sensor Hub failed to connect to a network.

Make sure the Arlo All-in-One Sensor has power

Check for the following Arlo All-in-One Sensor LED behaviors to ensure that the Sensor is online by pressing the button of your sensor.

- Flashing Blue. The All-in-One Sensor is ready to pair.
- Off/No LED. The All-in-One Sensor battery is not installed, installed incorrectly, or dead.

Ensure the battery is installed properly or try replacing the battery.

- Orange LED. The All-in-One Sensor thinks it's connected to an Arlo Keypad Sensor Hub but is not recognized by your Arlo Home Security System.

The All-in-One Sensor may be too far away from the Keypad Sensor Hub.

- Try moving the All-in-One Sensor closer to the Arlo Keypad Sensor Hub during installation.
- You can use the Device Rangefinder to ensure that the Arlo All-in-One Sensor is within the Arlo Keypad Sensor Hub's range. For more information, visit: [How do I use the Device Rangefinder to install my Arlo All-In-One Sensor?](#)

Reset the All-in-One Sensor

To reset the All-in-One Sensor:

- Press and hold the Sync button for 10 seconds or until the LED blinks amber 5 times.
- Try the installation process again.

Last Updated:05/10/2024 | Article ID: 000062781

My Arlo Pro 5S Camera won't pair to my Arlo Keypad Sensor Hub using Arlo SecureLink, what do I do?

My Arlo Pro 5S Camera won't pair to my Arlo Keypad Sensor Hub using Arlo SecureLink, what do I do?

This article applies to:

SH1001 VMC4060P

If you are having problems pairing your Arlo Pro 5S camera to your Arlo Keypad Sensor Hub, follow these troubleshooting steps:

1. In the Arlo Secure App, check in Devices to make sure your Arlo Pro 5S camera and Keypad Sensor Hub are both online.
2. Make sure the Arlo Pro 5S camera is within range of the Keypad Sensor Hub. We recommend that the devices are placed within 300 feet (90 meters) of each other. Relocate or change the position of the camera to isolate interference or location problems.
3. Ensure that other electronic or Wi-Fi devices are at least 3 feet (1 meter) from both the camera and Arlo Keypad Sensor Hub. Relocate the camera or hub if necessary.
4. Make sure the Keypad Sensor Hub is online. If the Keypad Sensor Hub is offline, visit: [My Arlo Keypad Sensor Hub is offline, how can I troubleshoot it?](#)
5. Try disabling and enabling the SecureLink Connection on the Arlo Pro 5S:
 - o Launch the Arlo Secure App.
 - o Tap Devices.
 - o Tap .
 - o Tap on the Arlo Pro 5S camera.
 - o Tap Connected To.
 - o Tap SecureLink Connection.
 - o Toggle the Enabled switch to on.
6. Reset the power on the Arlo Keypad Sensor Hub and the Pro 5S Camera.

For Arlo Keypad Sensor Hub:

- o Set your Arlo system to Standby. You cannot reset the power of the Arlo Keypad Sensor Hub in either Arm Away or Arm Home modes.
- o Press and hold the 5 button on the keypad for 10 seconds and release.

For Arlo Pro 5S:

6.

- o Release the camera from its housing.
- o Pull the camera all the way out of the camera housing.
- o Remove the battery and re-insert.

7. Factory reset the Arlo Keypad Sensor Hub:

WARNING: Resetting your Arlo Keypad Sensor Hub returns it to default settings.

- o Your Arlo Keypad Sensor Hub is also removed from your Arlo account when you reset it.
- o You must follow the in-app setup process to use your Arlo Keypad Sensor Hub after a reset.
- o All paired All-in-One Sensors must be reset and paired again after the Keypad Sensor Hub is reinstalled.

To reset your All-in-One Sensor, visit: [How do I factory reset the Arlo All-in-One Sensor?](#)

- o All Pro 5S cameras connected with SecureLink will need to be paired again.

To pair your Arlo Pro 5S camera with SecureLink, visit: [How do I pair my Arlo Pro 5S Camera to my Arlo Keypad Sensor Hub using Arlo SecureLink?](#)

To reset your Keypad Sensor Hub:

•

- o Set your Arlo system to Standby. You cannot factory reset the Arlo Keypad Sensor Hub in either Arm Away or Arm Home modes.
- o Press and hold the button and button for 10 seconds.
- o After reset, devices must be setup again.

Last Updated:05/14/2024 | Article ID: 000062979

My Arlo Cellular and Battery Backup is not powering the Keypad Sensor Hub, how can I troubleshoot it?

My Arlo Cellular and Battery Backup is not powering the Keypad Sensor Hub; how can I troubleshoot it?

This article applies to:

SH1001 LBB1001

The optional Arlo Cellular and Battery Backup keeps your Arlo Security System connected and powered during internet or power outages for up to 12 hours.

- For more information, visit: [What is the Arlo Cellular and Battery Backup and how does it work?](#)

If the Arlo Cellular and Battery Backup is not powering the Arlo Keypad Sensor Hub:

- Make sure the Cellular and Battery Backup is securely attached to the Arlo Keypad Sensor Hub.
- Confirm the Arlo Cellular and Battery Backup is properly set up and detected in the Arlo Secure App.

For more information, visit: [How do I set up the Arlo Cellular and Battery Backup?](#)

The Arlo Cellular and Battery Backup has a limited battery life of 12 hours. Battery life varies depending on usage, device settings, and environmental factors. If you are experiencing a power outage lasting longer than 12 hours, the battery backup may not continue to power the Arlo Keypad Sensor Hub.

Last Updated:05/10/2024 | Article ID: 000062989

My Arlo Cellular and Battery Backup is not connecting to the cellular network, how can I troubleshoot it?

My Arlo Cellular and Battery Backup is not connecting to the cellular network; how can I troubleshoot it?

This article applies to:

LBB1001

The optional Arlo Cellular and Battery Backup keeps your Arlo Home Security System connected and powered during internet or power outages for up to 12 hours. This device includes a pre-installed SIM card.

- Note: The cellular service feature of the Arlo Cellular and Battery Backup requires an Arlo Premium Plan after the trial plan period expires.

If your Arlo Cellular and Battery Backup is not connecting to the cellular network:

Make sure the Cellular and Battery Backup is securely attached to the Arlo Keypad Sensor Hub.

- For more information, visit: [How do I set up the Arlo Cellular and Battery Backup?](#)

Confirm the Arlo Cellular and Battery Backup is properly set up and detected in the Arlo Secure App.

- For more information, visit: [How do I set up the Arlo Cellular and Battery Backup?](#)

Confirm the SIM card is properly installed in the Arlo Cellular and Battery Backup.

- The SIM card should be pre-installed to automatically provide cellular backup during an internet outage.

If you are using a new SIM card, ensure the settings for your Arlo Cellular and Battery Backup are correct and that your cellular service is active.

- For more information, visit: [How do I configure the SIM settings in my Arlo Cellular and Battery Backup?](#)

Last Updated:09/20/2024 | Article ID: 000062789

My Arlo Keypad Sensor Hub won't connect to my Wi-Fi network, what do I do?

My Arlo Keypad Sensor Hub will not connect to my Wi-Fi network, what do I do?

This article applies to:

SH1001

Use the following troubleshooting if you attempted to connect your Arlo Keypad Sensor Hub directly to your Wi-Fi router and Arlo failed to discover the device:

Make sure your Wi-Fi network SSID (network name) and password do not contain spaces in the beginning or end of the name or password.

- The Arlo Keypad Sensor Hub will not be able to connect to your network if the network name or password contains spaces leading up to or trailing after the network name or password.
- You will need to remove any spaces before or after your network name and password before connecting the Arlo Keypad Sensor Hub to your Wi-Fi network.

Make sure you typed the correct Wi-Fi network SSID (network name) and password.

- The network SSID and password are case-sensitive and must be EXACTLY correct.
- Tap the password eye icon to view your password before submitting.

Ensure your mobile device and the Arlo Keypad Sensor Hub are within range of your Wi-Fi router.

- During setup, place the Arlo Keypad Sensor Hub within 10-15 feet (3-4.5 meters) of your Wi-Fi router.
- After the Arlo Keypad Sensor Hub is set up and connected, you can move it anywhere within range of your Wi-Fi router.

Make sure the Mode Button LEDs fade in and out while the Arlo Keypad Sensor Hub is being discovered.

- The Arlo Keypad Sensor Hub can time out if the LEDs fade in and out longer than two minutes without successfully connecting to your Wi-Fi network.
- Make sure the Mode button LEDs fade in and out for the entirety of the connection process.

Ensure you are not using a VPN on your mobile device.

- If a VPN is used, disable the VPN connection.

If you are unable to scan the QR code on your Arlo Keypad Sensor Hub, try moving your mobile device closer to or further from the QR code.

- For more information, visit: [The Arlo Secure App will not read the printed QR code on my Arlo device](#)

If you have checked and verified all of the above, factory reset your Arlo device.

- For more information, visit: [How do I factory reset the Arlo Keypad Sensor Hub?](#)

KEYPAD SENSOR HUB

How do I configure an entry or exit delay for my Arlo Home Security System?

How do I configure an entry or exit delay for my Arlo Home Security System?

This article applies to:

SH1001 MS1001 KB1001

When your Arlo Home Security System is set to Arm Away, the exit delay will give you time to leave your location before the devices trigger and escalate an Emergency Response. For example, you may want a one-minute delay, so that you can arm the security system and exit your home before sensors and cameras begin triggering motion. You can also adjust the entry delay to give yourself time to set the system to Standby before any devices trigger an Emergency Response.

To configure Exit and Entry Delay:

1. Launch the Arlo Secure App or log into your account at my.arlo.com.
2. Tap in the Arlo Secure App or click Settings on my.arlo.com.
3. Select your Location.
4. Tap or click Panic.
5. Tap or click Arm Away or Arm Home.
6. Tap or click the time next to Exit Delay.
7. Select 0 sec, 30 sec, 1 min, 1 min 30 sec, 2 min, or 3 min.
8. Tap or click the time next to Entry Delay for each device.
9. Select 0 sec, 30 sec, 1 min, 1 min 30 sec, 2 min, or 3 min.

For more information on setting up your Arlo Home Security System, visit:

- [Arlo Home Security System FAQ](#)
- [About Arlo Routines, Modes, Rules, and Automations](#)
- [How do I add, edit, or remove rules in my Arm Away, Arm Home, and Standby Modes for my Arlo system?](#)
- [What is the Panic Button on my Arlo Keypad Sensor Hub and how do I use it?](#)

- How do I cancel an active Alarm or Panic Button press on my Arlo Keypad Sensor Hub?

Last Updated:06/24/2024 | Article ID: 000062780

How do I create and use a Duress PIN for my Arlo Home Security System?

How do I create and use a Duress PIN for my Arlo Home Security System?

This article applies to:

SH1001 KB1001

Duress PIN is used to silently request Emergency Response or dispatch. This PIN will silence the system if the siren is activated to make it appear that the system shut down, but makes a silent call instead. Once the Duress PIN is activated, the request cannot be canceled on the Arlo Keypad or the Arlo Secure App.

Before setting up a Duress PIN:

- An active Arlo Premium with Professional Monitoring plan is required to set up or use the Duress PIN.
- You are required to have your service address configured prior to setting up a Duress PIN. For more information, visit: [How do I set up Emergency Response for my Location on the Arlo Secure App?](#)
- Only one Duress PIN may be created per Location.

To create your Duress PIN:

1. Launch the Arlo Secure App.
2. Tap .
3. Select the Location under Locations and Plans.
4. Tap PINs.
5. Tap Duress PIN.
6. Enter a 4-digit PIN and tap Continue.
7. Verify your PIN and tap Save.

8. Test the Duress PIN.
9. Tap Continue.

To edit the Duress PIN:

1. Launch the Arlo Secure App.
2. Tap .
3. Tap Location.
4. Tap PINs.
5. Tap Duress PIN.
6. Tap the pencil icon.
7. Enter a 4-digit PIN and tap Continue.
8. Verify your PIN and tap Save.

To use the Duress PIN:

WARNING: Emergency requests sent via Duress PIN cannot be canceled once initiated.

1. On the Keypad Sensor Hub, press the Standby button.
2. Enter your Duress PIN (4 digits).
3. Press the Check button.
4. The monitoring center will dispatch the first responder to the location by stealth.

Last Updated:09/20/2024 | Article ID: 000062802

How do I create, modify, or delete a Secondary PIN for my Arlo Home Security System?

How do I create, modify, or delete a Secondary PIN for my Arlo Home Security System?

This article applies to:

SH1001 KB1001

You can create multiple unique Secondary PINs for family, friends, or other visitors to use with your Arlo Home Security System.

- You can also set a schedule on Secondary Security PINs to limit when the PIN is active.
- This is useful for expected visitors, such as a housekeeper, babysitter, or maintenance technician.
- For more information on Secondary PIN Schedule, visit: [How do I set a schedule for a Secondary PIN for my Arlo Home Security System?](#)

Secondary PINs are set up separately for each Location.

- If you have more than one Location where you would like a Secondary PIN, you will need to set up the PIN on each Location.

Note: To create a Secondary PIN, you need an Arlo Premium with Professional Monitoring, or a Professional Monitoring trial.

For more information, visit:

- [Arlo Secure Plans](#)
- [What is Arlo Professional Monitoring?](#)

To create the Secondary PIN:

1. Launch the Arlo Secure App or log in to [my.arlo.com](#).
2. Tap or click Settings.
3. Tap or click the Location where you would like to add a Secondary PIN.
4. Tap or click PINs.
5. Tap or click Create New PIN under Secondary Security PIN.
6. Enter a 4-digit PIN or tap or click Generate a Random PIN.
7. Tap or click Continue.
8. Verify your Security PIN and tap or click Continue.
9. Enter the Secondary PIN Name.
10. Tap or click Save.

To edit the Secondary PIN:

1. Launch the Arlo Secure App or log in to [my.arlo.com](#).
2. Tap or click Settings.
3. Tap or click Location you want to edit.

4. Tap or click PINs.
5. Tap or click the PIN you want to edit under Secondary Security PIN.
6. Tap or click .
7. Enter a 4-digit PIN or tap or click Generate a Random PIN.
8. Verify your Security PIN and tap Save.

To delete the Secondary PIN:

1. Launch the Arlo Secure App or log in to my.arlo.com.
2. Tap or click Settings.
3. Tap or click Location you want to edit.
4. Tap or click PINs.
5. Tap or click the Secondary PIN you want to delete.
6. Tap or click Delete PIN.
7. Tap or click Delete.

Last Updated:09/20/2024 | Article ID: 000063002

Why am I unable to turn on lights on for my Panic button on my Arlo Home Security System?

Why are Arlo device lights not turning on when I press the Arlo Home Security System Panic button?

This article applies to:

FLW2001 SH1001 KB1001 SLB1001 AL1101 FB1001

If your Arlo Home Security System Panic button is not turning on Arlo device lights, ensure the Turn on Lights setting is enabled:

1. Launch the Arlo Secure App.
2. Tap .

3. Select the Location where your Arlo Home Security System and compatible Arlo device are installed.
4. Tap Panic.
5. Tap Panic Button.
6. Tap Turn on Lights.

Note: If the Turn on Lights setting is grayed out, make sure you have a compatible device (Arlo Pro 3 Floodlight Camera, Arlo Wired Floodlight Camera, Arlo Security Light, or Arlo Siren) installed at the same Location as your Arlo Home Security System.

7. Select a device (Arlo Pro 3 Floodlight Camera, Arlo Wired Floodlight Camera, Arlo Security Light, or Arlo Siren).

Last Updated:09/30/2024 | Article ID: 000062794

Why are Arlo device lights not turning on when I press the Arlo Home Security System Panic button?

Why are Arlo device lights not turning on when I press the Arlo Home Security System Panic button?

This article applies to:

FLW2001 SH1001 KB1001 SLB1001 AL1101 FB1001

If your Arlo Home Security System Panic button is not turning on Arlo device lights, ensure the Turn on Lights setting is enabled:

1. Launch the Arlo Secure App.
2. Tap .
3. Select the Location where your Arlo Home Security System and compatible Arlo device are installed.
4. Tap Panic.
5. Tap Panic Button.
6. Tap Turn on Lights.

Note: If the Turn on Lights setting is grayed out, make sure you have a compatible device (Arlo Pro 3 Floodlight Camera, Arlo Wired Floodlight Camera, Arlo Security Light, or Arlo Siren) installed at the same Location as your Arlo Home Security System.

7. Select a device (Arlo Pro 3 Floodlight Camera, Arlo Wired Floodlight Camera, Arlo Security Light, or Arlo Siren).

Last Updated:09/30/2024 | Article ID: 000062794

Why am I unable to create a Secondary or Duress PIN for my Arlo Home Security System?

Why am I unable to create a Secondary or Duress PIN for my Arlo Home Security System?

This article applies to:

SH1001 KB1001

Use of the Arlo Home Security System Secondary or Duress PIN requires an Arlo Premium Plan or a Professional Monitoring trial.

For more information, visit:

- What Arlo subscription plans and cloud recording options are available?
- What is Arlo Professional Monitoring?

Last Updated:09/20/2024 | Article ID: 000063003

What type of PINs can I create for my Arlo Home Security System, and how do I use them?

The entry or exit delay time for my Arlo Home Security System does not match my settings

What type of PINs can I create for my Arlo Home Security System, and how do I use them?

This article applies to:

SH1001 KB1001

The Arlo Home Security System uses three types of PINs that you may use to perform actions. The Primary and Secondary PIN allows you and your family to change modes,

activate or deactivate emergency services, or cancel the panic feature. The Duress PIN allows you or your family to silently request Emergency Response, while deactivating the active alarm.

Note: Emergency Response and Professional Monitoring features require an Arlo Premium Plan.

Primary PIN

- The Primary PIN is created during system set up.
- This PIN is always enabled. It can be modified but not disabled.
- The Primary PIN is used to change modes on Arlo Keypads.

Secondary PIN

- The Secondary PIN is optional and meant for family or visitors.
- This PIN can be edited and disabled.
- The Secondary PIN can be used on a schedule for restricted access on certain days and times.
- The Secondary PIN is used to change modes on Arlo Keypads.

Duress PIN

- The Duress PIN is optional and used to silently request Emergency Response.
- This PIN can be edited and disabled.
- Only one Duress PIN can be created.

FAQs

How do I enter a PIN on the Arlo Keypad?

Enter the four-digit PIN using the keypad numbers when required, and press .

Who can create a PIN?

The owner or admin of the Arlo system can create a PIN.

Do I need to create a PIN?

The Arlo Home Security System requires a Primary PIN. The Primary PIN is created during the installation of your security system. Secondary and Duress PINs are optional.

Do I need to enter a PIN when changing the Mode?

Yes, a PIN is required when lowering the security level, such as from Arm Away to Arm Home. You can also require it for increasing the security level if the Use PIN for Arming option is enabled.

To enable the Use PIN for Arming feature:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Select the Arlo Keypad Sensor Hub.
4. Tap .
5. Tap Use PIN for Arming.

Do I need a separate PIN for my Arlo Wire-Free Keypad?

No. PINs are set per Location, and are shared between the Keypad Sensor Hub and all Wire-Free Keypads at the same location.

Do I need a subscription to create a PIN?

You need an Arlo Premium Plan or trial that comes with your Keypad Sensor Hub at the Location to create a Secondary PIN or Duress PIN. If you do not have an Arlo Premium Plan, only a Primary PIN will be available. For more information on plans, visit: [What Arlo subscription plans and cloud recording options are available?](#)

How does the Secondary PIN work?

The Secondary PIN can be shared with family, friends, housekeepers, babysitters, etc. You can schedule when the PIN will be active, and they can arm and disarm the system using the PIN. For example: Your housekeeper is expected on Tuesday between 8AM to 6PM. You can create a Secondary PIN for your housekeeper that only works on Tuesdays between 8AM to 6PM. The PIN will not work during other times, and you will be notified if someone attempts to use it outside of scheduled hours.

How does the Duress PIN work?

The Duress PIN is used to silently request Emergency Response from the police. This PIN will silence the system if the siren is activated to make it appear that the system was shut down, but it actually makes a silent call to 24/7 Live Agents for police dispatch. The Duress PIN requires an Arlo Secure plan. For more information, visit: [How do I create and use a Duress PIN for my Arlo Home Security System?](#)

Last Updated:09/20/2024 | Article ID: 000062966

How do I modify my Security PIN for my Arlo Home Security System?

How do I modify my Security PIN for my Arlo Home Security System?

This article applies to:

SH1001 KB1001

A Primary PIN is created during the installation of the Arlo Keypad Sensor Hub. The Primary PIN cannot be deleted but may be changed. Only the administrator account for the Location may modify PINs for the Arlo Home Security System. Any Arlo Wire-Free Keypads paired to a Keypad Sensor Hub will have the same Primary PIN as the Keypad Sensor Hub.

To change the Primary PIN:

1. Launch the Arlo Secure App.
2. Tap .
3. Tap Location.
4. Tap PINs.
5. Tap Primary Security PIN.
6. Tap .
7. Enter a 4-digit PIN or Generate a Random PIN.
8. Tap Continue.
9. Verify your Security PIN.
10. Tap Save.

Last Updated:04/24/2024 | Article ID: 000062803

Why did I receive an Error when attempting to arm my Arlo Home Security System?

Why did I receive an Error when attempting to arm my Arlo Home Security System?

This article applies to:

SH1001 MS1001

If you received an error message or alert when attempting to arm your Arlo Home Security System in the Arlo Secure App (identified by the  icon), this indicates there is an issue with the system or one of your devices is not responding.

Arm modes may not activate or operate properly if one of the devices is offline, unresponsive, or not receiving sufficient power.

- Resolve the issue by getting the device online, replacing the battery, or charging the device.

Once the error is resolved, reactivate the Arm mode you wish to use.

- For example, if there is an error on your Arm Away Mode for an All-in-One Sensor Offline and you replace the battery in the Sensor, you will need to switch to Arm Home or Standby, then back to Arm Away for the Sensor error to be cleared.

To troubleshoot common errors for Arlo Home Security System devices, visit:

- [My Arlo All-in-One Sensor is offline, how can I troubleshoot it?](#)
- [How do I replace the battery in the Arlo All-in-One Sensor?](#)
- [How do I factory reset the Arlo Keypad Sensor Hub?](#)
- [My Arlo camera is offline; how can I troubleshoot it?](#)

Last Updated:04/16/2024 | Article ID: 000062805

[How do I obtain a Monitoring Certificate for my Arlo Home Security System?](#)

[How do I obtain a Monitoring Certificate for my Arlo Home Security System?](#)

This article applies to:

SH1001 MS1001 LBB1001 KB1001 SLB1001 NT1001

If you have an Arlo Home Security System with a paid Arlo Premium plan that includes Professional Monitoring, you will be able to download a Professional Monitoring Alarm Certificate. The certificate will show which services are enabled at your location. Depending on your home insurance provider, you may be able to receive a discount on your home insurance premium.

- Note: The Monitoring Certificate is not available to trial users.

Requirements to obtain a Monitoring Certificate:

- Arlo Home Security System installed at your location.
 - o For more information, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)
- Paid Arlo Premium Plan.
 - o For more information, visit: [What Arlo subscription plans and cloud recording options are available?](#)
- Emergency Response configured.
 - o For more information, visit: [How do I set up Emergency Response for my Location on the Arlo Secure App?](#)

To view or download your Monitoring Certificate:

1. Log in to [my.arlo.com](#).
2. In the dropdown in the upper left, select My Arlo Account.
3. Click Arlo Secure.

If a certificate is available for your location, you will see the Monitoring Certificate option.

4. Click View or click Download for a PDF copy.

Note: The checkmarks on the certificate will appear based on the configuration of your Arlo Home Security System.

Last Updated:09/20/2024 | Article ID: 000063053

Why are the Fire, Police, and Medical buttons not lighting up on my Arlo Keypad Sensor Hub?

Why are the Fire, Police, and Medical buttons not lighting up on my Arlo Keypad Sensor Hub?

This article applies to:

SH1001

The buttons on the Arlo Keypad Sensor Hub allow you to enable Arlo Home Security System modes, enter your PIN, and contact emergency services.

The Fire, Police, and Medical buttons on your Arlo Keypad Sensor Hub will not light up due to the following reasons:

- You are not subscribed to an Arlo Professional Monitoring Plan. For more information, visit: [What is Arlo Professional Monitoring?](#)
- You have not set up a Location or address. For more information, visit: [What are Locations in the Arlo Secure App and how do I use them?](#)

To update an address for your existing Location:

1. Launch the Arlo Secure app or go to my.arlo.com.
2. Tap Profile in the Arlo Secure App or click Settings on my.arlo.com.
3. Tap or click your Location.
4. Tap or click Address.
5. Update the address and tap or click Save.

For more information, visit the following articles:

- [What do the LED behaviors on my Arlo All-in-One Sensor mean?](#)
- [My Arlo Keypad Sensor Hub will not power on; how can I troubleshoot it?](#)

Last Updated:05/09/2024 | Article ID: 000063014

How do I turn the siren on the Arlo Keypad Sensor Hub on and off?

How do I turn the siren on the Arlo Keypad Sensor Hub on and off?

This article applies to:

SH1001

You can turn the siren on or off using the Arlo Secure app or the Arlo Keypad Sensor Hub.

To turn the siren on or off using the Arlo Secure App:

1. Open the Arlo Secure App or go to my.arlo.com.

2. Tap or click Emergency.
3. Tap or click Activate Siren.
4. Swipe the Siren Icon to the right to confirm the activation of the siren.

Note: The siren indicator will be animated if the siren is on.

5. You will have the option to contact emergency services once the siren is on.

Note: A subscription to Arlo Secure is required to access the emergency services feature.

6. Tap or click Deactivate Siren to turn off the siren.

To turn the siren on or off using the Arlo Keypad Sensor Hub.

Pressing and holding the button for 2 seconds triggers the customizable panic response. Panic responses may include turning on the siren and triggering connected lights. With an Arlo Professional Monitoring subscription, pressing this button also contacts a 24/7 Live Security Expert.

To cancel a panic response:

1. On the Keypad Hub, press and hold the button for 2 seconds for Standby mode. If a countdown timer is set up for your system, the keypad starts beeping. The countdown is the length of time before security actions are triggered. This is typically 60 seconds, but it can be set to a different length of time. For the last 10 seconds of the countdown, the beeping sound speeds up.
2. Type the PIN and press the check button.

Note: You can also turn off the Siren and Emergency Response using the Arlo Secure App.

For more information on how to customize the siren response for the Panic Button, visit: [How do I set up and configure the Siren settings for my Arlo Home Security system?](#)

Last Updated:05/10/2024 | Article ID: 000062947

How do I call for emergency dispatch on my Arlo Keypad Sensor Hub?

How do I call for emergency dispatch on an Arlo Keypad?

This article applies to:

SH1001 KB1001

Arlo Emergency Response allows you to quickly get help from first responders in an emergency. You can call for emergency dispatch on an Arlo Keypad.

Note: To access this feature, you need an Arlo Premium plan.

To dispatch Emergency Response service using an Arlo Keypad:

Fire: Press and hold for 2 seconds to request assistance with a fire.

Police: Press and hold for 2 seconds to request assistance from the police.

Medical: Press and hold for 2 seconds to request medical assistance.

Note: Emergency Response calls made using the Duress PIN may not be canceled using an Arlo Keypad. For more information, visit: [How do I create and use a Duress PIN for my Arlo Home Security System?](#)

The Emergency Response feature can also be accessed using the Arlo Secure App. For more information, visit: [How do I dispatch Emergency Response services from the Arlo Secure App?](#) and [How do I cancel Emergency Response dispatch on the Arlo Secure App?](#)

- Emergency Response calls can be canceled in the Arlo Secure App, or through the dispatch agent.

To cancel an active Emergency Response call using the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap Emergency.
3. Tap Cancel Fire, Cancel Medical, or Cancel Police.
4. Tap Yes, Cancel (Fire/Medical/Police) to confirm.

Last Updated:09/20/2024 | Article ID: 000062960

Which Arlo products are compatible with the Arlo Keypad Sensor Hub?

Which Arlo products are compatible with the Arlo Keypad Sensor Hub?

This article applies to:

SH1001 MS1001 LBB1001 KB1001 SLB1001

The Arlo Keypad Sensor Hub creates a separate secure network for compatible Arlo Home Security devices. The Arlo Keypad Sensor Hub can work independently, or with your Arlo SmartHubs, Base Stations, Cameras, and Doorbells when installed on the same Location.

All devices on the same Location can communicate with each other and can be configured for cross-triggering.

- For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

The following devices are compatible with the Arlo Keypad Sensor Hub:

- Arlo All-in-One Sensor
- Arlo Wire-Free Keypad
- Arlo Wire-Free Outdoor Siren
- Arlo Cellular and Battery Backup

The Arlo Keypad Sensor Hub also supports SecureLink for your Arlo Pro 5S Camera. For more information, visit: [What is Arlo SecureLink and how does it work with my Arlo system?](#)

Last Updated:06/03/2024 | Article ID: 000063080

What is the Panic button on my Arlo Keypad and how do I use it?

What is the Panic button on my Arlo Keypad and how do I use it?

This article applies to:

SH1001 KB1001

Pressing and holding the Panic button for 2 seconds triggers the customizable panic response. Panic responses may include turning on the siren and triggering connected lights.

- With an Arlo Professional Monitoring plan, pressing this button also contacts a 24/7 Live Security Expert.

To cancel a Panic Response:

1. On the Arlo Keypad, press the Standby button.

If a countdown timer is set up for your system, the Arlo Keypad starts beeping.

The countdown is the length of time before security actions are triggered.

This is typically 60 seconds, but it can be set to a different length of time.

For the last 10 seconds of the countdown, the beeping sound speeds up.

2. Enter the PIN and press the check button.

Note: You can also turn off the siren and Emergency Response using the Arlo Secure App.

To edit Auto Panic Response:

1. Launch the Arlo Secure App.
2. Tap .
3. Select your Location.
4. Tap Panic.
5. Tap Auto Panic Response.
6. Tap Turn on Lights to select which devices will activate their spotlights when Panic is activated.
7. Tap Activate Sirens to activate the sirens on your Arlo devices.
8. Tap Emergency Response to activate the Emergency Response.
9. Tap Panic Duration and select a time for how long the Panic response will last.

Last Updated:06/13/2024 | Article ID: 000062779

Why am I unable to delete my Primary PIN?

Why am I unable to delete my Primary PIN for my Arlo Home Security System?

This article applies to:

SH1001 KB1001

A Primary PIN is used to change modes on the Arlo Keypad. The Primary PIN is created during the setup of the Arlo Home Security System and is required for some functions.

- The Primary PIN cannot be deleted but it can be changed.

To change the Primary PIN for your Arlo Home Security System:

1. Launch the Arlo Secure App.
2. Tap .
3. Select your Location.
4. Tap PINs.
5. Tap Primary PIN.
6. Tap next to the PIN.
7. Enter a 4-digit PIN or tap Generate Random PIN.

Last Updated:06/06/2024 | Article ID: 000062999

How do I set a schedule for a Secondary PIN for my Arlo Home Security System?

How do I set a schedule for a Secondary PIN for my Arlo Home Security System?

This article applies to:

SH1001 KB1001

Secondary PINs can be created and shared with family members or friends. You can also set a schedule when the Secondary PIN is enabled so visitors can modify alarms during specific times or days of the week.

To set a schedule on a Secondary PIN:

1. Launch the Arlo Secure App or login to my.arlo.com.
2. Tap or click .
3. Tap or click Location.
4. Tap or click PINs.
5. Tap or click the PIN name under Secondary Security PIN.
6. Toggle Schedule to on.
7. Select the desired days of the week from Sunday to Saturday.

8. To set the time, tap or click From and To.

You may also customize the schedule for each day:

- o Tap or click Custom Schedule.
- o Tap or click the toggle switch on the day (Sunday to Saturday).
- o Tap or click From and To to add time.
- o Tap or click Save.

9. Add Start and End Date (optional).

10. Tap or click Save.

Last Updated:05/03/2024 | Article ID: 000063005

How do I cancel an emergency call that was dispatched on an Arlo Keypad?

How do I cancel an emergency call that was dispatched on an Arlo Keypad?

This article applies to:

SH1001 KB1001

To cancel an active Emergency Response call using the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap Emergency.
3. Tap Cancel Fire, Cancel Medical, or Cancel Police.
4. Tap Yes, Cancel... to confirm.

Emergency Response calls can only be canceled in the Arlo Secure App, or through the dispatch agent.

The Emergency Dispatch feature can also be accessed using the Arlo Secure App.

For more information, visit:

- How do I dispatch Emergency Response services from the Arlo Secure App?
- How do I cancel Emergency Response dispatch on the Arlo Secure App?

Last Updated:06/27/2024 | Article ID: 000062959

How do I change the Wi-Fi network on my Arlo Keypad Sensor Hub?

How do I change the Wi-Fi network on my Arlo Keypad Sensor Hub?

This article applies to:

SH1001

To change the Wi-Fi network on the Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap the Arlo Keypad Sensor Hub.
4. Tap .
5. Tap Wi-Fi Network.
6. Tap Change Network.

Note: Your mobile device must be connected to your 2.4 GHz Wi-Fi network, and you must connect your Arlo camera to the same 2.4 GHz Wi-Fi network. For more information, visit: [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)

7. Follow the in-app instructions to complete the Wi-Fi network change.

Last Updated:06/27/2024 | Article ID: 000063013

What is the Alert Tone feature and how do I use it with my Arlo Home Security System?

What is the Alert Tone feature and how do I use it with my Arlo Home Security System?

This article applies to:

SH1001 MS1001

The Alert Tone feature provides an audible alert from the Arlo Keypad Sensor Hub when motion is detected. The Alert Tone feature can be turned on or off and has a volume control that can be adjusted in the Arlo Keypad Sensor Hub Device Settings.

To access the Alert Tone settings:

1. Launch the Arlo Secure App.
2. Tap Devices at the bottom of the screen.
3. Tap .
4. Tap for the Keypad Sensor Hub.
5. Tap Audio Settings.
6. Tap Alert Tone to turn the feature on or off.
7. Move the slider left or right to adjust the volume.

Last Updated:05/09/2024 | Article ID: 000063004

What do the buttons on the Arlo Keypad Sensor Hub do?

What do the buttons on the Arlo Keypad do?

This article applies to:

SH1001 KB1001

The buttons on the Arlo Keypad allow you to enable Arlo Home Security System modes, enter your PIN, contact emergency services, and more.

Arm Away: Use this mode for security when no one is inside the home. Open access and indoor motion detection will trigger the alarm by default.

Arm Home: Use this mode for security when someone is home. Open access will trigger the alarm by default, while motion detection inside the home will not.

Standby: Use this mode when you don't want to trigger the alarm. You can choose to still receive notifications when an event is detected.

Panic: Press and hold for two seconds to activate the customizable panic response (siren, connected lights, and/or request assistance from a 24/7 Live Security Expert*).

Fire: Press and hold this button for two seconds to request assistance for a fire emergency*.

Police: Press and hold this button for two seconds to request assistance from the police*.

Medical: Press and hold this button for two seconds to request assistance for a medical emergency*.

Numeric Columns: Use the number buttons to enter your PIN.

Cancel: Use this if you press an incorrect number while entering your PIN and wish to start over.

Enter/Accept: Use this to submit your PIN or override device warnings.

*Note: 24/7 Emergency Response and 24/7 Live Security Expert assistance requires an Arlo Premium plan after the Professional Monitoring trial plan expires.

Last Updated:09/20/2024 | Article ID: 000062957

Where do I place my Arlo Keypad Sensor Hub?

Where do I place my Arlo Keypad Sensor Hub?

This article applies to:

SH1001

The Arlo Keypad Sensor Hub is part of the Arlo Home Security System. The Keypad Sensor Hub lets you set the mode for your Home Security System, turn the siren on and off, and contact a 24/7 Live Security Expert. The Keypad Sensor Hub also includes a motion sensor, a siren, and a microphone that listens for smoke/CO2 detection alarms.

Note: A subscription plan that supports professional monitoring is required to contact the 24/7 Live Security Expert.

The best placement for your Arlo Keypad Sensor Hub varies by household and environment.

- Your Arlo Keypad Sensor Hub is for indoor use only.
- Your device should be in an accessible location and must be placed on a flat surface or table.

- Place the sensor facing towards where motion is expected.
- Your device must be placed near an electrical outlet that is not controlled by a wall switch

Last Updated:06/11/2024 | Article ID: 000062859

How do I pair my Arlo Pro 5S Camera to my Arlo Keypad Sensor Hub using Arlo SecureLink?

How do I pair my Arlo Pro 5S Camera to my Arlo Keypad Sensor Hub using Arlo SecureLink?

This article applies to:

SH1001 VMC4060P

After your Arlo Pro 5S Camera is set up and active, you can pair it to an Arlo Keypad Sensor Hub using SecureLink. Your Pro 5S Camera and the Keypad Sensor Hub need to be installed on the same Arlo Secure Account and in the same Location.

Note: Arlo Pro 5S cannot connect to both an Arlo SmartHub or Base Station and an Arlo Keypad Sensor Hub at the same time. Arlo Pro 5S needs to be connected to your Wi-Fi network to pair to the Arlo Security Keypad Hub. For more information, visit:

- How do I connect my Arlo device directly to a W-Fi router?
- How do I setup and install my Arlo Keypad Sensor Hub?

After Keypad Sensor Hub set up, you will be asked to setup SecureLink:

1. Tap or click Set Up Now.
2. Tap or click Pair Now.

The Arlo Secure App pairs the Pro 5S Camera to the Keypad Sensor Hub.

- The camera LED will show a slow breathing blue pattern while pairing.
- The Keypad Sensor Hub will give a confirmation tone when pairing is successful.

The Arlo Secure App Devices page displays the SecureLink connection icon .

- If you have both the camera and Keypad Sensor Hub on the same Location and were unable to setup SecureLink connectivity initially, you may complete setup using Device Settings.

To set up SecureLink:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Select the Pro 5S Camera.
4. Tap .
5. Tap SecureLink.
6. Follow the steps in the Arlo Secure App to complete the setup.

Last Updated:06/14/2024 | Article ID: 000062866

How do I enable or disable the backlight on my Arlo Keypad Sensor Hub?

How do I enable or disable the backlight on my Arlo Keypad Sensor Hub?

This article applies to:

SH1001

To enable or disable the backlight on the Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Select the Arlo Keypad Sensor Hub.
4. Tap .
5. Tap Keypad Sensor Hub at the top of the screen to access the Device Info page.
6. Tap Keypad Backlighting.
7. Tap the Activate Mode Backlight switch if you want the backlight to be always on, even if motion detection is disabled.

8. Tap the Backlight With Motion switch if you want the keypad LEDs to light up when motion is detected.

Last Updated:05/02/2024 | Article ID: 000062962

How do I control the volume for the Arlo Keypad Sensor Hub?

How do I control the volume for the Arlo Keypad Sensor Hub?

This article applies to:

SH1001

To adjust the volume on the Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App or log in to my.arlo.com.
2. Tap or click Devices.
3. Tap or click .
4. Select the Keypad Sensor Hub and tap or click .
5. Tap or click Audio Settings.
6. Adjust the volume slider.
7. Tap or click .

Last Updated:05/15/2024 | Article ID: 000062951

How do I set up and configure the Siren settings for my Arlo Home Security system?

How do I set up and configure the Siren settings for my Arlo Home Security system?

This article applies to:

FLW2001 SH1001 MS1001 VMC5040 VMC4040P FB1001 VMC4041P VMC4050P
VMC4060P VMC2020 VMC2030 VMC2032 VML2030 VML4030

There are different settings for configuring the Siren feature in the Arlo Secure App. You can set up the siren to activate for different events for your Arlo All-In-One Sensor or Keypad Sensor Hub, such as Motion or Open/Close. The siren can also be set up to activate based on motion or audio detected by your Arlo Cameras. You can also set the siren to activate in response to a Panic button press.

Siren Configuration

To configure which devices at your location will play an audible siren, as well as the duration of the siren sounds:

1. Launch the Arlo Secure App or log in to my.arlo.com.
2. Tap or click .
3. Tap or click Location.
4. Tap or click Siren.
5. Adjust the Duration. You may select from 1, 2 or 5 minutes.
6. Select the devices that sound the siren by toggling the switch. You must select at least one siren device to sound the siren.

To enable Siren when the Panic Button is pressed on an Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App or login to my.arlo.com.
2. Tap or click .
3. Tap or click Location.
4. Tap or click Panic.
5. Tap or click Panic Button.
6. Tap or click the Activate Sirens toggle switch on.

For more information, visit: [What is the Panic Button on my Arlo Keypad Sensor Hub and how do I use it?](#)

To configure volume and duration of the Built-in Siren on a device:

1. Launch the Arlo Secure App or login to my.arlo.com.
2. Tap or click Devices.
3. Select the device.
4. Tap or click Default Mode Settings.

5. Adjust the slider for Siren Sounding Length. Duration is 60 seconds to 5 mins.
6. Adjust the slider for Siren Volume. You may select from Low to High.

Siren Mode and Rule Configuration

Arlo modes give you control over how your cameras and other devices respond to motion or sound. Modes let you tell your Arlo devices to respond differently in different situations, such as when you are away from home or asleep in bed. By editing, adding or removing rules on each mode, you allow your device to do the action as preferred.

For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

Note: Arlo recommends that the Siren feature be activated only on devices and modes where you wish to have the Siren actively respond to events. For example: in Arm Away mode, you may want the siren active on All-In-One Sensors used on doors and windows, and on cameras located within your household. In Arm Home mode, you would not want to set a Siren for indoor cameras, as your family would be home and you do not want the siren to activate.

To reduce unwanted siren activations, Arlo recommends you not set the siren to activate on devices that are expected to have regular events. We recommend you not set devices such as doorbells or outdoor cameras to trigger the siren.

To set up when the Siren feature activates using Modes and Rules:

1. Launch the Arlo Secure App or login to my.arlo.com.
2. Confirm you have selected the Location. Change your Location if needed.
3. Tap or click Routines.
4. Select the Mode you would like to have a siren trigger.
5. Tap or click Add Device Rules.
6. Select the devices you want to add for the rule.
7. Tap or click Save.
8. Tap or click the device.
9. Tap or click the Activate Siren switch.

BATTERY BACKUP

How do I set up the Arlo Cellular and Battery Backup?

How do I set up the Arlo Cellular and Battery Backup?

This article applies to:

SH1001 LBB1001

The optional Arlo Cellular and Battery Backup keeps your Arlo Home Security System connected and powered during internet or power outages for up to 12 hours. This device includes a pre-installed SIM card that will automatically provide cellular backup during an internet outage. The cellular service feature of the Arlo Cellular and Battery Backup requires an Arlo Premium plan after the trial period expires.

- **Note:** Make sure the Arlo Keypad Sensor Hub is set up in the Arlo Secure App before installing the Cellular and Battery Backup. For more information, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)

To install the Arlo Cellular and Battery Backup:

1. Make sure the Keypad Sensor Hub is set up and plugged in.
2. Place the Cellular and Battery Backup on a flat surface.
3. Attach the Keypad Sensor Hub to the Cellular and Battery Backup device by holding the sides of the Keypad Sensor Hub and aligning it over the locking tabs while pressing down.

Note: Gently grasp the sides of the Keypad Sensor Hub and do not press on the motion sensor.

4. Launch the Arlo Secure App and go to the Device Settings for the Keypad Sensor Hub to check the connection status of the Cellular and Battery Backup.

To remove the Arlo Cellular and Battery Backup:

1. Use a paper clip or pin to press the release button.
2. Gently grasp the sides of the Keypad Sensor Hub and pull it upwards to separate the devices.

Last Updated:09/20/2024 | Article ID: 000062988

How do I configure the SIM settings in my Arlo Cellular and Battery Backup?

How do I configure the SIM settings in my Arlo Cellular and Battery Backup?

This article applies to:

LBB1001

The Arlo Cellular and Battery Backup device includes a pre-installed SIM card. The pre-installed SIM card in your Arlo Cellular and Battery Backup device does not require configuration and will automatically activate when subscribed to Arlo Professional Monitoring plan.

If you need to adjust the cellular settings due to installation of a new SIM card, use the following instructions.

Note: Ensure the new SIM card is installed before adjusting the settings. The pre-installed SIM card settings are not available for reconfiguration.

To install a new SIM:

1. Remove the Arlo Cellular and Battery Backup from your Arlo Keypad Sensor Hub using a paperclip. For more information visit: [How do I set up the Arlo Cellular and Battery Backup?](#)
2. Ensure the new SIM card is installed before adjusting the settings.
3. Reinstall the Cellular and Battery Backup onto the Arlo Keypad Sensor Hub.

To configure the cellular settings for your Arlo Cellular and Battery Backup device:

1. Launch the Arlo Secure App.
2. Tap Devices at the bottom of the screen.
3. Tap .
4. Tap for the Keypad Sensor Hub.

5. Tap Connected to.
6. Tap Edit APN Information.
7. Verify your SIM card APN information and tap Done.
8. Tap Continue.
9. If the Cellular Status is Active, tap Finish.
10. If an active SIM card is not located, tap Try Again.

Last Updated:05/08/2024 | Article ID: 000062790

ONBOARDING

How do I pair the All-in-One Sensor to the Arlo Keypad Sensor Hub?

How do I pair the All-in-One Sensor to the Arlo Keypad Sensor Hub?

This article applies to:

SH1001 MS1001

The Arlo All-in-One Sensor is part of the Arlo Home Security System.

- The All-in-One Sensor is for indoor use only.

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the Need Help? button in the Arlo Secure App or on my.arlo.com. You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To pair the Arlo All-in-One Sensor to the Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App.
2. Tap Devices.

3. Tap .
4. Tap Security System,
5. Select an All-in-One Sensor to set up.

Your Sensor can detect motion, open or closed windows and doors, open or closed garage doors, water leaks, temperature, ambient light, and smoke/CO alarms.

6. Swipe left to read the information about your Sensor and tap Continue.
7. Slide the front of your Sensor downward to open.
8. Remove the battery tab from your Sensor.

Make sure the battery is fully inserted, and the + symbol faces outside.

9. Keep the back cover separate from your Sensor.

Do not put the battery cover back on yet.

10. When the LED on the front of your Sensor flashes blue, tap Continue.
11. Name your Sensor and tap Continue.

Give the Sensor a name that corresponds to its location and function. For example, if you have the Sensor set for Open/Close on your master bedroom window, name the Sensor 'Master Bedroom Window'. Or if the Sensor is set to detect water leaks in your basement, name the Sensor 'Basement Water Leak'.

12. Place the back cover on the Sensor.

Slide the front of the Sensor upward on the back cover.

13. Make sure the lines on the side are aligned and tap Continue.
14. Select the primary use for your All-in-One Sensor: Open/Close Detection, Motion Detection, Water Leak Detection, etc.

Note: If you are setting up the All-in-One Sensor for Temperature or Light Detection only, follow the steps for Water Leak Detection to streamline your set-up process. Place the Sensor where desired.

Note: The All-In-One Sensor can have more than one function enabled. For example, a Sensor configured for Open/Close Detection can also be configured for Motion Detection, Light Detection, Temperature Detection, and Smoke/CO Alarm Listening all at the same time.

15. Continue to follow the in-app instructions for your specific set-up and make sure the All-in-One Sensor is in range of your Keypad Sensor Hub when prompted.

16. Tap Finish Setup.

For more information about Open/Close Detection, visit: [How do I install and configure my Arlo All-in-One Sensor as a Open/Close Sensor for windows or doors?](#)

For more information about Motion Detection, visit: [How do I install and configure my Arlo All-In-One Sensor as a Motion Sensor?](#)

For more information about Water Leak Detection, visit: [How do I install and configure my Arlo All-In-One Sensor as a Water Leak Sensor?](#)

Last Updated:10/07/2024 | Article ID: 000062972

How do I setup and install my Arlo Keypad Sensor Hub?

How do I setup and install my Arlo Keypad Sensor Hub?

This article applies to:

SH1001

The Arlo Keypad Sensor Hub is part of the Arlo Home Security System. It includes

- A motion sensor
- A siren
- A microphone that listens for smoke/CO2 detection alarms

With the Arlo Keypad Sensor Hub, you can:

- Arm and disarm the Arlo Home Security System
- Turn the siren on and off
- Contact a 24/7 Live Security Expert (requires Professional Monitoring)

Please keep in mind when installing and configuring the Arlo Keypad Sensor Hub:

- The Arlo Keypad Sensor Hub is for indoor use only
- The Arlo Keypad Sensor Hub should be in an accessible location and must be placed on a flat surface or table
- Place the Arlo Keypad Sensor Hub with the sensor facing towards where motion is expected

- Place the Arlo Keypad Sensor Hub near an electrical outlet that is not controlled by a wall switch
- If you have the Arlo Cellular and Battery Backup, install it after completing the installation of the Arlo Keypad Sensor Hub

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the Need Help? button in the Arlo Secure App or on my.arlo.com. You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To setup and install your Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App.
2. Confirm the Location where you want your device to be installed.
3. Tap Devices.
4. Tap .
5. Tap Security System.

Note: You can only add one Arlo Keypad Sensor Hub per Location.

6. Place the Arlo Keypad Sensor Hub in an area where you want motion detected.
7. Tap Continue.
8. Scan the QR code on the bottom of the Arlo Keypad Sensor Hub.
9. Plug the Arlo Keypad Sensor Hub power cable into an electrical outlet.
10. When the Arlo Keypad Sensor Hub Check button starts flashing, tap Continue.
11. Press and hold the Check button.
12. When all the button lights on the Arlo Keypad Sensor Hub start flashing, tap Continue.
13. Select the Wi-Fi network you want to use and tap Continue.
14. Verify Wi-Fi password and tap Continue.

The Arlo Keypad Sensor Hub will start connecting. This may take several minutes.

15. Name the Arlo Keypad Sensor Hub and tap Continue.

Arlo will check for available firmware updates. This may take several minutes.

WARNING: Do not unplug your Arlo Keypad Sensor Hub while the firmware is updating.

When the firmware update is complete, the Arlo Keypad Sensor Hub is ready for use.

Last Updated:10/07/2024 | Article ID: 000062860

How do I install and configure my Arlo All-in-One Sensor as a Motion Sensor?

How do I install and configure my Arlo All-in-One Sensor as a Motion Sensor?

This article applies to:

MS1001

The All-In-One Sensor is an accessory used in the Home Security System. The All-In-One Sensor is for indoor use only. The Arlo Keypad Sensor Hub is part of the Arlo Home Security System.

To pair the Arlo All-in-One Sensor to the Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App.
2. Tap or click Devices.
3. Tap or click .
4. Tap or click Security System, then All-in-One Sensor.

Your All-in-One-Sensor can detect motion, open or closed windows and doors, open or closed garage doors, water leaks, temperature, ambient light, and smoke/CO alarms

5. Tap or click Continue.
6. Slide the front of your Sensor downward to open.
7. Remove the battery tab from your Sensor.

Make sure the battery is fully inserted, and the + symbol faces outside.

8. Keep the back cover separate from your Sensor. Do not put the battery cover back yet.
9. When the LED on the front of your Sensor flashes blue, tap or click Continue.
10. Name your Sensor then tap or click Continue.

Give the Sensor a name that corresponds to its location and function. For example, if you have the Sensor set for Open/Close on your master bedroom window, name the Sensor "Master Bedroom Window". Or if the Sensor is set to detect water leaks in your basement, name the Sensor "Basement Water Leak".

11. Place the back cover on the Sensor. Slide the front of the Sensor upward on the back cover.
12. Make sure the lines on the side are aligned.
13. Select the primary use for your All-In-One Sensor. Tap or click Motion Detection.

Note: Your All-in-One Sensor can have more than one function enabled. For example, a Sensor configured for motion detection can also be configured for open/close detection, ambient light detection, temperature, and smoke/CO all at the same time.

To change motion detection on an installed Sensor:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click Devices.
3. Tap or click .
4. Tap or click of the Security System.
5. Tap or click Motion.
6. Slide the toggle for Enable Detection to the right (on) or left (off).

When motion detection is enabled, the Sensor will monitor for general motion in the area.

7. Test and adjust the motion sensitivity by tapping or clicking Motion Detection Sensitivity.

Slide to the left for less sensitive and slide right for more sensitive detection. You may test your Sensor by waving your hand in front of it.

8. Tap or click the arrow to the left to save your settings.

Motion Detection is now enabled.

Additional Motion Detection Settings:

- Pet Sense. When the pet sense is enabled, the Sensor will ignore motion of pets smaller than 40 lbs.
- Motion Sensing LED. When enabled, the Sensor's LED will turn on when motion is detected.

To physically install your All-in-One Sensor for Motion Detection, do the following:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click Devices.
3. Tap or click .
4. Tap or click of the All-in-One Sensor.
5. Tap or click on the name of the Sensor to access Device Info.
6. Tap or click Setup Assistant
7. Tap or click Motion Detection.
8. Install your Sensor in the corner of the room to maximize the area detection.

To install the Sensor at the corner, do the following:

1. Locate the Corner Mounting Plate and adhesive in the box. You will need this part to install the Sensor in the corner. Tap or click Continue.
2. Make sure your Sensor is 6 ft (1.8m) from the floor for optimal coverage. The Sensor should not be blocked by any obstructions.
3. Secure the Corner Mounting Plate to the corner using the screw provided.
4. Attach your Sensor onto the plate using the adhesive then tap or click Continue.
5. You will be asked if you want to enable Pet Sense.

Note: When Pet Sense is enabled, the sensor will ignore the motion of pets smaller than 40 lbs to avoid false alarms. Enabling may also reduce motion detection range.

6. Once Pet Sense is enabled or disabled, press the button on the bottom of the device and tap or click Continue.
7. Test your Sensor by waiving your hand in front of it. The blue LED will turn on when motion is detected. Try this at different distances to get an idea of the Sensor's motion coverage then tap or click Continue.
8. Firmly press Sensor and Magnet to mount them securely then tap or click Continue.

Your Arlo Sensor is now active.

To install the Sensor on a flat wall, do the following:

1. Locate adhesive included in the box then tap or click Continue.
2. Make sure your Sensor is 6 ft (1.8m) from the floor for optimal coverage. The Sensor should not be blocked by any obstructions.

3. Attach your Sensor to the wall using the adhesive then tap or click Continue.
4. You will be asked if you want to enable Pet Sense.

Note: When Pet Sense is enabled, the sensor will ignore the motion of pets smaller than 40 lbs to avoid false alarms. Enabling may also reduce motion detection range.

5. One Pet Sense is enabled or disabled, press the button on the bottom of the device and tap or click Continue.
6. Test your Sensor by waiving your hand in front of it. The blue LED will turn on when motion is detected. Try this at different distances to get an idea of the Sensor's motion coverage then tap or click Continue.
7. Firmly press Sensor and Magnet to mount them securely then tap or click Continue.

Your Arlo Sensor is now active.

Last Updated:05/15/2024 | Article ID: 000062784

ALL IN ONE SENSOR

Sensor Fell Off Process (INTERNAL)

Sensor Fell Off Process (INTERNAL)

This article applies to:

MS1001

This document serves as a guide for Sensor falling off issues.

All support personnel must validate if customer complaints about sensor falling off issue is due to customer's negligence or an actual device failure. All support experts must have an excellent understanding of the exact issue description and ask relevant questions surrounding dropped sensors. Attached are some guided questions to identify the root cause of the issue with guidelines on how to handle such concerns.

To access document, visit: Sensor Fell Off Process

Last Updated:09/26/2023 | Article ID: 000062928

How to reduce false alarms from my Arlo All-in-One Sensor?

How to reduce false alarms from my Arlo All-in-One Sensor?

This article applies to:

MS1001

If your Arlo All-in-One Sensor is sending false notifications:

Check where the sensor is aimed.

If the sensor is installed on a window, make sure it is not aimed at moving appliances such as fans or autonomous vacuums cleaners as they may trigger excessive notifications.

If Arrive/Leave Automation is setup, check the pre-defined zone.

For more information, visit: [What are Arrive/Leave Automations and how do I set it up for my Arlo system?](#)

Check the Motion Detection Sensitivity setting on the All-in-One Sensor.

For more information, visit: [How do I change the motion sensitivity for my Arlo All-in-One Sensor?](#)

Confirm the configuration under each Mode: Arm Away, Arm Home, and Standby.

Motion detection is enabled by default in Arm Away mode only after initial setup.

For more information on Modes, visit: [About Arlo Routines, Modes, Rules and Automations](#)

Make sure the Access setting is enabled.

When this setting is enabled, the sensor will monitor for opened and closed doors or windows. Make sure Access notifications are enabled only for the doors and windows you want to monitor when either home or away:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap the All-in-One Sensor.
4. Tap .
5. Tap Access.

6. Tap the Enable Detection switch to turn detection on.

Check the Temperature and Ambient Lights Threshold.

If you want to not receive notifications for Ambient Light and Temperature, you may turn off notifications for Ambient Light:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap the All-in-One Sensor.
4. Tap .
5. Tap Light.
6. Tap the Notifications switch to turn notifications off.

To turn off notifications for Temperature:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap the All-in-One Sensor.
4. Tap .
5. Tap Temperature.
6. Tap the Notifications switch to turn notifications off.

For more information, visit: [How do I set up Push Notifications for my Arlo All-in-One Sensor?](#)

Last Updated:05/10/2024 | Article ID: 000063099

How do I set up Push Notifications or Email Alerts for my Arlo All-in-One Sensor?

How do I set up Push Notifications or Email Alerts? - Arlo Secure 4.0

This article applies to:

- VMB3000

- VMB3010
- VMB3500
- VMB4000
- VMB4500
- VMB4540
- VMB5000
- VMC4040P
- AVD1001
- FB1001
- VMC2030
- VMC2020
- AVD2001
- VMC2032
- VMC4041P
- VMC4050P
- AAD1001
- VMC5040
- VML2030
- VMC2040
- VMC4060P
- MS1001
- SH1001
- VMC3030
- VMC3030
- VMC3040
- VMC3040S

- ABC1000
- VMC4030
- VMC4030P

This article is for the Arlo Secure App experience with Feed. If you have the Arlo Secure App experience with Library, visit: [How do I set up Push Notifications or Email Alerts?](#)

With Arlo devices, you can choose to receive email alerts and push notifications when motion or sound is detected. You can also choose to send email alerts to someone else or to multiple people.

To edit the notifications associated with your Arlo device, you must edit the modes and rules for that camera. For more information about modes and rules, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

To set up email alerts or push notifications:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click Routines.
3. Tap or click Arm Away, Arm Home, or Standby.
4. Tap or click Add a Rule if your device is not displayed under Rules. If your device is listed, skip to step 7.
5. Choose an available device for the rule.
6. Tap or click Save.
7. Select the device listed under Rules.
8. Tap or click the switch for Motion Detection or Audio Detection if they are not already enabled. Other Arlo devices may have different options such as Smoke Alarm, Access Opened, Sensor Motion, Water Leak, etc.
9. Tap or click Send Notification to select what type of notification to receive.
10. Tap or click the Notify Everyone switch under Push Notification or the Enable Action switch under Email.

Note: If desired, add additional email addresses in the Add an Email field.

11. Tap or click Save.

For more information, visit: [How can I receive text notifications from my Arlo system instead of email notifications?](#)

How do I set up Push Notifications for my Arlo All-in-One Sensor?

This article applies to:

MS1001

With the Arlo Home Security System, you can choose to receive push notifications when activity is detected by one of your devices.

To edit the notifications associated with a device, you must edit the modes and rules for that device.

- For more information about modes and rules, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

To set up Push Notifications:

1. Launch the Arlo Secure App.
2. Tap Routines.
3. Select a mode.
4. Tap Add Device Rules.
5. Choose a device that will be used for the rule and tap or click Save.
6. Select the Rule under Device Rules.
7. Tap Send Notification.
8. Tap Notify Everyone.
9. Tap Save.
10. Arm the Mode.

Your Arlo All-in-One Sensor needs to first be installed and configured before configuring notifications. For more information on how to setup your All-in-One Sensor, visit:

- [How do I install and configure my Arlo All-in-One Sensor as an Open/Close Sensor for windows or doors?](#)
- [How do I install and configure my Arlo All-in-One Sensor as a Garage Door Sensor?](#)
- [How can I configure my Arlo All-in-One Sensor for Smoke/CO Alarm detection?](#)
- [How do I install and configure my Arlo All-in-One Sensor as a Motion Sensor?](#)
- [How to configure the All-in-One Sensor as a Water Leak Sensor](#)

How do I install and configure my Arlo All-in-One Sensor as a Garage Door Sensor?

How do I install and configure my Arlo All-in-One Sensor as a Garage Door Sensor?

This article applies to:

MS1001

The Arlo All-in-One Sensor can be configured to detect when your garage door is opened or closed. The Sensor can use the provided magnet or the Sensor's built-in tiltmeter to detect when the garage door is opened or closed.

Items to keep in mind when installing the Arlo All-in-One Sensor as a Garage Door Sensor:

- The Arlo All-in-One Sensor requires an Arlo Keypad Sensor Hub.
 - o The Arlo Keypad Sensor Hub needs to be installed first, before the All-in-One Sensor.
 - o For more information, visit: [How do I setup and install my Arlo Keypad Sensor Hub?](#)
- The Arlo All-in-One Sensor is intended for indoor use only.
 - o Install the All-in-One Sensor on the inside of your garage door only.
- The Garage Door Sensor can be used in conjunction with other sensor functions, such as temperature, light, or motion detection.

Install with Magnet

To install and configure the Arlo All-in-One Sensor as a Garage Door Sensor with Magnet:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Select your Sensor.
4. Tap .
5. Tap Access.
6. Tap Open/Close Detection.
7. Tap Garage when you are prompted Where do you want to install your Sensor?

8. Locate the Magnet and adhesive included in the box and tap Continue.
9. Ensure your Sensor and Magnet are aligned and have the proper distance between them and tap Continue.

Note: Your Sensor and Magnet should align in the middle, on the left or right, with ½ inch (12 mm) or less gap between them.

10. Close your garage door. Calibrate the sensor so the Arlo Secure App knows how to determine the opened or closed status and tap OK, I closed the garage.

11. Lightly place your Sensor and Magnet using the adhesive.

Note: Install the Sensor towards the top of the garage door and place the Magnet on the door frame. Make sure the space between the Sensor and Magnet is less than ½ inch (12mm) and on a clean surface. Tap Continue.

12. Press the button on the bottom of the device and tap Continue.

13. Test the Sensor by opening and closing the garage.

-

- o Make sure the accurate status is reflected in the Arlo Secure App. You should hear a chirp from your Arlo Keypad Sensor Hub when the garage opens. If so, tap Continue.

- o If the status does not update, check the placement of the Sensor and Magnet and test again.

14. Firmly press the Sensor and Magnet to mount them securely and tap Continue.

Install without Magnet

To install and configure the Arlo All-in-One Sensor as a Garage Door Sensor without Magnet:

Note: This installation method will only work on sectional or tilt-up garage doors. If you have a garage door that does not tilt, use the Install with Magnet instructions above.

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Select your Sensor.
4. Tap .
5. Tap Access.
6. Tap Open/Close Detection.

7. Tap Garage when you are prompted Where do you want to install your Sensor?
8. Tap Install without Magnet.
9. Close your garage door.
10. Lightly place your Sensor at the top of the garage door using the adhesive included in the box. Make sure you install the Sensor on a part of the garage door that tilts when opened and closed. Tap Continue.
11. Press the button on the bottom of the Sensor, then tap Continue.
12. Open your garage door. Make sure the garage door is fully open. Tap Continue.
13. Test the Sensor by opening and closing the garage.
 - - o Make sure the accurate status is reflected. You should also hear a chirp from your Arlo Keypad Sensor Hub when the garage door opens. If so, tap Continue.
 - o If your Sensor is misconfigured (showing Opened when it should be Closed), tap Back to retry the 'Press the button on the bottom of the device' step.
 - o If your Sensor does not change status, confirm the Sensor is installed on a part of the garage door that tilts.
14. Firmly press Sensor to mount it securely and tap Continue.

Last Updated:06/20/2024 | Article ID: 000062782

How do I install and configure my Arlo All-in-One Sensor as an Open/Close Sensor for windows or doors?

How do I install and configure my Arlo All-in-One Sensor as an Open/Close Sensor for windows or doors?

This article applies to:

MS1001

The All-in-One Sensor is an accessory used in the Home Security System. The All-in-One Sensor is for indoor use only. The Arlo Door or Window Sensor Hub is part of the Arlo Home Security System.

To install and set up a new Arlo All-in-One Sensor to the Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap
4. Tap Security System, then All-in-One Sensor.

Your All-in-One-Sensor can detect motion, open or closed windows and doors, open or closed garage doors, water leaks, temperature, ambient light, and smoke/CO alarms

5. Tap Continue.
6. Slide the front of your Sensor downward to open.
7. Remove the battery tab from your Sensor.

Make sure the battery is fully inserted, and the + symbol faces outside.

8. Keep the back cover separate from your Sensor.

Do not put the battery cover back yet.

9. When the LED on the front of your Sensor flashes blue, tap or click Continue.
10. Name your Sensor then tap Continue.

Give the Sensor a name that corresponds to its location and function. For example, if you have the Sensor set for Open/Close on your master bedroom window, name the Sensor "Master Bedroom Window". Or if the sensor is set to detect water leaks in your basement, name the Sensor "Basement Water Leak".

11. Place the back cover on the Sensor. Slide the front of the Sensor upward on the back cover.

Make sure the lines on the side are aligned.

12. Select the primary use for your All-in-One Sensor. Tap Open/Close Detection.

Note: Your All-In-One Sensor can have more than one function enabled. For example, a Sensor configured for open/close window or door detection can also be configured for motion detection, ambient light detection, temperature, and smoke/CO all at the same time.

13. Tap Door or Window when you are prompted Where do you want to install your Sensor?
14. Locate Magnet and Adhesive included in the box and tap Continue.

15. Ensure your Sensor and Magnet are aligned and have the proper distance between them and tap Continue.

Note: Your Sensor and Magnet should align in the middle, on the left or right, with ½ inch (12 mm) or less gap between them.

16. Close your door or window. Calibrate the sensor so the Arlo Secure App knows how to reflect the opened or closed status and tap OK, I closed the door/window.

17. Lightly place your Sensor and Magnet using the adhesive.

Note: Install the Sensor towards the top of the door and put the Magnet on the door frame. Make sure the space between the Sensor and Magnet is less than ½ inch (12mm) and on a clean surface and tap Continue.

18. Press the button on the bottom of the device and tap Continue.

19. Test Sensor by opening and closing the door.

Note: Make sure the accurate status is reflected in the Arlo Secure App, you should hear a chirp from your Security Hub when the door is opened. If so, tap Continue.

20. Firmly press the Sensor and Magnet to mount them securely and tap Continue.

21. Your Arlo Sensor is now active.

If your All-In-One Sensor is offline, visit: [My Arlo All-in-One Sensor is offline, how can I troubleshoot it?](#)

To configure the Arlo All-In-One Sensor as a Door or Window Sensor after installation:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click Devices.
3. Tap or click .
4. Tap or click of the All-in-One Sensor.
5. Tap or click Access.
6. Tap or click Open/Close Detection.
7. Follow the above instructions starting with Step 13.

If your All-In-One Sensor isn't detecting door, garage door, and window, visit: [How to troubleshoot Arlo All-in-One Sensor door, garage door, and window detection issues?](#)

To complete or change the physical installation of your paired All-In-One Sensor for Open/Close Door Detection:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click Devices.
3. Tap or click your All-In-One Sensor.
4. Tap or click Setup Assistant > Motion.
5. You will be prompted where do you want to install your Sensor. Select Door.
6. Locate Magnet and Adhesive included in the box and tap or click Continue.
7. Plan where you would like to place the Sensor and Magnet.
 - - o Install the Magnet on the door or window, and the Sensor on the wall.
 - o Orient the Sensor so the motion sensor is pointed down towards the floor.
 - o Your Sensor and Magnet should align in the middle, left, or right, using the alignment marks on the side, with a ½ inch (12mm) or less gap between them.
 - o Ensure your Sensor and Magnet are aligned and have the proper distance between them then tap or click Continue.
8. Close your door then tap or click OK, I closed the door.
9. Lightly place your Sensor and Magnet using the adhesive.

Note: Install the Sensor towards the top of the door and put the Magnet on the door frame. Make sure the space between the Sensor and Magnet is less than ½ inch (12 mm) and on a clean surface. Tap or click Continue.

10. Press the button on the bottom of the device then tap or click Continue.
11. Test Sensor by opening and closing the door then tap or click Continue.
12. Firmly press Sensor and Magnet to mount them securely then tap or click Continue.

Your Arlo Sensor is now active.

To complete or change the physical installation of your paired All-In-One Sensor for Open/Close Window Detection, do the following:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click Devices.
3. Tap or click your All-in-One Sensor.
4. Tap or click Setup Assistant > Motion.

5. You will be prompted where do you want to install your sensor. Select Window.
6. Locate Magnet and adhesive included in the box then tap or click Continue.
7. Plan where you would like to place the Sensor and Magnet.
 -
 - o Install the Magnet on the window, and the Sensor on the wall.
 - o Orient the Sensor so the motion sensor is pointed down towards the floor.
 - o Your Sensor and Magnet should align in the middle, left, or right, using the alignment marks on the side, with a ½ inch (12mm) or less gap between them.
 - o Ensure your Sensor and Magnet are aligned and have the proper distance between them then tap or click Continue.
8. Close your window then tap or click OK, I closed the window.
9. Lightly place your Sensor and Magnet using the adhesive.

Note: Install the Sensor on the moving part of the window and the Magnet on the frame. Make sure the space between the Sensor and Magnet is less than ½ inch (12 mm) and on a clean surface. Tap or click Continue.

10. Press the button on the bottom of the device then tap or click Continue.
11. Test Sensor by opening and closing the window then tap or click Continue.
12. Firmly press Sensor and Magnet to mount them securely then tap or click Continue.

Your Arlo Sensor is now active.

For more information, visit the following articles:

- [How do I install and physically place the Arlo All-in-One Sensor?](#)
- [My All-in-One Sensor is not detecting motion, how can I troubleshoot it?](#)

Last Updated:06/07/2024 | Article ID: 000062791

[How do I install and physically place the Arlo All-in-One Sensor?](#)

[How do I install and physically place the Arlo All-in-One Sensor?](#)

This article applies to:

MS1001

The Arlo All-in-One Sensor is an accessory used in the Arlo Home Security System. The Arlo All-in-One Sensor is for indoor use only.

The best placement for your Arlo All-in-One Sensor varies by household, sensor setup, and the environment it is used in. Read this article for placement suggestions.

Motion Sensor:

- Make sure the sensor is 6ft (1.8m) from the floor for the most optimal coverage.
- Place the sensor within 20ft (6m) of where you want to detect motion.
- Motion detection does not work through windows reliably.
- o Ensure that your camera is not looking through glass or other transparent objects.
- o The motion sensor decreases in performance when it is aimed to look through glass, plastic, or a mirror.

Door:

- The sensor can detect open or closed doors.
- o The space between the sensor and magnet must be less than ½ inch (12mm).
- o Make sure to align the marks on the sides of the sensor and magnet.
- o Arlo recommends you install the magnet on the door itself, with the Sensor on the wall or door frame.

Garage Door:

- The sensor can use the provided magnet or the sensor's built-in tiltmeter to detect when the garage door is opened or closed.
- o The sensor should always be placed on the indoor part of your garage door.
- When using the magnet, the sensor should be placed on the wall, with the magnet on the garage door.
- o The space between the sensor and magnet should be less than ½ inch (12mm).
- o Make sure to align the marks on the sides of the sensor and magnet.
- When using the sensor on a tilting or sectional garage door, place the sensor on the inside of the garage door itself.

- o The sensor should be placed on part of the door that will tilt when opened and closed.
- o Ensure the Sensor is not too close to the edge of a section where it could be crushed.

Window:

- The sensor can detect open or closed windows.
- o The space between the sensor and magnet must be less than ½ inch (12mm).
- o Make sure to align the marks on the sides of the sensor and magnet.
- o Arlo recommends you install the magnet on the window itself, with the sensor on the wall or window frame.

Smoke/CO:

- Place the sensor within 6 feet (1.8 m) of the Smoke or CO alarm that you want to detect.
- Use the sensor test mode to confirm it is within range of the alarm.

Water Leak:

- Place the sensor on a flat surface without a gap.
- Ensure the sensor is on a surface that is clear of debris.
- The All-in-One Sensor detects water under the device using two metal prongs on the back of the sensor housing.
- It should be placed near a water heater, washing machine, restroom, sink, or anywhere you want leak detection.

For more information, visit the following articles:

- [How do I install and configure my Arlo All-in-One Sensor as a Water Leak Sensor?](#)
- [How can I configure my All-in-One Sensor for Smoke/CO Alarm detection?](#)
- [How do I install and configure my Arlo All-in-One Sensor as an Open/Close Sensor for windows or doors?](#)
- [How do I install and configure my Arlo All-In-One Sensor as a Garage Door Sensor?](#)
- [How do I install and configure my Arlo All-in-One Sensor as a Motion Sensor?](#)

Last Updated:05/09/2024 | Article ID: 000062975

How do I replace the battery in the Arlo All-in-One Sensor?

How do I replace the battery in the Arlo All-in-One Sensor?

This article applies to:

MS1001

The Arlo Home Security System All-in-One Sensor uses a replaceable coin cell CR2477 lithium battery.

To replace the battery in the All-in-One Sensor:

1. Slide the front cover of the sensor down and separate it from the back housing.
2. Replace the battery. Ensure the + symbol faces outward.
3. Reattach the back housing of the sensor and slide the front cover up to lock it into place.

Last Updated:05/09/2024 | Article ID: 000062963

How can I configure my Arlo All-in-One Sensor for Smoke/CO Alarm detection?

How can I configure my Arlo All-in-One Sensor for Smoke/CO Alarm detection?

This article applies to:

MS1001

The Arlo All-in-One Sensor is an accessory used in the Arlo Home Security System. The All-in-One Sensor is for indoor use only.

Note: After the initial trial, Smoke/CO alarm detection requires an Arlo Premium Plan.

- If you need to set up the Arlo All-in-One Sensor, visit: [How do I pair the All-in-One Sensor to the Arlo Keypad Sensor Hub?](#)

To configure the Arlo All-in-One Sensor for Smoke/CO Alarm detection:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Select the All-in-One Sensor.
4. Tap .
5. Tap Smoke/CO Alarm.
6. Tap Enable Detection.
7. Tap Yes.
8. Follow the in-app guidance to place the Arlo All-in-One Sensor and tap Continue.
9. Press the button on the bottom of the All-in-One Sensor and tap Continue.

Note: You have 30 seconds to complete test before button needs to be pressed again.

10. Press the test button on the Smoke/CO detector to activate the test beep.
11. When the test is completed, tap Finish.

Last Updated:09/20/2024 | Article ID: 000062787

What do the LED behaviors on my Arlo All-in-One Sensor mean?

What do the LED behaviors on my Arlo All-in-One Sensor mean?

This article applies to:

MS1001

The Arlo All-in-One Sensor has one LED located under the front face of the device which illuminates different patterns of blue and amber to notify you of various sensor functions and events.

Function/Event	LED Behavior
----------------	--------------

During Arlo All-in-One Sensor set up • Slow blinking blue for up to 2 minutes: Ready to pair with the Arlo Keypad Sensor Hub

- Fast blinking blue: Successfully paired with the Arlo Keypad Sensor Hub
- Fast blinking amber: Failed to pair with the Arlo Keypad Sensor Hub

SYNC button pressed to initiate Security Bypass or to apply immediate Device Setting changes • Solid amber: Attempting to communicate with the Arlo Keypad Sensor Hub

- Fast blinking blue: Communication with the Arlo Keypad Sensor Hub was successful, and changes have been applied
- Fast blinking amber: Could not communicate with the Arlo Keypad Sensor Hub, and changes have not been applied

Motion Detection • Flash blue for one second: Motion has been detected within the All-in-One Sensor's range

Range Finder Test • Slow blinking blue: Arlo All-in-One Sensor is within connectivity range of the Arlo Keypad Sensor Hub

- Slow blinking amber: Arlo All-in-One Sensor is out of connectivity range of the Arlo Keypad Sensor Hub

Factory Reset • Slow blinking amber for five seconds: Factory reset was successful

Last Updated:06/03/2024 | Article ID: 000062970

What does the button on the Arlo All-in-One Sensor do?

What does the button on the Arlo All-in-One Sensor do?

This article applies to:

MS1001

The push button on the bottom of the Arlo All-in-One Sensor is used in different scenarios such as device setup, security bypass, device settings changes, and factory reset.

Setup

- During setup, the button is pressed to connect the sensor to the Arlo Home Security System.
- For more information, visit: [How do I install and physically place the Arlo All-in-One Sensor?](#)

Security Bypass

- The button can be pressed to enable a temporary Security Bypass when you want to open a door without triggering an alarm in Arm Home mode.
- For more information, visit: [How can I temporarily bypass security on my Arlo All-in-One Sensor?](#)

Device Settings

- Changes to Device Settings in the Arlo Secure App for the Arlo All-in-One Sensor can take up to five minutes before they go into effect.
- Press the button on the sensor to enable the changes immediately.

Factory Reset

- Press and hold the button for 10 seconds to return the sensor to the factory default settings.
- After a factory reset, you must use the Arlo Secure app to set up the sensor.
- For more information, visit: [How do I factory reset the Arlo All-in-One Sensor?](#)

Last Updated:05/16/2024 | Article ID: 000062948

[How do I change the motion sensitivity for my Arlo All-in-One Sensor?](#)

[How do I change the motion sensitivity on my Arlo camera?](#)

This article applies to:

This article is for the Arlo Secure App experience with Library. If you have the Arlo Secure App experience with Feed, visit: [How do I change the motion sensitivity on my Arlo camera?](#)
- Arlo Secure 4.0

If you get too many or too few motion activity notifications, try these steps to test or adjust the motion detection sensitivity of your Arlo camera.

To test Arlo camera motion sensitivity settings:

1. Launch the Arlo Secure App.
2. Tap Settings.
3. Tap My Devices.
4. Select the device.
5. Tap Device Utilities.
6. Tap Motion Detection Test.
7. Move the slider left or right to increase or decrease motion detection sensitivity. Start at the low setting.
8. Walk in front of your Arlo camera from a distance of 5-10 feet to trigger motion detection.
9. Keep moving and increase the motion detection level to higher settings until the LED on the camera starts blinking. This means the camera has detected your motion and should be set at this level.

Note: This test does not save new motion detection settings.

To change motion detection settings on your Arlo camera:

1. Launch the Arlo Secure App.
2. Tap Mode.
3. Select the device you want to adjust.
4. In the Armed section, tap the pencil icon.
5. In the Rules section, tap the pencil icon for the rule you want to edit.
6. Tap the pencil icon next to Motion is detected.
7. Move the slider to decrease or increase motion sensitivity.
8. Tap Save.
9. Tap Edit Mode.
10. Tap Done.

Note: You can also use Activity Zones to focus on specific areas. For more information, visit: [What are Arlo Activity Zones and how do I create them?](#)

How can I receive fewer Arlo notifications from my Arlo All-In-One Sensor?

How can I receive fewer Arlo notifications from my Arlo All-In-One Sensor?

This article applies to:

MS1001

With the Arlo Security System, you can set push notifications or alerts when activity is detected by your Arlo All-in-One Sensor. If you want to receive fewer notifications, try the steps below:

1. Try disabling unwanted sensing functions. You can adjust any of the 6 sensing functions:

- o Access - Open/Close Detection
- o Motion
- o Ambient Temperature
- o Ambient Light
- o Water Leak
- o Smoke / CO Alarm

To disable a sensing function:

- A. Launch the Arlo Secure App or login to my.arlo.com
- B. Tap or click Devices.
- C. Tap or click the Arlo Sensor.
- D. Tap or click the function you want to disable.

- E. Tap or click Enable Detection slider off.
- F. Tap or click to save the settings.
- G. Tap or click Yes to confirm the setting.

2. Try adjusting the notifications for a specific mode if you are receiving too many notifications. For instance, if you are receiving too many notifications when your system is in Arm Home, then adjust the rules for Arm Home. For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#).

3. Adjust motion notifications. Check the sensor placement and sensitivity level, as these can affect motion detection for your device. Only enable detection for motion you want to detect.

Motion example:

- o Motion sensor in dining room: Enable notifications in Arm Away only, not in Arm Home and Standby.

4. Check where the Arlo sensor is aimed.

- o Motion sensor pointed towards a street: Consider disabling motion detection, lower the sensitivity, or re-aim the sensor away from the street.

5. Adjust the thresholds for Temperature. Only enable notifications on desired sensors.

Examples:

- o Enable only temperature notifications on sensors in a baby room or nursery, or in a basement where there is a risk of freezing temperatures.

- o Avoid using temperature notifications on sensors in areas where temperatures are likely to change frequently, like in a kitchen or a garage.

For Ambient light: Don't enable when sensor is in a place where light changes frequently. Only enable notifications on sensors where you want it to detect a change in light.

For Open/Close: Only enable on modes where you want notification. In most cases, set Open/Close on Arm Away mode. In some cases, Arm Home may also be wanted or needed. Enable on Standby, if desired, if you want to always be notified when a door or window is opened or closed.

Here are some examples:

- o Door that is used frequently while at home, or door inside your home: Only set for notifications on Arm Away.

- o Side door that is rarely used: only set notifications for Arm Away, Arm Home.

- o Window that is opened frequently while home: notifications for Arm Away only.

- o Window that is typically unopened or is in a child's room: Arm Away and Arm Home.

- o For doors or windows where you always want a notification, enable on all three modes: Arm Away, Arm Home, and Standby.
 - o Sensors located in interior locations, where you would like to monitor temperatures: Enabled notifications on desired modes, typically Arm Away and Arm Home.
 - o Sensors located on doors leading outside, kitchens, garages, and other places where large temperature swings may be expected: Enable detection if desired but leave notifications off to reduce false notifications.
6. If you are getting false notifications on Open/Close with magnet: make sure the magnet is aligned, affixed securely to door/window and within 0.5 inches/12mm. Make sure the door closes securely and doesn't move significantly when closed. Make sure the sensor and magnet do not move significantly when the door is opened or closed. For more information, visit: [How do I install and configure my Arlo All-in-One Sensor as an Open/Close Sensor for windows or doors?](#)

Last Updated:05/15/2024 | Article ID: 000063020

How do I use the Device Rangefinder to check the range of my Arlo All-in-One Sensor?

How do I use the Device Rangefinder to check the range of my Arlo All-in-One Sensor?

This article applies to:

SH1001 MS1001

Use the Device Rangefinder in the Arlo Secure App to determine if your Arlo All-in-One Sensor is within range of the Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap the All-in-One Sensor device card.
4. Tap .
5. Tap Connected to.
6. Tap Device Rangefinder.
7. Press the button on the bottom of the All-in-One Sensor and tap Continue.

The Arlo Secure App status will state Within Range or Out of Range. If the Arlo Secure App states Out of Range, move your All-in-One Sensor closer to the Keypad Sensor Hub. The All-in-One Sensor LED will blink Blue.

8. Tap Continue.

For more information, visit: [How do I install and physically place the Arlo All-in-One Sensor?](#)

Last Updated:05/16/2024 | Article ID: 000062788

How to configure the All-in-One Sensor as a Water Leak Sensor

How to configure the All-in-One Sensor as a Water Leak Sensor

This article applies to:

MS1001

The Arlo All-in-One Sensor can be configured to detect water leaks near your water heater, washer, restroom, sink, or anywhere you want water leak detection. Water Leak Detection can be used in conjunction with other sensor functions, such as Temperature, Light, or Motion Detection.

WARNING: Never submerge the Arlo All-in-One Sensor. The device will be permanently disabled if submerged.

Note: Water Leak Detection is not compatible with Open/Close Detection for Door, Garage, or Windows, and is usually not used with Smoke/CO Alarm Listening.

Please keep in mind when installing and configuring the Arlo All-in-One Sensor as a Water Leak Sensor:

- All-in-One Sensors used for Water Leak Detection can also be used for Temperature and Ambient Light Detection.
- All-in-One Sensors can be used for Motion Detection, however, because the Sensor needs to lie on a flat, horizontal surface, the motion sensor may not provide optimal motion detection when used for Water Leak Detection.
- All-in-One Sensors configured for Water Leak Detection can be used with Smoke/CO Alarm Listening if there is an alarm within 6 feet (2 meters).

To install your All-in-One Sensor for Water Leak Detection:

1. Launch the Arlo Secure App.

2. Tap Devices.
3. Select the Arlo All-one-Sensor.
4. Tap .
5. Tap the name of the Sensor to access Device Info.
6. Tap Setup Assistant > Water Leak Detection.
7. Place the Sensor on a flat surface without a gap. Sensor detects water under the device then tap or click OK, Continue.
8. Find a location for your Sensor. Place the Sensor near the water heater, washer, restroom, sink or anywhere you want leak detection and tap or click Continue.
9. Press the button on the bottom of the Sensor and tap or click Continue.

Note: You have 5 minutes to complete the setup. If you don't complete the setup within 5 minutes and the LED turns off, press the button on the bottom of the Sensor again. The LED should start blinking. If the LED is not blinking, press the button again. You may see an 'Out of Range' message even though the Sensor is well within range. You can still proceed to the next step, by tapping Continue.

10. Place your Sensor within range of your Arlo Keypad Sensor Hub. Use the range finder to determine if it is within range and tap Continue.

Your Arlo Sensor is now active.

To enable Water Leak Detection for an already configured Arlo All-in-One Sensor:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Select the Arlo All-in-One Sensor.
4. Tap .
5. Tap Water Leak.
6. Tap Enable Detection.
7. Tap the arrow to the left to save your settings.

Water Leak Detection is now enabled.

What are the sensing functions of the Arlo All-in-One Sensor, and which sensing functions can be enabled at the same time?

What are the sensing functions of the Arlo All-in-One Sensor, and which sensing functions can be enabled at the same time?

This article applies to:

MS1001

The Arlo Home Security System includes Arlo All-in-One Sensors with eight sensing functions in one compact design. This gives you the flexibility to place the sensor anywhere you need in your home. Sensor functions are easily controlled through the Arlo Secure App and can be enabled or changed at any time.

Sensing functions of the Arlo All-in-One Sensor include:

- Motion Detection: Receive alerts when motion is detected inside your home
- Open/Close with Magnet: Open and close detection gives you the ability to act when a door or window is opened
- Open/Close with Tilt: Tilt detection lets you know to check in when a garage door or window is opened
- Water Leak: Water leak detection helps prevent damage from leaky pipes or water heaters
- Temperature: Temperature detection alerts you before your pipes freeze in cold weather
- Light: Light detection alerts you to check in when there are ambient light changes in your home
- Smoke Alarm Listening: Get the right type of emergency help when a smoke alarm is triggered
- CO Alarm Listening: CO alarm listening notifies you when a Carbon Monoxide alarm is set off

Note: Smoke and CO Alarm listening requires an Arlo Premium plan after the trial period expires.

Some Arlo All-in-One Sensor functions can be enabled at the same time:

- Smoke and CO Alarm Listening are combined into the same setting within the Arlo Secure App.
- Temperature, Light, and Smoke/CO Alarm Listening can be used in conjunction with any of the other sensing functions.
- Open/Close detection cannot use both the magnet and the tilt function on one sensor at the same time. Open/Close detection using the tilt sensor requires calibration during installation or after setup.
- Motion Detection can be enabled in conjunction with the Water Leak sensing function; however, because the All-in-One Sensor must lay horizontally for water detection, the motion detection area will not be ideal.
- Water Leak and Open/Close cannot be used on one sensor at the same time.
- Common sensing function combinations include combining Open/Close with Motion Detection to best protect doors and windows or combining Water Leak with Temperature to best protect your home from freezing pipes and water leaks.

Last Updated:09/20/2024 | Article ID: 000062862

How can I configure Dark/Bright alerts for my Arlo All-in-One Sensor?

How can I configure Dark/Bright alerts for my Arlo All-in-One Sensor?

This article applies to:

MS1001

The Arlo All-In-One Sensor can be configured to detect light presence. The Dark/Bright Alerts can be used in conjunction with other sensor functions, such as temperature, light, or motion detection.

To pair your All-In-One Sensor to the Arlo Keypad Sensor Hub, visit: [How do I pair the All-in-One Sensor to the Arlo Keypad Sensor Hub?](#)

To configure the Light Sensor for your Arlo All-in-One Sensor:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click Devices.
3. Tap or click .

4. Tap or click Sensors.
5. Tap or click the sensor to edit.
6. Tap or click Light Detection.
7. Slide the Enable Detection On slider to turn on Light Detection.
8. Tap or click Got it.

Your sensor notifies you when light is detected. You can set up rules and notification settings in Modes. For more information, visit: [How do I set up Push Notifications or Email Alerts?](#)

Note: Applying the change you've made might take up to five minutes. You may also press the button on the bottom of your All-in-One Sensor to apply the change immediately.

9. Tap or click  to go back and go to modes.
10. Tap or click Go to Modes to adjust the settings.

Note: The Light sensor can be used in conjunction with other sensor functions, such as temperature, motion detection, or door access.

To enable Light Sensor alerts:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click Devices.
3. Tap or click .
4. Tap or click Ambient Light.
5. Slide the Enable Detection On slider.

When ambient light detection is enabled, the sensor will monitor when it gets lighter, or darker wherever the sensor is placed.

6. When your device detects a change in light, Arlo will do the following:
 - o You may adjust the light sensitivity by moving the slider to the left for less sensitive, and right for more sensitive .
 - o You may select a location for the sensor to measure the lightness or darkness.
 - o Then, you may tap or click Add Action to activate and receive alerts.

How can I configure Temperature alerts for my All-in-One Sensor?

How can I configure Temperature alerts for my All-in-One Sensor?

This article applies to:

MS1001

To configure Temperature alerts for your All-In-One Sensor:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click Devices.
3. Tap or click .
4. Tap or click of the All-in-One Sensor.
5. Tap or click Sensors.
6. Tap or click the sensor you want to edit.
7. Tap or click Temperature Detection.

By default, the temperature sensor is disabled. To enable Temperature detection, do the following:

- A. Launch the Arlo Secure app or log in to your Arlo account at my.arlo.com.
- B. Tap or click Devices
- C. Tap or click
- D. Tap or click of the All-in-One Sensor
- E. Tap or click Temperature
- F. Slide the toggle for Enable Detection to the right (on).
8. Tap or click the pencil icon next to Temperature falls below threshold and Temperature rises above threshold to edit the settings.
9. Select the check box next to Push Notifications and Email Alerts to receive your preferred mode of alerts.
10. Tap or click the pencil icon next to Email Alerts and add your email address then Save.

If Email Alerts is active, you will receive alerts using the email address that you have saved

Note: Temperature alerts work at the same time as other sensor functions, for example, you can have temperature alerts set on a sensor that is also used as a door sensor, motion sensor, or water leak sensor.

To specify the temperature display units between Celsius and Fahrenheit:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Tap or click (app) or Settings on my.arlo.com (web).
3. Tap or click App Settings.
4. Select by tapping or clicking Celsius or Fahrenheit.

Once selected, your temperature unit is saved.

Last Updated:05/13/2024 | Article ID: 000062976

SIREN

Arlo Wire-Free Outdoor Siren Sound and Light Troubleshooting (INTERNAL)

If the Siren does not play sounds or activate the strobe light when the Siren feature is triggered:

Check the Arlo Wire-Free Siren status

Check the status of the Wire-Free Outdoor Siren in the CS Diag Tool. If the Siren is offline, visit: [Arlo Wire-Free Outdoor Siren Offline \(INTERNAL\)](#)

Check the Arlo Keypad Sensor Hub status

Check the status of the Arlo Keypad Sensor Hub in the CS Diag Tool. If the Keypad Sensor Hub is offline, visit: [Arlo Keypad Sensor Hub Offline \(INTERNAL\)](#)

Make sure the Wire-Free Outdoor Siren is properly configured

Check if the Siren is properly configured to play sounds and activate the strobe light. For more information, visit: [How do configure the siren settings of my Arlo Wire-Free Outdoor Siren?](#)

Reset the Siren power

Remove the batteries, and re-install after 30 seconds.

Reset and re-pair the Siren

To remove the Wire-Free Outdoor Siren from the Devices list:

Launch the Arlo Secure App.

Tap Devices.

Tap the Siren device card.

Tap .

On the Siren Settings screen, tap on the name of the device to access the Device Info screen.

Tap Remove Device at the bottom of the screen.

Tap Yes to confirm.

To factory reset the Wire-Free Outdoor Siren:

Remove the back cover from the Siren.

Press the SYNC button quickly five times. An Audible beep should be heard for every successful button press.

The LED indicator will blink amber five times to confirm the factory reset.

The Siren will go to pairing mode (Blue LED blinks slow) after the factory reset.

To add the device back to the Arlo system, visit: [How do I setup and install my Arlo Wire-Free Outdoor Siren?](#)

If the Siren does not play sounds or activate the strobe light when triggered via Routines:

Confirm if the correct Mode is activated

The customer must activate the Mode to trigger the automation.

For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

Make sure the Rules are properly configured to trigger the Arlo Wire-Free Siren

For more information, visit: [How do I set up Automations for my Arlo Wire-Free Outdoor Siren?](#)

Reset the Siren power

Remove the batteries, and re-install after 30 seconds.

Reset and re-pair the Siren

To remove the Wire-Free Outdoor Siren from the Devices list:

Launch the Arlo Secure App.

Tap Devices.

Tap the Siren device card.

Tap .

On the Siren Settings screen, tap on the name of the device to access the Device Info screen.

Tap Remove Device at the bottom of the screen.

Tap Yes to confirm.

To factory reset the Wire-Free Outdoor Siren:

Remove the back cover from the Siren.

Press the SYNC button quickly five times. An Audible beep should be heard for every successful button press.

The LED indicator will blink amber five times to confirm the factory reset.

The Siren will go to pairing mode (Blue LED blinks slow) after the factory reset.

To add the device back to the Arlo system, visit: [How do I setup and install my Arlo Wire-Free Outdoor Siren?](#)

If the case needs to be escalated to L2, use the following escalation template:

Device(s) affected:

D2AP: Router info. Mesh system or other special considerations?

When did the issue start?

Changes to system?

Physical setup: How far is the Siren from the Keypad Sensor Hub? How many walls/other devices?

Gather logs

My Arlo Wire-Free Outdoor Siren will not power on; how can I troubleshoot it?

My Arlo Wire-Free Outdoor Siren will not power on; how can I troubleshoot it?

This article applies to:

SLB1001

If your Arlo Wire-Free Outdoor Siren will not power on:

Make sure the Arlo Wire-Free Outdoor Siren is powered on.

- Remove the Arlo Wire-Free Outdoor Siren from its mount.
- Press the button on the bottom of the device and listen for an audible beep.
- If a beep is heard, the device is powered on, but is likely offline. For more information, visit: [My Arlo Wire-Free Outdoor Siren is offline, how do I troubleshoot it?](#)
- If a beep is not heard, the device is likely powered off. Continue with the following steps.

Ensure the batteries are properly installed.

- Make sure the batteries are correctly positioned and is sitting flush inside the battery compartment.
- If you are using the Wire-Free Outdoor Siren for the first time, make sure the battery tabs are removed from the battery compartment.

Replace the batteries.

- The Arlo Wire-Free Outdoor Siren uses two Lithium CR123A 3V batteries.
- Replace both batteries at the same time with new batteries from well-known, high quality, established manufacturers such as Panasonic®, Energizer®, or Duracell®.

Power the Arlo Wire-Free Outdoor Siren off and on to reset it.

- Remove the batteries and reinstall them after 30 seconds.
- The LED will turn on after installing batteries to confirm the power is on.
- You can also press the reset button on the bottom of the device and listen for a beep to confirm the device is powered on.

If your Arlo Wire-Free Outdoor Siren still will not power on, contact Arlo Support.

Last Updated:08/16/2023 | Article ID: 000063089

How do I mount my Arlo Wire-Free Outdoor Siren?

How do I mount my Arlo Wire-Free Outdoor Siren?

This article applies to:

SLB1001

You can mount your Arlo Wire-Free Outdoor Siren on a wall or ceiling. Before you mount the Siren, find a location with strong signal strength. For more information, visit: [Where do I place my Arlo Wire-Free Outdoor Siren?](#)

Note: You must follow the pairing instructions in the Arlo Secure App before mounting your Arlo Wire-Free Outdoor Siren. For more information, visit: [How do I setup and install my Arlo Wire-Free Outdoor Siren?](#)

You need the following items:

- A power drill with a 15/64-inch (6mm) drill bit

- A Phillips-head screwdriver
- The screw mount that came in the package with your Siren
- A pencil (optional)

To mount your Arlo Wire-Free Outdoor Siren:

1. Remove the mount from the Arlo Wire-Free Outdoor Siren.
2. Place the mount on the wall (or ceiling).
3. Mark the location of the three holes with a pencil.

Note: The marks will be used as a guide to drill pilot holes.

4. Remove the mount from the wall.
5. Use a 15/64-inch (6mm) drill bit to drill three holes into the wall.
6. Place the screw mount back onto the wall, and align it with the three holes in the wall.
7. While holding the wall plate over the three holes, use a Phillips-head screwdriver to fasten the screws into each hole.
8. Rotate the Arlo Wire-Free Outdoor Siren clockwise onto the mount.

Last Updated: 05/20/2024 | Article ID: 000063146

The strobe light on Arlo Wire-Free Outdoor Siren will not turn on, how can I troubleshoot it?

The strobe light on Arlo Wire-Free Outdoor Siren will not turn on, how can I troubleshoot it?

This article applies to:

SLB1001

If your Arlo Wire-Free Outdoor Siren strobe light will not activate, try the following troubleshooting steps:

Verify the Arlo Wire-Free Outdoor Siren is offline.

- Check the Arlo Secure App to verify the Arlo Wire-Free Outdoor Siren is offline.
- If the Wire-Free Outdoor Siren is offline, visit: [My Arlo Siren is offline, how can I troubleshoot it?](#)

Make sure the strobe light on the Arlo Wire-Free Outdoor Siren is set to turn on when activated.

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap the Arlo Wire-Free Outdoor Siren device card.
4. Tap .
5. Tap Light Settings.
6. Tap Enable Strobe Light.

Check if the Arlo Wire-Free Outdoor Siren is part of an Automation for your Modes.

- Automations may override certain functions of the Arlo Wire-Free Outdoor Siren.
- If you have set a rule that includes cross-triggering the Arlo Wire-Free Outdoor Siren, check if that rule activates the strobe light.
- For more information about Automations for your Arlo Wire-Free Outdoor Siren, visit: [How do I set up Automations for my Arlo Wire-Free Outdoor Siren?](#)

Turn the Arlo Wire-Free Outdoor Siren off and on to reset it.

- Remove the batteries and reinstall them after 30 seconds.

Factory Reset the Arlo Wire-Free Outdoor Siren.

WARNING: Factory resetting your Arlo Wire-Free Outdoor Siren returns it to default settings. The Arlo Wire-Free Outdoor Siren is also removed from your Arlo account after a factory reset. You must follow the in-app setup process to use your Arlo Wire-Free Outdoor Siren after a factory reset.

1. Remove the back cover of the Arlo Wire-Free Outdoor Siren.
 2. Quickly press the SYNC button five times.
- - o You will hear an audible beep for each button press.

- o The LED will flash amber five times to confirm the factory reset.
- o After the reset, the siren LED will slowly flash blue to indicate it is in pairing mode.

If the strobe light on the Arlo Wire-Free Outdoor Siren still will not turn on after following the troubleshooting steps above, contact Arlo Support.

Last Updated:05/13/2024 | Article ID: 000063085

My Arlo Wire-Free Outdoor Siren will not activate audio or other sounds, how can I troubleshoot it?

My Arlo Wire-Free Outdoor Siren will not activate audio or other sounds, how can I troubleshoot it?

This article applies to:

SLB1001

If your Arlo Wire-Free Outdoor Siren is not activating audio or playing other sounds:

Ensure your Arlo Wire-Free Outdoor Siren is online.

- Check the Arlo Secure App and verify the device is online.
- If the Arlo Wire-Free Outdoor Siren is offline, visit: [My Arlo Wire-Free Outdoor Siren is offline, how do I troubleshoot it?](#)

Make sure your Arlo Wire-Free Outdoor Siren is set to play audio when the siren is activated.

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap the Wire-Free Outdoor Siren device card.
4. Tap .
5. Tap Audio Settings.
6. Tap Enable Sound.

Check Automations for the Arlo Wire-Free Outdoor Siren.

- Automations can override certain functions of your Arlo Wire-Free Outdoor Siren.

- If you set a Rule that includes cross-triggering your Arlo Wire-Free Outdoor Siren, ensure the Rule activates the audio function of the Arlo Wire-Free Outdoor Siren.
- For more information, visit: [How do I set up Automations for my Arlo Wire-Free Outdoor Siren?](#)

Turn the Arlo Wire-Free Outdoor Siren off and on to reset it.

- Remove the batteries and reinstall them after 30 seconds.
- For more information, visit: [How do I change the batteries in my Arlo Wire-Free Outdoor Siren?](#)

Factory Reset the Arlo Wire-Free Outdoor Siren.

- For more information, visit: [How do I factory reset the Arlo Wire-Free Outdoor Siren?](#)

If the Arlo Wire-Free Outdoor Siren will not play audio after following the troubleshooting steps above, contact Arlo Support.

Last Updated:05/17/2024 | Article ID: 000063098

How do I activate the light on my Arlo Wire-Free Outdoor Siren?

How do I activate the light on my Arlo Wire-Free Outdoor Siren?

This article applies to:

SLB1001

The Arlo Wire-Free Outdoor Siren has a built-in strobe light that when enabled, will flash when the Siren is activated.

The strobe light can also be independently set to flash through Automations. For more information on activating your Arlo Wire-Free Outdoor Siren with Automations, visit: [How do I set up Automations for my Arlo Wire-Free Outdoor Siren?](#)

To set the strobe light to turn on when your Arlo Wire-Free Outdoor Siren is activated:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap the Arlo Wire-Free Outdoor Siren device card.

4. Tap .
5. Tap Light Settings.
6. Tap Enable Strobe Light.

Last Updated:05/20/2024 | Article ID: 000063087

What do the LED behaviors on my Arlo Wire-Free Outdoor Siren mean?

What do the LED behaviors on my Arlo Wire-Free Outdoor Siren mean?

This article applies to:

SLB1001

The Arlo Wire-Free Outdoor Siren has one LED located on the front of the device which illuminates different patterns of blue and amber to notify you of various sensor functions and events.

Function / Event	LED Behavior	Meaning
------------------	--------------	---------

During Arlo Wire-Free Outdoor Siren Set Up	Slow Blinking Blue for up to two minutes	Ready to pair with the Arlo Keypad Sensor Hub
--	--	---

Fast Blinking Blue	Successfully paired with the Arlo Keypad Sensor Hub
--------------------	---

Fast Blinking Amber	Failed to pair with the Arlo Keypad Sensor Hub
---------------------	--

Range Finder Test	Solid Blue	Arlo Wire-Free Outdoor Siren is within connectivity range of the Arlo Keypad Sensor Hub
-------------------	------------	---

	Solid Red	Arlo Wire-Free Outdoor Siren is out of connectivity range of the Arlo Keypad Sensor Hub
--	-----------	---

Factory Reset	Slow Blinking Amber for five seconds	Factory reset was successful
---------------	--------------------------------------	------------------------------

Last Updated:05/30/2024 | Article ID: 000063072

Where do I place my Arlo Wire-Free Outdoor Siren?

Where do I place my Arlo Wire-Free Outdoor Siren?

This article applies to:

SH1001 SLB1001

The Arlo Wire-Free Outdoor Siren is part of the Arlo Home Security System.

- The Arlo Wire-Free Outdoor Siren includes an integrated strobe light and a speaker that can play pre-recorded messages.

The best placement for the Arlo Wire-Free Outdoor Siren varies by household and environment.

- The Arlo Wire-Free Outdoor Siren is for indoor and outdoor use.

Try to minimize the number of walls between the Arlo Keypad Sensor Hub and the Arlo Wire-Free Outdoor Siren.

- Thick or insulated walls can reduce the range.

Use the Device Rangefinder to ensure the Arlo Wire-Free Outdoor Siren is within range of your Arlo Keypad Sensor Hub.

- For more information, visit: [How do I use the Device Rangefinder to install my Arlo Wire-Free Outdoor Siren](#)

Last Updated:06/03/2024 | Article ID: 000063075

How do I set up Automations for my Arlo Wire-Free Outdoor Siren?

How do I set up Automations for my Arlo Wire-Free Outdoor Siren?

This article applies to:

SLB1001

Modes and Rules let you tell your Arlo system what to do in different situations. Each Mode uses one or more Rules to control your Arlo system.

- For example, you can set your Arlo Wire-Free Outdoor Siren to trigger Audio or Light functions when the motion sensor is activated on a specific camera.

Arlo Modes

Arlo Modes give you control over how your cameras respond to motion or sound. Modes tell your Arlo cameras to respond differently at various times.

Each Mode is fully customizable based on the level of detection you want. You might want to set one Mode in which some motion sensors and cameras are active, but others are not.

Arlo Rules

For each Mode, you can set the Rules for your devices. First, select a device to trigger the rule, such as an Arlo Camera, Doorbell, or All-in-One Sensor. Then select one or more actions to take place when the trigger event occurs.

When

- The trigger can be Motion Detection, Audio Detection, or both depending on the device.
- Arlo All-in-One Sensors have additional options including Open/Close, Temperature, and Ambient Light.
- If you subscribe to Arlo Secure you can also select Person, Package, Animal, Vehicle, or Other Motion for advanced motion detection. For more information, visit: [What are Arlo Smart Notifications and how do I set them up?](#)

Then

- Play Audio allows you to play audio from your Arlo Wire-Free Outdoor Siren.
- Activate Siren will activate the Siren on all devices at your location. For information on configuring the Siren feature settings, visit: [How do I set up and configure the Siren settings for my Arlo Home Security System?](#)
- You can also select Customize Device to further customize the actions that will be performed by your Arlo Wire-Free Outdoor Siren.

Notifications

- When a trigger is detected, Arlo can send you push notifications.

To activate your Arlo Wire-Free Outdoor Siren using a different device:

To play a sound:

1. Launch the Arlo Secure App.
2. Tap Routines.
3. Tap Arm Away, Arm Home, or Standby.

4. Tap the Arlo device you want to use as a trigger.
5. Under Then, tap Add Action.
6. Tap Play Sound.
7. Select Siren.
8. Tap Save.

To Customize the action performed by your Arlo Wire-Free Outdoor Siren:

1. Launch the Arlo Secure App.
2. Tap Routines.
3. Tap Arm Away, Arm Home, or Standby.
4. Tap the Arlo device you want to use as a trigger.
5. Under Then, tap Add Action.
6. Tap Customize Device.
7. Select Siren.
8. Select Modify Settings.
9. Tap Audio and Light Settings.

Adjust the Volume, Siren Duration, and Strobe Light flash.

10. Tap Next.
11. Tap Save.

- Note: Changes to settings on the Arlo Wire-Free Outdoor Siren can take up to five minutes to take effect.

Arlo Automations

Automate your devices to do what you want when you want. For example, when you leave in the morning, set your Arlo system to automatically change from Arm Home or Standby to Arm Away Mode for device activation and increased security.

In Arlo Automations, you can:

Add Schedule

- Create a custom schedule to manage your Arlo system.

- For example, create one Schedule Automation for 9AM to set your system to Arm Away, while you are at work, and create another Schedule Automation for 6PM to set the system to Arm Home or Standby when you return.

For more information, visit: [How do I add a Schedule Automation to my Arlo system?](#)

- You can also have Scheduled Automations match up with your local Sunrise or Sunset time.

For more information, visit: [How does the Sunrise and Sunset features work for my Scheduled Automation on my Arlo System?](#)

Add Arrive/Leave

- Create an arrive or leave automation to manage your Arlo system.
- For example, when someone arrives at your location, automatically set the Mode to Standby.
- For more information, visit: [What are Arrive/Leave Automations and how do I set it up for my Arlo system?](#)

Last Updated:06/07/2024 | Article ID: 000063093

How do I configure the Arlo Wire-Free Outdoor Siren settings?

How do I set up and configure the Siren settings for my Arlo Home Security system?

This article applies to:

FLW2001 SH1001 MS1001 VMC5040 VMC4040P FB1001 VMC4041P VMC4050P VMC4060P VMC2020 VMC2030 VMC2032 VML2030 VML4030

There are different settings for configuring the Siren feature in the Arlo Secure App. You can set up the siren to activate for different events for your Arlo All-In-One Sensor or Keypad Sensor Hub, such as Motion or Open/Close. The siren can also be set up to activate based on motion or audio detected by your Arlo Cameras. You can also set the siren to activate in response to a Panic button press.

Siren Configuration

To configure which devices at your location will play an audible siren, as well as the duration the siren sounds:

1. Launch the Arlo Secure App or log in to my.arlo.com.
2. Tap or click .
3. Tap or click Location.
4. Tap or click Siren.
5. Adjust the Duration. You may select from 1, 2 or 5 minutes.
6. Select the devices that sound the siren by toggling the switch. You must select at least one siren device to sound the siren.

To enable Siren when the Panic Button is pressed on an Arlo Keypad Sensor Hub:

1. Launch the Arlo Secure App or login to my.arlo.com.
2. Tap or click .
3. Tap or click Location.
4. Tap or click Panic.
5. Tap or click Panic Button.
6. Tap or click the Activate Sirens toggle switch on.

For more information, visit: [What is the Panic Button on my Arlo Keypad Sensor Hub and how do I use it?](#)

To configure volume and duration of the Built-in Siren on a device:

1. Launch the Arlo Secure App or login to my.arlo.com.
2. Tap or click Devices.
3. Select the device.
4. Tap or click Default Mode Settings.
5. Adjust the slider for Siren Sounding Length. Duration is 60 seconds to 5 mins.
6. Adjust the slider for Siren Volume. You may select from Low to High.

Siren Mode and Rule Configuration

Arlo modes give you control over how your cameras and other devices respond to motion or sound. Modes let you tell your Arlo devices to respond differently in different situations, such as when you are away from home or asleep in bed. By editing, adding or removing rules on each mode, you allow your device to do the action as preferred.

For more information, visit: [About Arlo Routines, Modes, Rules, and Automations](#)

Note: Arlo recommends that the Siren feature be activated only on devices and modes where you wish to have the Siren actively respond to events. For example: in Arm Away mode, you may want the siren active on All-In-One Sensors used on doors and windows, and on cameras located within your household. In Arm Home mode, you would not want to set a Siren for indoor cameras, as your family would be home and you do not want the siren to activate.

To reduce unwanted siren activations, Arlo recommends you not set the siren to activate on devices that are expected to have regular events. We recommend you not set devices such as doorbells or outdoor cameras to trigger the siren.

To set up when the Siren feature activates using Modes and Rules:

1. Launch the Arlo Secure App or login to my.arlo.com.
2. Confirm you have selected the Location. Change your Location if needed.
3. Tap or click Routines.
4. Select the Mode you would like to have a siren trigger.
5. Tap or click Add Device Rules.
6. Select the devices you want to add for the rule.
7. Tap or click Save.
8. Tap or click the device.
9. Tap or click the Activate Siren switch.

Last Updated:05/23/2024 | Article ID: 000062793

45

Essential Series (2nd Generation)

FAQs

Arlo Essential Outdoor Camera (2nd Generation) FAQ

Arlo Essential Outdoor Camera (2nd Generation) FAQ

This article applies to:

This FAQ applies to the new Arlo Essential Outdoor Camera (2nd Generation).

What new 2nd Generation Arlo Essential Outdoor Camera models are available?

- Arlo Essential Outdoor Camera 2K (VMC3050)
- Arlo Essential XL Outdoor Camera 2K (VMC3052)
- Arlo Essential Outdoor Camera HD (VMC2050)
- Arlo Essential XL Outdoor Camera HD (VMC2052)

What is the difference between the four 2nd Generation Arlo Essential Outdoor Cameras?

Arlo Essential Outdoor HD and Arlo Essential XL Outdoor HD camera models capture video in 1080p resolution. Arlo Essential Outdoor 2K and Arlo Essential XL Outdoor 2K capture video in 2K resolution.

The Arlo Essential XL Outdoor 2K and HD cameras come with an integrated extra-length (XL) battery, which provides additional battery life.

What are the key features of the Arlo Essential Outdoor Camera (2nd Generation)?

- Motion Detection Alerts
- Color Night Vision
- Noise-Canceling Audio
- Integrated Spotlight
- Integrated Siren
- Weather Resistant
- Direct to Wi-Fi Connection

Are the Arlo Essential Outdoor (2nd Generation) cameras completely wire-free?

Yes. The Arlo Essential Outdoor (2nd Generation) cameras are fully wire-free and powered with an integrated battery. However, you can use the Arlo Essential Solar Panel (2nd Generation) and Arlo Essential Outdoor Charging Cable (2nd Generation) to keep your camera outdoors with continuous power. For more information, visit: [How do I charge my Arlo Essential Outdoor Camera \(2nd Generation\) camera?](#)

Can I use the Arlo Essential Outdoor (2nd Generation) cameras indoors and outdoors?

Yes. The Arlo Essential Outdoor (2nd Generation) cameras are weather resistant, wire-free, and outdoor compatible. They do not require a continuous AC power connection.

What is the minimum upload bandwidth speed required?

You must have a high-speed Internet connection that can sustain a minimum of 2 Mbps upload per Arlo Essential Outdoor Camera. For more information, visit: [What are the minimum requirements for installing and using my Arlo system?](#)

Do I need an Arlo SmartHub or Base Station to use the Arlo Essential Outdoor Camera (2nd Generation)?

No. You can connect the Arlo Essential Outdoor Camera directly to your 2.4 GHz Wi-Fi network without the need for an Arlo SmartHub or Base Station. Arlo is currently working on a solution to make Arlo Essential Outdoor Cameras (2nd Generation) compatible with Arlo SmartHubs and Base Stations in 2024.

What is the Arlo Essential Outdoor Camera (2nd Generation) video resolution?

The Arlo Essential Outdoor Camera HD (2nd Generation) and Arlo Essential XL Outdoor Camera HD (2nd Generation) record and output Full HD 1080p at a 16:9 aspect ratio. The Arlo Essential Outdoor Camera 2K (2nd Generation) and Arlo Essential XL Outdoor Camera 2K (2nd Generation) record and output 2K video at a 16:9 aspect ratio.

How wide is the Arlo Essential Outdoor Camera (2nd Generation) viewing angle?

The camera lens provides a 130-degree field of view (FOV).

Do the Arlo Essential Outdoor (2nd Generation) cameras have color night vision?

Yes. All four versions of the Arlo Essential Outdoor Camera (2nd Generation) include color night vision.

How much longer does the Arlo Essential XL Outdoor Camera (2nd Generation) battery last?

The Arlo Essential XL Outdoor Camera 2K and Essential XL Outdoor Camera HD come with an integrated extra-length (XL) battery that lasts 16 to 24 months with typical usage. The Arlo Essential Outdoor Camera HD and Arlo Essential Outdoor Camera 2K both come with an integrated battery that lasts six months without charging.

Can I remove the battery in my Arlo Essential Outdoor (2nd Generation) camera?

No. The battery in your Arlo Essential Outdoor Camera is fully integrated and cannot be removed. You can recharge the Arlo Essential Outdoor Camera with the indoor charging cable that is included with the camera. For more information, visit: [How do I charge my Arlo Essential Outdoor Camera \(2nd Generation\) camera?](#)

Can I use a solar panel to charge my Arlo Essential Outdoor (2nd Generation) camera?

Yes. Your Arlo Essential Outdoor Camera (2nd Generation) is compatible with the Arlo Essential Solar Panel (2nd Generation).

What kind of charging cable can I use with my 2nd Generation Arlo Essential Outdoor Camera?

Your Arlo Essential Outdoor Camera (2nd Generation) comes with a USB-C charging cable that you can use to charge your camera indoors. You can also use the Arlo Essential Solar Panel (2nd Generation) and Arlo Essential Outdoor Charging Cable (2nd Generation) to charge your camera outdoors.

What kind of power adapter can I use with the indoor charging cable that came with my camera?

To charge your Arlo Essential Outdoor Camera (2nd Generation), plug the included charging cable into any USB power source. Power sources with higher wattage charge your camera faster, Arlo recommends using at least 5V-2A. For more information, visit: [How do I charge my Arlo Essential Outdoor Camera \(2nd Generation\) camera?](#)

Can I use my Arlo Essential Outdoor Camera (2nd Generation) to cross-trigger other Arlo cameras?

Yes. You can set your other Arlo cameras to record when your Arlo Essential Outdoor Camera (2nd Generation) detects motion.

What mounting options do I have with my Arlo Essential Outdoor Camera (2nd Generation)?

Your Arlo Essential Outdoor Camera (2nd Generation) comes with an adjustable screw mount that you can use indoors or outdoors. You can also visit [Arlo.com](#) to search for additional mounting accessories. For more information about mounting your camera, visit: [How do I mount my Arlo Essential Outdoor Camera to a wall \(2nd Generation\)?](#)

Are Arlo Protective Camera Covers available for my Arlo Essential Outdoor Camera (2nd Generation)?

Arlo Protective Covers are available for the Arlo Essential Outdoor Camera (2nd Generation). The silicone skins are UV and weather-resistant, and ideal for outdoor and indoor use. They have a convenient slip-on, slip-off design, while providing access for mounting and battery charging. For more information, visit: [Arlo.com](#)

Are Arlo Essential Outdoor or XL Outdoor Cameras compatible with Apple Home?

Not yet. The Arlo team is working to support Apple Home compatibility for Essential Outdoor (2nd Generation) Cameras.

Do Arlo Essential Outdoor or XL Outdoor Cameras work with Arlo SmartHubs?

Not yet. The Arlo team is working to support SmartHub (VMB5000/VMB4540) compatibility for Essential Outdoor (2nd Generation) Cameras.

Arlo Video Doorbell (2nd Generation) FAQ

Arlo Video Doorbell (2nd Generation) FAQ

This article applies to:

This article applies to the new 2nd Generation Arlo Video Doorbells:

- Arlo Video Doorbell HD (2nd Generation)
- Arlo Video Doorbell 2K (2nd Generation)

What are the benefits of the Arlo Video Doorbell (2nd Generation)?

The Arlo Video Doorbell (2nd Generation) is designed for flexible installation and to capture the blind spots that other video doorbells miss. The 1:1 aspect ratio means that you can see a package on the ground and a visitor from head to toe. The Arlo Video Doorbell (2nd Generation) also offers features such as high-definition video quality, a 180-degree viewing angle, and full-duplex two-way audio.

What is the video resolution of the Arlo Video Doorbell (2nd Generation)?

The Arlo Video Doorbell HD (2nd Generation) records and outputs video in 1080p resolution. The Arlo Video Doorbell 2K (2nd Generation) records and outputs video in 2K resolution.

Is the Arlo Video Doorbell (2nd Generation) battery-powered?

Yes. The doorbell always operates on battery power. You can also hardwire the doorbell to your existing doorbell chime for continuous trickle charging of the battery. When your doorbell is hardwired, it still uses battery power. For more information, visit: [How do I install, hardwire, and mount my Arlo Video Doorbell using my existing doorbell and chime \(2nd Generation\)?](#)

Can I install the Arlo Video Doorbell (2nd Generation) if I do not have an existing wired doorbell?

Yes. The doorbell is battery-powered, and it does not require a connection to any existing doorbell wiring.

What comes with the Arlo Video Doorbell (2nd Generation)?

When you purchase an Arlo Video Doorbell (2nd Generation), you receive the doorbell, a mounting plate, angled mounting bracket, a release pin, a screw kit, USB charging cable, and a wire extension kit.

Where should I install my Arlo Video Doorbell (2nd Generation)?

Install your Arlo Video Doorbell (2nd Generation) about 48 in (120 cm) off the ground. The doorbell should be placed so that it has the fullest view of the area leading up to the front

entry. This provides the best opportunity to capture motion detection events and video clips that include a person approaching the door. For more information, visit: [How should I position my Arlo Video Doorbell?](#)

Can I hardwire the Arlo Video Doorbell (2nd Generation)?

Yes. You can use the Arlo Video Doorbell (2nd Generation) to replace your existing doorbell, and to continuously trickle charge the battery. For more information, visit: [How do I install, hardwire, and mount my Arlo Video Doorbell using my existing doorbell and chime \(2nd Generation\)?](#)

What voltage is required to hardwire the Arlo Video Doorbell (2nd Generation)?

The doorbell requires a voltage between 8-24V AC to ring your chime and trickle charge your doorbell. For more information, visit: [How do I install, hardwire, and mount my Arlo Video Doorbell using my existing doorbell and chime \(2nd Generation\)?](#)

How wide is the viewing angle on the Arlo Video Doorbell (2nd Generation)?

The lens has a 180-degree field of view. This enables you to see a package on the ground or a person from head to toe.

Does the Arlo Video Doorbell (2nd Generation) have a zoom-in capability?

Yes. The Arlo Video Doorbell (2nd Generation) supports 12x digital zoom-in with the Arlo Secure App.

Does the Arlo Video Doorbell (2nd Generation) have night vision?

Yes. The Arlo Video Doorbell (2nd Generation) uses infrared night vision to see visitors when it is dark.

Does the Arlo Video Doorbell (2nd Generation) have an integrated siren?

Yes. The built-in siren can be activated manually within the Arlo Secure App, or you can set the siren to automatically ring when motion is detected to deter unwanted visitors.

Does the Arlo Video Doorbell (2nd Generation) have an integrated microphone?

Yes. The doorbell comes with a single, high-sensitivity microphone that allows you to speak with a visitor in clear audio.

Does the Arlo Video Doorbell (2nd Generation) have full-duplex audio?

Yes. With full-duplex audio, you can talk and listen at the same time, enabling you to have a full 2-way conversation with the person at your door.

Is there a reset button on the Arlo Video Doorbell (2nd Generation)?

Yes. There is a pin-hole button on the back of the doorbell which can be accessed with the included release pin. For more information, visit: [How do I reset my Arlo Video Doorbell?](#)

Does the Arlo Video Doorbell (2nd Generation) come with a secure mount?

Yes. The doorbell securely locks into the provided mounting plate. Once the doorbell is locked into place, it cannot be removed without using the release pin or a similar object.

Does the Arlo Video Doorbell (2nd Generation) require an Arlo SmartHub or Base Station?

No. Arlo SmartHubs and Arlo Base Stations are not currently compatible with the Arlo Video Doorbell (2nd Generation). Simply use your existing Wi-Fi router to connect the doorbell directly to a 2.4GHz Wi-Fi network. Arlo is currently working on a solution to make 2nd Generation Arlo Video Doorbells compatible with Arlo SmartHubs and Arlo Base Stations in 2024.

Do I need to purchase other Arlo devices to use the Arlo Video Doorbell (2nd Generation)?

No. The Arlo Video Doorbell (2nd Generation) can operate as a standalone product.

Do I need the Arlo Secure App to use the Arlo Video Doorbell (2nd Generation)?

Yes. You must use the Arlo Secure App to set up your doorbell, adjust settings, and access cloud recordings.

Does the Arlo Video Doorbell (2nd Generation) offer different mounting options?

Yes. The doorbell includes an angled mounting bracket that you can use to adjust the video doorbell viewing angle. For more information, visit: [How do I use the angled mounting bracket that came with my Arlo Video Doorbell?](#)

Can I leave a voicemail message on the Arlo Video Doorbell (2nd Generation)?

Yes. If you do not answer the video call within 20 seconds after pressing the doorbell button, the visitor is prompted to leave a voicemail. This also happens when you decline a doorbell call. You must have an Arlo Secure plan to access voicemail recordings.

Can I use the Arlo Video Doorbell (2nd Generation) to cross-trigger other Arlo devices?

Yes. The Arlo Video Doorbell has its own integrated camera, but you can set up cross triggering the same way as you would with other Arlo devices so that additional cameras will record when the doorbell detects motion.

What smart home and voice assistant systems can I use with the Arlo Video Doorbell (2nd Generation)?

The Arlo Video Doorbell (2nd Generation) is compatible with Amazon Alexa, Google Home, and If This Then That (IFTTT). For more information, visit: [What smart home and voice assistant systems can I use with my Arlo devices?](#)

Are Arlo Video Doorbells (2nd Generation) compatible with Apple Home?

Not yet. The Arlo team is working to support Apple Home compatibility for Arlo Video Doorbells (2nd Generation).

Do Arlo Video Doorbells (2nd Generation) work with Arlo SmartHubs?

Not yet. The Arlo team is working to support SmartHub (VMB5000/VMB4540) compatibility for Arlo Video Doorbells (2nd Generation).

Last Updated:07/10/2024 | Article ID: 000063193

Arlo Essential Indoor Camera (2nd Generation) FAQ

Arlo Essential Indoor Camera (2nd Generation) FAQ

This article applies to:

This FAQ applies to the new Arlo Essential Indoor Camera 2K and HD (2nd Generation).

What is the Arlo Essential Indoor Camera (2nd Generation) video resolution?

- 2nd Generation Arlo Essential Indoor Cameras have video resolution of 1080p and 2K.

What is the field of view on the Arlo Essential Indoor Camera (2nd Generation)?

- The Arlo Essential Indoor Camera (2nd Generation) field of view is 130-degrees.

Does the Arlo Essential Indoor Camera (2nd Generation) have an integrated siren?

- Yes. The siren can be set to trigger automatically when motion or sound is detected, or enabled manually with the Arlo Secure App.

How do I mount the Arlo Essential Indoor Camera (2nd Generation)?

- You can use the included mounting plate to mount the camera on a wall, or you can place the camera on a flat surface.
- For more information, visit: [How do I mount my Arlo Essential Indoor Camera to a wall? \(2nd Generation\)](#)

Do I need an Arlo SmartHub or Base Station to use the Arlo Essential Indoor Camera (2nd Generation)?

- No. You can connect the Arlo Essential Indoor Camera directly to your 2.4 GHz Wi-Fi network without the need for an Arlo SmartHub or Base Station.
- Arlo is currently working on a solution to make 2nd Generation Arlo Essential Indoor Cameras compatible with Arlo SmartHubs and Base Stations in 2024.

What is the minimum upload bandwidth speed required?

- The Arlo Essential Indoor Camera (2nd Generation) requires an upload speed of at least 2 Mbps per camera.
- For more information, visit: [What are the minimum requirements for installing and using my Arlo system?](#)

Can I use continuous video recording (CVR) with the Arlo Essential Indoor Camera (2nd Generation)?

- No. Arlo is currently working on a solution to make 2nd Generation Arlo Essential Indoor Cameras compatible with CVR in 2024.

Is an Arlo Secure trial included with the Arlo Essential Indoor Camera (2nd Generation)?

- Yes. A 30-day Arlo Secure trial is included with the purchase of an Arlo Essential Indoor Camera (2nd Generation).

What is the Privacy Shield?

- The automated Privacy Shield closes whenever you disarm your camera, ensuring that your moments are private when needed.
- When the Privacy Shield is closed, your camera disables motion and audio detection, and the camera's microphone is turned off.
- For more information, visit: [How do I use the Privacy Shield on my Arlo Essential Indoor Camera?](#)

Can I close the Privacy Shield manually?

- You can close the Privacy Shield in the Arlo Secure App by disarming your camera.
- Do not attempt to manually close the Privacy Shield with your finger.

What smart home and voice assistant systems can I use with the Arlo Essential Indoor Camera (2nd Generation)?

- The Arlo Essential Indoor Camera (2nd Generation) is compatible with Amazon Alexa, Google Home, and If This Then That (IFTTT).
- For more information, visit: [What smart home and voice assistant systems can I use with my Arlo devices?](#)

Are Arlo Essential Indoor Cameras (2nd Generation) compatible with Apple Home?

- Not yet. The Arlo team is working to support Apple Home compatibility for Essential Indoor (2nd Generation) Cameras.

Do Arlo Essential Indoor Cameras (2nd Generation) work with Arlo SmartHubs?

- Not yet. The Arlo team is working to support SmartHub (VMB5000/VMB4540) compatibility for Essential Indoor (2nd Generation) Cameras.

Last Updated:07/10/2024 | Article ID: 000063191

Arlo Essential Indoor Camera (2nd Generation) Product Tour

Arlo Essential Indoor Camera (2nd Generation) Product Tour

This article applies to:

VMC3060 VMC2060

2nd Generation Arlo Essential Indoor 2K and HD Cameras have the following integrated features:

Microphone

- Use the microphone and speaker for full-duplex two-way conversation.
- For more information, visit: [How do I use 2-way audio on my Arlo camera? - Arlo Secure 4.0](#)

Privacy Shield

- Ensure your moments are private when needed by closing the integrated Privacy Shield.
- For more information, visit: [How do I use the Privacy Shield on my Arlo Essential Indoor Camera? - Arlo Secure 4.0](#)

Ambient Light Sensor

- The ambient light sensor determines the need for night vision.
- For more information, visit: [How do I turn Arlo Camera Night Vision on or off in the Arlo Secure App?](#)

Status LED

- Use the LED to determine the status of your camera.

- For more information, visit: [What do the LED behaviors on my Arlo Essential Indoor Camera \(2nd Generation\) mean?](#)

Pairing Button

- Use the pairing button for camera set-up and factory reset.
- For more information, visit:
 - o [How to set up the Arlo Essential Indoor Camera \(2nd Generation\)](#)
 - o [How do I factory reset my Arlo Essential Indoor Camera?](#)

Power Cable

- Use the cable to power your camera from an AC power outlet.

Mounting Hole

- Use the mounting hole to mount your camera to a wall.
- For more information, visit: [How do I mount my Arlo Essential Indoor Camera to a wall? \(2nd Generation\)](#)

Speaker

- Deter intruders by activating the siren on the integrated speaker.
- For more information, visit: [How do I turn the siren on my Arlo camera on or off? - Arlo Secure 4.0](#)

Base

- Use the base to place your camera on a flat surface.
- For more information, visit: [Arlo Camera Placement Tips](#)

Last Updated:06/27/2024 | Article ID: 000063230

How does the Arlo Outdoor 2K Camera, Arlo Essential Indoor Camera 2K, and Arlo Video Doorbell 2K 2nd Generation devices use 2K?

How do 2nd Generation Arlo Essential Cameras and Arlo Video Doorbells use 2K?

This article applies to:

AVD4001 VMC3060 VMC3050 VMC3052

The Arlo Essential Outdoor Camera 2K, Essential XL Outdoor Camera 2K, Essential Indoor Camera 2K, and Arlo Video Doorbell 2K (2nd Generation) devices allow you to record and stream 2K videos on your mobile device anywhere you go.

- Note: 2nd Generation Arlo Essential 2K Cameras and Arlo Video Doorbells do not require an Arlo SmartHub or Arlo Base Station for video streaming.

Live Video Streaming

- 2K live video automatically streams when you tap the play button in the Devices tab of the Arlo Secure App.

Recording in 2K

- You must have an Arlo Secure plan to record in 2K.
- The recording is sent to a secure cloud where you can view it in the Arlo Secure App.

Last Updated:06/14/2024 | Article ID: 000063217

What is the difference between the Arlo Essential wire-free cameras?

What is the difference between the Arlo Essential wire-free cameras?

This article applies to:

VMC2020 VMC2030 VMC2032 VMC3050 VMC2050 VMC3052 VMC2052

There are multiple Arlo Essential wire-free cameras across two Generations.

Arlo Essential Cameras (2nd Generation):

- Essential XL Outdoor Camera 2K (2nd Generation) VMC3052
- Essential XL Outdoor Camera HD (2nd Generation) VMC2052
- Essential Outdoor Camera 2K (2nd Generation) VMC3050
- Essential Outdoor Camera HD (2nd Generation) VMC2050

Arlo Essential Cameras:

- Essential XL Spotlight Camera VMC2032
- Essential Spotlight Camera VMC2030
- Essential Camera VMC2020

Continue reading this article for details about each camera.

Arlo 2nd Generation Cameras:

Arlo Essential XL Outdoor Camera (2nd Generation)

Take advantage of extra battery length along with all the same features as the Outdoor Essential Camera (2nd Generation).

- Maximum video resolution: 2K / 1080p Full HD
- Integrated spotlight: Yes
- Night vision: Yes; color night vision or IR night vision in black and white
- Battery: Integrated XL rechargeable battery with one year of battery life
- Noise-Cancelling Audio: Hear and speak to visitors with clear, 2-way audio.
- Mounting: Uses the screw mount hole on the back

Arlo Essential Outdoor Camera (2nd Generation)

Capture clear details in full high definition and see in color at night with the integrated spotlight.

- Maximum video resolution: 2K / 1080p Full HD
- Integrated spotlight: Yes
- Night vision: Yes; color night vision or IR night vision in black and white
- Battery: Integrated rechargeable battery with six months of battery life
- Noise-Cancelling Audio: Hear and speak to visitors with clear, 2-way audio.
- Mounting: Uses the screw mount hole on the back

Arlo Essential Cameras:

Arlo Essential XL Spotlight Camera

Take advantage of extra battery length, along with all the same features as the Essential Spotlight Camera.

- Maximum video resolution: 1080p Full HD
- Integrated spotlight: Yes
- Night vision: Yes; color night vision or IR night vision in black and white
- Battery: Integrated XL rechargeable battery with one year of battery life
- Mounting: Uses the screw mount hole on the back or the screw mount hole on the bottom

Arlo Essential Spotlight Camera

Capture clear details in full high definition, and see in color at night with the integrated spotlight.

- Maximum video resolution: 1080p Full HD
- Integrated spotlight: Yes
- Night vision: Yes; color night vision or IR night vision in black and white
- Battery: Integrated rechargeable battery with six months of battery life
- Mounting: Uses the screw mount hole on the back

Arlo Essential Camera

Mount your camera indoors or outdoors with flexibility and ease of use.

- Maximum video resolution: 1080p Full HD
- Integrated spotlight: No
- Night vision: Yes; IR night vision in black and white
- Battery: Integrated rechargeable battery with six months of battery life
- Mounting: Uses the screw mount hole on the back

Last Updated:04/22/2024 | Article ID: 000062507

What accessories can I use with my Arlo Essential Outdoor Camera (2nd Generation)?

What accessories can I use with my Arlo Essential Outdoor Camera (2nd Generation)?

This article applies to:

Arlo Essential Outdoor (2nd Generation) cameras are compatible with the Arlo Essential Outdoor Charging Cable (2nd Generation), Essential Solar Panel (2nd Generation), and Protective Camera Covers.

- The Arlo Essential Outdoor Charging Cable (2nd Generation) will continuously charge your camera battery.

Note: The USB-C Charging Cable that came in the package with your Arlo Essential Outdoor camera is meant for indoor charging only.

- The Arlo Essential Solar Panel (2nd Generation) can be used to charge your Arlo Essential Outdoor Camera outdoors.
- Protective Camera Covers help guard your camera against scratches and rough handling.

Note: Available for Arlo Essential Outdoor Camera 2K (2nd Generation) and Arlo Essential Outdoor Camera HD (2nd Generation) only.

Last Updated:06/05/2024 | Article ID: 000063218

ESSENTIAL 2 - OUTDOOR / OUTDOOR XL CAMERAS

HOW TO

What is the button on my Arlo Essential Outdoor Camera (2nd Generation)?

What is the button on my Arlo Essential Outdoor Camera (2nd Generation)?

This article applies to:

VMC3050 VMC2050 VMC3052 VMC2052

The button on your Arlo Essential Outdoor or Outdoor XL Camera (2nd Generation) is the Pairing button. You can use the Pairing button for different purposes, depending on whether your camera is shut down or in normal operating mode.

When you first unbox your camera, it is shut down to reduce battery usage before installation. We recommend that you follow the instructions in the Arlo Secure App immediately after you first unbox your camera. These instructions show you how to wake up and install the camera.

Arlo Essential Outdoor & XL Outdoor (2nd Generation) Cameras

- The button on the top of your camera is the Pairing button.

Use the Pairing button

When the camera is shut down, pressing the Pairing button does the following:

- Press and hold the button for 3 seconds. The camera wakes up and the LED flashes blue. Follow the instructions in the Arlo Secure App to add your Essential Outdoor Camera (2nd Generation) to your account.

Note: If you do not add your Arlo camera to the Arlo Secure App within two minutes of pressing the Pairing button, the Pairing process times out, and the camera shuts down. You must press the Pairing button again to restart the Pairing process.

- Quick press. No change. The camera remains shut down.

Note: If the camera LED does not flash, no matter how long you press the Pairing button, the camera battery is likely at 0% charge. Recharge your camera and try pressing the button again.

When the camera is in normal operating mode, pressing the Pairing button does the following:

- Press and hold the button for 3 seconds. The camera LED blinks blue slowly, and the camera Pairing process (pairing the BLE connection) starts. Follow the instructions in the Arlo Secure App to add your Essential Outdoor Camera (2nd Generation) to your account.
- Press and hold the button for 15 seconds. The camera LED blinks amber. Let go of the button once the LED blinks amber, and the camera factory resets. For detailed instructions about factory resetting your Arlo Camera, visit: [How do I factory reset my Essential Outdoor Camera \(2nd Generation\)?](#)

Note: The camera's USB charging cable must be disconnected for this to work.

How do I mount my Arlo Essential Outdoor Camera to a wall? (2nd Generation)

How do I mount my Arlo Essential Outdoor Camera (2nd Generation) to a wall?

This article applies to:

VMC3050 VMC2050 VMC3052 VMC2052

Before you mount your Arlo Essential Outdoor Camera on a wall, make sure you have found a location with strong signal strength.

Note: Do not mount the camera until instructed to do so during the installation process.

This article applies to:

- Arlo Essential Outdoor Camera HD & 2K (2nd Generation)
- Arlo Essential XL Outdoor Camera HD & 2K (2nd Generation)

You need the following items to mount your Arlo Essential Outdoor Camera:

- Power drill with a 15/64-inch (size B, 6mm) drill bit
- Phillips-head screwdriver
- Pencil
- The following items that came in the box with your camera:
 - Mounting plate
 - Screws
 - Wall anchors

To mount your Arlo Essential Outdoor Camera (2nd Generation) on a wall:

1. Using the mounting plate as a guide, mark pilot hole locations with a pencil.
2. Use the marks as a guide for where to drill the pilot holes.
3. Drill the pilot holes with a 15/64-inch (size B, 6mm) drill bit.
4. Insert the wall anchors into the pre-drilled holes.
5. With the arrow pointing up, align the mounting plate with the pre-drilled holes.
6. Use the provided screws to secure the mounting plate to the wall.

7. Align the camera with the mounting plate.
8. Slide the camera onto the mounting plate to lock it into place.
9. Test to make sure it feels secure and adjust the camera angle.

Last Updated:10/09/2024 | Article ID: 000063167

How do I charge my Arlo Essential Outdoor Camera (2nd Generation) camera?

How do I charge my Arlo Essential Outdoor Camera (2nd Generation)?

This article applies to:

VMC3050 VMC2050 VMC3052 VMC2052

To charge the Arlo Essential Outdoor Camera 2K (2nd Generation), Arlo Essential XL Outdoor Camera 2K (2nd Generation), Arlo Essential Outdoor Camera HD (2nd Generation), or Arlo Essential XL Outdoor Camera HD (2nd Generation), use the included USB-C charging cable. The battery's charge percentage displays in the Settings page for your Arlo camera. To access the Settings page:

1. Launch the Arlo Secure App or log in to your Arlo account at my.arlo.com.
2. Go to Devices.
3. Tap or click on the camera you want to check the battery percentage.
4. Tap or click .

The battery percentage will be displayed.

Note: The battery in the Arlo Essential Outdoor Camera 2K (2nd Generation), Arlo Essential XL Outdoor Camera 2K (2nd Generation), Arlo Essential Outdoor Camera HD (2nd Generation), and Arlo Essential XL Outdoor Camera HD (2nd Generation) cannot be removed.

To charge the camera outdoors, use one of the following accessories:

- VMA6600 Essential 2 Solar Panel
- VMA5700 Essential 2 Outdoor Power Charger

USB Charging

The USB-C charging cable that came in the box with your camera is for indoor use only. You must dismount your camera and bring it indoors to charge it with the included charging cable. Connect the charging cable to a 5V, 2A power adapter. Power adapters with less than 2A will take a longer period of time to properly charge the camera.

To charge your camera with the included indoor USB-C charging cable:

1. Remove your Essential Outdoor Camera (2nd Generation) from the mount.

Note: You don't need to unscrew the mount from the wall. You only need to unscrew the camera from the mount.

2. Bring the camera indoors.
3. Pull the flap at the bottom of the camera to reveal the USB charging port.
4. Plug the USB-C charging cable into the camera.

Note: The included charging cable is not meant for outdoor use. To use your camera outdoors while it charges, you must use the VMA5700 Essential 2 Outdoor Charging Cable or VMA6600 Essential 2 Solar Panel.

- The VMA5700 Essential Outdoor Charging Cable is weather-resistant and can continuously charge your camera battery when connected to an outlet.

Solar Panel Charging

The VMA6600 Essential 2 Solar Panel keeps your battery charged with direct sunlight.

The solar panel's weather-resistant design, 8-foot power cable, and adjustable mount make installation easy anywhere.

Last Updated: 06/05/2024 | Article ID: 000063211

How to set up the Arlo Essential Outdoor or Outdoor XL Camera 2nd Generation

How to set up the Arlo Essential Outdoor Camera (2nd Generation)

This article applies to:

The Arlo Essential Outdoor and Essential XL Outdoor Cameras (2nd Generation) are installed using Bluetooth technology.

You need the following before installation:

- 2.4Ghz Wi-Fi network
- Arlo Secure App 4.0
- Bluetooth enabled mobile device

To set up the Arlo Essential Outdoor Camera (2nd Generation):

1. Launch the Arlo Secure App.
2. Tap Devices.

Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Select Cameras > Essential Series > Essential Cameras 2nd Generation.
5. The app will verify you have upgraded to the new Arlo Secure experience and have enabled Bluetooth. Make sure to give the Arlo Secure App permission to use Bluetooth.
6. Press and hold the Pairing Button for 3 seconds.
7. When the LED is flashing blue, tap Continue.
8. Find a location to place the camera that is near an outlet and within range of your Wi-Fi network.
9. Select the Wi-Fi network that you want to use and tap Continue.
10. Enter your Password and tap Continue.

Arlo will begin looking for your camera.

11. After the camera is found, name your Arlo camera and tap Continue.
12. Position your Arlo camera and tap Continue.

For more information, visit:

- [Arlo Camera Placement Tips](#)
- [How do I enable Bluetooth on my mobile device for the Arlo Secure App?](#)
- [What are the minimum requirements for installing and using an Arlo system?](#)

- How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?

Last Updated:05/02/2024 | Article ID: 000063196

How to set up the Arlo Essential Outdoor Camera (2nd Generation)

How to set up the Arlo Essential Outdoor Camera (2nd Generation)

This article applies to:

The Arlo Essential Outdoor and Essential XL Outdoor Cameras (2nd Generation) are installed using Bluetooth technology.

You need the following before installation:

- 2.4Ghz Wi-Fi network
- Arlo Secure App 4.0
- Bluetooth enabled mobile device

To set up the Arlo Essential Outdoor Camera (2nd Generation):

1. Launch the Arlo Secure App.
2. Tap Devices.

Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Select Cameras > Essential Series > Essential Cameras 2nd Generation.
5. The app will verify you have upgraded to the new Arlo Secure experience and have enabled Bluetooth. Make sure to give the Arlo Secure App permission to use Bluetooth.
6. Press and hold the Pairing Button for 3 seconds.
7. When the LED is flashing blue, tap Continue.
8. Find a location to place the camera that is near an outlet and within range of your Wi-Fi network.
9. Select the Wi-Fi network that you want to use and tap Continue.

10. Enter your Password and tap Continue.

Arlo will begin looking for your camera.

11. After the camera is found, name your Arlo camera and tap Continue.

12. Position your Arlo camera and tap Continue.

For more information, visit:

- [Arlo Camera Placement Tips](#)
- [How do I enable Bluetooth on my mobile device for the Arlo Secure App?](#)
- [What are the minimum requirements for installing and using an Arlo system?](#)
- [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)

Last Updated:05/02/2024 | Article ID: 000063196

TROUBLESHOOTING

How to troubleshoot Arlo Essential Outdoor Series Camera (2nd Generation) charging issues?

How to troubleshoot Arlo Essential Outdoor Camera (2nd Generation) charging issues

This article applies to:

VMC3050 VMC2050 VMC3052 VMC2052

If you are having problems charging the battery for the Arlo Essential Outdoor Camera 2K (2nd Generation), Essential XL Outdoor Camera 2K (2nd Generation), Essential Outdoor Camera HD (2nd Generation), or Essential XL Outdoor Camera HD (2nd Generation):

1. Ensure you are using the USB-C charging cable that was included in the box with your camera.

Note: The USB-C charging cable that came with your camera is for indoor use only.

WARNING: If the charging cable is damaged, do not use the cable to charge the camera.

2. Ensure you are using the correct type of AC power adapter.

Note: The AC power adapter should have an output of at least 1.0A. Using a power adapter rated lower than 1.0A is not sufficient enough to properly charge the camera in a timely manner. The preferred AC power adapter should have an output of 5.0V and 2.0A.

3. Check the charging cable connection between the camera and power adapter to make sure it fits securely into each port.

Note: The camera LED will flash blue for three seconds when the charging cable is properly connected. A battery charging icon will also display for your camera in the Arlo Secure App. For more information, visit: [What do the Arlo camera battery level icons and notifications mean?](#)

4. If the camera is not charging, try plugging the AC power adapter into a different power outlet.

5. If the camera is still not charging, try using a different USB-C cable from another Arlo camera or another device.

6. If the above steps do not resolve the issue, ensure the metal contacts of the USB-C charging cable are free from dirt and debris to ensure a secure connection.

For more information, visit:

- [How do I charge my Arlo Essential Outdoor Camera \(2nd Generation\)?](#)
- [How to troubleshoot Arlo Solar Panel charging issues](#)

Last Updated:05/28/2024 | Article ID: 000063213

How do I factory reset my Arlo Essential Outdoor Camera (2nd Generation)?

How do I factory reset my Arlo Essential Outdoor Camera (2nd Generation)?

This article applies to:

VMC3050 VMC2050 VMC3052 VMC2052

Factory resetting your Arlo Essential Outdoor Camera (2nd Generation) returns it to default settings.

- You must follow the Arlo Secure App setup process to use your camera after a factory reset.

To factory reset the Arlo Essential Outdoor Camera (2nd Generation) using the device Pairing Button:

1. Press and hold the Pairing Button on the top of the camera for 15 seconds.

2. When the camera LED starts blinking amber, release the Pairing Button to trigger a factory reset.

To factory reset the Arlo Essential Outdoor Camera (2nd Generation) using the Arlo Secure App:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Select the camera you wish to reset.
4. Tap .
5. Tap the Device Name.
6. Tap Remove Device.
7. Tap Yes to confirm.

To reconnect the Arlo Essential Outdoor Camera (2nd Generation) to your Arlo account:

1. Launch the Arlo Secure App.

Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

2. Tap .
3. Select Cameras > Essential Series > Essential Cameras 2nd Generation.
4. Follow the in-app instructions.

For more information, visit: [How to set up the Arlo Essential Outdoor or Outdoor XL Camera 2nd Generation](#)

Last Updated:10/04/2024 | Article ID: 000063225

ESSENTIAL 2 - INDOOR CAMERA

HOW TO

How do I factory reset my Arlo Essential Indoor Camera?

How do I factory reset my Arlo Essential Indoor Camera?

This article applies to:

VMC2040 VMC3060 VMC2060

Factory resetting your Arlo Essential Indoor Camera returns it to the default settings.

- After a factory reset, you will need to set up your Arlo Essential Indoor Camera again using the Arlo Secure App.

To Factory Reset your Arlo Essential Indoor (2nd Generation) Camera:

1. Press and hold the Pairing Button on the camera for about 15 seconds.
2. Wait to ensure that the camera LED rapidly blinks amber after 15 seconds, then release the button.
3. Your camera is reset to the factory default settings.
4. Follow the instructions below to remove your camera from the Arlo Secure App and then re-add it to your Arlo system.

To Factory Reset your Arlo Essential Indoor Camera:

1. Press and hold the Sync Button on the camera for about 15 seconds.
2. Wait to ensure that the camera LED rapidly blinks blue after 15 seconds, then release the button.
3. Your camera is reset to the factory default settings.
4. Follow the instructions below to remove your camera from the Arlo Secure App and then re-add it to your Arlo system.

To remove the Arlo Essential Indoor Camera from the Arlo Secure App:

For the Arlo Secure experience with Feed:

1. Launch the Arlo Secure App.
2. Tap Devices.
3. Tap the Arlo Essential Indoor Camera device card.
4. Tap .

5. Tap the name of your Arlo Essential Indoor Camera at the top of the Device Settings screen.

6. Tap Remove Device.

For the Arlo Secure experience with Library:

1. Launch the Arlo Secure App.
2. Tap Settings.
3. Tap My Devices.
4. Select your Arlo Essential Indoor Camera.
5. Scroll down and tap Remove Device.

To re-add your Arlo Essential Indoor Camera to the Arlo Secure App:

For the Arlo Secure experience with Feed, visit:

- [How to set up the Arlo Essential Indoor Camera - Arlo Secure 4.0](#)
- [How to set up the Arlo Essential Indoor Camera \(2nd Generation\)](#)

For the Arlo Secure experience with Library, visit:

- [How to set up the Arlo Essential Indoor Camera](#)

Last Updated:06/11/2024 | Article ID: 000062560

How to set up the Arlo Essential Indoor Camera (2nd Generation)

This article applies to:

The Arlo Essential Indoor Camera (2nd Generation) is installed via Bluetooth.

You will need the following before installing your Arlo Essential Indoor Camera (2nd Generation):

- 2.4Ghz Wi-Fi network
- Bluetooth-enabled mobile device
- Arlo Secure App 4.0

To set up the Arlo Essential Indoor Camera (2nd Generation) directly to your Wi-Fi router:

1. Launch the Arlo Secure App.

2. Tap Devices.

Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .

4. Tap Cameras > Essential Series > Essential Camera (2nd Generation).

Note: If you are using the previous 3.0 Arlo Secure experience, the Arlo Secure App will upgrade you to the new Arlo Secure experience.

5. Grant the Bluetooth permission to continue.

6. Press and hold the Pairing Button on the camera for 3 seconds to enter pairing mode.

7. Once the Essential Camera is detected, tap Continue.

8. Find a location to place the camera that is near an outlet and within range of your Wi-Fi network.

9. Select the 2.4GHz Wi-Fi network that you want to use and tap Continue.

10. Enter your Password and tap Continue.

Arlo will begin looking for your camera.

11. After the camera is found, name your Arlo camera and tap Continue.

12. If available, your camera will perform a firmware update.

13. Position your Arlo camera and tap Continue.

For more information, visit:

- [How do I enable Bluetooth on my mobile device for the Arlo Secure App](#)
- [What are the minimum requirements for installing and using my Arlo system?](#)
- [How do I connect my mobile device to a 2.4 GHz Wi-Fi network to set up my Arlo camera?](#)
- [Arlo Camera Placement Tips](#)

How do I mount my Arlo Essential Indoor Camera to a wall? (2nd Generation)

This article applies to:

VMC3060 VMC2060

Before you mount your Arlo Essential Indoor Camera on a wall, make sure you have found a location with strong signal strength.

Note: Do not mount the camera until instructed to do so during the installation process.

You need the following items to mount your Arlo Essential Indoor Camera:

- Power drill with a 15/64-inch (size B, 6mm) drill bit
- Phillips-head screwdriver
- Pencil
- The following items that came in the box with your camera:
 - Mounting plate
 - Screws
 - Wall anchors

To mount your Arlo Essential Indoor Camera (2nd Generation) on a wall:

1. Using the mounting plate as a guide, mark pilot hole locations with a pencil.
2. Use the marks as a guide for where to drill the pilot holes.
3. Drill the pilot holes with a 15/64-inch (size B, 6mm) drill bit.
4. Insert the wall anchors into the pre-drilled holes.
5. With the arrow pointing up, align the mounting plate with the pre-drilled holes.
6. Use the provided screws to secure the mounting plate to the wall.
7. Unscrew the mount from the bottom of the camera and screw it into the back of the camera before mounting it to the wall.
8. Align the camera with the mounting plate.
9. Slide the camera onto the mounting plate to lock it into place.
10. Test to make sure it feels secure and adjust the camera angle.

Last Updated:05/09/2024 | Article ID: 000063168

What do the LED behaviors on my Arlo Essential Indoor Camera (2nd Generation) mean?

This article applies to:

VMC2060

VMC3060

The Arlo Essential Indoor Camera (2nd Generation) LED indicates the status of the camera. The LED illuminates blue when the camera is powered on.

LED behaviors during setup

- Slow blinking blue
 - The camera is in the process of pairing to a Wi-Fi network.
- Fast blinking blue
 - The camera successfully paired with a Wi-Fi network.
- Fast blinking amber
 - A setup error occurred.

LED behaviors after setup

- Blinking amber
 - The device has been factory reset.
- Solid amber
 - An internet connectivity error occurred.
 - For more information, visit: [My Arlo camera is offline; how can I troubleshoot it?](#)
- Alternating blue and amber
 - A firmware update is in progress.
- Solid blue
 - The device is on.
- Solid amber with shutter closed

- The device is offline.

Last Updated:09/20/2023 | Article ID: 000063207

ESSENTIAL 2 - VIDEO DOORBELL

HOW TO

How do I install and mount my Arlo Video Doorbell without hardwiring to an existing doorbell or chime? (2nd Generation)

This article applies to:

This article covers the installation of the Arlo Video Doorbell (2nd Generation) in a wireless configuration. If you want to hardwire your Arlo Video Doorbell (2nd Generation), visit: How do I install, hardwire, and mount my Arlo Video Doorbell using my existing doorbell and chime (2nd Generation)?

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the Need Help? button in the Arlo Secure App or on my.arlo.com. You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To install your Arlo Video Doorbell (2nd Generation), you must have the following items:

- The items listed in the Quick Start Guide that were included in the original product box
- The Arlo Secure App version 4.0 and above (User experience with Feed)
- A mobile device (Bluetooth capable)
- A screwdriver
- A power drill (optional)

The Arlo Video Doorbell (2nd Generation) installation process takes place in two phases: connecting the Arlo Video Doorbell to your Arlo account and mounting the Arlo Video Doorbell to your wall. You must use the Arlo Secure App to install your Arlo Video Doorbell.

Arlo recommends that you charge your Arlo Video Doorbell battery before installation.

- For more information, visit: [How do I charge my Arlo Video Doorbell \(2nd Generation\)?](#)

To install your Arlo Video Doorbell (2nd Generation) in a wireless configuration:

1. Launch the Arlo Secure App.
2. Tap Devices.

Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Tap Doorbells & Chimes.
5. Tap Video Doorbell 2nd Generation.
6. Turn on Bluetooth on your phone and tap Continue.
7. Tap Allow to enable Bluetooth permissions.
8. Insert the Release Pin into the top of the Video Doorbell and press down until you hear a click to release the Mounting Plate from the Video Doorbell.
9. Tap Continue.
10. Use the Release Pin to press and hold the Pairing button on the back of the Video Doorbell for three seconds.
11. When the LED on the front of the Video Doorbell is flashing blue, tap Continue.
12. When the Video Doorbell is detected, tap Continue.
13. If the battery level is too low, charge the Video Doorbell Wire-Free and tap Continue.

For more information, visit: [How do I charge my Arlo Video Doorbell \(2nd Generation\)?](#)

14. After the Video Doorbell connects, name the device and tap Continue.
15. To mount the Video Doorbell in a wireless configuration, select Battery Power.
16. Review the tools list and tap Continue.
17. Confirm that the area has a strong signal for a reliable connection.
18. Use the live video to see if you will need the Angled Bracket to adjust the angle of your Video Doorbell.
19. Place the doorbell 48 inches (122 cm) above the ground for the best view.
20. Select Use Angled Bracket or Don't use Angled Bracket.

21. If you need to use the Angled Bracket, press the Angled Bracket and Mounting Plate together so the Video Doorbell will be angled in the intended direction.

22. If the Angled Bracket needs to be adjusted to the other direction, detach the Angled Bracket, flip it over, reattach it to the Mounting Plate, and tap Continue.

23. With the terminals at the top, use the Mounting Plate as a guide to mark locations for pilot holes, drill pilot holes in the marked locations, and tap Continue.

Note: Reserve a 2" (5cm) clearance above the Mounting Plate for the top of the Video Doorbell.

24. Align the Mounting Plate with the pre-drilled holes, use the provided screws to secure the Mounting Plate to the wall, and tap Continue.

25. Align the Video Doorbell to the Mounting Plate and use a down-and-in motion until you hear a click to lock the Video Doorbell to the Mounting Plate.

26. Test to make sure it feels secure, and tap Continue.

27. Tap Finish.

Last Updated:10/07/2024 | Article ID: 000063173

How do I remove my Arlo Video Doorbell from the wall mount? (2nd Generation)

How do I remove my Arlo Video Doorbell from the wall mount? (2nd Generation)

This article applies to:

AVD4001 AVD3001

You can remove your Arlo Video Doorbell (2nd Generation) from the wall mount without unscrewing anything or disconnecting any wires. To remove the doorbell from the wall, you need the release pin that came with your doorbell. You can also use a straightened paperclip or a similar object.

- **WARNING:** Turn the power off at the circuit breaker if you plan to adjust the wiring on your Arlo Video Doorbell.

To remove your Arlo Video Doorbell (2nd Generation) from the wall mount:

1. Locate the release pin that came with your Arlo Video Doorbell.

Alternatively, you can use a paperclip or a similar object.

2. Insert the release pin into the hole at the top of the Arlo Video Doorbell and press until you hear a click.

Last Updated:06/04/2024 | Article ID: 000063209

How do I install, hardwire, and mount my Arlo Video Doorbell using my existing doorbell or chime (2nd Generation)?

This article applies to:

This article covers the installation of the Arlo Video Doorbell (2nd Generation) in a wired configuration. If you prefer a wireless installation, visit: [How do I install and mount my Arlo Video Doorbell without hardwiring to an existing doorbell or chime? \(2nd Generation\)](#)

Need Help?

If you need help installing your new Arlo device, you can reach Arlo Support via the Need Help? button in the Arlo Secure App or on my.arlo.com. You may also join the Arlo Community where you can seek advice and solutions from experts and other Arlo customers.

To install your Arlo Video Doorbell (2nd Generation), you must have the following items:

- The items listed in the Quick Start Guide that were included in the original product box
- The Arlo Secure App version 4.0 and above (User experience with Feed)
- A mobile device (Bluetooth capable)
- A screwdriver
- A power drill (optional)

Before you hardwire your Arlo Video Doorbell:

- Ensure that your doorbell transformer voltage is between 8-24VAC, with a minimum rating of 10VA. For more information, visit: [How to measure doorbell transformer voltage before hardwiring an Arlo Doorbell](#)
- Turn off the doorbell power at the circuit breaker.
- Contact a local electrician If you need assistance with your doorbell wiring.

The Arlo Video Doorbell (2nd Generation) installation process takes place in two phases: connecting the Arlo Video Doorbell to your Arlo account and mounting the Arlo Video Doorbell to your wall. You must use the Arlo Secure App to install your Arlo Video Doorbell.

Arlo recommends that you charge your Arlo Video Doorbell battery before installation.

- For more information, visit: [How do I charge my Arlo Video Doorbell \(2nd Generation\)?](#)

To install your Arlo Video Doorbell (2nd Generation) in a wired configuration:

1. Launch the Arlo Secure App.
2. Tap Devices.

Note: Make sure the correct Location where you want to add the device is selected. For more information, visit: [How do I switch my Location in the Arlo Secure App?](#)

3. Tap .
4. Tap Doorbells & Chimes.
5. Tap Video Doorbell 2nd Generation.
6. Turn on Bluetooth on your phone and tap Continue.
7. Tap Allow to enable Bluetooth permissions.
8. Insert the Release Pin into the top of the Video Doorbell and press down until you hear a click to release the Mounting Plate from the Video Doorbell.
9. Tap Continue.
10. Use the Release Pin to press and hold the Pairing button on the back of the Video Doorbell for three seconds.
11. When the LED on the front of the Video Doorbell is flashing blue, tap Continue.
12. When the Video Doorbell is detected, tap Continue.
13. If the battery level is too low, charge the Video Doorbell Wire-Free and tap Continue.

For more information, visit: [How do I charge my Arlo Video Doorbell \(2nd Generation\)?](#)

14. After the Video Doorbell connects, name the device and tap Continue.
15. To mount the Video Doorbell in a wired configuration, select Wired.
16. Review the tools list and tap Continue.

17. Turn off the power at the circuit breaker to ensure no power is going to your existing doorbell and tap Continue.

WARNING: Failure to turn off the power may result in severe injury.

18. Remove your old doorbell and tap Continue.

19. Disconnect the wires from the back of your old doorbell.

20. Tape the wires to the outside of the wall to keep them from slipping back inside the wall and tap Continue.

21. Confirm that the area has a strong signal for a reliable connection.

22. Use the live video to see if you will need the Angled Bracket to adjust the angle of your Video Doorbell.

23. Place the doorbell 48 inches (122 cm) above the ground for the best view.

24. Select Use Angled Bracket or Don't use Angled Bracket.

25. If you need to use the Angled Bracket, press the Angled Bracket and Mounting Plate together so the Video Doorbell will be angled in the intended direction.

26. If the Angled Bracket needs to be adjusted to the other direction, detach the Angled Bracket, flip it over, reattach it to the Mounting Plate, and tap Continue.

27. With the terminals at the top, use the Mounting Plate as a guide to mark locations for pilot holes, drill pilot holes in the marked locations, and tap Continue.

Note: Reserve a 2" (5cm) clearance above the Mounting Plate for the top of the Video Doorbell.

28. Pull the wires through the middle of the Mounting Plate opening, align the Mounting Plate with the pre-drilled holes, secure the Mounting Plate to the wall with the provided screws, and tap Continue.

29. Connect the wires from the wall to each terminal screw on the Mounting Plate.

Note: Either wire can connect to either terminal.

30. Align the Video Doorbell to the Mounting Plate and use a down-and-in motion until you hear a click to lock the Video Doorbell to the Mounting Plate.

31. Test to make sure it feels secure, and tap Continue.

32. Turn the circuit breaker on to restore power to the Video Doorbell, and tap Continue.

33. Tap Test to see if the chime rings.

34. If the chime does not ring, select Digital and tap Test again.

35. When the chime test is successful, tap Continue.
36. Tap Finish.

Last Updated:10/07/2024 | Article ID: 000063169

How do I charge my Arlo Video Doorbell (2nd Generation)?

How do I charge my Arlo Video Doorbell (2nd Generation)?

This article applies to:

AVD4001 AVD3001

To charge your Arlo Video Doorbell (2nd Generation), you must remove the doorbell from the wall, bring the doorbell inside, and then begin charging. Always charge your doorbell indoors.

Alternatively, you can hardwire your Arlo Video Doorbell (2nd Generation) to connect it to continuous power. For more information, visit: [How do I install, hardwire, and mount my Arlo Video Doorbell using my existing doorbell and chime \(2nd Generation\)?](#)

Note:

- The USB charging cable that came in the box with your camera is for indoor charging only.
- The USB charging cable works with most power adapters.

To charge Arlo Video Doorbell (2nd Generation):

1. Locate the release pin that came with your Arlo Video Doorbell (2nd Generation).

Alternatively, you can use a paperclip or a similar object.

2. Insert the release pin into the release pinhole at the top of the Arlo Video Doorbell mount.

A click occurs, and the Arlo Video Doorbell is released from the mount.

3. Pull the Arlo Video Doorbell off the mount in an up-and-out motion.
4. Bring the Arlo Video Doorbell indoors.
5. Use the USB charging cable that came in the box to charge the battery.

Charge the Arlo Video Doorbell until the LED is solid blue.

6. Place your Arlo Video Doorbell back on the mount in a down-and-in motion.

Note: You should hear a click when the doorbell is secured.

Last Updated:04/22/2024 | Article ID: 000063180

TROUBLESHOOTING

My existing chime does not ring when I press my Wire-Free Arlo Video Doorbell; what do I do?

Arlo Video Doorbell (2nd Generation) Offline: How to Troubleshoot

How to troubleshoot Arlo Video Doorbell (2nd Generation) battery charging issue

This article applies to:

AVD4001 AVD3001

If you are having problems charging the Arlo Video Doorbell (2nd Generation) battery:

1. Ensure you are using the correct type of AC power adapter.

Note: The AC power adapter should have an output of at least 2.0A. Using a power adapter rated lower than 2.0A is not sufficient enough to properly charge the battery in a timely manner. The preferred AC power adapter should have an output of 5.0V and 2.0A.

2. Make sure the metal contacts of the USB charging cable and battery are free from dirt and debris to ensure a secure connection.

Note: The USB-C charging cable is for indoor use only. If the charging cable is damaged, do not use the cable to charge the video doorbell battery.

3. Check the charging cable connection between the battery and power adapter to make sure it fits securely into each port.

Note: The battery LED illuminates red when the charging cable is properly connected and green when fully charged.

4. If the battery is not charging, try plugging the AC power adapter into a different power outlet.

5. If the battery is still not charging, try using a different USB-C cable.

For more information, visit:

- [How can I extend the battery life of my Arlo Video Doorbell?](#)
- [Arlo Video Doorbell \(2nd Generation\) FAQ](#)

Last Updated:06/03/2024 | Article ID: 000063212

How do I use the wire extensions that came with my Arlo Essential Video Doorbell and Arlo Video Doorbell (2nd Generation)?

My Arlo Video Doorbell (2nd Generation) wasn't found during setup; what do I do?

My Arlo Video Doorbell (2nd Generation) wasn't found during setup; what do I do?

This article applies to:

If your Arlo Video Doorbell (2nd Generation) was not discovered during the setup process, carefully check the error messages after connecting to Wi-Fi.

If the Arlo Video Doorbell shows "The network name was entered incorrectly" and the Arlo Video Doorbell was unable to connect to your Wi-Fi network:

- Make sure you enter the correct network SSID.
 - The network SSID is case-sensitive. Ensure it is correct when you type it in the Arlo Secure App.
- Make sure Bluetooth is enabled and the Arlo Secure App is given permission to use Bluetooth to discover the Arlo device.
- Make sure you enter the correct network password.
 - You can tap the eye icon, next to the password, to reveal the password. This can help you ensure the password is correct.
- Make sure you are attempting to connect to the correct Wi-Fi network.

- If you saved the network credentials, make sure the network name and password have not been changed.
- Make sure the Wi-Fi signal is sufficiently strong at the location of the Arlo Video Doorbell.
- If possible, you can try moving your Wi-Fi router closer to the Arlo Video Doorbell for a better signal.
- Make sure you have installed the latest version of the Arlo Secure App.
- For more information, visit: [How do I download the Arlo Secure App to my mobile device?](#)

If your Arlo Video Doorbell continues to flash White after 2 minutes and you get a “No internet network was found” error message:

- Check your Internet connection.
- Your Arlo Video Doorbell requires a high-speed Internet connection that can sustain an average bandwidth use of 2 Mbps upload.
- Your Wi-Fi router might be too far away from your Arlo Video Doorbell.
- If possible, try moving your router closer to the Arlo Video Doorbell.
- Make sure you are not connected to a VPN.
- Make sure Wi-Fi Assist and Adaptive Wi-Fi features are turned off on your mobile device.
- To turn off Wi-Fi Assist on iOS, visit: [About Wi-Fi Assist](#)
- To turn off Adaptive Wi-Fi on Android, visit: [Activate Adaptive Wi-Fi on my Samsung Device](#)

If your Arlo Video Doorbell connection fails and you get a "Connection Lost" error message, check your Bluetooth connection.

- Check the mobile device's current connection.
- Unpair and delete the Arlo Doorbell from Bluetooth.
- Clear your mobile device's Bluetooth cache.
- Restart your mobile device.
- Re-pair the Arlo Doorbell.

If your Arlo Video Doorbell fails to onboard and you get a “Camera Failed to Connect” error message:

- The Arlo Video Doorbell does not have enough charge to onboard the device.
- Charge the Doorbell until the LED turns blue. For more information, visit: [How do I charge my Arlo Video Doorbell 2nd Generation?](#)

If your Arlo Video Doorbell is still offline, try resetting the device:

- For more information, visit: [How do I reset my Arlo Essential Video Doorbell?- Arlo Secure 4.0](#)

If you are still having issues, contact [Arlo Support](#).

Last Updated: 10/09/2024 | Article ID: 000063216