






Dynamix 440 PUR Training

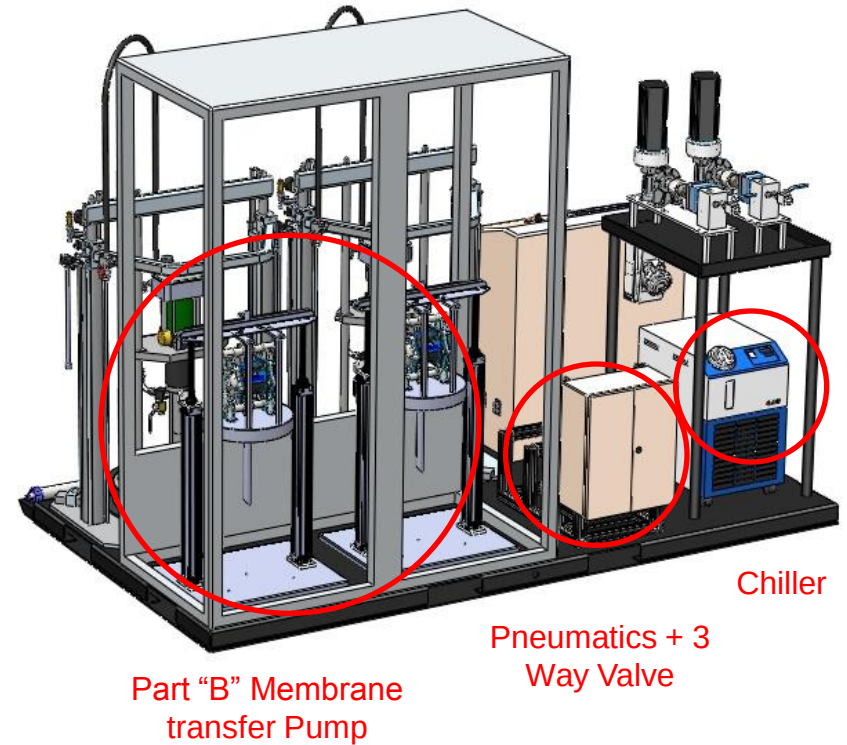


Machine Layout

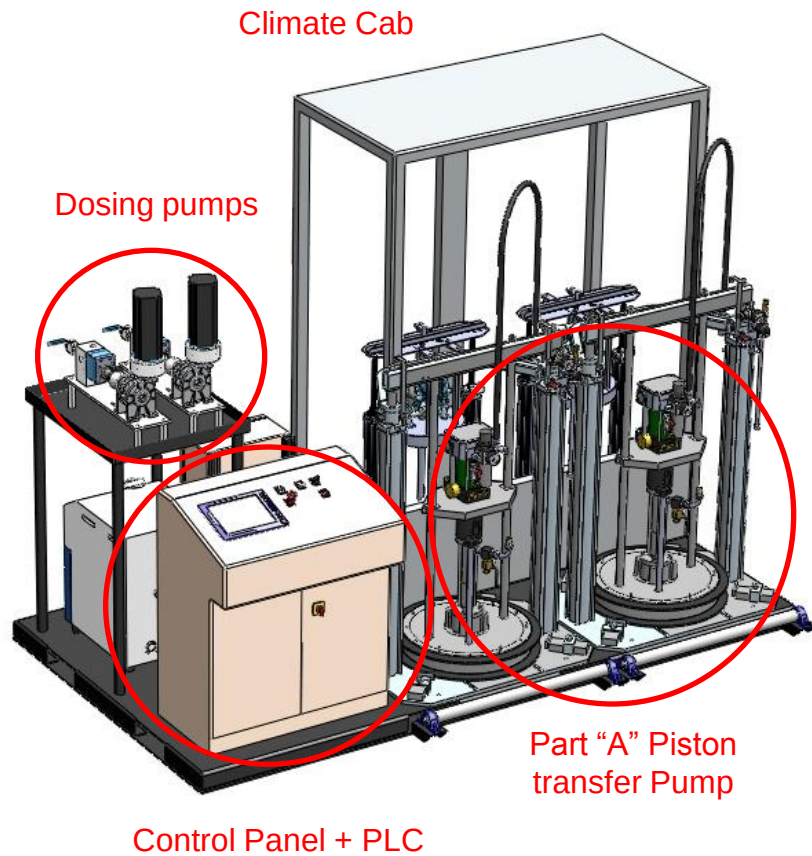

Piston Transfer Pump

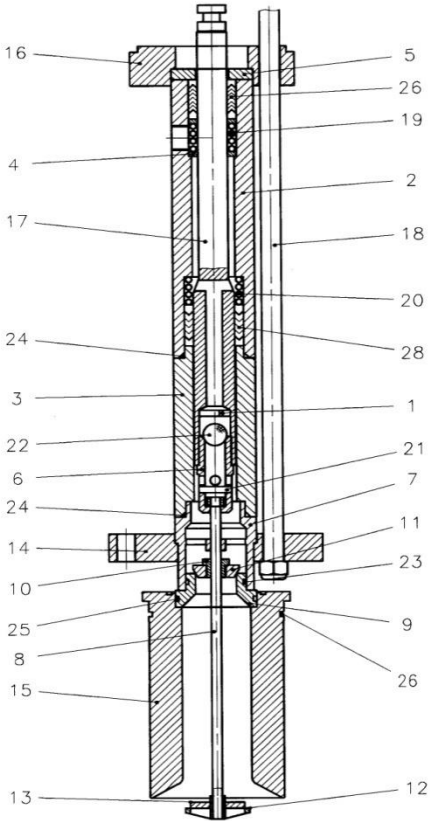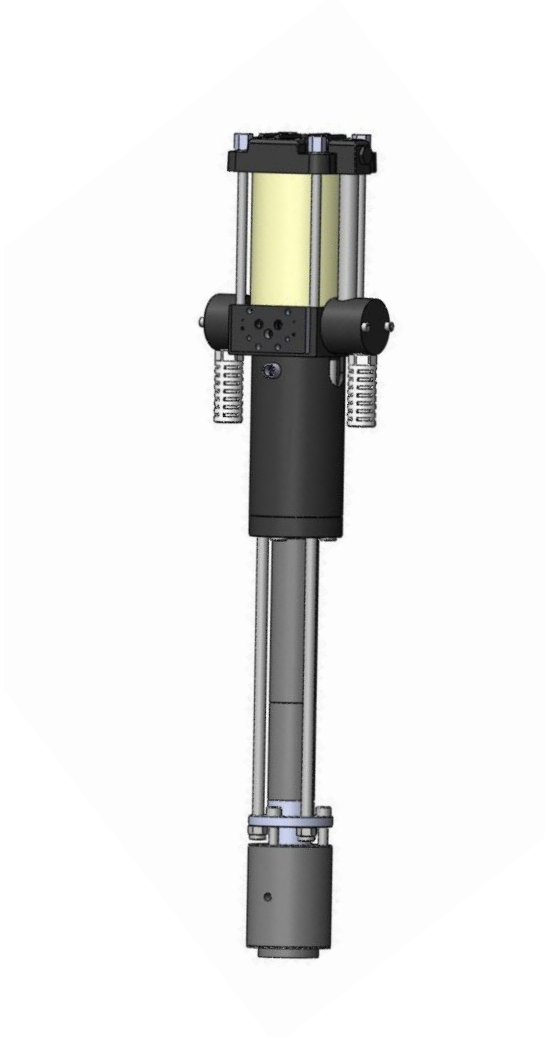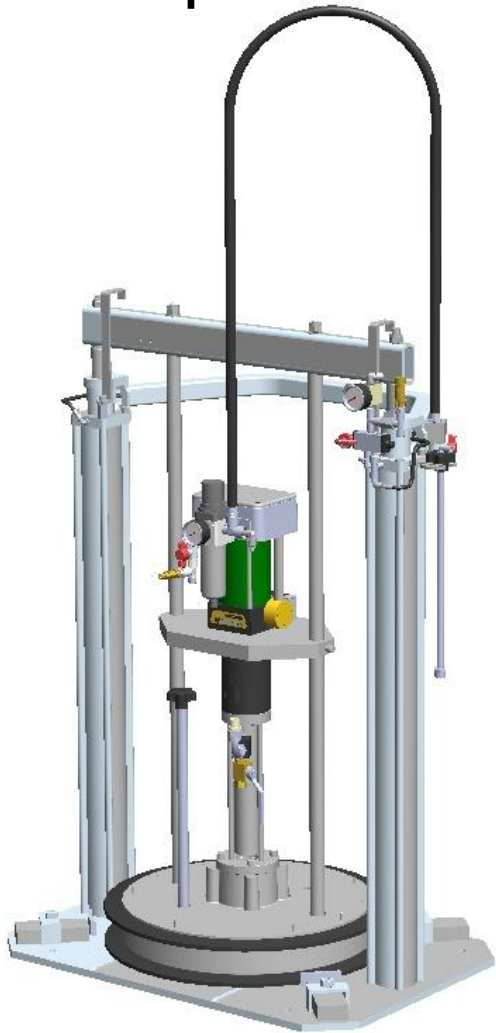

PF200 Drum Change Instructions


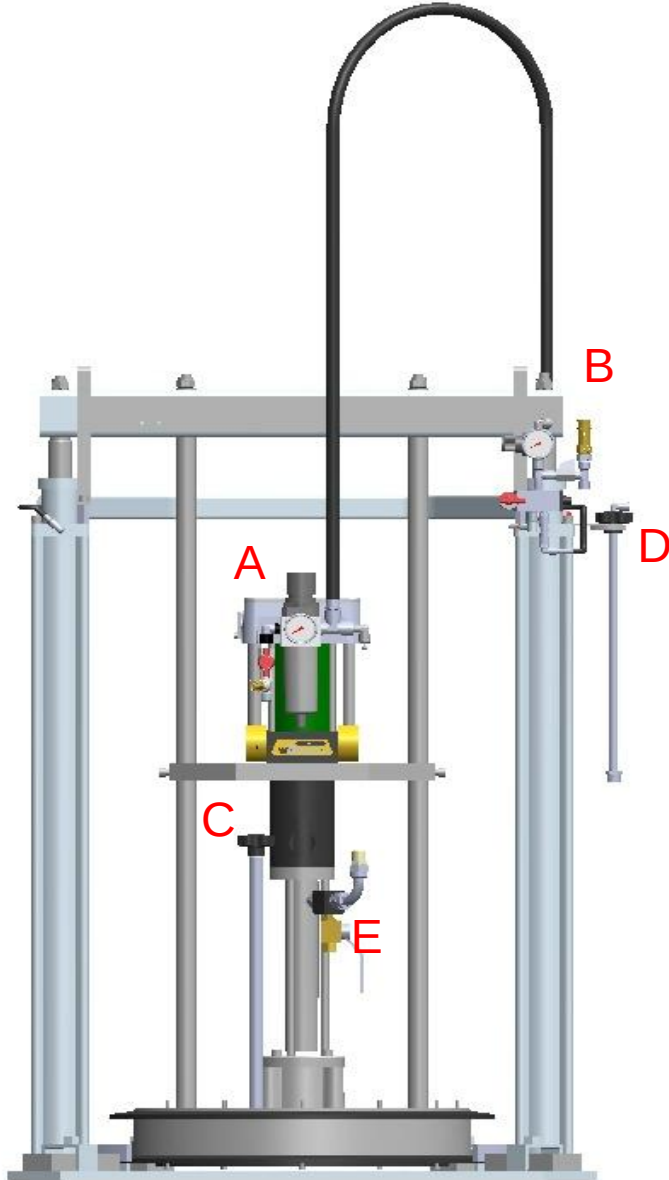


1. Switch off the piston pump air supply "A".
2. Remove the downward pressure from the main plate "B".
3. Unscrew and remove the plug from the main plate "C".
4. Insert the air injector plug "D" where the plug "C" was removed from the main plate.
5. Slowly open the air valve on the air injector on "D" enough to allow a smooth safe lifting of the main plate and to avoid a vacuum inside the empty drum as the main plate lifts.
6. Switch the plate pressure to lift "B" until the main plate exits the drum.


The new drum should be prepared as per the adhesive suppliers packaging specification.

7. Replace the drum inside the drum un-loader.
8. Close the air valve and remove the air injector "D" from the main plate.
9. With the plug "C" ready to re-insert into the main plate, lower the plate into the new drum "B" until you start to see the glue arrive at the lowest part of the plug hole in the main plate.
10. Hold the position of the main plate (no down or up pressure) "B".
11. Re-insert the plug "C".
12. Switch on the downward pressure of the main plate "B".
13. Switch on the piston pump "A".
14. Purge any trapped air at the purge valve "E".

Membrane Transfer Pump

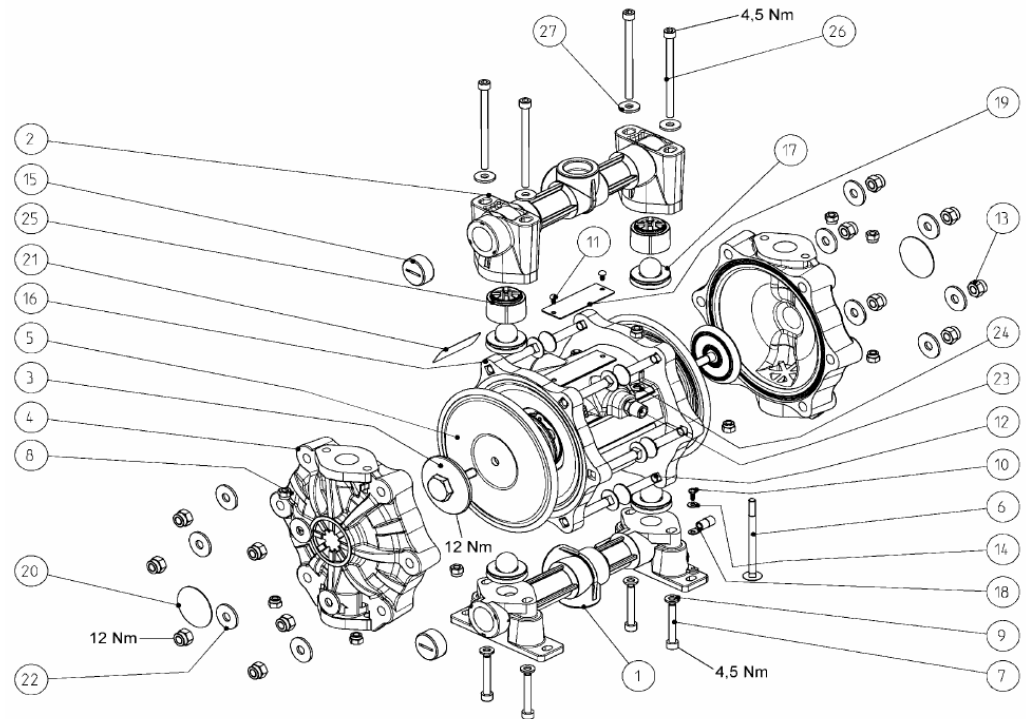
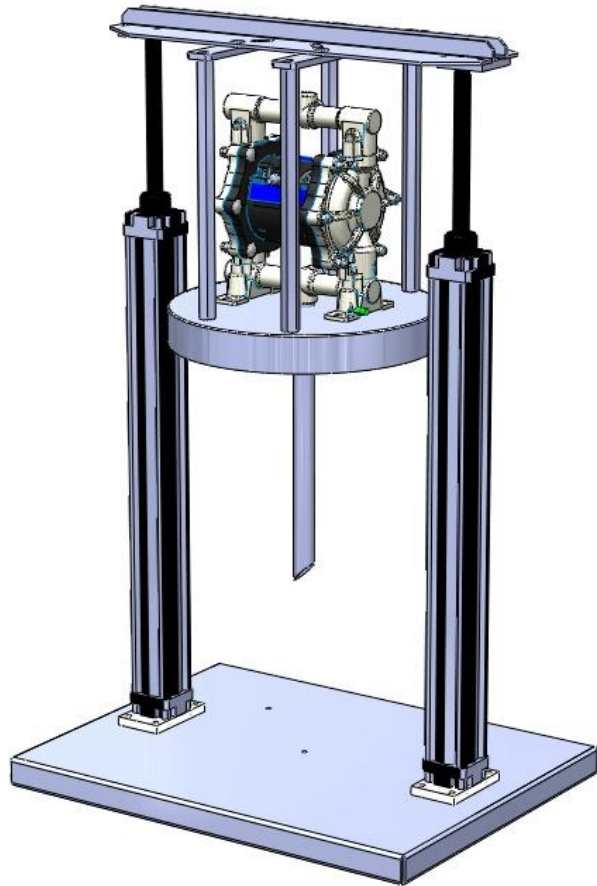


Membrane Transfer Pump

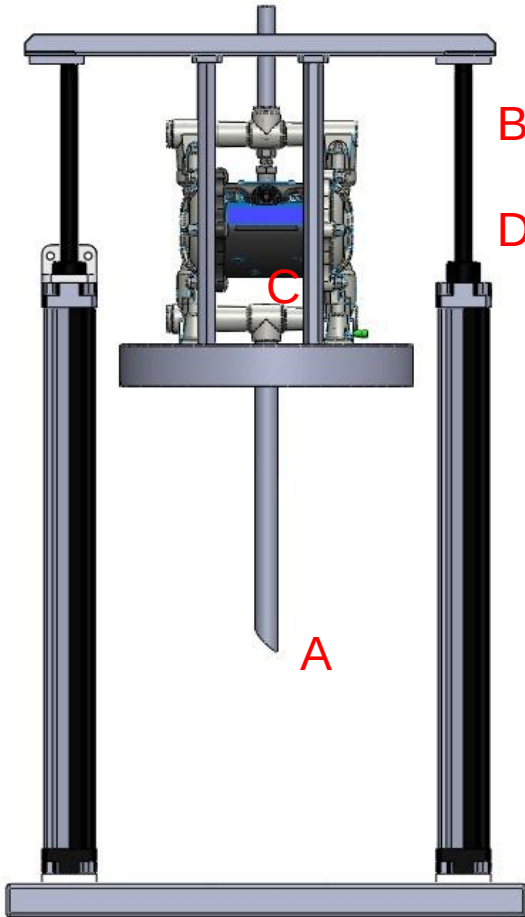

1. Switch off the membrane pump air supply “D”.
2. Switch the plate pressure to lift “B” until the dip pipe exits the drum.
3. Remove the metal brace from the new drum, leave the lid in place and replace the drum under the platen.
4. Drive the piston down “B” allowing the dip pipe “A” to pierce the lid of the drum and enter fully the new drum.
5. Remove the sealing cap and then open the 2 way valve on the front of the membrane pump “C”.
6. Switch on the membrane pump air supply “D”.
7. Purge the new drum until all the air has been removed and then close the valve “C”.
8. Replace the sealing cap on the 2 way valve to avoid blocking with cured adhesive.

Gear Dosing Pumps

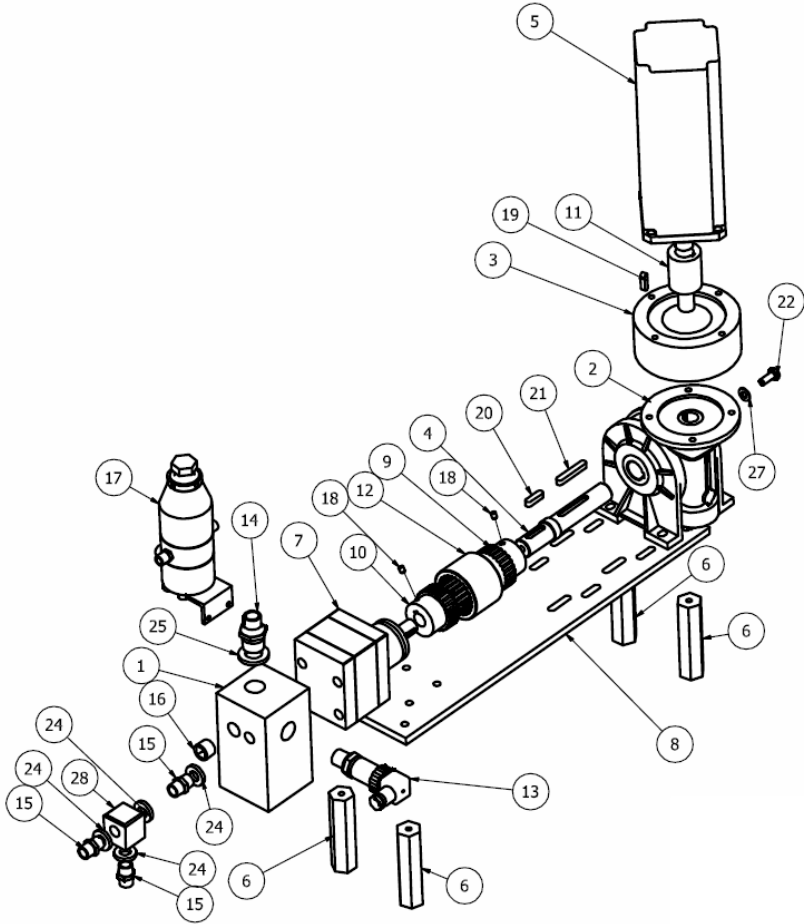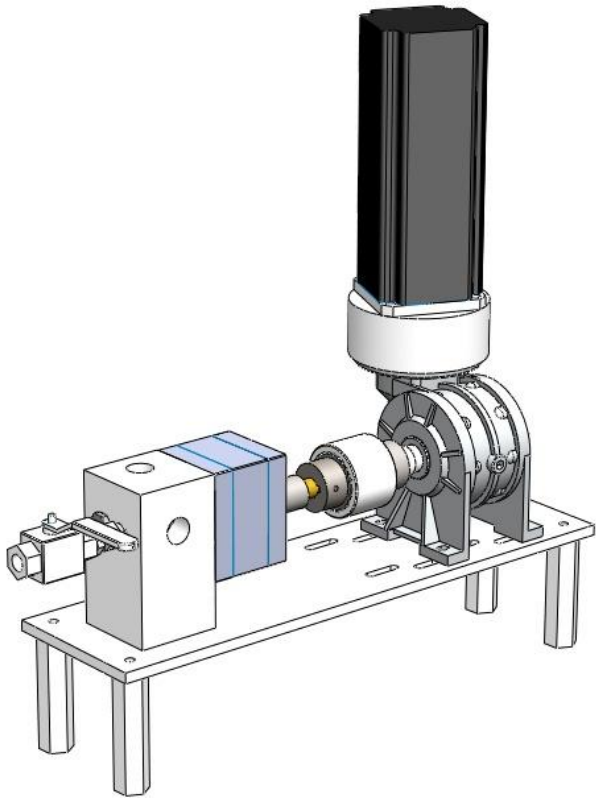

10CC /7CC/ 3CC Gear Pump – Standard Sealing

Rotation = Clockwise (view on drive side)

Rotation speed = 30-100 Rev/Min

Maximum Temperature = 300 Deg C


Maximum Differential pressure = 100 Bar

Gland packing with Graphite Braid

Note: (see 1) In the early stages of working the packing will require checking on a regular basis (daily) as the packing beds in. The packing should be checked weekly for the first 3 months of use and then monthly as part of a planned maintenance. The packing should be tight enough to reduce leakage but not so tight as to limit the shaft movement.

There may be small leakage of very low viscosity material from within the adhesive formulation through the packing (see 2), this is normal and not considered a failure of the seal. There should only ever be a minimum of complete adhesive material exiting from the packing seals.

The pump should not be run whilst dry, the adhesive acts as lubrication for the pump, running without the adhesive can result in damage to the mechanical components inside the pump.

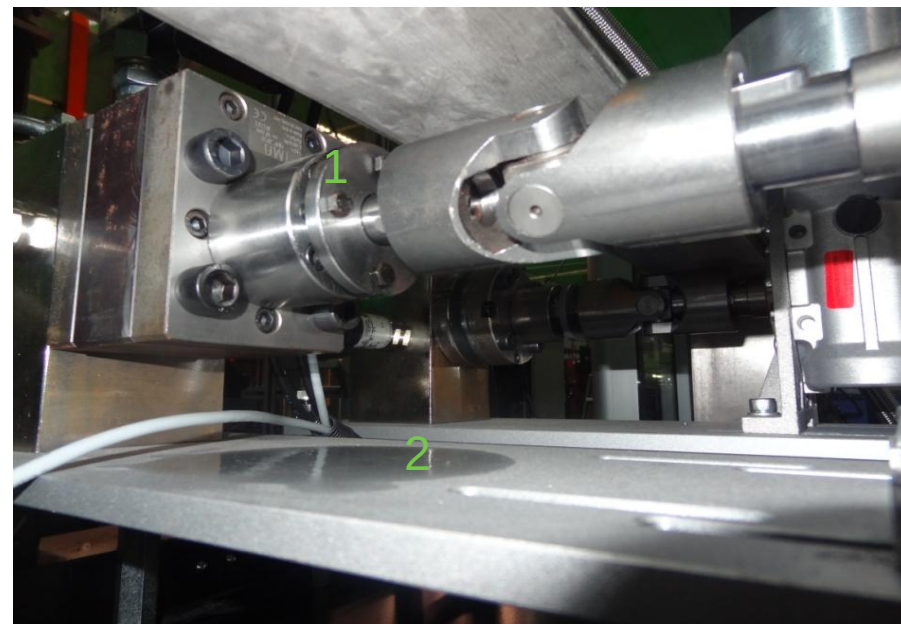

Description:



Gear Pump + STD Seal

Date:

23/08/2012



1	Internal Plate	10	Key
2	Gear Plate	11	Gasket 5 x 5
3	External Plate	12	Screw M6x40
4	Driving Gear	13	Screw M5x35
5	Driven Gear	14	Screw M5 x 20
6	Driving Shaft	15	Key type B 4x4x20
7	Fixed Pin	16	Stop ring A12
8	Stuffing Box		
9	Presser		

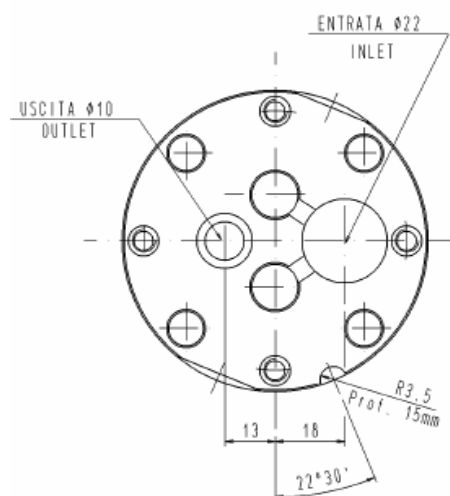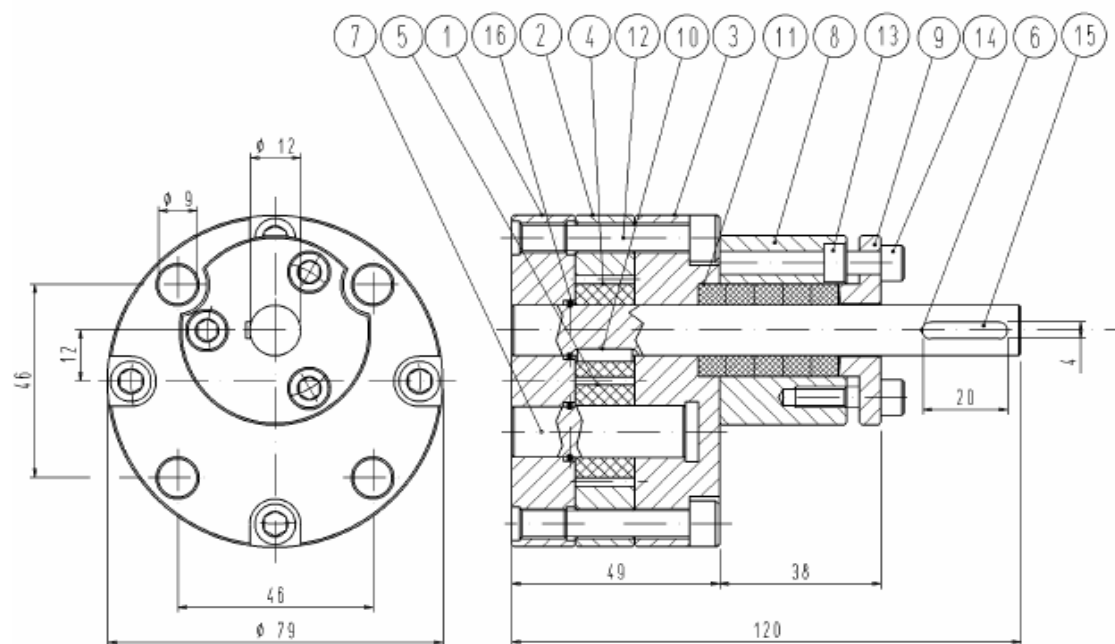

To order a component, prefix the part number "DM-3CC-" or DM-7CC-"

Description:



3 / 7 CC Gear Pump + STD Seal

Date:

23/08/2012



1	Internal Plate	10	Presser
2	Gear Plate	11	Shaft Key
3	External Plate	12	Ext Key 6 x 6 x 20mm
4	Driving Gear	13	Circ Clip A20
5	Driven Gear	14	Graphite Braided Gasket 5 x 5 x 500
6	Driving Shaft	15	M6 x 65
7	Driven Shaft	16	M6 x 40
8	Centering Pin	17	M5 x 15
9	Stuffing Box		

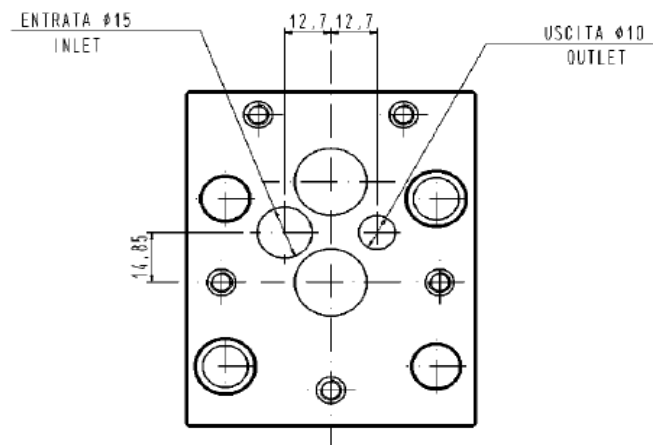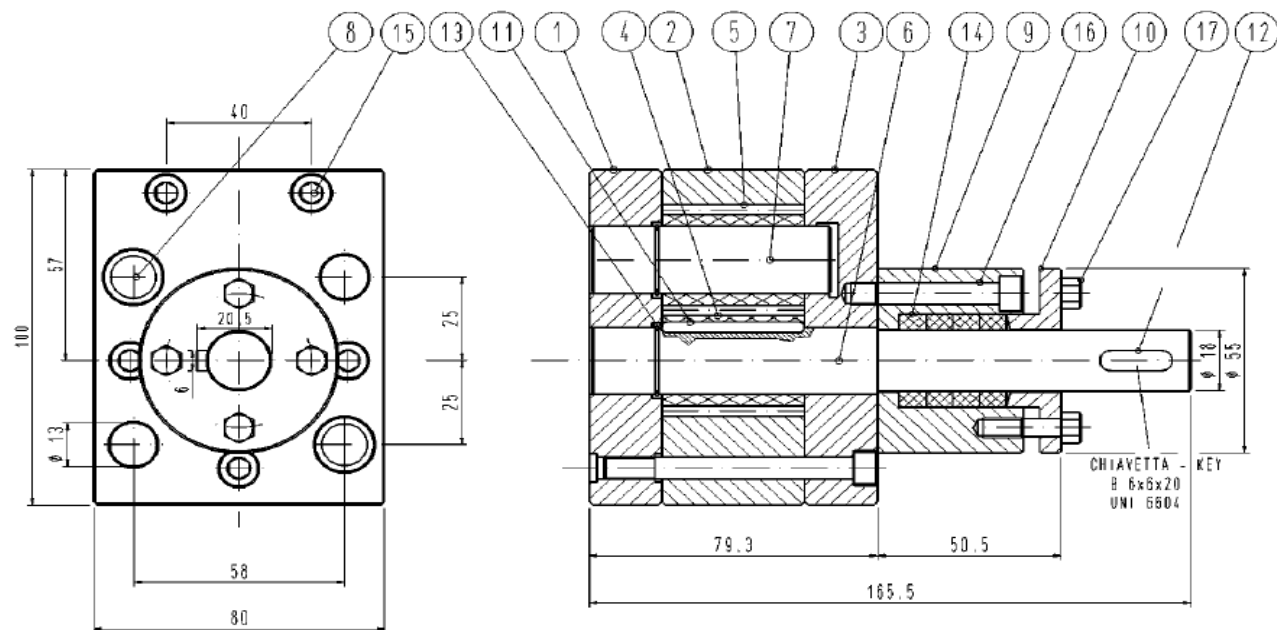

To order a component, prefix the part number with "DM-10CC- "

Description:

10CC Gear Pump + STD Seal


Date:

23/08/2012



Dynamix Bi Component

"**Pressure maintain**" is a unique system that monitors the pressure in the line when the line is closed and controls the gear pumps to maintain a constant pre-determined pressure in the line.

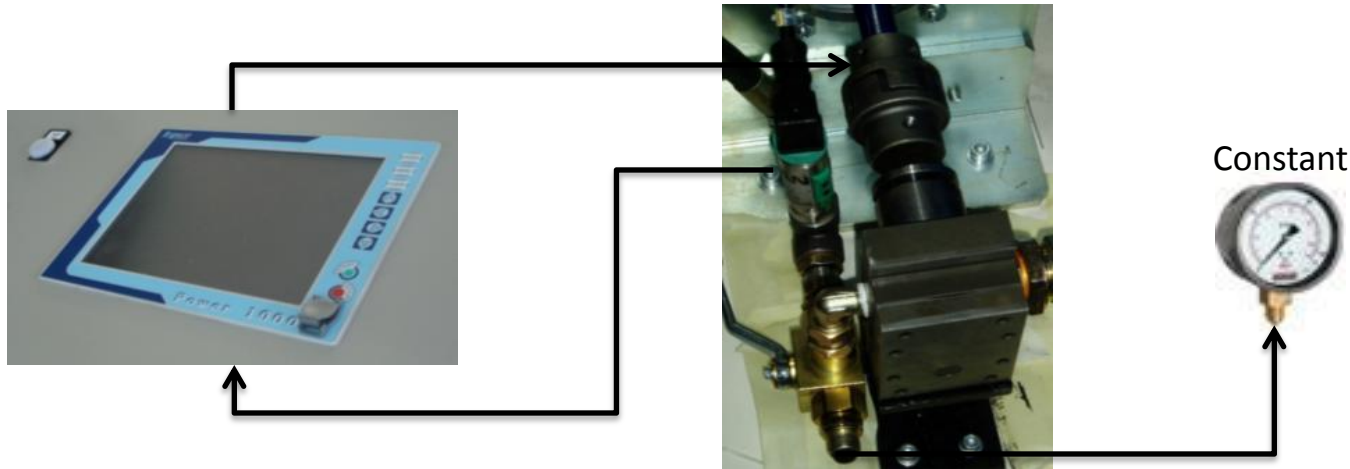


This prevents spikes or delays of material flow that can cause the ratio to be incorrect whilst the line re-adjusts to the running pressure.

Dynamix Bi Component


"Max Fluid Control" is an optional additional system that monitors the precise output of both materials.

The system is calculating the ratio and then adjusting on a very fine level the output of the gear pumps to ensure maximum precision output whilst maintaining a constant quantity of material.

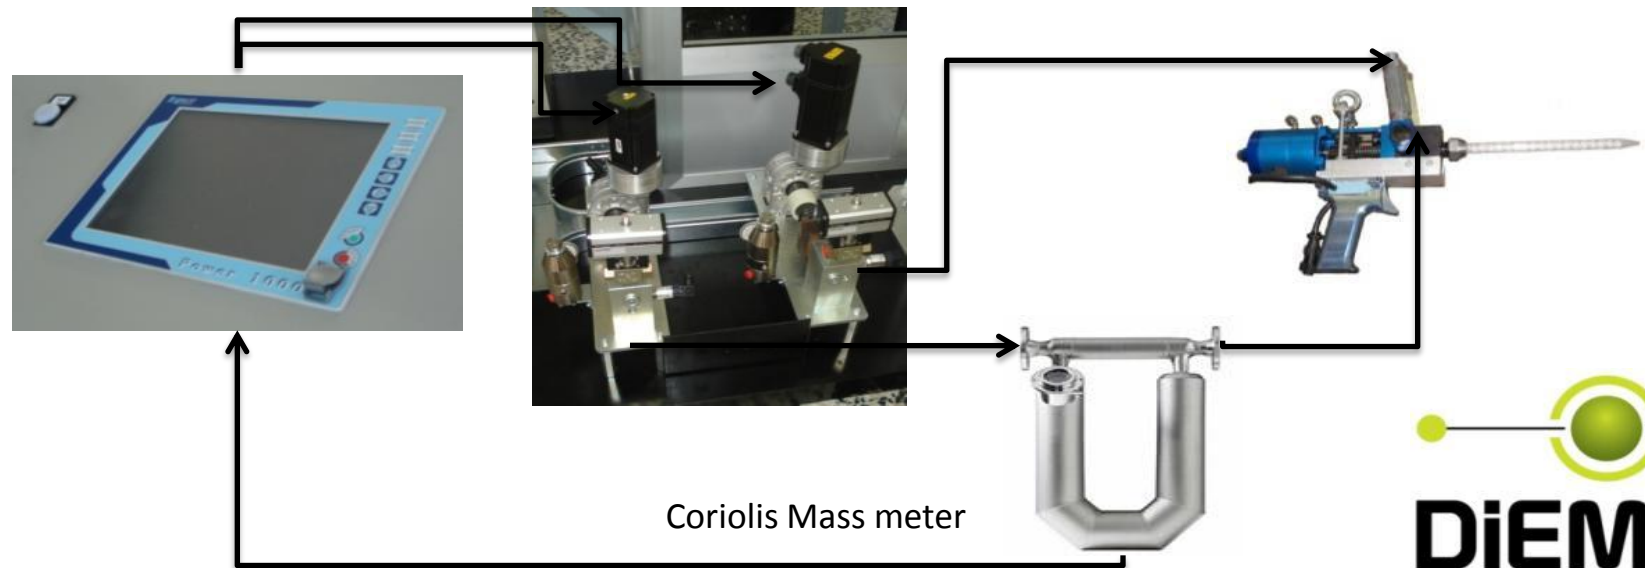


Applicator Head


Precision

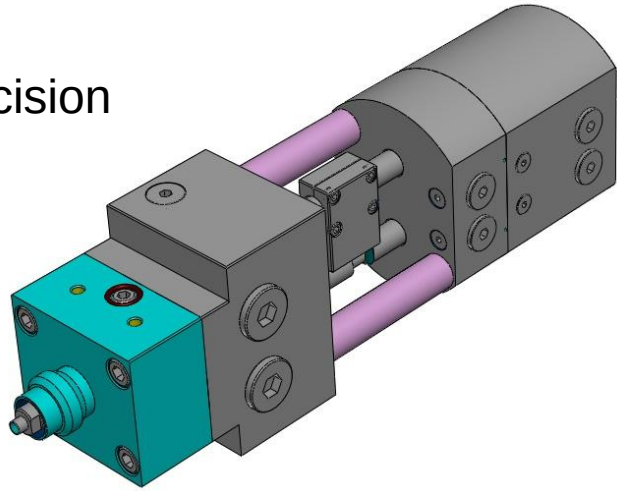


Ezi-mix Open

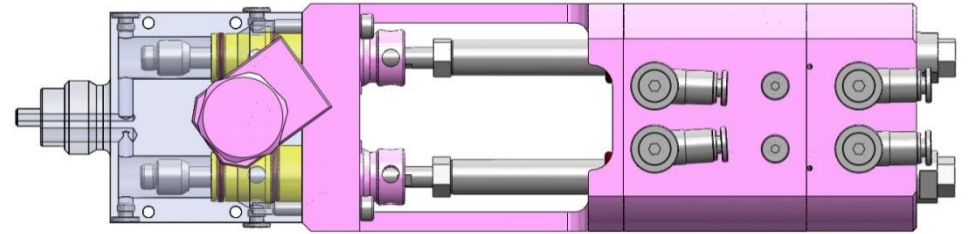





Ezi-mix Closed

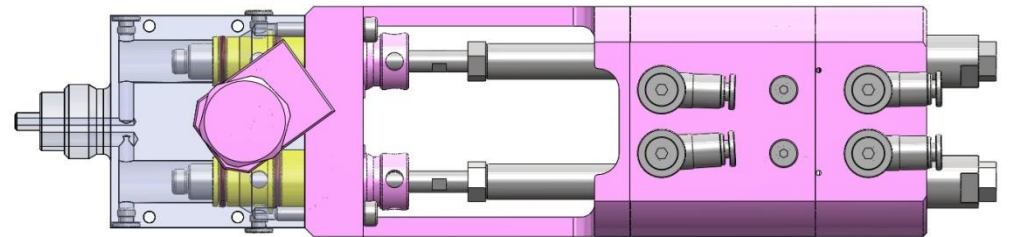

Ezi-mix

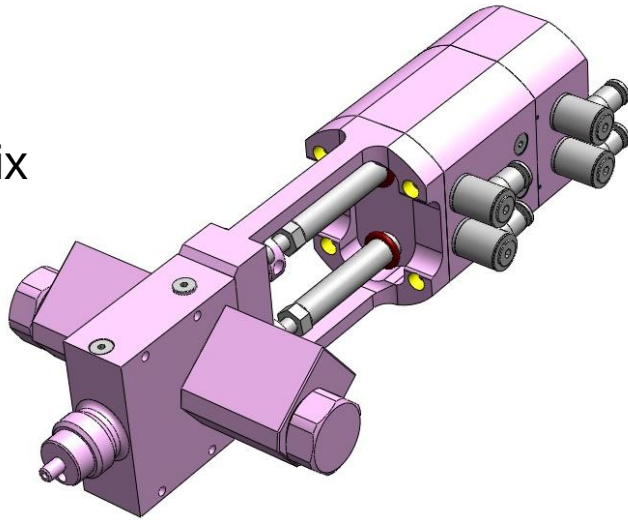

PLC Main User Screens

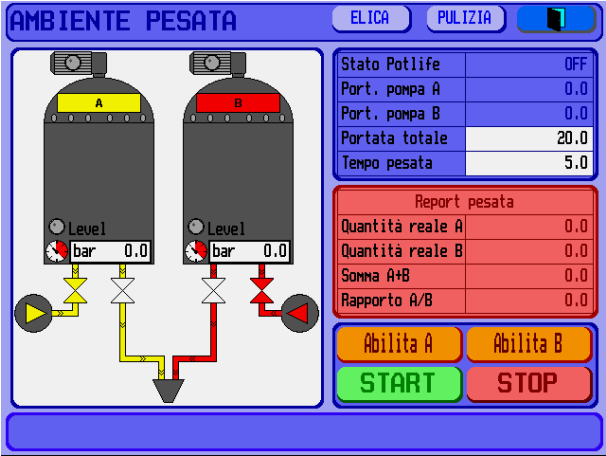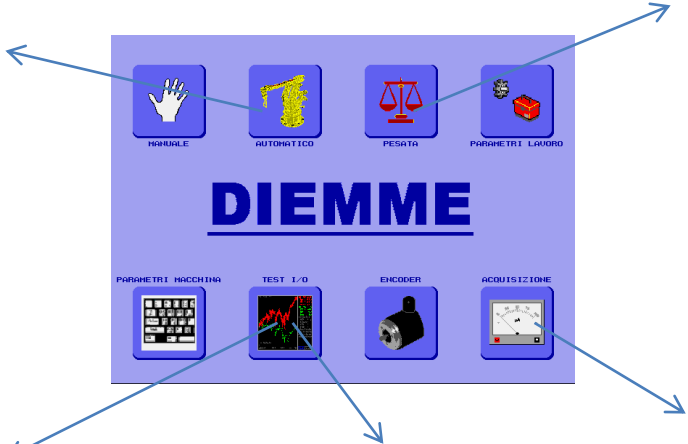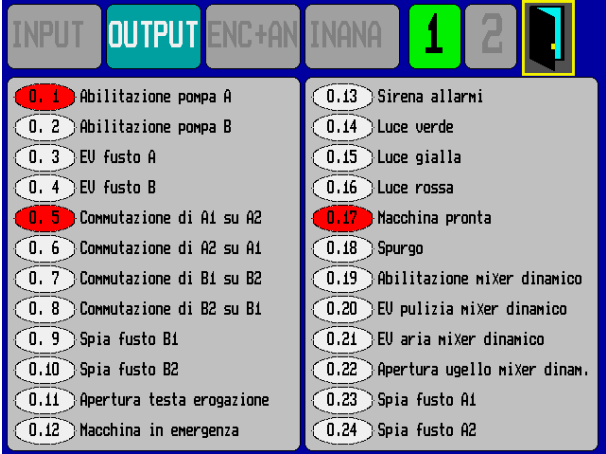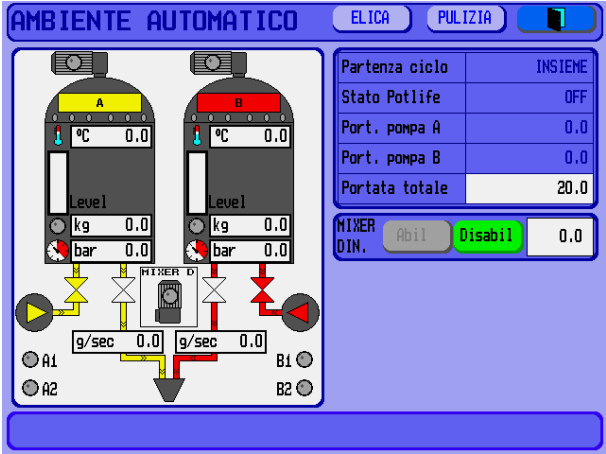

Mix Ratio Adjustment




1. Calibrate pumps



2. Set desired Ratio (WT)

	Abilitazione report fine ciclo	ON/OFF
5		
6	Percentuale pompa A	
7	Percentuale pompa B	
8	Errore Massimo	
9	Errore Minimo	

3. Mix Ratio Check

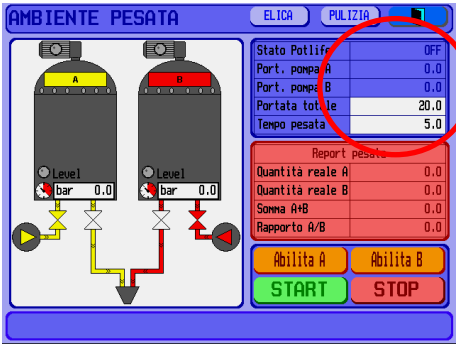


If mix ratio changes during production, don't only adjust parameters, understand the reason!



Mix Ratio check

- 1) Product is purged for 10 seconds into a container. This is done to release the pressure built up in the nozzle when the valve is closed. This will help to reduce risk of product splash.

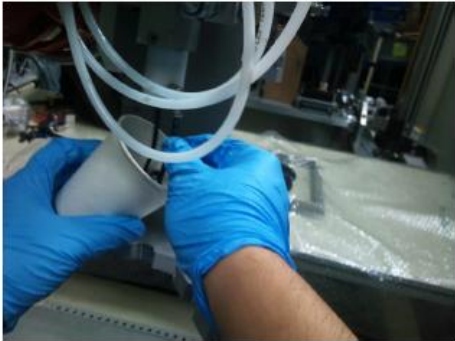

- 2) Product is dispensed into 2 individually marked containers for 30 seconds. (One each cup for Part A and B)



- 3) Samples taken are weighed and weight recorded.



Results

Ambient Temperature : 25.8 °C
RH % : 76.8

Recommended Mix Ratio by weight : 100 : 18
Tolerances : 100 : 16 to 100 : 20

Sample	Weight (g)		Ratio		Remarks	Next action
	Cup A	Cup B	Part A	Part B		
1	119.1	25.5	100.0	21.4	Out of range	Adjust pumps
2	119.2	25.6	100.0	21.5	Out of range	Adjust pumps
3	117.4	25.2	100.0	21.5	Out of range	Adjust pumps
4	120.9	25.8	100.0	21.3	Out of range	Adjust pumps
5	120.3	25.7	100.0	21.4	Out of range	Adjust pumps
6	123.1	23.4	100.0	19.0	Within range but high Part B	Adjust pumps
7	123.0	23.5	100.0	19.1	Within range but high part B	Adjust pumps
8	120.4	21.9	100.0	18.2	Recommended mixing ratio 100:18	-
9	119.3	21.9	100.0	18.4	Recommended mixing ratio 100:18	-
10	121.5	22.2	100.0	18.3	Recommended mixing ratio 100:18	-

System Checks

Task	Daily	Weekly	Monthly	3 Month
Static Mixer change	> 25 Deg C 30 minutes < 25 Deg C 45 minutes			
Mix ratio check	Minimum once per shift.			
Replace mixer nozzle with Mesamol cap.	When not in use.			
Check and record operating pressure during production, if there is a noticeable deviation from the standard extrusion pressure, contact experienced local maintenance or Fin Diemme for advice.	Recommended > twice per shift.			
Gear Pump Packing Seals (check for leakage)*		X		
Lubricate Piston Pump shaft with inert oil (e.g. Mesamol)		X		
Observe piston movement is smooth during operation.			X	
Check for any build up of cured B component on Dip pipe.	During drum changes.		X	
Check o ring seals on A component Platen for damage/leakage.	During drum changes.		X	
Check cooler water level.				X
Check cooler functioning and chilled cabinet temperature.	X			
Check 3 Way valve movement, Indicator should fully rotate.				X
Driver check ("Mode" – "OB" – "Up x 7"), collate value on start up, and monitor the AMP Max %.				6 Month
Check for general Air and pipe leakage on all joints.	X			
Check Supply pressures to all transfer pumps versus set up.		X		

For new pump installations, the packing should be checked more frequently in the early stages of its life.

Important: Ensure that all Air is purged out of the system when performing drum changes.



Recommended History Log

OPERATOR GLUE APPLICATION RECORD

[illegible]

Form Code : DM-DYM-REC001

Operating pressure: Record the pressure in the line during the extrusion.

Pressure stability: Monitor the pressure throughout the extrusion, indicate if the pressure is stable throughout the extrusion. Indicate any abnormalities in the "Other" column.

Mix ratio: Using the adapter provided by Diemme Fin to divide the two components, in the "Balance" page on the PLC purge the two components into a cup based with the quantity set at the usual extrusion quantity and the time set for 60 seconds.

Drum Change: Indicate in the box the drum changed and in the "Time/Date" columns the time and date of the change.

Other: Make a note of any points/component failures related to the glue application equipment.



New Generation

