


USER MANUAL

STATION 1 : GASKET + CONNECTOR BRACKET ASSEMBLY

STATION 2 : GASKET + CONNECTOR BRACKET ASSEMBLY

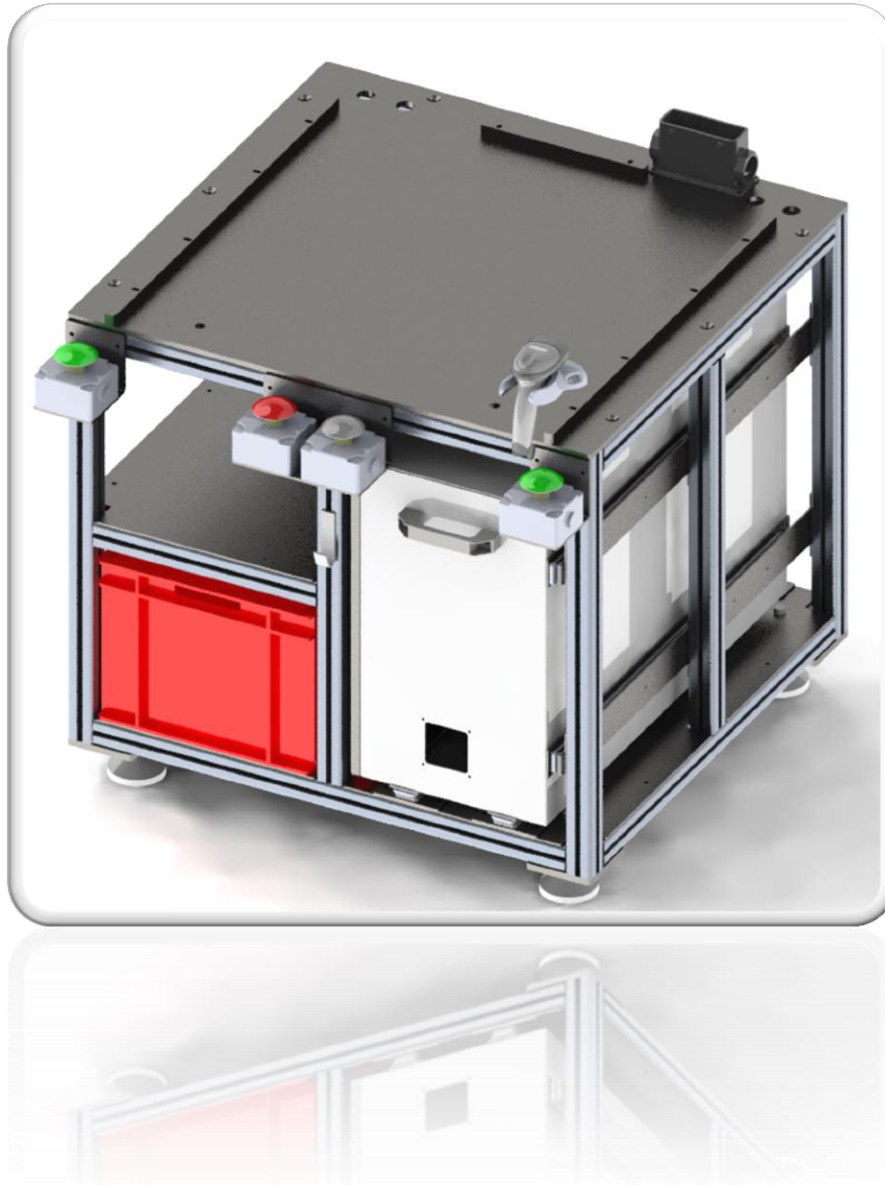

CLIENT NAME:

MARELLI MOTHERSON AUTOMOTIVE LIGHTING INDIA PRIVATE LIMITED
Ambethan 165/1

MACHINE MANUFACTURED BY:

INFINITY AUTOMATION SYSTEMS PVT LTD.

Unit 2:S. No. 80/2A, Mumbai Bangalore Bypass Highway

Near JSPM Institute,

Tathawade, Pune-411033.

Contents

1. Introduction	3
2. Safety regulations	4
2.1 Term definitions.....	4
2.2 Significance of the safety regulations	4
2.3 Information and symbols	4
2.3.1 Warning and safety notices	4
2.3.2 Notes and symbols in the manual.....	5
2.4 Application limitations.....	5
2.5 Do's and Don'ts for PCBA+Metal Plate +EMI Shield Assembly LH & RH Station	6
3. DESCRIPTION OF THE MACHINE.....	7
3.1 Layout of Station:	7
3.2 Description of Station:	7
3.3 Assembly Drawings:.....	8
3.4 Pneumatic Drawings:	10
3.5 Operation	12
3.5.1 Safety regulations for PCBA +Metal Plate +EMI Shield Assembly LH & RH Station.....	12
3.5.2 Steps for Operation Sequence	12
4. LIFTING, TRANSPORTATION & PACKAGING:	13
4.1 Lifting Arrangement:	13
4.2 Transportation:	13
4.3 Packaging:	13
5. HMI SCREENS	14
6. SPARE LIST.....	24
7. FLOW CHART.....	29
8. TROUBLESHOOT.....	30
9. ELECTRICAL DRAWING.....	31

1. INTRODUCTION

We are certain that you have made the right choice with our product and thank for your trust.

For your personal safety

Before carrying out any activities on or with the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station, please carefully read these operating instructions first, in particular the chapter on "Safety regulations".

Application area of these operating instructions

These operating instructions describe the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station and provide all information required for safe operation and maintenance of functionality. Please keep these operation instructions available at all times for all persons involved with the machine.

Questions or unclear points

Please contact immediately if you have any questions or unclear points:
Original language of assembly instructions is English.

© Copyright Infinity Automation Systems Pvt. Ltd.

2. SAFETY REGULATIONS

2.1 Term definitions

The following terms are used with regards to safety:

Personnel qualification

The work to be implemented with or on the product is described in the corresponding chapters in the operating instructions. The personnel qualifications listed in this chapter (in "Introduction") describes the minimum requirements for personnel regarding training and competences for implementing this work.

Personnel

Personnel are people who meet the personnel qualifications. Only such personnel are authorized to implement the work described in the applicable chapters.

User

Users are persons who cannot be identified as personnel but who still carry out activities with or on the product.

Operator

The operator is the owner of the product. This is irrespective of whether the product is:

- Operated as a stand-alone machine
- Operated as part of a system or
- Operated by a third party

Product life phases

The product life phases are the state or usage phases of the product. These range from leaving the assembly hall to disassembly and disposal, and are divided into correspondingly logical sections (chapters) in these operating instructions.

2.2 Significance of the safety regulations

These safety regulations contain all behavior regulations and generally applicable danger information. The safety of the user and the personnel can only be ensured when these safety regulations and the safety information listed in the individual chapters are strictly complied with and followed. The operator is responsible for the enforcement.

2.3 Information and symbols

2.3.1 Warning and safety notices

The warning and safety notices used in these operating instructions have the following significance:

	 CAUTION Indicates a hazard with low risk which, if not avoided, could result in minor or moderate injury.
--	--

	 WARNING Indicates a possible hazard with medium risk which, if not avoided, could result in death or serious injury.
--	---

	 DANGER Indicates an immediate hazard with high risk which, if not avoided, will result in death or serious injury.
--	---

NOTICE	
Indicates practical information and tips that permit the best use of machinery, system or equipment.	

CAUTION
To warn of material damage.

2.3.2 Notes and symbols in the manual.

The following information and symbols are used in manual.

Warning signs	Mandatory sign	Mandatory sign
Danger of hand injuries	Wear safety goggles	Wear gloves
		

2.4 Application limitations

The following technical operating instructions and ambient conditions must be complied with for the operation of the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station.


Environmental conditions	
Working temperature	+10 ... +50 °C
Storage temperature	- 10 ... +70 °C
Relative humidity	Max. 90%, non-condensing
Mechanical power supply	
Operating pressure	2-6 bar
Mechanical	
Machine Weight	150kg Approx.
Electrical power supply	
Supply voltage	230 VAC
Input Power	8 kW
Full Load Current	16 Amp
Primary Fuse	32 Amp
Max. Short Circuit Interrupting Cap	14 Amp
Control Voltage	24 V

2.5 Do's and Don'ts for PCBA+Metal Plate +EMI Shield Assembly LH & RH Station


- Regular checking of penumatics parts.
- Regular checking of drag chain.
- Regular checking 2/2 valve.

3. DESCRIPTION OF THE MACHINE


3.1 Layout of Station:

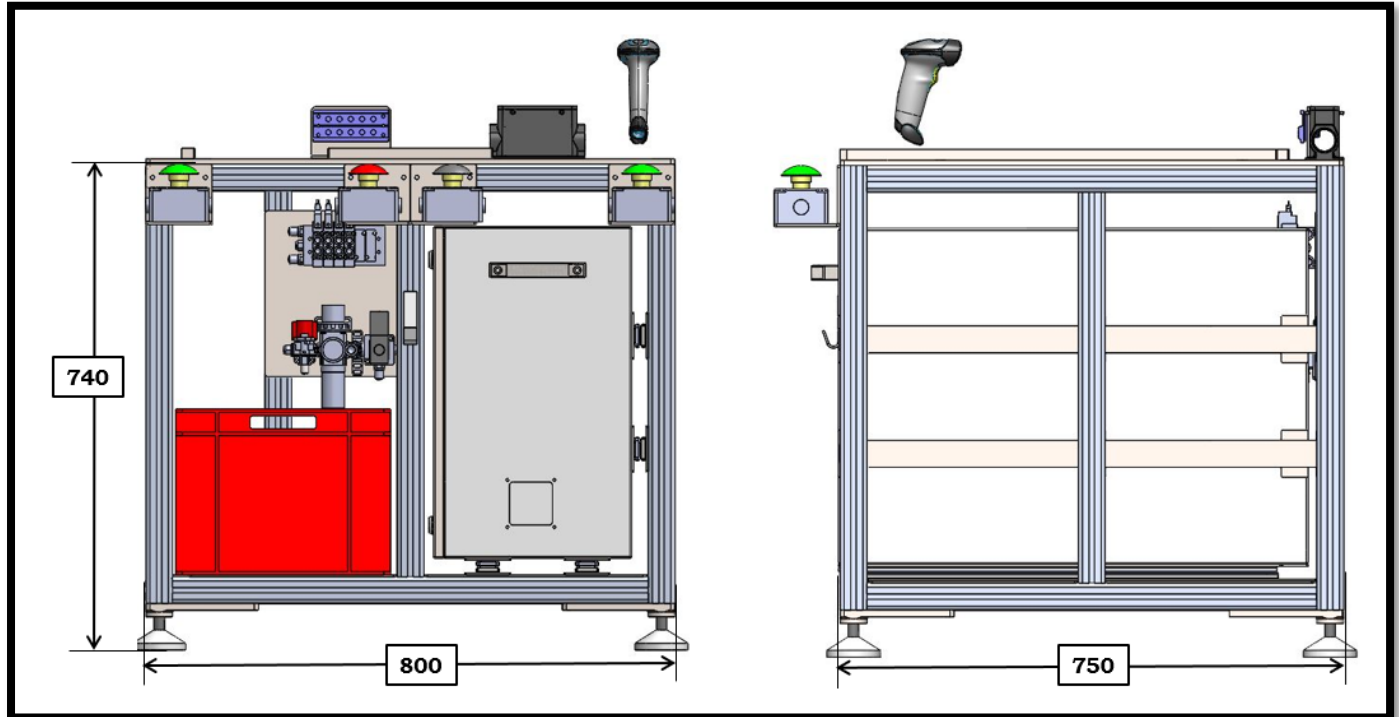


3.2 Description of Station:

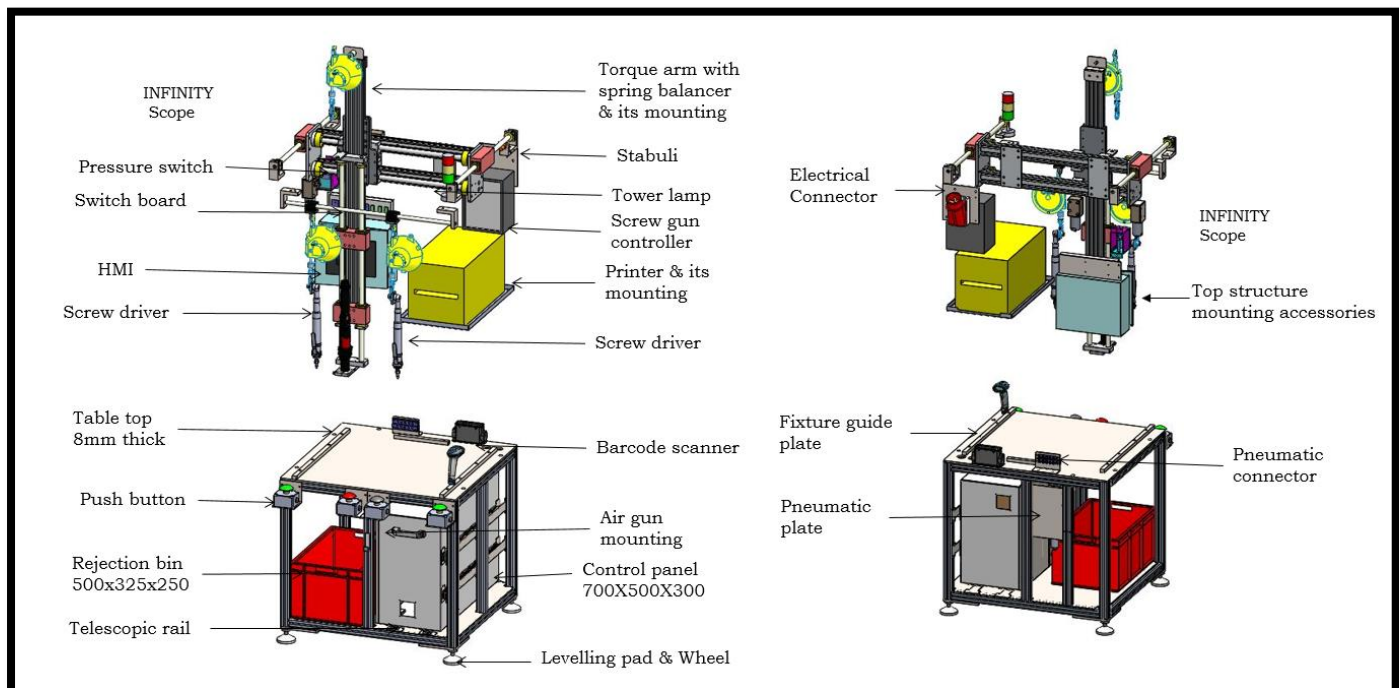


3.3 Assembly Drawings:

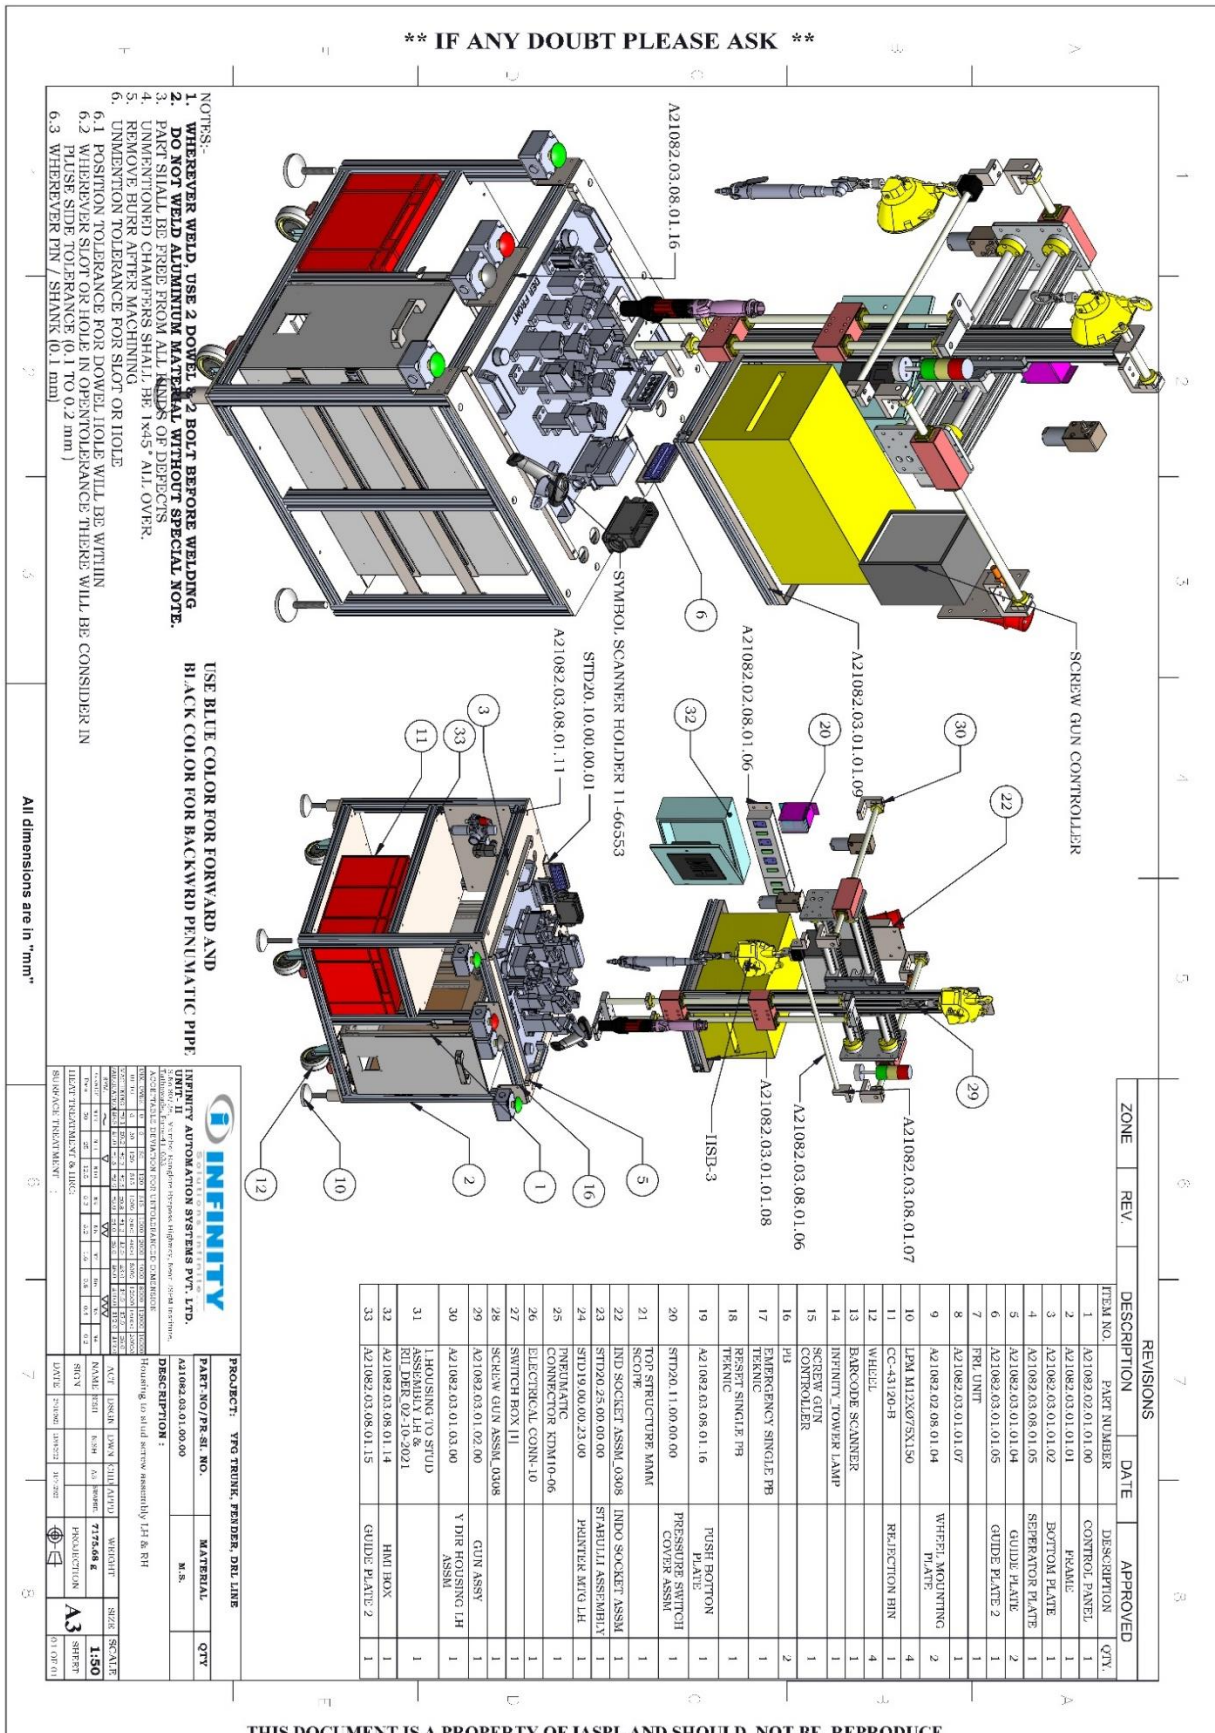

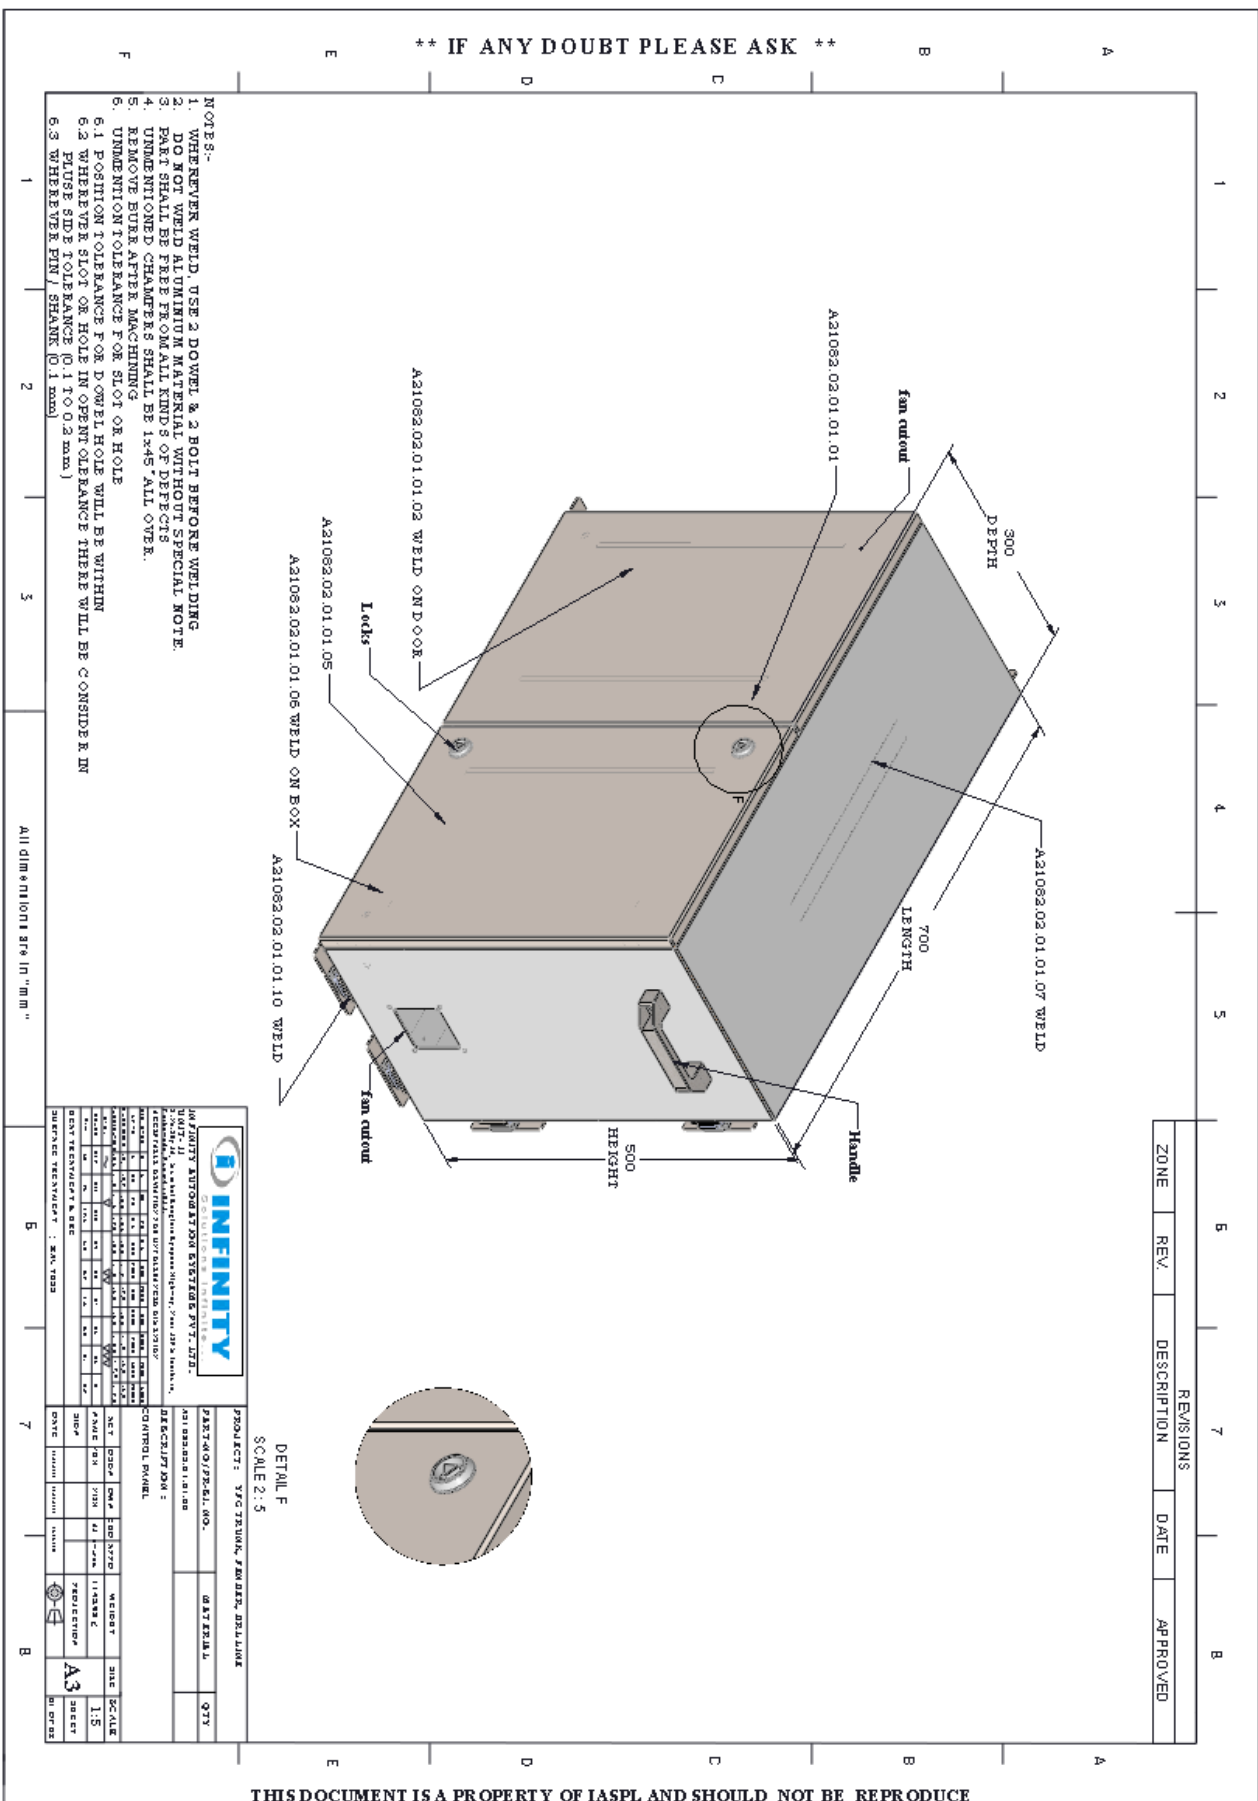

3.4 Pneumatic Drawings:

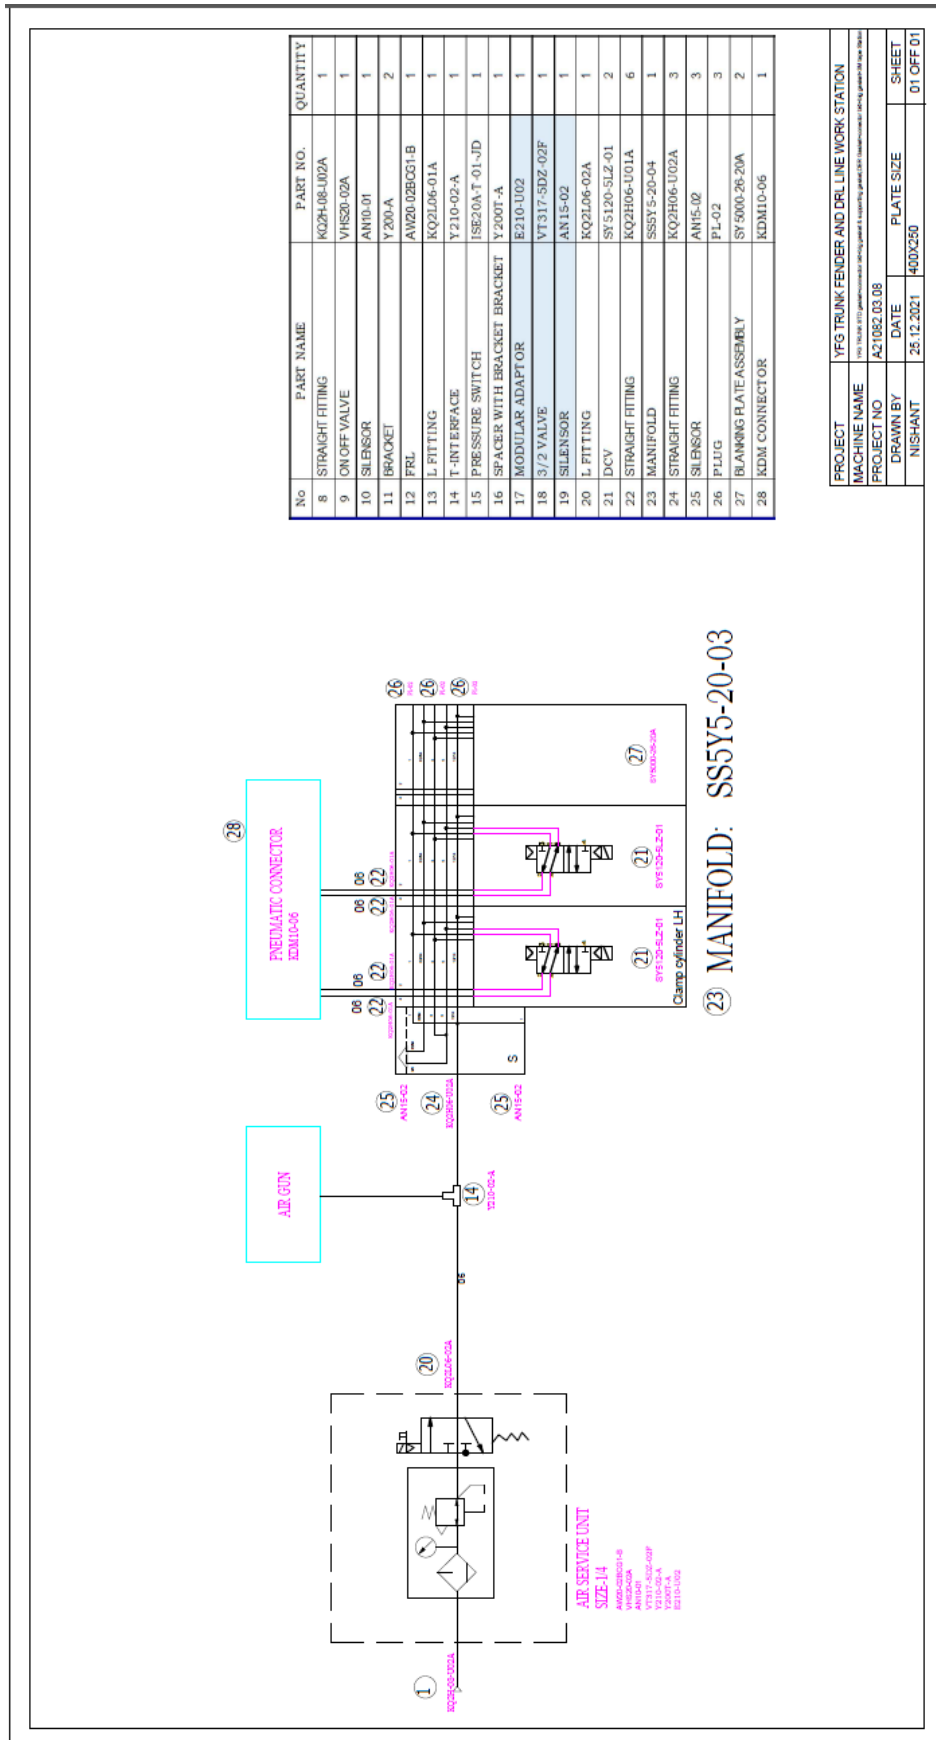



Screw Gun

3.5 Operation

3.5.1 Safety regulations for PCBA +Metal Plate +EMI Shield Assembly LH & RH Station

1. Any type of maintenance work done by authorized person.
2. Always turn off Machine switch while any type of maintenance work.

3.5.1.1 Personal Safety Equipment

All users are obliged to wear the following personal safety equipment for all work:

- Tightly fitting working clothes
- Safety goggles
- Gloves

3.5.2 Steps for Operation Sequence:

- Pick LH & RH lamp from oven.
- Locate LH & RH lamp on fixture.
- Pick big gasket (2 no's)
- Paste big gasket 1 no's on LH lamp & 1no's on RH lamp.
- Press cycle start (Lamp gets clamped & screwdriver enable)
- Pick connector bracket (2 no's)
- Locate connector bracket 1 no's on LH & 1 no's RH lamp.
- Pick screw driver.
- Do the screwing of connector bracket with LH (1 no's) & RH (1 no's) housing. (If screwing ok then lamp gets declamped).
- Pick LH (1 no's)& RH (1 no's) supporting gasket from bin.
- Paste on LH & RH lamp.
- Unload both lamp from fixture

4. LIFTING, TRANSPORTATION & PACKAGING:

4.1 Lifting Arrangement:

For lifting of machine, there is fork lift.

4.2 Transportation:

Transfer the final test workstation and all of its separately packed associated components, in a closed vehicle or closed shipping container only. Each component of this machine should remain horizontal at all times during transport.

A fork truck should be used to load/offload the pallet holding this machine into/from vehicles.

4.3 Packaging:

Put final test workstation at an appropriate transport pallet that corresponds to the weight, and secure it against sliding. Protect each table from dirt and moisture by foil. Then house it completely.

Remove all components and subassemblies that are not permanently attached to the final test workstation, wrap them in plastic foil, and pack them in separate shipping containers.

Secure Component groups at the final test workstation against uncontrolled movement.

5. HMI SCREEN:

5.1. MAIN SCREEN:

- Click on 'MAIN MENU' button, below screen appears.



FIG.1.MAIN SCREEN

- The software has menu buttons as given below:
 1. Auto
 2. Manual
 3. Input
 4. Output
 5. Configuration
 6. Alarm History

5.2. PROGRAM SCREEN:

- Click on '**PROGRAM**' button, below screen appears.

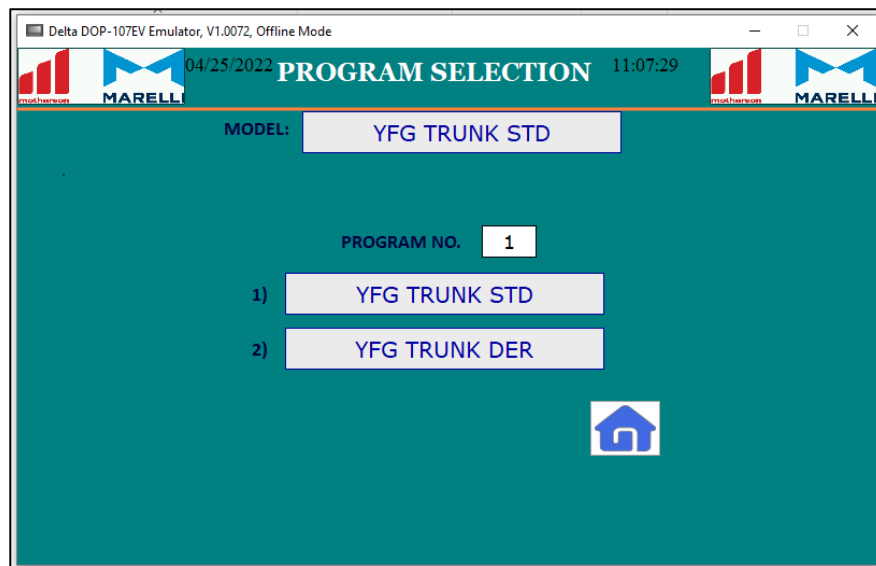


FIG.2.PROGRAM

- Here for program selection enter one or two in Program No. field
- Description is displayed in the fields below Program No.

5.3. AUTO:

- Click on 'AUTO' button, below screen appears.

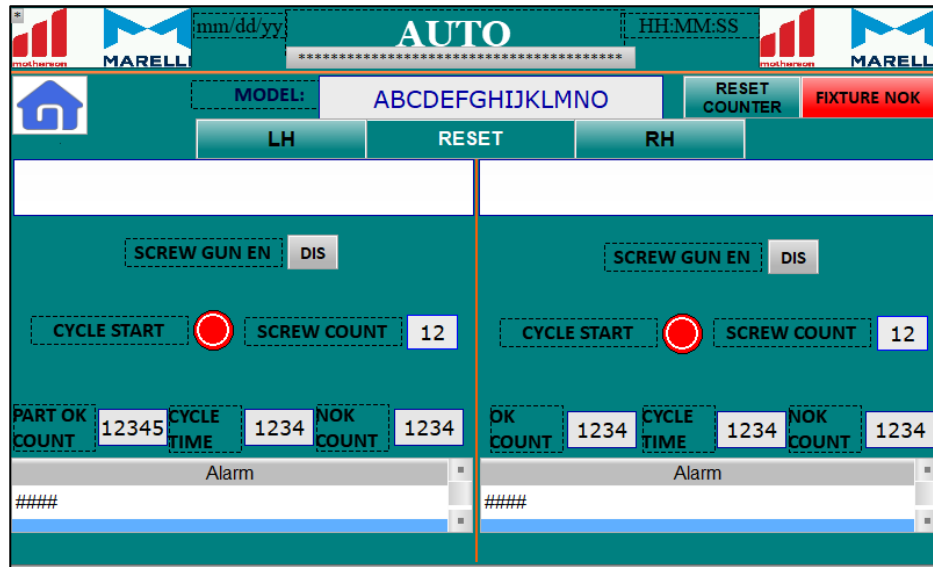


FIG.3.AUTO

- This screen display live cycle status.
- This screen shows cycle time is in second.
- Here also we display sensors, if it is present then it indicates with Green color and if it is not then indicates with Red color.
- It also indicates OK and NOK part count & screw count.

5.4. MANUAL:

- Click on 'MANUAL' button, below screen will appear.

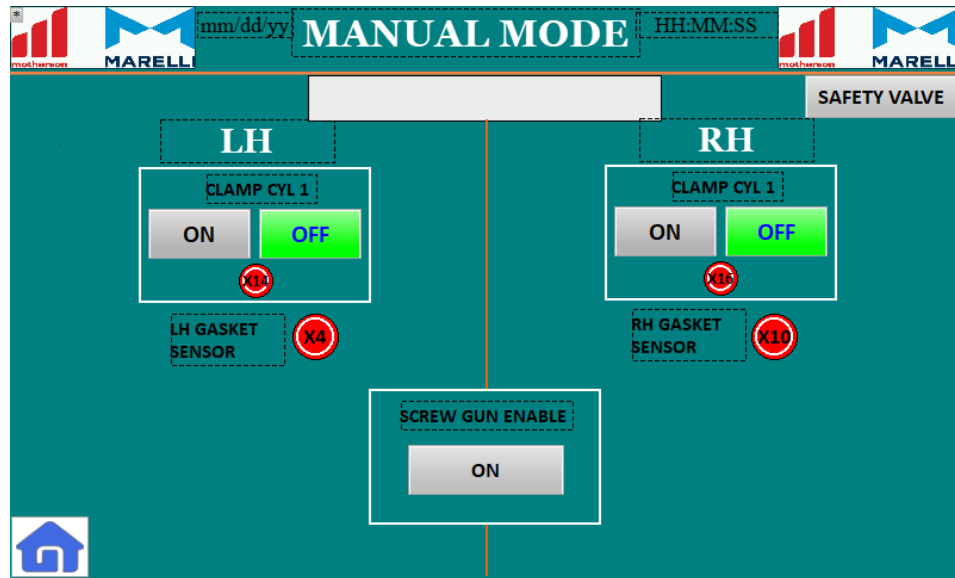


FIG.4. MANUAL

- Here all the cylinders can be operated manually after switching the safety valve ON.
- Part Presence and Reed Switch feedback for indication.
- Screw gun can be enable & disable manually.
- Press **HOME** button to go back.

5.5. INPUT LIST:

- Click on 'INPUT' button, below screen will appear.

INPUTS	
Cycle Start PB 1	X0
Cycle Start PB 2	X1
Emergency PB	X2
Pressure Switch	X3
LH Gasket Present Sensor	X4
LH Part Presence 2(Spare)	X5
LH Part Presence 3(Spare)	X6
LH Part Presence 4(Spare)	X7
RH Gasket Present Sensor	X10
RH Part Presence 2(Spare)	X11
RH Part Presence 3(Spare)	X12
RH Part Presence 4(Spare)	X13
LH Clamp1 Fwd RS	X14
LH Clamp2 Fwd RS (Spare)	X15
RH Clamp1 Fwd Rs	X16
RH Clamp2 Fwd RS (Spare)	X17

FIG.5.1.INPUT LIST

INPUTS	
LH Fixture Selection 1	X20
Ip Spare	X21
Screw Gun 1 NOK	X22
Screw Gun 1 OK	X23
LH Fixture Selection 2	X24
LH Fixture Selection 3	X25
Ip Spare	X26
Ip Spare	X27
Ip Spare	X30
Ip Spare	X31
Ip Spare	X32
Ip Spare	X33
Ip Spare	X34
Ip Spare	X35
Ip Spare	X36
Ip Spare	X37

FIG.5.2.INPUT LIST


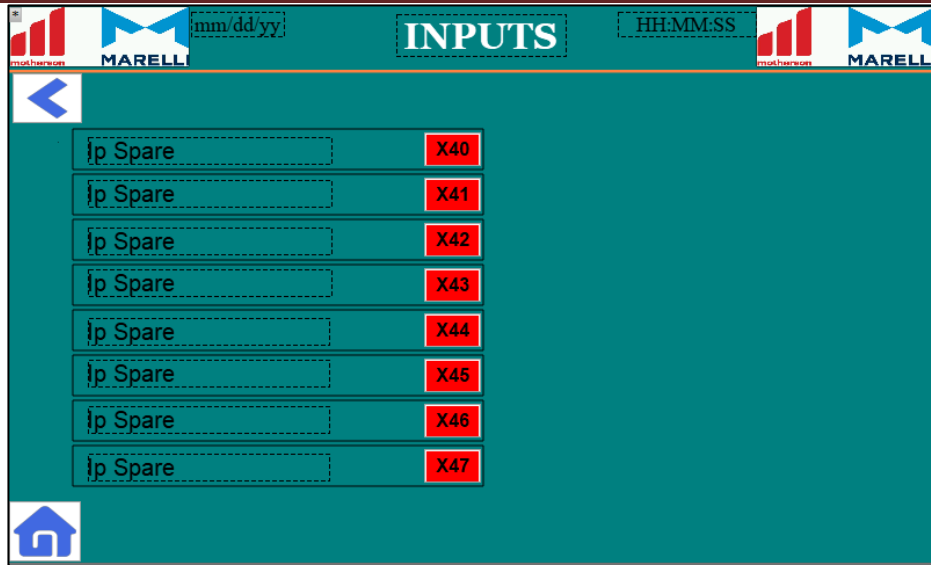


FIG.5.3.INPUT LIST

- For maintenance purpose all the inputs are displayed on the above screen.
- If input is ON, indicator turns GREEN. If it is OFF, indicator turns RED.
- Press forward arrow button for go to next window.
- Press backward arrow button for go back.
- Press HOME button to go on main screen.


5.6. OUTPUT LIST:

➤ Click on 'OUTPUT' button, below screen will appear.

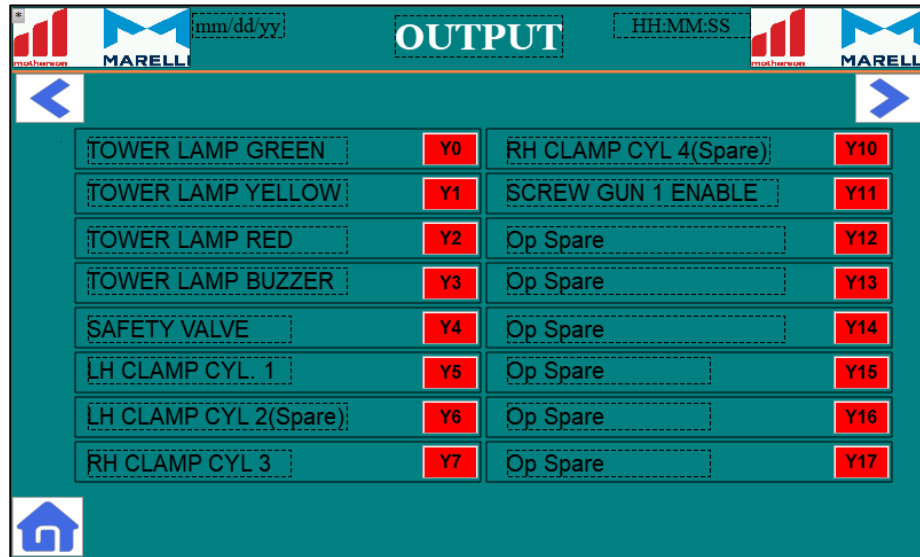

mm/dd/yy		OUTPUT		HH:MM:SS	
TOWER LAMP GREEN	Y0	RH CLAMP CYL 4(Spare)	Y10		
TOWER LAMP YELLOW	Y1	SCREW GUN 1 ENABLE	Y11		
TOWER LAMP RED	Y2	Op Spare	Y12		
TOWER LAMP BUZZER	Y3	Op Spare	Y13		
SAFETY VALVE	Y4	Op Spare	Y14		
LH CLAMP CYL 1	Y5	Op Spare	Y15		
LH CLAMP CYL 2(Spare)	Y6	Op Spare	Y16		
RH CLAMP CYL 3	Y7	Op Spare	Y17		

FIG.6.1.OUTPUT LIST

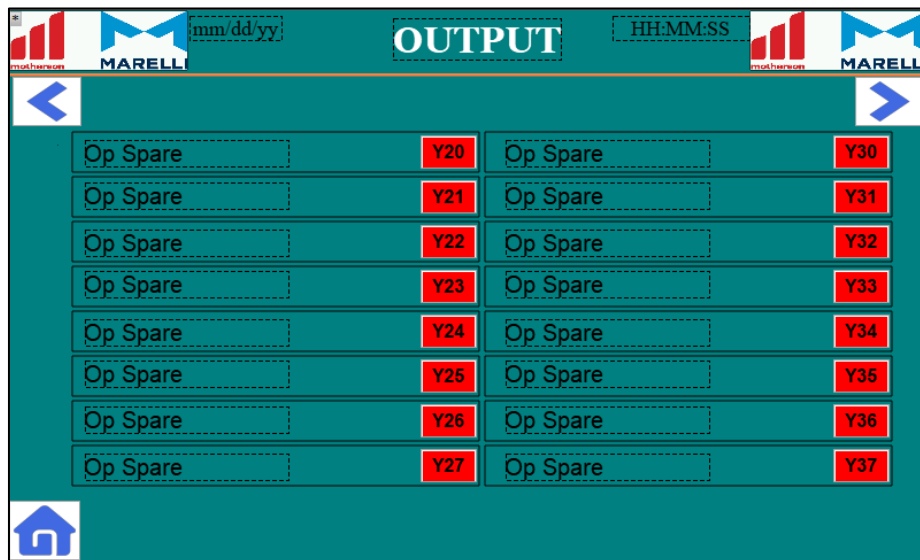

mm/dd/yy		OUTPUT		HH:MM:SS	
Op Spare	Y20	Op Spare	Y30		
Op Spare	Y21	Op Spare	Y31		
Op Spare	Y22	Op Spare	Y32		
Op Spare	Y23	Op Spare	Y33		
Op Spare	Y24	Op Spare	Y34		
Op Spare	Y25	Op Spare	Y35		
Op Spare	Y26	Op Spare	Y36		
Op Spare	Y27	Op Spare	Y37		

FIG.6.2.OUTPUT LIST

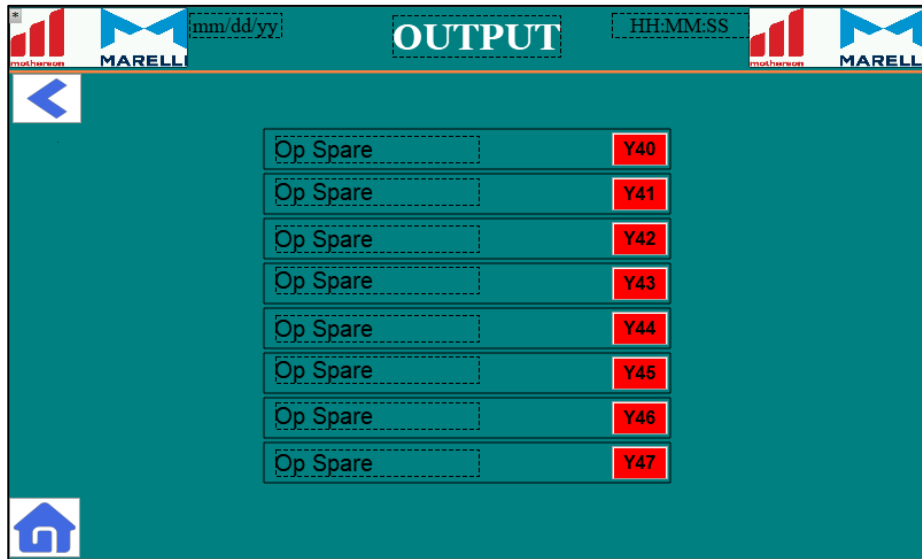


FIG.6.3.OUTPUT LIST

- For maintenance purpose all the outputs are displayed on the below screen.
- If output is ON then indicator turns GREEN if it is OFF then indicator turns RED.
- Press forward arrow button for go to next window.
- Press backward arrow button for go back.
- Press HOME button to go on main screen.

5.7. CONFIGURATION:

- Click on 'CONFIGURATION' button, below screen will appear.

The screenshot shows the 'CONFIGURE' screen with a teal background. At the top, there are logos for 'INFINITY' and 'MARELL' on the left, and 'mm/dd/yy' and 'HH:MM:SS' on the right. The main title 'CONFIGURE' is centered at the top. Below the title, there are two main sections: 'LH' (Left Hand) and 'RH' (Right Hand). Each section contains several input fields and buttons. In the 'LH' section, there is a 'PROG NO.' field with the value '12', a 'SCREW COUNT' field with the value '12', a 'BARCODE SCAN' button with a red 'X' icon, a 'CLAMP CYL 1' button with a red 'X' icon, and a 'CLAMP CYL 1 REED SW' button with a red 'X' icon and a '12' value. In the 'RH' section, there is a 'FIXTURE ID' field with the value '12', a 'SCREW COUNT' field with the value '12', a 'CLAMP CYL 1' button with a red 'X' icon, and a 'CLAMP CYL 1 REED SW' button with a red 'X' icon and a '12' value. A home button icon is located in the bottom left corner.

FIG.7. CONFIGURE

- To open this screen first we have to enter password.
- Here we can create a new program.
- Here we can enable or disable sensors and cylinder by pressing the button.
- Also we can enter screw count and REED SW delay timing.
- Press **HOME** to go main menu.

5.8. ALARM SCREEN:

- Click on 'ALARM SCREEN' button, below screen will appear.

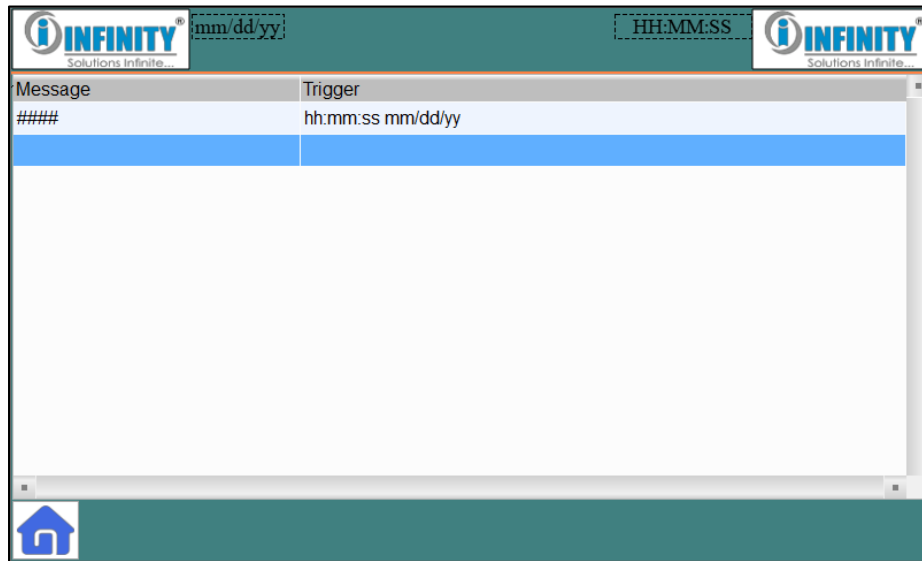


FIG.8. ALARM SCREEN

- Alarm history can be shown on the screen.

6. SPARE LIST:

• ELECTRICAL BOM:

Project No.: A21082				
NO.	Part Number	Name/Description	Qty	Make
1	DOP-107EV	HMI.HMI 7" In build Ethernet	1	DELTA
2	FX5U-80MT/ESS	PLC.CPU 40 I/P(Sink/Source).40 O/P(Source) 100 to 240 VAC Supply	1	MITSUBHISHI
3	6GK5005-0BA00-1AB2	6GK5005-0BA00-1AB2.SCALANCE XB005 unmanaged Industrial Ethernet Switch for 10/100	1	SIEMENS
4	XVGB3S	Tower lamp RAG with Buzzer 24V DC	1	SCHNEIDER
5	ONE WAY SIZE 90X80X52 MM	PENDANT	4	TEKNIC
6	2AM2	PUSH BUTTON. METALLIC BLACK MUSHROOM TYPE PUSHBUTTON, 40MM, MOMENTARY (SPRING RETURN)	1	TEKNIC
7	2AMJ3	PUSH BUTTON. METALLIC GREEN MUSHROOM TYPE PUSHBUTTON, 60MM, MOMENTARY	2	TEKNIC
8	2AML4	PUSH BUTTON. METALLIC RED MUSHROOM TYPE PUSHBUTTON, 40MM, LATCHING (ENERGENCY PUSHBUTTON)	1	TEKNIC
9	S2	NC CONTACT METALLIC RED NORMALLY CLOSED CONTACT ELEMENTS	1	TEKNIC
10	S1	NO CONTACT METALLIC GREEN NORMALLY OPEN CONTACT ELEMENTS	3	TEKNIC
11	M8	QUICK RELEASE OPENING	1	LOCAL
12	555234	INDUSTRIAL PLUG.Straight plug P17 - IP44 - 200/250 V~ - 32 A - 2P+E	1	LEGRAND
13	555254	INDUSTRIAL SOCKET.Surface mounting	1	LEGRAND

		socket P17 - IP44 - 200/250 V~ - 32 A - 2P+E		
14	6755 50	SERVICE SOCKET MYLINC 6 AMP SOCKET 2/3 PIN	3	LEGRAND
15	6740 99	SERVICE SOCKET MYLINC SURFACE BOX - 9 MODULES	1	LEGRAND
16	6755 69	SERVICE SOCKET - MYLINC PLATES - 9 MODULES	1	LEGRAND
17	GOLDEN-30W-T8 LED(2ft) 6500K DAY-LIGHT	GOLDEN-30W-T8 LED(2ft) 6500K DAY-LIGHT	2	OREVA
18	CF-200	Machine Fan. 200 MM Cabin Fan Blue Colour	1	REMI
19	15X40MM(HXL) ENGRAVING	NAME PLATE. SQUARE ENGRAVING		LOCAL
20	ROUND Dia 22.5MM	NAME PLATE. ROUND ENGRAVING		LOCAL
21	857-304	Slim Relay.Relay module; Nominal input voltage: 24 VDC; 1 changeover contact; Limiting continuous current: 6 A; Yellow status indicator; Module width: 6 mm; 2,50 mm ² ; gray	28	WAGO
22	2946-859-410-ND	SHORT LINK.PUSH-IN TYPE JUMPER BAR; 10-WAY	3	WAGO
23	VCF1	MAINS ON/OFF.Mains ON/OFF 32A	1	SCHNEIDER
24	A9N2P32C	MCB.2 Pole 32 Amp	1	SCHNEIDER
25	A9N2P06C	MCB.2P,6AMP	1	SCHNEIDER
26	A9N2P16C	MCB.2 POLE MCB,16A	1	SCHNEIDER
27	XB7EV04MP	INDICATION LAMP.POWER ON INDICATOR. RED LED 230VAC	1	SCHNEIDER
28	T5 LED	TUBELIGHT. 1 FT LED TUBE LIGHT	1	PHILIPS
29	3SE3-020-OA	LIMIT SWITCH.Siemens 1NO+1NC Contact Type Limit Switch 3SE3 020-OA	1	SIEMENS
30	3" Fan Filter Jigo	Fan Filter.3" Fan Filter	2	JIGO
31	3" Fan Grill	Fan Grill.3" Fan Grill	2	JIGO
32	3" Fan 230VAC	Fan.3" Fan 230VAC	2	JIGO


33	NHP-24VDC-5A	SAMPS.SMPS 24VDC;5A	1	NHP
34	6755 62	SERVICE SOCKET.MYLINC PLATES -2 MODULES	1	LEGRAND
35	673302	SERVICE SOCKET.MYLINC SURFACE BOX -2 MODULES	1	LEGRAND
36	6755 01	SERVICE SOCKET MYLINC 6 AMP SWITCH SP	2	LEGRAND
37	6755 50	SERVICE SOCKET MYLINC 6 AMP SOCKET 2/3 PIN	1	LEGRAND
38	6733 04	SURFACE BOX.MYLINC SURFACE BOX- 4 MODULES	1	LEGRAND
39	6755 64	MODULE PLATE.MYLINC 4 MODULE PLATE-WHITE	1	LEGRAND
40	675974	MCB Switch.Mylinec Modular SP MCB 16A	2	Legrand

• **PNEUMATIC BOM:**

Project No.: A21082				
No	PART NAME	PART NO.	QTY	MAKE
1	SPRING BALNCER	HSB-3	1	ENDO
2	LINEAR BEARING	SC16UU	1	SAMIK
3	DRAG CHAIN		1	IGUS
4	A3 FOLDER	A3 FOLDER	1	LOCAL
5	REJECTION BIN	FPO CRATE	1	NILKAMAL
6	STRAIGHT FITTING	KQ2H-08-U02A	1	SMC
7	ON OFF VALVE	VHS20-02A	1	SMC
8	SILENSOR	AN10-01	1	SMC
9	BRACKET	Y200-A	2	SMC
10	FRL	AW20-02BCG1-B	1	SMC
11	L FITTING	KQ2L06-01A	1	SMC
12	T-INTERFACE	Y210-02-A	1	SMC
13	PRESSURE SWITCH	ISE20A-T-01-JD	1	SMC
14	SPACER WITH BRACKET BRACKET	Y200T-A	1	SMC
15	MODULAR ADAPTOR	E210-U02	1	SMC
16	3/2 VALVE	VT317-5DZ-02F	1	SMC
17	SILENSOR	AN15-02	1	SMC
18	L FITTING	KQ2L06-02A	1	SMC
19	DCV	SY5120-5LZ-01	2	SMC
20	STRAIGHT FITTING	KQ2H06-U01A	6	SMC
21	MANIFOLD	SS5Y5-20-04	1	SMC
22	STRAIGHT FITTING	KQ2H06-U02A	3	SMC
23	SILENSOR	AN15-02	3	SMC
24	PLUG	PL-02	3	SMC
25	BLANKING PLATE ASSEMBLY	SY5000-26-20A	2	SMC

26	KDM CONNECTOR	KDM10-06	1	SMC
----	---------------	----------	---	-----


7. FLOW CHART:

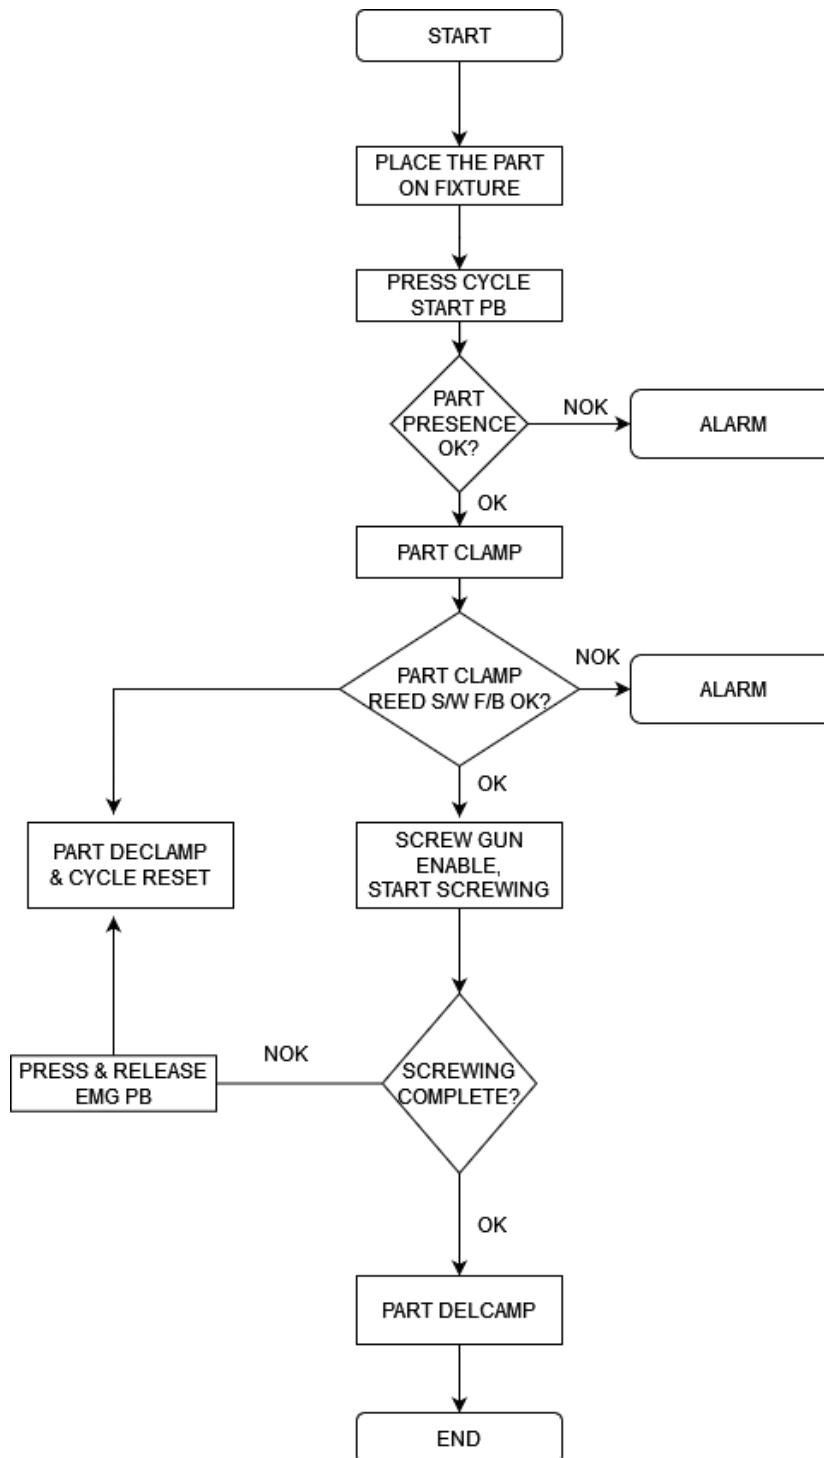


8. TROUBLESHOOT:

- **Emergency Button Pressed alarm:** Release the Emergency Button and Reset alarm from auto screen.
- **Air Pressure Alarm:** Check if air supply is in required range and reset the alarm from auto screen.
- **Clamp Reed Switch Alarm:** Reset alarm from auto screen. Check if the reed switch is glowing by operating the cylinder manually. If not, adjust the position of reed switch to sense the clamp position. Check if correct Reed Switch F/b is enabled in configuration.
- **Fixture selection is wrong alarm:** Check if the program selection is correct according to the model. Reset alarm from auto screen.
- **Part Presence Alarm:** This alarm occurs when a part is missing to start cycle. Reset alarm from auto screen. Check & place the part correctly, check if the sensor is sensing the part correctly. Check if the correct sensor is enabled in Configuration.
- **PCB Scan NOK:** This indicates that the scanned part is not correct. Reset alarm from auto screen. Scan the correct part. Check if correct part number is set in configuration.


9. ELECTRICAL & PNEUMATIC DRAWING:

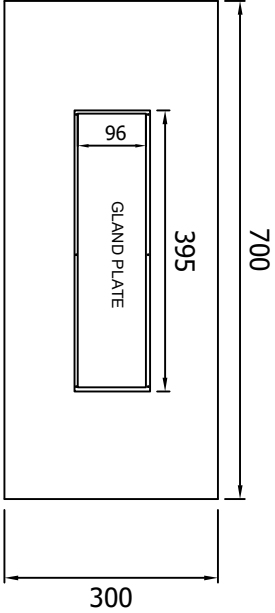


TOP VIEW

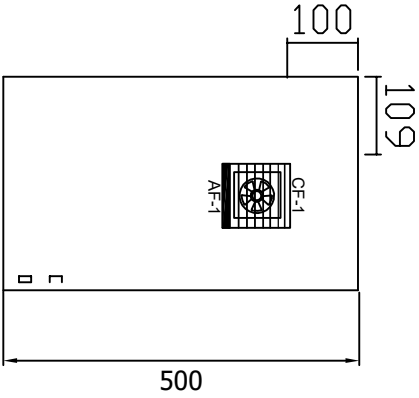

L.H.SIDE VIEW

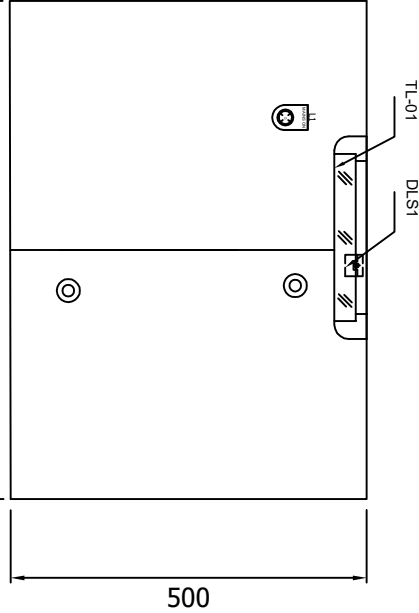

FRONT VIEW

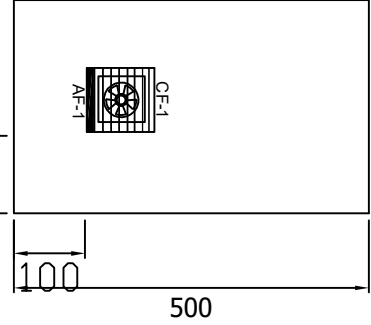


R.H.SIDE VIEW

TITLE: DRG NO :

CHANGES VIA CAD ONLY

WIRE SIZE & COLOUR DETAILS :-		
1. 230V AC	-: 2.5 1.5 SQ. MM RED	
2. 0V AC	-: 2.5 1.5 SQ. MM BLACK	
3. PE	-: 2.5 1.5 SQ. MM YELLOW/GREEN	
4. 24V DC	-: 0.5 SQ. MM BROWN	
5. 0V DC	-: 0.5 SQ. MM BLUE	
6. DIGITAL INPUT	-: 0.5 SQ. MM GRAY	
7. DIGITAL OUTPUT	-: 0.5 SQ. MM WHITE	

REV	DATE	CHANGES	MB	DC	FW
00	11.04.2022				
INFINITY AUTOMATION SYSTEMS PVT. LTD.					
WORKS NO.802A/MBARA BANGLORE HIGHWAY NEAR					
JSPM ENGG. COLLEGE, PATAWADI, PUNE - 411033					
TITLE :- Gasket and Connector Bracket and Big Gasket Assy					
SCALE :- MTS					
QTY :- 01 No.					
SHEET 1 OF 13					
DRG NO :- A21082					
REV - 00					

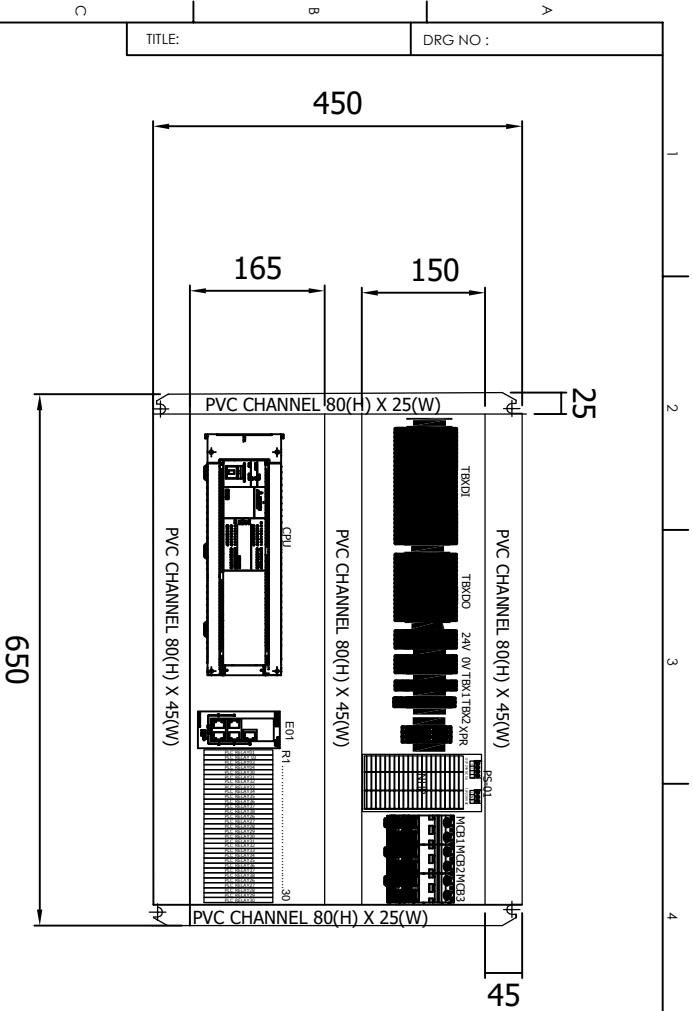


MOUNTING PLATE

WIRE SIZE & COLOUR DETAILS :-

1. 230V AC	-> 2.5,1.5 SQ. MM RED
2. 0V AC	-> 2.5,1.5 SQ. MM BLACK
3. PE	-> 2.5,1.5 SQ. MM YELLOW/GREEN
4. 24V DC	-> 0.5 SQ. MM BROWN
5. 0V DC	-> 0.5 SQ. MM BLUE
6. DIGITAL INPUT	-> 0.5 SQ. MM GRAY
7. DIGITAL OUTPUT	-> 0.5 SQ. MM WHITE

PANEL BOX-M5 powder coated				MOUNTING PLATE			
SIZE:- 500(H) X 200(W) X 30(D) MM				SIZE:-450(H) X 650(W)			
COMPONENT DETAILS :-				CABLE ENTRY: TOP			
SR.NO	TAG	DESCRIPTION	QTY	MAKE	QTY	MAKE	
1	CPU	PROCESSOR (CPU 40 (P5435Core2 Duo (P5435Core2 Duo))	01	INTEGRATED			
2	PS-20	Sim Relay Relay module, Nominal input voltage 24 VDC	30	WAGO			
3	PS-01	SPRS 24VDC/5A	01	WIP			
4	E01	ETHERNET SWITCH	01	SIGWIS			
5	WCE1	WCE1 2 Pole 32 Amp	01	SCHNEIDER			
6	WCE2	WCE2 2 Pole 32 Amp	01	SCHNEIDER			
7	WCE3	WCE3 2 Pole 32 Amp	01	SCHNEIDER			
8	WCE4	WCE4 2 Pole 32 Amp	01	SCHNEIDER			
9	WCE5	WCE5 2 Pole 32 Amp	01	SCHNEIDER			
10	WCE6	WCE6 2 Pole 32 Amp	01	SCHNEIDER			
11	WCE7	WCE7 2 Pole 32 Amp	01	SCHNEIDER			
12	WCE8	WCE8 2 Pole 32 Amp	01	SCHNEIDER			
13	WCE9	WCE9 2 Pole 32 Amp	01	SCHNEIDER			

00	11.04.2022		MB	DC	PV
REV	DATE	CHANGES	DRAWN	CHECKED	APPROVED
CLIENT:-	MM				
PROJECT:-	A21082				
INFINITY AUTOMATION SYSTEMS PVT. LTD.					
WORK: S NO.89/2A, MUMBAI BANGLORE HIGHWAY, JERGA					
JERGA ENGG. COLLEGE, JATIHAWADE, PUNE - 411033					
TITLE :-					
SCALE :- MTS					
QTY :- 01 No.					
SHEET: 2 of 13					
DRG NO :- A21082					
REV :- 00					

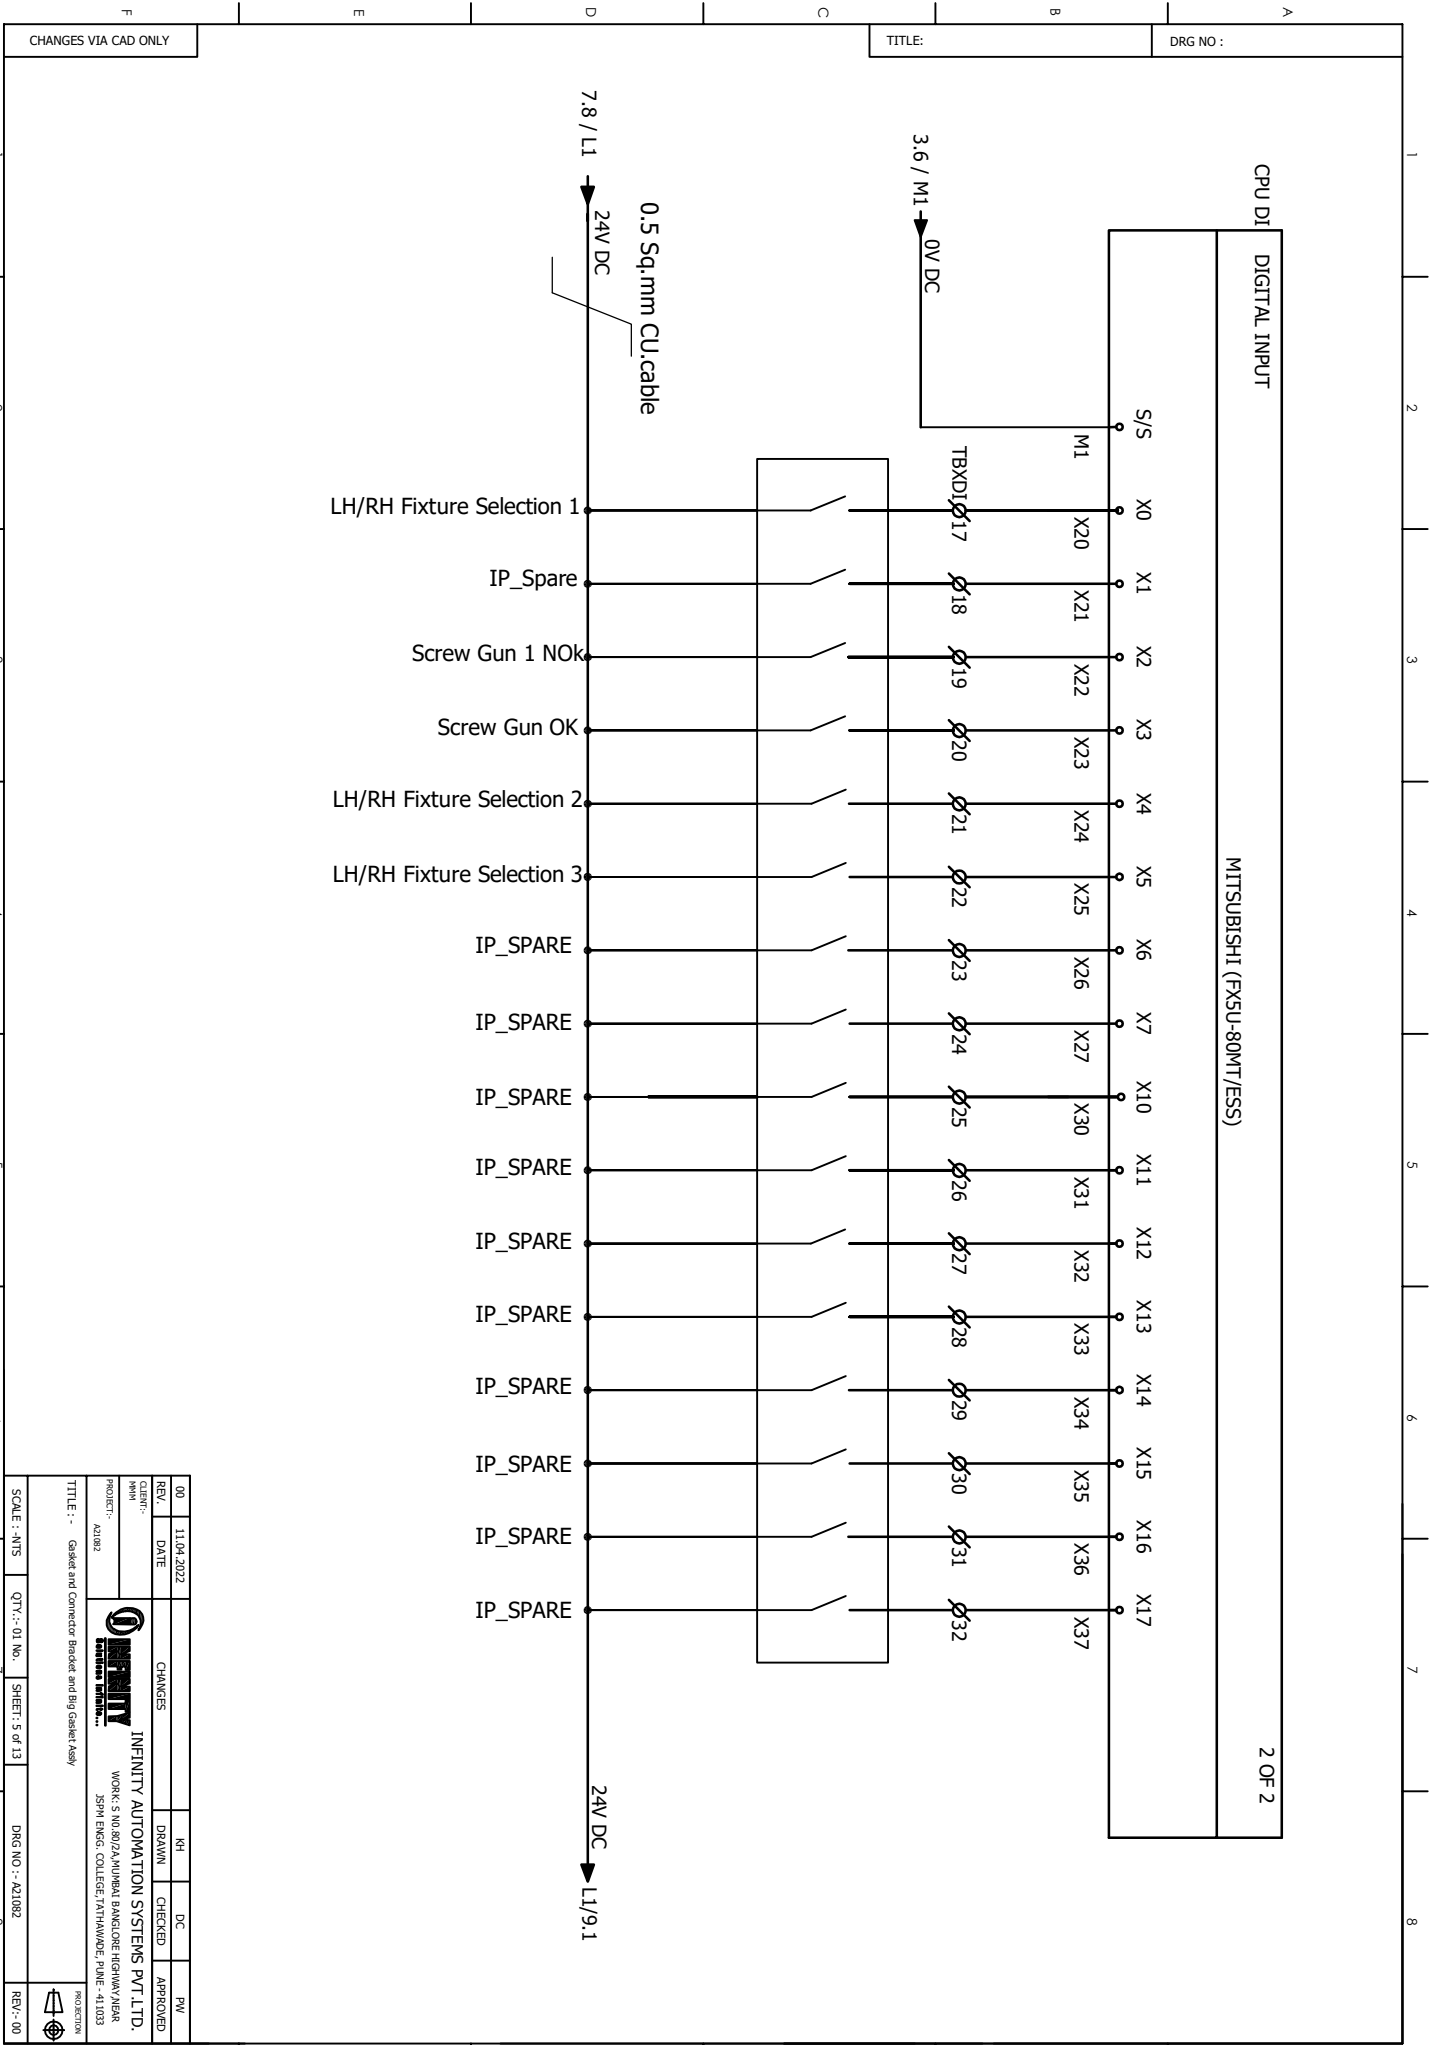

CPU DI DIGITAL INPUT

MITSUBISHI (FX5U-80MT/ESS)

2 OF 2

00	11.04.2022	CHANGES	REVISION	DATE	REV.
01	11.04.2022	CHANGES	REVISION	DATE	REV.
02	11.04.2022	CHANGES	REVISION	DATE	REV.
03	11.04.2022	CHANGES	REVISION	DATE	REV.
04	11.04.2022	CHANGES	REVISION	DATE	REV.
05	11.04.2022	CHANGES	REVISION	DATE	REV.
06	11.04.2022	CHANGES	REVISION	DATE	REV.
07	11.04.2022	CHANGES	REVISION	DATE	REV.
08	11.04.2022	CHANGES	REVISION	DATE	REV.
09	11.04.2022	CHANGES	REVISION	DATE	REV.
10	11.04.2022	CHANGES	REVISION	DATE	REV.
11	11.04.2022	CHANGES	REVISION	DATE	REV.
12	11.04.2022	CHANGES	REVISION	DATE	REV.
13	11.04.2022	CHANGES	REVISION	DATE	REV.
14	11.04.2022	CHANGES	REVISION	DATE	REV.
15	11.04.2022	CHANGES	REVISION	DATE	REV.
16	11.04.2022	CHANGES	REVISION	DATE	REV.
17	11.04.2022	CHANGES	REVISION	DATE	REV.
18	11.04.2022	CHANGES	REVISION	DATE	REV.
19	11.04.2022	CHANGES	REVISION	DATE	REV.
20	11.04.2022	CHANGES	REVISION	DATE	REV.
21	11.04.2022	CHANGES	REVISION	DATE	REV.
22	11.04.2022	CHANGES	REVISION	DATE	REV.
23	11.04.2022	CHANGES	REVISION	DATE	REV.
24	11.04.2022	CHANGES	REVISION	DATE	REV.
25	11.04.2022	CHANGES	REVISION	DATE	REV.
26	11.04.2022	CHANGES	REVISION	DATE	REV.
27	11.04.2022	CHANGES	REVISION	DATE	REV.
28	11.04.2022	CHANGES	REVISION	DATE	REV.
29	11.04.2022	CHANGES	REVISION	DATE	REV.
30	11.04.2022	CHANGES	REVISION	DATE	REV.
31	11.04.2022	CHANGES	REVISION	DATE	REV.
32	11.04.2022	CHANGES	REVISION	DATE	REV.
33	11.04.2022	CHANGES	REVISION	DATE	REV.
34	11.04.2022	CHANGES	REVISION	DATE	REV.
35	11.04.2022	CHANGES	REVISION	DATE	REV.
36	11.04.2022	CHANGES	REVISION	DATE	REV.
37	11.04.2022	CHANGES	REVISION	DATE	REV.
38	11.04.2022	CHANGES	REVISION	DATE	REV.
39	11.04.2022	CHANGES	REVISION	DATE	REV.
40	11.04.2022	CHANGES	REVISION	DATE	REV.
41	11.04.2022	CHANGES	REVISION	DATE	REV.
42	11.04.2022	CHANGES	REVISION	DATE	REV.
43	11.04.2022	CHANGES	REVISION	DATE	REV.
44	11.04.2022	CHANGES	REVISION	DATE	REV.
45	11.04.2022	CHANGES	REVISION	DATE	REV.
46	11.04.2022	CHANGES	REVISION	DATE	REV.
47	11.04.2022	CHANGES	REVISION	DATE	REV.
48	11.04.2022	CHANGES	REVISION	DATE	REV.
49	11.04.2022	CHANGES	REVISION	DATE	REV.
50	11.04.2022	CHANGES	REVISION	DATE	REV.
51	11.04.2022	CHANGES	REVISION	DATE	REV.
52	11.04.2022	CHANGES	REVISION	DATE	REV.
53	11.04.2022	CHANGES	REVISION	DATE	REV.
54	11.04.2022	CHANGES	REVISION	DATE	REV.
55	11.04.2022	CHANGES	REVISION	DATE	REV.
56	11.04.2022	CHANGES	REVISION	DATE	REV.
57	11.04.2022	CHANGES	REVISION	DATE	REV.
58	11.04.2022	CHANGES	REVISION	DATE	REV.
59	11.04.2022	CHANGES	REVISION	DATE	REV.
60	11.04.2022	CHANGES	REVISION	DATE	REV.
61	11.04.2022	CHANGES	REVISION	DATE	REV.
62	11.04.2022	CHANGES	REVISION	DATE	REV.
63	11.04.2022	CHANGES	REVISION	DATE	REV.
64	11.04.2022	CHANGES	REVISION	DATE	REV.
65	11.04.2022	CHANGES	REVISION	DATE	REV.
66	11.04.2022	CHANGES	REVISION	DATE	REV.
67	11.04.2022	CHANGES	REVISION	DATE	REV.
68	11.04.2022	CHANGES	REVISION	DATE	REV.
69	11.04.2022	CHANGES	REVISION	DATE	REV.
70	11.04.2022	CHANGES	REVISION	DATE	REV.
71	11.04.2022	CHANGES	REVISION	DATE	REV.
72	11.04.2022	CHANGES	REVISION	DATE	REV.
73	11.04.2022	CHANGES	REVISION	DATE	REV.
74	11.04.2022	CHANGES	REVISION	DATE	REV.
75	11.04.2022	CHANGES	REVISION	DATE	REV.
76	11.04.2022	CHANGES	REVISION	DATE	REV.
77	11.04.2022	CHANGES	REVISION	DATE	REV.
78	11.04.2022	CHANGES	REVISION	DATE	REV.
79	11.04.2022	CHANGES	REVISION	DATE	REV.
80	11.04.2022	CHANGES	REVISION	DATE	REV.
81	11.04.2022	CHANGES	REVISION	DATE	REV.
82	11.04.2022	CHANGES	REVISION	DATE	REV.
83	11.04.2022	CHANGES	REVISION	DATE	REV.
84	11.04.2022	CHANGES	REVISION	DATE	REV.
85	11.04.2022	CHANGES	REVISION	DATE	REV.
86	11.04.2022	CHANGES	REVISION	DATE	REV.
87	11.04.2022	CHANGES	REVISION	DATE	REV.
88	11.04.2022	CHANGES	REVISION	DATE	REV.
89	11.04.2022	CHANGES	REVISION	DATE	REV.
90	11.04.2022	CHANGES	REVISION	DATE	REV.
91	11.04.2022	CHANGES	REVISION	DATE	REV.
92	11.04.2022	CHANGES	REVISION	DATE	REV.
93	11.04.2022	CHANGES	REVISION	DATE	REV.
94	11.04.2022	CHANGES	REVISION	DATE	REV.
95	11.04.2022	CHANGES	REVISION	DATE	REV.
96	11.04.2022	CHANGES	REVISION	DATE	REV.
97	11.04.2022	CHANGES	REVISION	DATE	REV.
98	11.04.2022	CHANGES	REVISION	DATE	REV.
99	11.04.2022	CHANGES	REVISION	DATE	REV.
100	11.04.2022	CHANGES	REVISION	DATE	REV.

D13

DIGITAL INPUT

MITSUBISHI (FX5-80MT/ESS)

1 OF 1

S/S

X0

X1

X2

X3

X4

X5

X6

X7

M1

X40

X41

X42

X43

X44

X45

X46

X47

TBXDI

Ø33

Ø34

Ø35

Ø36

Ø37

Ø38

Ø39

Ø40

3.7 / M1
0V DC

0.5 Sq.mm CU.cable

L1

24V DC

24V DC

L1

Ip_Spare

Ip_Spare

Ip_Spare

Ip_Spare

Ip_Spare

Ip_Spare

Ip_Spare

Ip_Spare

CHANGES VIA CAD ONLY

TITLE:

DRG NO :

00	11.04.2022					
REV.	DATE	CHANGES	DRAWN	CHECKED	APPROVED	PM
CLIENT:- MNM						
PROJECT:- A21082						




INFINITY
Automation Systems Pvt. Ltd.


WORK: 5 M08/2A, MUMBAI BANGLORE HIGHWAY, NEAR
JSPM ENGS. COLLEGE, JATYAWADE, PUNE - 411033

SCALE :- NTS	QTY :- 01 No.	SHEET : 6 of 13	DRG NO :- A21082	REV - 00
--------------	---------------	-----------------	------------------	----------

Screw Gun Logic

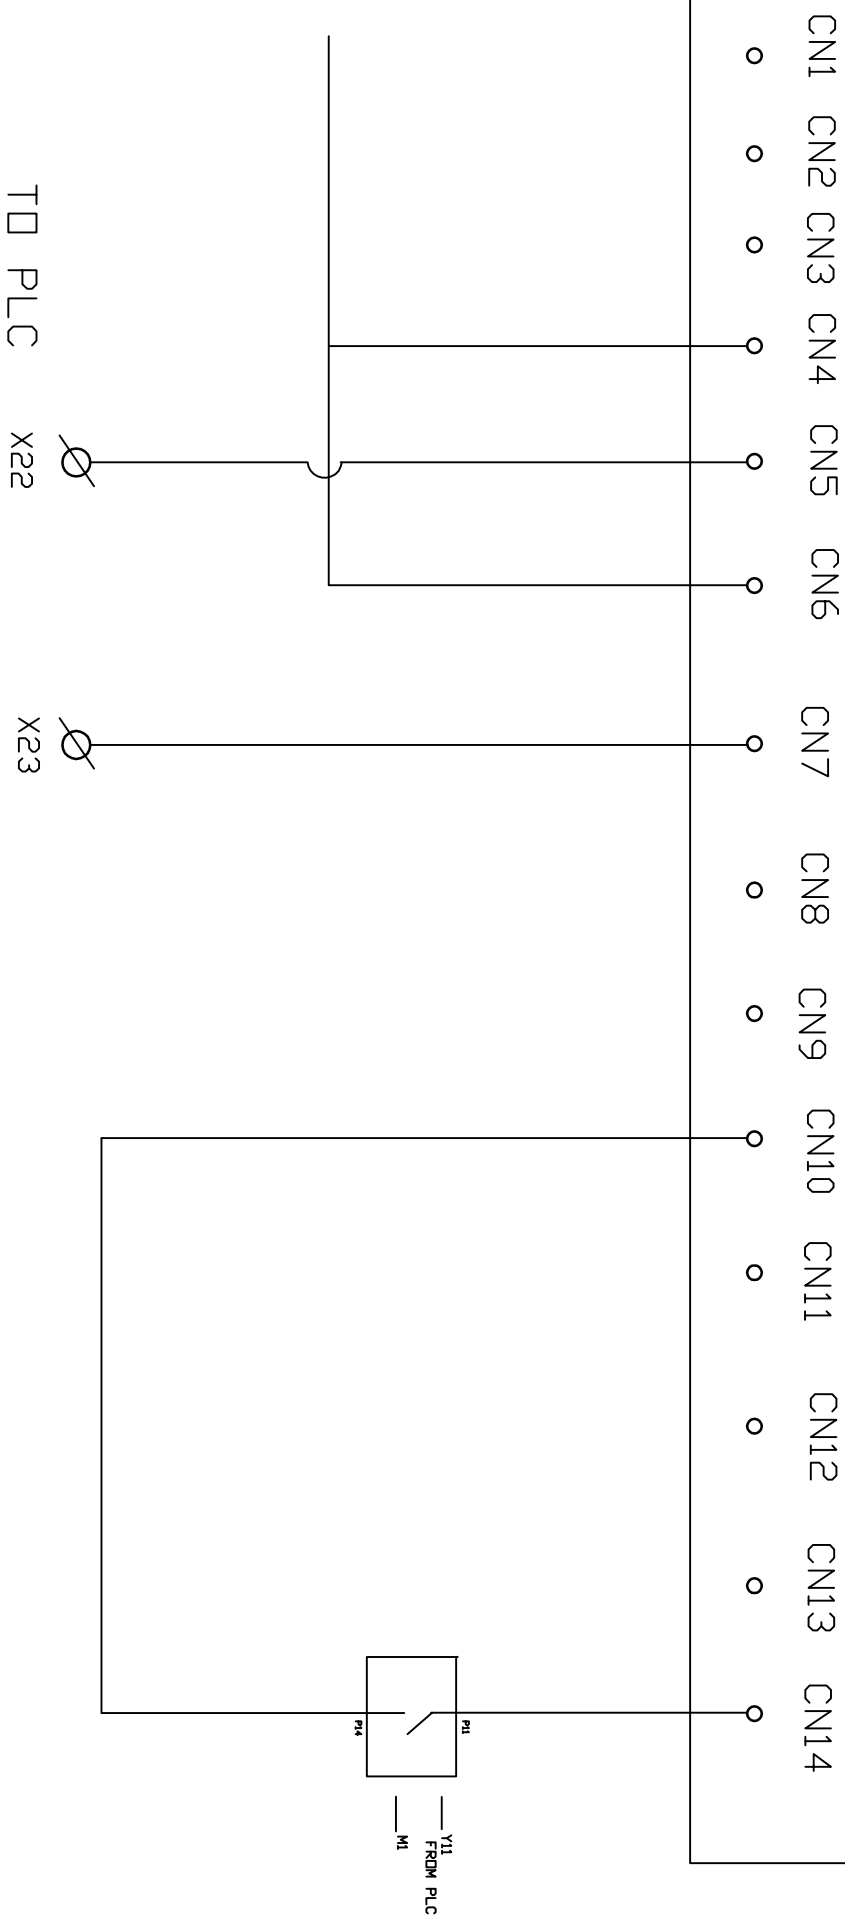

00	11/04/22		RH	DC	PV
REV.	DATE	CHANGES	DRAWN	CHECKED	APPROVED
CLIENT:	AJMI				
PROJECT:	A21862				
 INFINITY AUTOMATION SYSTEMS PVT. LTD. WORK : 5/NO.87/2 ANIMAL PATH/GOVT HIGHWAY NEAR SPFM BRIG. COLLEGE, AT/NANDUDE, TUNKE - 411033					
TITLE : Gasket and Connector Bracket and Big Gasket Assy					
SCALE : MTS	QTY : 01 No.	SHEET : 7 of 13	DWG NO. :- A21862	REV. : 0-	PRODUCTIVITY
					

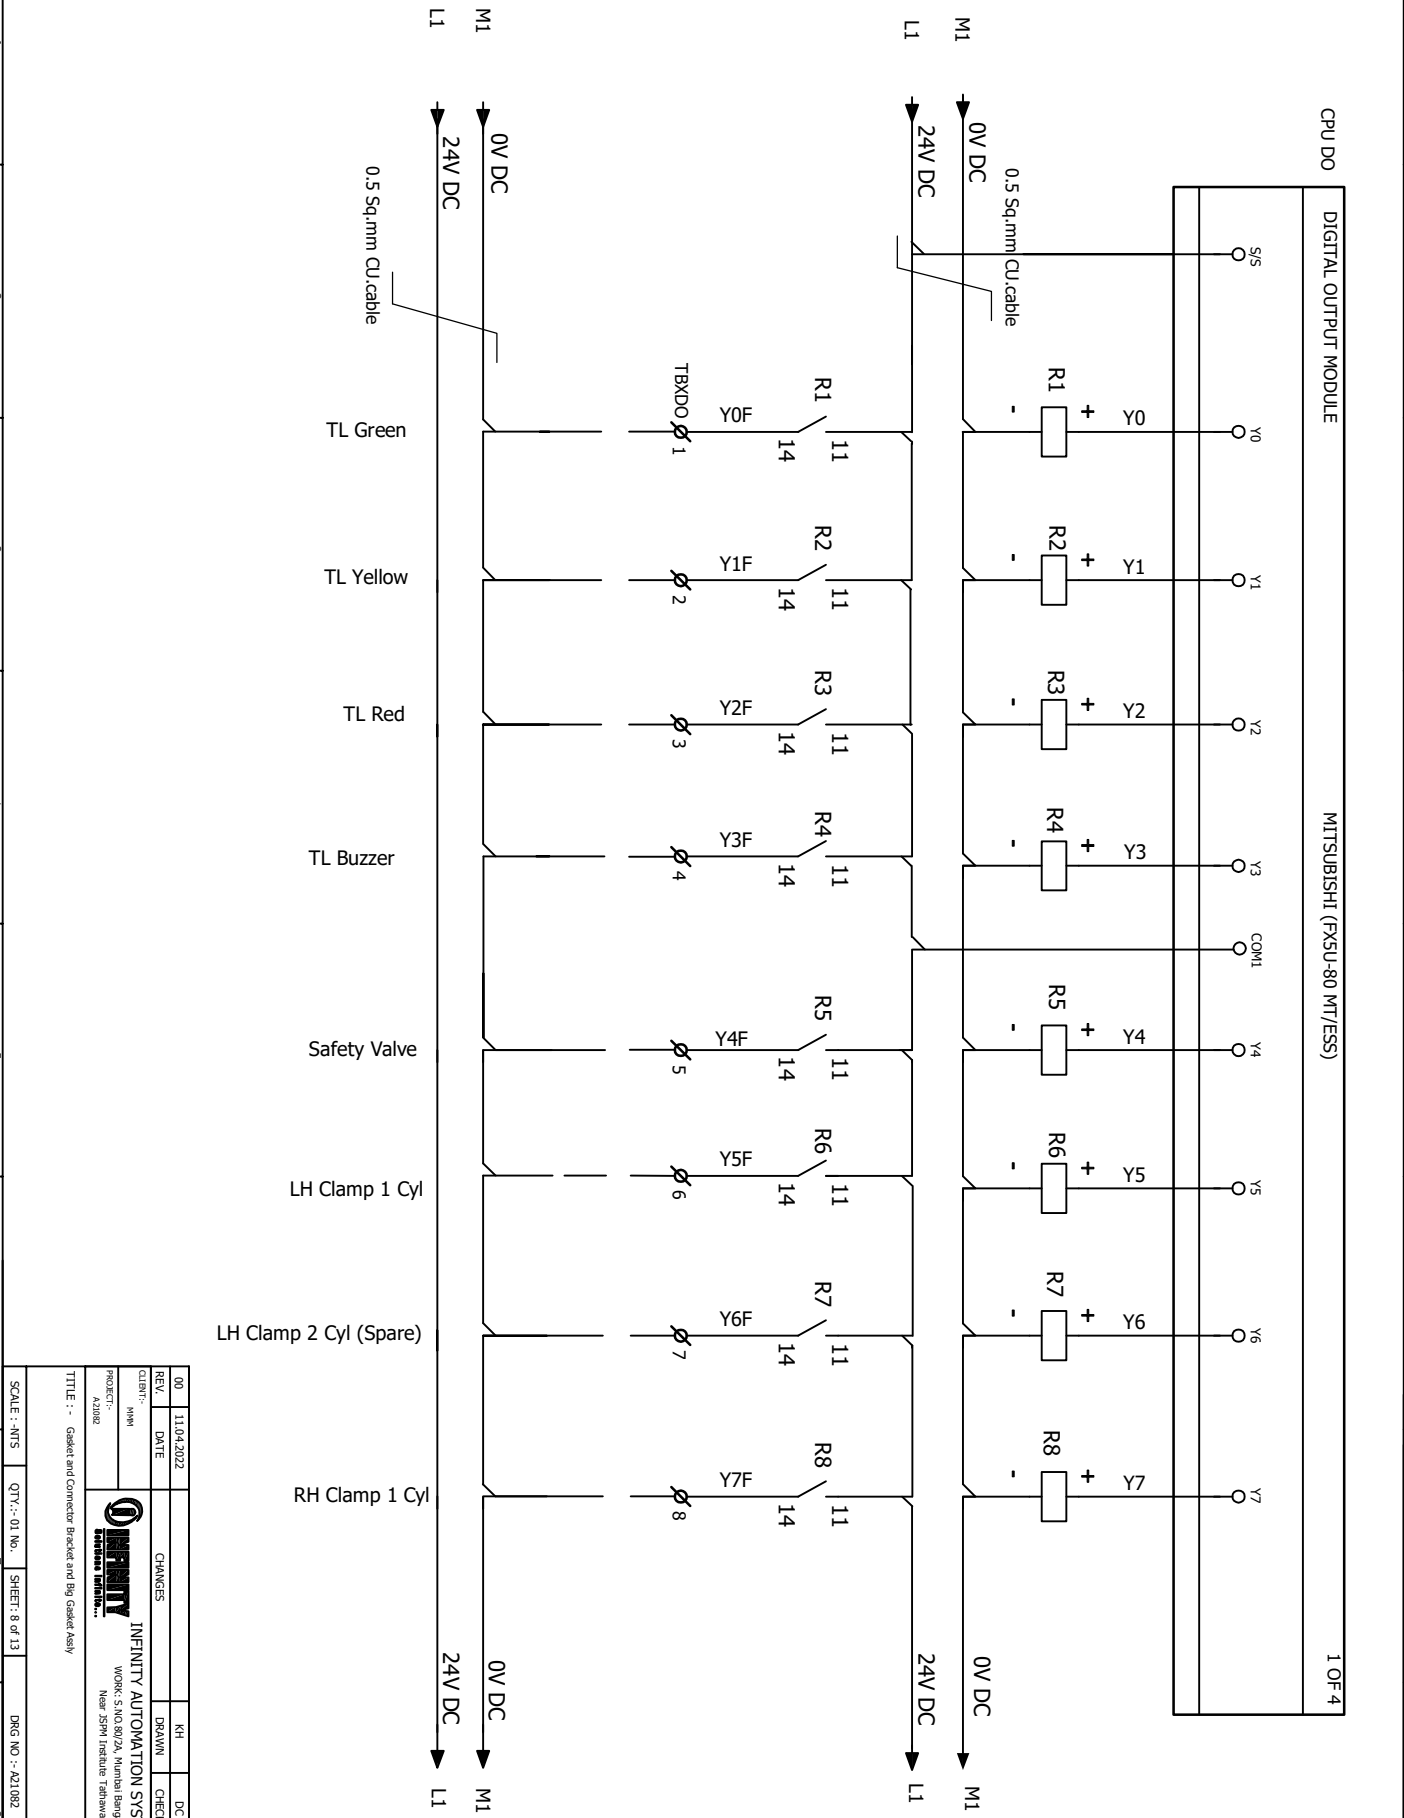


00	11/04/2022	CHANGES	KH	DC	PW
REV.	DATE		DRAWN	CHECKED	APPROVED
CLIENT:-					
PROJECT:-					
21082					
TITLE :- Gasket and Connector Bracket and Big Gasket Assy					
SCALE :- MTS QTY :- 01 No. SHEET: 8 of 13 DRG NO :- A21082 REV :- 00					



INFINITY AUTOMATION SYSTEMS PVT. LTD.
WORK: S.NO.80/2A, Mumbai Bypass Highway,
Near 57th Institute, Tarapur, Pune - 410033



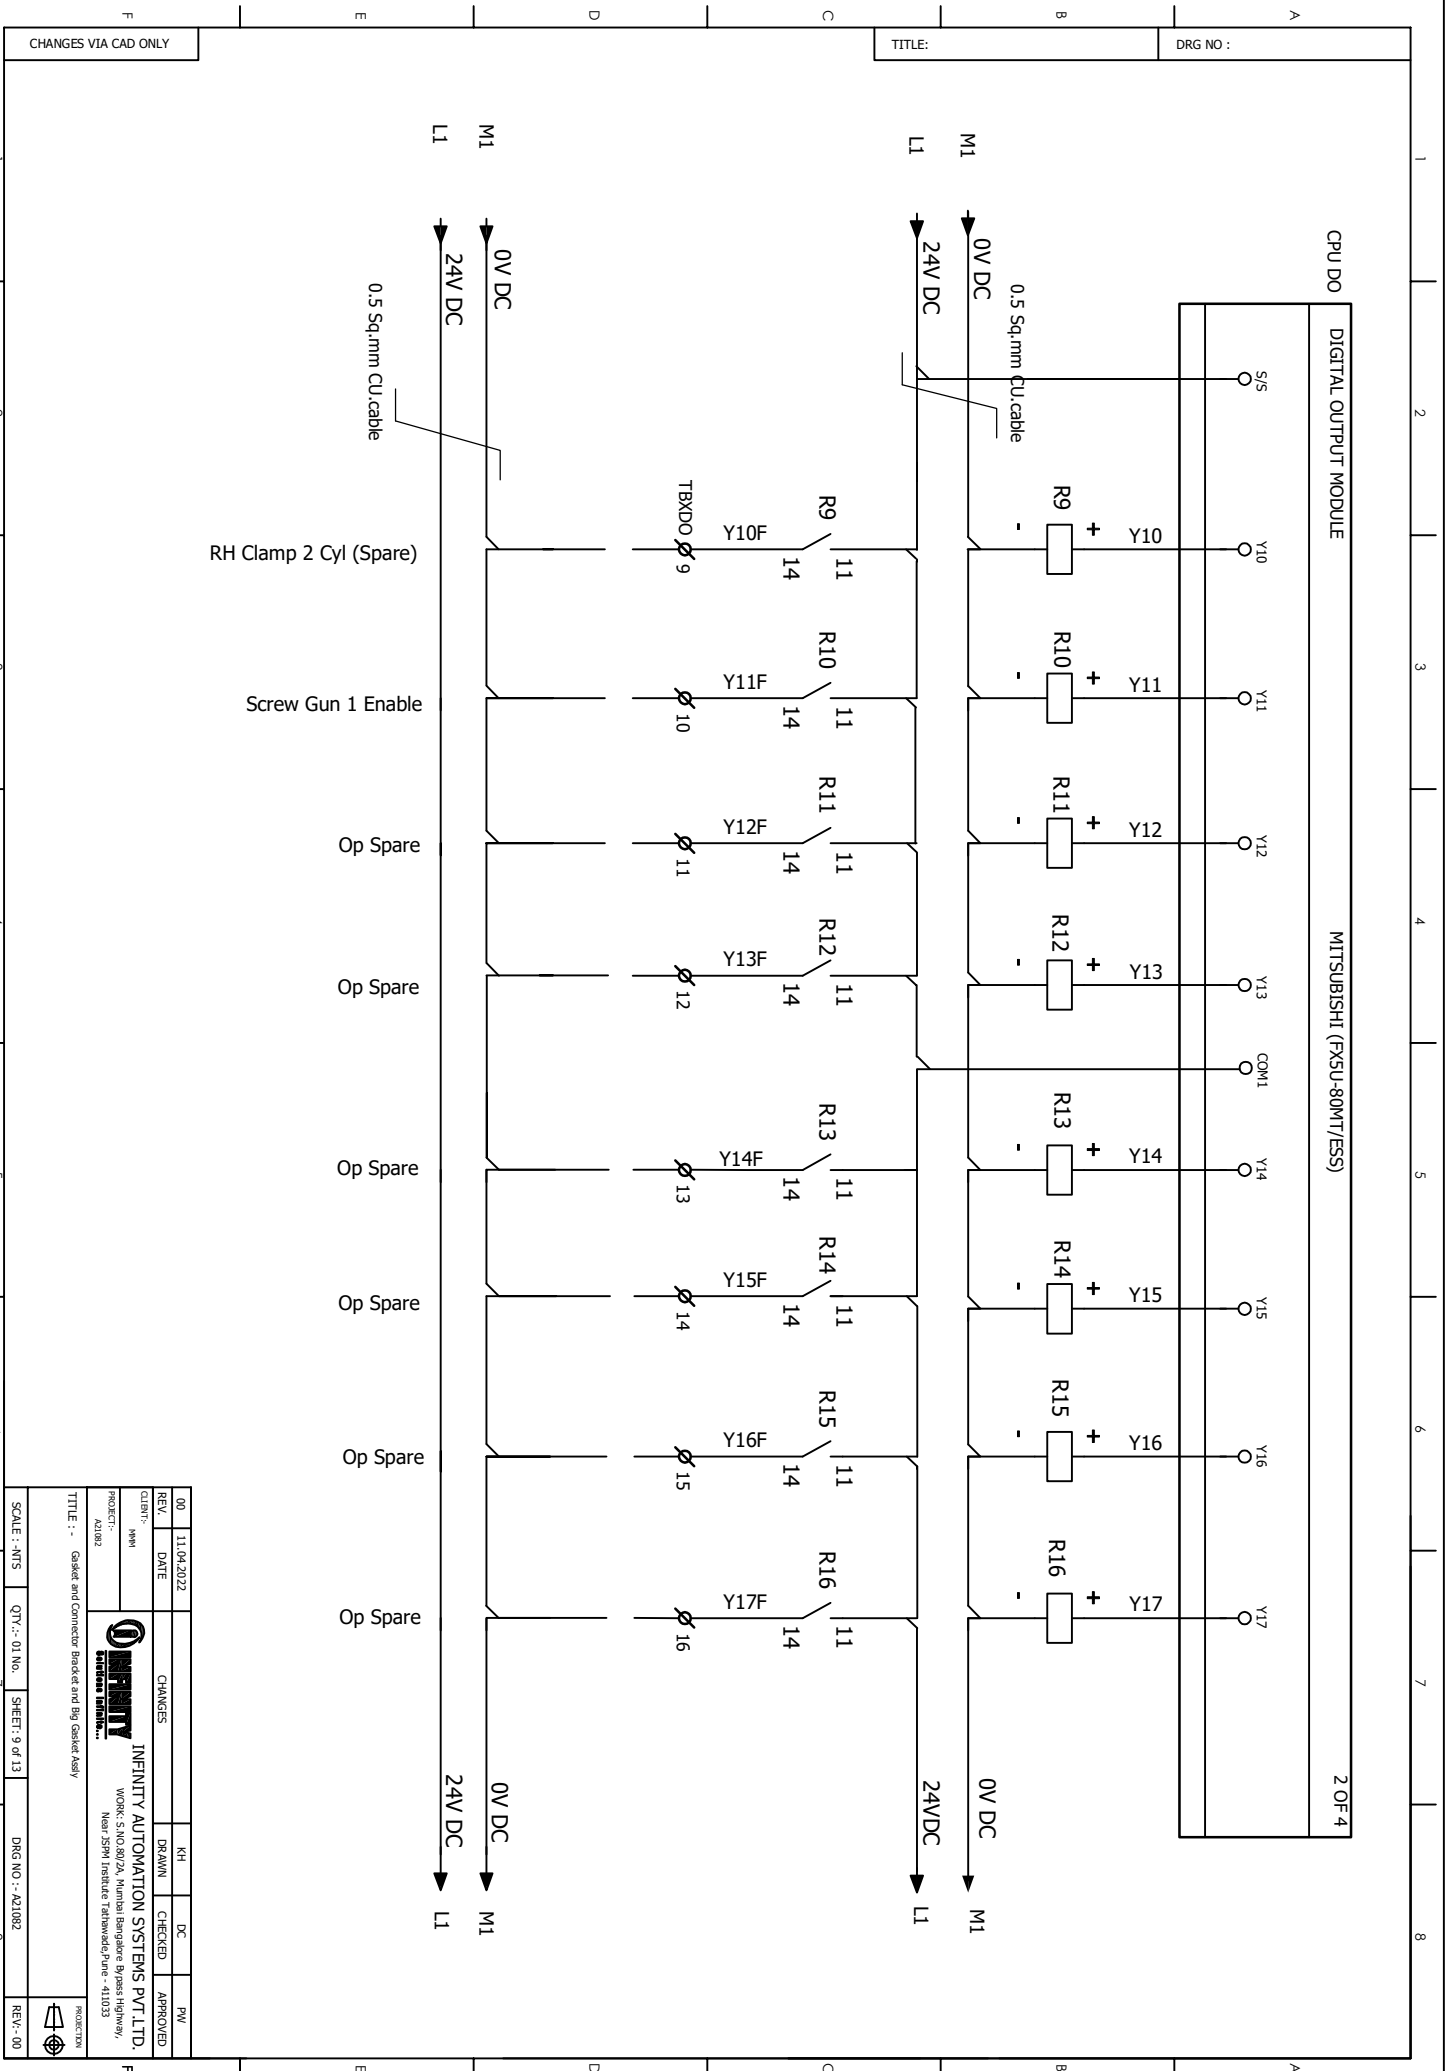

PROJECT: A21082	00	11.04.2022					
	REV.	DATE	CHANGES	WH	DC	PPV	
CLIENT: NPH				DRAWN	CHECKED	APPROVED	




INFINITY SYSTEMS PTE. LTD.

WORKS: S NO 80/22, Muthu Bangalore By-pass Highway,
Near JSPM Institute Technology,Pune - 411033


TITLE :- Gasket and Connector Bracket and Big Gasket Assly

PROJECT 11

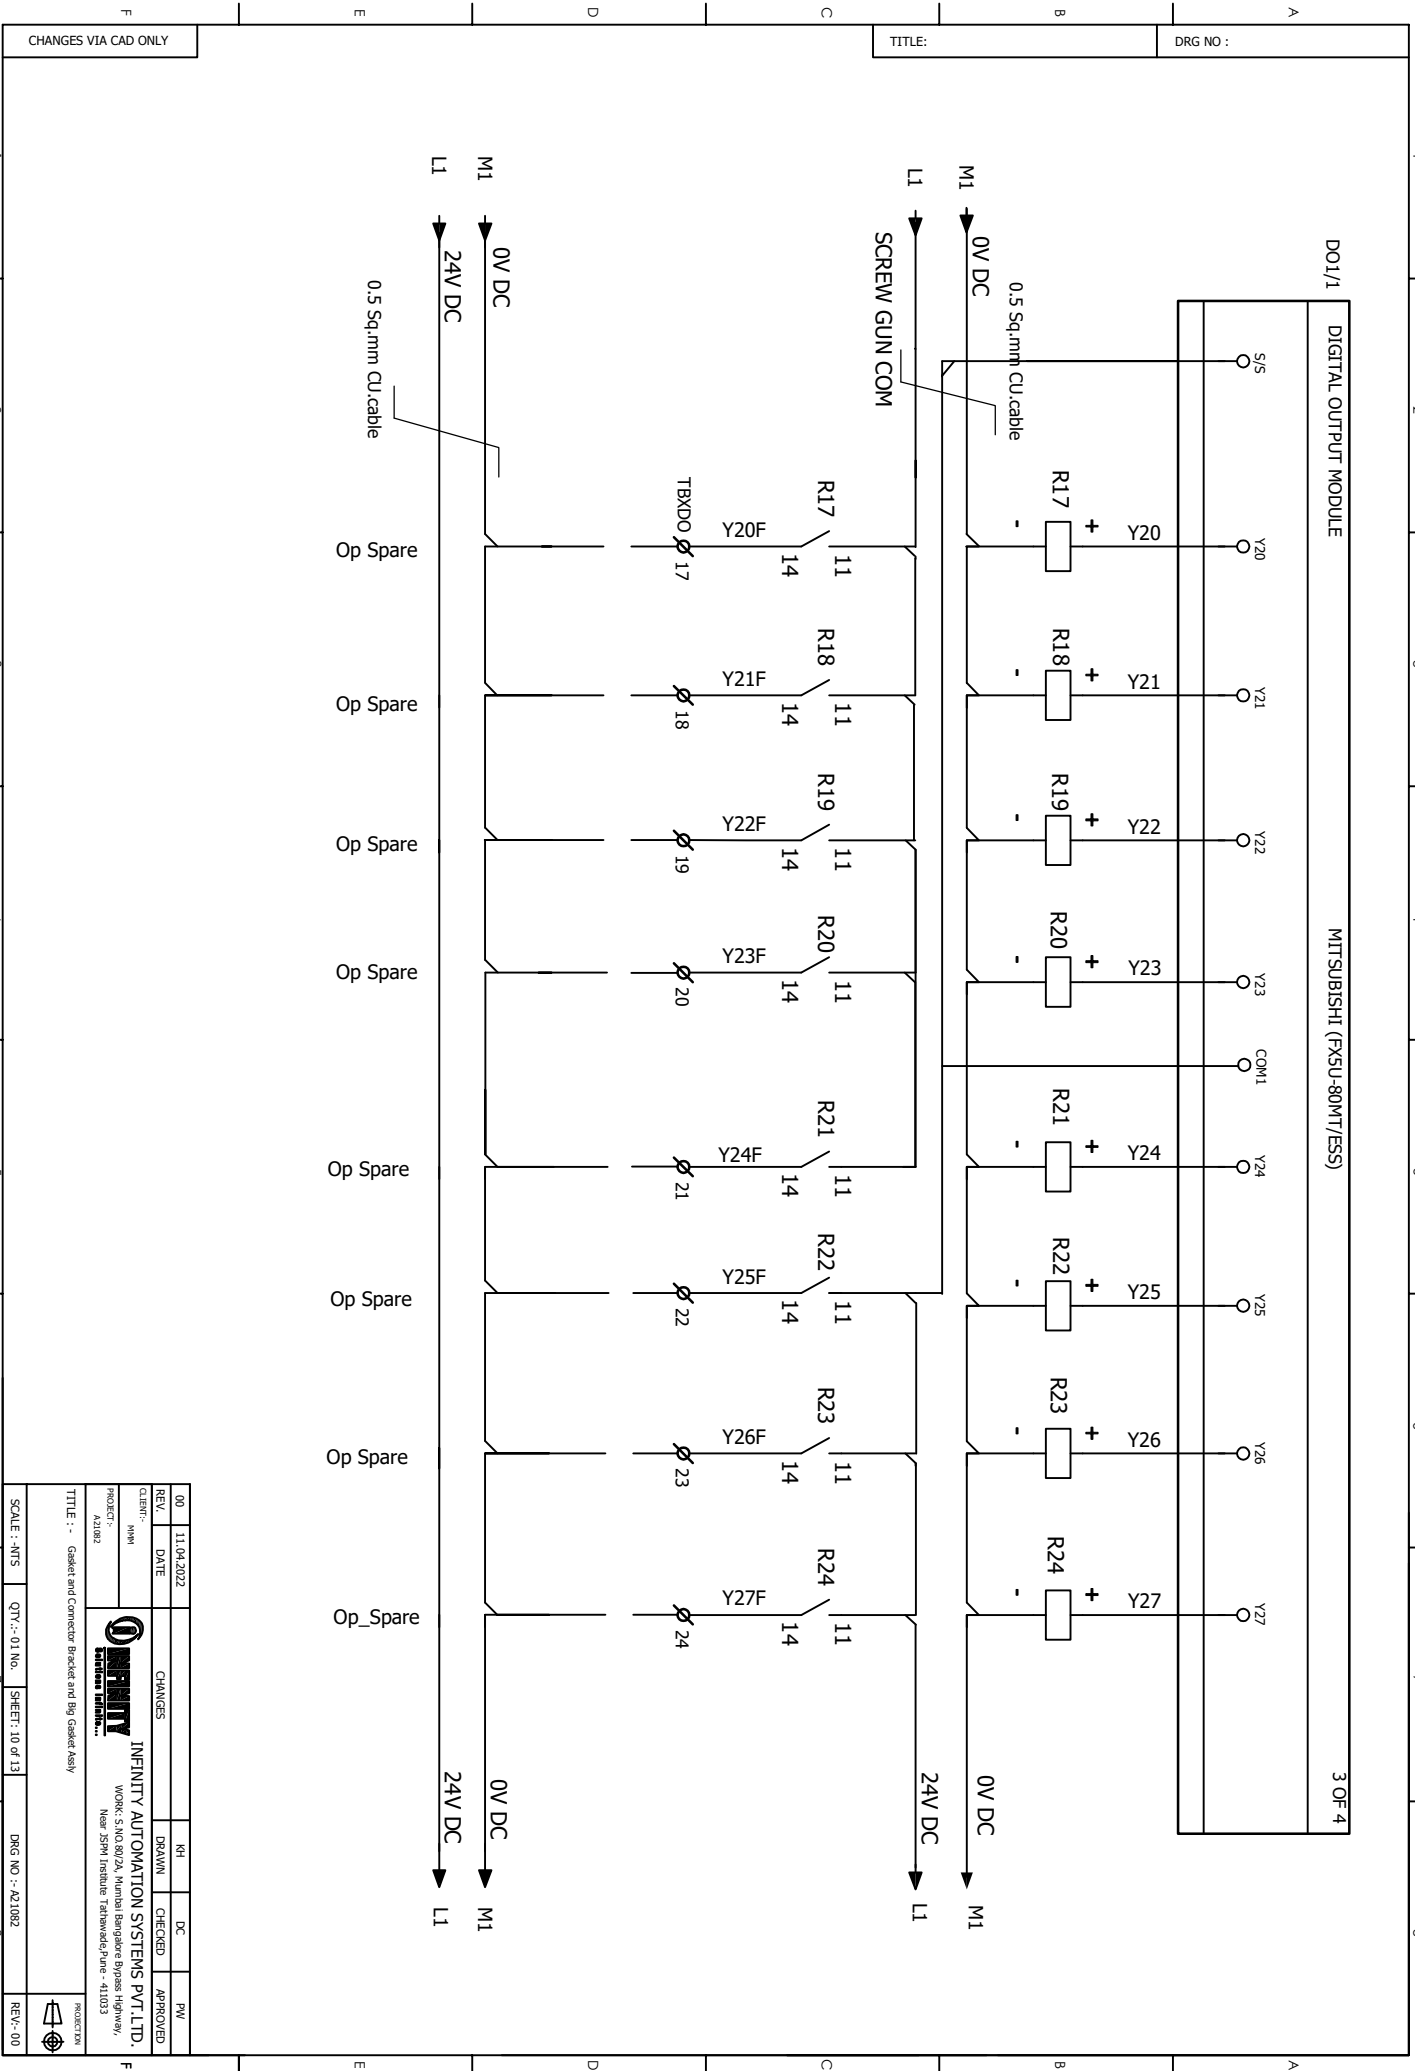

MITSUBISHI (FX5U-80MT/ESS)

4 OF 4

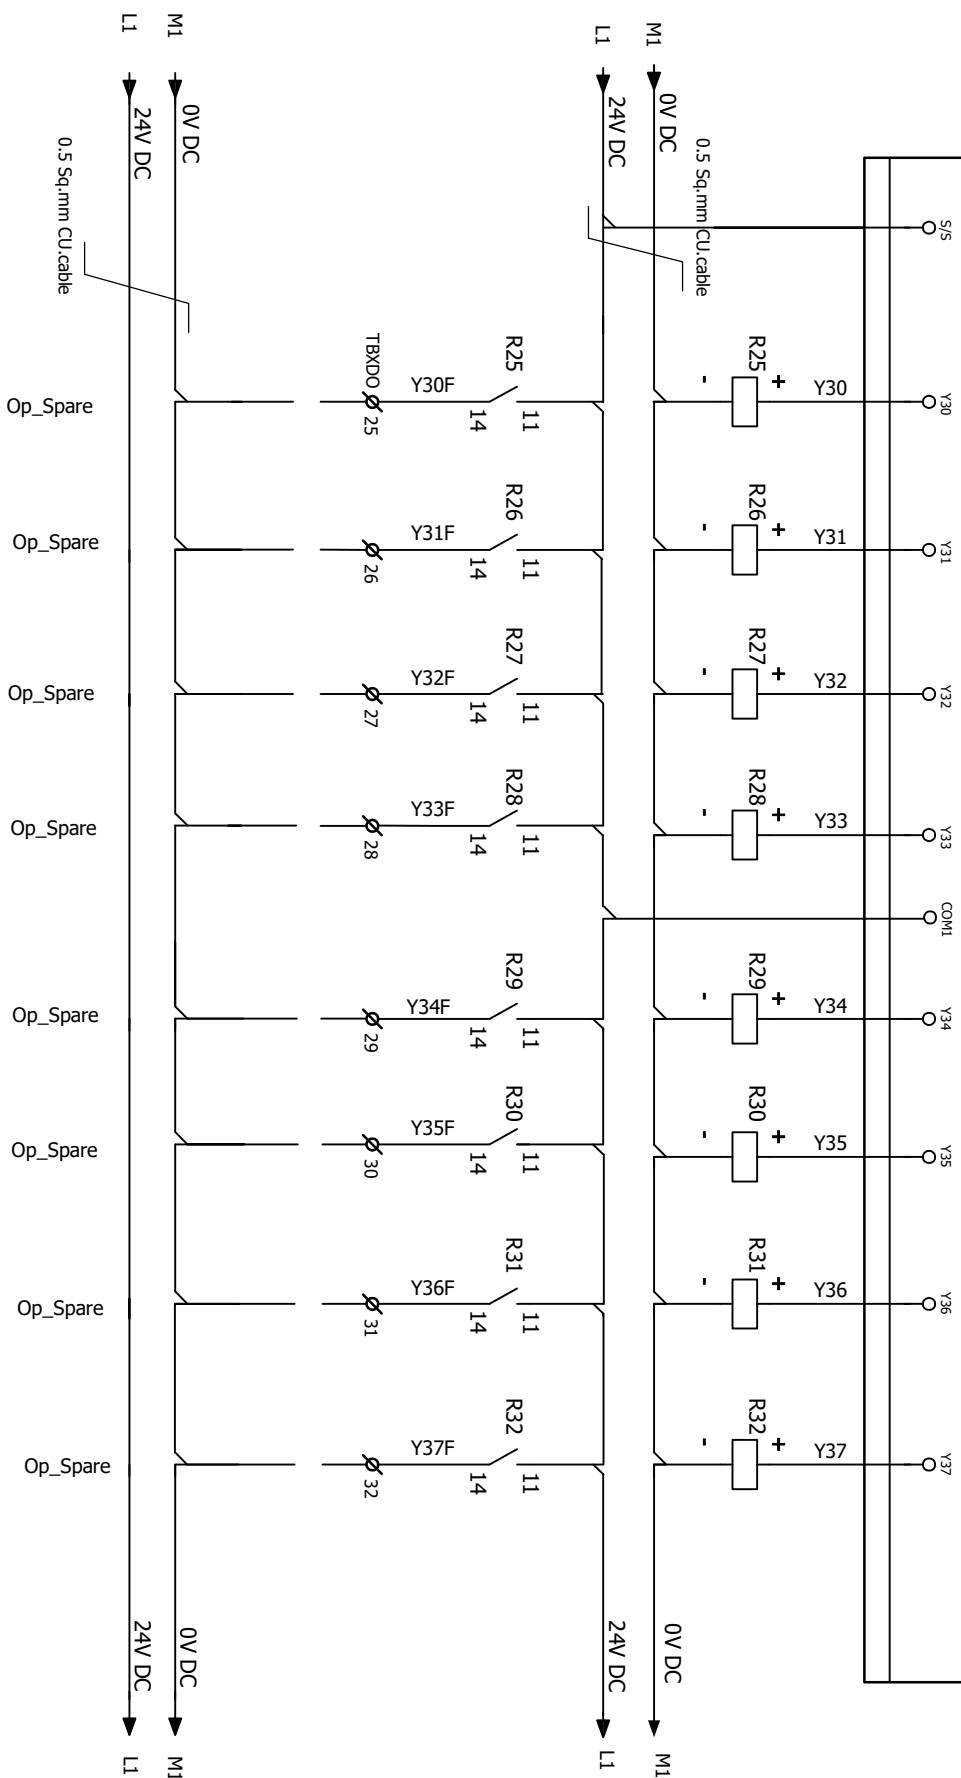

00	11/04/2022				
REV.	DATE	CHANGES	KN	DC	PW
CLEINT:			DRAWN	CHECKED	APPROVED
PM					
PROJECT:	 INFINITY AUTOMATA SYSTEMS PVT. LTD.				
ADDRESS	WORKS: SNO 80/2A, Mumbai Bhandara bypass highway, Near JSPM Institute Tehrawade Pune - 411033				

Gasket and Connector Bracket and Big Gasket Assy

1703

TERMINALS DETAILS- TERMINALS DETAILS - POWER/CONTROL TERMINALS

XPR	
WIRE NO.	TERM. NO.
R	1
N	2
PE	3

TBXI	
WIRE NO.	TERM. NO.
R3	1
N3	2
PE	3

TBX2	
WIRE NO.	TERM. NO.
R2	1
N2	2

24V & 0V DC TBX1			
TERM. NO.	1	3	
WIRE NO.	L1	L1	
TERM. NO.	2	4	
WIRE NO.	L1	L1	
TERM. NO.	5	6	
WIRE NO.	M1	M1	
TERM. NO.	7	8	
WIRE NO.	M1	M1	

TBM DI	
TERM. NO.	WIRE NO.
1	X0
3	X2
5	X4
7	X6
9	X10
11	X12
13	X14
15	X16
17	X20
19	X22
21	X24
23	X26
25	X30
27	X32
29	X34
31	X36
33	X40
35	X42
37	X44
39	X46

TERM. NO.		WIRE NO.	
1	3	Y0F	2
5	7	Y2F	4
9	11	Y4F	6
13	15	Y6F	8
17	19	Y10F	10
21	23	Y12F	12
25	27	Y14F	14
29	31	Y16F	16
33	35	Y20F	18
37	39	Y22F	20
		Y24F	22
		Y26F	24
		Y30F	26
		Y32F	28
		Y34F	30
		Y36F	32
		Y40F	34
		Y42F	36
		Y44F	38
		Y46F	40

00	11/04/2022						
REV.	DATE	CHANGES	KH	DC		PW	
CLIENT:	APM						
PROJECT:	A2082	 INFINITI INFINITY AUTOMATION SYSTEMS PVT. LTD. WORKS: S NO.82/A, HUBBALL BANGLORE HIGHWAY/NEAR 3RD FLOOR, COLLEGE HATHWADI PUNE - 411003					
TITLE :-		Gasket and Connector Bracket and Big Gasket Assy					
SCALE :- NTS	QTY:-: 01 No.	SHEET: 13 of 13	DRG NO :- A21053		REV:- 00		
							