


USER MANUAL

STATION 1: HOUSING TO EXTENSION BACKSIDE SCREWING STATION 2: HOUSING TO EXTENSION BACKSIDE SCREWING

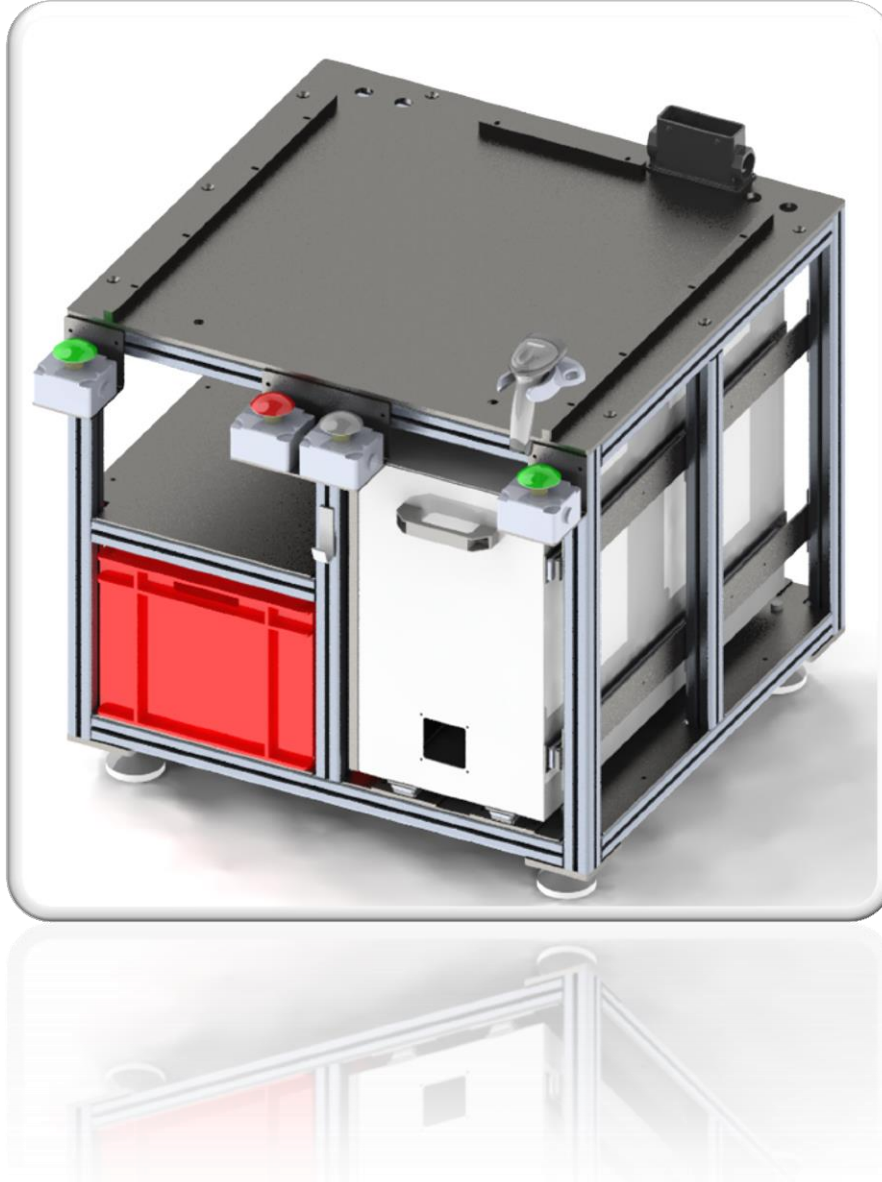

CLIENT NAME:

MARELLI MOTHERSON AUTOMOTIVE LIGHTING INDIA PRIVATE LIMITED
Ambethan 165/1

MACHINE MANUFACTURED BY:

INFINITY AUTOMATION SYSTEMS PVT LTD.

Unit 2:S. No. 80/2A, Mumbai Bangalore Bypass Highway

Near JSPM Institute,

Tathawade, Pune-411033.

Contents

1. Introduction	3
2. Safety regulations	4
2.1 Term definitions.....	4
2.2 Significance of the safety regulations	4
2.3 Information and symbols	4
2.3.1 Warning and safety notices	4
2.3.2 Notes and symbols in the manual.....	5
2.4 Application limitations.....	5
2.5 Do's and Don'ts for PCBA+Metal Plate +EMI Shield Assembly LH & RH Station	6
3. DESCRIPTION OF THE MACHINE.....	7
3.1 Layout of Station:	7
3.2 Description of Station:	7
3.3 Assembly Drawings:.....	8
3.4 Pneumatic Drawings:	10
3.5 Operation	12
3.5.1 Safety regulations for PCBA +Metal Plate +EMI Shield Assembly LH & RH Station.....	12
3.5.2 Steps for Operation Sequence	12
4. LIFTING, TRANSPORTATION & PACKAGING:	13
4.1 Lifting Arrangement:	13
4.2 Transportation:	13
4.3 Packaging:	13
5. HMI SCREENS	14
6. SPARE LIST.....	24
7. FLOW CHART.....	29
8. TROUBLESHOOT.....	30
9. ELECTRICAL DRAWING.....	31

1. INTRODUCTION

We are certain that you have made the right choice with our product and thank for your trust.

For your personal safety

Before carrying out any activities on or with the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station, please carefully read these operating instructions first, in particular the chapter on "Safety regulations".

Application area of these operating instructions

These operating instructions describe the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station and provide all information required for safe operation and maintenance of functionality. Please keep these operation instructions available at all times for all persons involved with the machine.

Questions or unclear points

Please contact immediately if you have any questions or unclear points:
Original language of assembly instructions is English.

© Copyright Infinity Automation Systems Pvt. Ltd.

2. SAFETY REGULATIONS

2.1 Term definitions

The following terms are used with regards to safety:

Personnel qualification

The work to be implemented with or on the product is described in the corresponding chapters in the operating instructions. The personnel qualifications listed in this chapter (in "Introduction") describes the minimum requirements for personnel regarding training and competences for implementing this work.

Personnel

Personnel are people who meet the personnel qualifications. Only such personnel are authorized to implement the work described in the applicable chapters.

User

Users are persons who cannot be identified as personnel but who still carry out activities with or on the product.

Operator

The operator is the owner of the product. This is irrespective of whether the product is:

- Operated as a stand-alone machine
- Operated as part of a system or
- Operated by a third party

Product life phases

The product life phases are the state or usage phases of the product. These range from leaving the assembly hall to disassembly and disposal, and are divided into correspondingly logical sections (chapters) in these operating instructions.

2.2 Significance of the safety regulations

These safety regulations contain all behavior regulations and generally applicable danger information. The safety of the user and the personnel can only be ensured when these safety regulations and the safety information listed in the individual chapters are strictly complied with and followed. The operator is responsible for the enforcement.

2.3 Information and symbols

2.3.1 Warning and safety notices

The warning and safety notices used in these operating instructions have the following significance:

	 CAUTION Indicates a hazard with low risk which, if not avoided, could result in minor or moderate injury.
--	--

	 WARNING Indicates a possible hazard with medium risk which, if not avoided, could result in death or serious injury.
--	---

	 DANGER Indicates an immediate hazard with high risk which, if not avoided, will result in death or serious injury.
--	---

NOTICE	
Indicates practical information and tips that permit the best use of machinery, system or equipment.	

CAUTION
To warn of material damage.

2.3.2 Notes and symbols in the manual.

The following information and symbols are used in manual.

Warning signs	Mandatory sign	Mandatory sign
Danger of hand injuries	Wear safety goggles	Wear gloves
		

2.4 Application limitations

The following technical operating instructions and ambient conditions must be complied with for the operation of the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station.


Environmental conditions	
Working temperature	+10 ... +50 °C
Storage temperature	- 10 ... +70 °C
Relative humidity	Max. 90%, non-condensing
Mechanical power supply	
Operating pressure	2-6 bar
Mechanical	
Machine Weight	150kg Approx.
Electrical power supply	
Supply voltage	230 VAC
Input Power	8 kW
Full Load Current	16 Amp
Primary Fuse	32 Amp
Max. Short Circuit Interrupting Cap	14 Amp
Control Voltage	24 V

2.5 Do's and Don'ts for PCBA+Metal Plate +EMI Shield Assembly LH & RH Station


- Regular checking of penumatics parts.
- Regular checking of drag chain.
- Regular checking 2/2 valve.

3. DESCRIPTION OF THE MACHINE

3.1 Layout of Station:

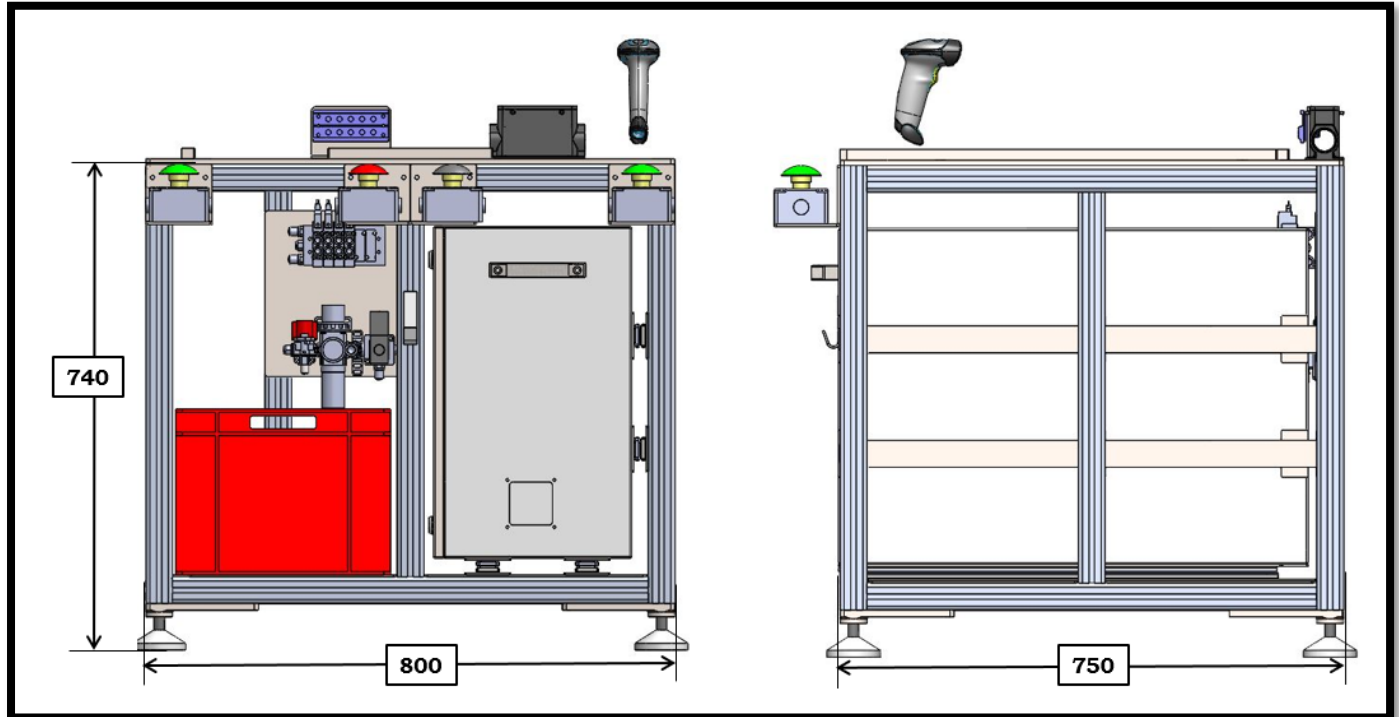

3.2 Description of Station:

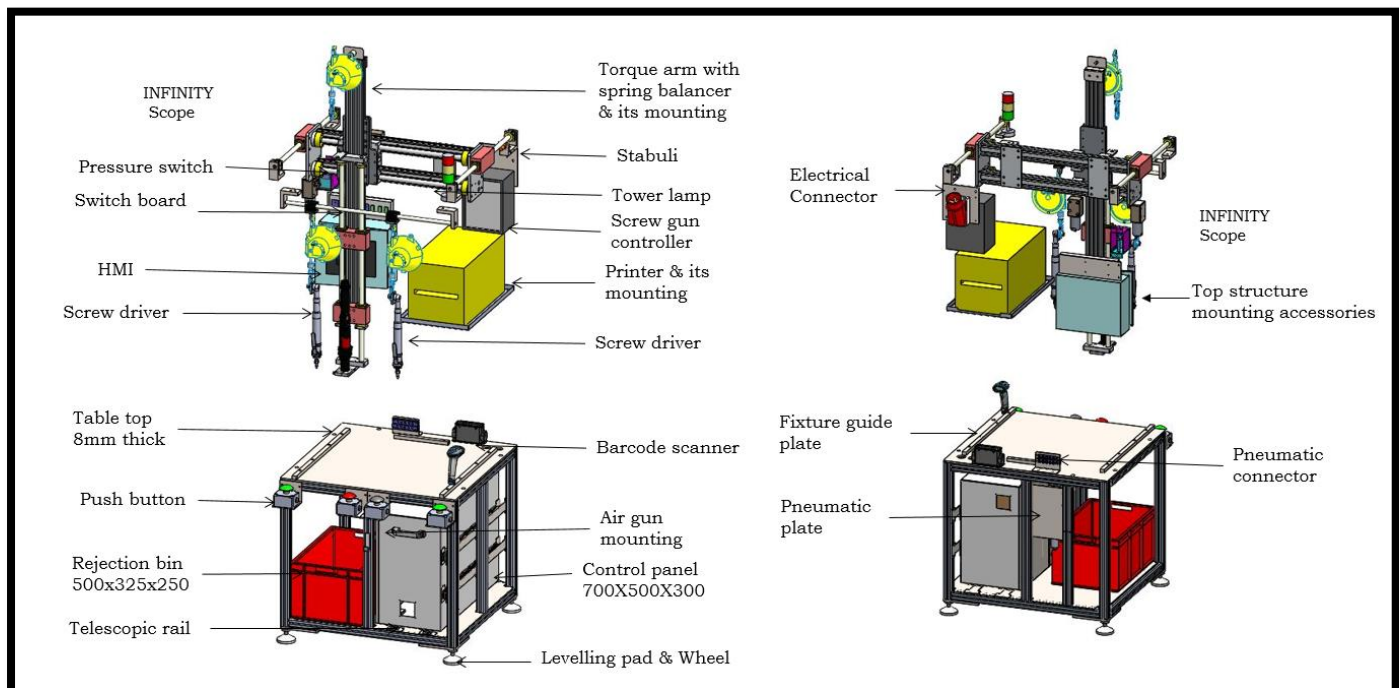

3.3 Assembly Drawings:

**** IF ANY DOUBT PLEASE ASK ****

NOTES:-

1. WHEREVER WELD, USE 2 DOWEL & 2 BOLT BEFORE WELDING.
2. DO NOT WELD ALUMINUM MATERIAL WITHOUT SPECIAL NOTE.
3. PART SHALL BE FREE FROM ALL KINDS OF DEFECTS.
4. UNMOUNTED CHAMFER SHALL BE 18-45° ALL OVER.
5. REMOVE BURR AFTER MACHINING.
6. UNMOUNTED TOLERANCE FOR SLOT OR HOLE
- 6.1 POSITION TOLERANCE FOR DOWEL HOLE WILL BE WITHIN 0.1 mm.
- 6.2 POSITION TOLERANCE FOR SLOT OR HOLE IN OPEN TOLERANCE THERE WILL BE CONSIDER IN 0.2 mm.
- 6.3 WHEREVER PIN / SHANK (0.1 mm).


USE BLUE COLOR FOR FORWARD AND BLACK COLOR FOR BACKWARD PNEUMATIC PIPE

ALL dimensions are in "mm"


ZONE	REV.	DESCRIPTION	DATE	APPROVED	QTY.
1	1	SCREW GUN CONTROLLER			1
2	1	SYMBOL, SCANNER HOLDER 11-66553			1
3	1	STD 20.10.00.00.01			1
4	1	A21082.03.08.01.06			1
5	1	A21082.03.01.01.09			1
6	1	A21082.03.08.01.07			1
7	1	A21082.03.01.01.04			1
8	1	A21082.03.01.01.05			1
9	1	A21082.03.01.01.06			1
10	1	A21082.03.01.01.07			1
11	1	A21082.03.01.01.08			1
12	1	A21082.03.01.01.09			1
13	1	A21082.03.01.01.10			1
14	1	A21082.03.01.01.11			1
15	1	A21082.03.01.01.12			1
16	1	A21082.03.01.01.13			1
17	1	A21082.03.01.01.14			1
18	1	A21082.03.01.01.15			1
19	1	A21082.03.01.01.16			1
20	1	A21082.03.01.01.17			1
21	1	A21082.03.01.01.18			1
22	1	A21082.03.01.01.19			1
23	1	A21082.03.01.01.20			1
24	1	A21082.03.01.01.21			1
25	1	A21082.03.01.01.22			1
26	1	A21082.03.01.01.23			1
27	1	A21082.03.01.01.24			1
28	1	A21082.03.01.01.25			1
29	1	A21082.03.01.01.26			1
30	1	A21082.03.01.01.27			1
31	1	A21082.03.01.01.28			1
32	1	A21082.03.01.01.29			1
33	1	A21082.03.01.01.30			1

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	A21082.03.01.01.01	CONTROL PANEL	1
2	A21082.03.01.01.02	FRAME	1
3	A21082.03.01.01.03	SEPARATOR PLATE	1
4	A21082.03.01.01.04	GUIDE PLATE	1
5	A21082.03.01.01.05	GUIDE PLATE 2	1
6	A21082.03.01.01.06	WHEEL	1
7	A21082.03.01.01.07	WHEEL MOUNTING PLATE	1
8	A21082.03.01.01.08	REFLECTION RIM	1
9	A21082.03.01.01.09	BARCODE SCANNER	1
10	A21082.03.01.01.10	INFINITY TOWER LAMP	1
11	A21082.03.01.01.11	SCREW GUN	1
12	A21082.03.01.01.12	SCREW GUN CONTROLLER	1
13	A21082.03.01.01.13	EMERGENCY SINGLE PB	1
14	A21082.03.01.01.14	RESET SINGLE PB	1
15	A21082.03.01.01.15	TOP STRUCTURE MOUNT	1
16	A21082.03.01.01.16	INDO SOCKET ASSM	1
17	A21082.03.01.01.17	STD 20.10.00.00.01	1
18	A21082.03.01.01.18	STD 20.10.00.00.01	1
19	A21082.03.01.01.19	STD 20.10.00.00.01	1
20	A21082.03.01.01.20	STD 20.10.00.00.01	1
21	A21082.03.01.01.21	STD 20.10.00.00.01	1
22	A21082.03.01.01.22	STD 20.10.00.00.01	1
23	A21082.03.01.01.23	STD 20.10.00.00.01	1
24	A21082.03.01.01.24	STD 20.10.00.00.01	1
25	A21082.03.01.01.25	STD 20.10.00.00.01	1
26	A21082.03.01.01.26	STD 20.10.00.00.01	1
27	A21082.03.01.01.27	STD 20.10.00.00.01	1
28	A21082.03.01.01.28	STD 20.10.00.00.01	1
29	A21082.03.01.01.29	STD 20.10.00.00.01	1
30	A21082.03.01.01.30	STD 20.10.00.00.01	1
31	A21082.03.01.01.31	STD 20.10.00.00.01	1
32	A21082.03.01.01.32	STD 20.10.00.00.01	1
33	A21082.03.01.01.33	STD 20.10.00.00.01	1

THIS DOCUMENT IS A PROPERTY OF IASPL AND SHOULD NOT BE REPRODUCE

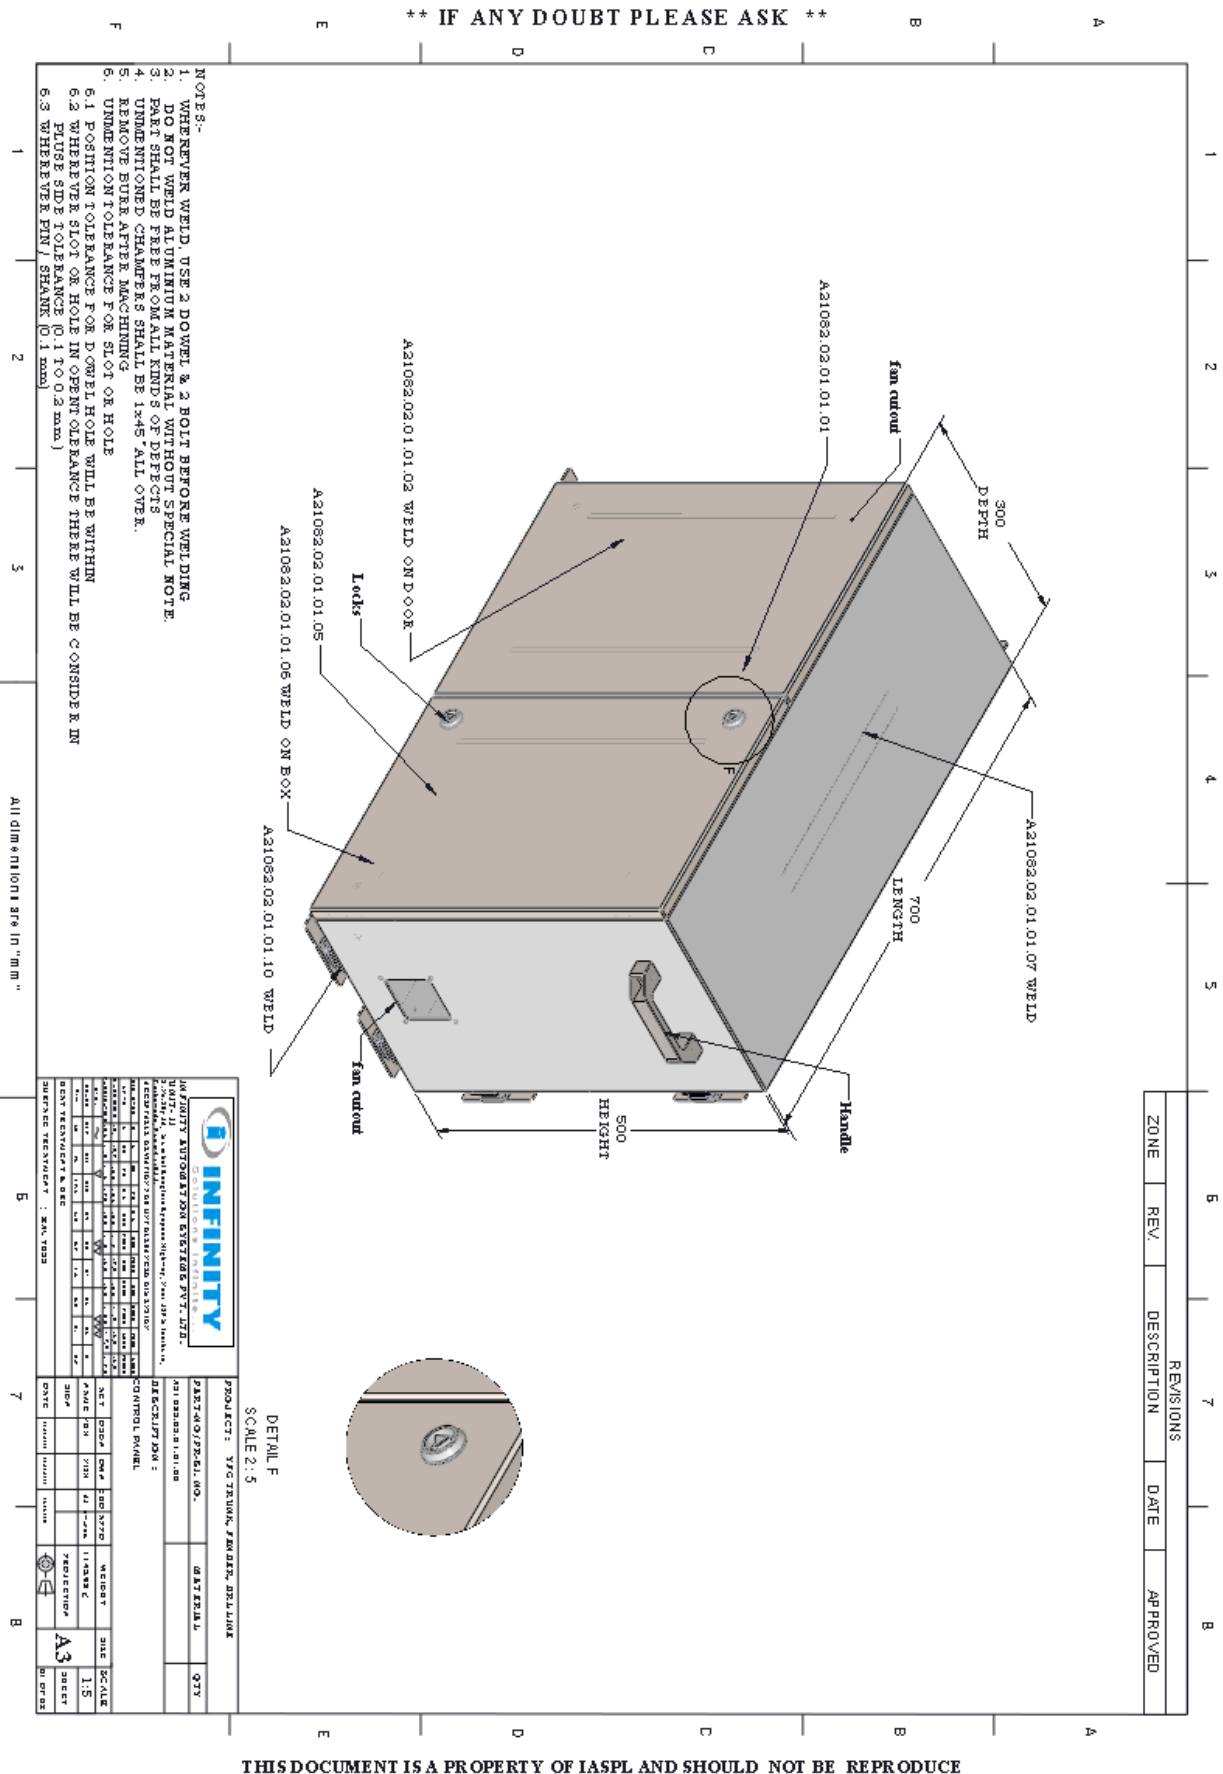

3.4 Pneumatic Drawings:

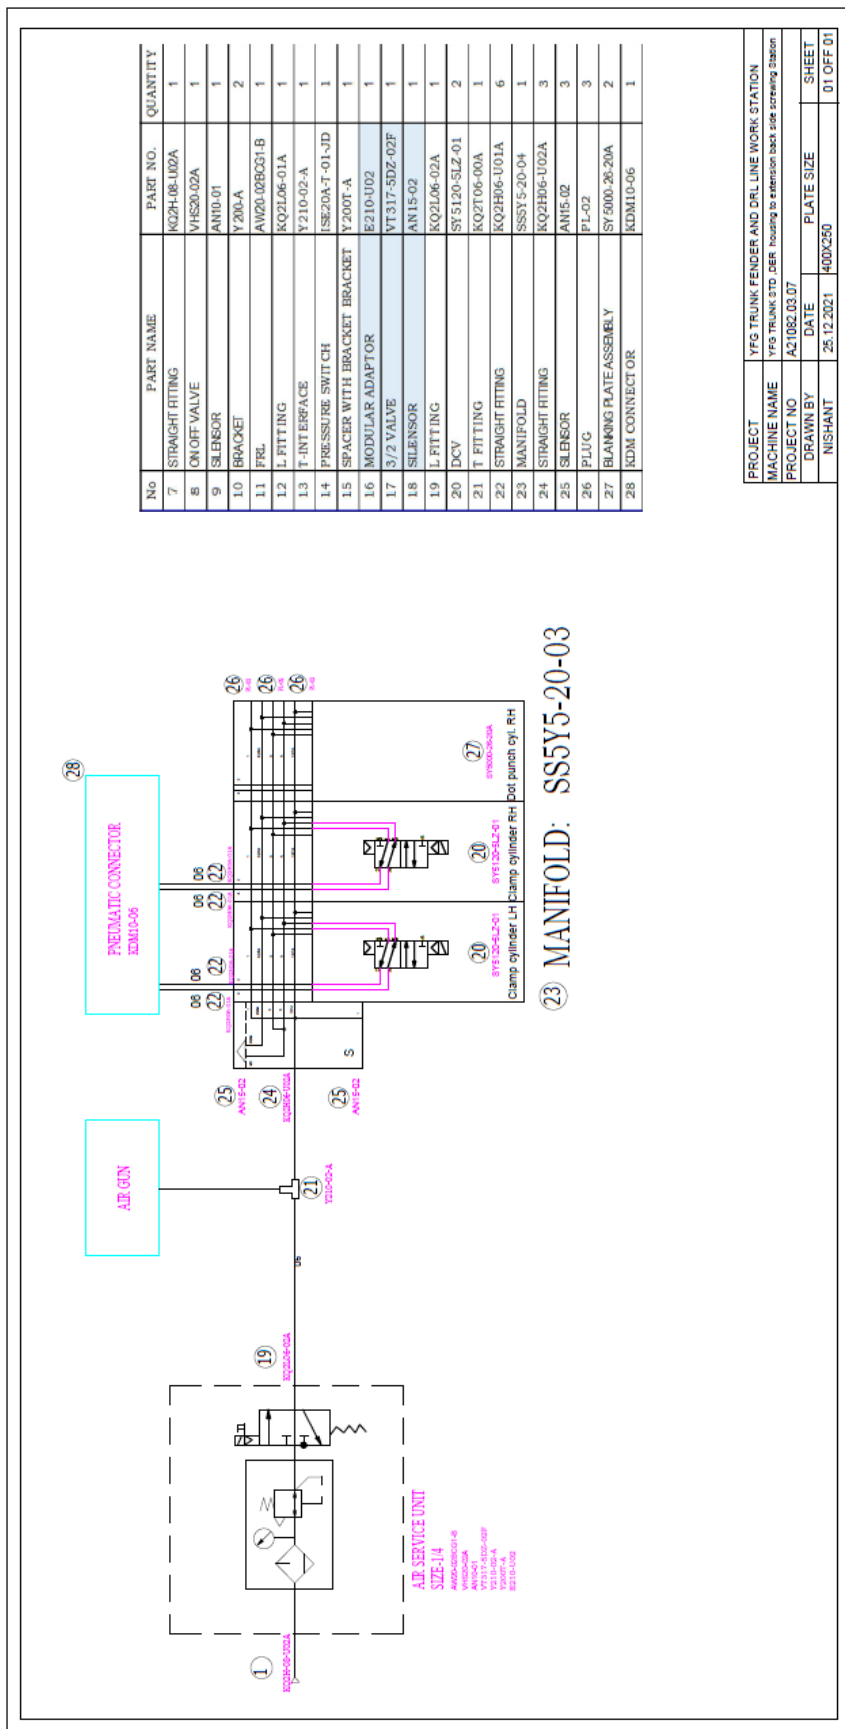



Screw Gun

3.5 Operation

3.5.1 Safety regulations for PCBA +Metal Plate +EMI Shield Assembly LH & RH Station

1. Any type of maintenance work done by authorized person.
2. Always turn off Machine switch while any type of maintenance work.

3.5.1.1 Personal Safety Equipment

All users are obliged to wear the following personal safety equipment for all work:

- Tightly fitting working clothes
- Safety goggles
- Gloves

3.5.2 Steps for Operation Sequence:

- Pick LH & RH housing from bin.
- Do the PCB generated barcode scan for conformation.
- Load LH & RH housing to extension screwing cavity
- Press cycle start (if barcode scanning ok then part get clamped & screw driver enable)
- Pick screw (5 no's)
- Pick screw driver
- Do the screwing LH extension to LH housing
- Pick screw (5 no's)
- Do the screwing RH extension to RH housing
- If screwing ok, then parts gets declamped.
- Unload both housing from fixture.

4. LIFTING, TRANSPORTATION & PACKAGING:

4.1 Lifting Arrangement:

For lifting of machine, there is fork lift.

4.2 Transportation:

Transfer the final test workstation and all of its separately packed associated components, in a closed vehicle or closed shipping container only. Each component of this machine should remain horizontal at all times during transport.

A fork truck should be used to load/offload the pallet holding this machine into/from vehicles.

4.3 Packaging:

Put final test workstation at an appropriate transport pallet that corresponds to the weight, and secure it against sliding. Protect each table from dirt and moisture by foil. Then house it completely.

Remove all components and subassemblies that are not permanently attached to the final test workstation, wrap them in plastic foil, and pack them in separate shipping containers.

Secure Component groups at the final test workstation against uncontrolled movement.

5. HMI SCREEN:

5.1. MAIN SCREEN:

- Click on 'MAIN MENU' button, below screen will appears.

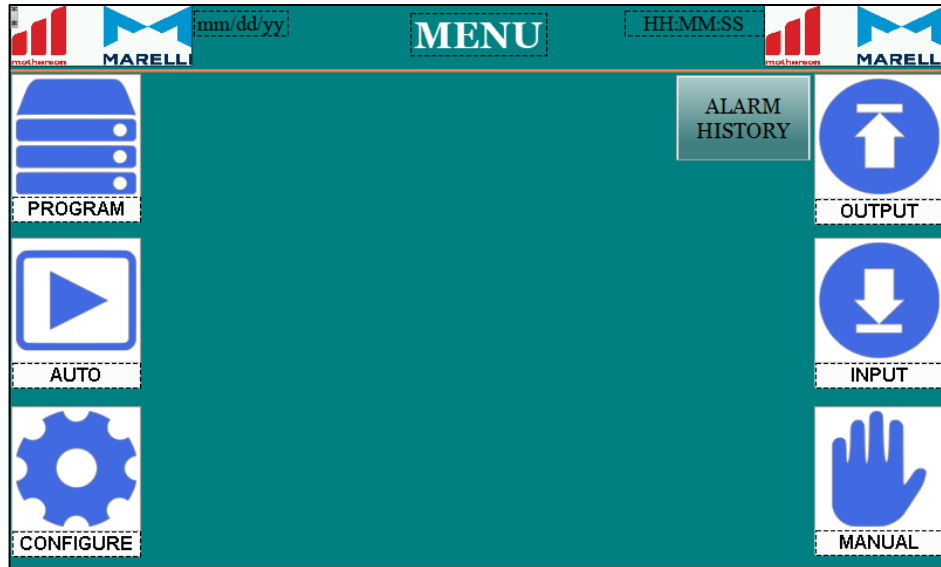


FIG.1.MAIN SCREEN

- The software has menu buttons as given below:
 1. Program
 2. Auto
 3. Manual
 4. Input
 5. Output
 6. Configuration
 7. Alarm History

5.2. PROGRAM SCREEN:

- Click on '**PROGRAM**' button, below screen appears.

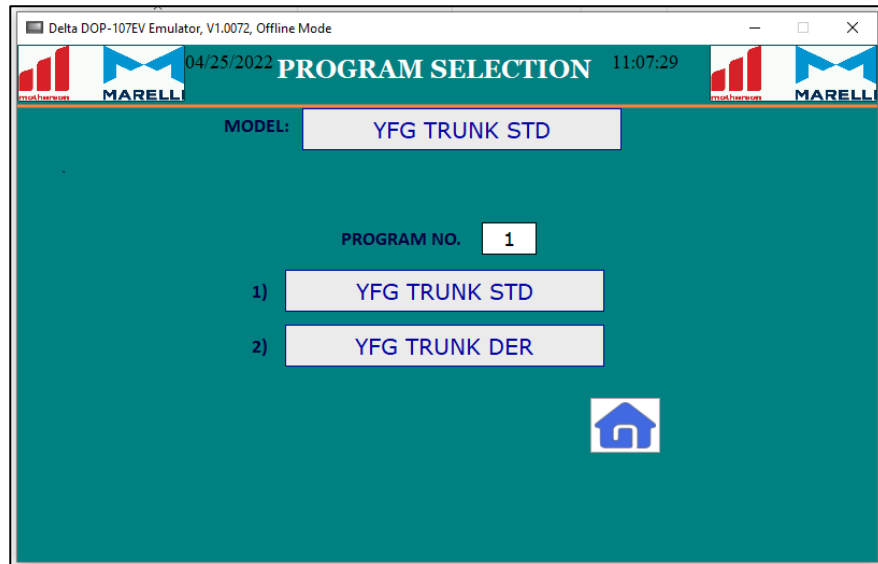


FIG.2.PROGRAM

- Here for program selection enter one or two in Program No. field
- Description is displayed in the fields below Program No.

5.3. AUTO:

- Click on 'AUTO' button, below screen appears.

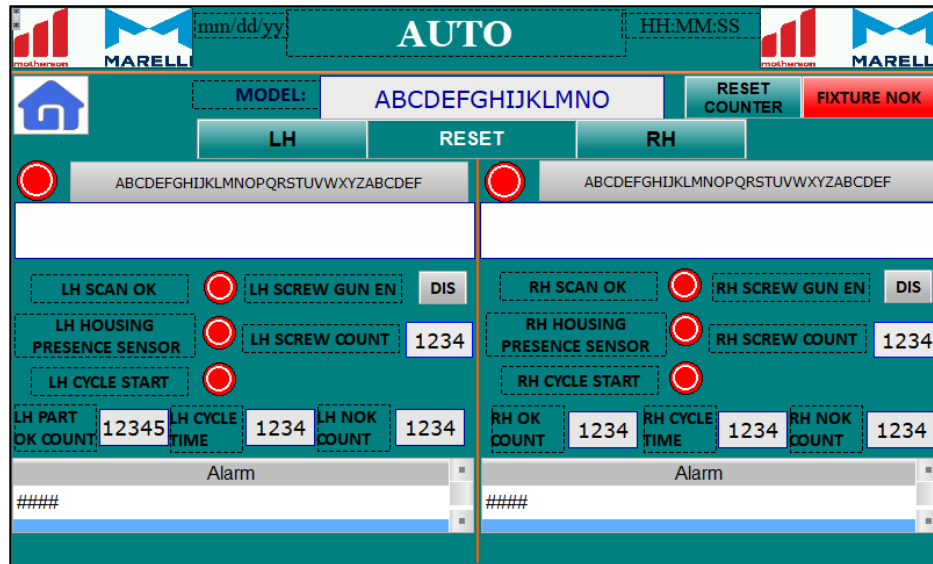


FIG.3.AUTO

- This screen display live cycle status.
- This screen shows cycle time is in second.
- Here also we display sensors, if it is present then it indicates with Green color and if it is not then indicates with Red color.
- It also indicates OK and NOK part count & screw count.

5.4. MANUAL:

- Click on 'MANUAL' button, below screen will appear.

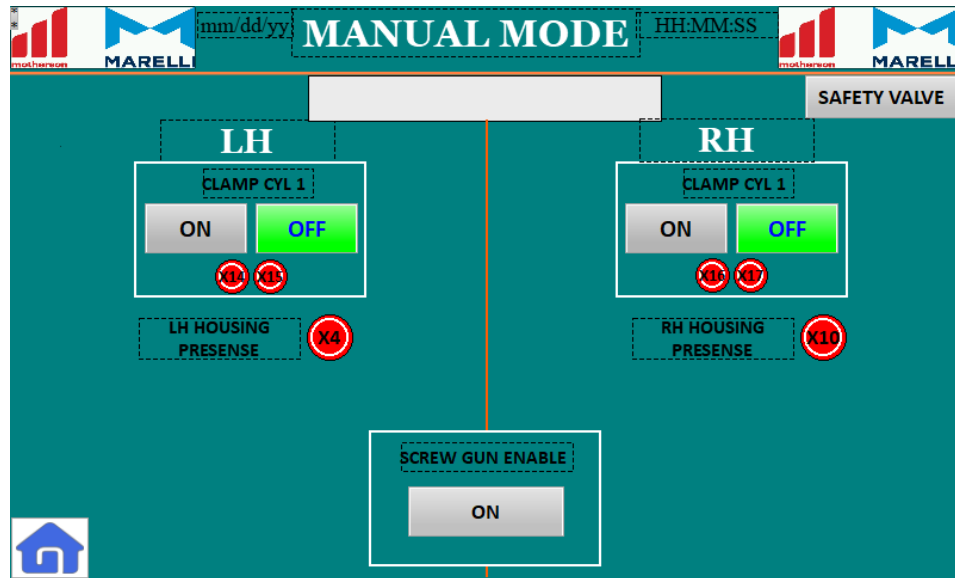


FIG.4.MANUAL OPERATION

- Here all the cylinders can be operated manually after switching the safety valve ON.
- Part Presence and Reed Switch feedback for indication.
- Screw gun can be enable & disable manually.
- Press **HOME** button to go back.

5.5. INPUT LIST:

- Click on 'INPUT' button, below screen will appear.

INPUTS	
Cycle Start PB 1	X0
Cycle Start PB 2	X1
Emergency PB	X2
Pressure Switch	X3
LH Housing Presense Sensor	X4
LH Part Presence 2(Spare)	X5
LH Part Presence 3(Spare)	X6
LH Part Presence 4(Spare)	X7
RH Housing Presense Sensor	X10
RH Part Presence 2(Spare)	X11
RH Part Presence 3(Spare)	X12
RH Part Presence 4(Spare)	X13
LH Clamp1 Fwd RS	X14
LH Clamp2 Fwd RS	X15
RH Clamp1 Fwd Rs	X16
RH Clamp2 Fwd RS	X17

FIG.5.1.INPUT LIST

INPUTS	
LH Fixture Selection 1	X20
Ip Spare	X21
Screw Gun 1 NOK	X22
Screw Gun 1 OK	X23
LH Fixture Selection 2	X24
LH Fixture Selection 3	X25
Ip Spare	X26
Ip Spare	X27
Ip Spare	X30
Ip Spare	X31
Ip Spare	X32
Ip Spare	X33
Ip Spare	X34
Ip Spare	X35
Ip Spare	X36
Ip Spare	X37

FIG.5.2.INPUT LIST


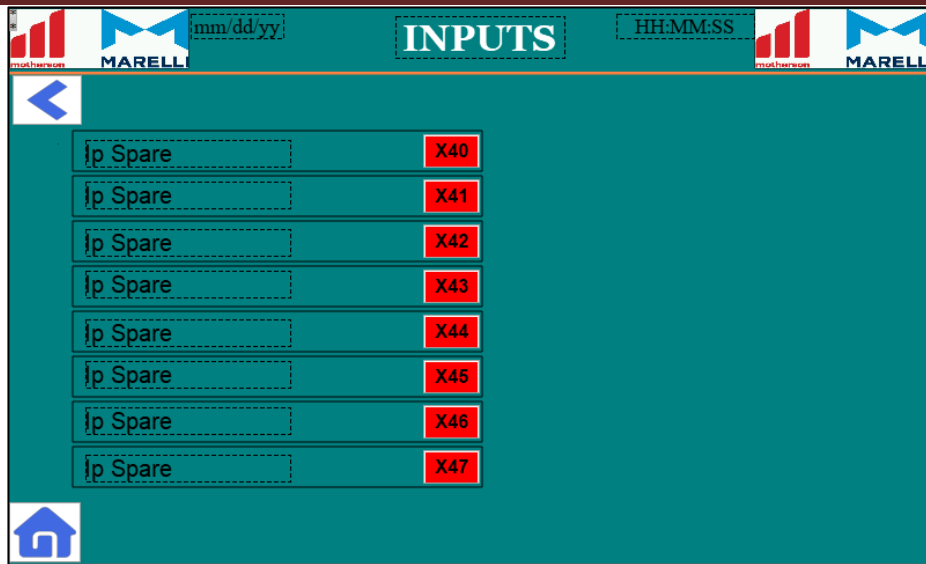


FIG.5.3.INPUT LIST

- For maintenance purpose all the inputs are displayed on the above screen.
- If input is ON, indicator turns GREEN. If it is OFF, indicator turns RED.
- Press forward arrow button for go to next window.
- Press backward arrow button for go back.
- Press HOME button to go on main screen.


5.6. OUTPUT LIST:

➤ Click on 'OUTPUT' button, below screen will appear.

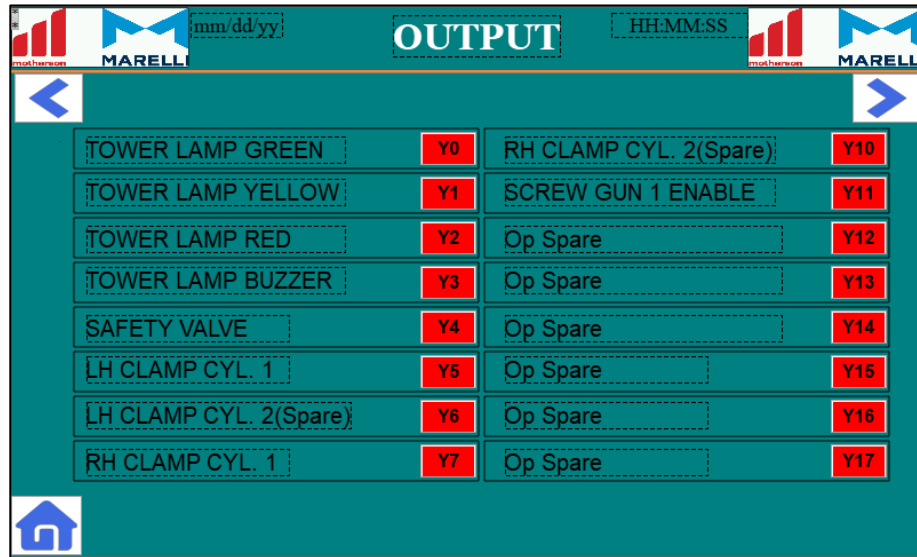

mm/dd/yy		OUTPUT		HH:MM:SS	
TOWER LAMP GREEN	Y0	RH CLAMP CYL. 2(Spare)	Y10		
TOWER LAMP YELLOW	Y1	SCREW GUN 1 ENABLE	Y11		
TOWER LAMP RED	Y2	Op Spare	Y12		
TOWER LAMP BUZZER	Y3	Op Spare	Y13		
SAFETY VALVE	Y4	Op Spare	Y14		
LH CLAMP CYL. 1	Y5	Op Spare	Y15		
LH CLAMP CYL. 2(Spare)	Y6	Op Spare	Y16		
RH CLAMP CYL. 1	Y7	Op Spare	Y17		

FIG.6.1.OUTPUT LIST

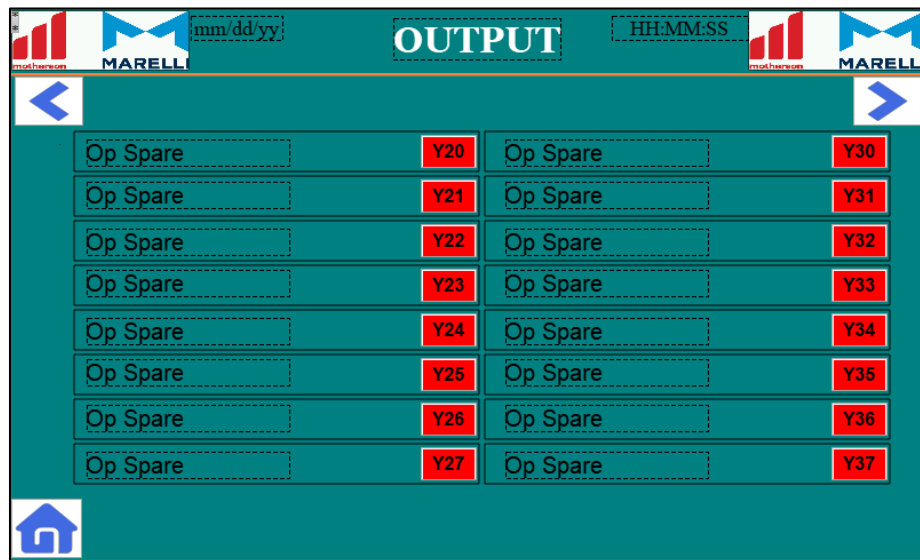

mm/dd/yy		OUTPUT		HH:MM:SS	
Op Spare	Y20	Op Spare	Y30		
Op Spare	Y21	Op Spare	Y31		
Op Spare	Y22	Op Spare	Y32		
Op Spare	Y23	Op Spare	Y33		
Op Spare	Y24	Op Spare	Y34		
Op Spare	Y25	Op Spare	Y35		
Op Spare	Y26	Op Spare	Y36		
Op Spare	Y27	Op Spare	Y37		

FIG.6.2.OUTPUT LIST

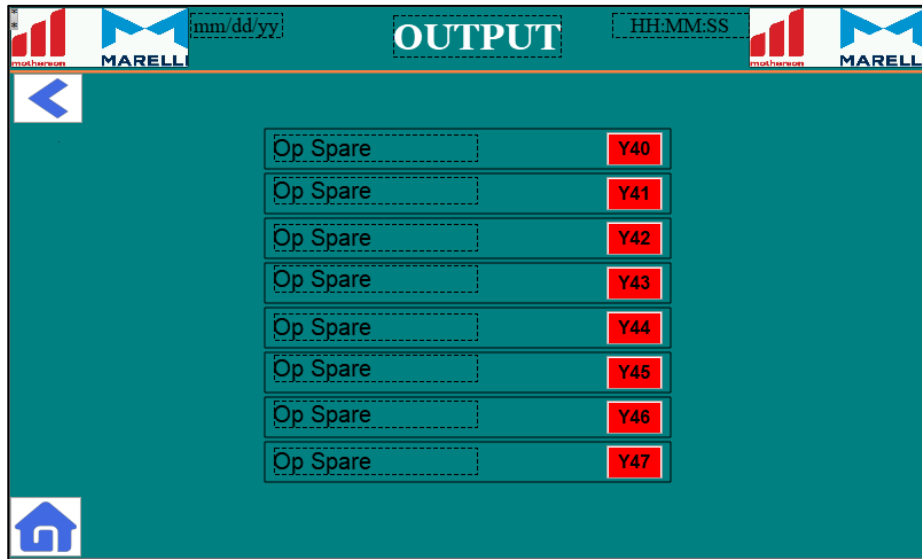


FIG.6.3 OUTPUT LIST

- For maintenance purpose all the outputs are displayed on the below screen.
- If output is ON then indicator turns GREEN if it is OFF then indicator turns RED.
- Press forward arrow button for go to next window.
- Press backward arrow button for go back.
- Press HOME button to go on main screen.

5.7. CONFIGURATION:

- Click on 'CONFIGURATION' button, below screen will appear.

The screenshot shows a 'CONFIGURE' screen with a teal background. At the top, there are logos for 'MARELL' and 'INFINITY', along with date and time fields. The main area is divided into two columns: 'LH' (Left Hand) and 'RH' (Right Hand). Each column contains several configuration options with toggle buttons (marked with a red 'X') and input fields. The 'LH' column includes 'SCREW COUNT' (1234), 'HOUSING CLAMP CYL' (toggle), 'LH HOUSING PRESENCE SENSOR' (toggle), 'HOUSING CLAMP CYL 1' (toggle), 'HOUSING CLAMP CYL 2' (toggle), and 'REED SW' (toggle). The 'RH' column includes 'FIXTURE ID' (1234), 'SCREW COUNT' (1234), 'HOUSING CLAMP CYL' (toggle), 'HOUSING CLAMP CYL 1' (toggle), 'HOUSING CLAMP CYL 2' (toggle), and 'REED SW' (toggle). A 'HOME' button is located at the bottom left.

FIG.7. CONFIGURE

- To open this screen first we have to enter password.
- Here we can create a new program.
- Here we can enable or disable sensors and cylinder by pressing the button.
- Also we can enter screw count and REED SW delay timing.
- Press **HOME** to go main menu.

5.8. ALARM SCREEN:

- Click on 'ALARM SCREEN' button, below screen will appear.

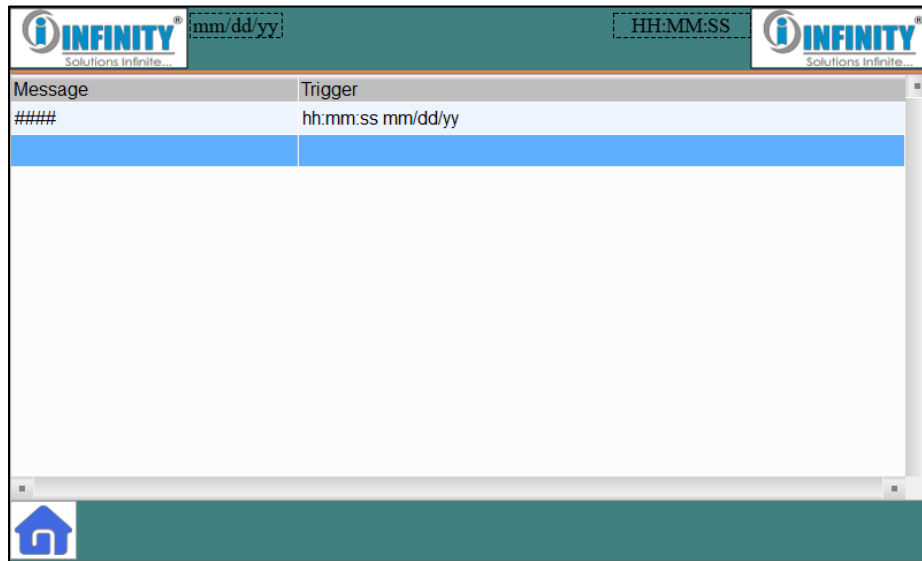


FIG.8. ALARM SCREEN

- Alarm history can be shown on the screen.

6. SPARE LIST:

• ELECTRICAL BOM:

Project No.: A21082				
NO.	Part Number	Name/Description	Qty	Make
1	DOP-107EV	HMI.HMI 7" In build Ethernet	1	DELTA
2	FX5U-80MT/ESS	PLC.CPU 40 I/P(Sink/Source).40 O/P(Source) 100 to 240 VAC Supply	1	MITSUBHISHI
3	6GK5005-0BA00-1AB2	6GK5005-0BA00-1AB2.SCALANCE XB005 unmanaged Industrial Ethernet Switch for 10/100	1	SIEMENS
4	XVGB3S	Tower lamp RAG with Buzzer 24V DC	1	SCHNEIDER
5	ONE WAY SIZE 90X80X52 MM	PENDANT	4	TEKNIC
6	2AM2	PUSH BUTTON. METALLIC BLACK MUSHROOM TYPE PUSHBUTTON, 40MM, MOMENTARY (SPRING RETURN)	1	TEKNIC
7	2AMJ3	PUSH BUTTON. METALLIC GREEN MUSHROOM TYPE PUSHBUTTON, 60MM, MOMENTARY	2	TEKNIC
8	2AML4	PUSH BUTTON. METALLIC RED MUSHROOM TYPE PUSHBUTTON, 40MM, LATCHING (ENERGENCY PUSHBUTTON)	1	TEKNIC
9	S2	NC CONTACT METALLIC RED NORMALLY CLOSED CONTACT ELEMENTS	1	TEKNIC
10	S1	NO CONTACT METALLIC GREEN NORMALLY OPEN CONTACT ELEMENTS	3	TEKNIC
11	M8	QUICK RELEASE OPENING	1	LOCAL
12	555234	INDUSTRIAL PLUG.Straight plug P17 - IP44 - 200/250 V~ - 32 A - 2P+E	1	LEGRAND
13	555254	INDUSTRIAL SOCKET.Surface mounting	1	LEGRAND

		socket P17 - IP44 - 200/250 V~ - 32 A - 2P+E		
14	6755 50	SERVICE SOCKET MYLINC 6 AMP SOCKET 2/3 PIN	3	LEGRAND
15	6740 99	SERVICE SOCKET MYLINC SURFACE BOX - 9 MODULES	1	LEGRAND
16	6755 69	SERVICE SOCKET - MYLINC PLATES - 9 MODULES	1	LEGRAND
17	GOLDEN-30W-T8 LED(2ft) 6500K DAY-LIGHT	GOLDEN-30W-T8 LED(2ft) 6500K DAY-LIGHT	2	OREVA
18	PD9531	Scanner.Barcode Scanner Power Scan	1	DATALOGIC
19	CF-200	Machine Fan. 200 MM Cabin Fan Blue Colour	1	REMI
20	15X40MM(HXL) ENGRAVING	NAME PLATE. SQUARE ENGRAVING		LOCAL
21	ROUND Dia 22.5MM	NAME PLATE. ROUND ENGRAVING		LOCAL
22	857-304	Slim Relay. Relay module; Nominal input voltage: 24 VDC; 1 changeover contact; Limiting continuous current: 6 A; Yellow status indicator; Module width: 6 mm; 2,50 mm ² ; gray	28	WAGO
23	2946-859-410-ND	SHORT LINK.PUSH-IN TYPE JUMPER BAR; 10-WAY	3	WAGO
24	VCF1	MAINS ON/OFF.Mains ON/OFF 32A	1	SCHNEIDER
25	A9N2P32C	MCB.2 Pole 32 Amp	1	SCHNEIDER
26	A9N2P06C	MCB.2P,6AMP	1	SCHNEIDER
27	A9N2P16C	MCB.2 POLE MCB,16A	1	SCHNEIDER
28	XB7EV04MP	INDICATION LAMP.POWER ON INDICATOR. RED LED 230VAC	1	SCHNEIDER
29	T5 LED	TUBELIGHT. 1 FT LED TUBE LIGHT	1	PHILIPS
30	3SE3-020-OA	LIMIT SWITCH.Siemens 1NO+1NC Contact Type Limit Switch 3SE3 020-OA	1	SIEMENS
31	3" Fan Filter Jigo	Fan Filter.3" Fan Filter	2	JIGO
32	3" Fan Grill	Fan Grill.3" Fan Grill	2	JIGO


33	3" Fan 230VAC	Fan.3" Fan 230VAC	2	JIGO
34	NHP-24VDC-5A	SAMPS.SMPS 24VDC;5A	1	NHP
35	6755 62	SERVICE SOCKET.MYLINC PLATES -2 MODULES	1	LEGRAND
36	673302	SERVICE SOCKET.MYLINC SURFACE BOX -2 MODULES	1	LEGRAND
37	6755 01	SERVICE SOCKET MYLINC 6 AMP SWITCH SP	2	LEGRAND
38	6755 50	SERVICE SOCKET MYLINC 6 AMP SOCKET 2/3 PIN	1	LEGRAND
39	6733 04	SURFACE BOX.MYLINC SURFACE BOX- 4 MODULES	1	LEGRAND
40	6755 64	MODULE PLATE.MYLINC 4 MODULE PLATE-WHITE	1	LEGRAND
41	675974	MCB Switch.Mylinec Modular SP MCB 16A	2	Legrand
42	VCF1	MAINS ON/OFF.Mains ON/OFF 32A	1	SCHNEIDER

• PNEUMATIC BOM:

Project No.: A21082				
No	PART NAME	PART NO.	QTY	MAKE
1	SPRING BALNCER	HSB-3	1	ENDO
2	LINEAR BEARING	SC16UU	1	SAMIK
3	DRAG CHAIN		1	IGUS
4	REJECTION BIN	FPO CRATE	1	NILKAMAL
5	STRAIGHT FITTING	KQ2H-08-U02A	1	SMC
6	ON OFF VALVE	VHS20-02A	1	SMC
7	SILENSOR	AN10-01	1	SMC
8	BRACKET	Y200-A	2	SMC
9	FRL	AW20-02BCG1-B	1	SMC
10	L FITTING	KQ2L06-01A	1	SMC
11	T-INTERFACE	Y210-02-A	1	SMC
12	PRESSURE SWITCH	ISE20A-T-01-JD	1	SMC
13	SPACER WITH BRACKET BRACKET	Y200T-A	1	SMC
14	MODULAR ADAPTOR	E210-U02	1	SMC
15	3/2 VALVE	VT317-5DZ-02F	1	SMC
16	SILENSOR	AN15-02	1	SMC
17	L FITTING	KQ2L06-02A	1	SMC
18	DCV	SY5120-5LZ-01	2	SMC
19	T FITTING	KQ2T06-00A	1	SMC
20	STRAIGHT FITTING	KQ2H06-U01A	6	SMC
21	MANIFOLD	SS5Y5-20-04	1	SMC
22	STRAIGHT FITTING	KQ2H06-U02A	3	SMC
23	SILENSOR	AN15-02	3	SMC
24	PLUG	PL-02	3	SMC
25	BLANKING PLATE ASSEMBLY	SY5000-26-20A	2	SMC

26	KDM CONNECTOR	KDM10-06	1	SMC
----	---------------	----------	---	-----


7. FLOW CHART:

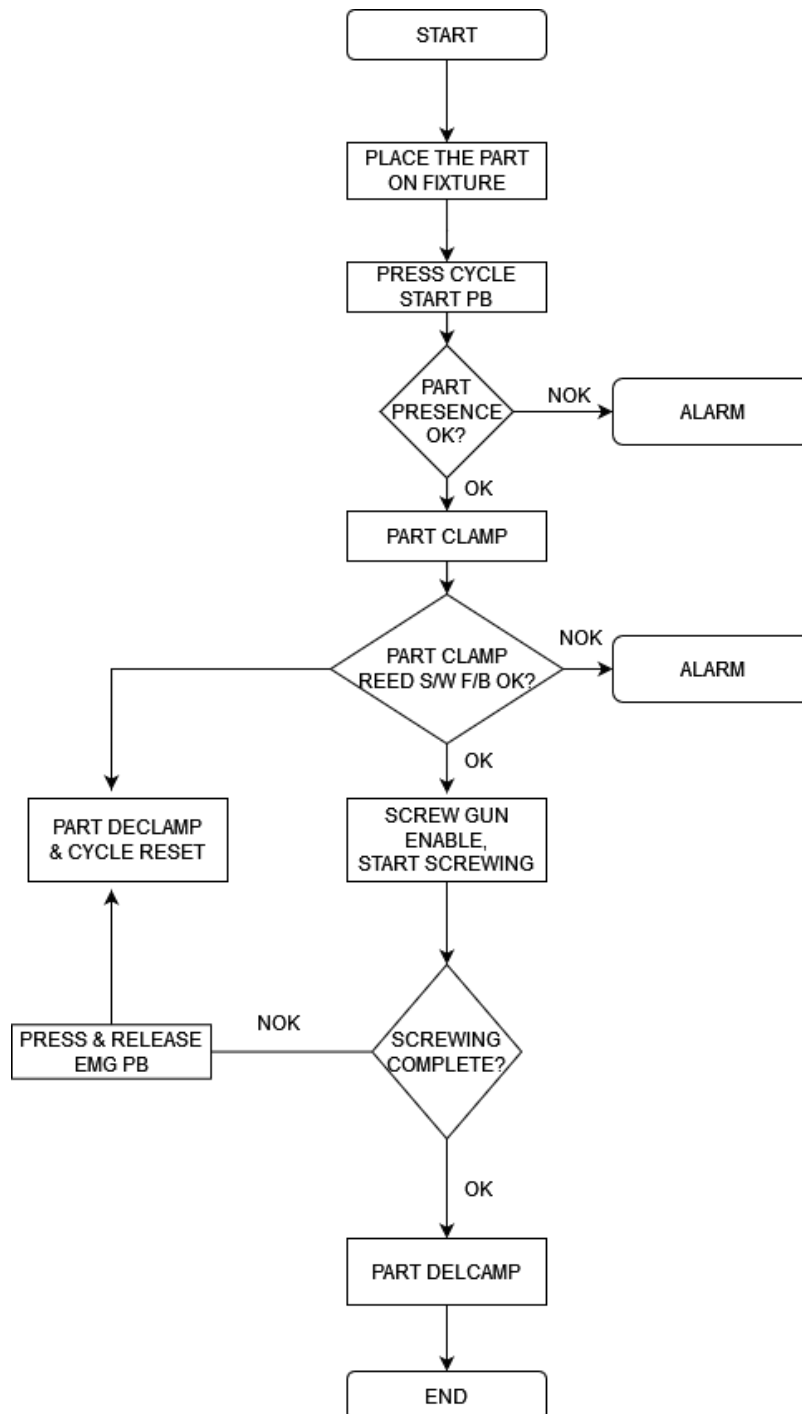


8. TROUBLESHOOT:

- **Emergency Button Pressed alarm:** Release the Emergency Button and Reset alarm from auto screen.
- **Air Pressure Alarm:** Check if air supply is in required range and reset the alarm from auto screen.
- **Clamp Reed Switch Alarm:** Reset alarm from auto screen. Check if the reed switch is glowing by operating the cylinder manually. If not, adjust the position of reed switch to sense the clamp position. Check if correct Reed Switch F/b is enabled in configuration.
- **Fixture selection is wrong alarm:** Check if the program selection is correct according to the model. Reset alarm from auto screen.
- **Part Presence Alarm:** This alarm occurs when a part is missing to start cycle. Reset alarm from auto screen. Check & place the part correctly, check if the sensor is sensing the part correctly. Check if the correct sensor is enabled in Configuration.
- **PCB Scan NOK:** This indicates that the scanned part is not correct. Reset alarm from auto screen. Scan the correct part. Check if correct part number is set in configuration.


9. ELECTRICAL & PNEUMATIC DRAWING:

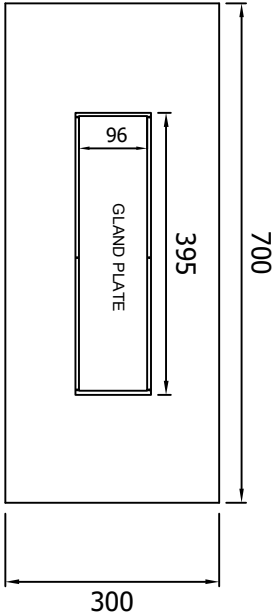


TOP VIEW

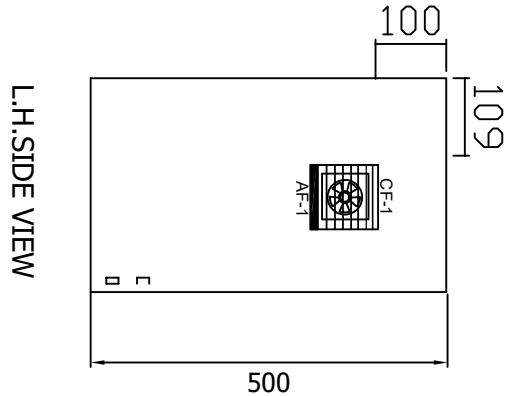

L.H.SIDE VIEW

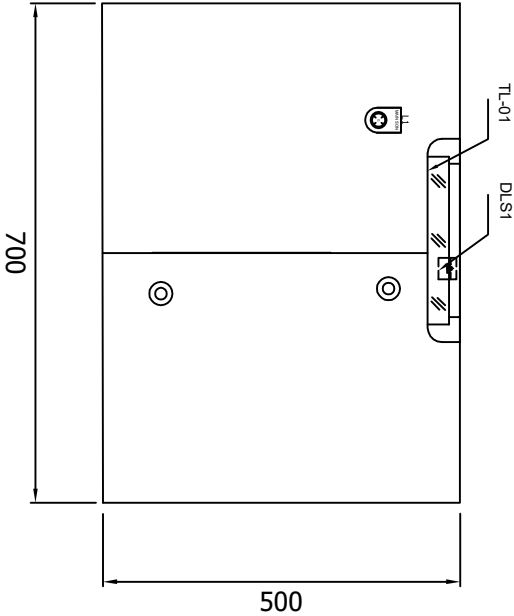

FRONT VIEW

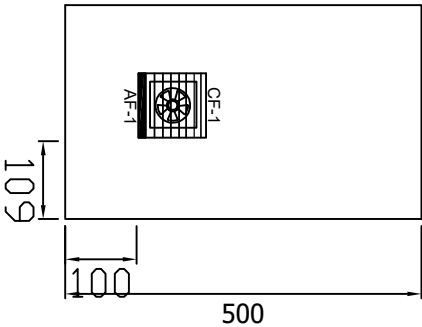

R.H.SIDE VIEW


TITLE: DRG NO :

WIRE SIZE & COLOUR DETAILS:-

- | | |
|-------------------|-------------------------------|
| 1. 230V AC | : 2.5,1.5 SQ. MM RED |
| 2. 0V AC | : 2.5,1.5 SQ. MM BLACK |
| 3. PE | : 2.5,1.5 SQ. MM YELLOW/GREEN |
| 4. 24V DC | : 0.5 SQ. MM BROWN |
| 5. 0V DC | : 0.5 SQ. MM BLUE |
| 6. DIGITAL INPUT | : 0.5 SQ. MM GRAY |
| 7. DIGITAL OUTPUT | : 0.5 SQ. MM WHITE |

CHANGES VIA CAD ONLY

REV. 00	DATE 11.04.2022	CHANGES	MB	DC	PW
CLIBIT: JMM					
PROJECT: A21082					
INFINITY AUTOMATION SYSTEMS PVT. LTD.					
WORKS: S.W. BRIDALMARR ROAD, ONE HIGHWAY 25/26					
JSPM ENGINEERING COLLEGE, PARTHAKRISHNAPUR, PUNE - 411033					
TITLE :- Housing to extension					
for side screwing LH					
SCALE :- MTS					
QTY:- 01 No.					
SHEET: 1 of 13					
DRG NO :- A21082					
REV:- 00					

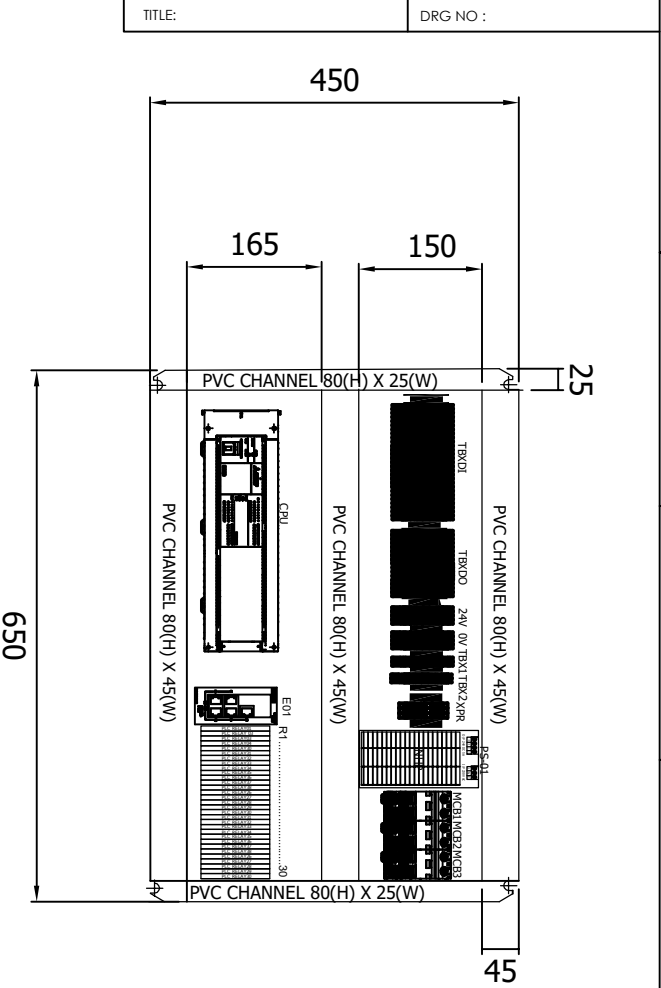


MOUNTING PLATE


CHANGES VIA CAD ONLY	
WIRE SIZE & COLOUR DETAILS:-	
1. 230V AC	-: 2.5,1.5 SQ. MM RED
2. 0V AC	-: 2.5,1.5 SQ. MM BLACK
3. PE	-: 2.5,1.5 SQ. MM YELLOW/GREEN
4. 24V DC	-: 0.5 SQ. MM BROWN
5. 0V DC	-: 0.5 SQ. MM BLUE
6. DIGITAL INPUT	-: 0.5 SQ. MM GRAY
7. DIGITAL OUTPUT	-: 0.5 SQ. MM WHITE

PANEL BOX-Ms powder coated				MOUNTING PLATE			
SIZE:- 500(H) x 700(W) x 300(D) MM				SIZE-450(H) x 450(W)			
COMPONENT DETAILS :-				CABLE ENTRY: TOP			
SR.NO	TAG	DESCRIPTION	QTY	MAKE	SR.NO	TAG	DESCRIPTION
1	CRU	PSU-300T/ESS (CRU 40 A/PSU&Source&O/PS&src)	01	MTSUSHISHI	1	CRU	PSU-300T/ESS (CRU 40 A/PSU&Source&O/PS&src)
2	PS-01	5ms Relay delay module, Nominal input voltage: 24 VDC	30	WAGO	2	PS-01	5ms Relay delay module, Nominal input voltage: 24 VDC
3	PS-01	5MS 24VDC/24	01	NMP	3	PS-01	5MS 24VDC/24
4	E01	ETHERNET SWITCH	01	SIEGENS	4	E01	ETHERNET SWITCH
5	MCB 1	MCB 2 Pole 32 AMP	01	SCHNEIDER	5	MCB 1	MCB 2 Pole 32 AMP
6	MCB 2	MCB 2 Pole 16A	01	SCHNEIDER	6	MCB 2	MCB 2 Pole 16A
7	MCB 3	MCB 2 Pole 32 AMP	01	SCHNEIDER	7	MCB 3	MCB 2 Pole 32 AMP
8	YPR	MAIN INCOMING SUPPLY TERMINALS (3PH+1N+PE)	03	WAGO	8	YPR	MAIN INCOMING SUPPLY TERMINALS (3PH+1N+PE)
9	TBU	FIELD SUPPLY	08	WAGO	9	TBU	FIELD SUPPLY
10	TBKOD	DIGITAL INPUT DOCK TERMINALS	28	WAGO	10	TBKOD	DIGITAL INPUT DOCK TERMINALS
11	TBKOD	DIGITAL OUTPUT DOCK TERMINALS	16	WAGO	11	TBKOD	DIGITAL OUTPUT DOCK TERMINALS
12	24V	24V DC DISTRIBUTION SINK TERMINALS	04	WAGO	12	24V	24V DC DISTRIBUTION SINK TERMINALS
13	0V	0V DC DISTRIBUTION SINK TERMINALS	04	WAGO	13	0V	0V DC DISTRIBUTION SINK TERMINALS


00	11.04.2022	CHANGES	MB	DC	PV
REV.	DATE		DRAWN	CHECKED	APPROVED
CLIENT:-	MMH	 INFINITY AUTOMATION SYSTEMS PVT. LTD.			
PROJECT:-	A21082	WORK: S NO.80/2A, MUMBAI BANGALORE HIGHWAY, NEAR JSPM ENGG. COLLEGE, TATHWADE, PUNE - 411031			
TITLE :- Housing to extension back side screwing LH & RH.					
SCALE :- NTS	QTY :- 01 No.	SHEET :- 2 of 13	DRG NO :- A21082	REV:- 00	
					

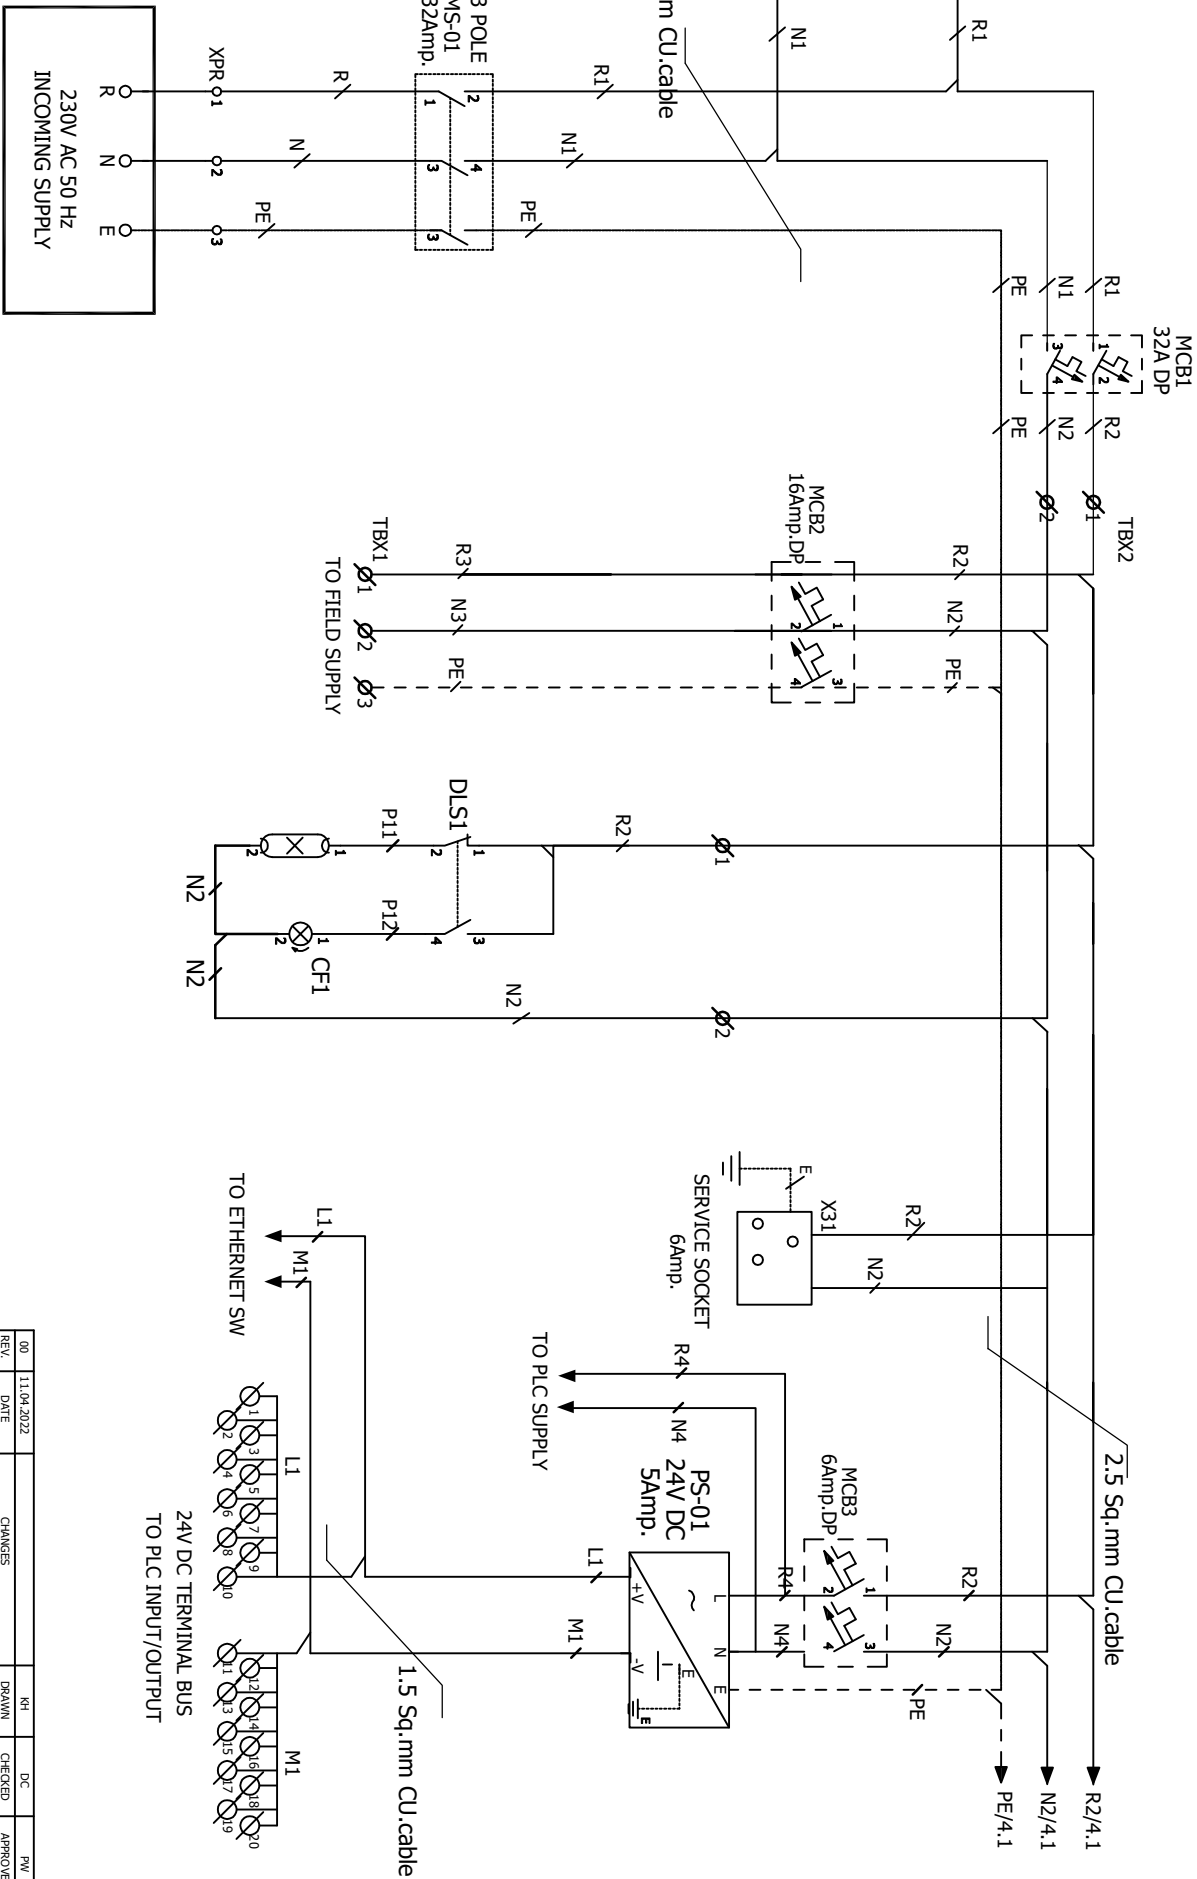


REV	DATE	CHANGES	REV	DATE	CHANGES
00	11.04.2022		01	11.04.2022	
02	11.04.2022		02	11.04.2022	
03	11.04.2022		03	11.04.2022	
04	11.04.2022		04	11.04.2022	
05	11.04.2022		05	11.04.2022	
06	11.04.2022		06	11.04.2022	
07	11.04.2022		07	11.04.2022	
08	11.04.2022		08	11.04.2022	
09	11.04.2022		09	11.04.2022	
10	11.04.2022		10	11.04.2022	
11	11.04.2022		11	11.04.2022	
12	11.04.2022		12	11.04.2022	
13	11.04.2022		13	11.04.2022	
14	11.04.2022		14	11.04.2022	
15	11.04.2022		15	11.04.2022	
16	11.04.2022		16	11.04.2022	
17	11.04.2022		17	11.04.2022	
18	11.04.2022		18	11.04.2022	
19	11.04.2022		19	11.04.2022	
20	11.04.2022		20	11.04.2022	
21	11.04.2022		21	11.04.2022	
22	11.04.2022		22	11.04.2022	
23	11.04.2022		23	11.04.2022	
24	11.04.2022		24	11.04.2022	
25	11.04.2022		25	11.04.2022	
26	11.04.2022		26	11.04.2022	
27	11.04.2022		27	11.04.2022	
28	11.04.2022		28	11.04.2022	
29	11.04.2022		29	11.04.2022	
30	11.04.2022		30	11.04.2022	
31	11.04.2022		31	11.04.2022	
32	11.04.2022		32	11.04.2022	
33	11.04.2022		33	11.04.2022	
34	11.04.2022		34	11.04.2022	
35	11.04.2022		35	11.04.2022	
36	11.04.2022		36	11.04.2022	
37	11.04.2022		37	11.04.2022	
38	11.04.2022		38	11.04.2022	
39	11.04.2022		39	11.04.2022	
40	11.04.2022		40	11.04.2022	
41	11.04.2022		41	11.04.2022	
42	11.04.2022		42	11.04.2022	
43	11.04.2022		43	11.04.2022	
44	11.04.2022		44	11.04.2022	
45	11.04.2022		45	11.04.2022	
46	11.04.2022		46	11.04.2022	
47	11.04.2022		47	11.04.2022	
48	11.04.2022		48	11.04.2022	
49	11.04.2022		49	11.04.2022	
50	11.04.2022		50	11.04.2022	
51	11.04.2022		51	11.04.2022	
52	11.04.2022		52	11.04.2022	
53	11.04.2022		53	11.04.2022	
54	11.04.2022		54	11.04.2022	
55	11.04.2022		55	11.04.2022	
56	11.04.2022		56	11.04.2022	
57	11.04.2022		57	11.04.2022	
58	11.04.2022		58	11.04.2022	
59	11.04.2022		59	11.04.2022	
60	11.04.2022		60	11.04.2022	
61	11.04.2022		61	11.04.2022	
62	11.04.2022		62	11.04.2022	
63	11.04.2022		63	11.04.2022	
64	11.04.2022		64	11.04.2022	
65	11.04.2022		65	11.04.2022	
66	11.04.2022		66	11.04.2022	
67	11.04.2022		67	11.04.2022	
68	11.04.2022		68	11.04.2022	
69	11.04.2022		69	11.04.2022	
70	11.04.2022		70	11.04.2022	
71	11.04.2022		71	11.04.2022	
72	11.04.2022		72	11.04.2022	
73	11.04.2022		73	11.04.2022	
74	11.04.2022		74	11.04.2022	
75	11.04.2022		75	11.04.2022	
76	11.04.2022		76	11.04.2022	
77	11.04.2022		77	11.04.2022	
78	11.04.2022		78	11.04.2022	
79	11.04.2022		79	11.04.2022	
80	11.04.2022		80	11.04.2022	
81	11.04.2022		81	11.04.2022	
82	11.04.2022		82	11.04.2022	
83	11.04.2022		83	11.04.2022	
84	11.04.2022		84	11.04.2022	
85	11.04.2022		85	11.04.2022	
86	11.04.2022		86	11.04.2022	
87	11.04.2022		87	11.04.2022	
88	11.04.2022		88	11.04.2022	
89	11.04.2022		89	11.04.2022	
90	11.04.2022		90	11.04.2022	
91	11.04.2022		91	11.04.2022	
92	11.04.2022		92	11.04.2022	
93	11.04.2022		93	11.04.2022	
94	11.04.2022		94	11.04.2022	
95	11.04.2022		95	11.04.2022	
96	11.04.2022		96	11.04.2022	
97	11.04.2022		97	11.04.2022	
98	11.04.2022		98	11.04.2022	
99	11.04.2022		99	11.04.2022	
100	11.04.2022		100	11.04.2022	

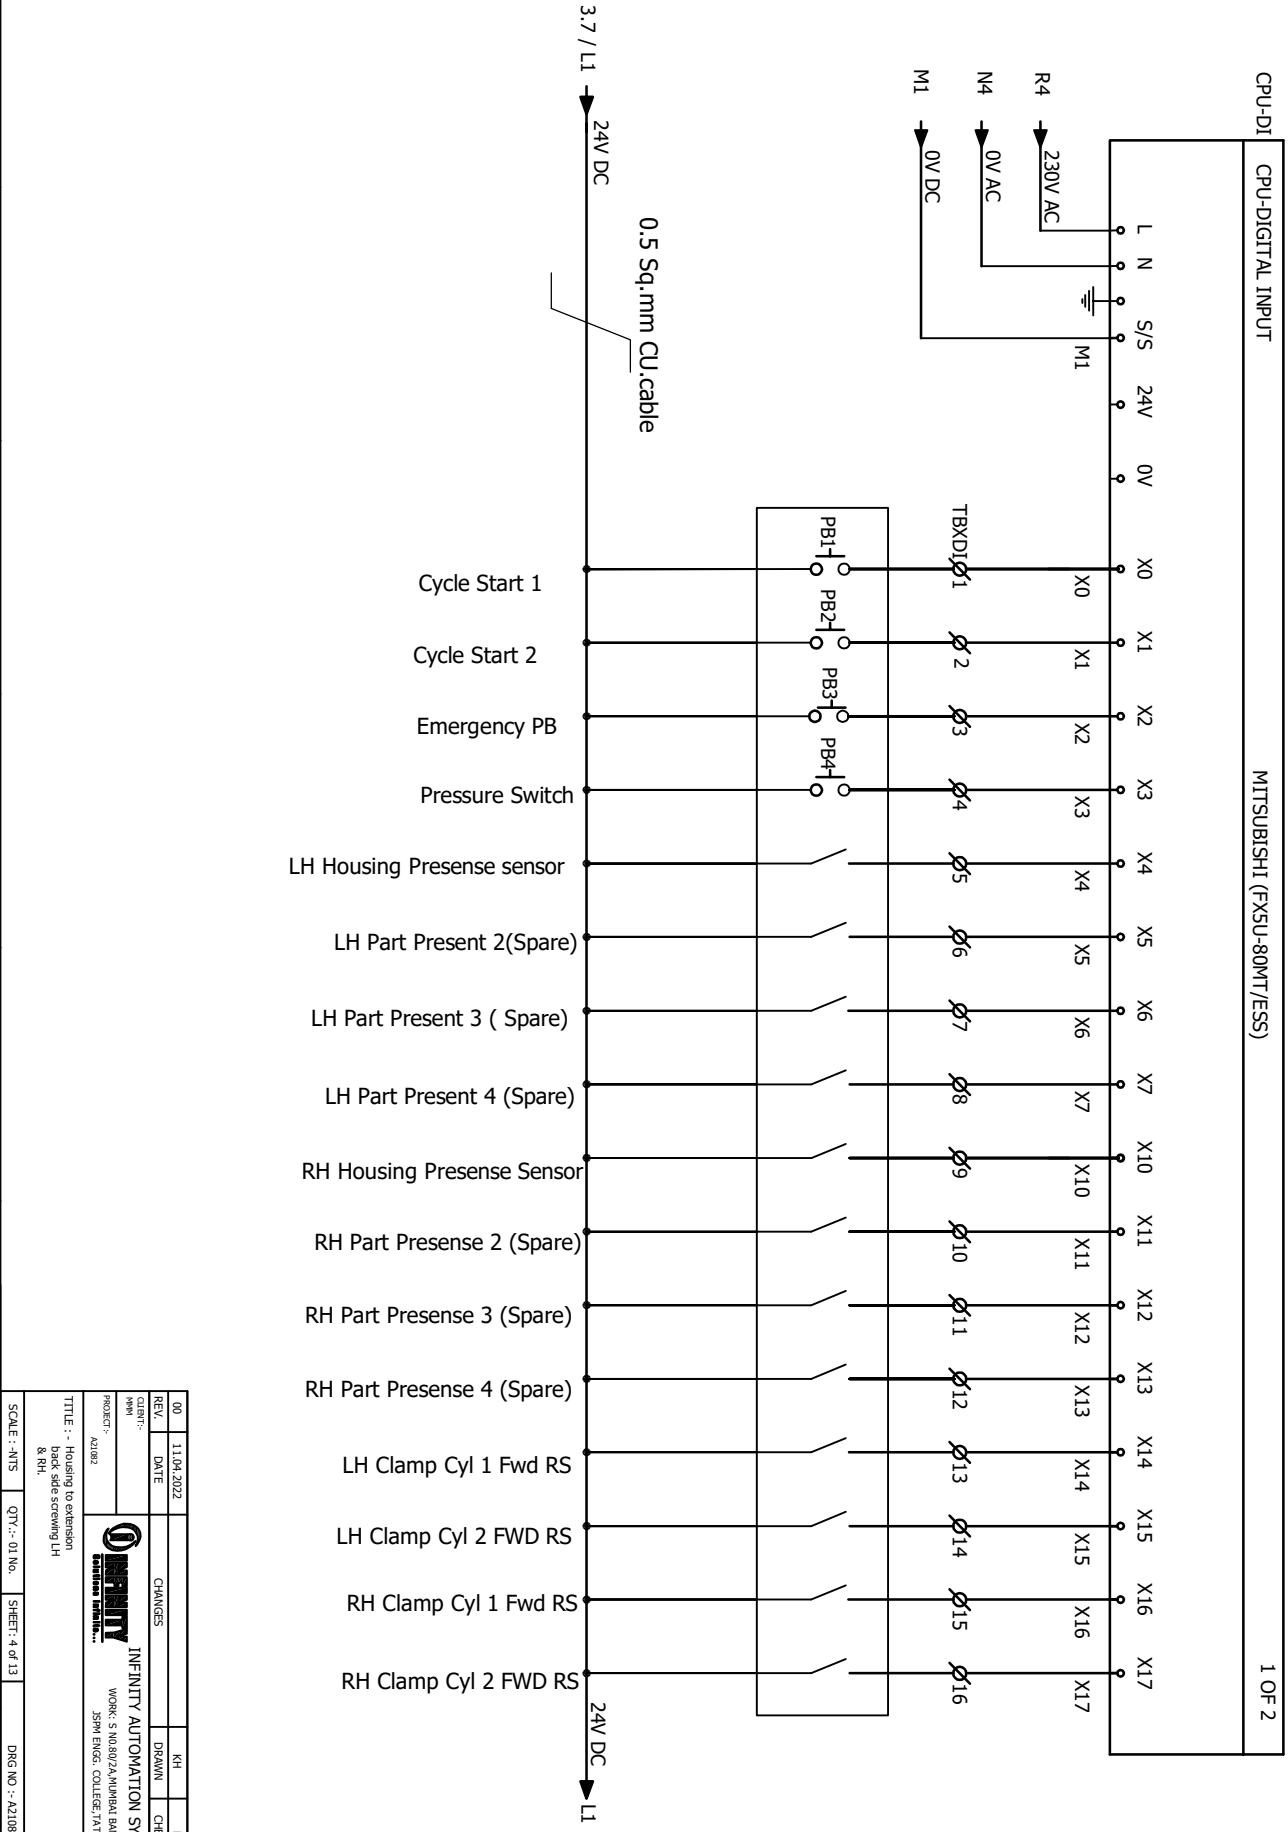

00	11.04.2022				
REV.	DATE	CHANGES	KH	DC	PV
CLIENT:-					
PROJECT:-					
AZ1082					
TITLE :- Housing to extension back side screwing LH					
SCALE :- NTS					
QTY:-: 01 No.					
SHEET:- 4 of 13					
DRG NO :- AZ1082					
REV:- 00					
INFINITY AUTOMATION SYSTEMS PVT.LTD.					
WORK: 5 NO.80/2A MIDRA BANGLORE HIGHWAY NEAR					
JSPM ENGS. COLLEGE, JATYAWADE, PUNE - 411033					
INFORMATION					

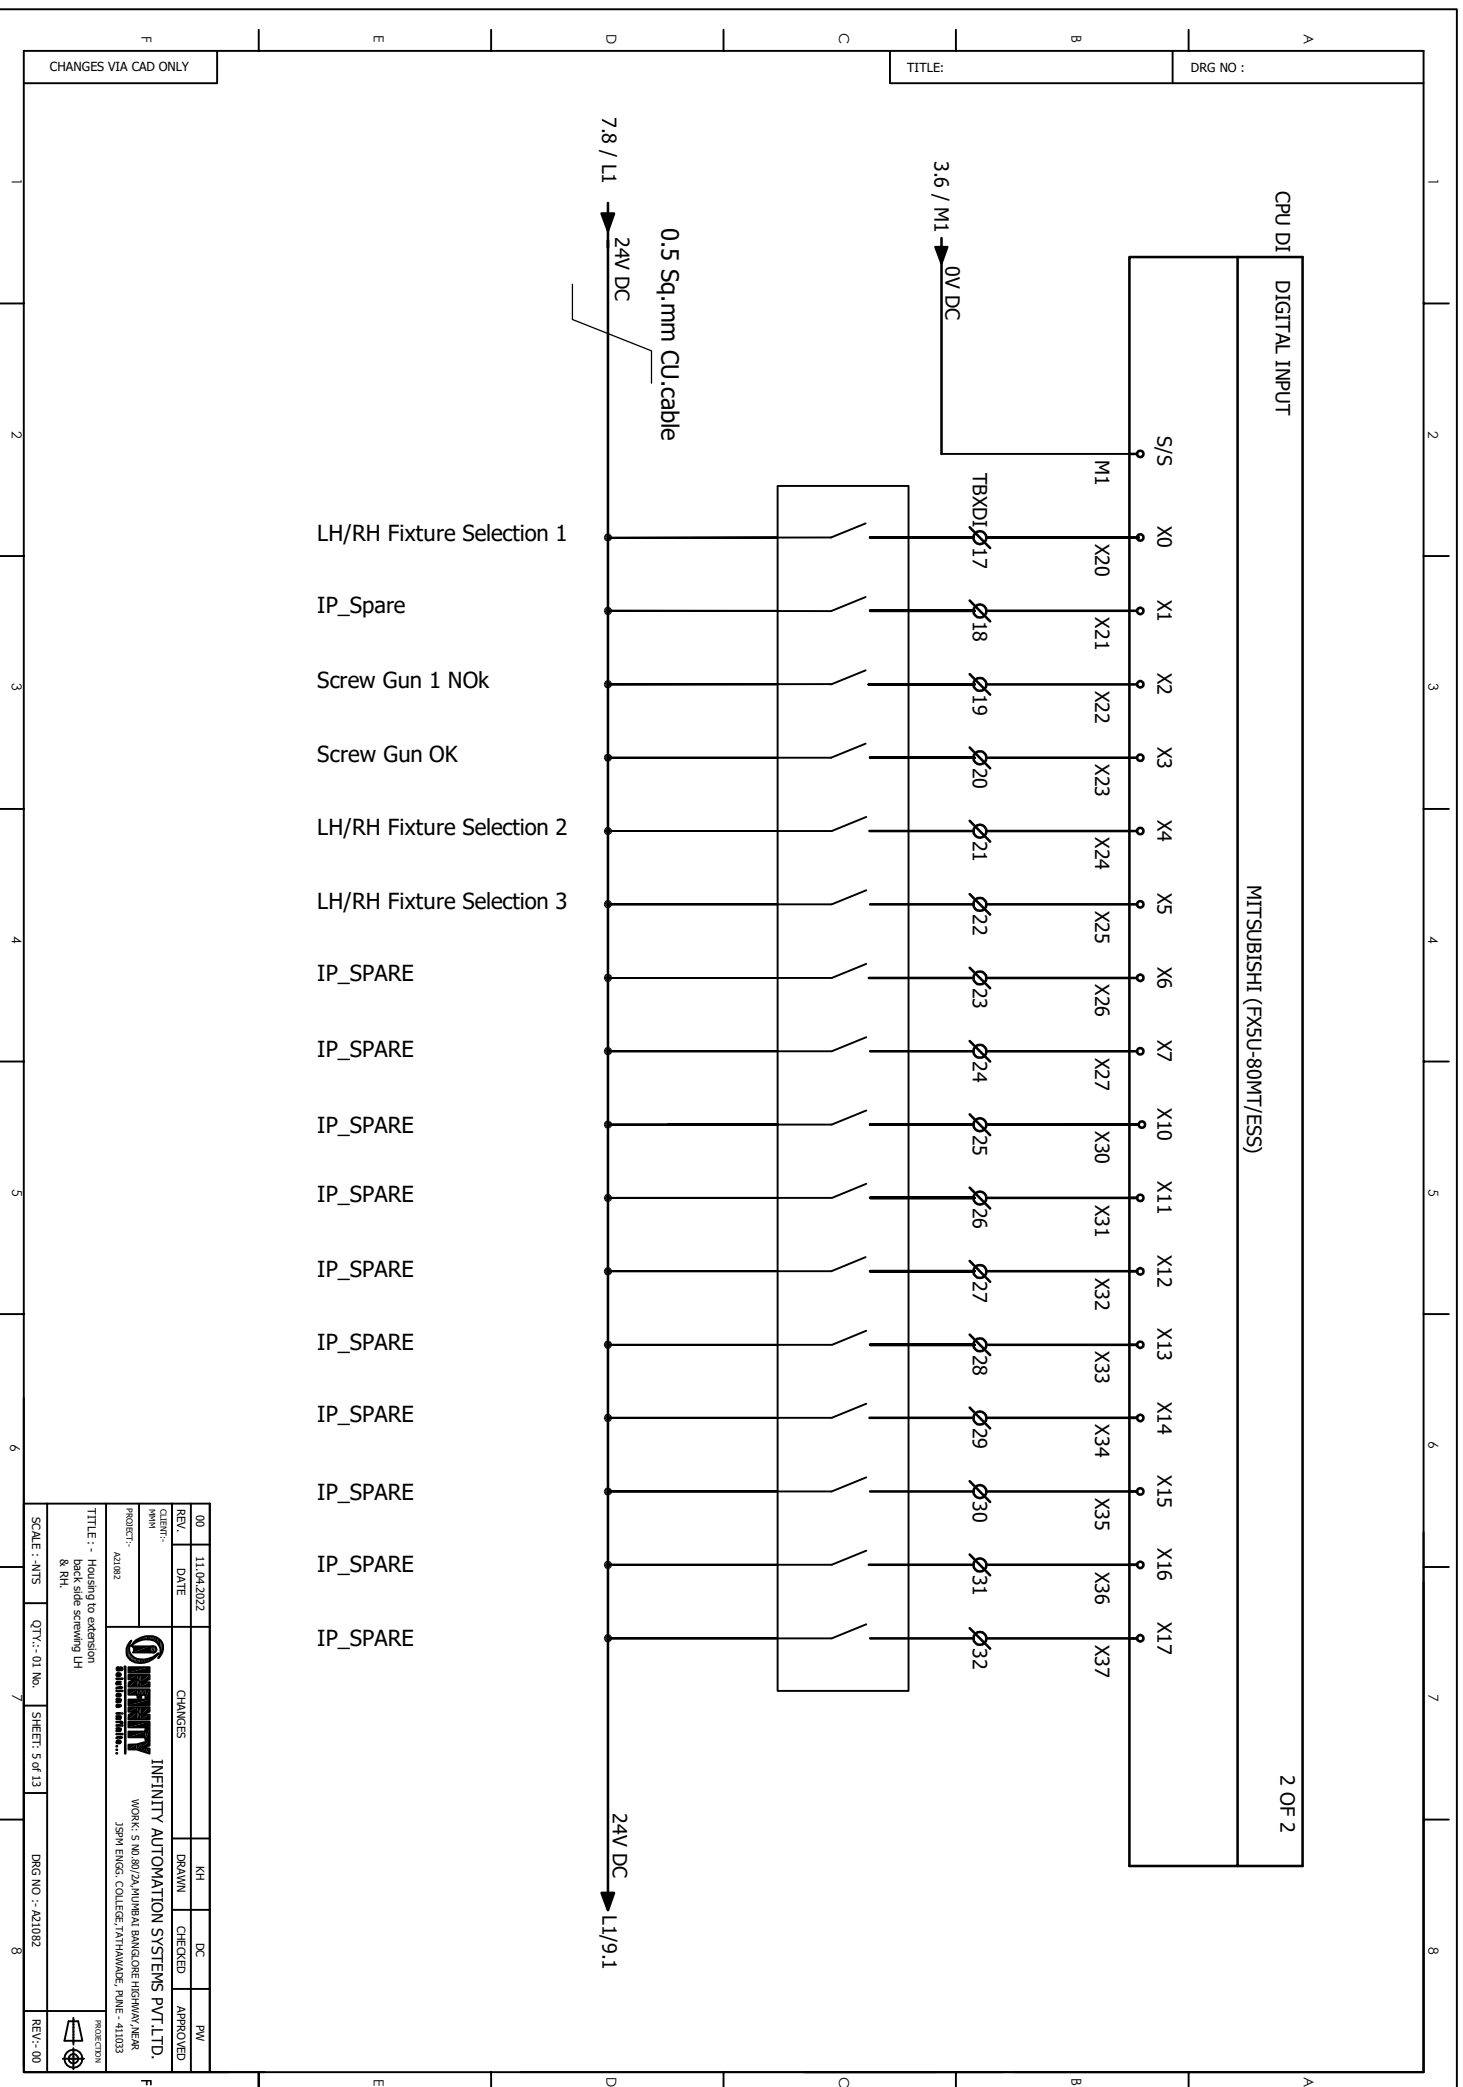

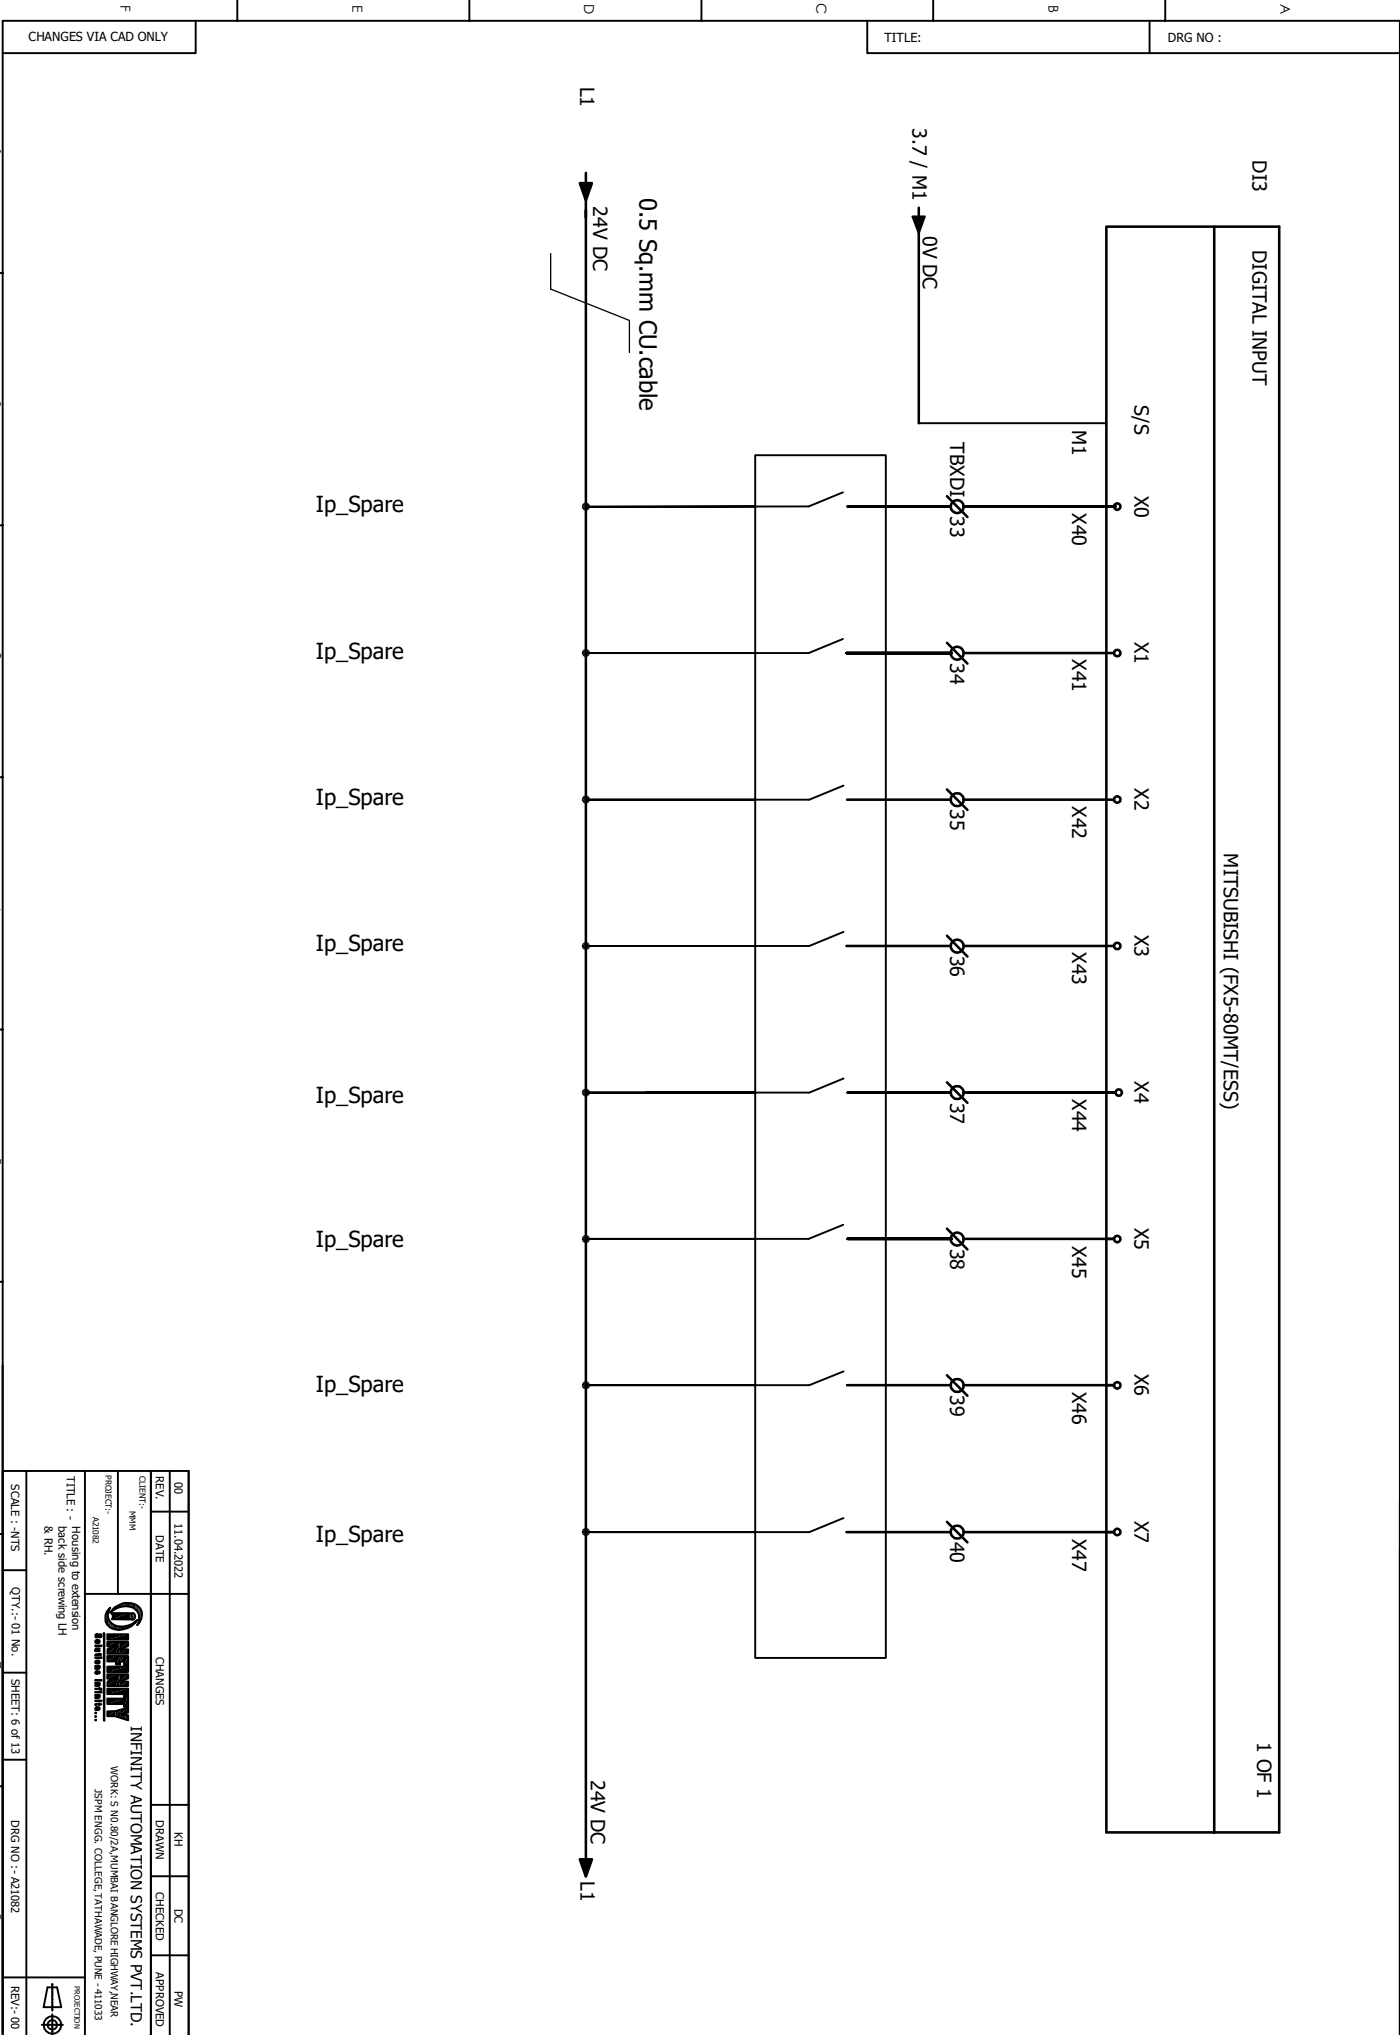

00

11.04.2022

CHANGES

KH

DC

PW

REV

DATE

DRAWN

CHECKED

APPROVED

CLIENT:-

MMH

PROJECT:-

A21082

INFINITY

INFINITY AUTOMATION SYSTEMS PVT.LTD.

WORK:- S NO.80/2A,MUMBAI BANGLORE HIGHWAY NEAR

25PM ENGS. COLLEGE, TATHAWADE, PUNE - 411033

TITLE :-

Housing to extension

back side screwing LH

8. RH.

SCALE :- MTS


QTY:-: 01 No.


SHEET:-: 6 of 13


DRG NO :- A21082


REV:-: 00


Screw Gun Logic

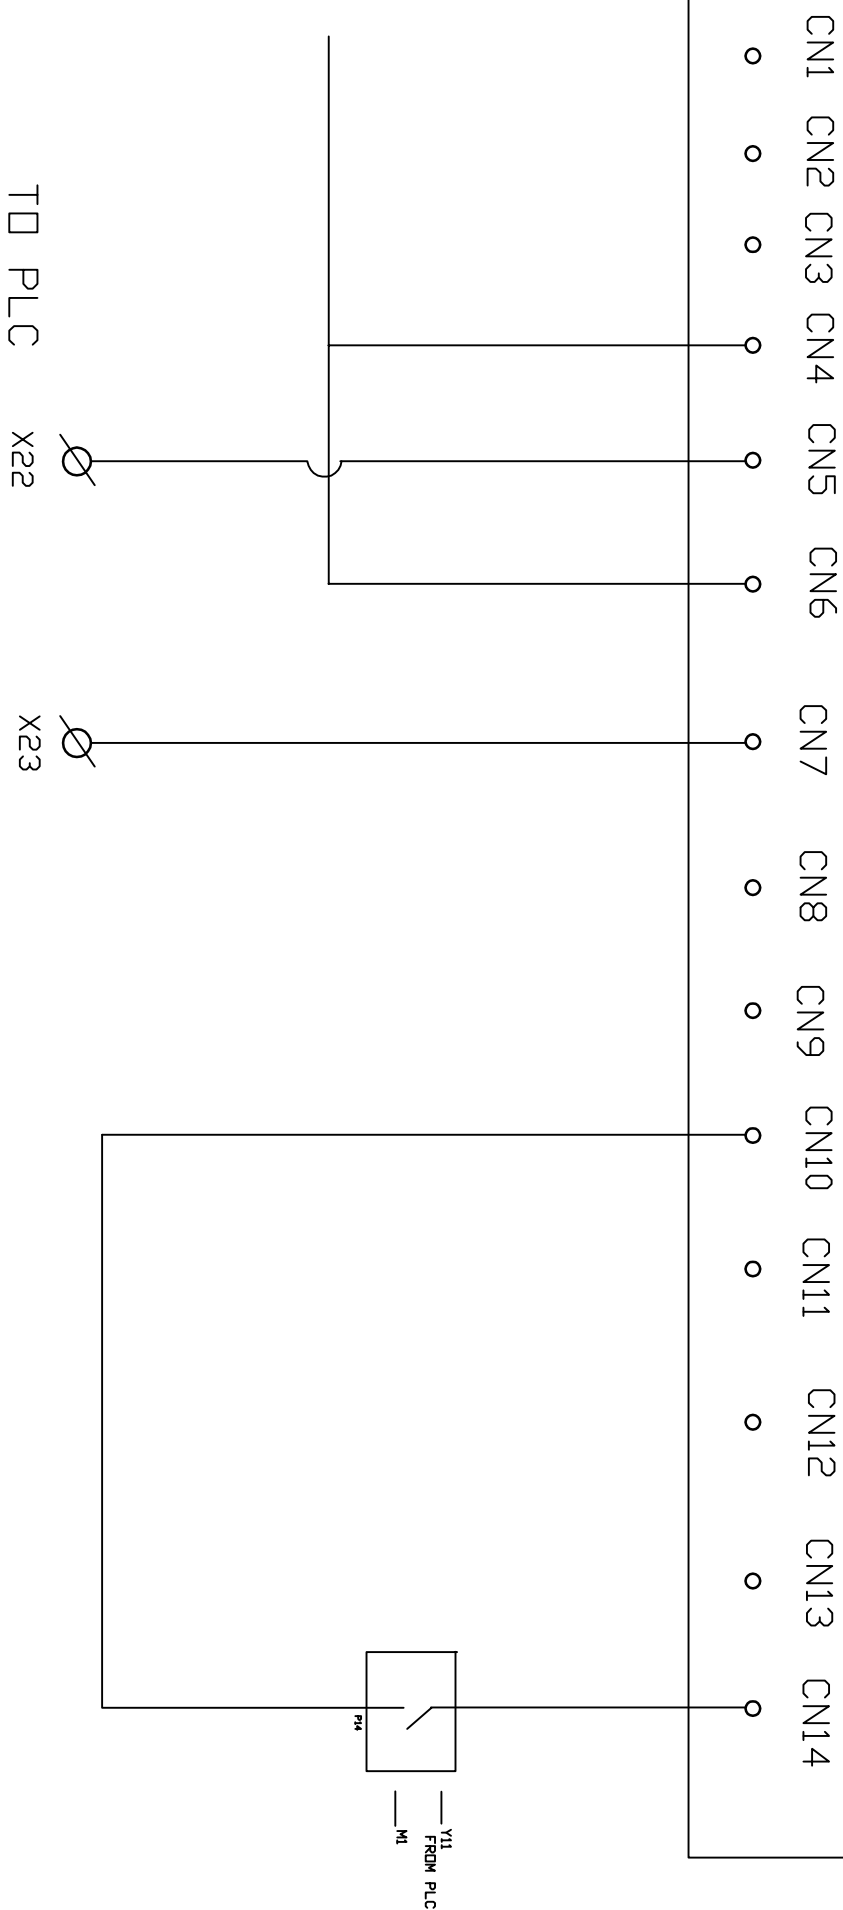[illegible]

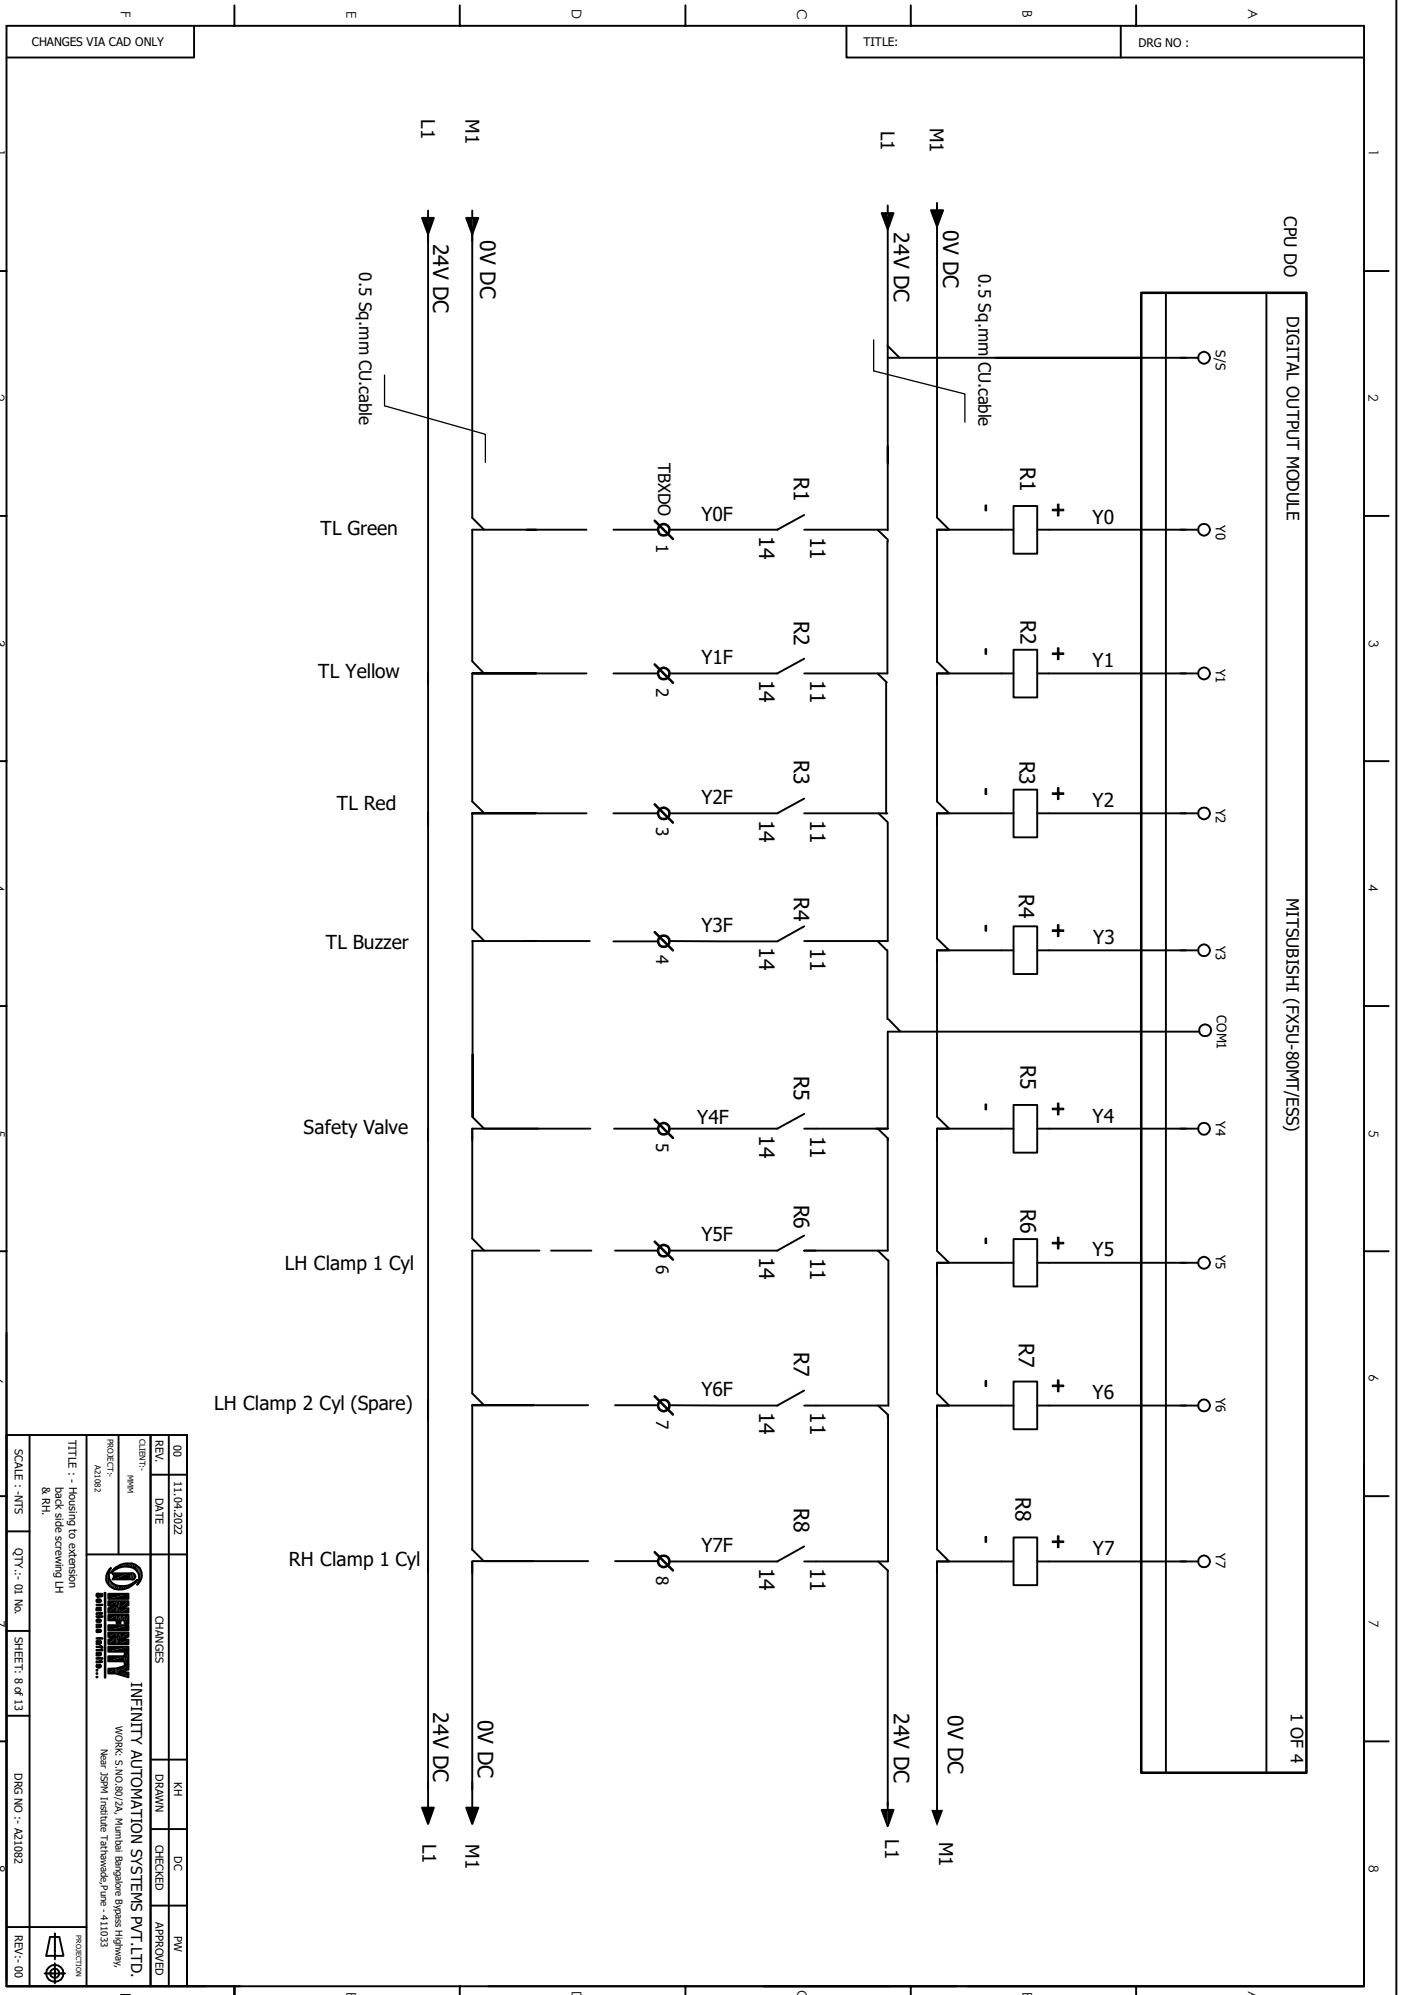

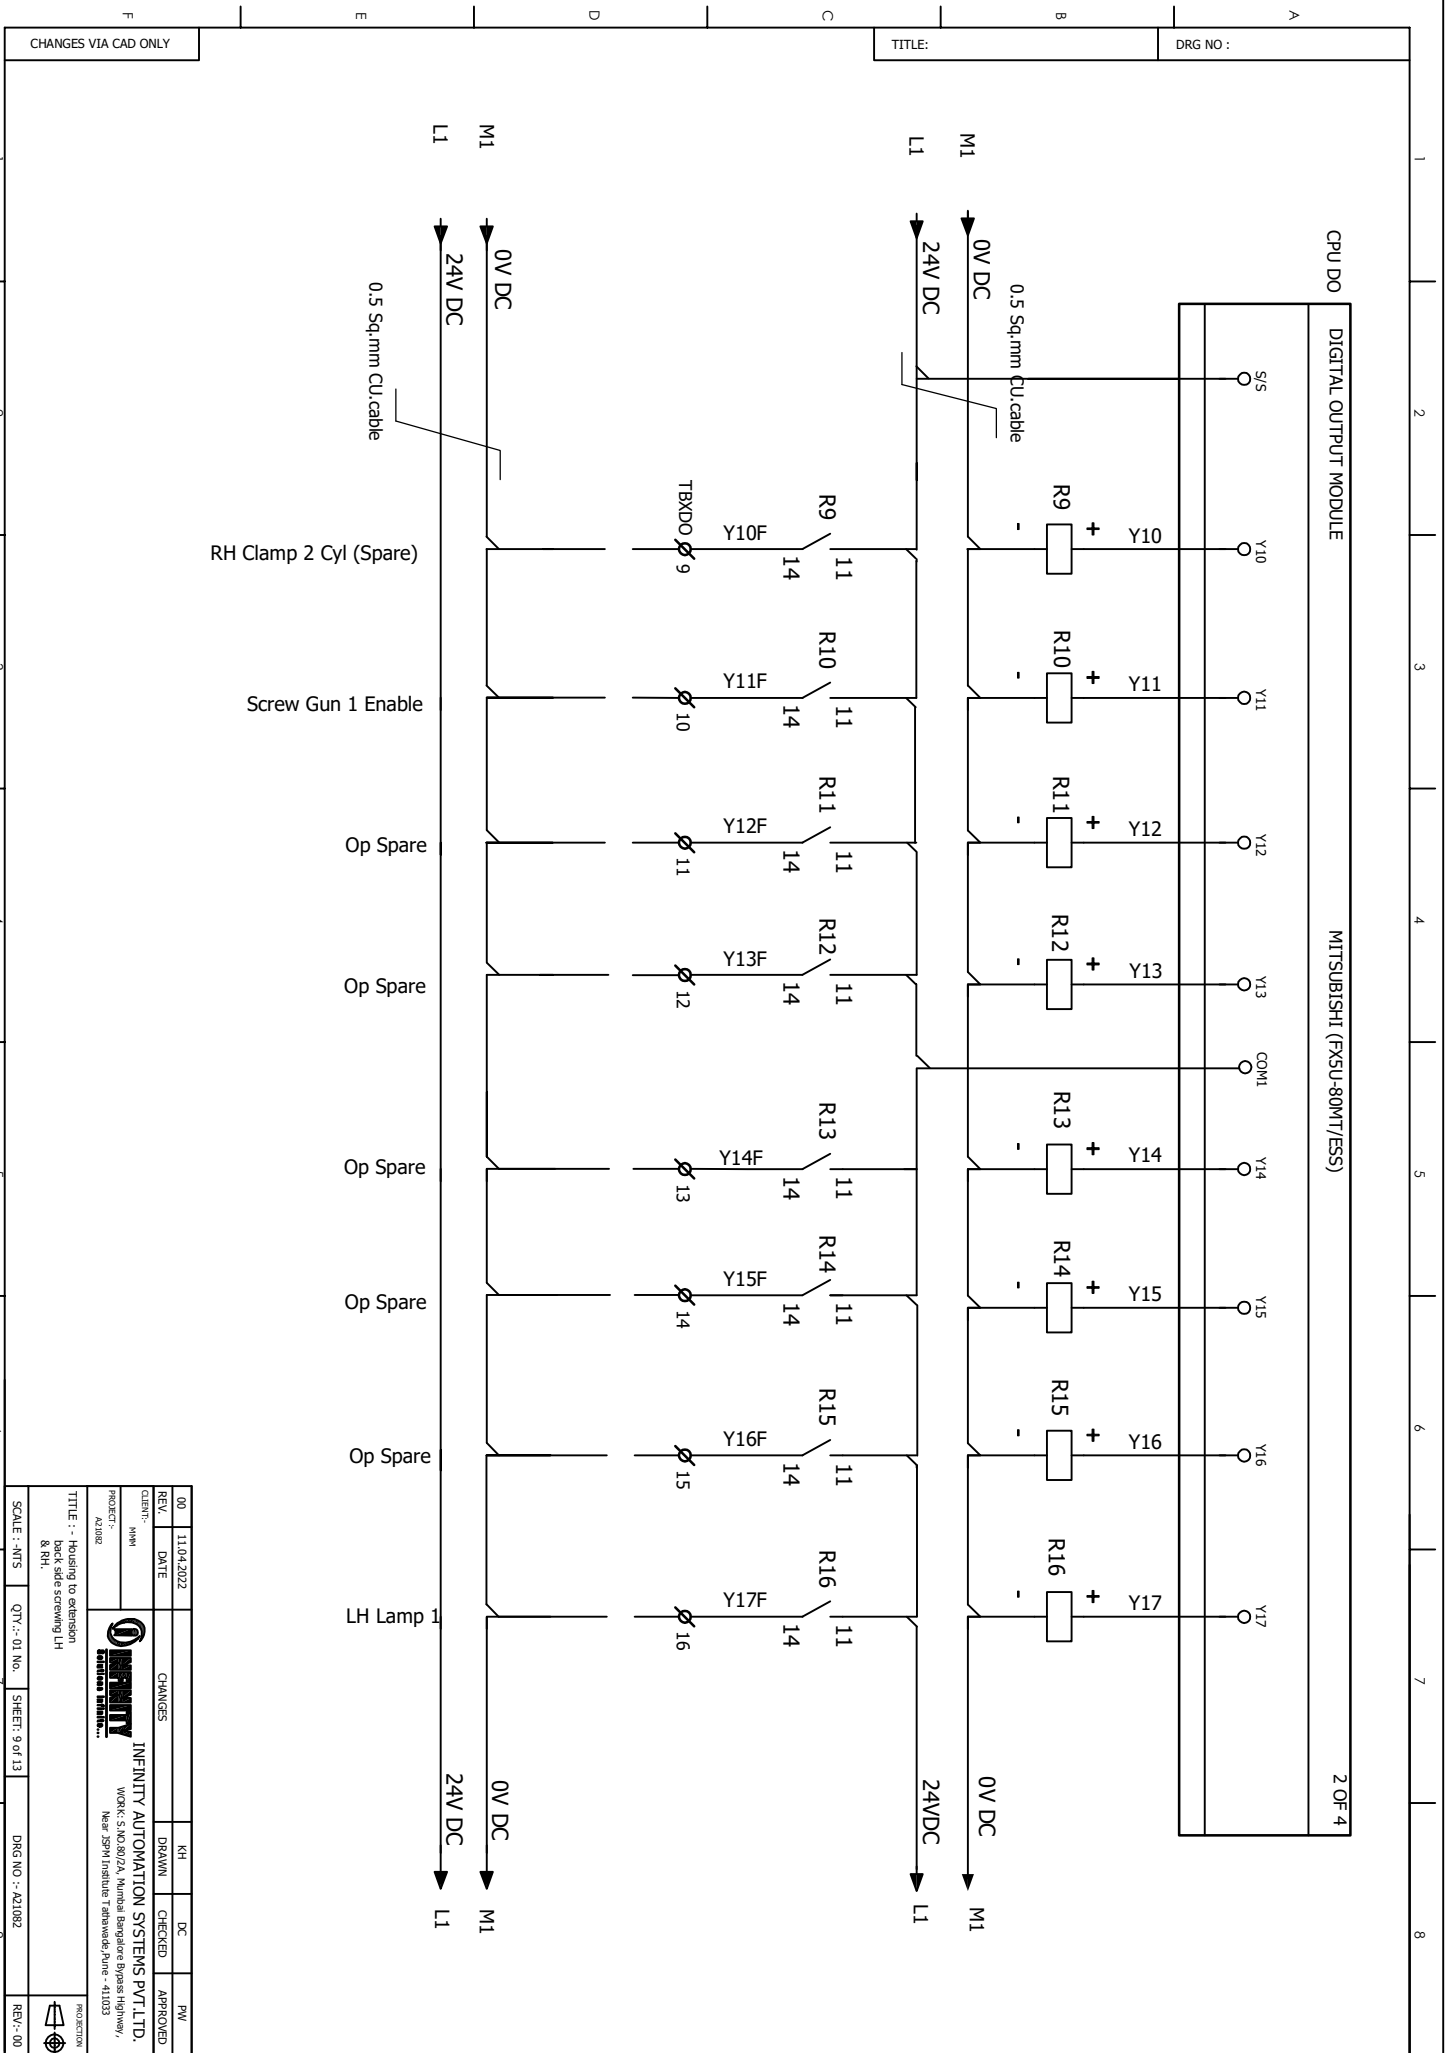

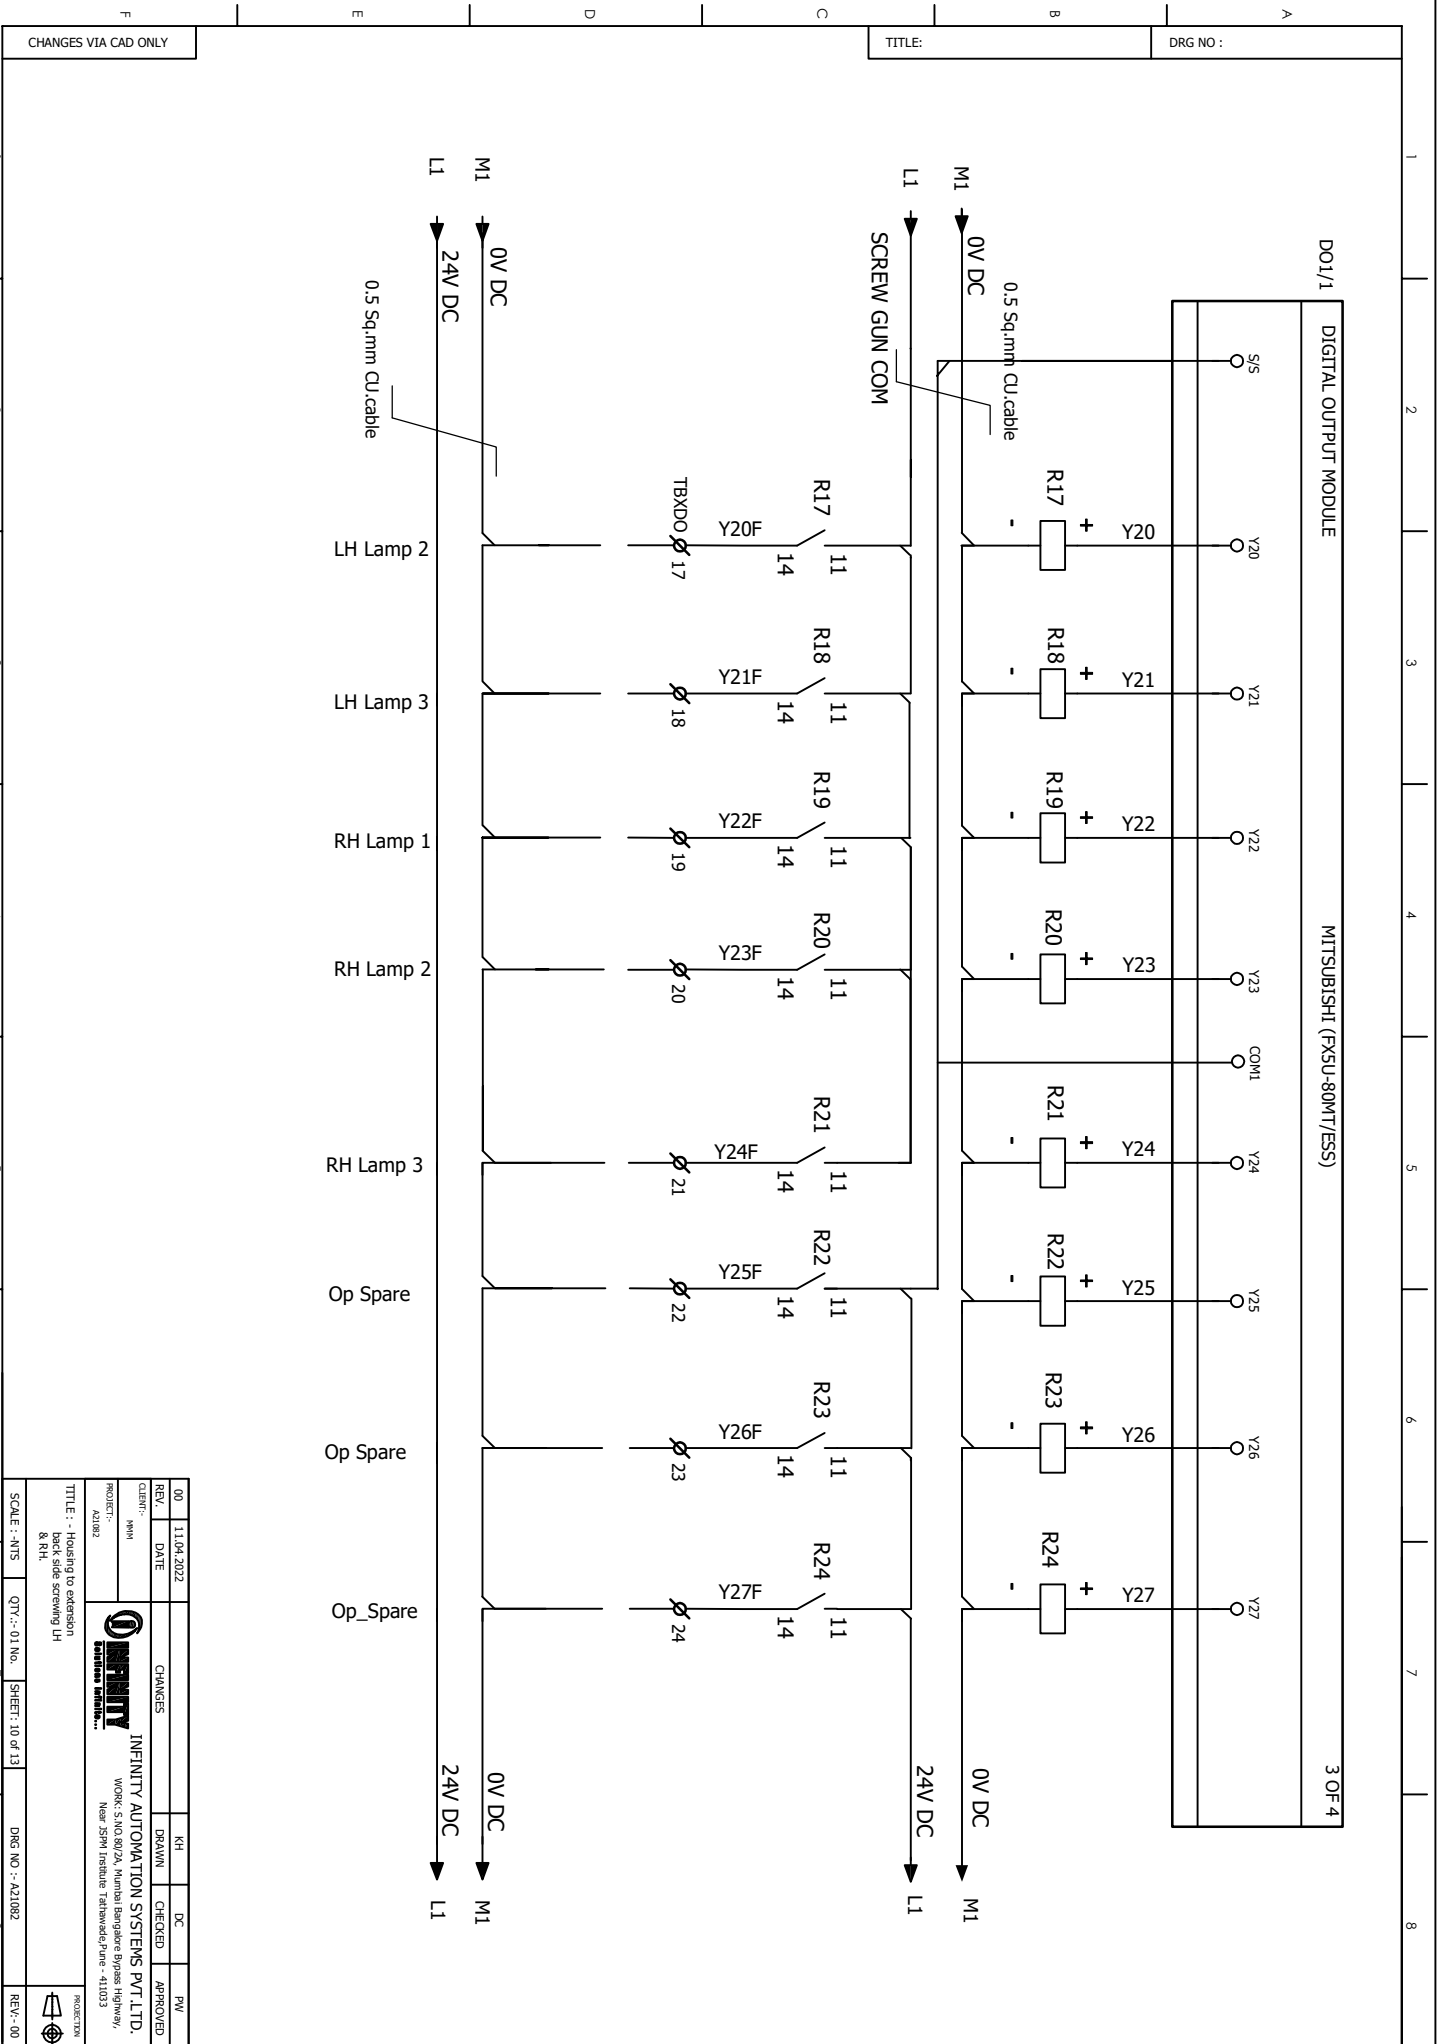



00	11.04.2022		CHANGES	MM	DC	PM
REQ.	DATE					
CUSTOMER:	MM					
PROJECT:	A21082					
 INFINITY AUTOMATION SYSTEMS PVT. LTD. WORKS : S.NO.80/24, Minnambal Bangaluru Bypass Highway, Near 59th Institute, Bellurhally Puram - 611033						
TITLE : - Housing to extension back side screwing LH & RH.						
SCALE : - NTS	QTY : - 01.No.	SHEET : 12 of 13	DWG NO : - A21082			
REV:-00						

TERMINALS DETAILS-
TERMINALS DETAILS - POWER/CONTROL TERMINALS

XPR

TERM. NO.	1	2	3
WIRE NO.	R	N	PE

TBX1

TERM. NO.	1	2	3
WIRE NO.	R3	N3	PE

TBX2

TERM. NO.	1	2
WIRE NO.	R2	N2

24V & 0V DC TBX1

TERM. NO.	1	3	5	7
WIRE NO.	L1	L1	M1	M1
TERM. NO.	2	4	6	8
WIRE NO.	L1	L1	M1	M1

TITLE:

DRG NO :

TBXD1

TERM. NO.	1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39
WIRE NO.	X0	X2	X4	X6	X10	X12	X14	X16	X20	X22	X24	X26	X30	X32	X34	X36	X40	X42	X44	X46
TERM. NO.	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
WIRE NO.	X1	X3	X5	X7	X11	X13	X15	X17	X21	X23	X25	X27	X31	X33	X35	X37	X41	X43	X45	X47

TBXD0

TERM. NO.	WIRE NO.																			
	1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39
	Y0F	Y2F	Y4F	Y6F	Y10F	Y12F	Y14F	Y16F	Y20F	Y22F	Y24F	Y26F	Y30F	Y32F	Y34F	Y36F	Y40F	Y42F	Y44F	Y46F
	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
	Y1F	Y3F	Y5F	Y7F	Y11F	Y13F	Y15F	Y17F	Y21F	Y23F	Y25F	Y27F	Y31F	Y33F	Y35F	Y37F	Y41F	Y43F	Y45F	Y47F

CHANGES VIA CAD ONLY

REV.	00	11.04.2022	CHANGES	KH	DC	PAV
REV.		DATE		DRAWN	CHECKED	APPROVED
CLIENT:-	INFINITY AUTOMATION SYSTEMS PVT. LTD.					
PROJECT:-	WORK: S 10/80/2A/0108/1A BRANCOLE HIGHWAY /A/BRK					
	25PM BRKS. COLLEGE /M/HAWADE PUNE - 41003					
TITLE :- Housing to extension back side screwing LH & RH.						
SCALE :-	MTS	QTY. :-	QI No.	SHEET :-	13 of 13	DRG NO :-
						AZ1082
REV:-	00					PROJECTION