


USER MANUAL

STATION 1: HOUSING TO EXTENSION SNAP LOCK STATION 2: HOUSING TO EXTENSION SNAP LOCK

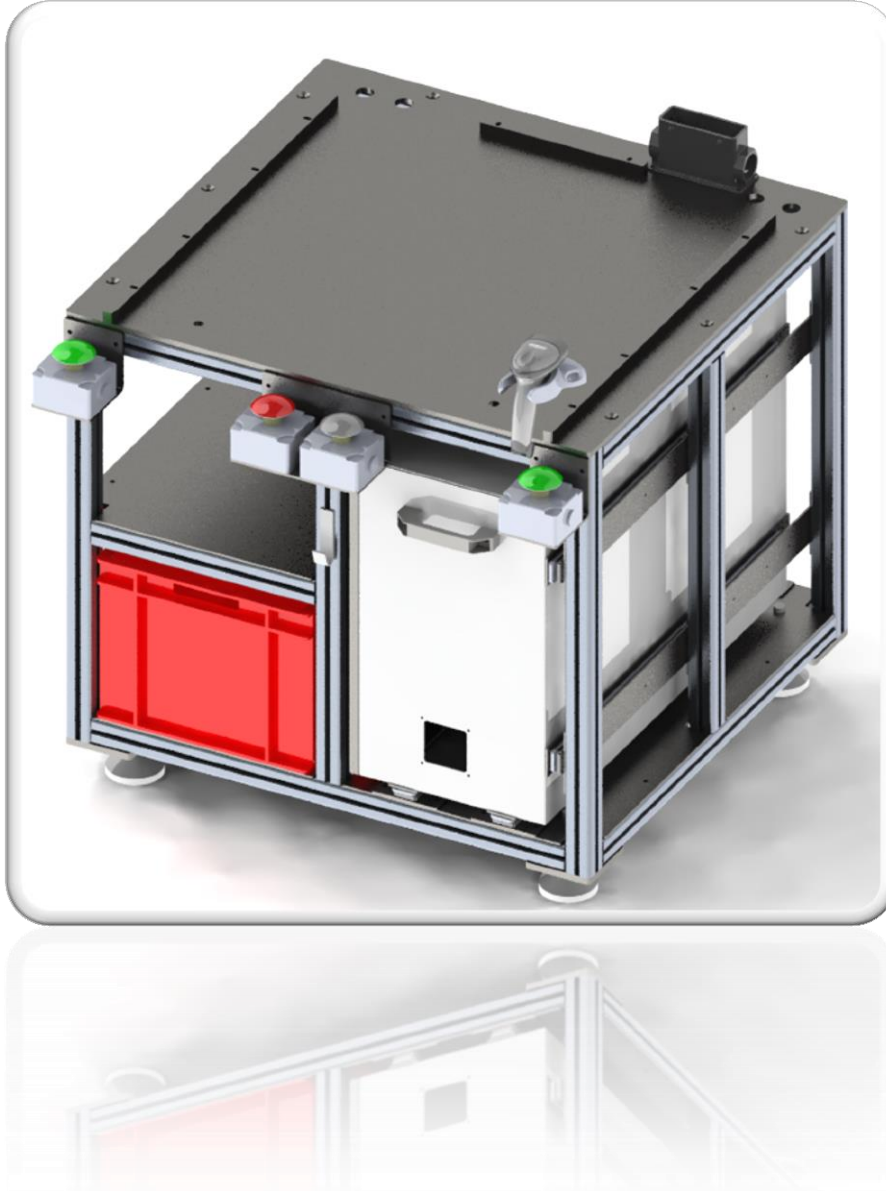

CLIENT NAME:

MARELLI MOTHERSON AUTOMOTIVE LIGHTING INDIA PRIVATE LIMITED
Ambethan 165/1

MACHINE MANUFACTURED BY:

INFINITY AUTOMATION SYSTEMS PVT LTD.

Unit 2:S. No. 80/2A, Mumbai Bangalore Bypass Highway

Near JSPM Institute,

Tathawade, Pune-411033.

Contents

1. Introduction	3
2. Safety regulations	4
2.1 Term definitions.....	4
2.2 Significance of the safety regulations	4
2.3 Information and symbols	4
2.3.1 Warning and safety notices	4
2.3.2 Notes and symbols in the manual.....	5
2.4 Application limitations.....	5
2.5 Do's and Don'ts for PCBA+Metal Plate +EMI Shield Assembly LH & RH Station	6
3. DESCRIPTION OF THE MACHINE.....	7
3.1 Layout of Station:	7
3.2 Description of Station:	7
3.3 Assembly Drawings:.....	8
3.4 Pneumatic Drawings:	10
3.5 Operation	12
3.5.1 Safety regulations for PCBA +Metal Plate +EMI Shield Assembly LH & RH Station.....	12
3.5.2 Steps for Operation Sequence	12
4. LIFTING, TRANSPORTATION & PACKAGING:	13
4.1 Lifting Arrangement:	13
4.2 Transportation:	13
4.3 Packaging:	13
5. HMI SCREENS	14
6. SPARE LIST.....	24
7. FLOW CHART.....	28
8. TROUBLESHOOT.....	29
9. ELECTRICAL DRAWING.....	30

1. INTRODUCTION

We are certain that you have made the right choice with our product and thank for your trust.

For your personal safety

Before carrying out any activities on or with the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station, please carefully read these operating instructions first, in particular the chapter on "Safety regulations".

Application area of these operating instructions

These operating instructions describe the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station and provide all information required for safe operation and maintenance of functionality. Please keep these operation instructions available at all times for all persons involved with the machine.

Questions or unclear points

Please contact immediately if you have any questions or unclear points:
Original language of assembly instructions is English.

© Copyright Infinity Automation Systems Pvt. Ltd.

2. SAFETY REGULATIONS

2.1 Term definitions

The following terms are used with regards to safety:

Personnel qualification

The work to be implemented with or on the product is described in the corresponding chapters in the operating instructions. The personnel qualifications listed in this chapter (in "Introduction") describes the minimum requirements for personnel regarding training and competences for implementing this work.

Personnel

Personnel are people who meet the personnel qualifications. Only such personnel are authorized to implement the work described in the applicable chapters.

User

Users are persons who cannot be identified as personnel but who still carry out activities with or on the product.

Operator

The operator is the owner of the product. This is irrespective of whether the product is:

- Operated as a stand-alone machine
- Operated as part of a system or
- Operated by a third party

Product life phases

The product life phases are the state or usage phases of the product. These range from leaving the assembly hall to disassembly and disposal, and are divided into correspondingly logical sections (chapters) in these operating instructions.

2.2 Significance of the safety regulations

These safety regulations contain all behavior regulations and generally applicable danger information. The safety of the user and the personnel can only be ensured when these safety regulations and the safety information listed in the individual chapters are strictly complied with and followed. The operator is responsible for the enforcement.

2.3 Information and symbols

2.3.1 Warning and safety notices

The warning and safety notices used in these operating instructions have the following significance:

	 CAUTION Indicates a hazard with low risk which, if not avoided, could result in minor or moderate injury.
--	--

	 WARNING Indicates a possible hazard with medium risk which, if not avoided, could result in death or serious injury.
--	---

	 DANGER Indicates an immediate hazard with high risk which, if not avoided, will result in death or serious injury.
--	---

NOTICE	
Indicates practical information and tips that permit the best use of machinery, system or equipment.	

CAUTION
To warn of material damage.

2.3.2 Notes and symbols in the manual.

The following information and symbols are used in manual.

Warning signs	Mandatory sign	Mandatory sign
Danger of hand injuries	Wear safety goggles	Wear gloves
		

2.4 Application limitations

The following technical operating instructions and ambient conditions must be complied with for the operation of the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station.


Environmental conditions	
Working temperature	+10 ... +50 °C
Storage temperature	- 10 ... +70 °C
Relative humidity	Max. 90%, non-condensing
Mechanical power supply	
Operating pressure	2-6 bar
Mechanical	
Machine Weight	150kg Approx.
Electrical power supply	
Supply voltage	230 VAC
Input Power	8 kW
Full Load Current	16 Amp
Primary Fuse	32 Amp
Max. Short Circuit Interrupting Cap	14 Amp
Control Voltage	24 V

2.5 Do's and Don'ts for PCBA+Metal Plate +EMI Shield Assembly LH & RH Station


- Regular checking of penumatics parts.
- Regular checking of drag chain.
- Regular checking 2/2 valve.

3. DESCRIPTION OF THE MACHINE


3.1 Layout of Station:

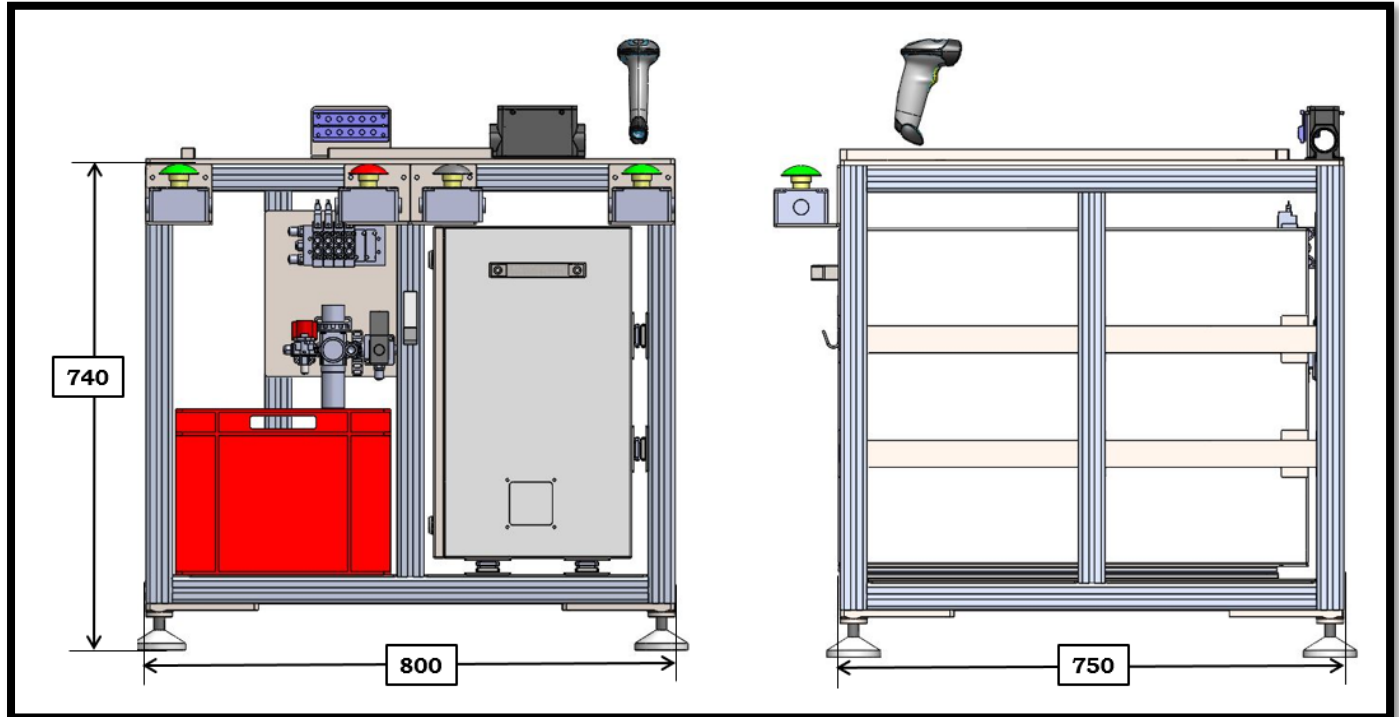


3.2 Description of Station:

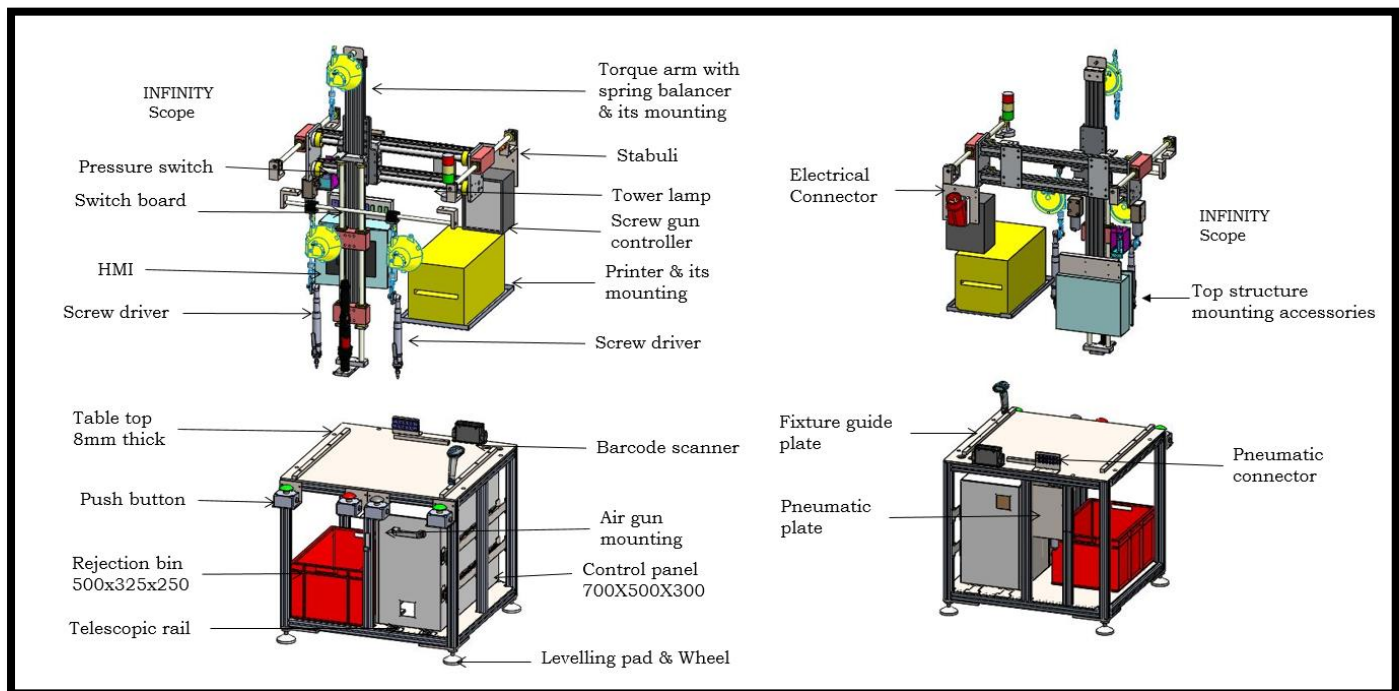


3.3 Assembly Drawings:

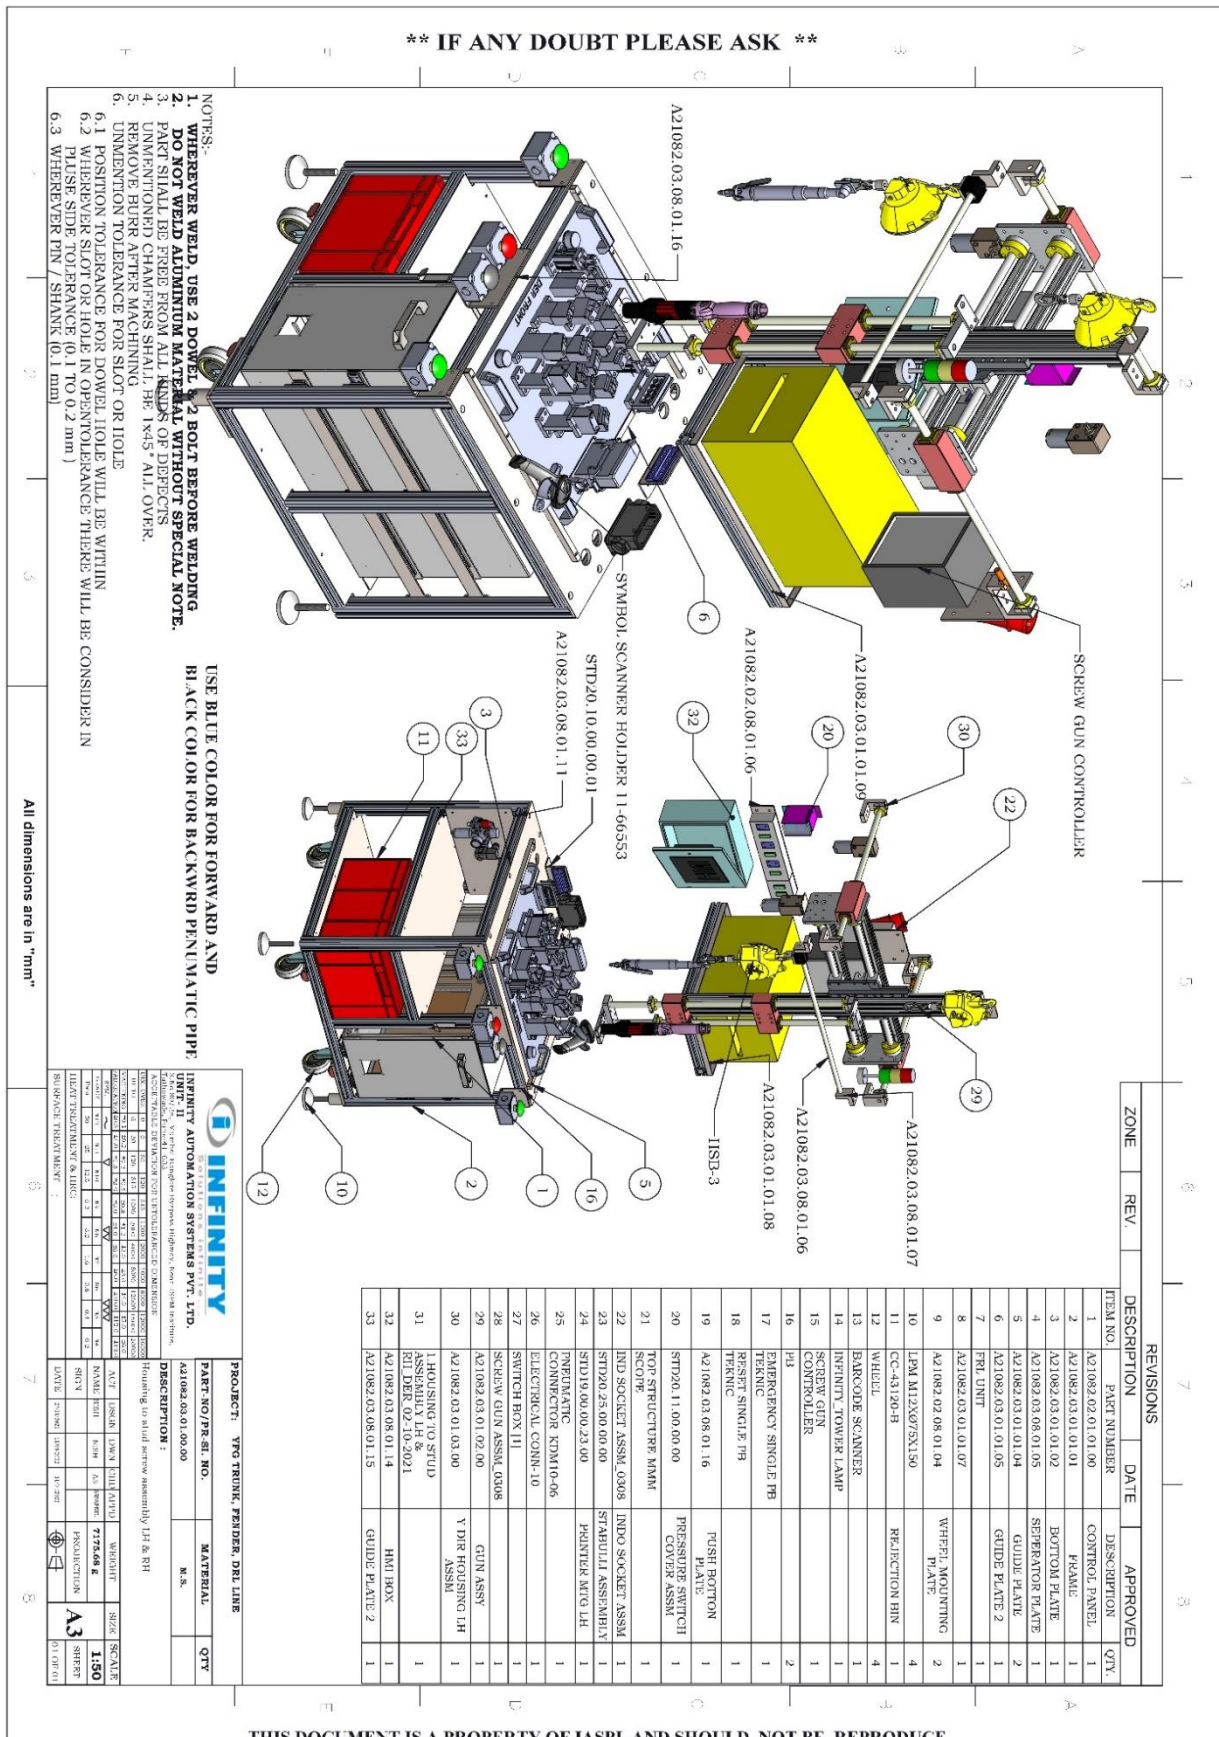

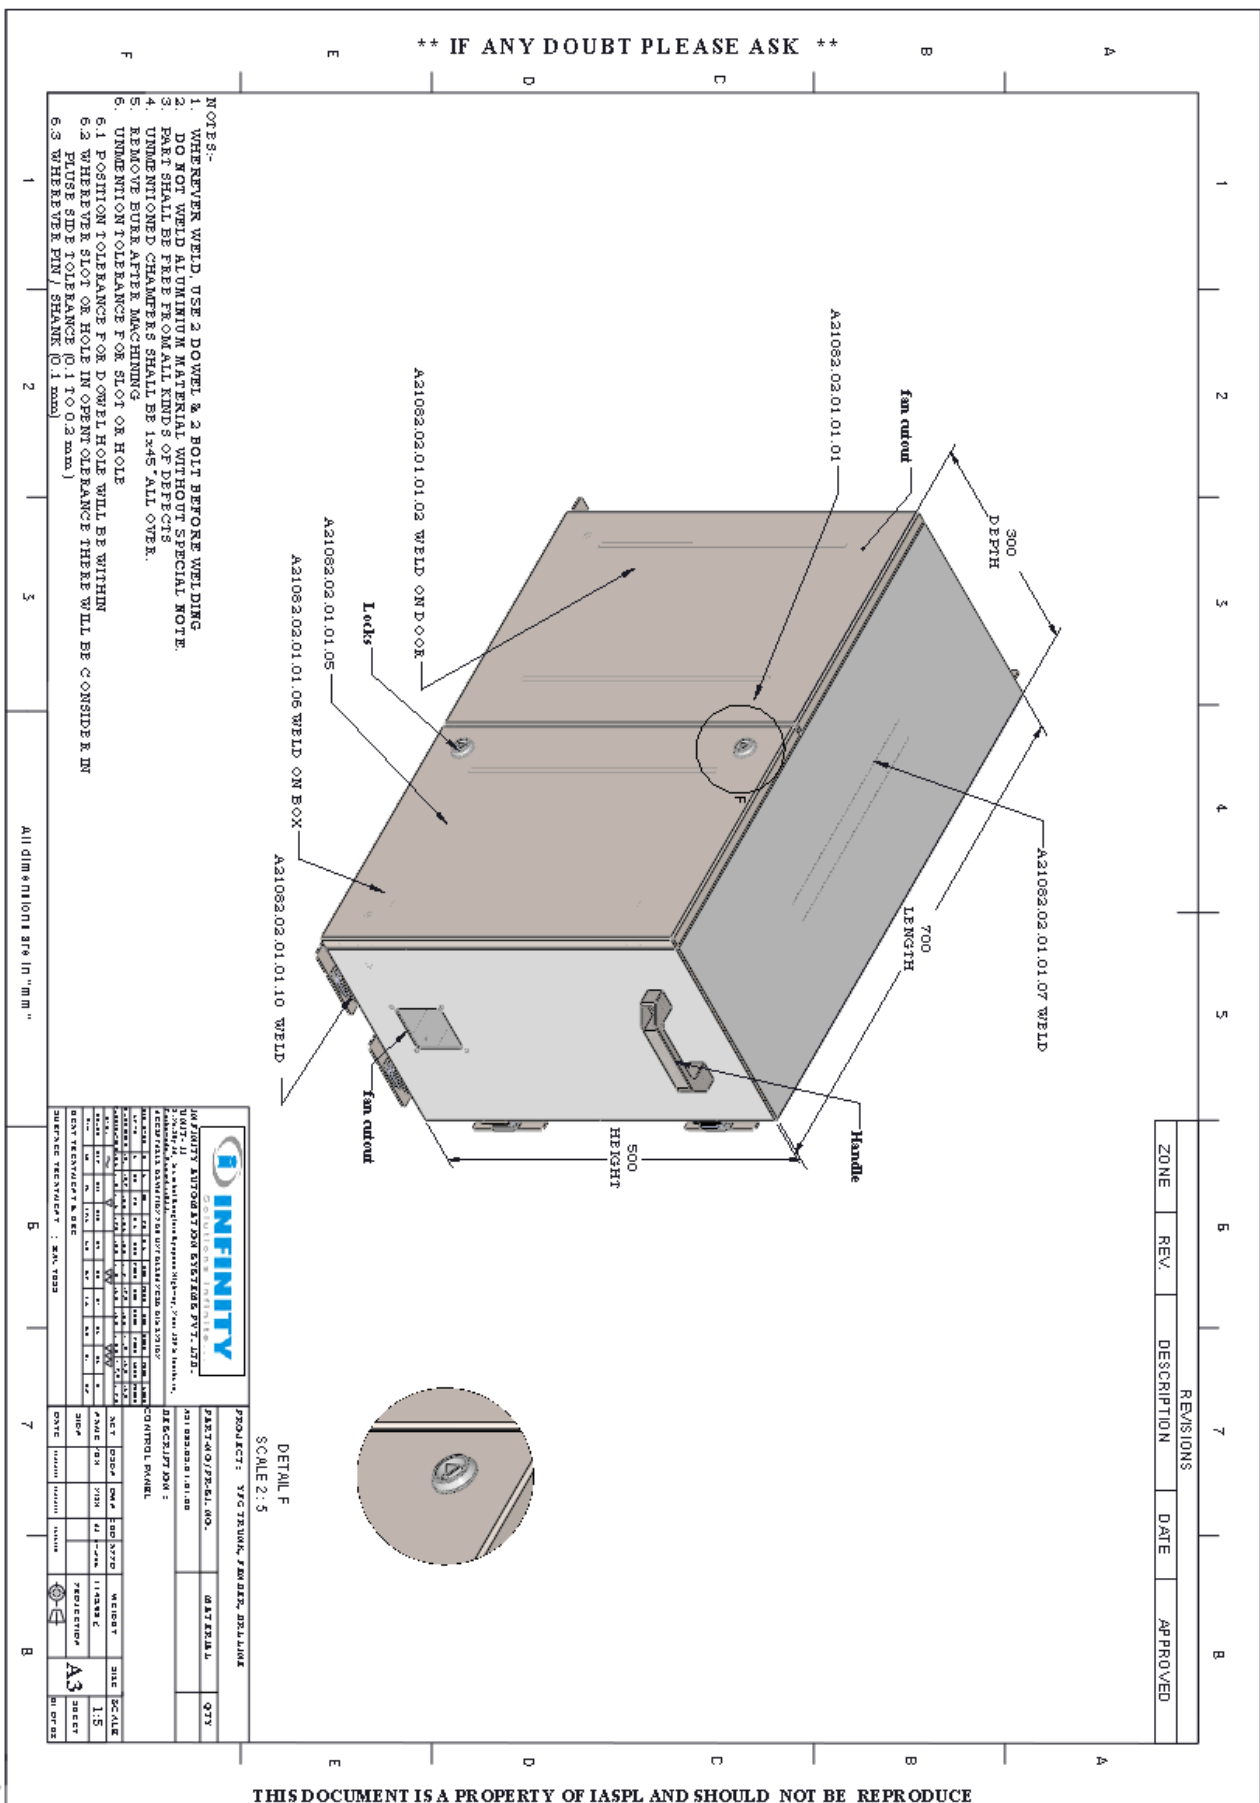

3.4 Pneumatic Drawings:

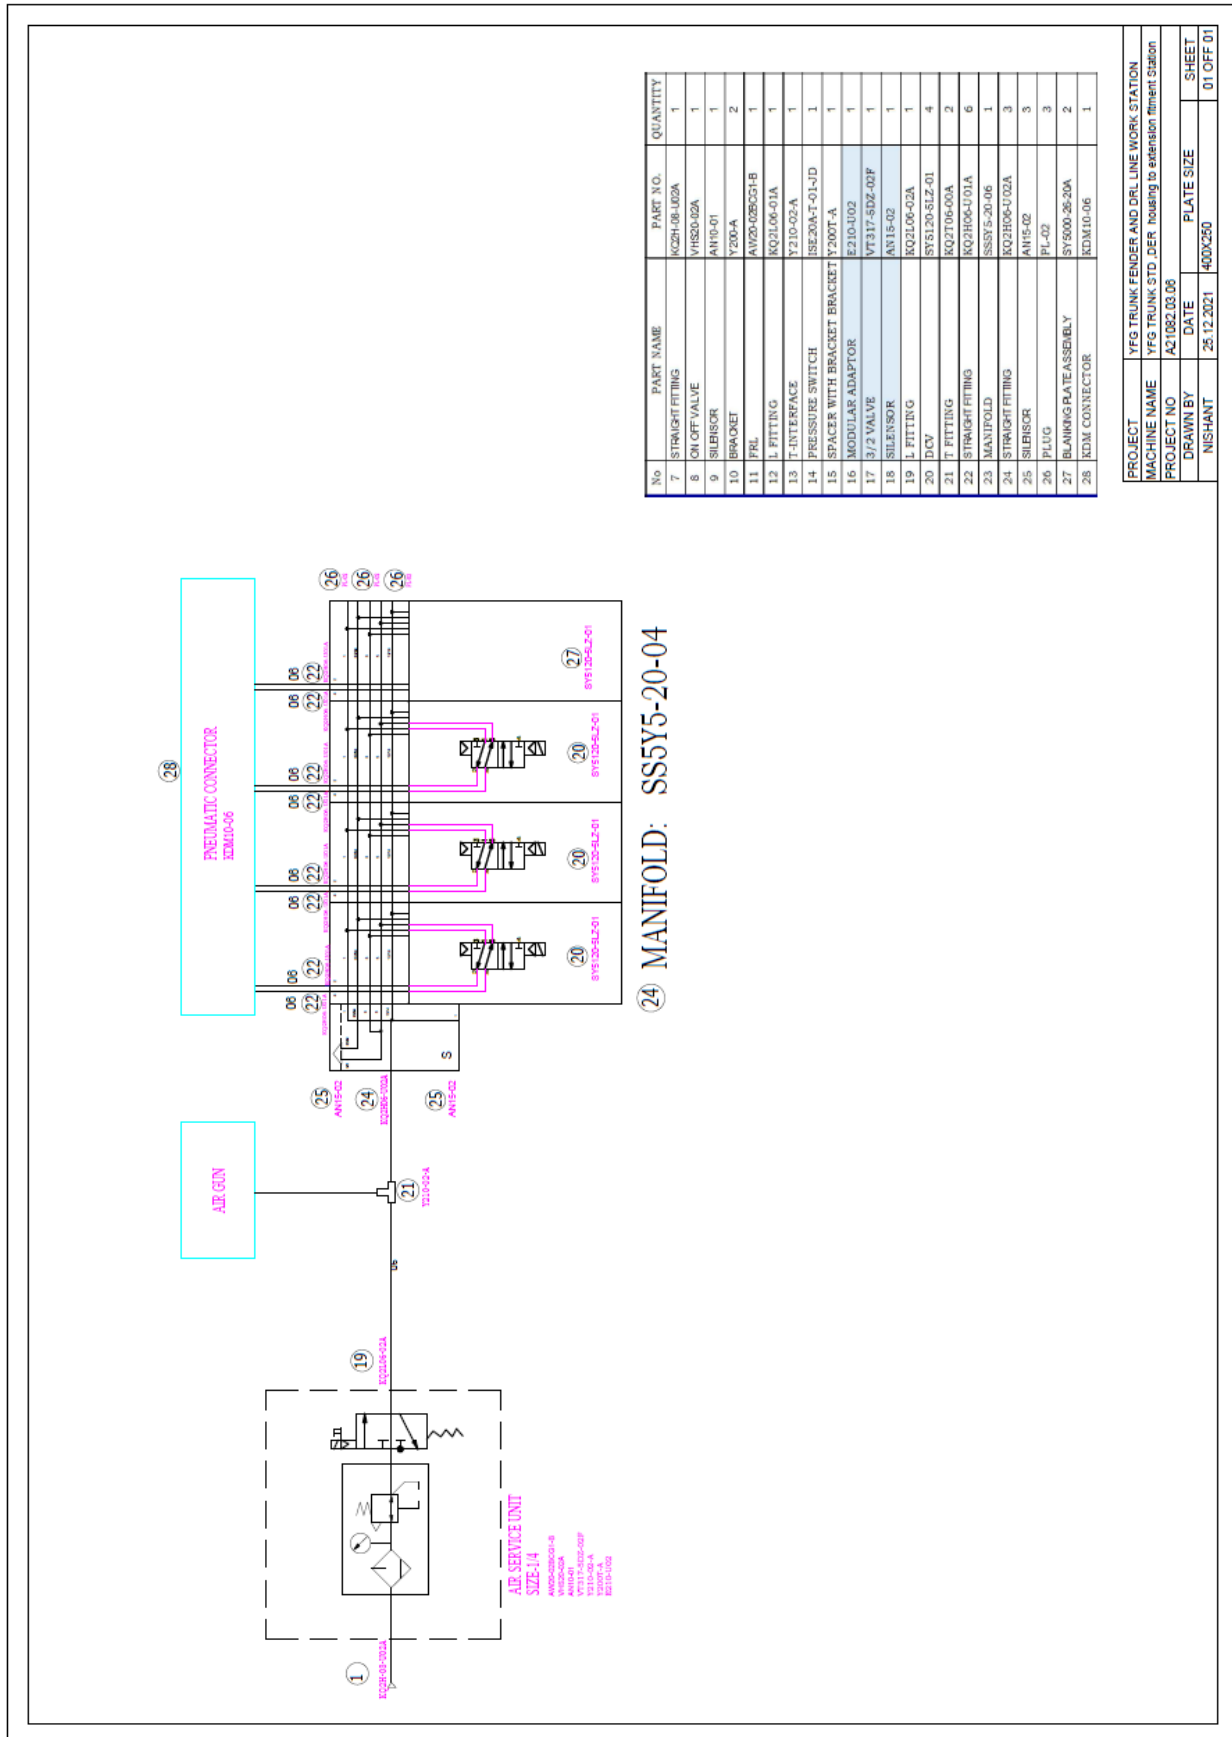



Screw Gun

3.5 Operation

3.5.1 Safety regulations for PCBA +Metal Plate +EMI Shield Assembly LH & RH Station

1. Any type of maintenance work done by authorized person.
2. Always turn off Machine switch while any type of maintenance work.

3.5.1.1 Personal Safety Equipment

All users are obliged to wear the following personal safety equipment for all work:

- Tightly fitting working clothes
- Safety goggles
- Gloves

3.5.2 Steps for Operation Sequence:

- Pick housing LH & RH from bin.
- Place LH & RH housing on fixture.
- Pick LH & RH extension from bin.
- Do the snap lock LH & RH extension with LH & RH housing.
- Press cycle start (If Extension presence ok then part get clamped & screwdriver enable)

4. LIFTING, TRANSPORTATION & PACKAGING:

4.1 Lifting Arrangement:

For lifting of machine, there is fork lift.

4.2 Transportation:

Transfer the final test workstation and all of its separately packed associated components, in a closed vehicle or closed shipping container only. Each component of this machine should remain horizontal at all times during transport.

A fork truck should be used to load/offload the pallet holding this machine into/from vehicles.

4.3 Packaging:

Put final test workstation at an appropriate transport pallet that corresponds to the weight, and secure it against sliding. Protect each table from dirt and moisture by foil. Then house it completely.

Remove all components and subassemblies that are not permanently attached to the final test workstation, wrap them in plastic foil, and pack them in separate shipping containers.

Secure Component groups at the final test workstation against uncontrolled movement.

5. HMI SCREEN:

5.1. MAIN SCREEN:

- Click on 'MAIN MENU' button, below screen appears.



FIG.1.MAIN SCREEN

- The software has menu buttons as given below:
 1. Program
 2. Auto
 3. Manual
 4. Input
 5. Output
 6. Configuration
 7. Alarm History

5.2. PROGRAM SCREEN:

- Click on '**PROGRAM**' button, below screen appears.

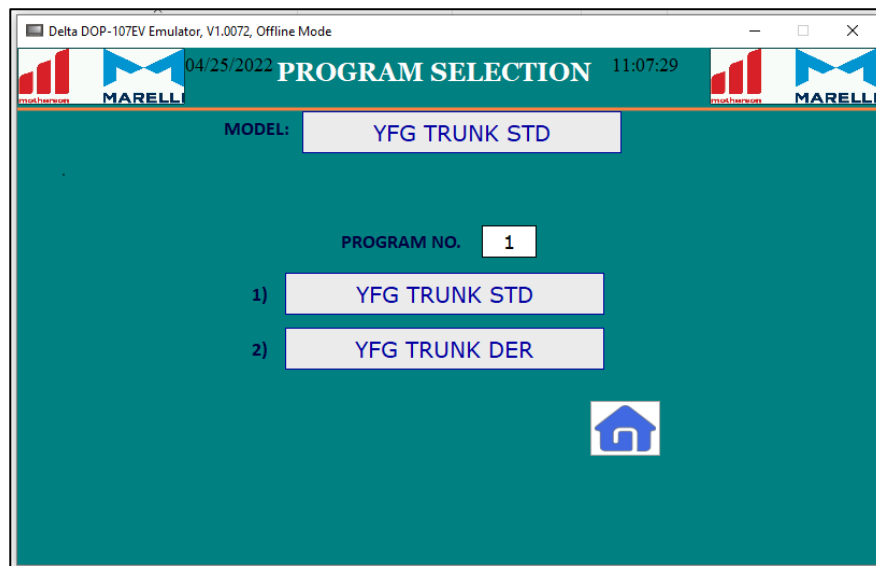


FIG.2.PROGRAM

- Here for program selection enter one or two in Program No. field
- Description is displayed in the fields below Program No.

5.3. AUTO:

- Click on 'AUTO' button, below screen appears.

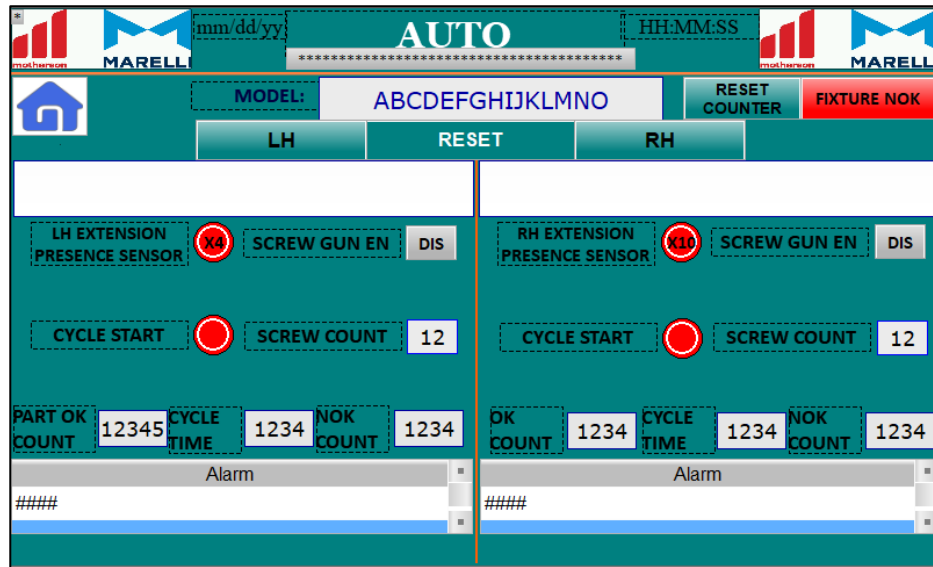


FIG.3.AUTO

- This screen display live cycle status.
- This screen shows cycle time is in second.
- Here also we display sensors, if it is present then it indicates with Green color and if it is not then indicates with Red color.
- It also indicates OK and NOK part count & screw count.

5.4. MANUAL:

- Click on 'MANUAL' button, below screen will appear.


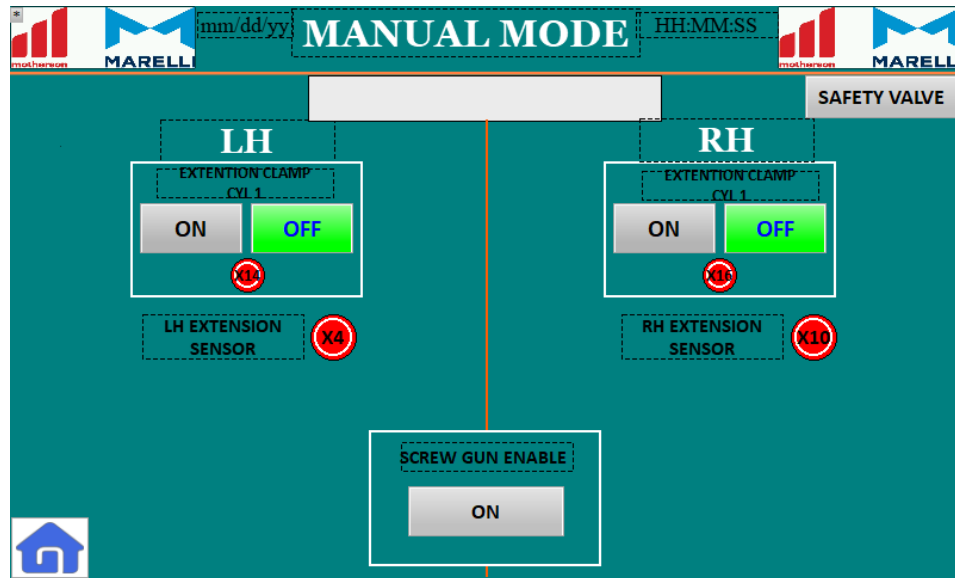


FIG.4.MANUAL OPERATION

- Here all the cylinders can be operated manually after switching the safety valve ON.
- Part Presence and Reed Switch feedback for indication.
- Screw gun can be enable & disable manually.
- Press **HOME** button to go back.


5.5. INPUT LIST:

- Click on 'INPUT' button, below screen will appear.

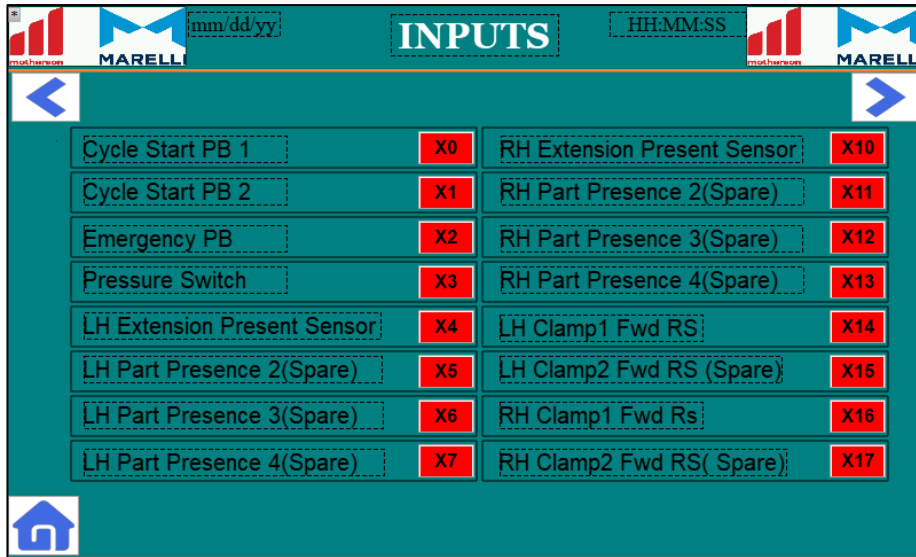

INPUTS	
Cycle Start PB 1	X0
Cycle Start PB 2	X1
Emergency PB	X2
Pressure Switch	X3
LH Extension Present Sensor	X4
LH Part Presence 2(Spare)	X5
LH Part Presence 3(Spare)	X6
LH Part Presence 4(Spare)	X7
RH Extension Present Sensor	X10
RH Part Presence 2(Spare)	X11
RH Part Presence 3(Spare)	X12
RH Part Presence 4(Spare)	X13
LH Clamp1 Fwd RS	X14
LH Clamp2 Fwd RS (Spare)	X15
RH Clamp1 Fwd Rs	X16
RH Clamp2 Fwd RS(Spare)	X17

FIG.5.1.INPUT LIST

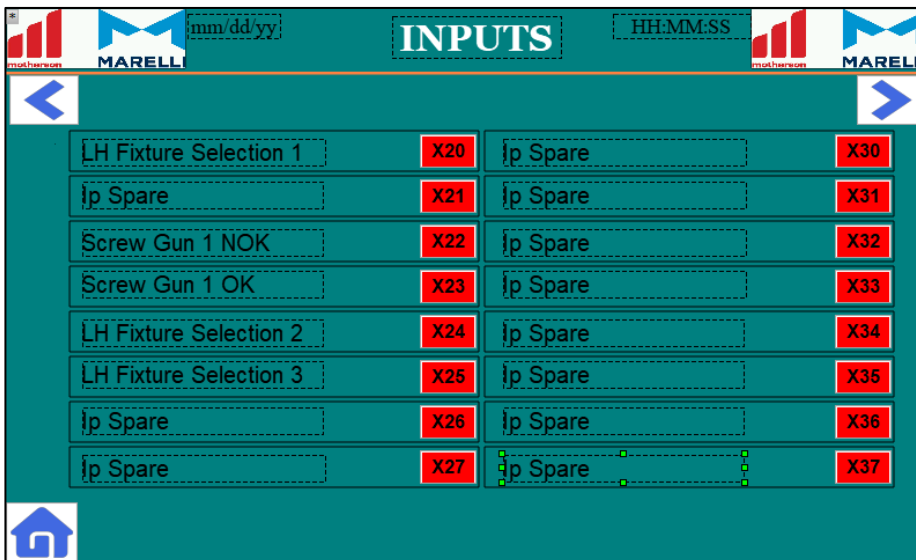

INPUTS	
LH Fixture Selection 1	X20
Ip Spare	X21
Screw Gun 1 NOK	X22
Screw Gun 1 OK	X23
LH Fixture Selection 2	X24
LH Fixture Selection 3	X25
Ip Spare	X26
Ip Spare	X27
Ip Spare	X30
Ip Spare	X31
Ip Spare	X32
Ip Spare	X33
Ip Spare	X34
Ip Spare	X35
Ip Spare	X36
Ip Spare	X37

FIG.5.2.INPUT LIST

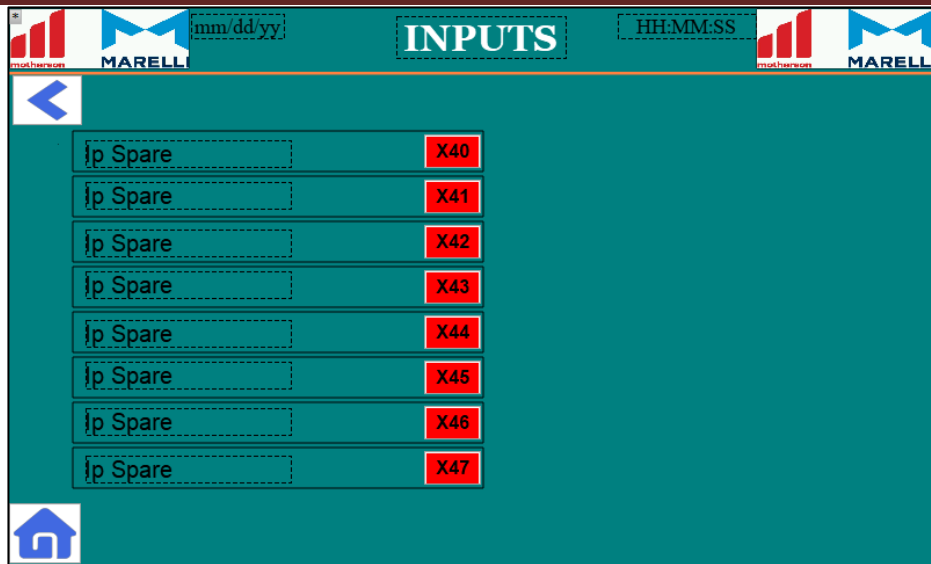


FIG.5.3.INPUT LIST

- For maintenance purpose all the inputs are displayed on the above screen.
- If input is ON, indicator turns GREEN. If it is OFF, indicator turns RED.
- Press forward arrow button for go to next window.
- Press backward arrow button for go back.
- Press HOME button to go on main screen.

5.6. OUTPUT LIST:

➤ Click on 'OUTPUT' button, below screen will appear.

mm/dd/yy		OUTPUT		HH:MM:SS	
TOWER LAMP GREEN	Y0	RH CLAMP CYL 2(Spare)	Y10		
TOWER LAMP YELLOW	Y1	SCREW GUN 1 ENABLE	Y11		
TOWER LAMP RED	Y2	Op Spare	Y12		
TOWER LAMP BUZZER	Y3	Op Spare	Y13		
SAFETY VALVE	Y4	Op Spare	Y14		
LH CLAMP CYL. 1	Y5	Op Spare	Y15		
LH CLAMP CYL 2(Spare)	Y6	Op Spare	Y16		
RH CLAMP CYL. 1	Y7	Op Spare	Y17		

FIG.6.1.OUTPUT LIST

mm/dd/yy		OUTPUT		HH:MM:SS	
Op Spare	Y20	Op Spare	Y30		
Op Spare	Y21	Op Spare	Y31		
Op Spare	Y22	Op Spare	Y32		
Op Spare	Y23	Op Spare	Y33		
Op Spare	Y24	Op Spare	Y34		
Op Spare	Y25	Op Spare	Y35		
Op Spare	Y26	Op Spare	Y36		
Op Spare	Y27	Op Spare	Y37		

FIG.6.2.OUTPUT LIST

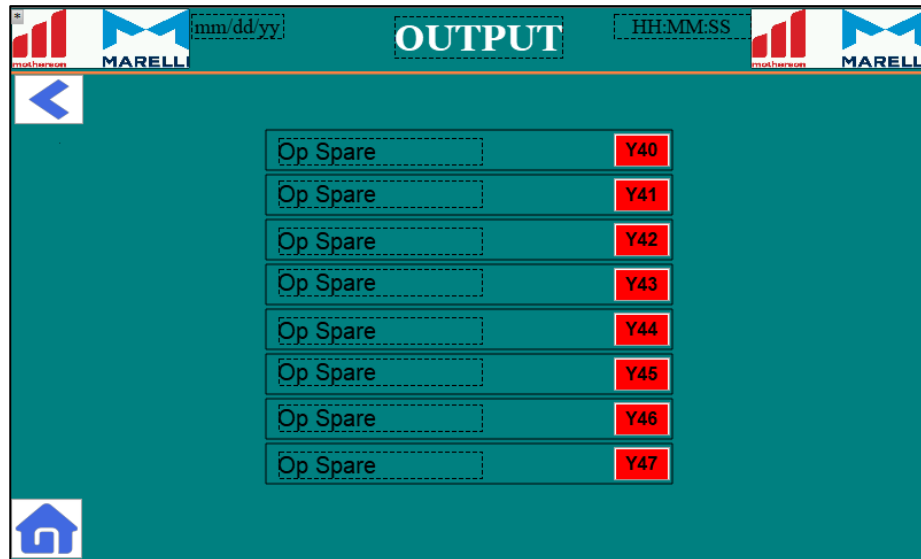


FIG.6.3. OUTPUT LIST

- For maintenance purpose all the outputs are displayed on the below screen.
- If output is ON then indicator turns GREEN if it is OFF then indicator turns RED.
- Press forward arrow button for go to next window.
- Press backward arrow button for go back.
- Press HOME button to go on main screen.

5.7. CONFIGURATION:

- Click on 'CONFIGURATION' button, below screen will appear.

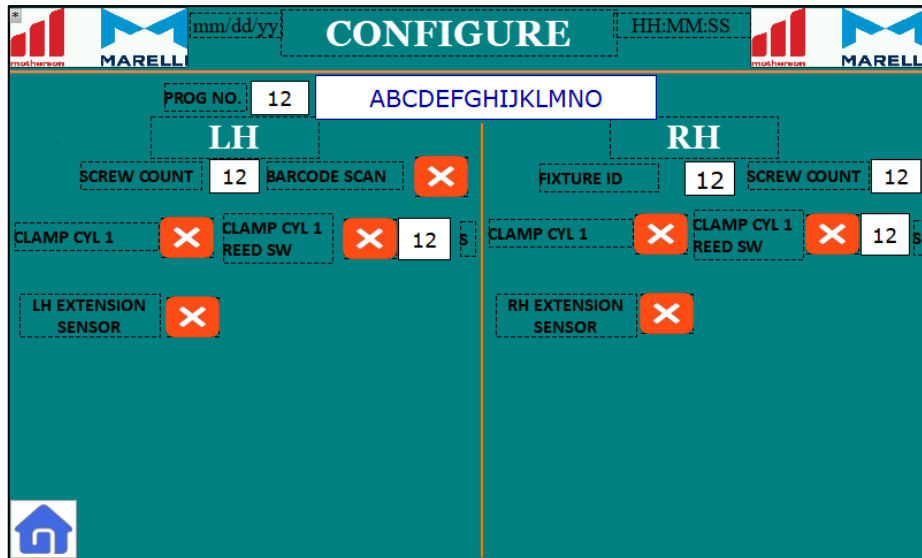


FIG.7. CONFIGURE

- To open this screen first we have to enter password.
- Here we can create a new program.
- Here we can enable or disable sensors and cylinder by pressing the button.
- Also we can enter screw count and REED SW delay timing.
- Press **HOME** to go to Home Screen.

5.8. ALARM SCREEN:

- Click on ‘**ALARM HISTORY**’ button, below screen will appear.

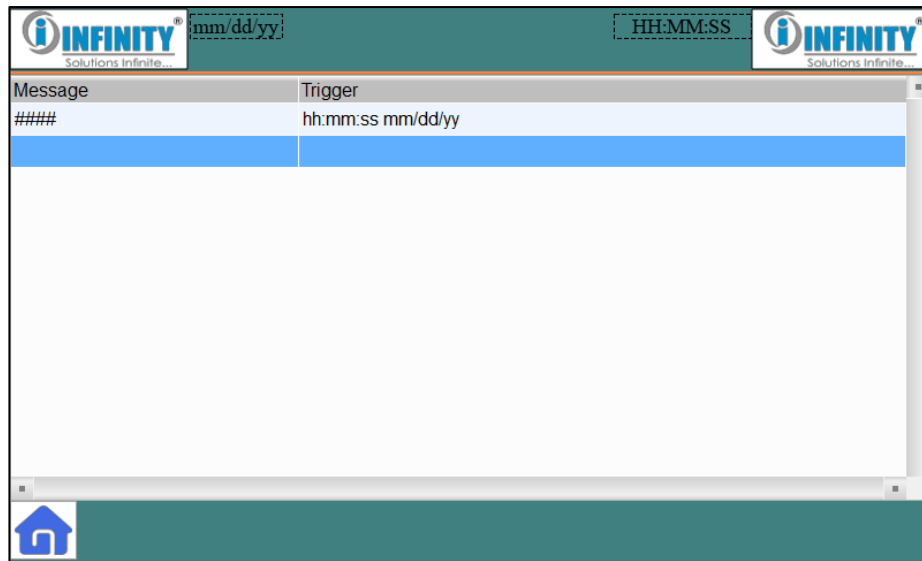


FIG.8. ALARM HISTORY

- Alarm history can be shown on the screen.

6. SPARE LIST:

• ELECTRICAL BOM:

Project No.: A21082				
NO.	Part Number	Name/Description	Qty	Make
1	DOP-107EV	HMI.HMI 7" In build Ethernet	1	DELTA
2	FX5U-80MT/ESS	PLC.CPU 40 I/P(Sink/Source).40 O/P(Source) 100 to 240 VAC Supply	1	MITSUBHISHI
3	6GK5005-0BA00-1AB2	6GK5005-0BA00-1AB2.SCALANCE XB005 unmanaged Industrial Ethernet Switch for 10/100	1	SIEMENS
4	XVGB3S	Tower lamp RAG with Buzzer 24V DC	1	SCHNEIDER
5	ONE WAY SIZE 90X80X52 MM	PENDANT	4	TEKNIC
6	2AM2	PUSH BUTTON. METALLIC BLACK MUSHROOM TYPE PUSHBUTTON, 40MM, MOMENTARY (SPRING RETURN)	1	TEKNIC
7	2AMJ3	PUSH BUTTON. METALLIC GREEN MUSHROOM TYPE PUSHBUTTON, 60MM, MOMENTARY	2	TEKNIC
8	2AML4	PUSH BUTTON. METALLIC RED MUSHROOM TYPE PUSHBUTTON, 40MM, LATCHING (ENERGENCY PUSHBUTTON)	1	TEKNIC
9	S2	NC CONTACT METALLIC RED NORMALLY CLOSED CONTACT ELEMENTS	1	TEKNIC
10	S1	NO CONTACT METALLIC GREEN NORMALLY OPEN CONTACT ELEMENTS	3	TEKNIC
11	M8	QUICK RELEASE OPENING	1	LOCAL
12	555234	INDUSTRIAL PLUG.Straight plug P17 - IP44 - 200/250 V~ - 32 A - 2P+E	1	LEGRAND
13	555254	INDUSTRIAL SOCKET.Surface mounting	1	LEGRAND


		socket P17 - IP44 - 200/250 V~ - 32 A - 2P+E		
14	6755 50	SERVICE SOCKET MYLINC 6 AMP SOCKET 2/3 PIN	3	LEGRAND
15	6740 99	SERVICE SOCKET MYLINC SURFACE BOX - 9 MODULES	1	LEGRAND
16	6755 69	SERVICE SOCKET - MYLINC PLATES - 9 MODULES	1	LEGRAND
17	GOLDEN-30W-T8 LED(2ft) 6500K DAY-LIGHT	GOLDEN-30W-T8 LED(2ft) 6500K DAY-LIGHT	2	OREVA
18	CF-200	Machine Fan. 200 MM Cabin Fan Blue Colour	1	REMI
19	SHUNT_I/P-0-5A,O/P-0-75mV	I/P-0-5A,O/P-0-75mV	6	RISHABH
20	SI-101	CONVERTER, I/P-0-75mVDC, O/P-0-10VDC AUX SUPPLY - 24...60V DC	6	RISHABH
21	15X40MM(HXL) ENGRAVING	NAME PLATE. SQUARE ENGRAVING		LOCAL
22	ROUND Dia 22.5MM	NAME PLATE. ROUND ENGRAVING		LOCAL
23	857-304	Slim Relay.Relay module; Nominal input voltage: 24 VDC; 1 changeover contact; Limiting continuous current: 6 A; Yellow status indicator; Module width: 6 mm; 2,50 mm ² ; gray	38	WAGO
24	2946-859-410-ND	SHORT LINK.PUSH-IN TYPE JUMPER BAR; 10-WAY	4	WAGO
25	KUDF 4AD	Fuse Terminal. Dinrail Mouniting 800V, 6.3A Fuse Terminal,4Sq.mm Wire Size	6	ELMEX
26	VCF1	MAINS ON/OFF.Mains ON/OFF 32A	1	SCHNEIDER
27	A9N2P32C	MCB.2 Pole 32 Amp	1	SCHNEIDER
28	A9N2P06C	MCB.2P,6AMP	1	SCHNEIDER
29	A9N2P16C	MCB.2 POLE MCB,16A	1	SCHNEIDER
30	XB7EV04MP	INDICATION LAMP.POWER ON INDICATOR. RED LED 230VAC	1	SCHNEIDER

31	T5 LED	TUBELIGHT. 1 FT LED TUBE LIGHT	1	PHILIPS
32	3SE3-020-OA	LIMIT SWITCH. Siemens 1NO+1NC Contact Type Limit Switch 3SE3 020-0A	1	SIEMENS
33	3" Fan Filter Jigo	Fan Filter.3" Fan Filter	2	JIGO
34	3" Fan Grill	Fan Grill.3" Fan Grill	2	JIGO
35	3" Fan 230VAC	Fan.3" Fan 230VAC	2	JIGO
36				
37	NHP-24VDC-5A	SAMPS.SMPS 24VDC;5A	1	NHP
38	6755 62	SERVICE SOCKET.MYLINC PLATES -2 MODULES	1	LEGRAND
39	673302	SERVICE SOCKET.MYLINC SURFACE BOX -2 MODULES	1	LEGRAND
40	6755 01	SERVICE SOCKET MYLINC 6 AMP SWITCH SP	2	LEGRAND
41	6755 50	SERVICE SOCKET MYLINC 6 AMP SOCKET 2/3 PIN	1	LEGRAND
42	6733 04	SURFACE BOX.MYLINC SURFACE BOX- 4 MODULES	1	LEGRAND
43	6755 64	MODULE PLATE.MYLINC 4 MODULE PLATE-WHITE	1	LEGRAND
44	ZMPS15-10 With Display	Power Supply. DC Variable Power Supply 0 to 15VDC, 230VAC Input Supply	1	ZEAL
45	675974	MCB Switch.Mylic Modular SP MCB 16A	2	Legrand

• **PNEUMATIC BOM:**

Project No.: A21082				
No	PART NAME	PART NO.	QTY	MAKE
1	SPRING BALNCER	HSB-3	1	ENDO
2	LINEAR BEARING	SC16UU	1	SAMIK
3	DRAW CHAIN		1	IGUS
4	REJECTION BIN	FPO CRATE	1	NILKAMAL
5	STRAIGHT FITTING	KQ2H-08-U02A	1	SMC
6	ON OFF VALVE	VHS20-02A	1	SMC
7	SILENSOR	AN10-01	1	SMC
8	BRACKET	Y200-A	2	SMC
9	FRL	AW20-02BCG1-B	1	SMC
10	L FITTING	KQ2L06-01A	1	SMC
11	T-INTERFACE	Y210-02-A	1	SMC
12	PRESSURE SWITCH	ISE20A-T-01-JD	1	SMC
13	SPACER WITH BRACKET BRACKET	Y200T-A	1	SMC
14	MODULAR ADAPTOR	E210-U02	1	SMC
15	3/2 VALVE	VT317-5DZ-02F	1	SMC
16	SILENSOR	AN15-02	1	SMC
17	L FITTING	KQ2L06-02A	1	SMC
18	DCV	SY5120-5LZ-01	4	SMC
19	T FITTING	KQ2T06-00A	2	SMC
20	STRAIGHT FITTING	KQ2H06-U01A	6	SMC
21	MANIFOLD	SS5Y5-20-06	1	SMC
22	STRAIGHT FITTING	KQ2H06-U02A	3	SMC
23	SILENSOR	AN15-02	3	SMC
24	PLUG	PL-02	3	SMC
25	BLANKING PLATE ASSEMBLY	SY5000-26-20A	2	SMC
26	KDM CONNECTOR	KDM10-06	1	SMC

7. FLOW CHART:

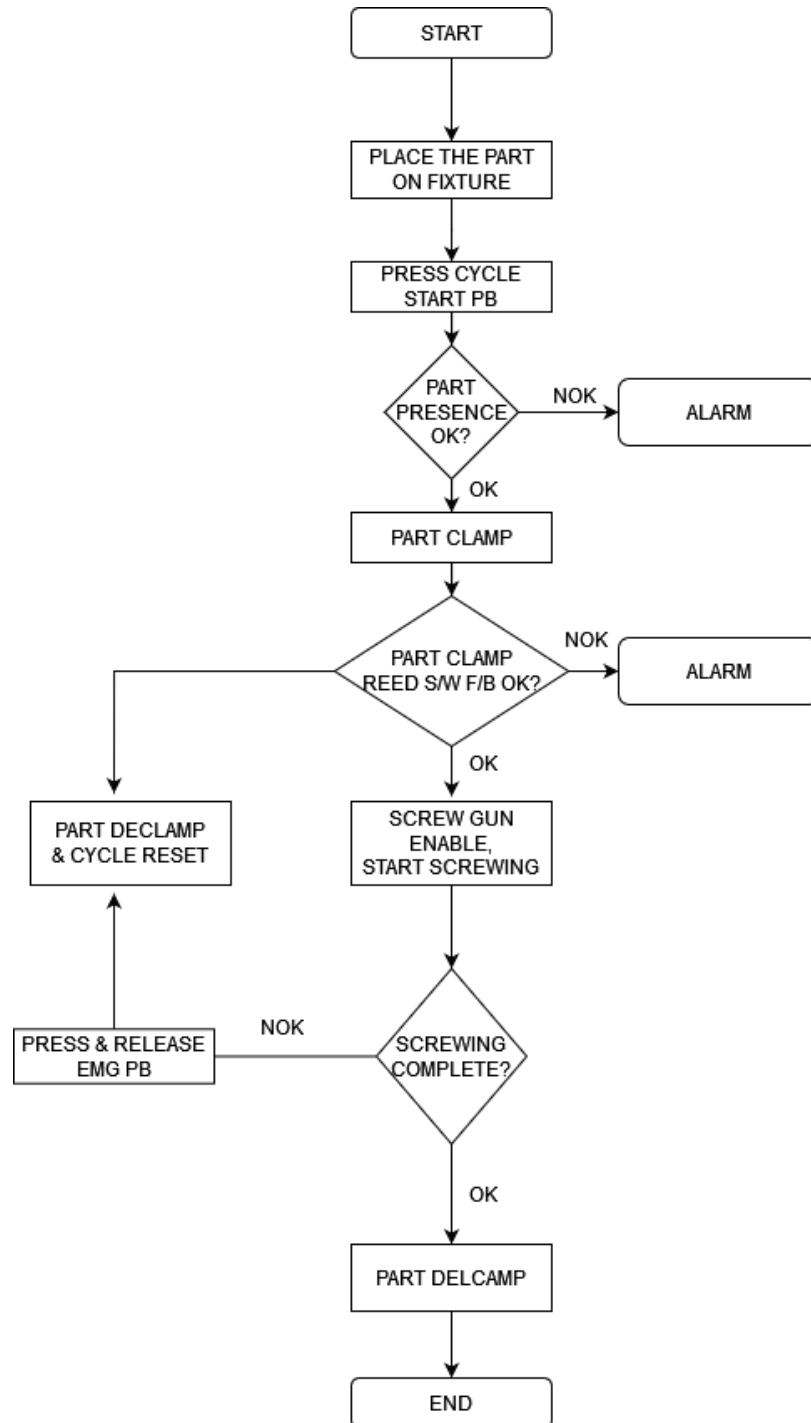

8. TROUBLESHOOT:

- **Emergency Button Pressed alarm:** Release the Emergency Button and Reset alarm from auto screen.

- **Air Pressure Alarm:** Check if air supply is in required range and reset the alarm from auto screen.


- **Clamp Reed Switch Alarm:** Reset alarm from auto screen. Check if the reed switch is glowing by operating the cylinder manually. If not, adjust the position of reed switch to sense the clamp position. Check if correct Reed Switch F/b is enabled in configuration.

- **Fixture selection is wrong alarm:** Check if the program selection is correct according to the model. Reset alarm from auto screen.


- **Part Presence Alarm:** This alarm occurs when a part is missing to start cycle. Reset alarm from auto screen. Check & place the part correctly, check if the sensor is sensing the part correctly. Check if the correct sensor is enabled in Configuration.

- **PCB Scan NOK:** This indicates that the scanned part is not correct. Reset alarm from auto screen. Scan the correct part. Check if correct part number is set in configuration.


9. ELECTRICAL & PNEUMATIC DRAWING:

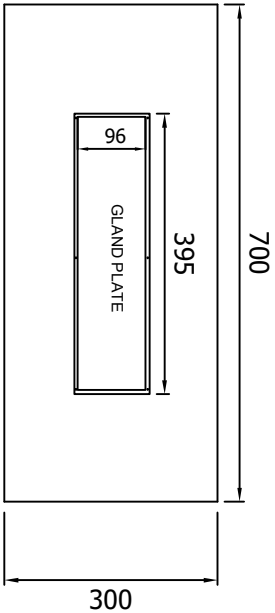


TOP VIEW

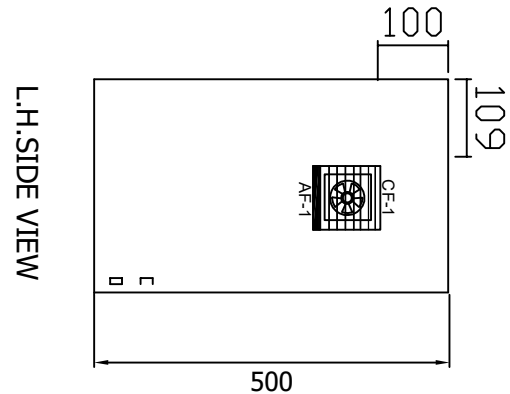

L.H.SIDE VIEW

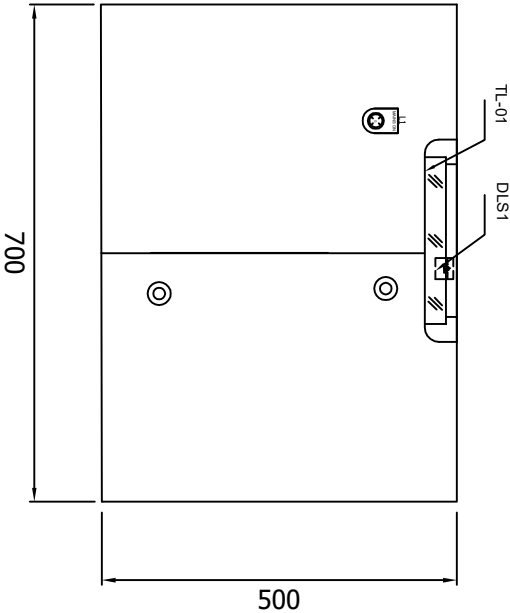

FRONT VIEW

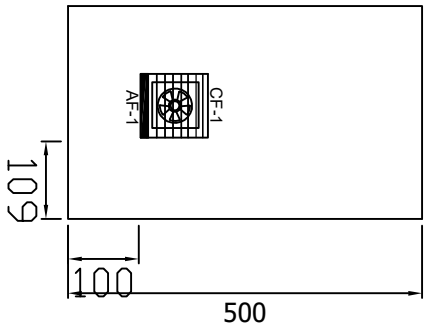


R.H.SIDE VIEW

TITLE:

DRG NO :

WIRE SIZE & COLOUR DETAILS :-

1. 230V/AC	:- 2.5,1.5 SQ. MM RED
2. 0V/AC	:- 2.5,1.5 SQ. MM BLACK
3. PE	:- 2.5,1.5 SQ. MM YELLOW/GREEN
4. 24V DC	:- 0.5 SQ. MM BROWN
5. 0V DC	:- 0.5 SQ. MM BLUE
6. DIGITAL INPUT	:- 0.5 SQ. MM GRAY
7. DIGITAL OUTPUT	:- 0.5 SQ. MM WHITE




NO	11.04.2022	CHANGES	MR	DC	PNV
REV.	DATE				
CUSTOMER	MM				
PROJECT	A1002				
TITLE :-	Housing for extension filament L.H & R.H.				
SCALE	MM	QTY :- 01 Nos	SHEET : 1 of 13		
			DRG NO :- A21002		
					REV :- 00




WORK: SINGUR/AMHATA BANGLORE HIGHWAY NEAR
JSPM ENGS. COLLEGE, TATHAWADE, PUNE - 410333




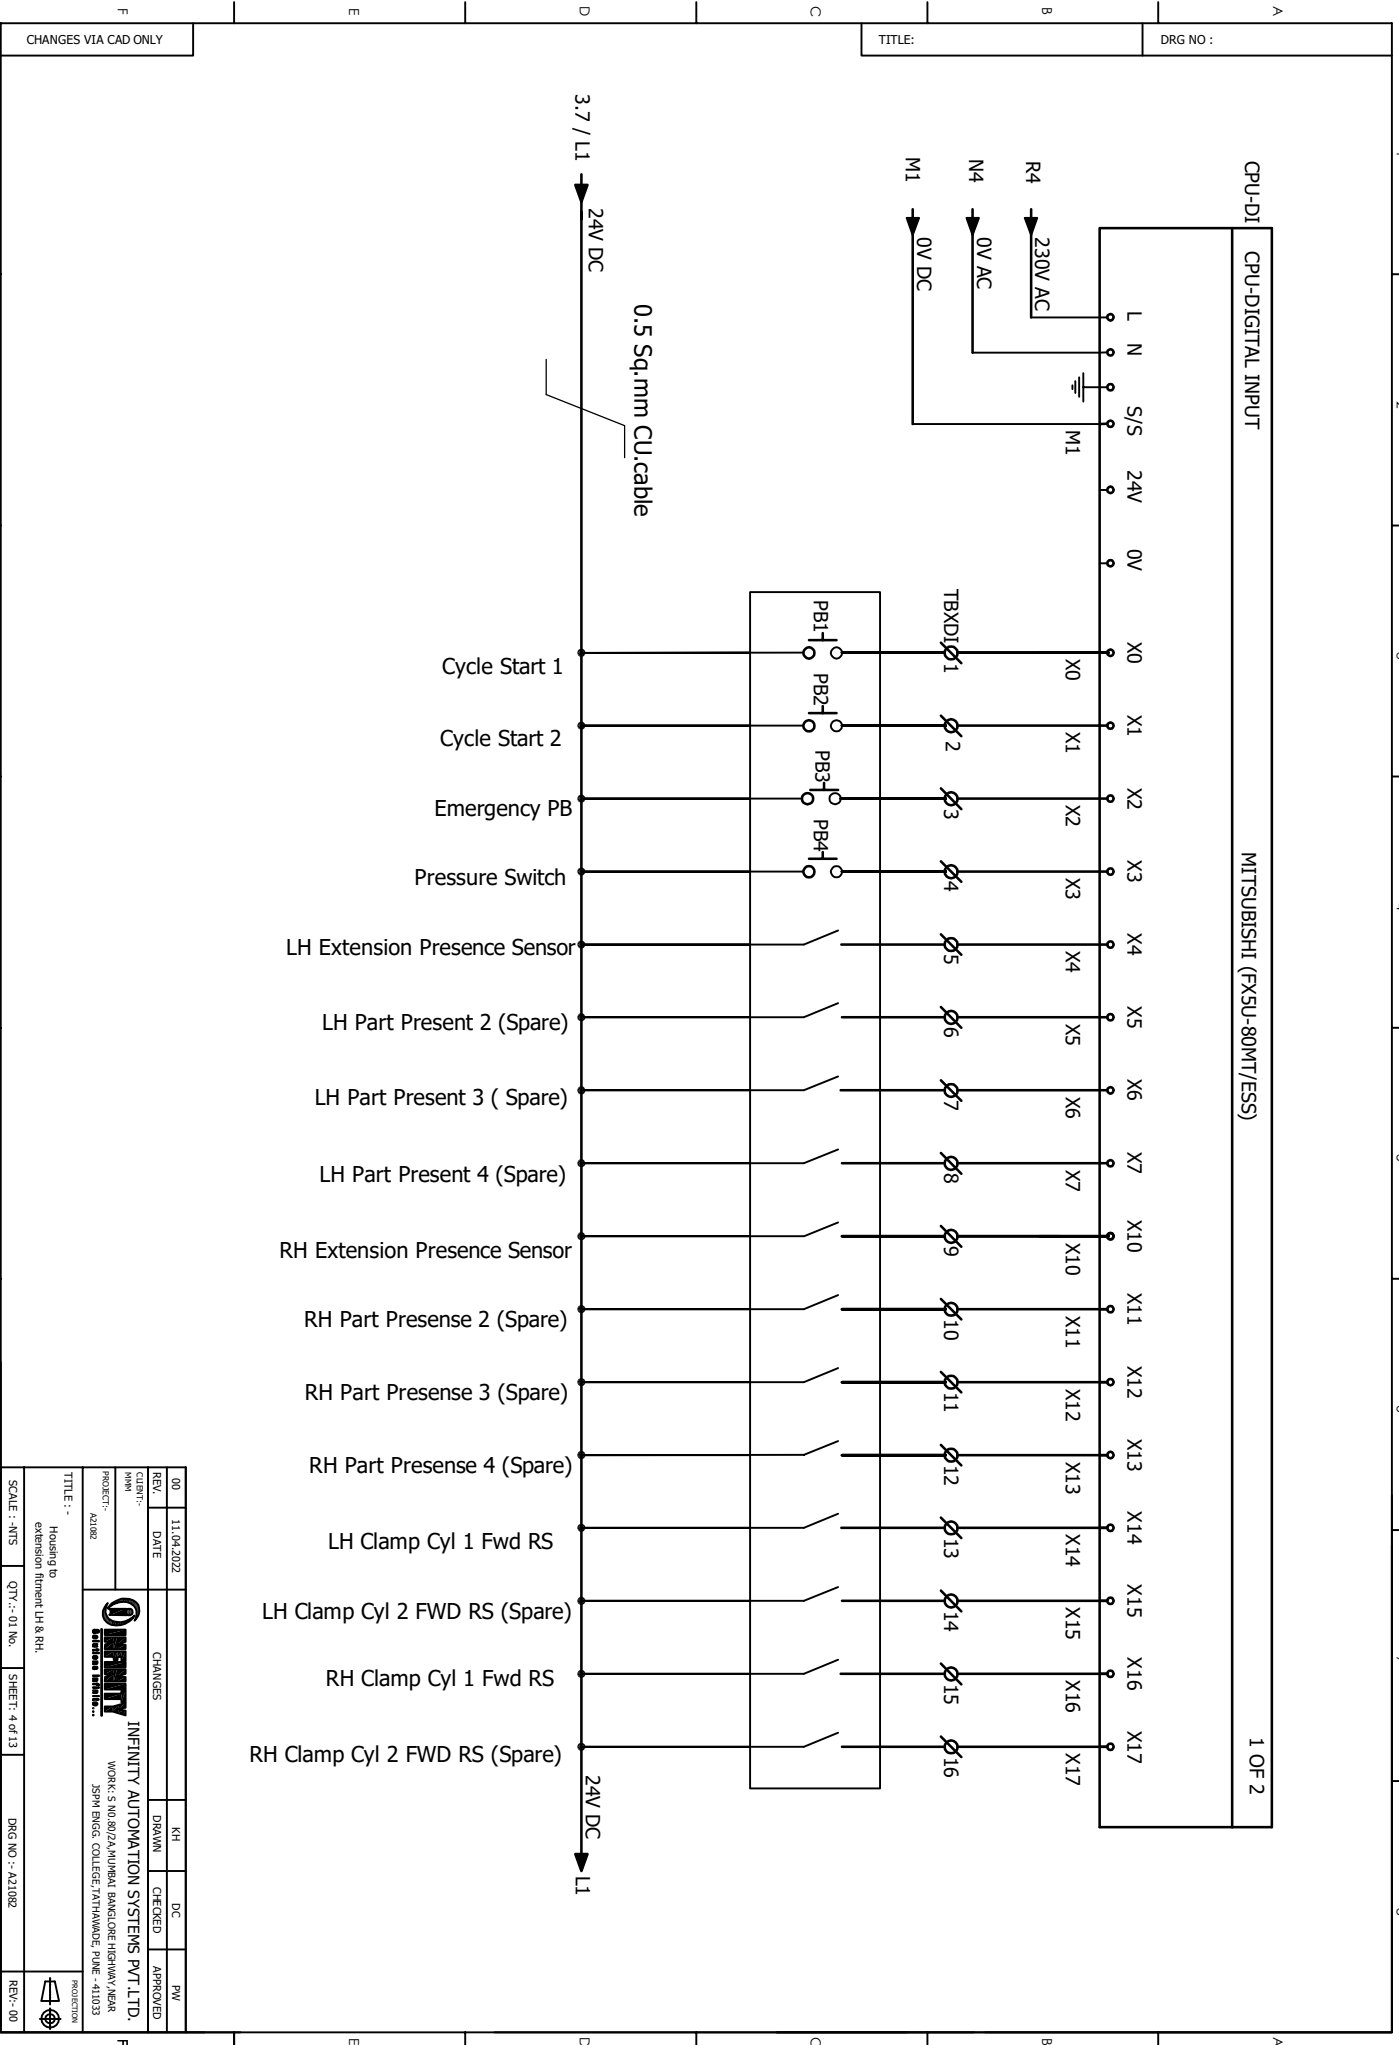

2 OF 2



24V DC
L1/9.1

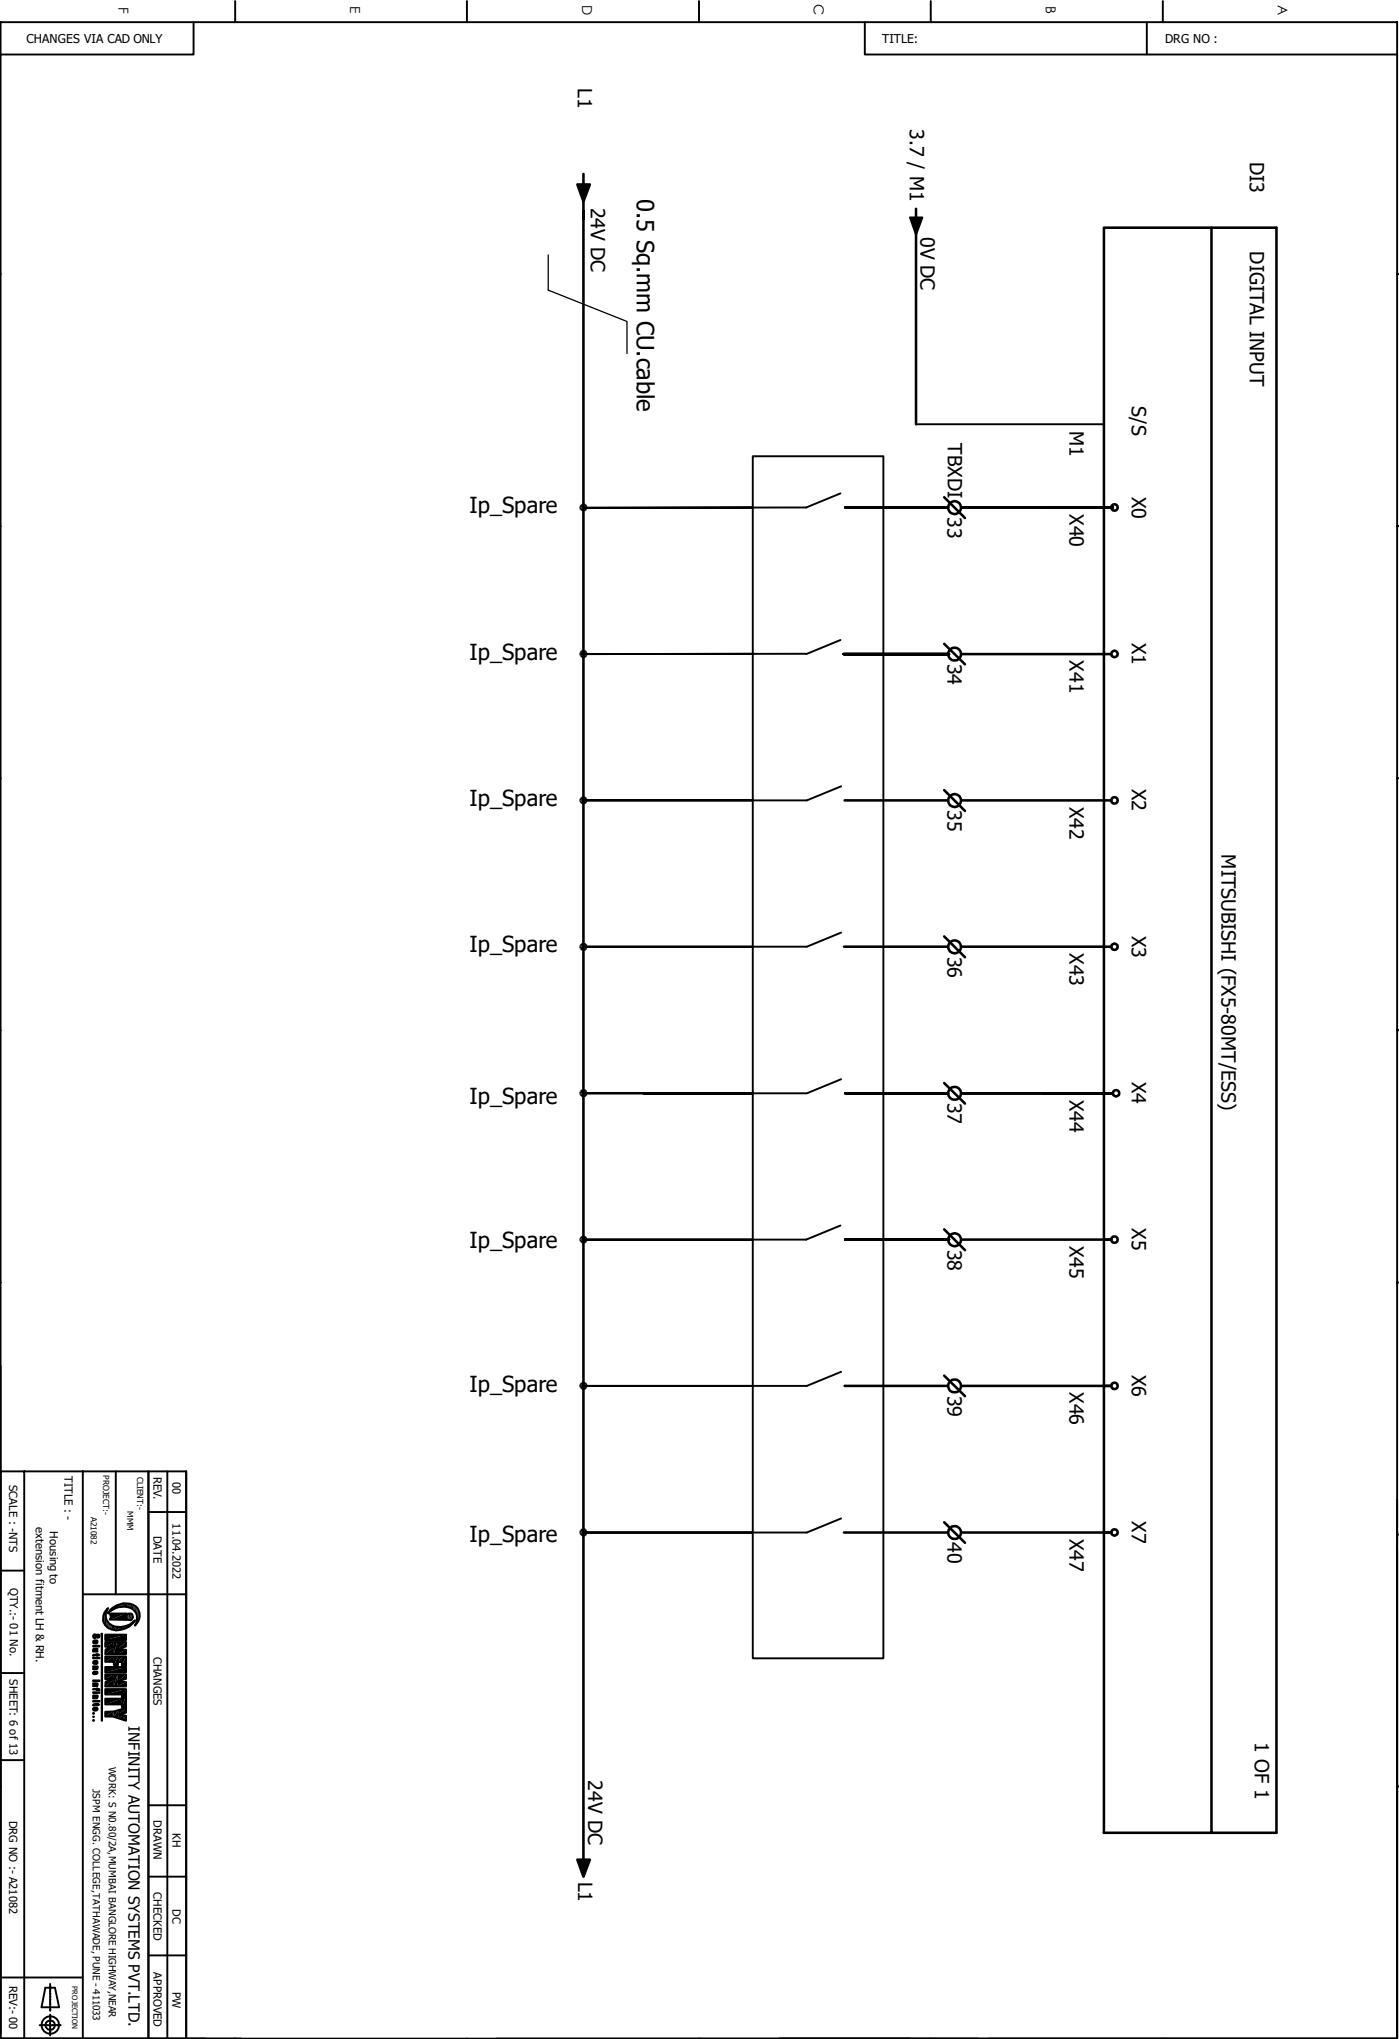


CHANGES VIA CAD ONLY


TITLE:


DRG NO :


00	11.04.2022	CHANGES	KH	DC	PW
REV/	DATE		DRAWN	CHECKED	APPROVED
CLIENT:-	INFINITY AUTOMATION SYSTEMS PVT.LTD.				
PROJECT:-	WORK: 5 NO.8/2A, NUBRA BANGLORE HIGHWAY, NEAR JSPM ENGS. COLLEGE, TATHAWADE, PUNE - 411033				
TITLE :-					
Housing to extension fitting LH & RH.					
SCALE :- MTS	QTY:-: 01 No.	SHEET: 6 of 13	DRG NO :- A21082		
REV:-: 00					PROJECTION

Screw Gun Logic

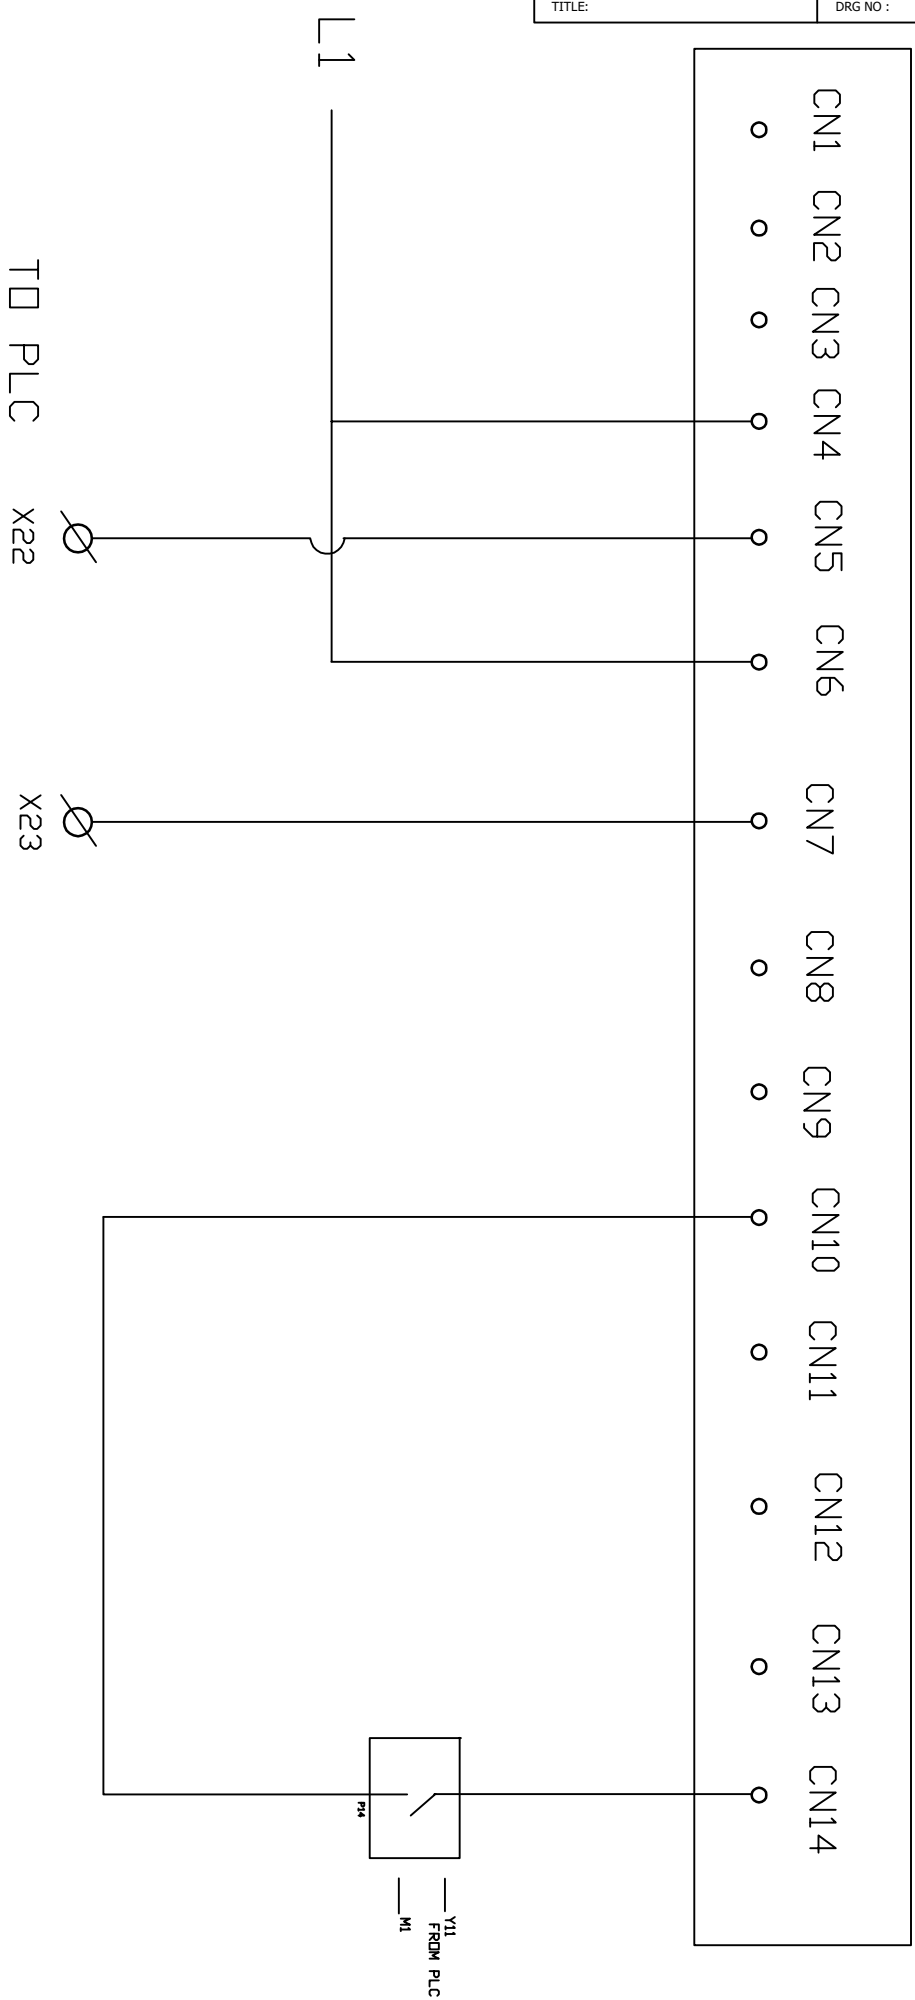[illegible]

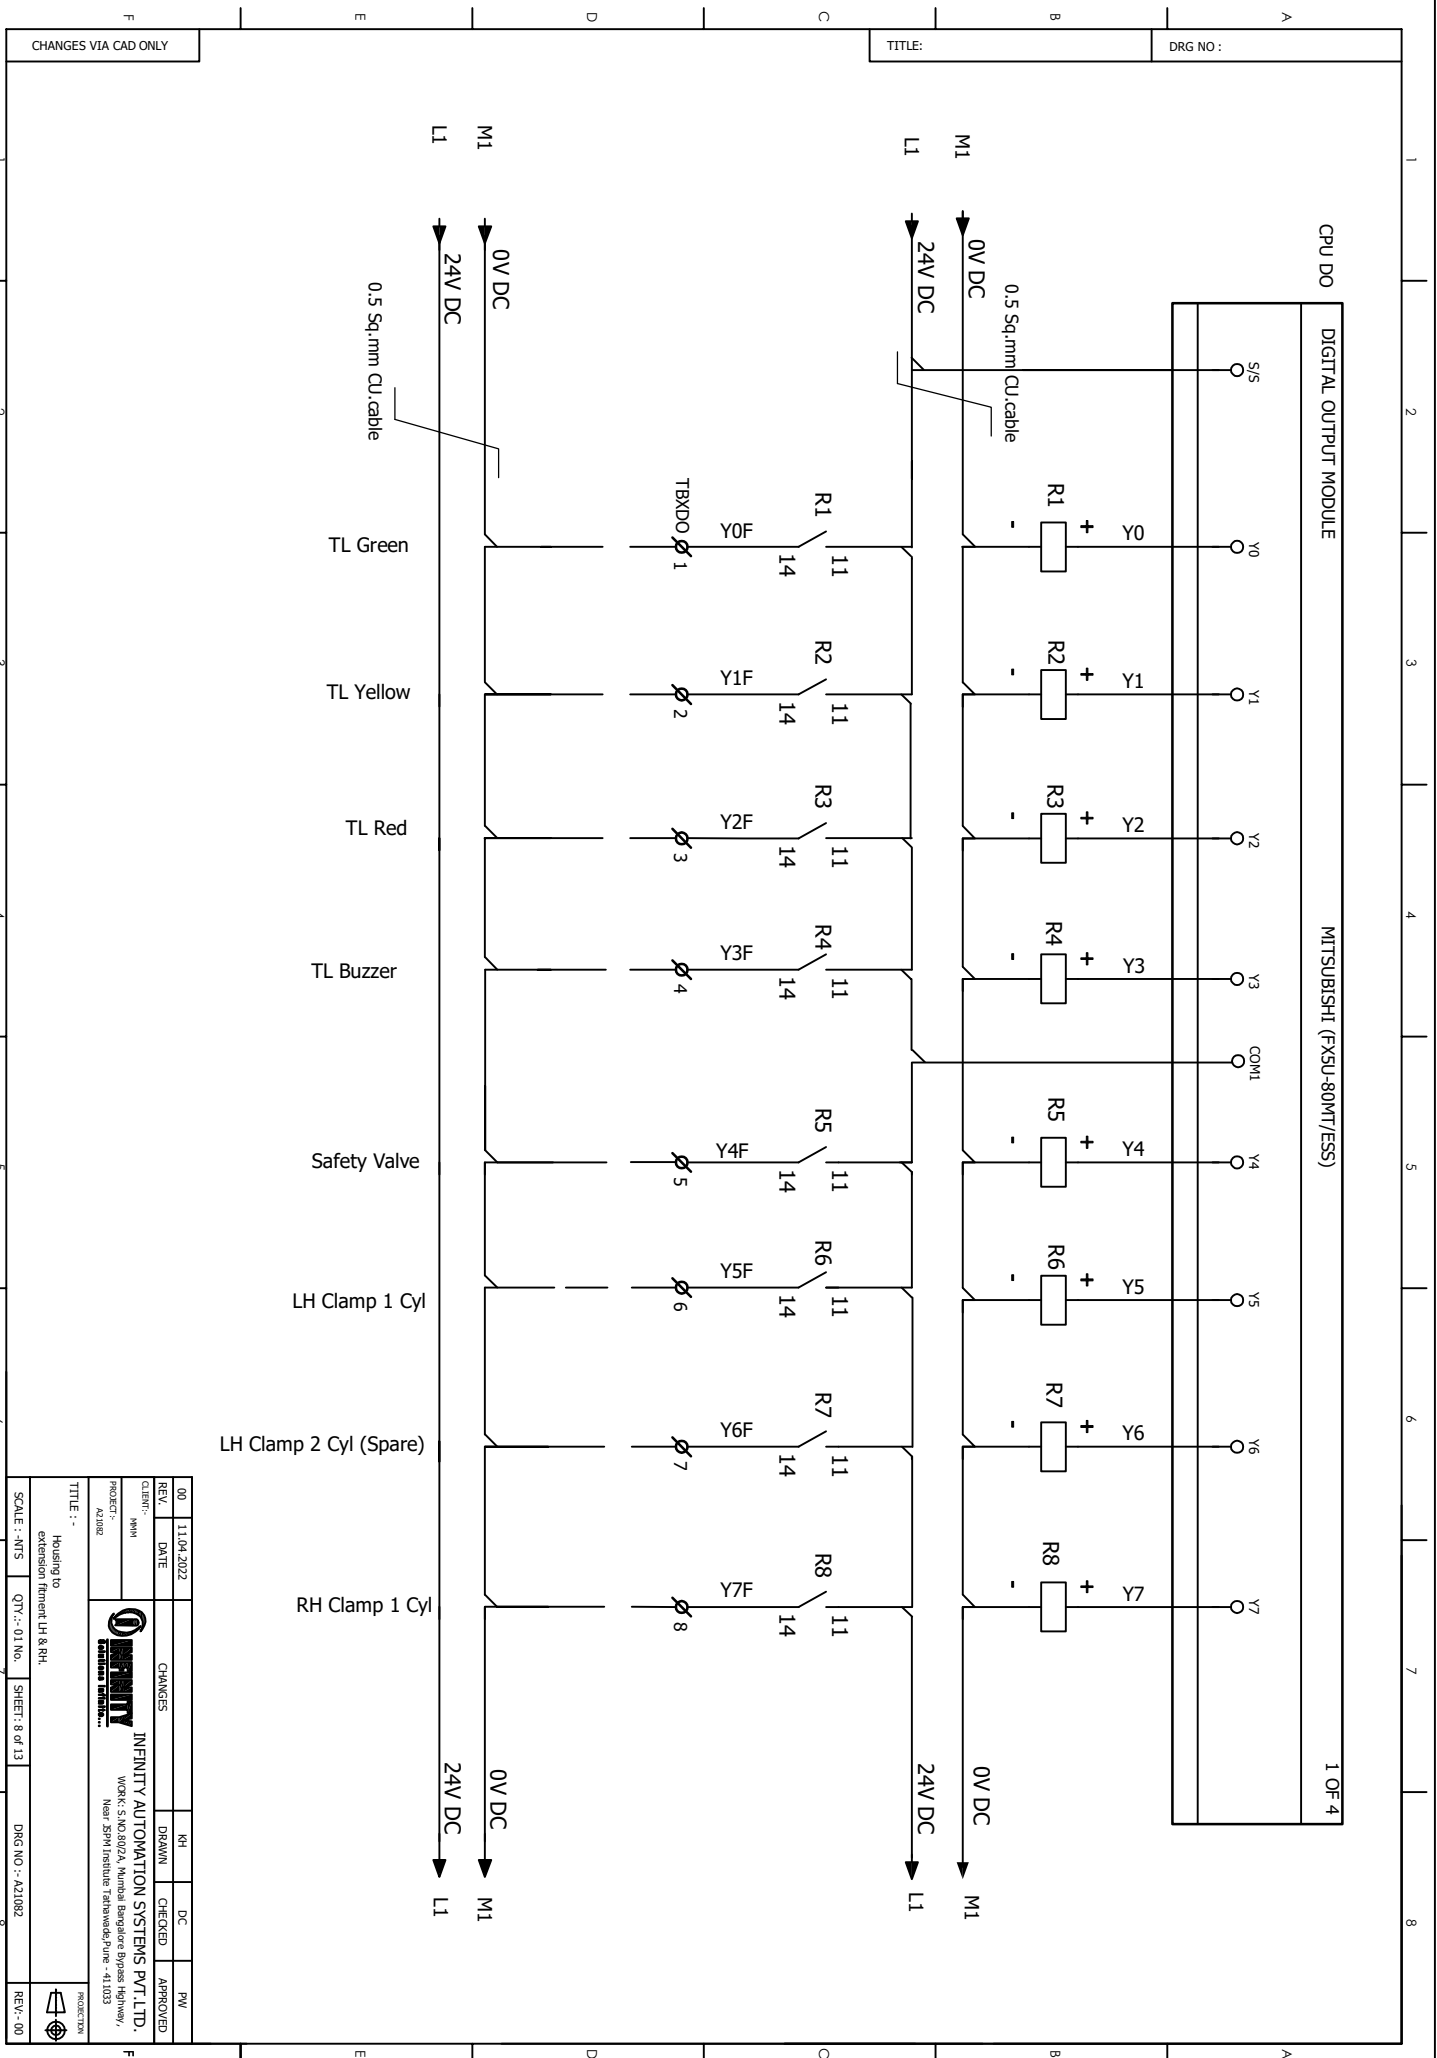

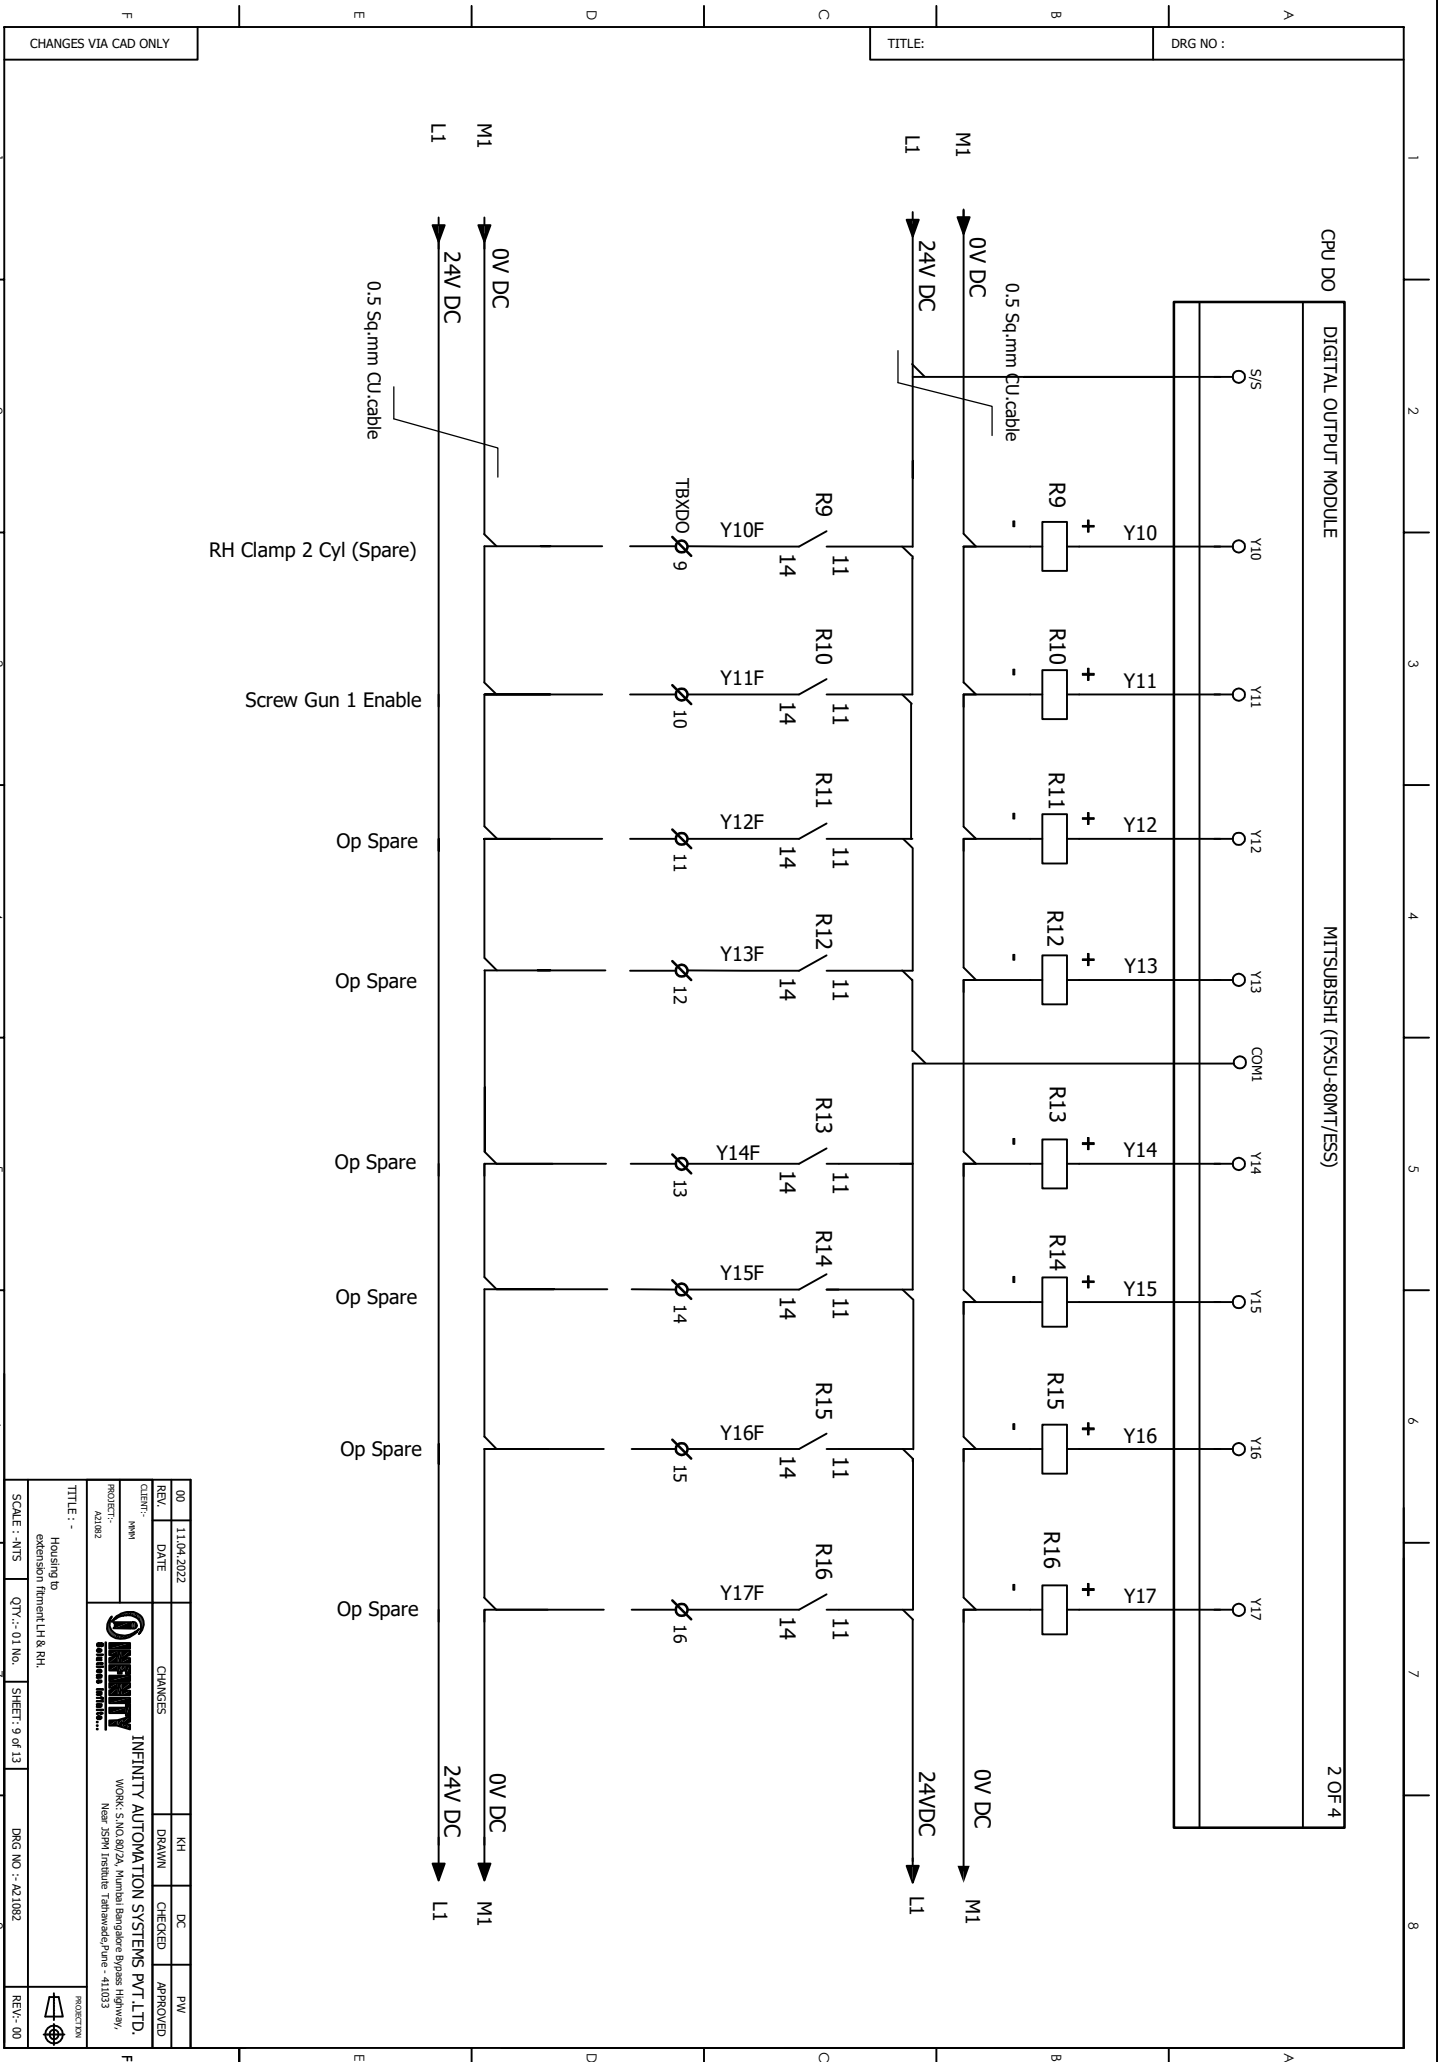

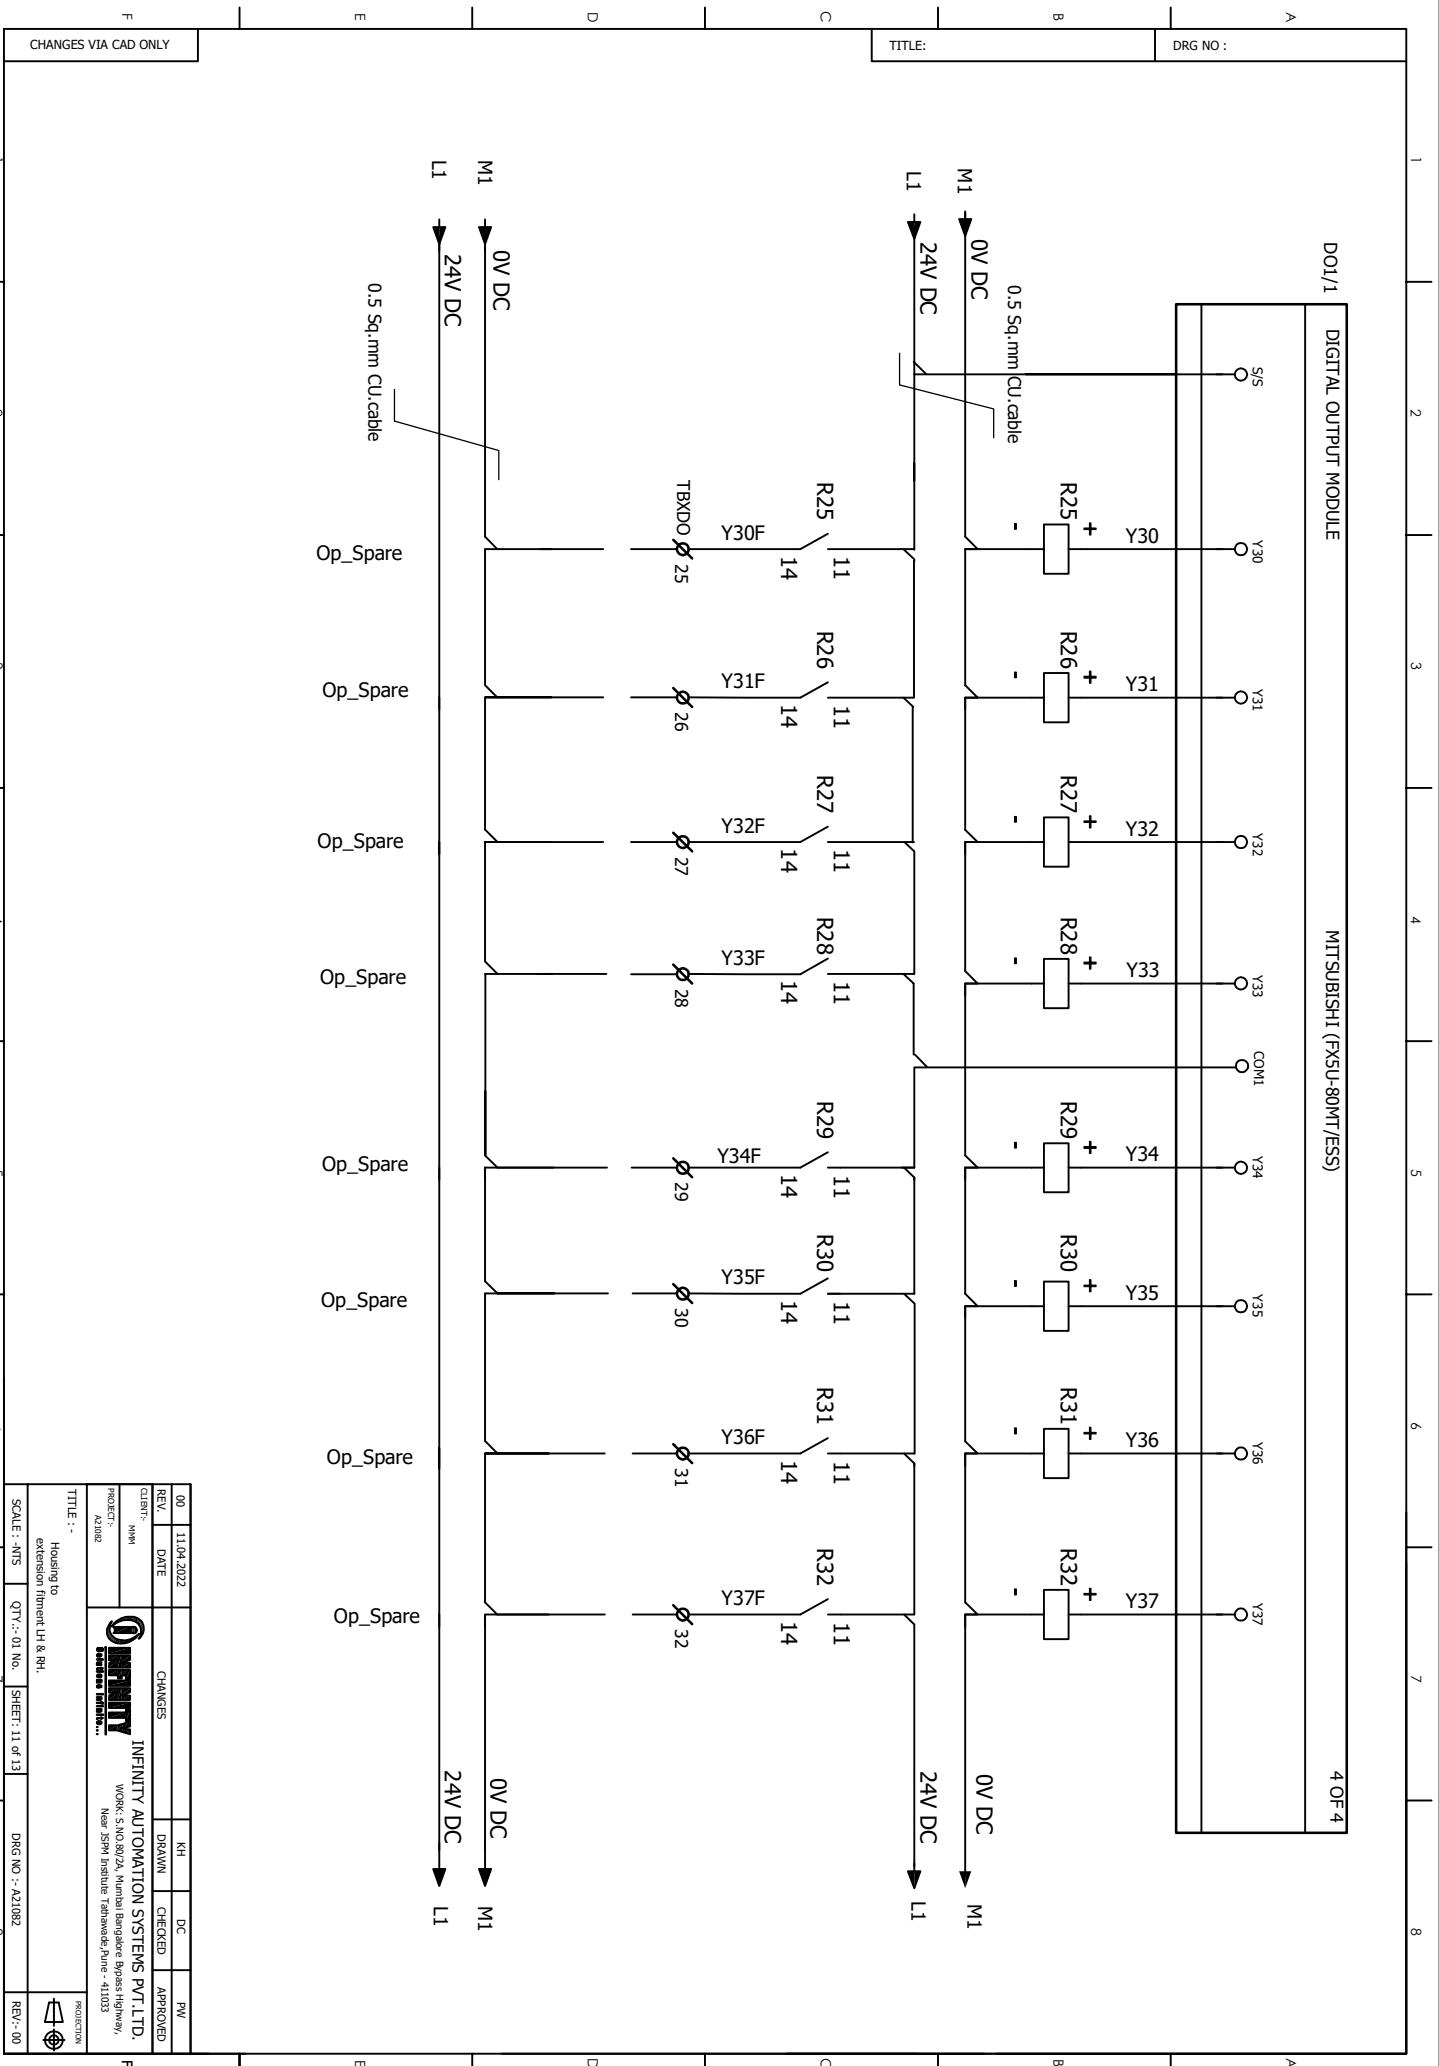

TERMINALS DETAILS - TERMINALS DETAILS - POWER/CONTROL TERMINALS

TERM. NO.	1	2	3
-----------	---	---	---

TERM. NO.	1	2	3
-----------	---	---	---

TERM. NO.	1	2
-----------	---	---

TERM. NO.	1	3	5	7
-----------	---	---	---	---

TERM. NO.	1	2	3
WIRE NO.	R	N	PE

WIRE NO.	TERM. NO.
R3	1
N3	2
PE	3

WIRE NO.	TERM. NO.
R2	1
N2	2

TERM. NO.	WIRE NO.	TERM. NO.
2	L1	1
4	L1	3
6	M1	5
8	M1	7

TBXD1	
TERM. NO.	
1	
3	
5	
7	
9	
11	
13	
15	
17	
19	
21	
23	
25	
27	
29	
31	
33	
35	
37	
39	

TERM. NO.	1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39
WIRE NO.	X0	X2	X4	X6	X10	X12	X14	X16	X20	X22	X24	X26	X30	X32	X34	X36	X40	X42	X44	X46
TERM. NO.	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
WIRE NO.	X1	X3	X5	X7	X11	X13	X15	X17	X21	X23	X25	X27	X31	X33	X35	X37	X41	X43	X45	X47

WIRE NO.	TERM. NO.
Y0F	1
Y2F	3
Y4F	5
Y6F	7
Y10F	9
Y12F	11
Y14F	13
Y16F	15
Y20F	17
Y22F	19
Y24F	21
Y26F	23
Y30F	25
Y32F	27
Y34F	29
Y36F	31
Y40F	33
Y42F	35
Y44F	37
Y46F	39

1	Y0F	2
3	Y2F	4
5	Y4F	6
7	Y6F	8
9	Y10F	10
11	Y12F	12
13	Y14F	14
15	Y16F	16
17	Y20F	18
19	Y22F	20
21	Y24F	22
23	Y26F	24
25	Y30F	26
27	Y32F	28
29	Y34F	30
31	Y36F	32
33	Y40F	34
35	Y42F	36
37	Y44F	38
39	Y46F	40

TITLE:	DRG NO :
--------	----------

00	11.04.22					
REV.	DATE	CHANGES	BY	DC	APPROVED	PW
CUSTOMER:-	MM					
PROJECT:-	A21082	 INFINITY SYSTEMS PVT. LTD. WORKS : 5/10, 80/2A, MUMBAI BANGLORE HIGHWAY 45/8 35PH BANGS COLLEGE TATHANNODE PUNE - 411038				
TITLE :- Housing to extension flrment LH 8 RH.						
SCALE :-	ANTS	QTY :-	01 No.	SHEET :-	13 of 13	DWG NO :-
						A21082
						REV:- 00
						 

