


USER MANUAL

STATION 1: HOUSING TO REFLECTOR ASSEMBLY-RH STATION 2: HOUSING TO LIGHT GUIDE CARRIER ASSEMBLY-RH

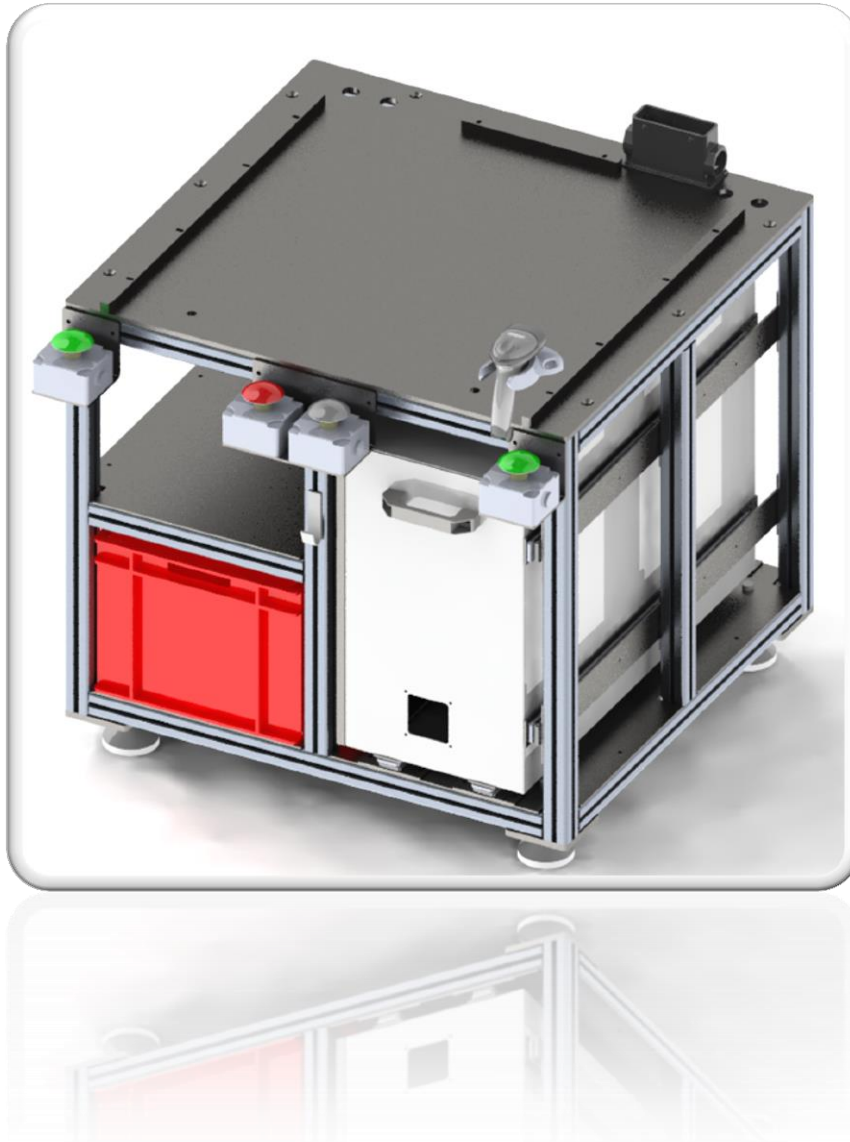

CLIENT NAME:

MARELLI MOTHERSON AUTOMOTIVE LIGHTING INDIA PRIVATE LIMITED
Ambethan 165/1

MACHINE MANUFACTURED BY:

INFINITY AUTOMATION SYSTEMS PVT LTD.

Unit 2:S. No. 80/2A, Mumbai Bangalore Bypass Highway

Near JSPM Institute,

Tathawade, Pune-411033.

Contents

1. Introduction	3
2. Safety regulations	4
2.1 Term definitions.....	4
2.2 Significance of the safety regulations	4
2.3 Information and symbols	4
2.3.1 Warning and safety notices	4
2.3.2 Notes and symbols in the manual.....	5
2.4 Application limitations.....	5
2.5 Do's and Don'ts for PCBA+Metal Plate +EMI Shield Assembly LH & RH Station	6
3. DESCRIPTION OF THE MACHINE.....	7
3.1 Layout of Station:	7
3.2 Description of Station:	7
3.3 Assembly Drawings:.....	8
3.4 Pneumatic Drawings:	10
3.5 Operation	12
3.5.1 Safety regulations for PCBA +Metal Plate +EMI Shield Assembly LH & RH Station.....	12
3.5.2 Steps for Operation Sequence	12
4. LIFTING, TRANSPORTATION & PACKAGING:	13
4.1 Lifting Arrangement:	13
4.2 Transportation:	13
4.3 Packaging:	13
5. HMI SCREENS	14
6. SPARE LIST.....	26
7. FLOW CHART.....	31
8. TROUBLESHOOT.....	32
9. ELECTRICAL DRAWING.....	33

1. INTRODUCTION

We are certain that you have made the right choice with our product and thank for your trust.

For your personal safety

Before carrying out any activities on or with the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station, please carefully read these operating instructions first, in particular the chapter on "Safety regulations".

Application area of these operating instructions

These operating instructions describe the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station and provide all information required for safe operation and maintenance of functionality. Please keep these operation instructions available at all times for all persons involved with the machine.

Questions or unclear points

Please contact immediately if you have any questions or unclear points:
Original language of assembly instructions is English.

© Copyright Infinity Automation Systems Pvt. Ltd.

2. SAFETY REGULATIONS

2.1 Term definitions

The following terms are used with regards to safety:

Personnel qualification

The work to be implemented with or on the product is described in the corresponding chapters in the operating instructions. The personnel qualifications listed in this chapter (in "Introduction") describes the minimum requirements for personnel regarding training and competences for implementing this work.

Personnel

Personnel are people who meet the personnel qualifications. Only such personnel are authorized to implement the work described in the applicable chapters.

User

Users are persons who cannot be identified as personnel but who still carry out activities with or on the product.

Operator

The operator is the owner of the product. This is irrespective of whether the product is:

- Operated as a stand-alone machine
- Operated as part of a system or
- Operated by a third party

Product life phases

The product life phases are the state or usage phases of the product. These range from leaving the assembly hall to disassembly and disposal, and are divided into correspondingly logical sections (chapters) in these operating instructions.

2.2 Significance of the safety regulations

These safety regulations contain all behavior regulations and generally applicable danger information. The safety of the user and the personnel can only be ensured when these safety regulations and the safety information listed in the individual chapters are strictly complied with and followed. The operator is responsible for the enforcement.

2.3 Information and symbols

2.3.1 Warning and safety notices

The warning and safety notices used in these operating instructions have the following significance:

	 CAUTION Indicates a hazard with low risk which, if not avoided, could result in minor or moderate injury.
--	--

	 WARNING Indicates a possible hazard with medium risk which, if not avoided, could result in death or serious injury.
--	---

	 DANGER Indicates an immediate hazard with high risk which, if not avoided, will result in death or serious injury.
--	---

NOTICE	
Indicates practical information and tips that permit the best use of machinery, system or equipment.	

CAUTION
To warn of material damage.

2.3.2 Notes and symbols in the manual.

The following information and symbols are used in manual.

Warning signs	Mandatory sign	Mandatory sign
Danger of hand injuries	Wear safety goggles	Wear gloves
		

2.4 Application limitations

The following technical operating instructions and ambient conditions must be complied with for the operation of the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station.


Environmental conditions	
Working temperature	+10 ... +50 °C
Storage temperature	- 10 ... +70 °C
Relative humidity	Max. 90%, non-condensing
Mechanical power supply	
Operating pressure	2-6 bar
Mechanical	
Machine Weight	150kg Approx.
Electrical power supply	
Supply voltage	230 VAC
Input Power	8 kW
Full Load Current	16 Amp
Primary Fuse	32 Amp
Max. Short Circuit Interrupting Cap	14 Amp
Control Voltage	24 V

2.5 Do's and Don'ts for PCBA+Metal Plate +EMI Shield Assembly LH & RH Station


- Regular checking of penumatics parts.
- Regular checking of drag chain.
- Regular checking 2/2 valve.

3. DESCRIPTION OF THE MACHINE

3.1 Layout of Station:

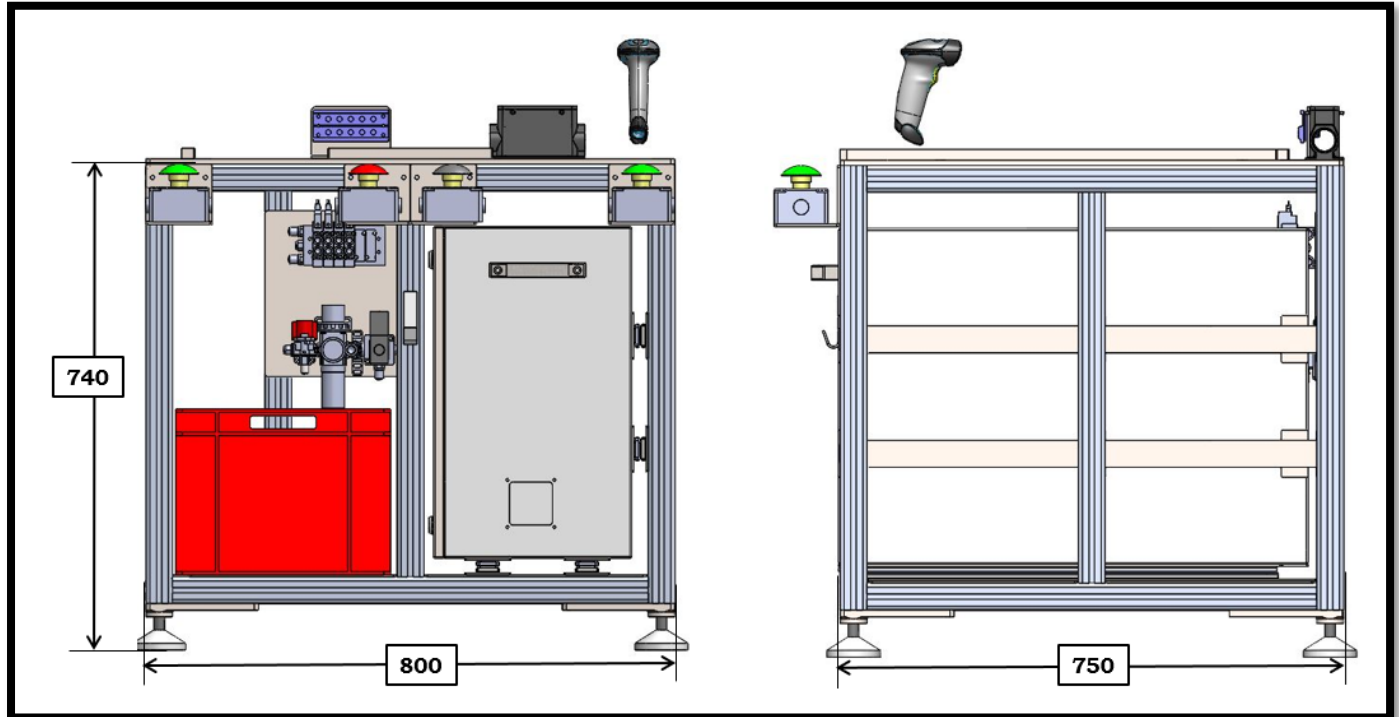

3.2 Description of Station:

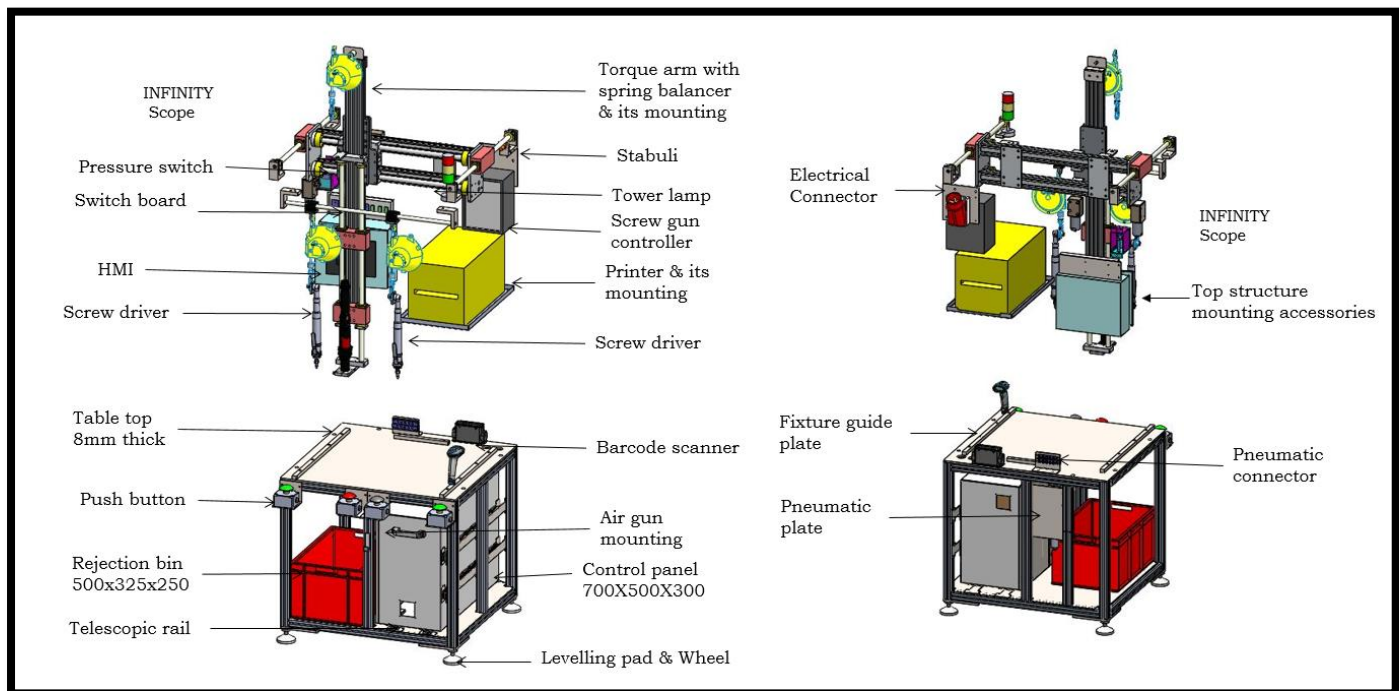

3.3 Assembly Drawings:

**** IF ANY DOUBT PLEASE ASK ****

NOTES:-


1. WHEREVER WELD, USE 2 DOWEL & 2 BOLT BEFORE WELDING.
2. DO NOT WELD ALUMINUM MATERIAL WITHOUT SPECIAL NOTE.
3. PART SHALL BE FREE FROM ALL KINDS OF DEFECTS.
4. UNMENTIONED CHAMFERS SHALL BE 18-45° ALL OVER.
5. REMOVE BURR AFTER MACHINING.
6. UNMENTIONED TOLERANCE FOR SLOT OR HOLE.
- 6.1 TOLERANCE TOLERANCE FOR DOWEL HOLE WILL BE WITHIN 0.1 mm.
- 6.2 TOLERANCE TOLERANCE FOR HOLE IN OPEN TOLERANCE THERE WILL BE CONSIDER IN 0.1 mm TO 0.2 mm.
- 6.3 WHEREVER PIN / SHANK (0.1 mm).

USE BLUE COLOR FOR FORWARD AND BLACK COLOR FOR BACKWARD PNEUMATIC PIPE.


All dimensions are in "mm"

ZONE	REV.	DESCRIPTION	DATE	APPROVED	QTY.
1	1	A21082.02.01.01.00		CONTROL PANEL	1
2	1	A21082.03.01.01.01		PLATE	1
3	1	A21082.03.01.01.02		BOTTOM PLATE	1
4	1	A21082.03.08.01.05		SEPARATOR PLATE	1
5	1	A21082.03.01.01.04		GUIDE PLATE	2
6	1	A21082.03.01.01.05		GUIDE PLATE 2	1
7	1	PRG. UNIT			1
8	1	A21082.03.01.01.07		WHEEL MOUNTING PLATE	1
9	1	A21082.02.08.01.04		WHEEL	2
10	1	LPM M12X075X150		REFLECTION BIN	4
11	1	CC-43120-3		REFLECTION BIN	4
12	1	WHEEL			1
13	1	BARCODE SCANNER			1
14	1	INFINITY TOWER LAMP			1
15	1	SCREW GUN CONTROLLER			1
16	1	PRG. UNIT			2
17	1	EMERGENCY SINGLE PB			1
18	1	RESET SINGLE PB			1
19	1	A21082.03.08.01.16		PUSH BOTTOM PLATE	1
20	1	STD20.11.00.00.00		PRESSURE SWITCH COVER ASSM	1
21	1	TOP STRUCTURE MAM			1
22	1	IND SOCKET ASSM. 0308		IND SOCKET ASSM	1
23	1	STD20.05.00.00.00		STANDARD ASSEMBLY	1
24	1	STD20.05.00.00.00		PRINTER MFG LG	1
25	1	PNEUMATIC CONNECTOR KTM10-06			1
26	1	ELECTRICAL CONN-10			1
27	1	SWITCH BOX 11			1
28	1	SCREW GUN ASSM. 0308		GUN ASSY	1
29	1	A21082.03.01.02.00		Y DIR HOUSING LH ASSM	1
30	1	A21082.03.01.03.00			1
31	1	1. HOUSING TO STUD ASSEMBLY LH & RH			1
32	1	A21082.03.08.01.14		HMI BOX	1
33	1	A21082.03.08.01.15		GUIDE PLATE 2	1

THIS DOCUMENT IS A PROPERTY OF IASPL AND SHOULD NOT BE REPRODUCE

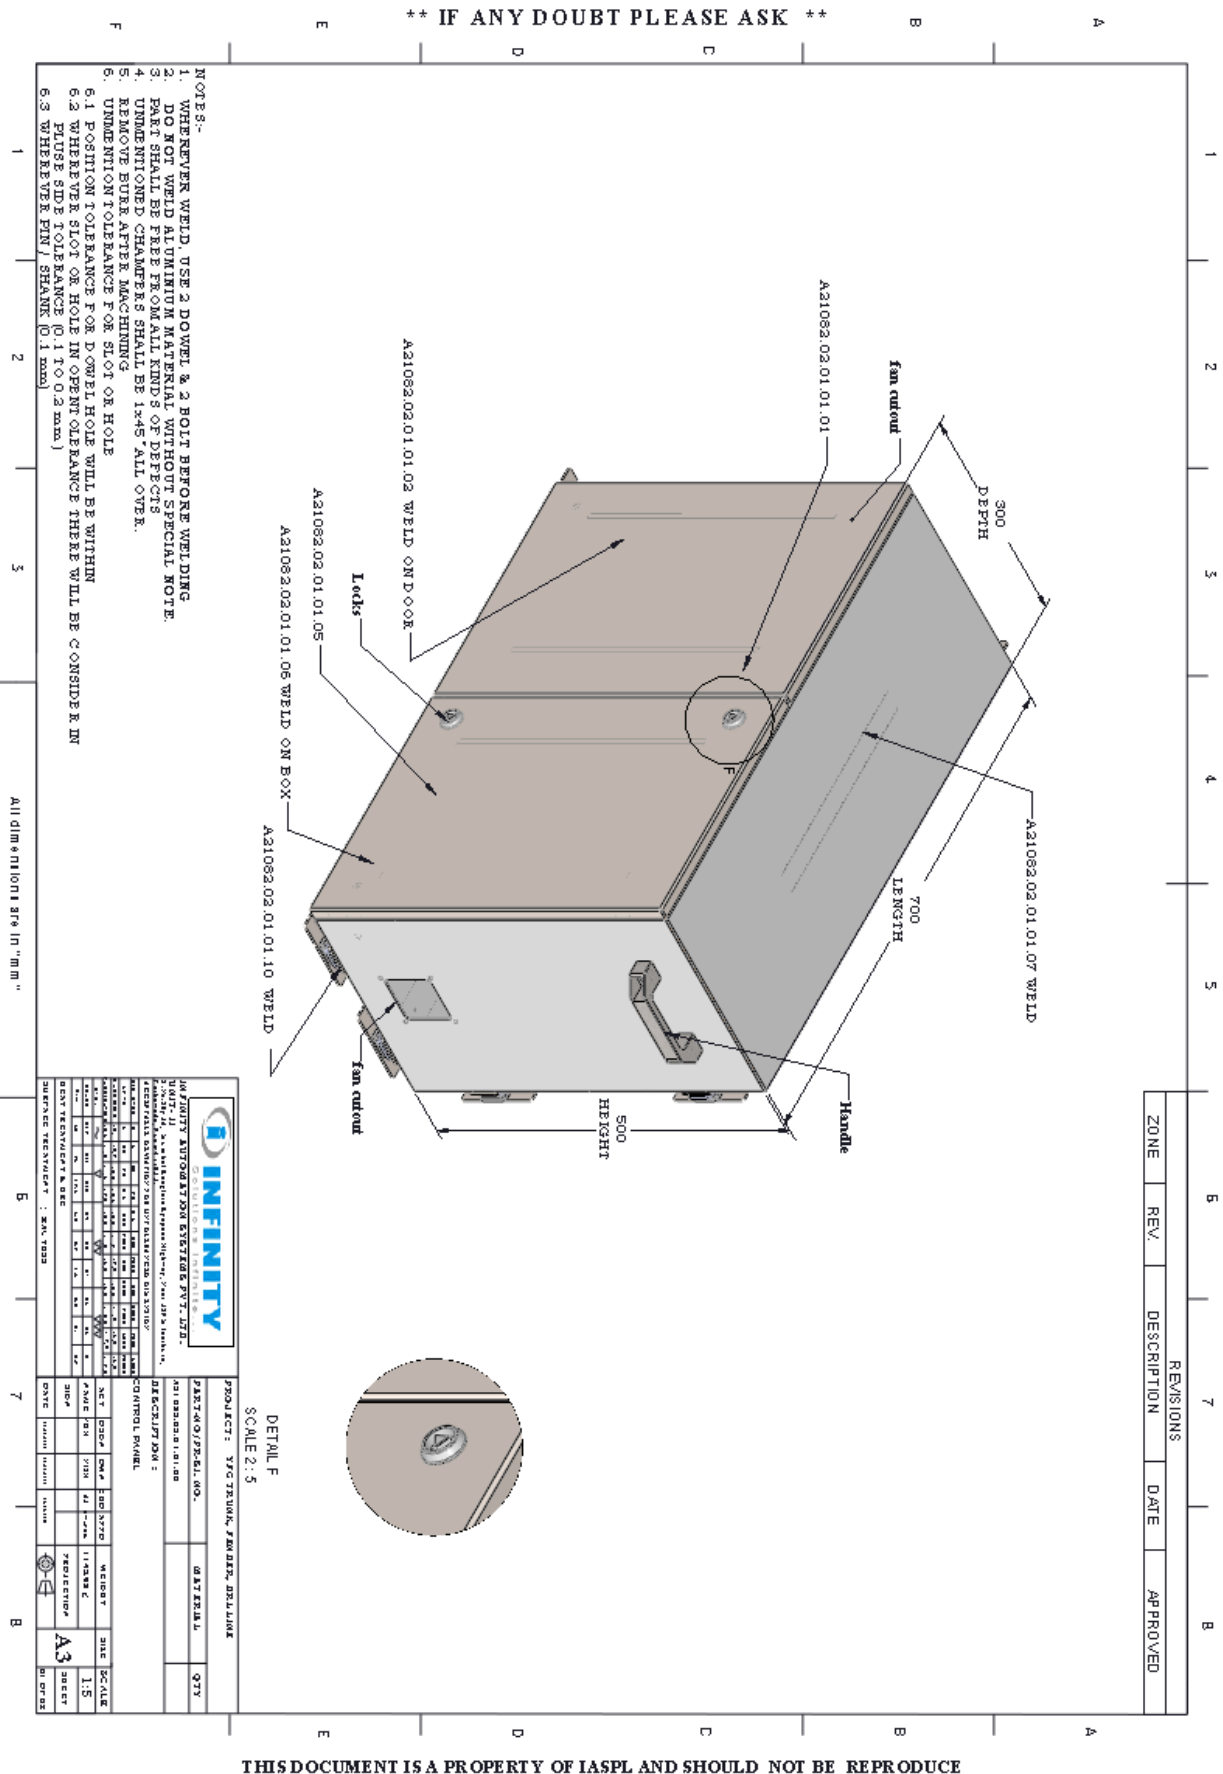

3.4 Pneumatic Drawings:

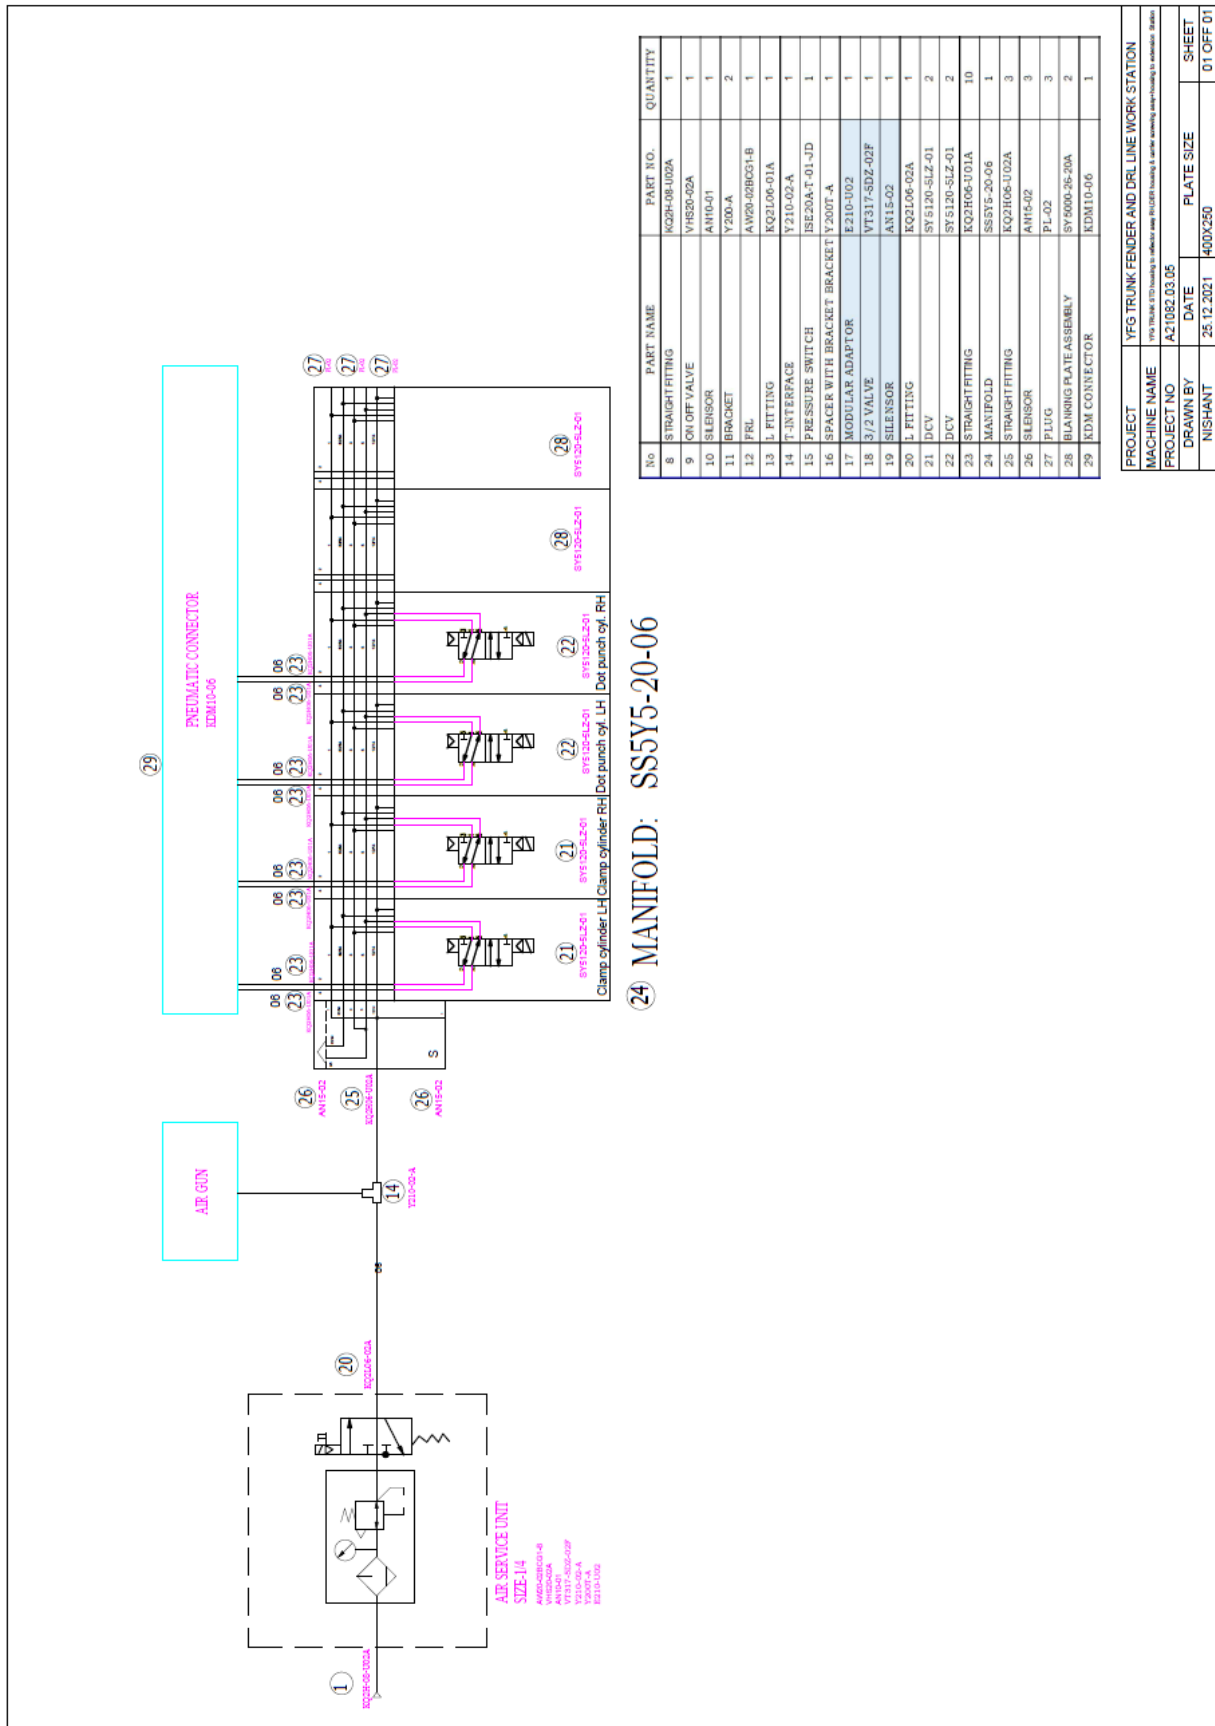



Screw Gun



Barcode scanner & Printer Mounting

3.5 Operation

3.5.1 Safety regulations for PCBA +Metal Plate +EMI Shield Assembly LH & RH Station

1. Any type of maintenance work done by authorized person.
2. Always turn off Machine switch while any type of maintenance work.

3.5.1.1 Personal Safety Equipment

All users are obliged to wear the following personal safety equipment for all work:

- Tightly fitting working clothes
- Safety goggles
- Gloves

3.5.2 Steps for Operation Sequence:

- Pick RH housing from bin.
- Do the barcode scan of wire harness for variant conformation.
- Connect RH side connector for glow test.
- Place on fixture (Lens side up).
- Pick reflector sub assembly.
- Do the PCB barcode scan (PCB barcode data & Bin number to be confirm with master data).
- Do the RH PCB lumber connection with RH wire harness connector.
- Locate reflector on housing.
- Press cycle start.(Part gets clamped – If stud bolt & stud pin presence check OK).
- PCB glow test light guide checking start. (if PCB glow test current check ok then screwdriver enable).
- Pick screwdriver.
- Pick screw (3 nos).
- Start screwing RH carrier to RH housing (3nos. on RH part.)
- If screwing OK then dot punch operate.
- Then barcode generate (PCB scanned barcode data to be print as it is) & de-clamp to part.
- Remove barcode sticker from printer.
- Paste on housing RH.
- Remove RH side glow test connector.
- Unload RH housing from fixture.

4. LIFTING, TRANSPORTATION & PACKAGING:

4.1 Lifting Arrangement:

For lifting of machine, there is fork lift.

4.2 Transportation:

Transfer the final test workstation and all of its separately packed associated components, in a closed vehicle or closed shipping container only. Each component of this machine should remain horizontal at all times during transport.

A fork truck should be used to load/offload the pallet holding this machine into/from vehicles.

4.3 Packaging:

Put final test workstation at an appropriate transport pallet that corresponds to the weight, and secure it against sliding. Protect each table from dirt and moisture by foil. Then house it completely.

Remove all components and subassemblies that are not permanently attached to the final test workstation, wrap them in plastic foil, and pack them in separate shipping containers.

Secure Component groups at the final test workstation against uncontrolled movement.

5. HMI SCREEN:

5.1. MAIN SCREEN:

- Click on 'MAIN MENU' button, below screen appears.

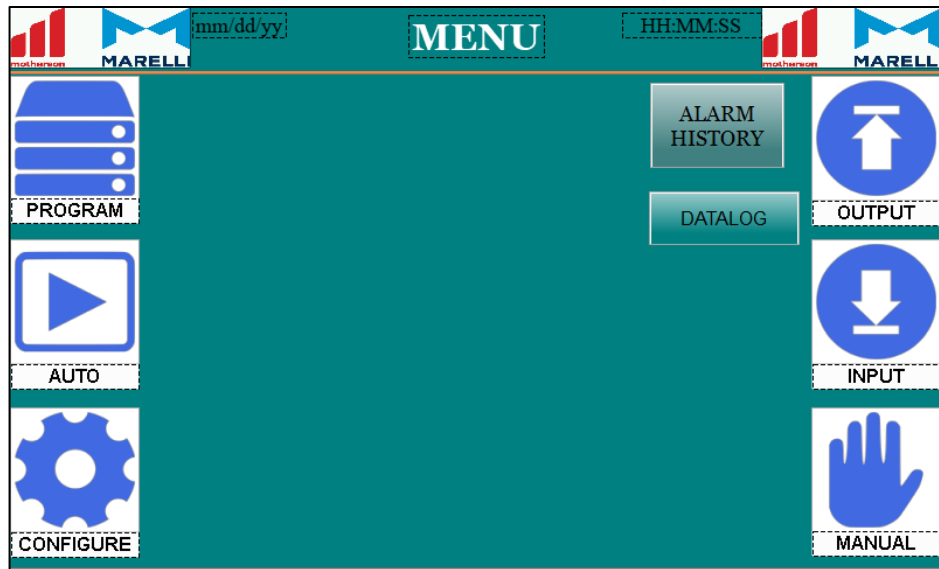


FIG.1.MAIN SCREEN

- The software has menu buttons as given below:
 1. Program
 2. Auto
 3. Manual
 4. Input
 5. Output
 6. Configuration
 7. Alarm History
 8. Data log Screen

5.2. PROGRAM SCREEN:

- Click on '**PROGRAM**' button, below screen appears.


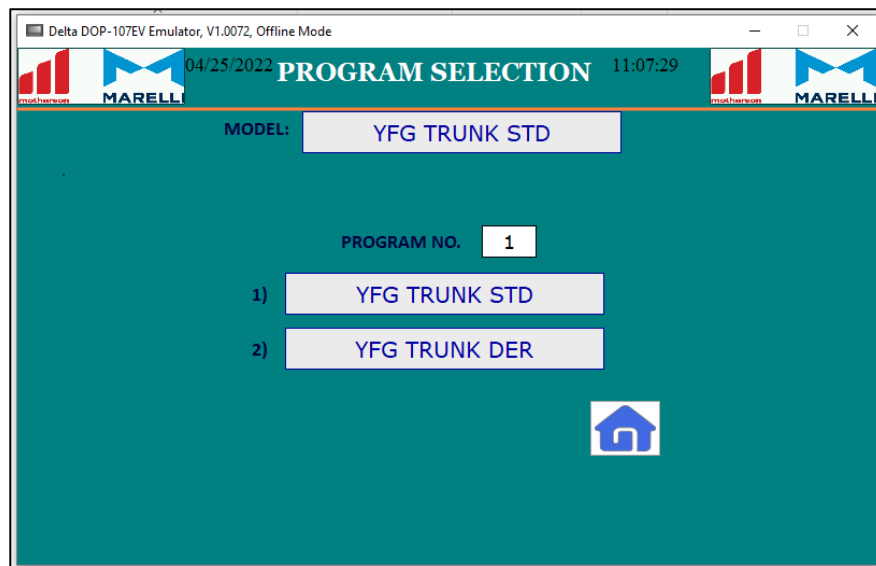


FIG.2.PROGRAM

- Here for program selection enter one or two in Program No. field
- Description is displayed in the fields below Program No.

5.3. AUTO:

- Click on 'AUTO' button, below screen appears.

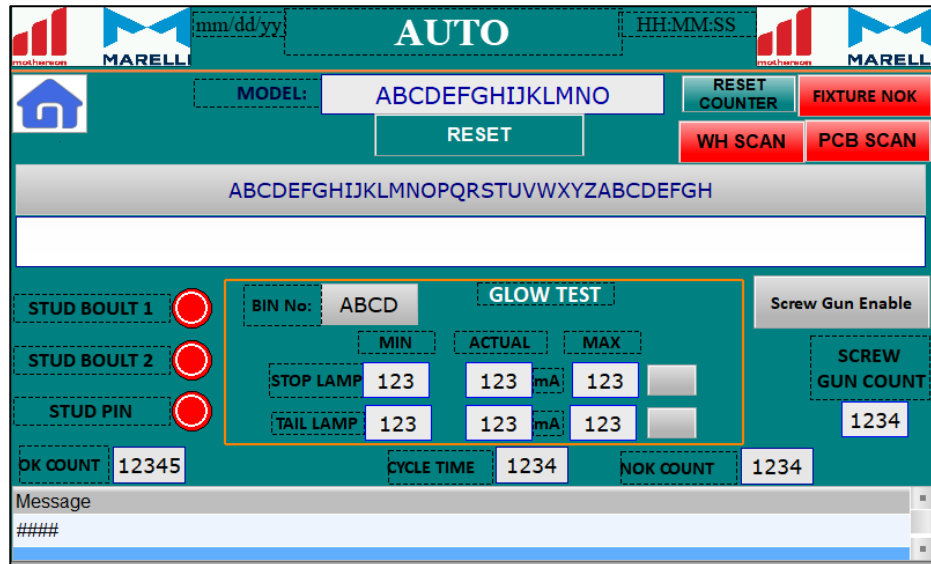

The screenshot shows the 'AUTO' screen with the following elements:

- Header:** Includes logos for 'MARELL' and 'INFINITY', a date field 'mm/dd/yy', the title 'AUTO', and a time field 'HH:MM:SS'.
- Model Section:** A 'MODEL:' label followed by the text 'ABCDEFGHIJKLMNO' and a 'RESET' button.
- Buttons:** 'RESET COUNTER', 'FIXTURE NOK', 'WH SCAN', and 'PCB SCAN'.
- Barcode Area:** A large field displaying 'ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHI'.
- Studs Section:** Three rows labeled 'STUD BOULT 1', 'STUD BOULT 2', and 'STUD PIN', each with a red circular indicator.
- GLOW TEST Section:** A box containing 'BIN No: ABCD', 'MIN', 'ACTUAL', and 'MAX' labels, with corresponding numerical values (123) and units (mA).
- Counts Section:** 'OK COUNT' (12345), 'CYCLE TIME' (1234), and 'NOK COUNT' (1234).
- Message Area:** A field labeled 'Message' with the text '####'.
- Other Indicators:** 'Screw Gun Enable' and 'SCREW GUN COUNT' (1234).

FIG.3.AUTO

- This screen display live cycle status.
- This screen shows cycle time is in second.
- Here also we display sensors, if it is present then it indicates with Green color and if it is not then indicates with Red color.
- It also indicates OK and NOK part count & screw count.

5.4. MANUAL:

- Click on 'MANUAL' button, below screen will appear.

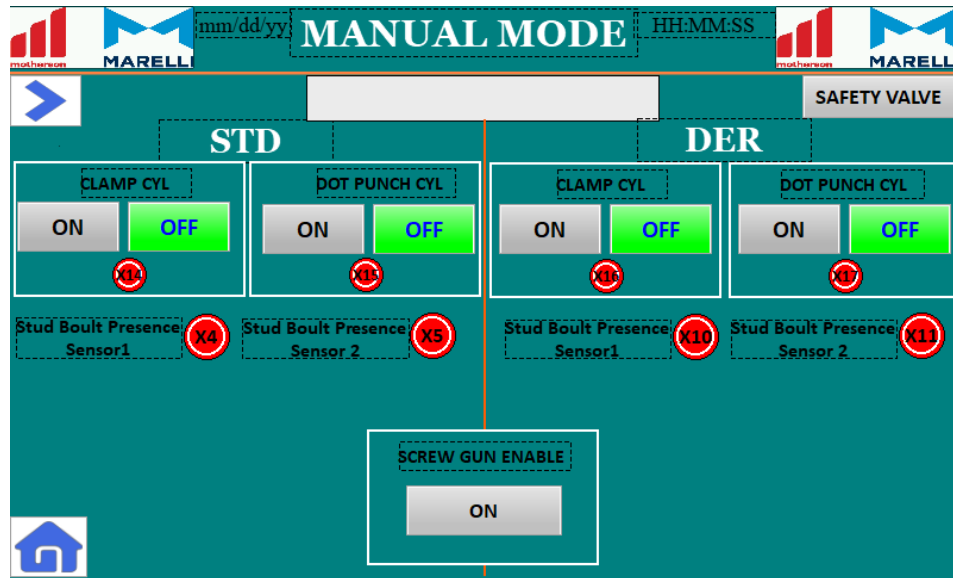


FIG.4.MANUAL OPERATION

- Here all the cylinders can be operated manually after switching the safety valve ON.
- Screw gun can be enable & disable manually.
- Press **HOME** button to go back.

5.5. INPUT LIST:

- Click on 'INPUT' button, below screen will appear.

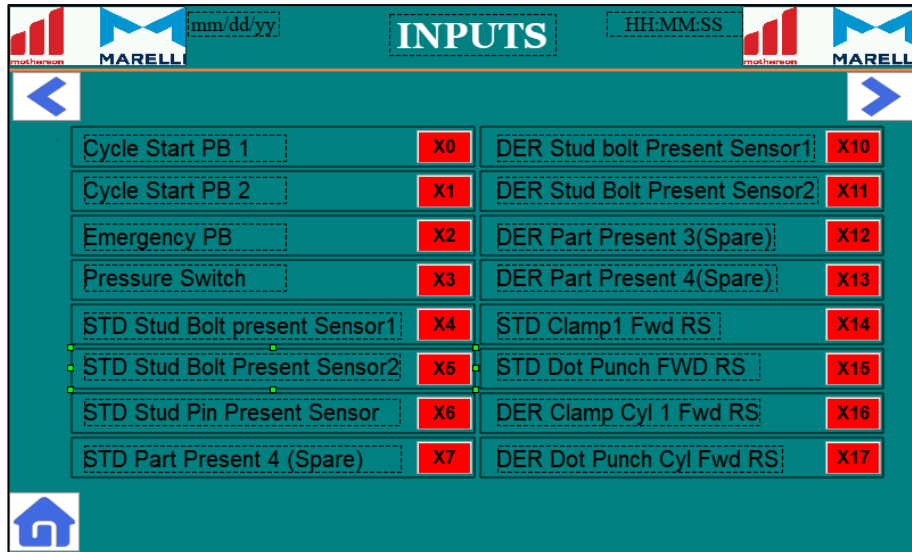


FIG.5.1.INPUT LIST


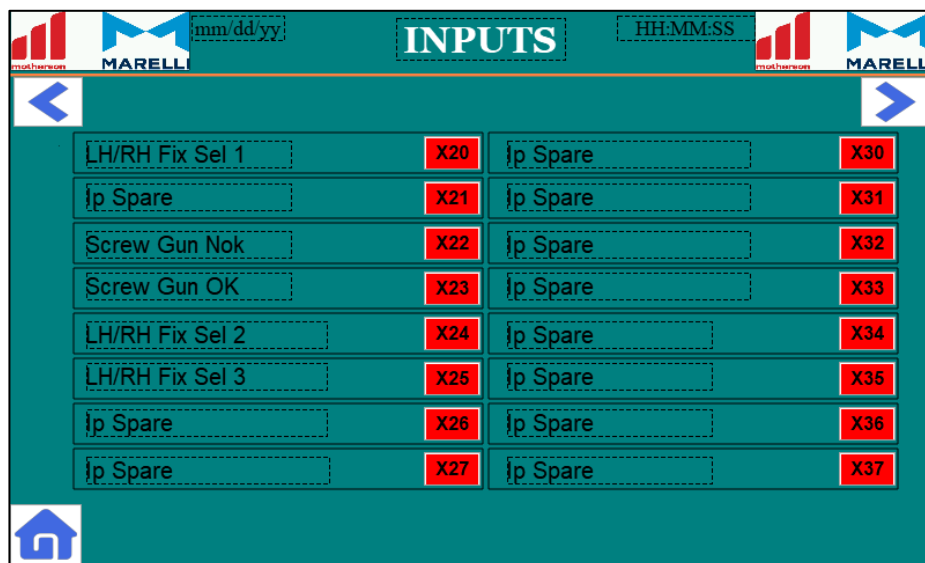


FIG.5.2.INPUT LIST

- For maintenance purpose all the inputs are displayed on the above screen.
- If input is ON, indicator turns GREEN. If it is OFF, indicator turns RED.
- Press forward arrow button for go to next window.
- Press backward arrow button for go back.
- Press HOME button to go on main screen.


5.6. OUTPUT LIST:

➤ Click on 'OUTPUT' button, below screen will appear.

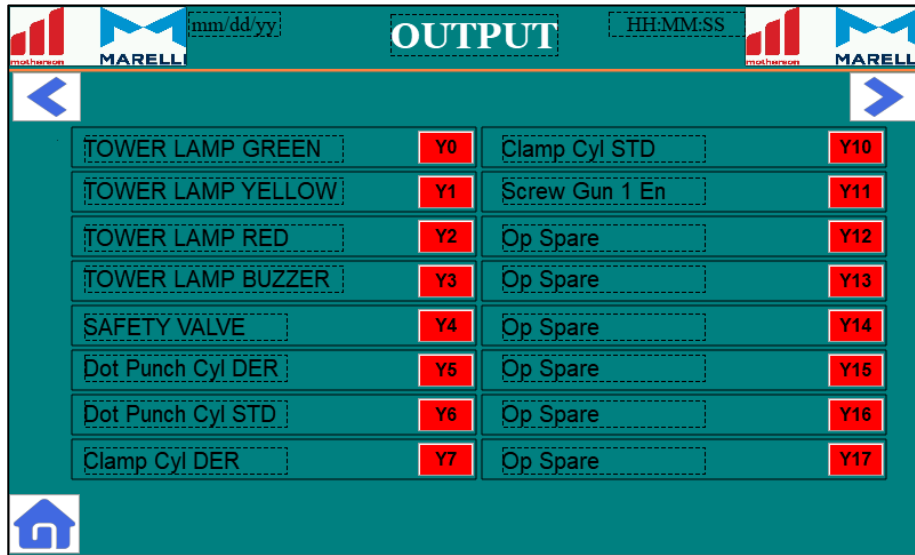

mm/dd/yy		OUTPUT		HH:MM:SS	
TOWER LAMP GREEN	Y0	Clamp Cyl STD	Y10		
TOWER LAMP YELLOW	Y1	Screw Gun 1 En	Y11		
TOWER LAMP RED	Y2	Op Spare	Y12		
TOWER LAMP BUZZER	Y3	Op Spare	Y13		
SAFETY VALVE	Y4	Op Spare	Y14		
Dot Punch Cyl DER	Y5	Op Spare	Y15		
Dot Punch Cyl STD	Y6	Op Spare	Y16		
Clamp Cyl DER	Y7	Op Spare	Y17		

FIG.6.1.OUTPUT LIST

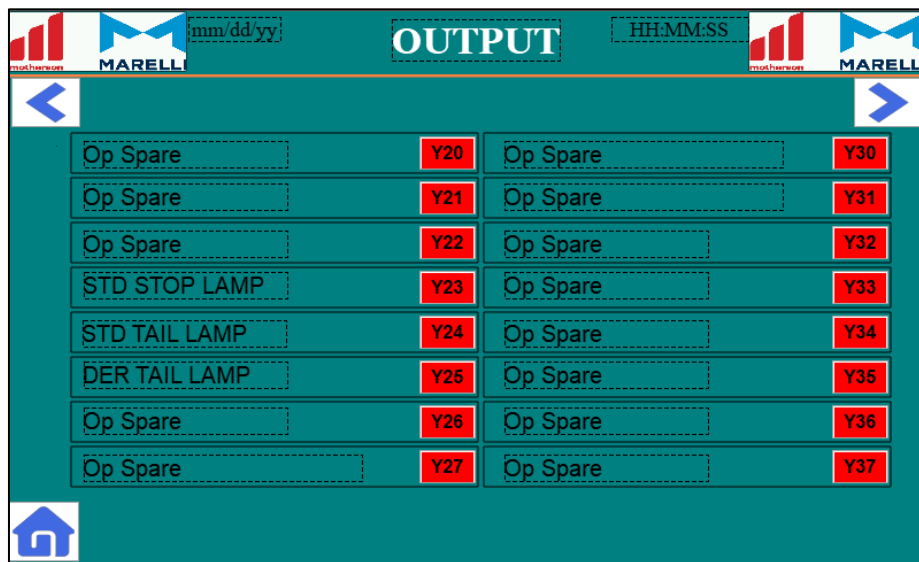

mm/dd/yy		OUTPUT		HH:MM:SS	
Op Spare	Y20	Op Spare	Y30		
Op Spare	Y21	Op Spare	Y31		
Op Spare	Y22	Op Spare	Y32		
STD STOP LAMP	Y23	Op Spare	Y33		
STD TAIL LAMP	Y24	Op Spare	Y34		
DER TAIL LAMP	Y25	Op Spare	Y35		
Op Spare	Y26	Op Spare	Y36		
Op Spare	Y27	Op Spare	Y37		

FIG.6.2.OUTPUT LIST

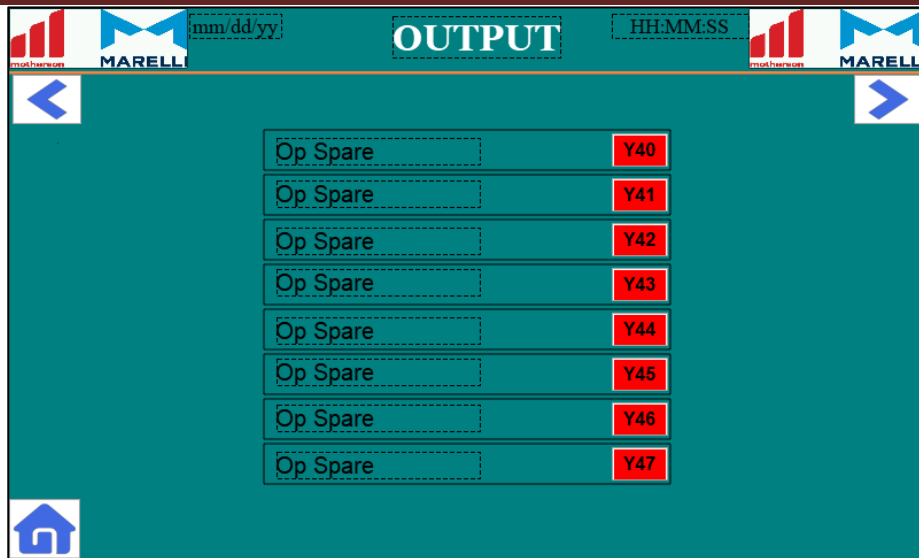


FIG.6.3.OUTPUT LIST

- For maintenance purpose all the outputs are displayed on the below screen.
- If output is ON then indicator turns GREEN if it is OFF then indicator turns RED.
- Press forward arrow button for go to next window.
- Press backward arrow button for go back.
- Press HOME button to go on main screen.

5.7. CONFIGURATION:

- Click on 'CONFIGURATION' button, below screen will appear.

The screenshot shows the 'CONFIGURE' screen with the following elements:

- Header:** MARELLI logo, date field (mm/dd/yy), title 'CONFIGURE', and time field (HH:MM:SS).
- Fields:**
 - PROG NO: 12
 - ABCDEFGHIJKLMNO
 - SCREW COUNT: 1234
- Test Options (each with a red 'X' button):**
 - CLAMP CYL 1
 - DOT PUNCH CYL
 - STUD BOULT 1 PRESENSE
 - STUD BOULT 2 PRESENSE
 - CLAMP CYL 1 REED SW (with value 12)
 - DOT PUNCH REED SW (with value 12)
 - STUD PIN PRESENSE
- Buttons:** PRE GLOW TEST, POST GLOW TEST (both with red 'X' buttons).
- Navigation:** Home icon (bottom left) and Next arrow (bottom right).

FIG.7.1. CONFIGURATION

The screenshot shows the 'CONFIGURE' screen with the following elements:

- Header:** MARELLI logo, date field (mm/dd/yy), title 'CONFIGURE', and time field (HH:MM:SS).
- Fields:**
 - ABCDEFGHIJKLMNO
 - FIXTURE ID
 - CURRENT: 1234
 - =
 - SET: 1234
 - A red 'NOK' button is positioned between the current and set values.
- LAMP GLOW TEST SELECTION:**
 - STOP LAMP (with red 'X' button)
 - TAIL LAMP (with red 'X' button)
 - BIN WISE CURRENT (with red 'X' button)
- Buttons:** GLOW COUNTS (with value 12345 and unit N), GLOW TIME (with value 12345 and unit Sec).
- Navigation:** Home icon (bottom left) and Left/Right arrows (bottom right).

FIG.7.2. CONFIGURATION

CONFIGURE

mm/dd/yy HH:MM:SS

ABCDEF GHIJKLMNO

CURRENT SETTING BIN WISE

Without Bin Wise Current

WH SCAN X PCB SCAN X

WIRE HARNESS No. ABCDEFGHIJKL PCB PART No. ABCDEFGHIJKLMN

BIN 7E		BIN 8E		BIN 5F	
	MIN	MAX		MIN	MAX
STOP LAMP	123.4 mA	123.4 mA	STOP LAMP	123.4 mA	123.4 mA
TAIL LAMP	123.4 mA	123.4 mA	TAIL LAMP	123.4 mA	123.4 mA

BIN 6F		
	MIN	MAX
STOP LAMP	123.4 mA	123.4 mA
TAIL LAMP	123.4 mA	123.4 mA

FIG.7.3. CONFIGURATION

CONFIGURE

04/18/2022 09:36:23

YFG TRUNK STD

CURRENT SETTING

	MIN		MAX
STOP LAMP 1	0.240 Amp		0.500 Amp
TAIL LAMP 2	0.061 Amp		0.200 Amp
Post Stop Lamp	0.200 Amp		0.500 Amp
Post Tail Lamp	0.050 Amp		0.200 Amp

GLOW COUNTS 0 N

GLOW TIME 1 Sec

FIG.7.4. CONFIGURATION

- To open this screen first we have to enter password.
- Here we can create a new program.
- Here we can enable or disable sensors and cylinder by pressing the button.
- Also we can enter screw count and REED SW delay timing.
- From Fig.7.1 we can Enable/Disable each Lamp for Glow Testing, also Select correct fixture ID.
- From Fig7.3 we can input PCB & Wire Harness Part No., Bin wise Glow Test Ranges for each Lamp, Enable/Disable for Scanning.
- If Scanning is bypassed, we have to Input Glow Test Current Ranges in 'Without Current Setting' Screen.
- From Fig.7.4 we can enter Min/Max value for lamp.
- Press **Home** to go main menu.

5.8. ALARM SCREEN:

- Click on ‘**ALARM HISTORY**’ button, below screen will appear.

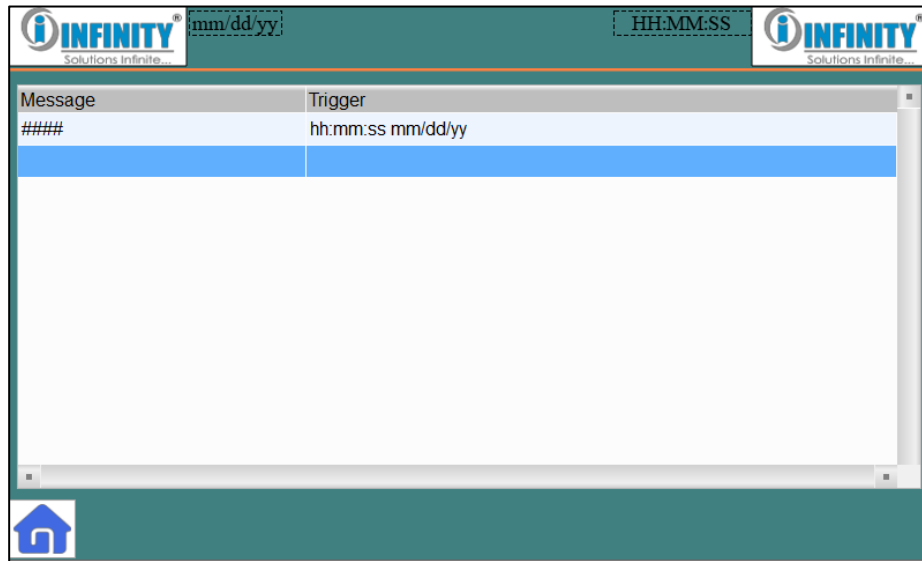


FIG.5.8. ALARM HISTORY

- Alarm history can be shown on the screen.

5.9. DATA LOG SCREEN:

- Click on 'DATA LOG SCREEN' button, below screen will appear.

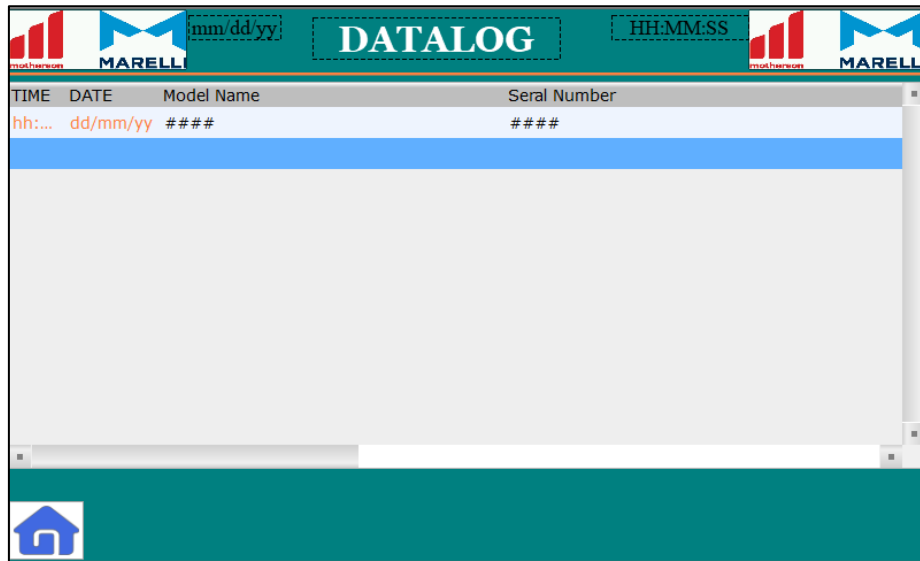


FIG.5.9. DATA LOG SCREEN

- This screen displays the data history of Glow test of previous cycles.

6. SPARE LIST:

• ELECTRICAL BOM:

Project No.: A21082				
NO.	Part Number	Name/Description	Qty	Make
1	DOP-107EV	HMI.HMI 7" In build Ethernet	1	DELTA
2	FX5U-80MT/ESS	PLC.CPU 40 I/P(Sink/Source).40 O/P(Source) 100 to 240 VAC Supply	1	MITSUBHISHI
3	FX5-4AD-ADP	FX5U SERIES ANALOG INPUT 12BIT.	1	MITSUBHISHI
4	6GK5005-0BA00-1AB2	6GK5005-0BA00-1AB2.SCALANCE XB005 unmanaged Industrial Ethernet Switch for 10/100	1	SIEMENS
5	XVGB3S	Tower lamp RAG with Buzzer 24V DC	1	SCHNEIDER
6	ONE WAY SIZE 90X80X52 MM	PENDANT	4	TEKNIC
7	2AM2	PUSH BUTTON. METALLIC BLACK MUSHROOM TYPE PUSHBUTTON, 40MM, MOMENTARY (SPRING RETURN)	1	TEKNIC
8	2AMJ3	PUSH BUTTON. METALLIC GREEN MUSHROOM TYPE PUSHBUTTON, 60MM, MOMENTARY	2	TEKNIC
9	2AML4	PUSH BUTTON. METALLIC RED MUSHROOM TYPE PUSHBUTTON, 40MM, LATCHING (ENERGENCY PUSHBUTTON)	1	TEKNIC
10	S2	NC CONTACT METALLIC RED NORMALLY CLOSED CONTACT ELEMENTS	1	TEKNIC
11	S1	NO CONTACT METALLIC GREEN NORMALLY OPEN CONTACT ELEMENTS	3	TEKNIC
12	M8	QUICK RELEASE OPENING	1	LOCAL
13	555234	INDUSTRIAL PLUG.Straight plug P17 - IP44 - 200/250 V~ - 32 A - 2P+E	1	LEGRAND

14	555254	INDUSTRIAL SOCKET.Surface mounting socket P17 - IP44 - 200/250 V~ - 32 A - 2P+E	1	LEGRAND
15				
16	6740 99	SERVICE SOCKET MYLINC SURFACE BOX - 9 MODULES	1	LEGRAND
17	6755 69	SERVICE SOCKET - MYLINC PLATES - 9 MODULES	1	LEGRAND
18	GOLDEN-30W-T8 LED(2ft) 6500K DAY-LIGHT	GOLDEN-30W-T8 LED(2ft) 6500K DAY-LIGHT	2	OREVA
19	PD9531	Scanner.Barcode Scanner Power Scan	1	DATALOGIC
20	JN12-M01	Barcode Printer.BARCODE LABEL THERMAL PRINTER	1	CITIZEN
21	CF-200	Machine Fan. 200 MM Cabin Fan Blue Colour	1	REMI
22	SHUNT_I/P-0-5A,O/P-0-75mV	I/P-0-5A,O/P-0-75mV	3	RISHABH
23	SI-101	CONVERTER, I/P-0-75mVDC, O/P-0-10VDC AUX SUPPLY - 24...60V DC	3	RISHABH
24	15X40MM(HXL) ENGRAVING	NAME PLATE. SQUARE ENGRAVING		LOCAL
25	ROUND Dia 22.5MM	NAME PLATE. ROUND ENGRAVING		LOCAL
26	857-304	Slim Relay.Relay module; Nominal input voltage: 24 VDC; 1 changeover contact; Limiting continuous current: 6 A; Yellow status indicator; Module width: 6 mm; 2,50 mm ² ; gray	38	WAGO
27	2946-859-410-ND	SHORT LINK.PUSH-IN TYPE JUMPER BAR; 10-WAY	4	WAGO
28	KUDF 4AD	Fuse Terminal. Dinrail Mouniting 800V, 6.3A Fuse Terminal,4Sq.mm Wire Size	6	ELMEX
29	VCF1	MAINS ON/OFF.Mains ON/OFF 32A	1	SCHNEIDER
30	A9N2P32C	MCB.2 Pole 32 Amp	1	SCHNEIDER
31	A9N2P06C	MCB.2P,6AMP	1	SCHNEIDER


32	A9N2P16C	MCB.2 POLE MCB,16A	1	SCHNEIDER
33	XB7EV04MP	INDICATION LAMP.POWER ON INDICATOR. RED LED 230VAC	1	SCHNEIDER
34	T5 LED	TUBELIGHT. 1 FT LED TUBE LIGHT	1	PHILIPS
35	3SE3-020-OA	LIMIT SWITCH.Siemens 1NO+1NC Contact Type Limit Switch 3SE3 020-OA	1	SIEMENS
36	3" Fan Filter Jigo	Fan Filter.3" Fan Filter	2	JIGO
37	3" Fan Grill	Fan Grill.3" Fan Grill	2	JIGO
38	3" Fan 230VAC	Fan.3" Fan 230VAC	2	JIGO
39				
40	NHP-24VDC-5A	SAMPS.SMPS 24VDC;5A	1	NHP
41	6755 62	SERVICE SOCKET.MYLINC PLATES -2 MODULES	1	LEGRAND
42	673302	SERVICE SOCKET.MYLINC SURFACE BOX -2 MODULES	1	LEGRAND
43	6755 01	SERVICE SOCKET MYLINC 6 AMP SWITCH SP	2	LEGRAND
44	6755 50	SERVICE SOCKET MYLINC 6 AMP SOCKET 2/3 PIN	1	LEGRAND
45	6733 04	SURFACE BOX.MYLINC SURFACE BOX- 4 MODULES	1	LEGRAND
46	6755 64	MODULE PLATE.MYLINC 4 MODULE PLATE-WHITE	1	LEGRAND
47	ZMPS15-10 With Display	Power Supply. DC Variable Power Supply 0 to 15VDC, 230VAC Input Supply	1	ZEAL
48	675974	MCB Switch.Myline Modular SP MCB 16A	2	Legrand

• **PNEUMATIC BOM:**

Project No.: A21082				
No	PART NAME	PART NO.	QTY	MAKE
1	SPRING BALNCER	HSB-3	1	ENDO
2	LINEAR BEARING	SC16UU	1	SAMIK
3	DRAG CHAIN		1	IGUS
4	REJECTION BIN	FPO CRATE	1	NILKAMAL
5	STRAIGHT FITTING	KQ2H-08-U02A	1	SMC
6	ON OFF VALVE	VHS20-02A	1	SMC
7	SILENSOR	AN10-01	1	SMC
8	BRACKET	Y200-A	2	SMC
9	FRL	AW20-02BCG1-B	1	SMC
10	L FITTING	KQ2L06-01A	1	SMC
11	T-INTERFACE	Y210-02-A	1	SMC
12	PRESSURE SWITCH	ISE20A-T-01-JD	1	SMC
13	SPACER WITH BRACKET BRACKET	Y200T-A	1	SMC
14	MODULAR ADAPTOR	E210-U02	1	SMC
15	3/2 VALVE	VT317-5DZ-02F	1	SMC
16	SILENSOR	AN15-02	1	SMC
17	L FITTING	KQ2L06-02A	1	SMC
18	DCV	SY5120-5LZ-01	2	SMC
19	DCV	SY5120-5LZ-01	2	SMC
20	STRAIGHT FITTING	KQ2H06-U01A	10	SMC
21	MANIFOLD	SS5Y5-20-06	1	SMC
22	STRAIGHT FITTING	KQ2H06-U02A	3	SMC
23	SILENSOR	AN15-02	3	SMC
24	PLUG	PL-02	3	SMC
25	BLANKING PLATE ASSEMBLY	SY5000-26-20A	2	SMC

26	KDM CONNECTOR	KDM10-06	1	SMC
----	---------------	----------	---	-----


7. FLOW CHART:

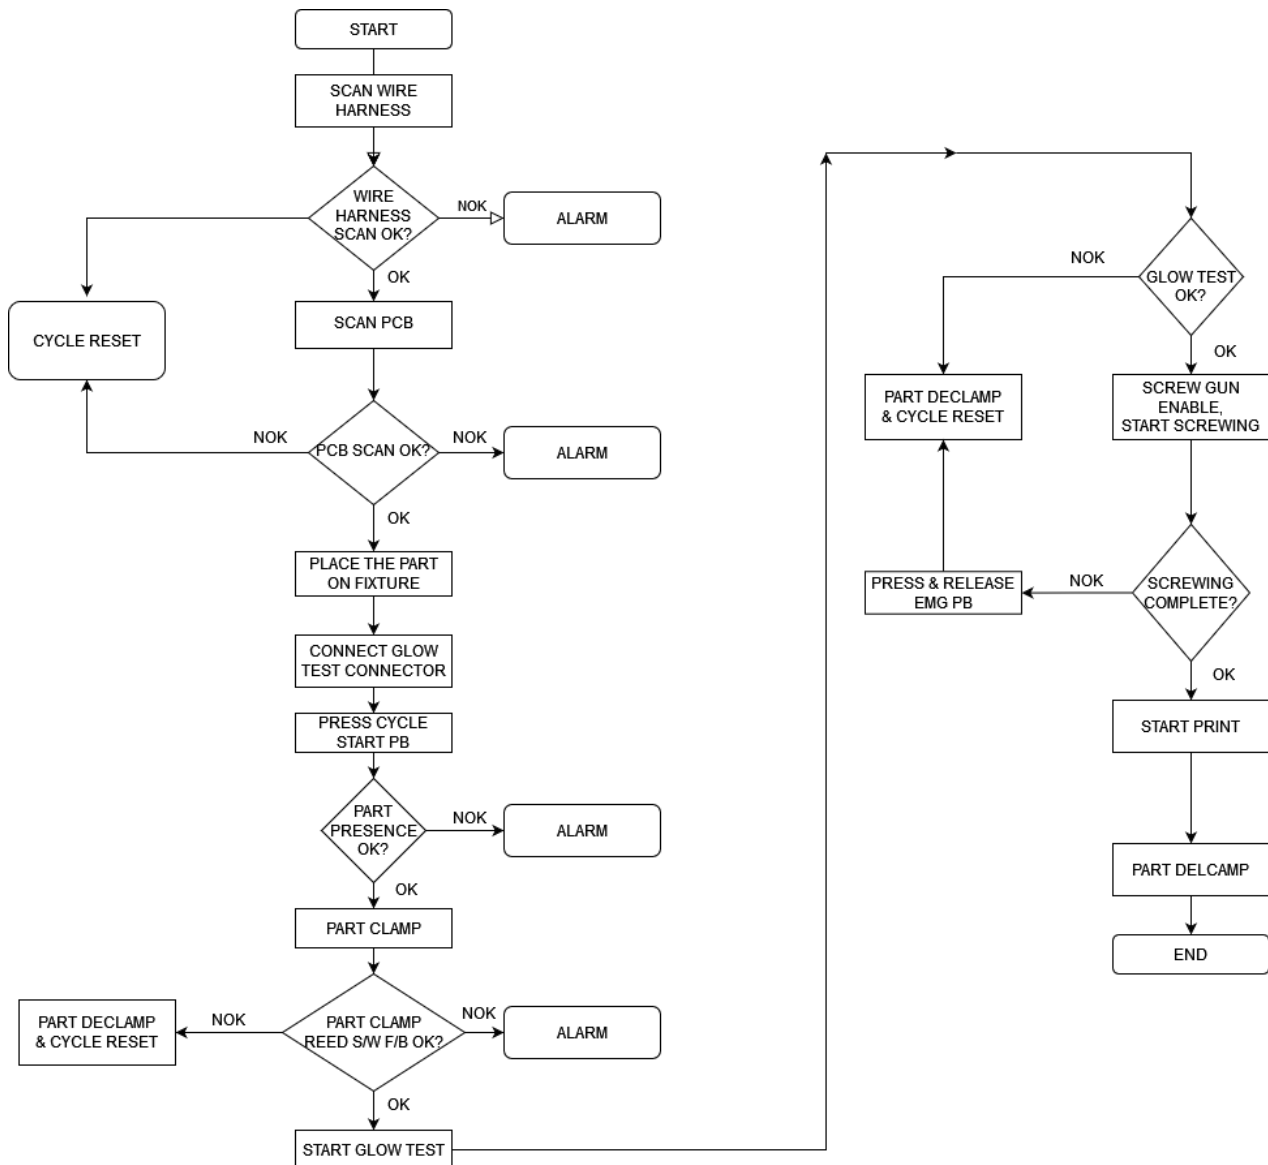


8. TROUBLESHOOT:

- **Emergency Button Pressed alarm:** Release the Emergency Button and Reset alarm from auto screen.
- **Air Pressure Alarm:** Check if air supply is in required range and reset the alarm from auto screen.
- **Clamp Reed Switch Alarm:** Reset alarm from auto screen. Check if the reed switch is glowing by operating the cylinder manually. If not, adjust the position of reed switch to sense the clamp position. Check if correct Reed Switch F/b is enabled in configuration.
- **Fixture selection is wrong alarm:** Check if the program selection is correct according to the model. Reset alarm from auto screen.
- **Glow Test Lamp NOK:** This alarm indicates that the current of a specific lamp is not in required range. Reset alarm from auto screen. Retest the lamp for confirmation, if the alarm occurs again, the Lamp is Not OK. Reset alarm from auto screen.
- **Part Presence Alarm:** this alarm occurs when a part is missing to start cycle. Reset alarm from auto screen. Check & place the part correctly, check if the sensor is sensing the part correctly. Check if the correct sensor is enabled in Configuration.
- **PCB Scan NOK:** This indicates that the scanned part is not correct. Reset alarm from auto screen. Scan the correct part. Check if correct part number is set in configuration.


9. ELECTRICAL & PNEUMATIC DRAWING:

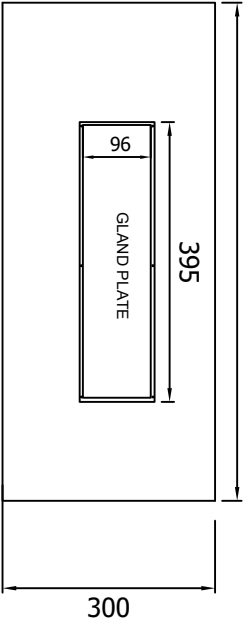


TOP VIEW

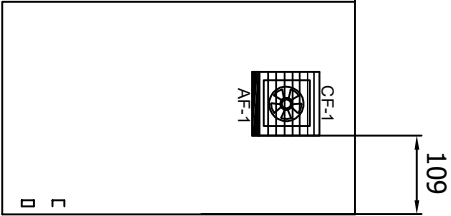

L.H.SIDE VIEW

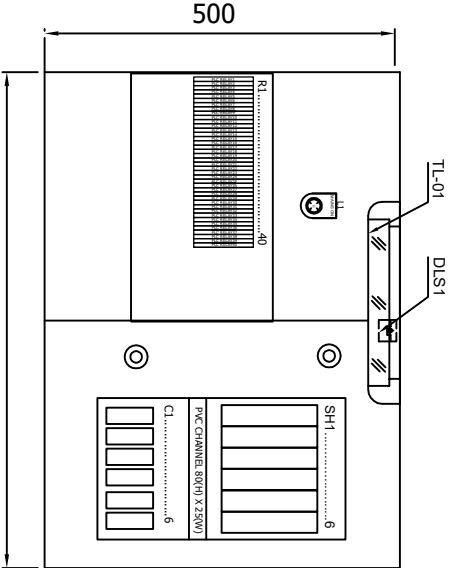

FRONT VIEW

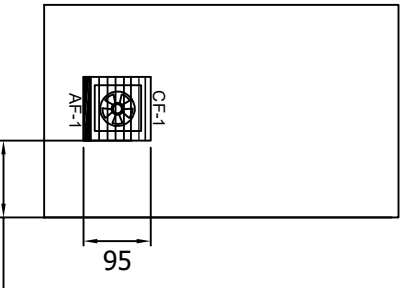


R.H.SIDE VIEW

CHANGES VIA CAD ONLY

- WIRE SIZE & COLOUR DETAILS :-
- 1. 230V AC :- 2.5, 1.5 SQ. MM RED
 - 2. 0V AC :- 2.5, 1.5 SQ. MM BLACK
 - 3. PE :- 2.5, 1.5 SQ. MM YELLOW/GREEN
 - 4. 24V DC :- 0.5 SQ. MM BROWN
 - 5. 0V DC :- 0.5 SQ. MM BLUE
 - 6. DIGITAL INPUT :- 0.5 SQ. MM GRAY
 - 7. DIGITAL OUTPUT :- 0.5 SQ. MM WHITE

REV.	DATE	CHANGES	DRAWN	CHECKED	APPROVED
00	11.04.2022				
CLIENT:-	MM				
PRODUCT:-	ALIB2				
TITLE :- Housing to reflector screwing assembly RH (YES Standard Trunk)					
SCALE :-	NTS	QTY :-	01 No.	SHEET :-	1 of 17
				DRG NO :-	A21082
				REV.-00	

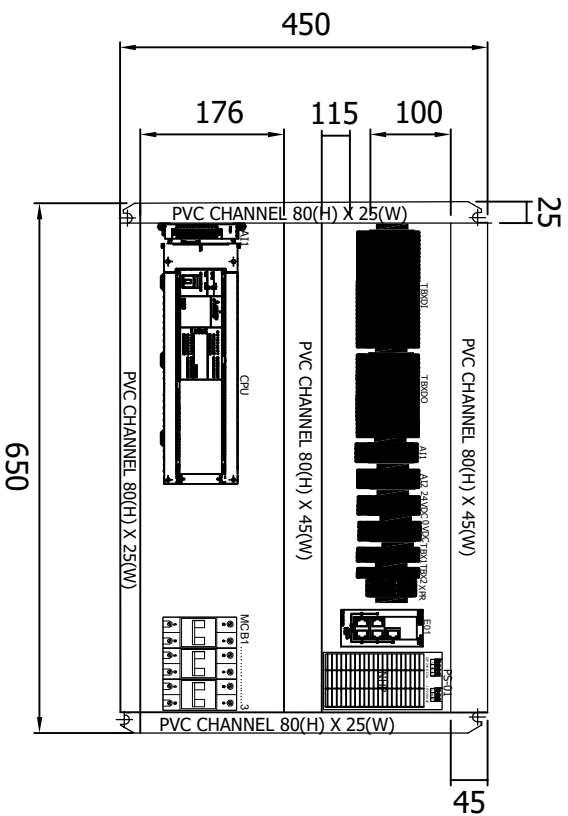

MOUNTING PLATE


PANEL BOX (800W power comb)			MOUNTING PLATE SIZE= 900(0.1 x 800.0) x 300(0.1 x 250.0)		
COMPONENT DETAILS			CABLE ENTRY: TOP		
SN-01	TAG	DESCRIPTION	QTY	NAME	UNIT
1	1CM	POW-ADAP-ES-01-01-1P-5A-0V-75W	01	POWER ADAPTOR	PCS
2	1M	POW-ADAP-AD-01-01-1P-5A-0V-75W	01	ADAPTOR CABLE	M
3	6B1	ETHERNET SWITCH	01	ETHERNET SWITCH	PCS
4	SH-1	SHUNT 1/16-5A-0V-75W	01	SHUNT	PCS
5	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
6	RL-1B	RES-1/16-5A-0V-75W	01	RESISTOR	PCS
7	CJ-6	CONV-1P-5A-0V-75W	01	CONVERTER	PCS
8	SH-1	SHUNT 1/16-5A-0V-75W	01	SHUNT	PCS
9	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
10	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
11	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
12	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
13	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
14	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
15	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
16	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
17	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
18	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
19	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
20	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
21	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
22	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
23	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
24	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
25	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
26	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
27	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
28	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
29	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
30	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
31	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
32	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
33	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
34	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
35	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
36	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
37	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
38	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
39	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
40	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
41	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
42	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
43	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
44	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
45	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
46	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
47	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
48	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
49	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS
50	PS-01	PSU-240W-5C-1P-5A-0V-75W	01	POWER SUPPLY	PCS

00	11.04.2022	MB	DC	PW
----	------------	----	----	----

REV	DATE	CHANGES	DRAWING	CHECKED	APPROVED
CLIENT:-	INFINITY AUTOMATION SYSTEMS PVT. LTD.				
PROJECT:-	WORK: S NO.80/2A,MUMBAI BANGLORE HIGHWAY/AER				
YAS SID TRUNK, ST 04	JSPM ENGG. COLLEGE,TATHAWADE, PUNE - 411033				
YAS SID TRUNK, ST 04	JSPM ENGG. COLLEGE,TATHAWADE, PUNE - 411033				

ITEM :-		
Housing to reflector screwing assembly RH (YFG Standard Trunk)		


SCALE : -NTS	QTY. :- 01 No.	SHEET : 2 of 17	DRG NO :- A21082	REV:- 00
--------------	----------------	-----------------	------------------	----------

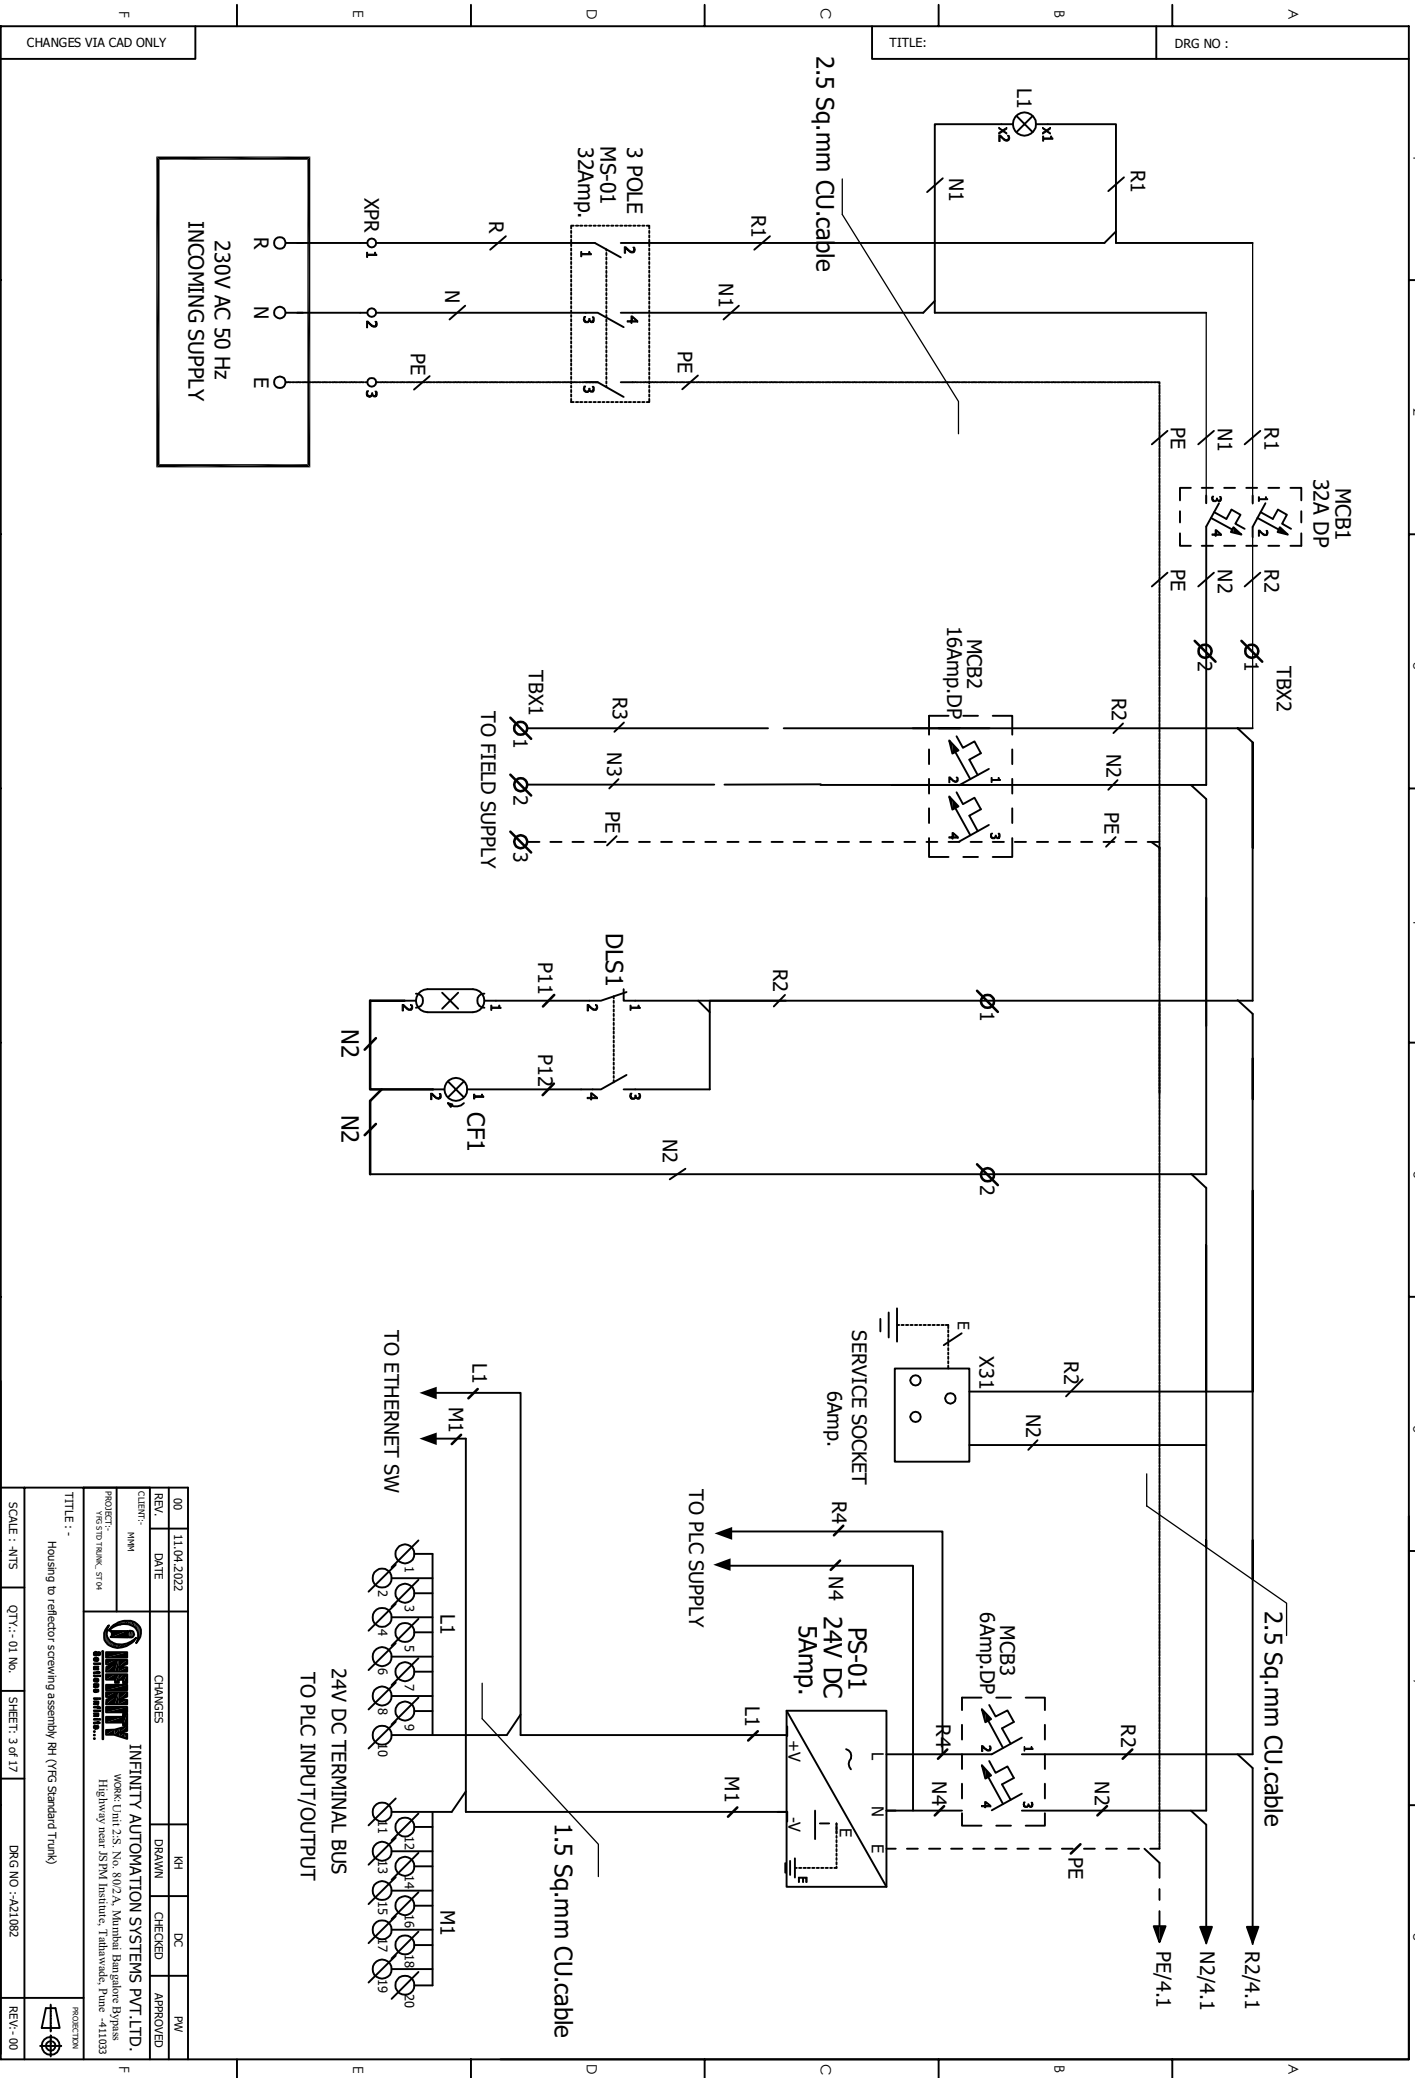

CHANGES VIA CAD ONLY

TITLE: DRG NO :

00	11.04.2022				
REV.	DATE	CHANGES	KH	DC	PW
CLIENT:-					
NAME					
PROJECT:-					
VRS STD TRUNK, STD					
INFINITY INFINITIOM					
INFINITY AUTOMATION SYSTEMS PVT. LTD.					
WORK Unit 2/S, No. 80/2 A, Marudhar Bangalade Bypass					
Highway near JSPM Institute, Jalgaon, Pune - 411033					
INDUSTRIAL					
TITLE :-					
Housing to reflector screwing assembly R4 (VRS Standard Trunk)					
SCALE : ANTS					
QTY:- 01 No.					
SHEET: 3 of 17					
DRG NO :-A21082					
REV:- 00					

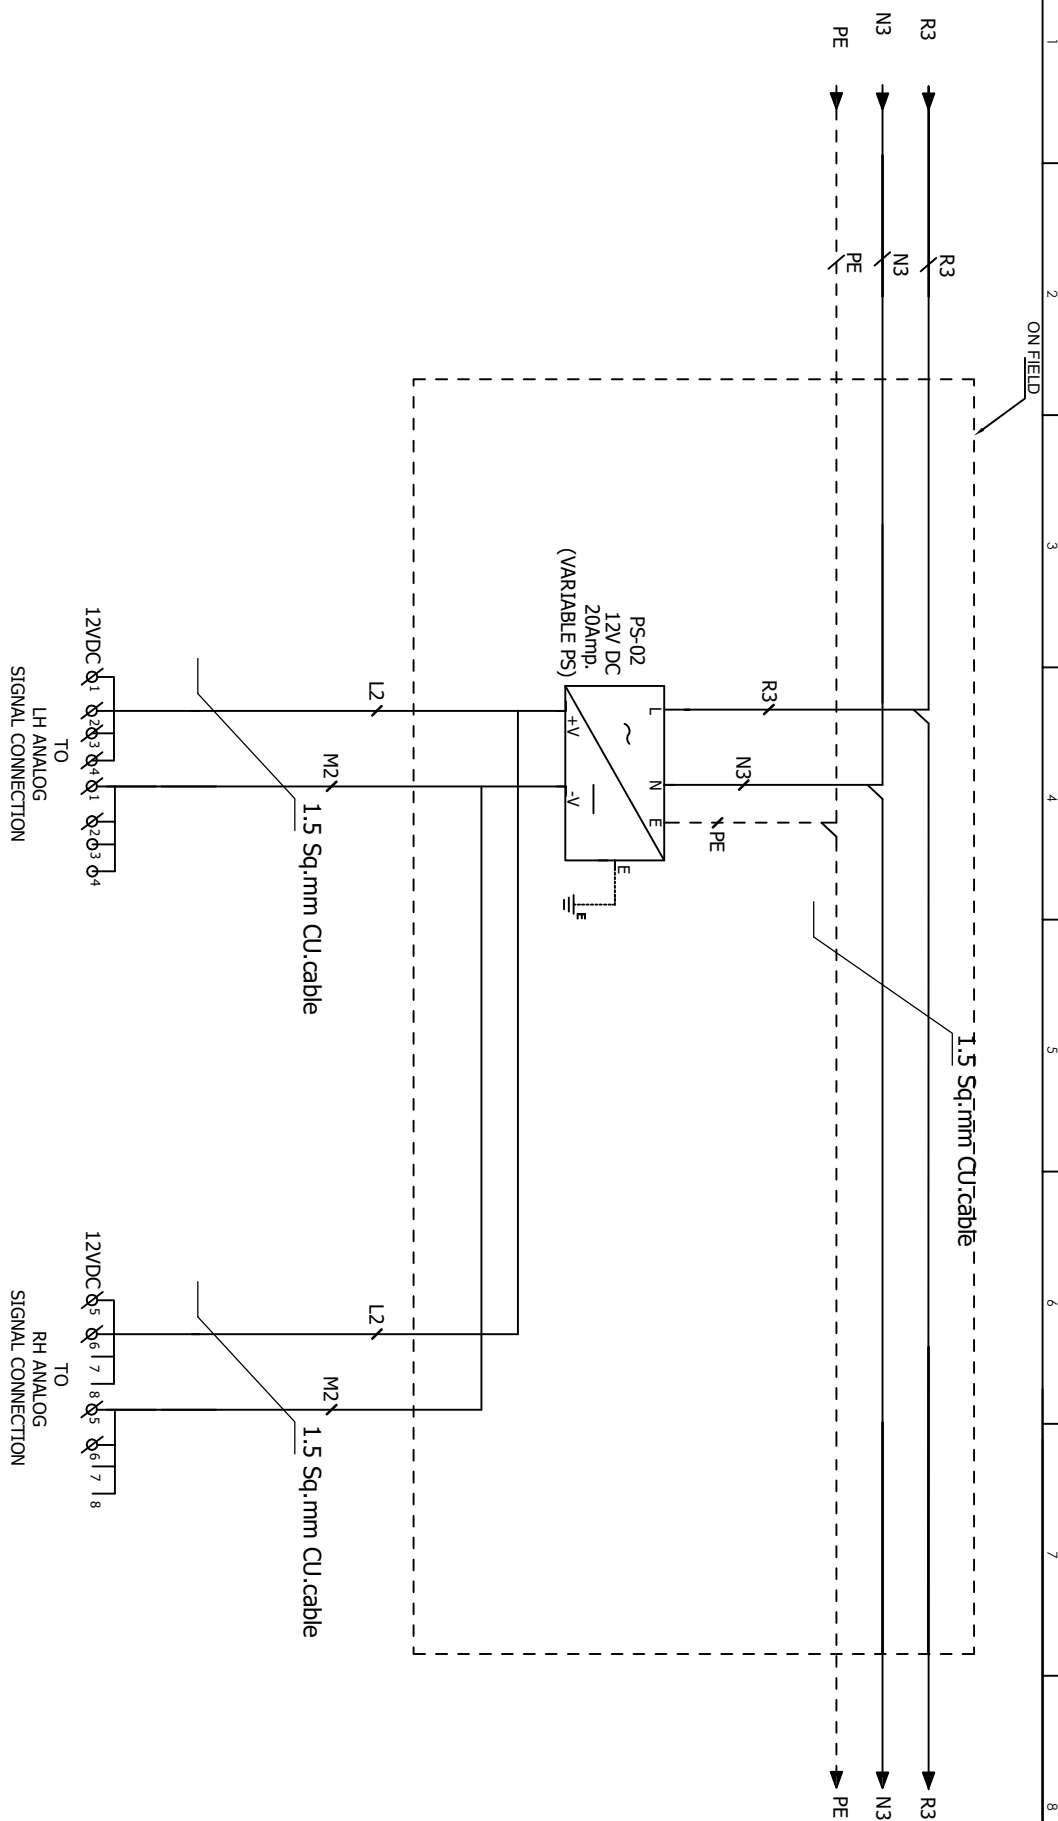


00	11.04.2022	CHANGES	KH	DC	PW
REV.	DATE	CHANGES	DRAWN	CHECKED	APPROVED
CLIENT:-					
PROJECT:-					
ASSEMBLY					
INFINITY AUTOMATION SYSTEMS PVT.LTD.					
WORK: S NO 80/2A, MIDHANI BANGLORE HIGHWAY, NEAR					
JSPM ENGG. COLLEGE, TATHWADE, PUNE - 411033					
PROJECT:-					
Housing to reflector screwing assembly RH (YFS Standard Turn)					
SCALE : - MTS					
QTY:- 01 No.					
SHEET: 4 of 17					
DRG NO:- A21082					
REV:- 00					

DRG NO :

TITLE:

LH ANALOG SIGNAL CONNECTION


FROM PS-02
PAGE:5.4

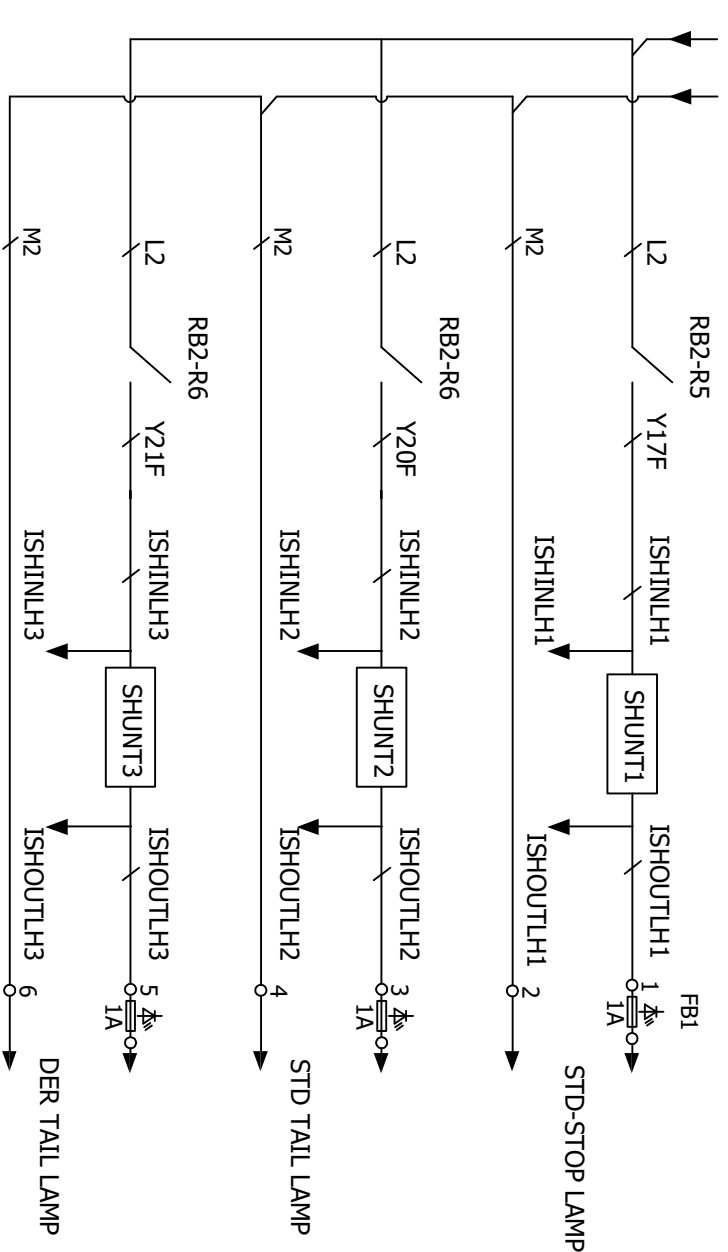



00	11.04.2022	CHANGES	RH	DC	PW
REV.	DATE		DRAWN	CHECKED	APPROVED
CLIENT:-					
PROJECT:-					
421082					
INFINITY AUTOMATION SYSTEMS PVT.LTD.					
WORK: 5 NO.80/2A,MUMBAI BANGLORE HIGHWAY,NEAR					
JSPM ENGG. COLLEGE, JATHAWADE, PUNE - 411033					
TITTLE :-					
Housing to reflector screwing assembly RH (YFG Standard Trunk)					
PROJECTION					


SCALE : -NTS	QTY:-: 01 No.	SHEET: 5 of 17	DRG NO :- A21082	REV:-: 00
--------------	---------------	----------------	------------------	-----------

CHANGES VIA CAD ONLY

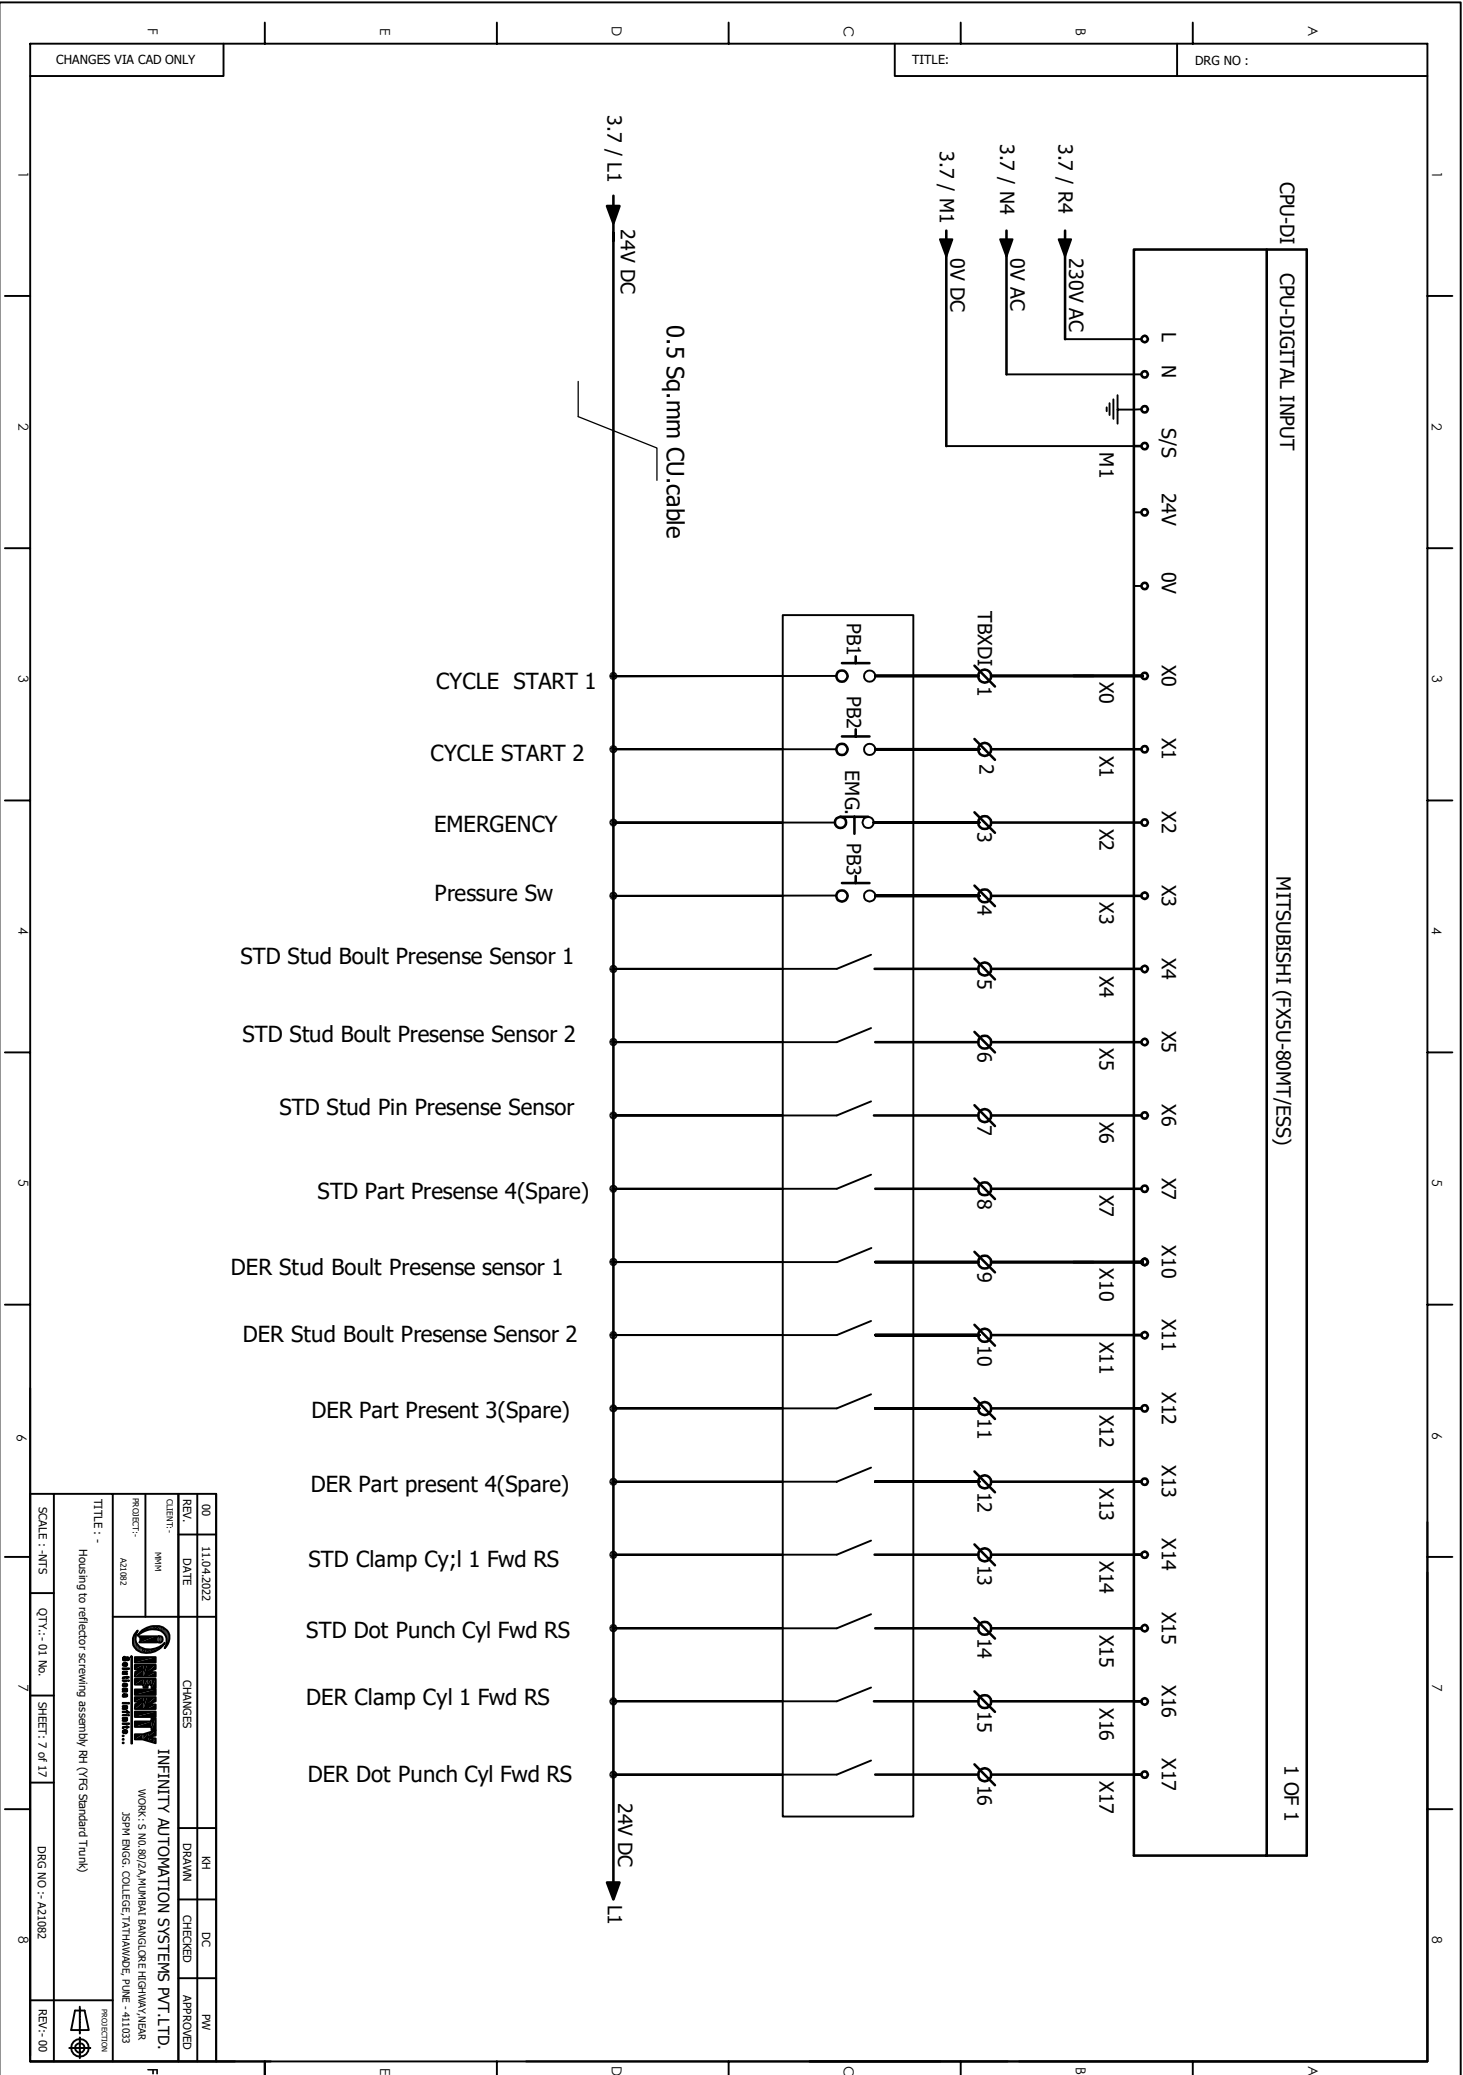

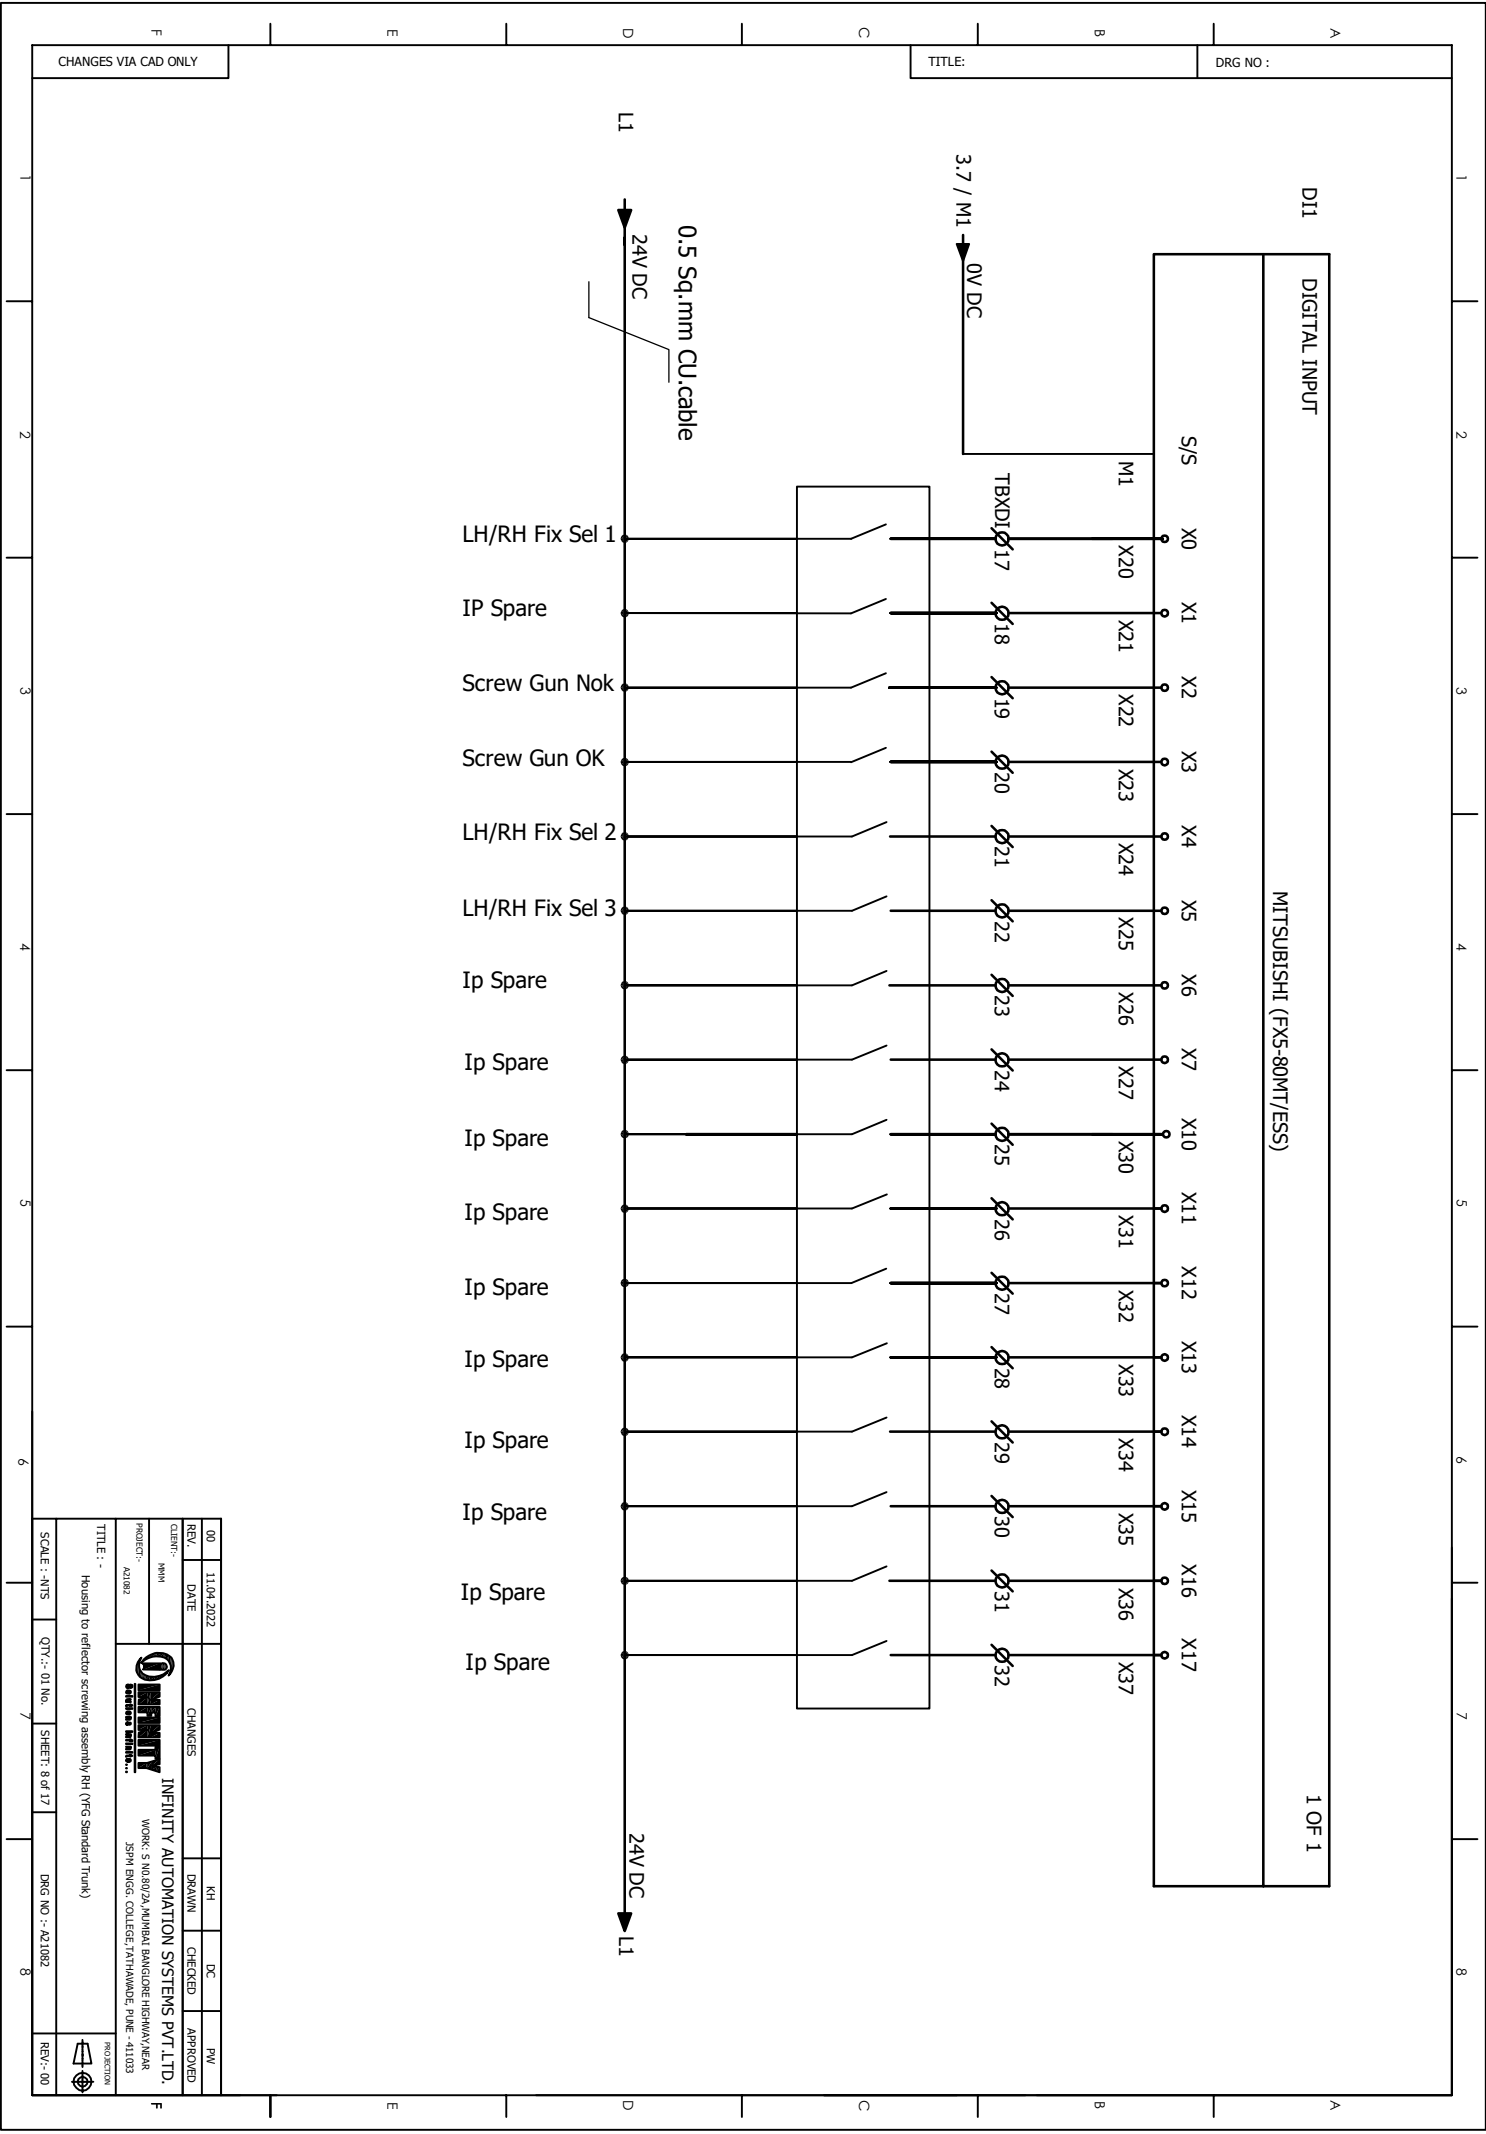


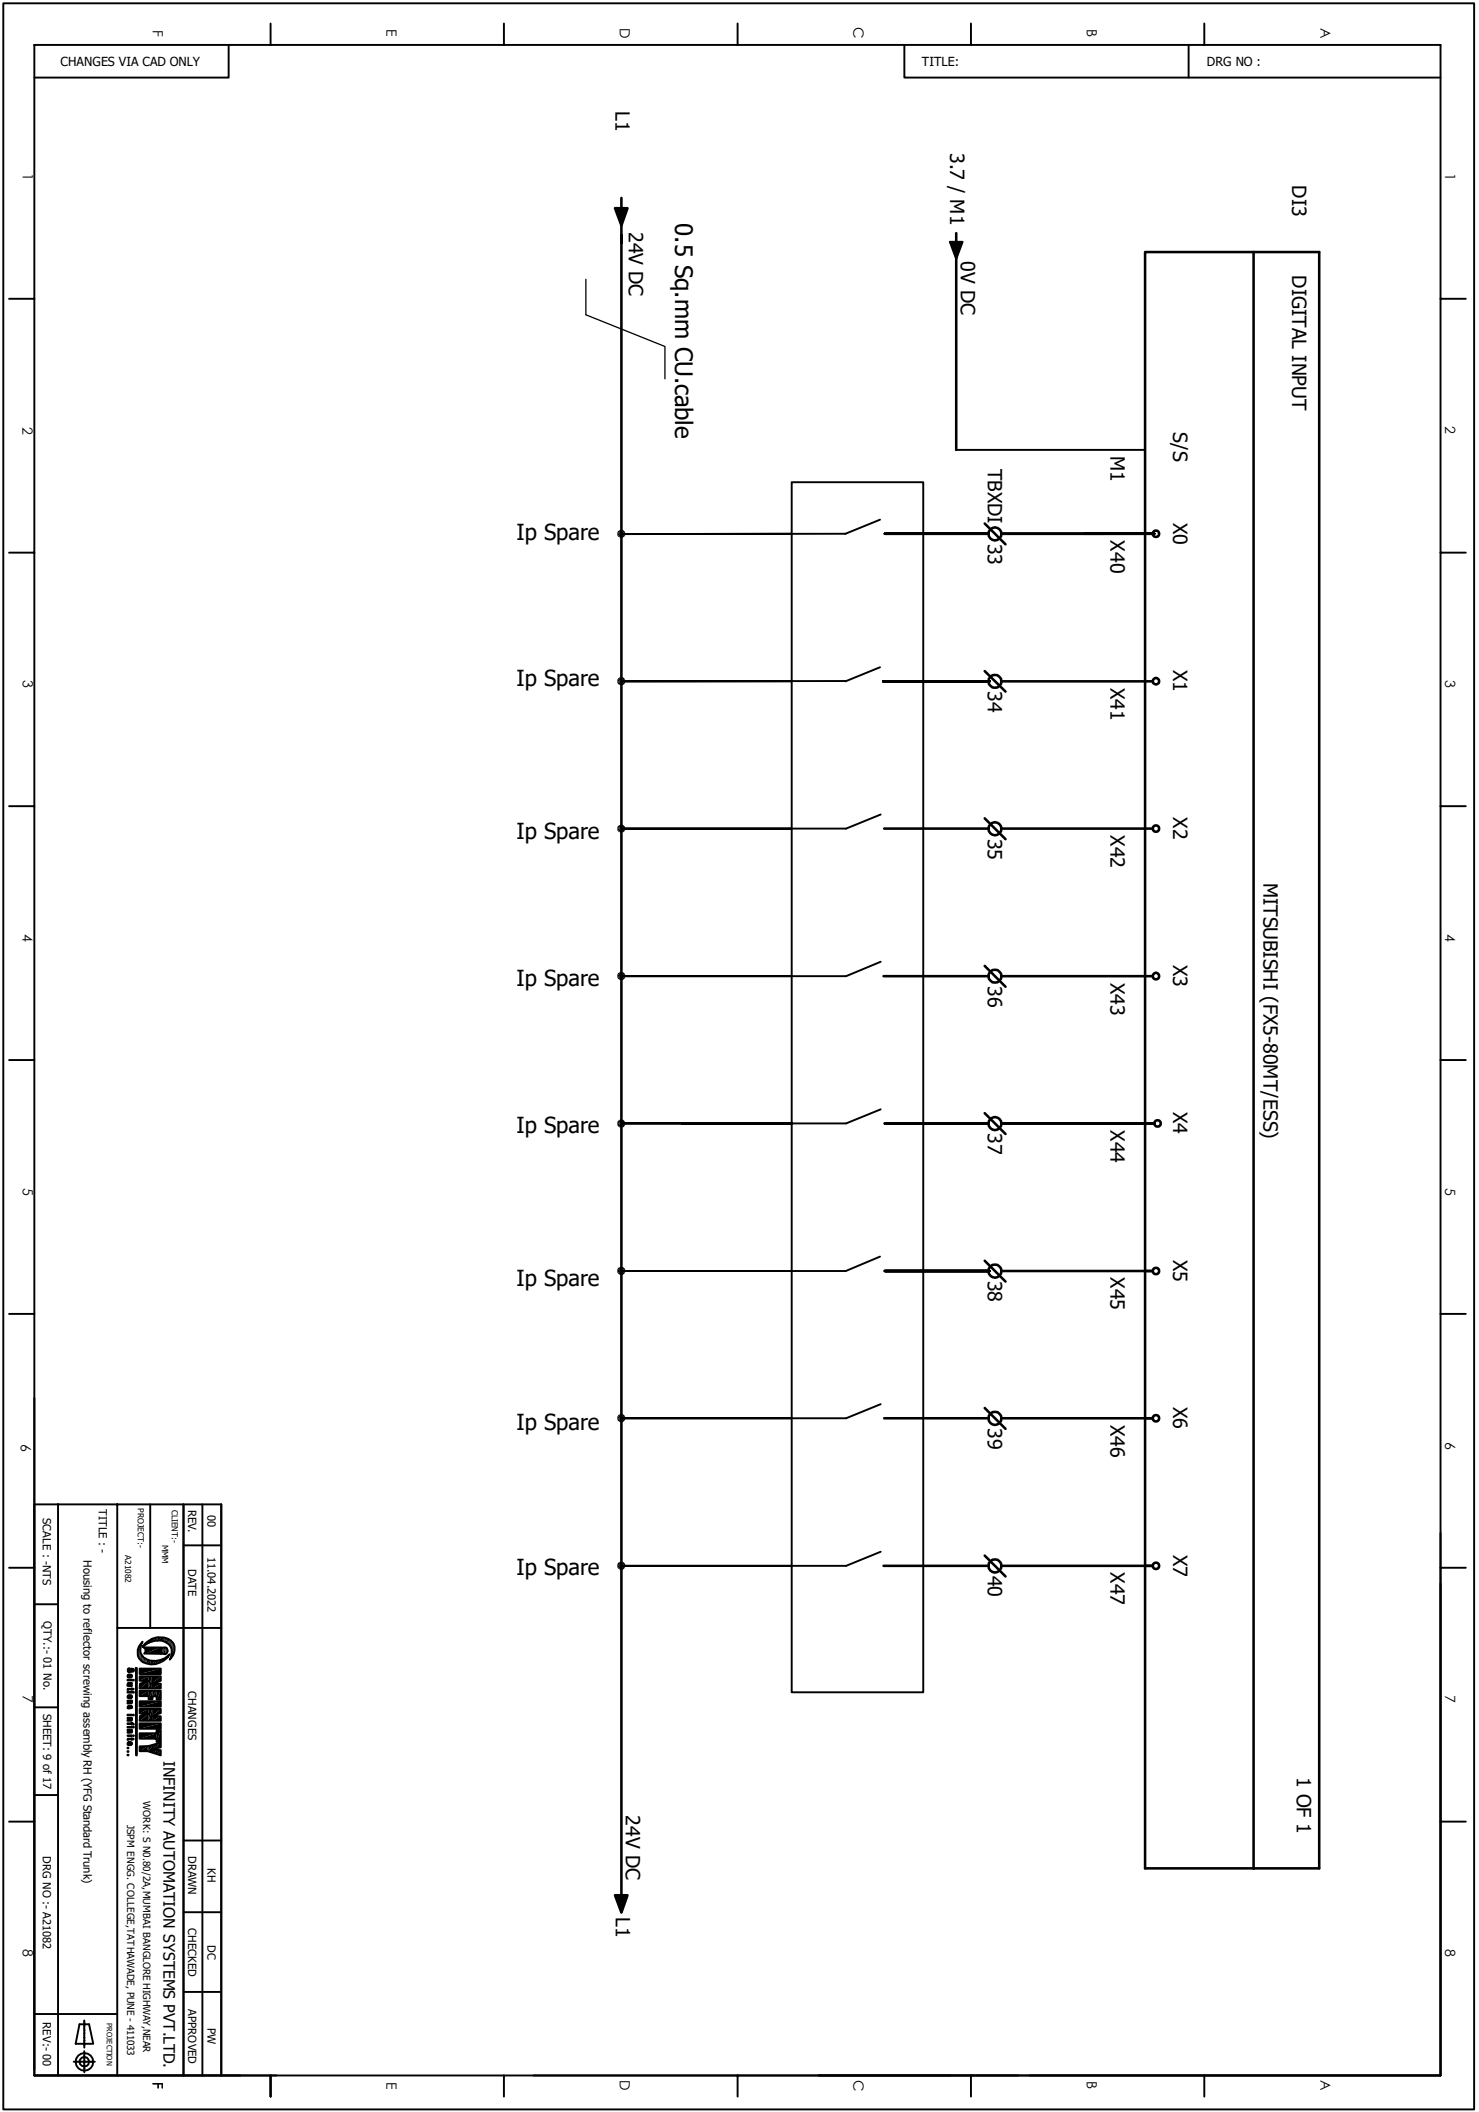

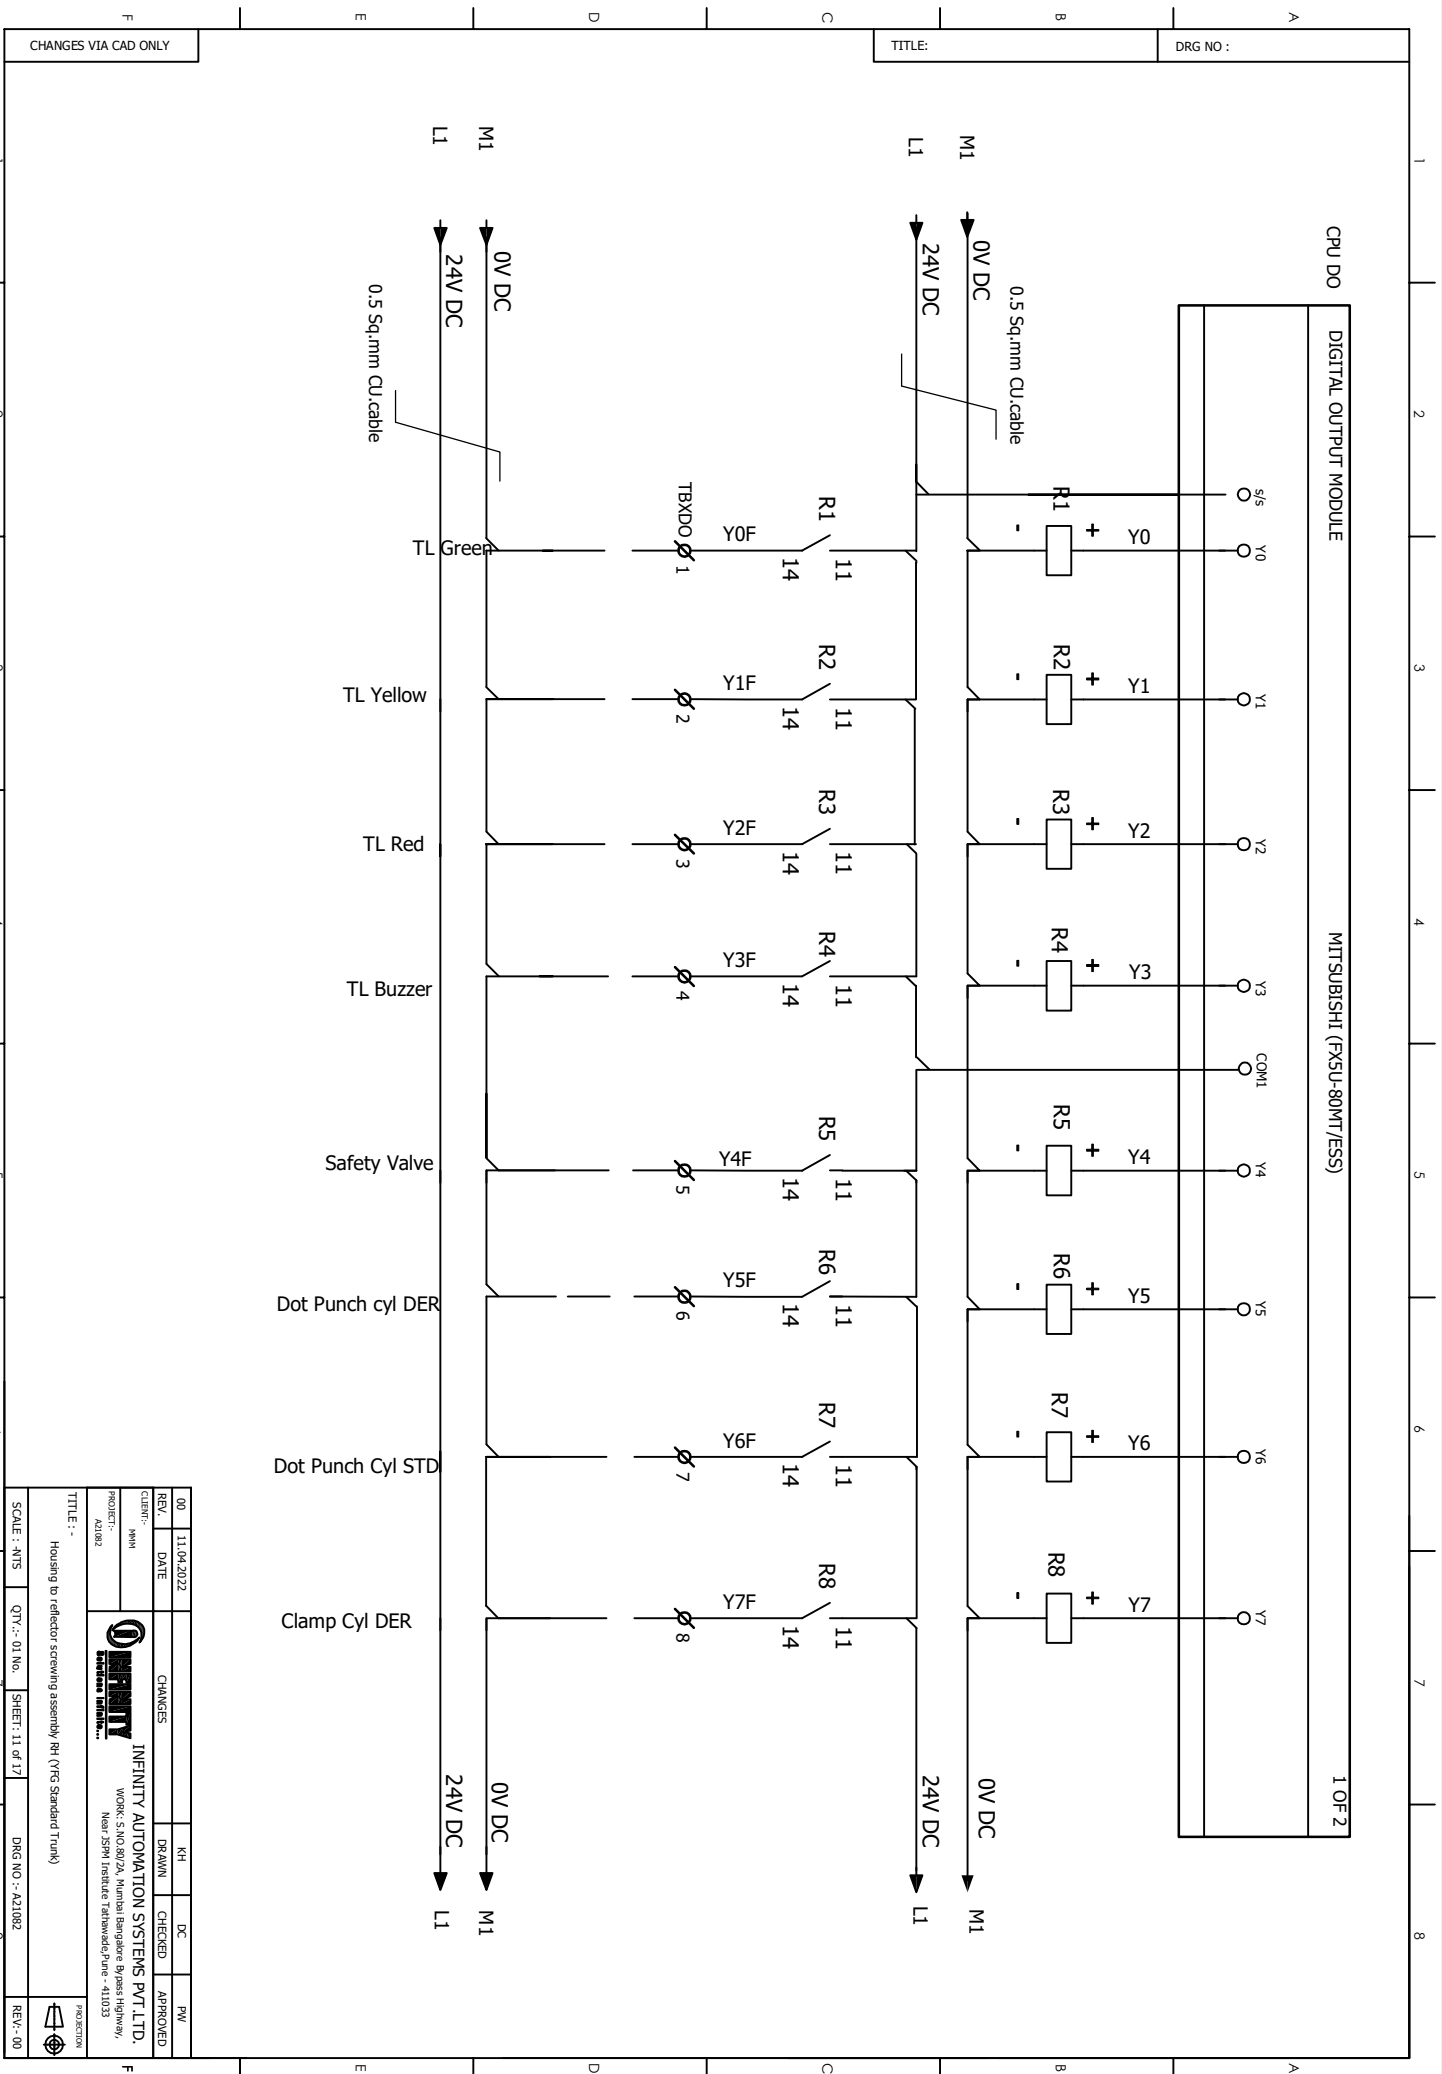



SCALE : -NTS	QTY.: -01 No.	SHEET: 12 of 17	DRG NO : -A21082	REV:- 00
--------------	---------------	-----------------	------------------	----------

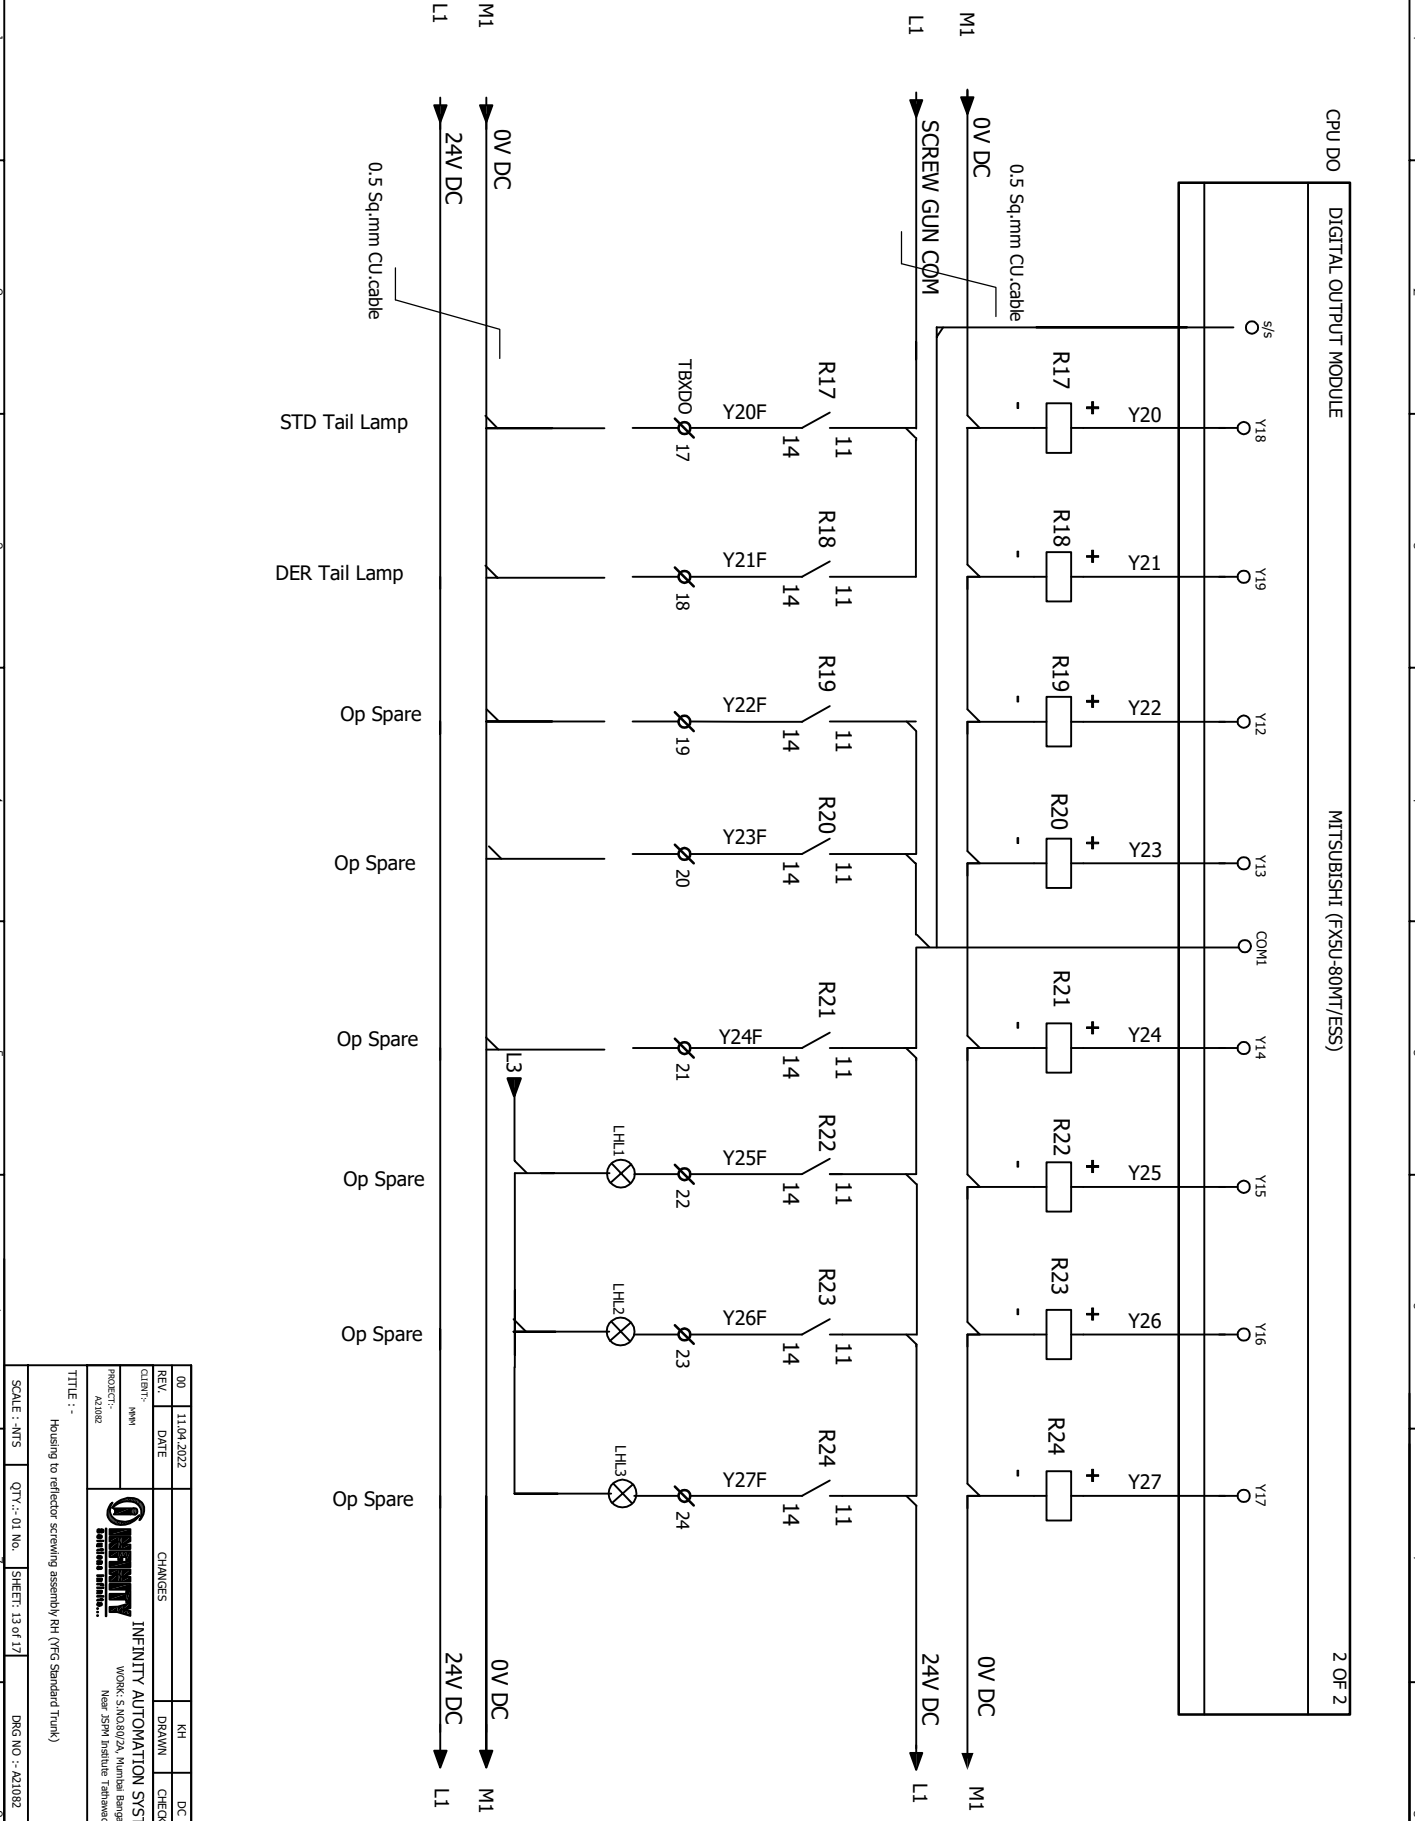

REV	00	11.04.2022	CHANGES	KH	DC	PW
DATE						
CLINT	9999					
PROJECT	A21082					
TITLE	Housing to reflector screwing assembly RH (YFG Standard Trunk)					
SCALE	1:NTS	QTY:- 01 No.	SHEET: 13 of 17	DRG NO :- A21082	REV:- 00	


INFINITY

INFINITY AUTOMATION SYSTEMS PVT.LTD.

WORK: S.HOARD/26, Tummala Bangalore bypass Highway,
Near 25th Milestone Tummala/Channarayana - 561003

PRODUCTION

1 OF 1



TERMINALS DETAILS- TERMINALS DETAILS - POWER/CONTROL TERMINALS

TERM. NO.	1	2	3
WIRE NO.	R	N	PE

WIRE NO.	TERM. NO.
R3	1
N3	2
PE	3

WIRE NO.	TERM. NO.
R2	1
N2	2
PE	3

WIRE NO.	TERM. NO.	WIRE NO.	TERM. NO.
M1	2	L1	1
M1	4	L1	3
M1	6	L1	5
M1	8	L1	7

TERM. NO.	1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39
WIRE NO.	X0	X2	X4	X6	X10	X12	X14	X16	X20	X22	X24	X26	X30	X32	X34	X36	X40	X42	X44	X46
TERM. NO.	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
WIRE NO.	X1	X3	X5	X7	X11	X13	X15	X17	X21	X23	X25	X27	X31	X33	X35	X37	X41	X43	X45	X47

		TERM. NO.	
		1	3
Y0F		5	7
Y2F		9	11
Y4F		13	15
Y6F		17	19
Y10F		21	23
Y12F		25	27
Y14F		29	31
Y16F		33	35
Y20F		37	39
Y22F			
Y24F			
Y26F			
Y30F			
Y32F			
Y34F			
Y36F			
Y40F			
Y42F			
Y44F			
Y46F			

00	11/04/2022	REV.	CHANGES	KH	DC	PW	APPROVED
DATE				DRAWN			
CLIENT:	JMM						
PROJECT:	A21082						
 INFINITY AUTOMATION SYSTEMS PVT. LTD. WORK: 5, NO.6/2A, MINERAL BANGLORE HIGHWAY NEAR JSPM ENGS. COLLEGE, THYRANHOSE, PUNE - 411003							
TITLE : - Housing to reflector screwing assembly RH (YFG Standard Truck)							
SCALE : -MTS	QTY. : -01 No.	SHEET: 17 of 17	DRG NO. : A21082		 REFLECTION		
REV.-00							