


USER MANUAL HOUSING TO STUD PIN ASSEMBLY

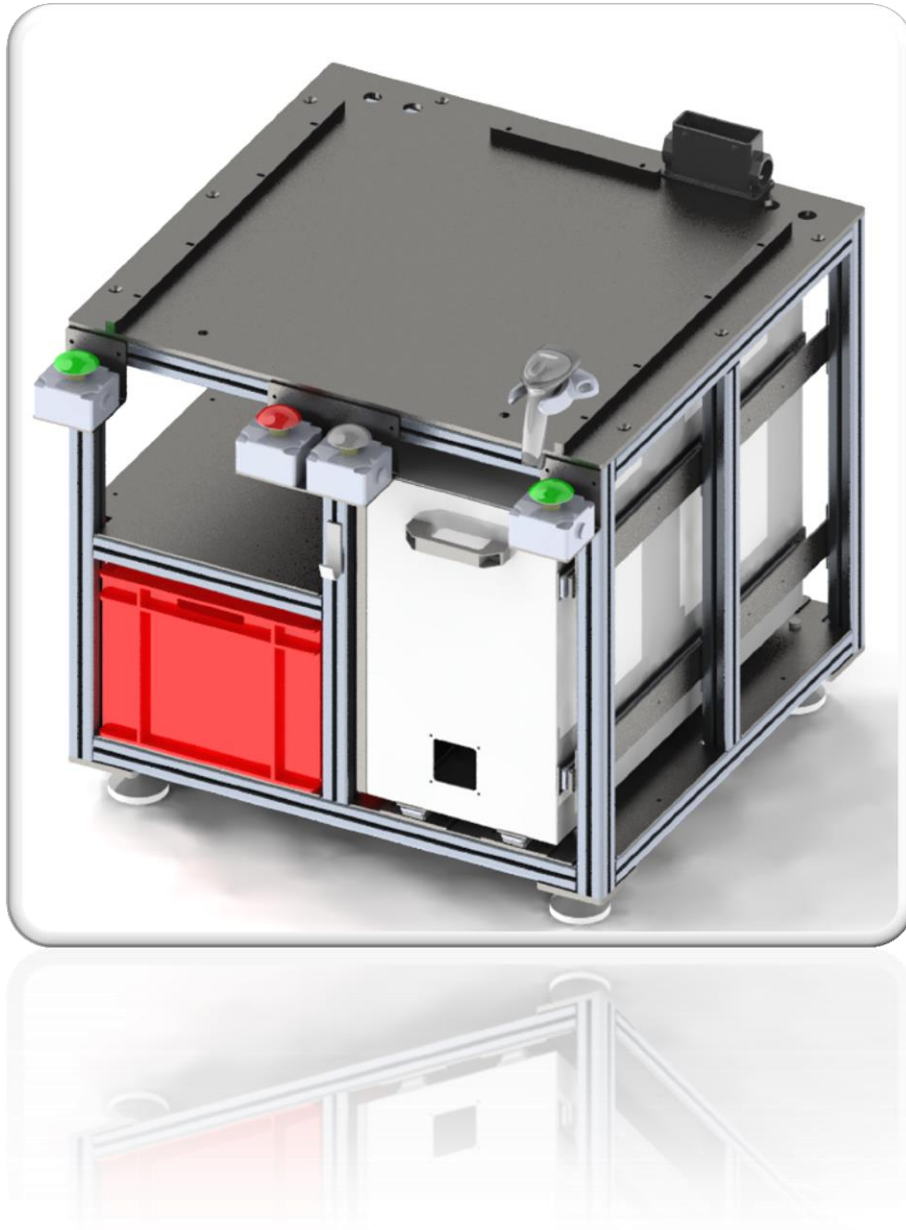

CLIENT NAME:

MARELLI MOTHERSON AUTOMOTIVE LIGHTING INDIA PRIVATE LIMITED
Ambethan 165/1

MACHINE MANUFACTURED BY:

INFINITY AUTOMATION SYSTEMS PVT LTD.
Unit 2:S. No. 80/2A, Mumbai Bangalore Bypass Highway
Near JSPM Institute,
Tathawade, Pune-411033.

Contents

1. Introduction.....	3
2. Safety regulations	4
2.1 Term definitions.....	4
2.2 Significance of the safety regulations	4
2.3 Information and symbols	4
2.3.1 Warning and safety notices	4
2.3.2 Notes and symbols in the manual.....	5
2.4 Application limitations.....	5
2.5 Do's and Don'ts for PCBA+Metal Plate +EMI Shield Assembly LH & RH Station	6
3. DESCRIPTION OF THE MACHINE.....	7
3.1 Layout of Station:	8
3.2 Description of Station:	8
3.3 Assembly Drawings:.....	9
3.4 Pneumatic Drawings:	11
3.5 Operation	13
3.5.1 Safety regulations for PCBA +Metal Plate +EMI Shield Assembly LH & RH Station.....	13
3.5.2 Steps for Operation Sequence	13
4. LIFTING, TRANSPORTATION & PACKAGING:	14
4.1 Lifting Arrangement:	14
4.2 Transportation:	14
4.3 Packaging:	14
5. HMI SCREENS	15
6. SPARE LIST.....	24
7. FLOW CHART.....	29
8. TROUBLESHOOT.....	30
9. ELECTRICAL DRAWING.....	31

1. INTRODUCTION

We are certain that you have made the right choice with our product and thank for your trust.

For your personal safety

Before carrying out any activities on or with the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station, please carefully read these operating instructions first, in particular the chapter on "Safety regulations".

Application area of these operating instructions

These operating instructions describe the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station and provide all information required for safe operation and maintenance of functionality. Please keep these operation instructions available at all times for all persons involved with the machine.

Questions or unclear points

Please contact immediately if you have any questions or unclear points:
Original language of assembly instructions is English.

© Copyright Infinity Automation Systems Pvt. Ltd.

2. SAFETY REGULATIONS

2.1 Term definitions

The following terms are used with regards to safety:

Personnel qualification

The work to be implemented with or on the product is described in the corresponding chapters in the operating instructions. The personnel qualifications listed in this chapter (in "Introduction") describes the minimum requirements for personnel regarding training and competences for implementing this work.

Personnel

Personnel are people who meet the personnel qualifications. Only such personnel are authorized to implement the work described in the applicable chapters.

User

Users are persons who cannot be identified as personnel but who still carry out activities with or on the product.

Operator

The operator is the owner of the product. This is irrespective of whether the product is:

- Operated as a stand-alone machine
- Operated as part of a system or
- Operated by a third party

Product life phases

The product life phases are the state or usage phases of the product. These range from leaving the assembly hall to disassembly and disposal, and are divided into correspondingly logical sections (chapters) in these operating instructions.

2.2 Significance of the safety regulations

These safety regulations contain all behavior regulations and generally applicable danger information. The safety of the user and the personnel can only be ensured when these safety regulations and the safety information listed in the individual chapters are strictly complied with and followed. The operator is responsible for the enforcement.

2.3 Information and symbols

2.3.1 Warning and safety notices

The warning and safety notices used in these operating instructions have the following significance:

	 CAUTION Indicates a hazard with low risk which, if not avoided, could result in minor or moderate injury.
--	--

	 WARNING Indicates a possible hazard with medium risk which, if not avoided, could result in death or serious injury.
--	---

	 DANGER Indicates an immediate hazard with high risk which, if not avoided, will result in death or serious injury.
--	---

NOTICE	
Indicates practical information and tips that permit the best use of machinery, system or equipment.	

CAUTION
To warn of material damage.

2.3.2 Notes and symbols in the manual.

The following information and symbols are used in manual.

Warning signs	Mandatory sign	Mandatory sign
Danger of hand injuries	Wear safety goggles	Wear gloves
		

2.4 Application limitations

The following technical operating instructions and ambient conditions must be complied with for the operation of the PCBA+Metal Plate +EMI Shield Assembly LH & RH Station.

Environmental conditions	
Working temperature	+10 ... +50 °C
Storage temperature	- 10 ... +70 °C
Relative humidity	Max. 90%, non-condensing
Mechanical power supply	
Operating pressure	2-6 bar
Mechanical	
Machine Weight	150kg Approx.
Electrical power supply	
Supply voltage	230 VAC
Input Power	8 kW
Full Load Current	16 Amp
Primary Fuse	32 Amp
Max. Short Circuit Interrupting Cap	14 Amp
Control Voltage	24 V


2.5 Do's and Don'ts for PCBA+Metal Plate +EMI Shield Assembly LH & RH Station

- Regular checking of penumatics parts.
- Regular checking of drag chain.
- Regular checking 2/2 valve.


3. DESCRIPTION OF THE MACHINE

PARTS ACCOMMODATE IN FIXTURES


Name	Photo	Quantity
------	-------	----------

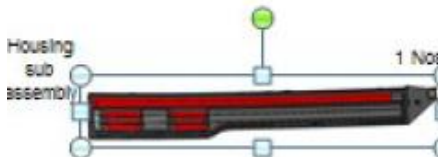


Name	Photo	Quantity
------	-------	----------

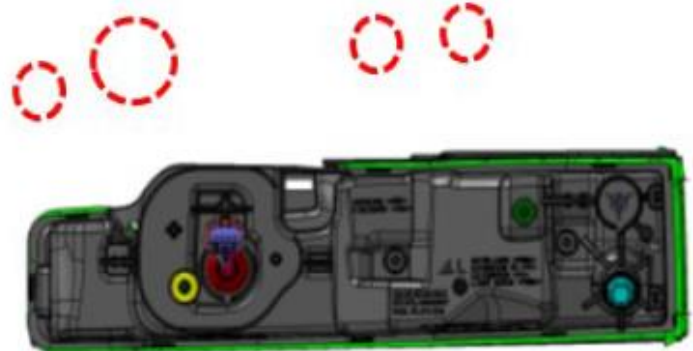


3.1 Layout of Station:

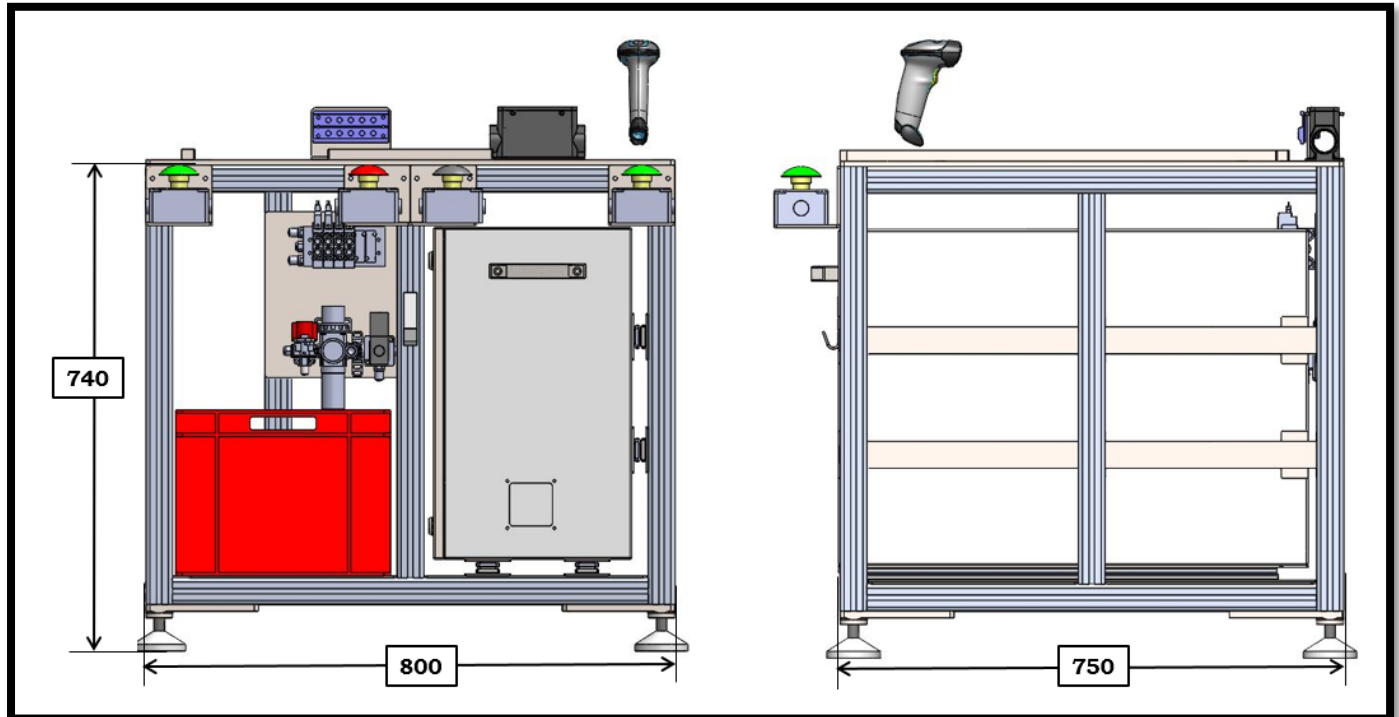


3.2 Description of Station:

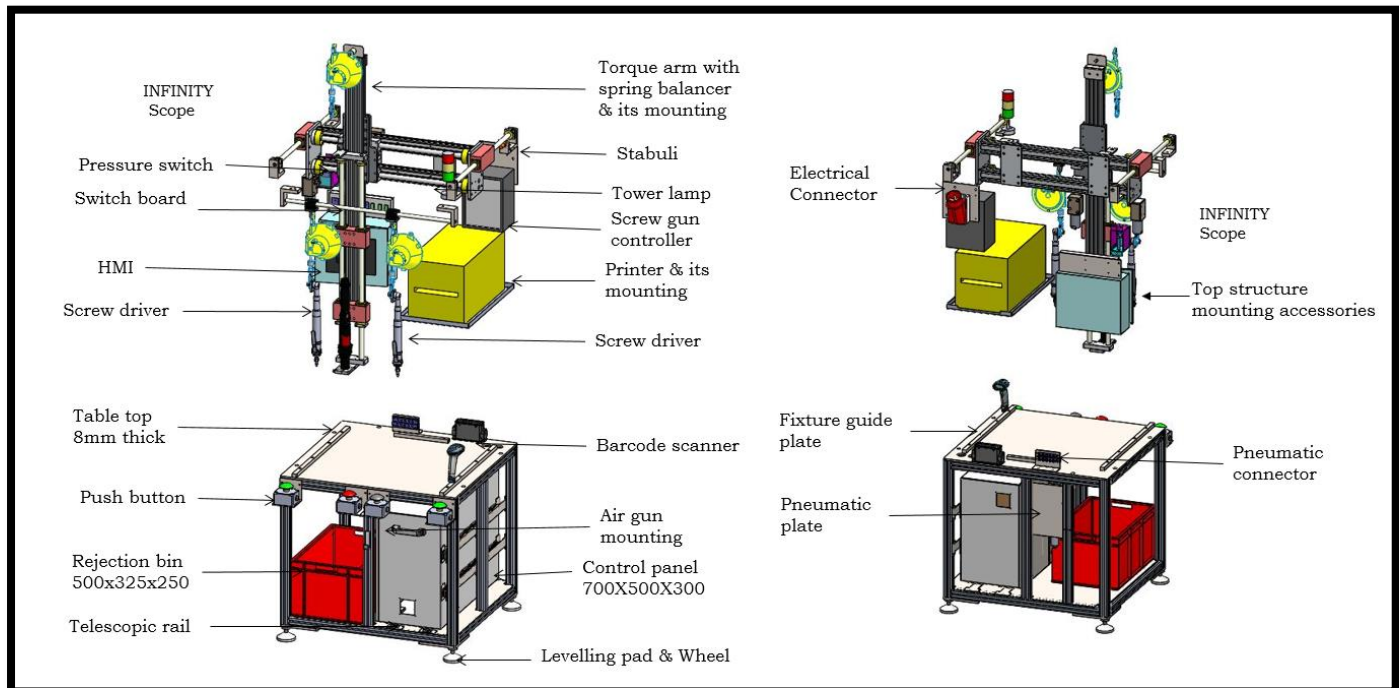

3.3 Assembly Drawings:

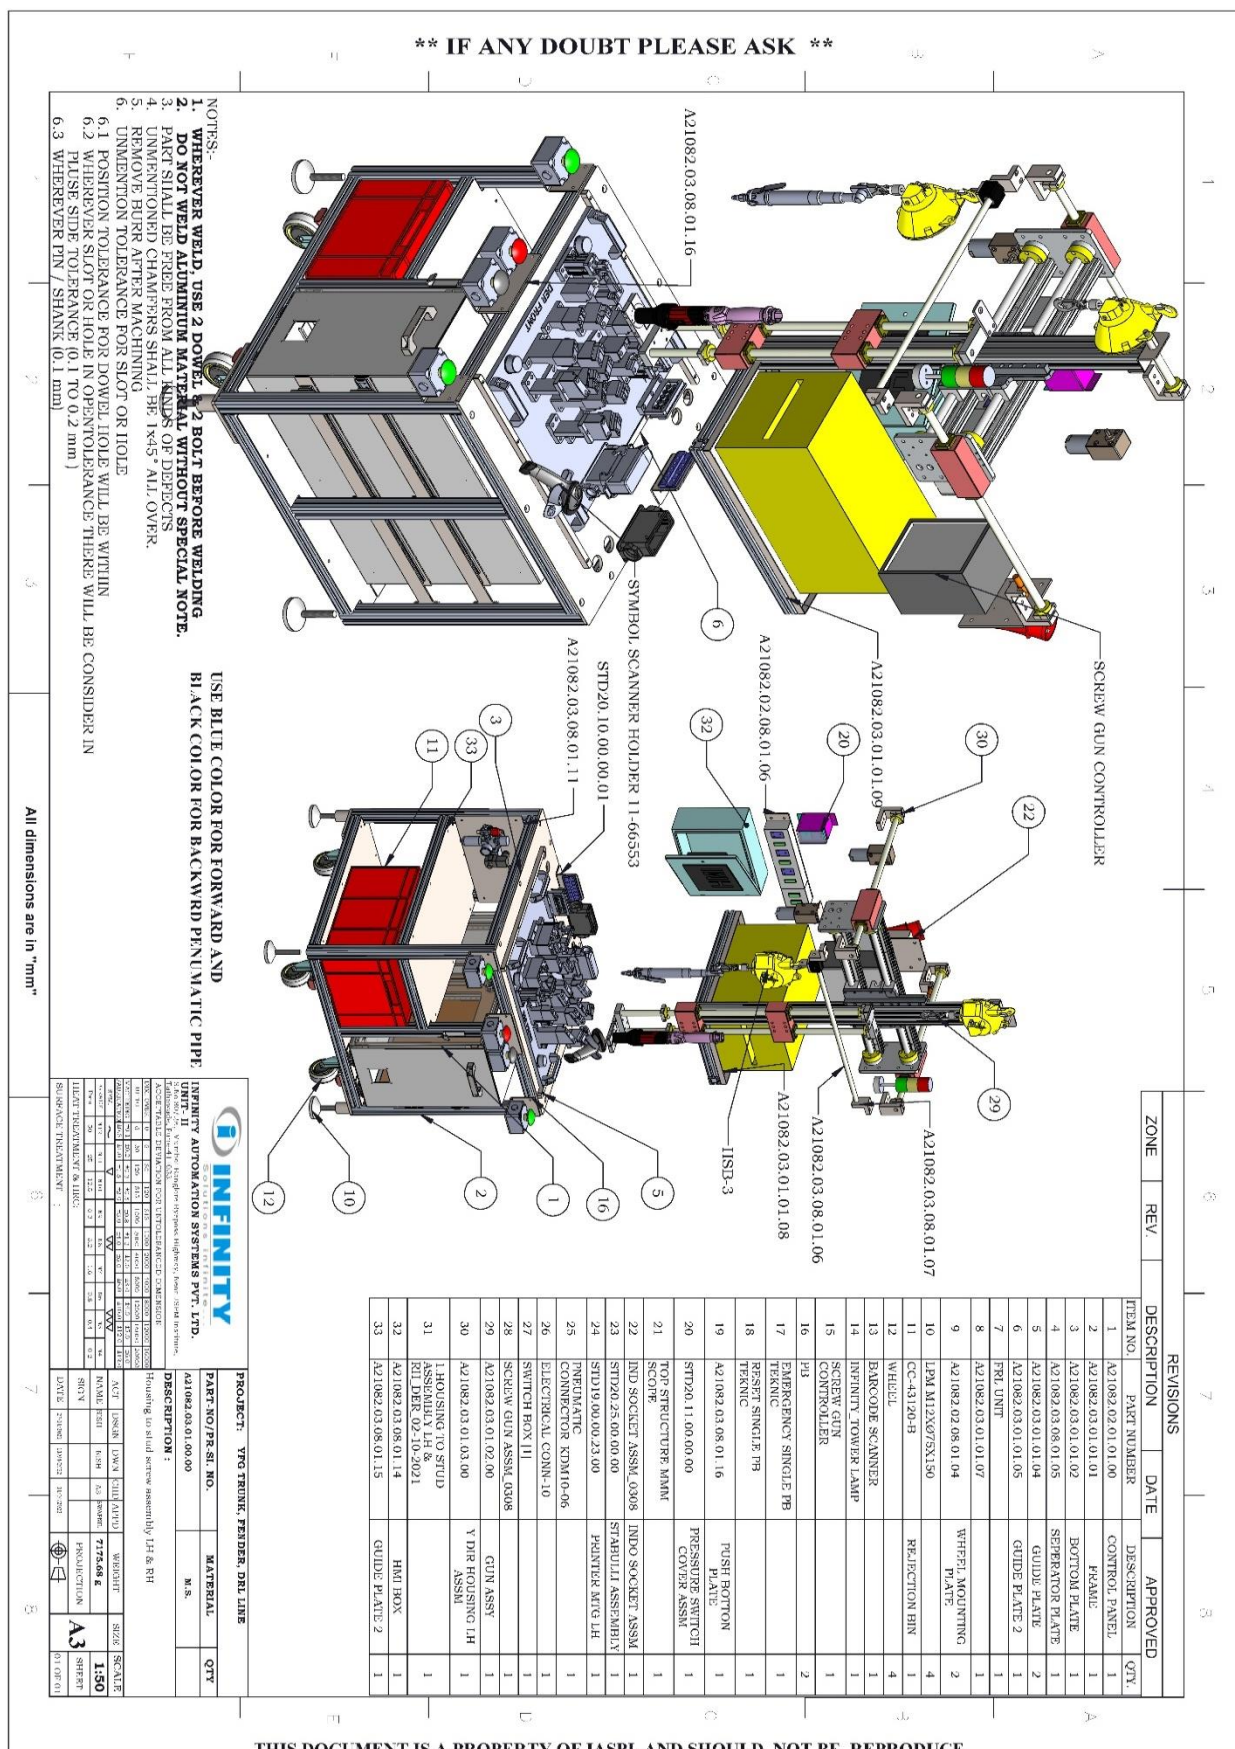


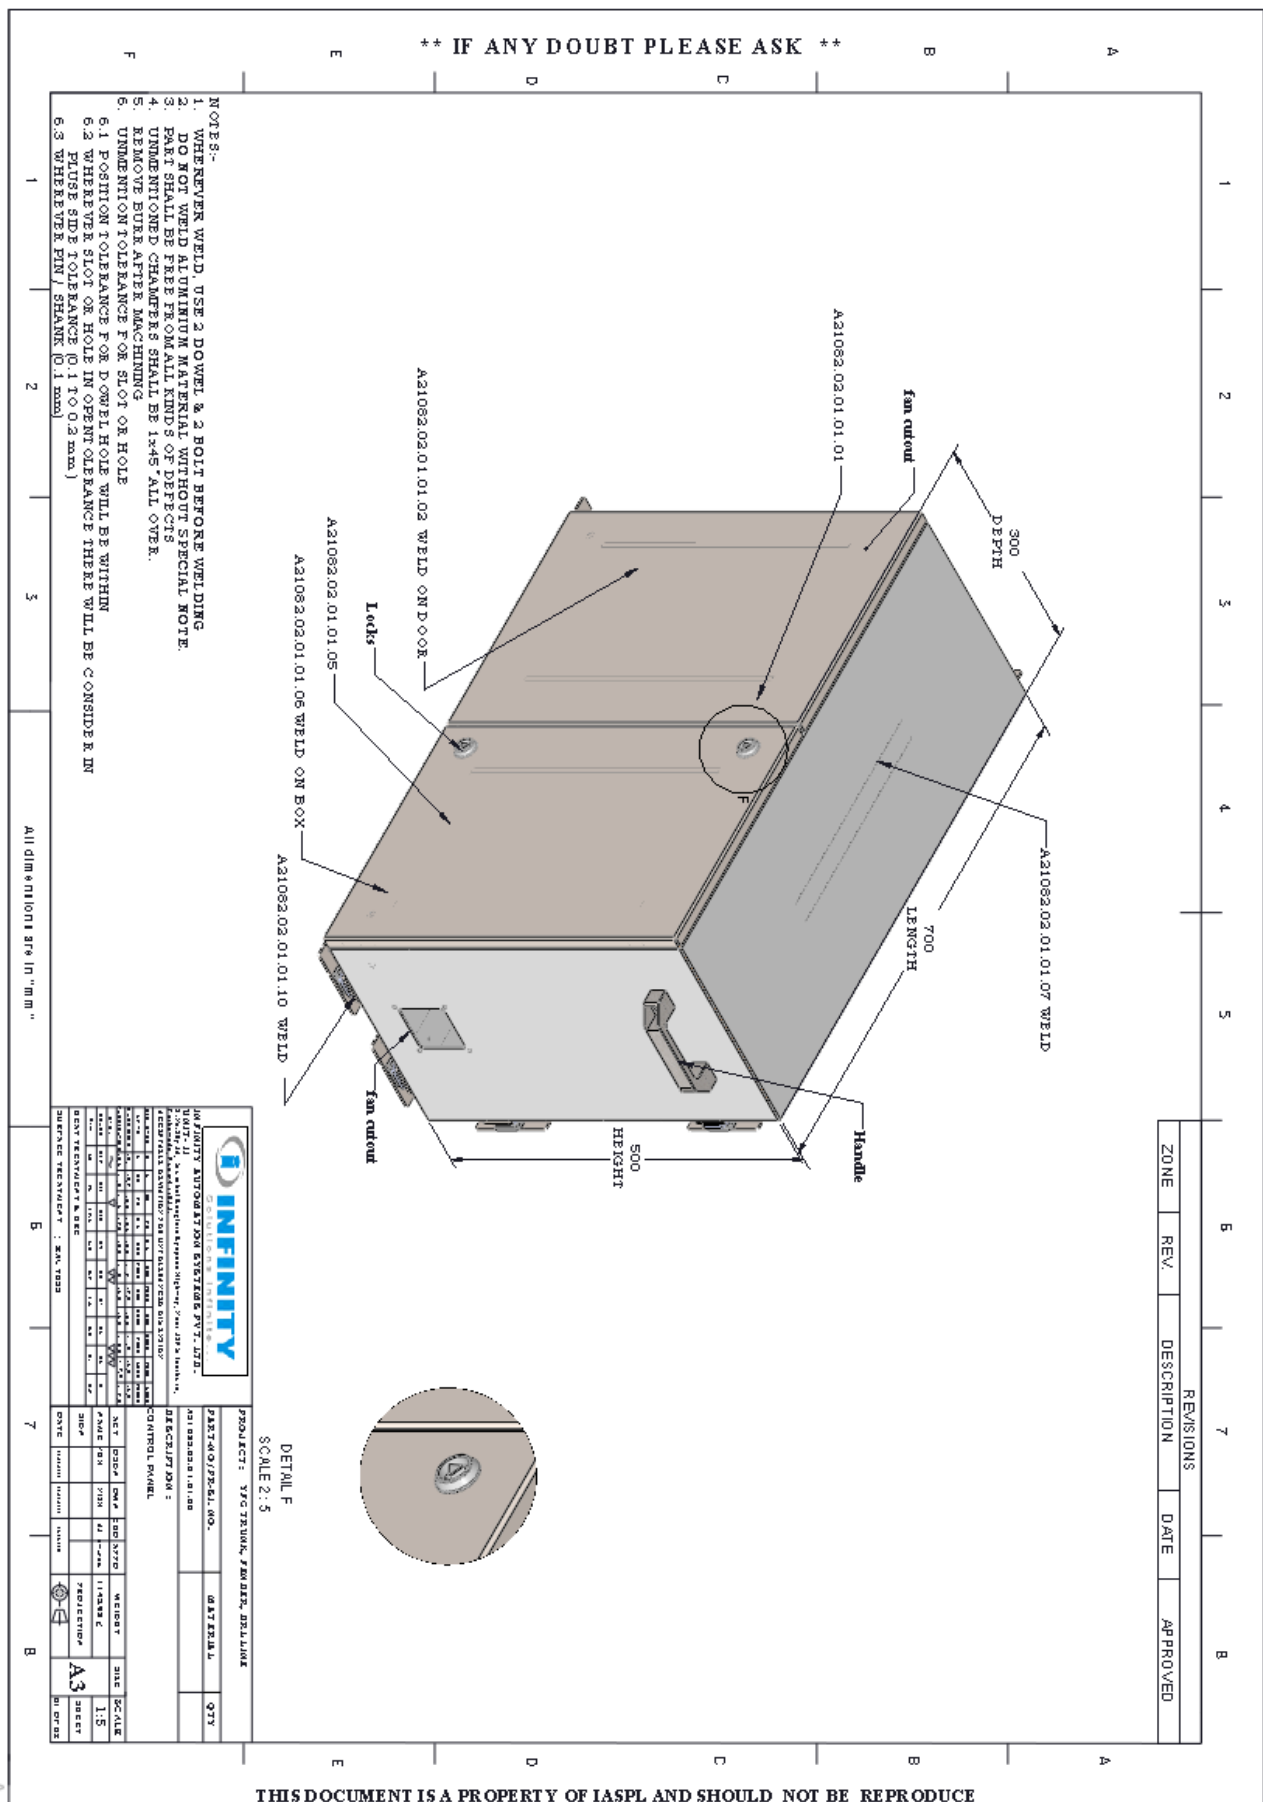

REVISIONS			
ZONE	REV.	DESCRIPTION	DATE

INFINITY AUTOMATIONS ENGINEERS PVT. LTD. UNIT - II, 1st Floor, K. J. Somaiya Institute of Engineering & Technology, V. V. Narvekar Building, Chhatrapati Shivaji Maharaj Vastu Sangrahalaya, Mumbai - 400 005.					
PROJECT: VTC TRUCK PARKING DELINE		DATE: 11/11/2023			
PART NO./REV. NO.		QTY			
A21062.02.01.01.01		1			
DESCRIPTION:					
Housing to Stud Pin Assembly					
NET WT (KG)		GROSS WT (KG)			
1.5		1.5			
NET DIM (mm)		GROSS DIM (mm)			
300 x 700 x 500		300 x 700 x 500			
MATERIAL		SHEET			
A3		A3			
DATE		BY			
11/11/2023		11/11/2023			

3.4 Pneumatic Drawings:

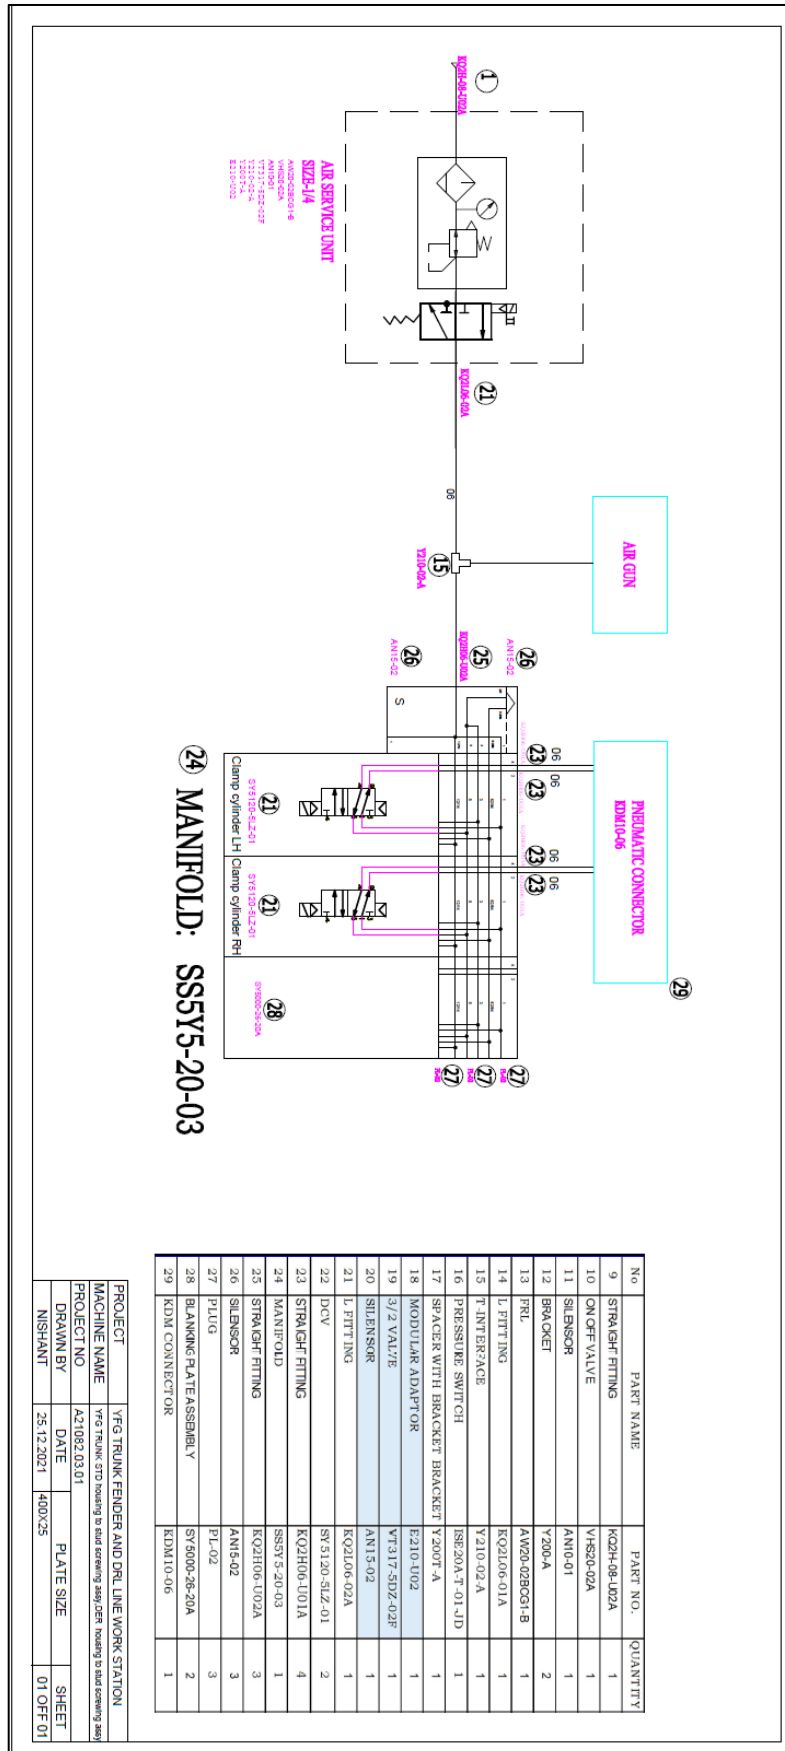



Screw Gun



Barcode scanner & Printer Mounting

3.5 Operation

3.5.1 Safety regulations for PCBA +Metal Plate +EMI Shield Assembly LH & RH Station

1. Any type of maintenance work done by authorized person.
2. Always turn off Machine switch while any type of maintenance work.

3.5.1.1 Personal Safety Equipment

All users are obliged to wear the following personal safety equipment for all work:

- Tightly fitting working clothes
- Safety goggles
- Gloves

3.5.2 Steps for Operation Sequence:

- Pick LH & RH Moulded housing from bin.
- Place LH & RH housing on the fixture.
- Pick stud gasket LH (2nos's) & RH (2no's).
- Paste on LH & RH housing.
- Pick M6 bush gasket LH (1no's) & RH (1no's).
- Paste on LH & RH housing.
- Push button cycle start (Part presence check then Part clamp & screwdriver enable).
- Pick stud LH (1no's) & RH (1no's).
- Do the screwing of LH & RH housing (Screwing ok then housing (declamp)).
- Unload LH & RH housing.

4. LIFTING, TRANSPORTATION & PACKAGING:

4.1 Lifting Arrangement:

For lifting of machine, there is fork lift.

4.2 Transportation:

Transfer the final test workstation and all of its separately packed associated components, in a closed vehicle or closed shipping container only. Each component of this machine should remain horizontal at all times during transport.

A fork truck should be used to load/offload the pallet holding this machine into/from vehicles.

4.3 Packaging:

Put final test workstation at an appropriate transport pallet that corresponds to the weight, and secure it against sliding. Protect each table from dirt and moisture by foil. Then house it completely.

Remove all components and subassemblies that are not permanently attached to the final test workstation, wrap them in plastic foil, and pack them in separate shipping containers.

Secure Component groups at the final test workstation against uncontrolled movement.

5. HMI SCREEN:

5.1. MAIN SCREEN:



FIG.1.MAIN SCREEN

➤ The software has menu buttons as given below:

1. Program
2. Auto
3. Manual
4. Input
5. Output
6. Configuration
7. Alarm History

5.2. PROGRAM SCREEN:

- Click on '**PROGRAM**' button, below screen appears.

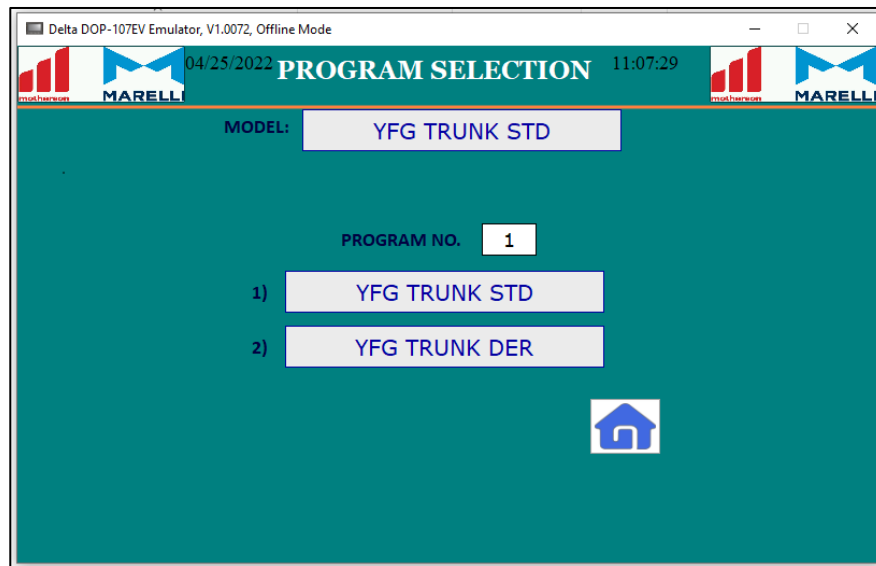


FIG.2. PROGRAM SCREEN

- Here for program selection enter one or two in Program No. field
- Description is displayed in the fields below Program No.

5.3. AUTO:

- Click on 'AUTO' button, below screen appears.



FIG.3.AUTO

- This screen display live cycle status.
- This screen shows cycle time in second.
- Here also we display sensors, if present, it indicates with Green color and if not, it indicates with Red color.
- It also indicates OK and NOK part count & screw count.

5.4. MANUAL:

- Click on 'MANUAL' button, below screen will appear.

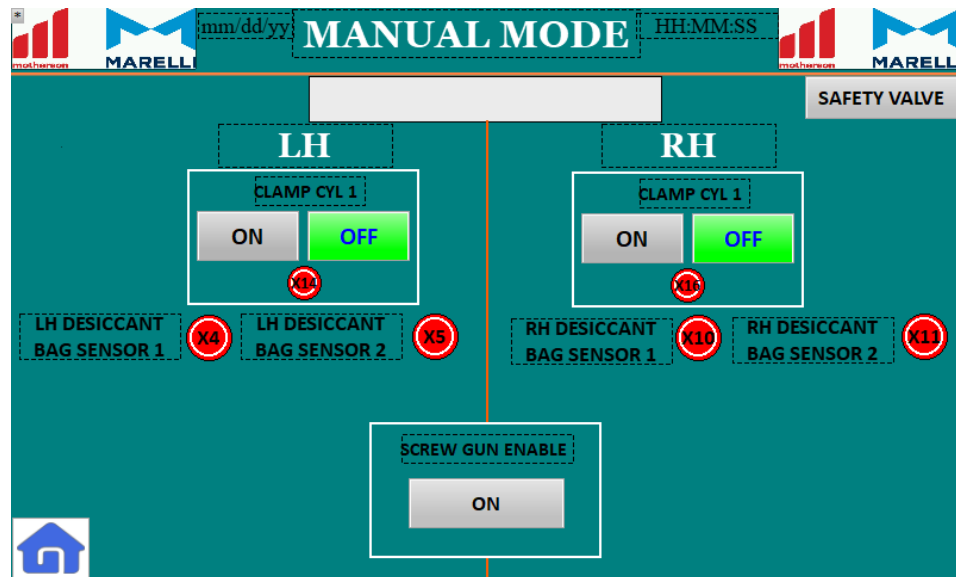


FIG.4.MANUAL OPERATION

- Here all the cylinders can be operated manually after switching the safety valve ON.
- Part Presence and Reed Switch feedback for indication.
- Screw gun can be enabled & disabled manually.
- Press **HOME** button to go back.

5.5. INPUT LIST:

- Click on 'INPUT' button, below screen will appear.

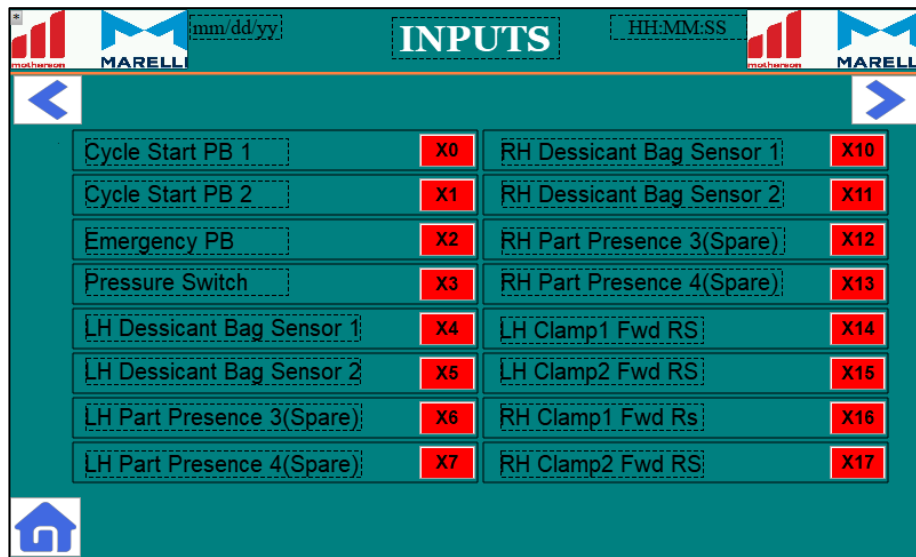


FIG.5.1.INPUT LIST

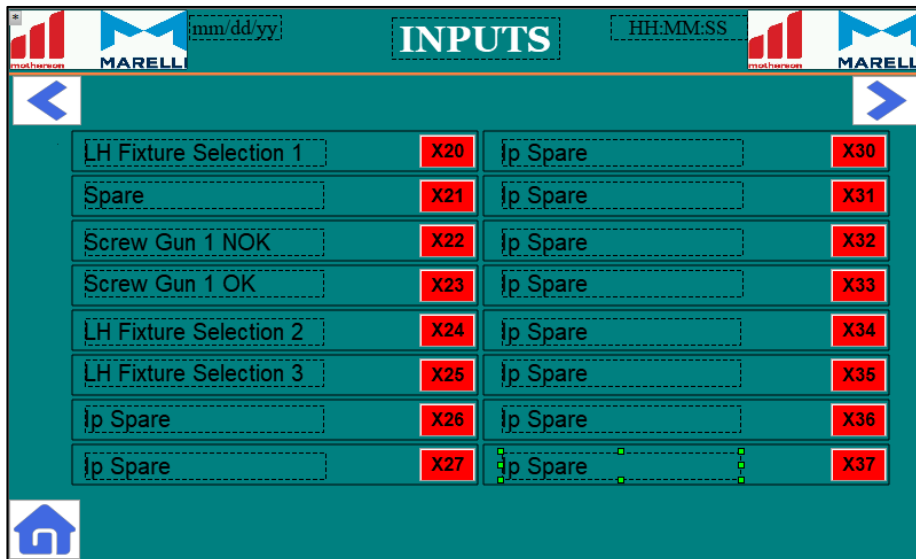


FIG.5.2.INPUT LIST

- For maintenance purpose all the inputs are displayed on the above screen.
- If input is ON, indicator turns GREEN. If it is OFF, indicator turns RED.
- Press forward arrow button for go to next window.
- Press backward arrow button for go back.
- Press HOME button to go on main screen.

5.6. OUTPUT LIST:

➤ Click on 'OUTPUT' button, below screen will appear.

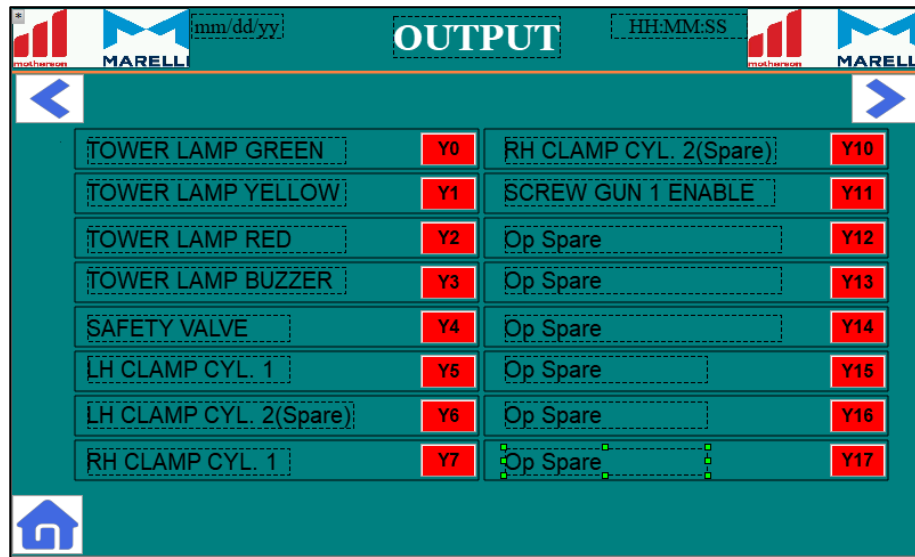


FIG.6.1. OUTPUT LIST

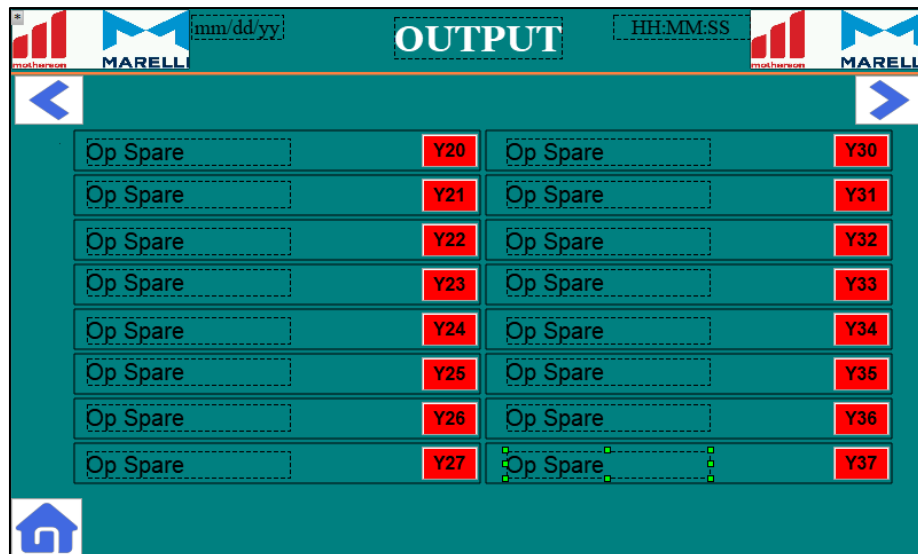


FIG.6.2. OUTPUT LIST

- For maintenance purpose all the outputs are displayed on the below screen.
- If output is ON then indicator turns GREEN if it is OFF then indicator turns RED.
- Press forward arrow button for go to next window.
- Press backward arrow button for go back.
- Press HOME button to go on main screen.

5.7. CONFIGURATION:

- Click on 'CONFIGURATION' button, below screen will appear.

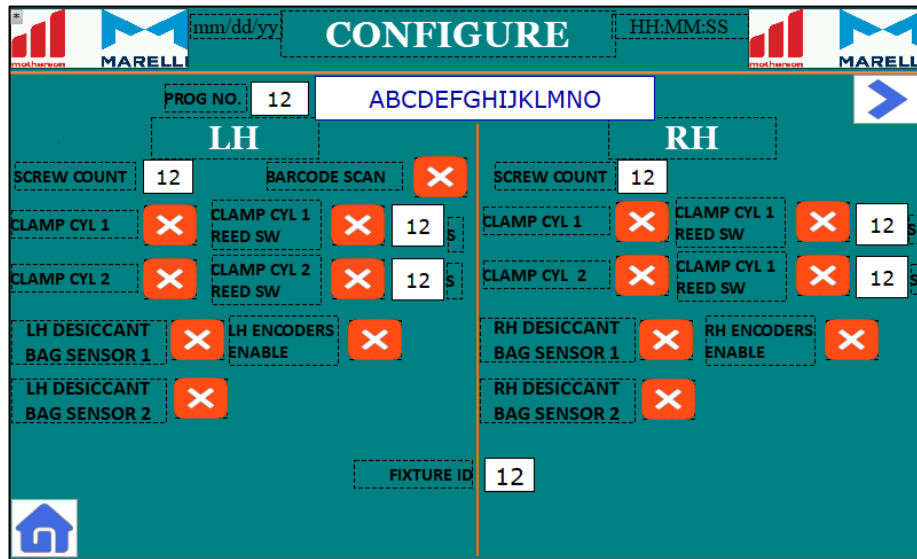


FIG.7.1. CONFIGURE

- To open this screen first we have to enter password.
- Here we can create a new program.
- Here we can enable or disable sensors and cylinder by pressing the button.
- Also we can enter screw count and REED SW delay timing.
- Press **HOME** button to go main menu.

- Press **NEXT** button on previous screen to enter to this screen.

The screenshot shows a 'CONFIGURE' screen with a teal background. At the top, there are status bars for signal strength, the MARELL logo, date (mm/dd/yy), time (HH:MM:SS), and another MARELL logo. Below the status bars is a navigation bar with a back arrow, a label 'ABCDEFGHIJKLMNO', and a home icon. The main area is divided into two columns: 'LH' and 'RH'. Each column has an 'ENCODER SETTING' section. Under 'ENCODER SETTING', there are two sub-sections: 'CURRENT VALUES' and 'SET VALUES'. Each sub-section has two rows: 'X-AXIS' and 'Y-AXIS'. All four input fields (X-AXIS and Y-AXIS for both LH and RH) contain the value '123.4'.

FIG.7.2. CONFIGURE

- In this screen we have to set the X & Y coordinates of the LH & RH part at which screwing operation is to be done.
- Press previous button to go on previous screen.
- Press HOME button to go to main screen.

5.8. ALARM SCREEN:

- Click on ‘**ALARM HISTORY**’ button, below screen will appear.

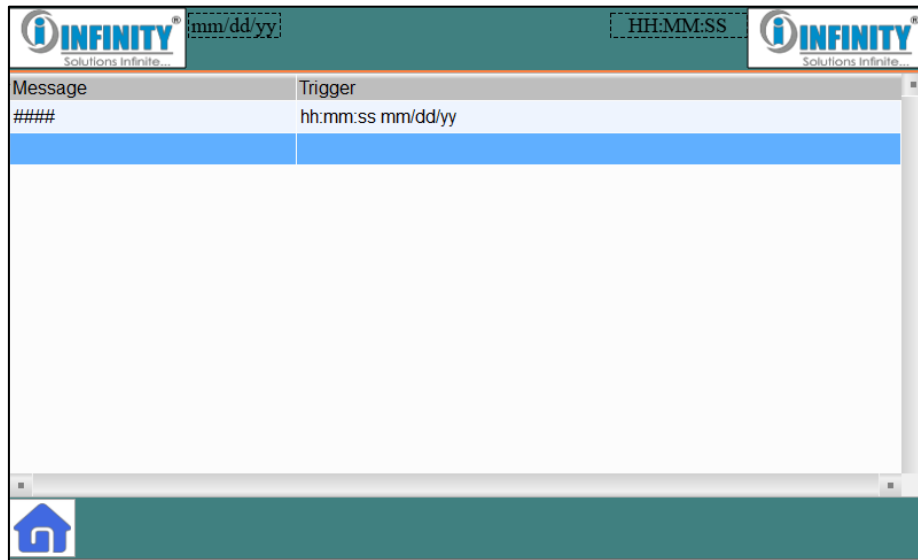


FIG.8. ALARM HISTORY

- Alarm history can be shown on the screen.

6. SPARE LIST:

• ELECTRICAL BOM:

Project No.: A21082				
NO.	Part Number	Name/Description	Qty	Make
1	DOP-107EV	HMI.HMI 7" In build Ethernet	1	DELTA
2	FX5U-64MT/ESS	PLC.CPU 32 I/P(Sink/Source), 32 O/P Transistor(Source), 100 to 240 VAC Power Supply	1	Mitsubishi
3	6GK5005-0BA00-1AB2	6GK5005-0BA00-1AB2.SCALANCE XB005 unmanaged Industrial Ethernet Switch for 10/100	1	SIEMENS
4	XVGB3S	Tower lamp RAG with Buzzer 24V DC	1	SCHNEIDER
5	ONE WAY SIZE 90X80X52 MM	PENDANT	4	TEKNIC
6	2AM2	PUSH BUTTON. METALLIC BLACK MUSHROOM TYPE PUSHBUTTON, 40MM, MOMENTARY (SPRING RETURN)	1	TEKNIC
7	2AMJ3	PUSH BUTTON. METALLIC GREEN MUSHROOM TYPE PUSHBUTTON, 60MM, MOMENTARY	2	TEKNIC
8	2AML4	PUSH BUTTON. METALLIC RED MUSHROOM TYPE PUSHBUTTON, 40MM, LATCHING (ENERGENCY PUSHBUTTON)	1	TEKNIC
9	S2	NC CONTACT METALLIC RED NORMALLY CLOSED CONTACT ELEMENTS	1	TEKNIC
10	S1	NO CONTACT METALLIC GREEN NORMALLY OPEN CONTACT ELEMENTS	3	TEKNIC
11	M8	QUICK RELEASE OPENING	1	LOCAL
12	555234	INDUSTRIAL PLUG.Straight plug P17 - IP44 - 200/250 V~ - 32 A - 2P+E	1	LEGRAND
13	555254	INDUSTRIAL SOCKET.Surface mounting	1	LEGRAND

		socket P17 - IP44 - 200/250 V~ - 32 A - 2P+E		
14	6755 50	SERVICE SOCKET MYLINC 6 AMP SOCKET 2/3 PIN	3	LEGRAND
15	6740 99	SERVICE SOCKET MYLINC SURFACE BOX - 9 MODULES	1	LEGRAND
16	6755 69	SERVICE SOCKET - MYLINC PLATES - 9 MODULES	1	LEGRAND
17	GOLDEN-30W-T8 LED(2ft) 6500K DAY-LIGHT	GOLDEN-30W-T8 LED(2ft) 6500K DAY-LIGHT	2	OREVA
18	0140 024 F011	Screw Terminal Female 24 Pin ICO CA	2	Indo Electrical
19	0192 024 BE20	Housing Surface Mounting 24 Pin ICO CA PG21	2	Indo Electrical
20	0192 024 BC30	Hood Side Entry 24 Pin ICO CA PG21	2	Indo Electrical
21	0140 024 M011	Screw Terminal Male 24 Pin ICO CA	2	Indo Electrical
22	CF-200	Machine Fan. 200 MM Cabin Fan Blue Colour	1	REMI
23	15X40MM(HXL) ENGRAVING	NAME PLATE. SQUARE ENGRAVING		LOCAL
24	ROUND Dia 22.5MM	NAME PLATE. ROUND ENGRAVING		LOCAL
25	857-304	Slim Relay. Relay module; Nominal input voltage: 24 VDC; 1 changeover contact; Limiting continuous current: 6 A; Yellow status indicator; Module width: 6 mm; 2,50 mm ² ; gray	28	WAGO
26	2946-859-410-ND	SHORT LINK.PUSH-IN TYPE JUMPER BAR; 10-WAY	3	WAGO
27	BCG05-L1KM01PP	Encoder. Absolute Wire draw encoders, Length 0 to 1.25 m	2	SICK
28	VCF1	MAINS ON/OFF.Mains ON/OFF 32A	1	SCHNEIDER
29	A9N2P32C	MCB.2 Pole 32 Amp	1	SCHNEIDER
30	A9N2P06C	MCB.2P,6AMP	1	SCHNEIDER
31	A9N2P16C	MCB.2 POLE MCB,16A	1	SCHNEIDER
32	XB7EV04MP	INDICATION LAMP.POWER ON	1	SCHNEIDER


		INDICATOR. RED LED 230VAC		
33	T5 LED	TUBELIGHT. 1 FT LED TUBE LIGHT	1	PHILIPS
34	3SE3-020-OA	LIMIT SWITCH. Siemens 1NO+1NC Contact Type Limit Switch 3SE3 020-0A	1	SIEMENS
35	3" Fan Filter Jigo	Fan Filter.3" Fan Filter	2	JIGO
36	3" Fan Grill	Fan Grill.3" Fan Grill	2	JIGO
37	3" Fan 230VAC	Fan.3" Fan 230VAC	2	JIGO
38	NHP-24VDC-5A	SAMPS.SMPS 24VDC;5A	1	NHP
39	6755 62	SERVICE SOCKET.MYLINC PLATES -2 MODULES	1	LEGRAND
40	673302	SERVICE SOCKET.MYLINC SURFACE BOX -2 MODULES	1	LEGRAND
41	6755 01	SERVICE SOCKET MYLINC 6 AMP SWITCH SP	2	LEGRAND
42	6755 50	SERVICE SOCKET MYLINC 6 AMP SOCKET 2/3 PIN	1	LEGRAND
43	6733 04	SURFACE BOX.MYLINC SURFACE BOX- 4 MODULES	1	LEGRAND
44	6755 64	MODULE PLATE.MYLINC 4 MODULE PLATE-WHITE	1	LEGRAND
45	675974	MCB Switch.Mylic Modular SP MCB 16A	2	Legrand

PNEUMATIC BOM:

Project No.: A21082				
No	PART NAME	PART NO.	QTY	MAKE
1	SPRING BALNCER	HSB-9	1	ENDO
2	SPRING BALNCER	HSB-3	1	
3	LINEAR BEARING	SC16UU		
4	LINEAR BEARING	SMK20W	8	SAMIK
5	RAIL	AHC-20-1000	2	HIWIN
6	LM BLOCK	AHC-20	4	HIWIN
7	DRAG CHAIN		1	IGUS
8	REJECTION BIN	FPO CRATE	1	NILKAMAL
9	STRAIGHT FITTING	KQ2H-08-U02A	1	SMC
10	ON OFF VALVE	VHS20-02A	1	SMC
11	SILENSOR	AN10-01	1	SMC
12	BRACKET	Y200-A	2	SMC
13	FRL	AW20-02BCG1-B	1	SMC
14	L FITTING	KQ2L06-01A	1	SMC
15	T-INTERFACE	Y210-02-A	1	SMC
16	PRESSURE SWITCH	ISE20A-T-01-JD	1	SMC
17	SPACER WITH BRACKET BRACKET	Y200T-A	1	SMC
18	MODULAR ADAPTOR	E210-U02	1	SMC
19	3/2 VALVE	VT317-5DZ-02F	1	SMC
20	SILENSOR	AN15-02	1	SMC
21	L FITTING	KQ2L06-02A	1	SMC
22	DCV	SY5120-5LZ-01	2	SMC
23	STRAIGHT FITTING	KQ2H06-U01A	4	SMC
24	MANIFOLD	SS5Y5-20-04	1	SMC
25	STRAIGHT FITTING	KQ2H06-U02A	3	SMC
26	SILENSOR	AN15-02	3	SMC

27	PLUG	PL-02	3	SMC
28	BLANKING PLATE ASSEMBLY	SY5000-26-20A	2	SMC
29	KDM CONNECTOR	KDM10-06	1	SMC


7. FLOW CHART:

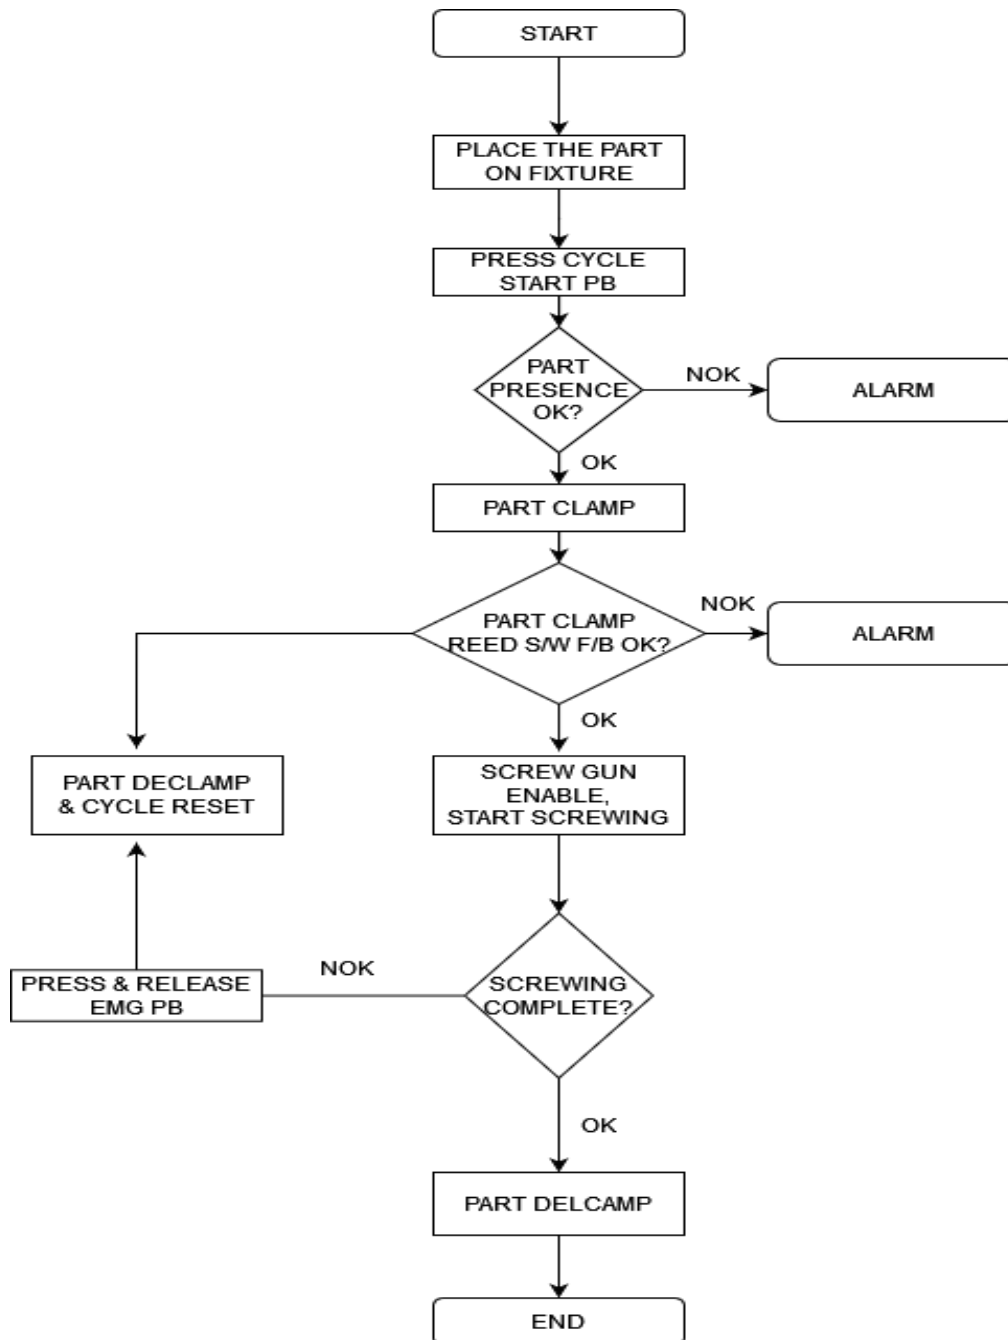


8. TROUBLESHOOT:

- **Emergency Button Pressed alarm:** Release the Emergency Button and Reset alarm from auto screen.
- **Air Pressure Alarm:** Check if air supply is in required range and reset the alarm from auto screen.
- **Clamp Reed Switch Alarm:** Reset alarm from auto screen. Check if the reed switch is glowing by operating the cylinder manually. If not, adjust the position of reed switch to sense the clamp position. Check if correct Reed Switch F/b is enabled in configuration.
- **Fixture selection is wrong alarm:** Check if the program selection is correct according to the model. Reset alarm from auto screen.
- **Part Presence Alarm:** this alarm occurs when a part is missing to start cycle. Reset alarm from auto screen. Check & place the part correctly, check if the sensor is sensing the part correctly. Check if the correct sensor is enabled in Configuration.
- **PCB Scan NOK:** This indicates that the scanned part is not correct. Reset alarm from auto screen. Scan the correct part. Check if correct part number is set in configuration.


9. ELECTRICAL DRAWING:

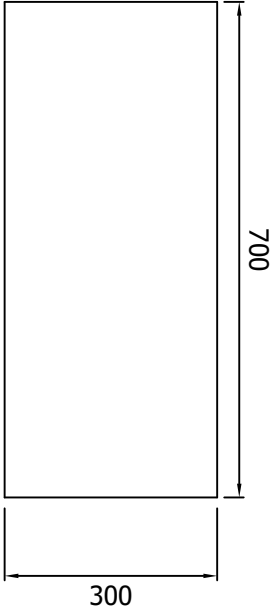


TOP VIEW

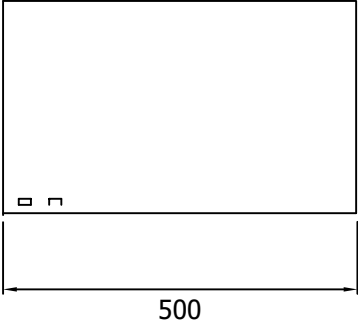


L.H.SIDE VIEW

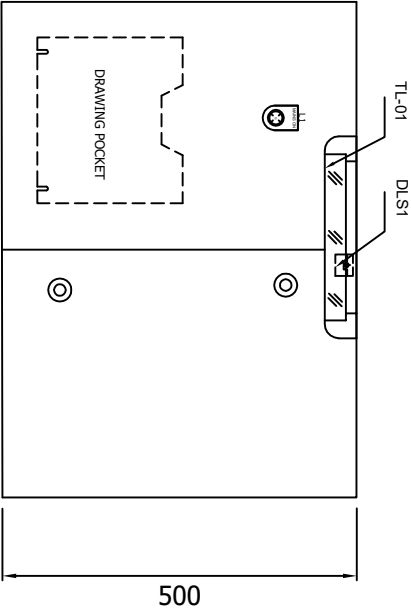

FRONT VIEW

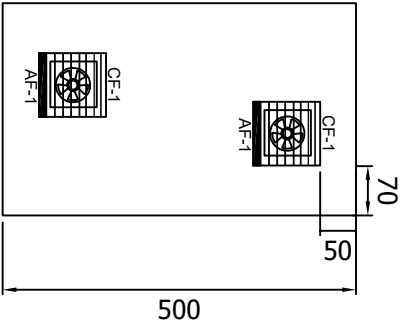

R.H.SIDE VIEW

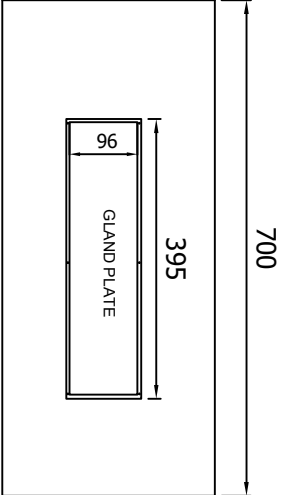


WIRE SIZE & COLOUR DETAILS :-

1. 230V/ AC	:- 2.5 I.5 SQ. MM RED
2. 0V/ AC	:- 2.5 I.5 SQ. MM BLACK
3. PE	:- 2.5 I.5 SQ. MM YELLOW/GREEN
4. 24V/ DC	:- 0.5 SQ. MM BROWN
5. 0V/ DC	:- 0.5 SQ. MM BLUE
6. DIGITAL INPUT	:- 0.5 SQ. MM GRAY
7. DIGITAL OUTPUT	:- 0.5 SQ. MM WHITE

CHANGES VIA CAD ONLY

REV/	DATE	CHANGES	DESIGN	CHECKED	APPROVED
00	11.04.2022		MB	DC	PW
CLIENT:-	MM				
PROJECT:-	AJ102				
INFINITY AUTOMATION SYSTEMS PVT.LTD.					
WORK: S NO.8/2A,MINHAT,RAJGURU HIGHWAY,NEAR					
SPIN ENGS. COLLEGE,THANAWARE, PUNE - 411033					
TITLE :-					
Housing to stud screw assembly LH & RH. (YVES Standard Trunk LH/RH)					
SCALE :- NTS					
QTY:- 01 NO.					
SHEET: 1 of 11					
DRG NO:- AJ102					
REV:- 00					

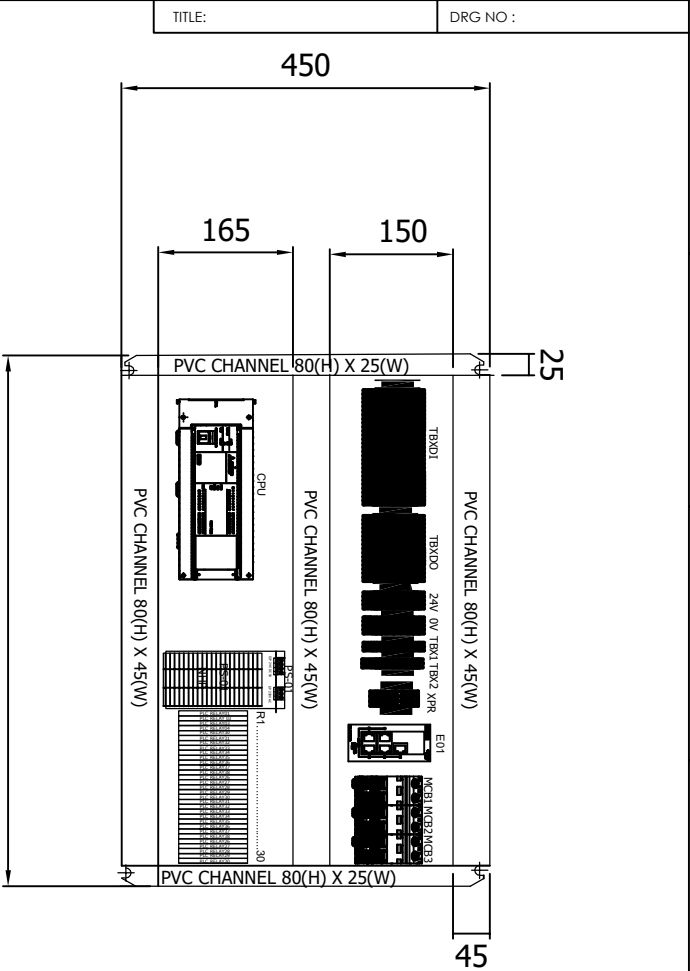

MOUNTING PLATE

PANEL BOX-the powder coated				MOUNTING PLATE			
SIZE:-500(H) x 700(W) x 30(D) MM				SIZE:-450(H) X 650(W)			
COMPONENT DETAILS :-				CABLE ENTRY: TOP			
SERIAL	TAG	DESCRIPTION	QTY	MAKE			
1	CPU	PLC-4400/55 (CPU 32 LUT/Sink/Source/32 Outputs/4 I/O)	01	WAGO			
2	RL-28	Sim Relay Relay module (Nominal input voltage 24 VDC)	30	WAGO			
3	PS-01	5VDC 24VDC/5A	01	WAGO			
4	E01	ETHERNET SWITCH	01	SIEMENS			
5	MCB 1	MCB 2 Pole 32 Amp	01	SCHNEIDER			
6	MCB 2	MCB 3Pole 32 Amp	01	SCHNEIDER			
7	MCB 3	MCB 2 Pole MCB 10A	03	WAGO			
8	XPR	WATER PROOFING SUPPLY TERMINALS (3PH+1N+PE)	08	WAGO			
9	TB1	FIELD SUPPLY	28	WAGO			
10	TB01	DIGITAL INPUT DIK TERMINALS	16	WAGO			
11	TB00	DIGITAL OUTPUT DIK TERMINALS	16	WAGO			
12	24V	24VDC FIELD DIK TERMINALS	04	WAGO			
13	0V	0VDC DISTRIBUTION DIK TERMINALS	04	WAGO			


00	11.04.2022	CHANGES	MB	DC	PW
REV.	DATE	CHANGES	DRAWN	CHECKED	APPROVED

CLIENT:-	INFINITI	INFINITI AUTOMATION SYSTEMS PVT.LTD.
PROJECT:-	AS082	WORK:- S NO.80/2A,MUMBAI BANGLORE HIGHWAY/ABR
		JSPP ENGS. COLLEGE,JATYAWADE,PUNE-411033

TITLE :-					 PROVIDED BY
Housing to stud screw assembly LH & RH. (YFG Standard Trunk LH/RH)					
SCALE :-	NTS	QTY:- 01 No.	SHEET: 2 of 11	DRG NO :- A21082	REV:- 00

WIRE SIZE & COLOUR DETAILS:-	
1. 230V AC	:- 2.5,1.5 SQ. MM RED
2. 0V AC	:- 2.5,1.5 SQ. MM BLACK
3. PE	:- 2.5,1.5 SQ. MM YELLOW/GREEN
4. 24V DC	:- 0.5 SQ. MM BROWN
5. 0V DC	:- 0.5 SQ. MM BLUE
6. DIGITAL INPUT	:- 0.5 SQ. MM GRAY
7. DIGITAL OUTPUT	:- 0.5 SQ. MM WHITE

CHANGES VIA CAD ONLY

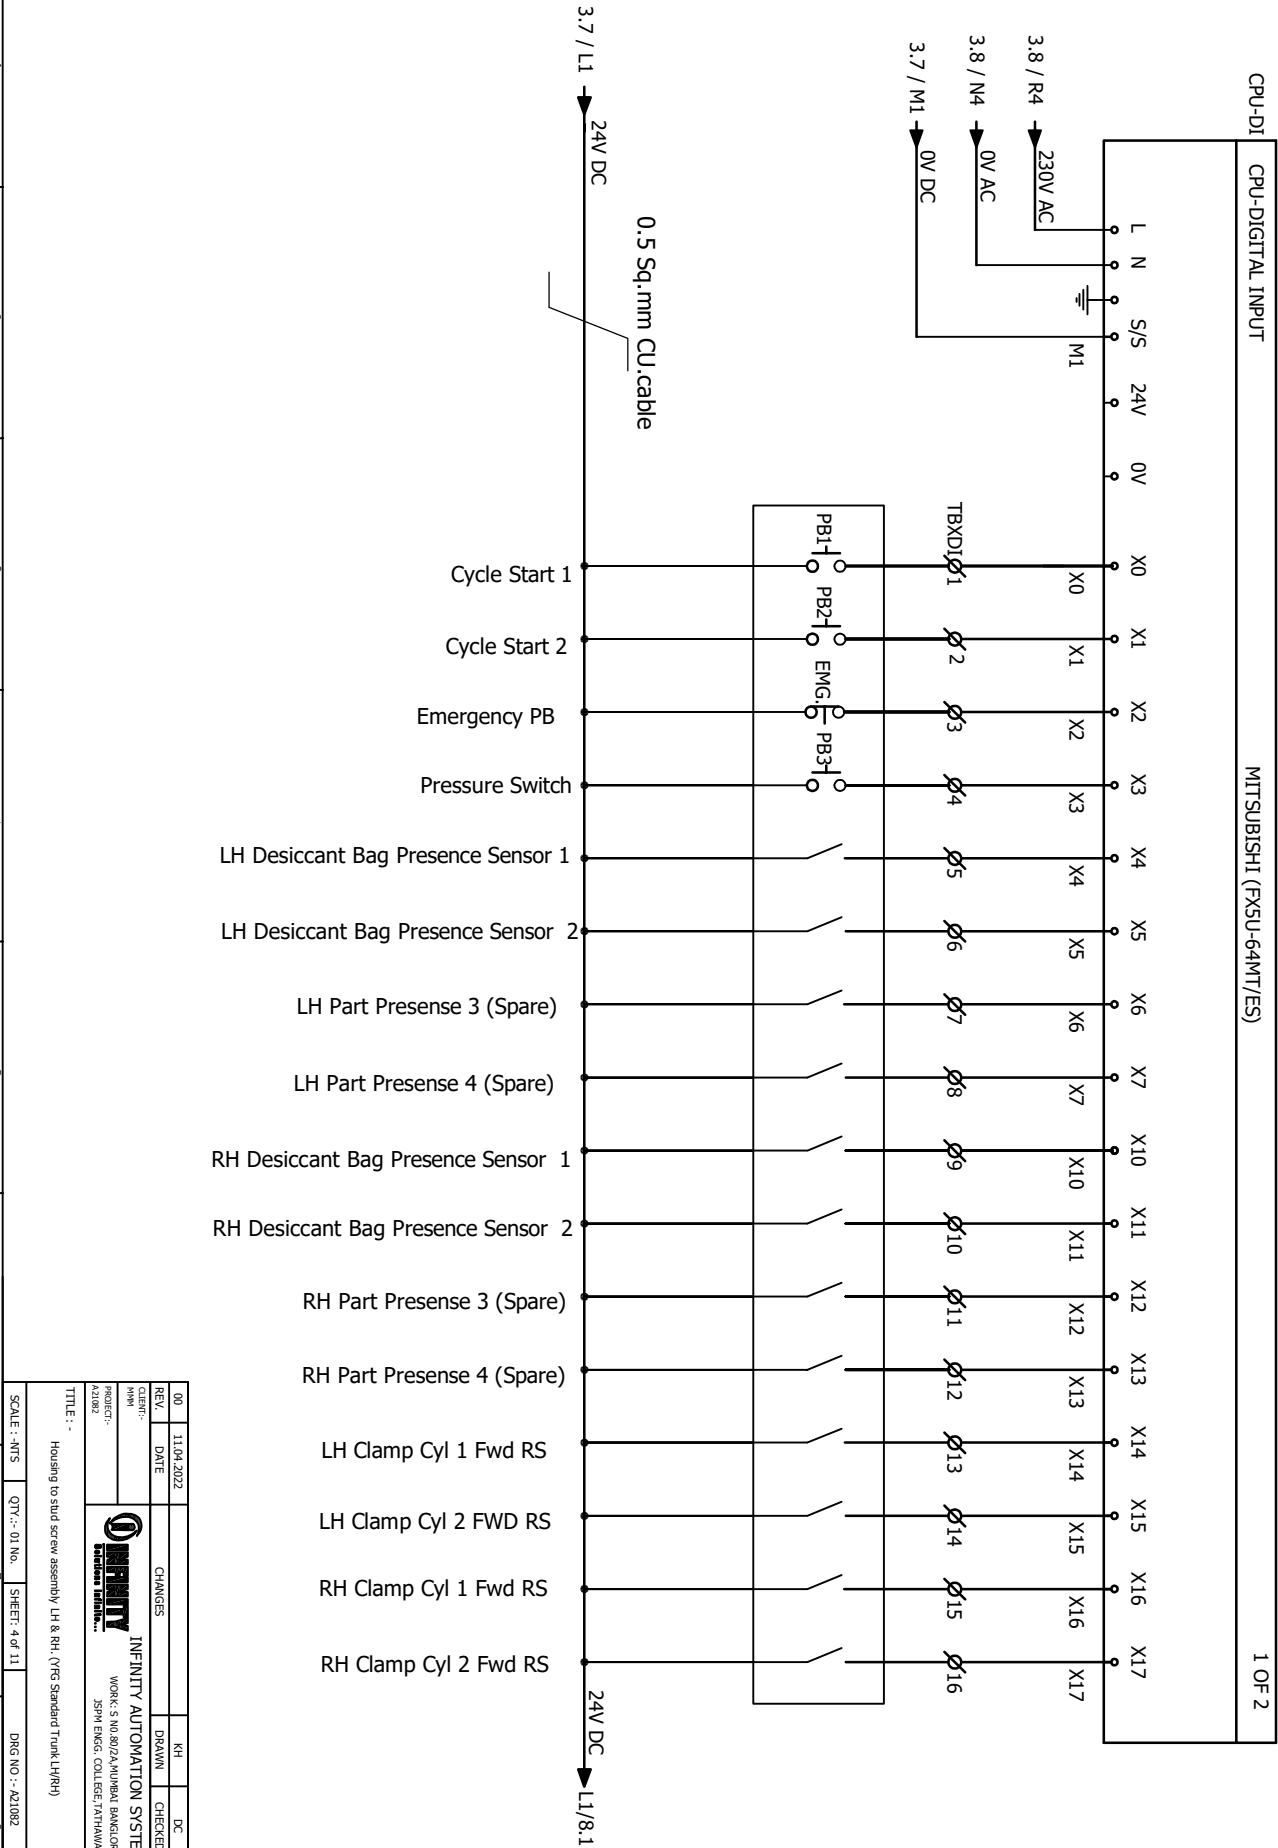

00	11.04.2022	CHANGES	KH	DC	PU
REV.	DATE	CHANGES	DRAWN	CHECKED	APPROVED
INFINITY AUTOMATION SYSTEMS PVT.LTD.					
WORK: S.NO.802A,MUMBAI BANGLORE HIGHWAY NEAR					
JSPM ENGG. COLLEGE,TATHWANDE, PUNE-411033					
PROJECT:-					
A21082					
TITLE :-					
Housing to stud screw assembly LH & RH. (YES Standard Trunk LH/RH)					
SCALE :- NTS					
QTY :- 01 No.					
SHEET: 4 of 11					
DRG NO :- A21082					
REV:- 00					

MITSUBISHI (FX5U-64MT/ES)

2 OF 2

M1

3.7 / M1 $\rightarrow$ 0V DC

7.8/L1



0.5 Sq.mm CU.cable

24V DC L1/9.1



REQ. NO	11.04.2022	CHANGES	KH	DC	PW
DATE					
PROJECT NAME	 INFINITY AUTOMOTOM SYSTEMS PVT. LTD.				
PROJECT ADDRESS	WORK : S NO.202A, MUMBAI BANGLORE HIGHWAY, NEAR JSPM ENGG. COLLEGE, TATVAHAWDE, PUNE - 411033				
TITLE :- Housing to stud screw assembly LH & RH. (YFS Standard Trunk L&RH)					
SCALE : A:1/25	QTY :- 01 No.	SHEET : 5 of 11	DWG NO :- 421082	REV :- 00	

SCREW GUN LOGIC

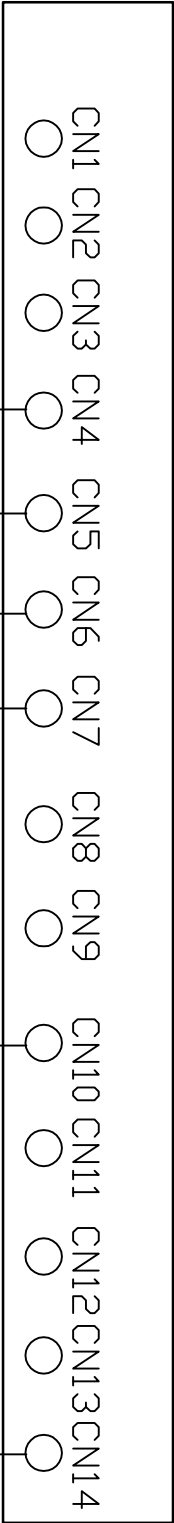



TO
PLC

X22

X23


00	11.04.2022	CHANGES			KH	DC	PW									
REV.	DATE	CHANGES	DRAWN	CHECKED	APPROVED											
CLINT:-																
PRJ:-																
PROJECT:-																
A21082																
TITLE :-																
Housing to stud screw assembly LH & RH. (YFG Standard Trunk LH/RH)																
INFINITY AUTOMATION SYSTEMS PVT.LTD.																
WORK:S NO.802A,MUMBAI BANGLORE HIGHWAY/NEAR																
JSPM ENGG. COLLEGE,TATHAWADE,PUNE -411033																
PROJECT																
SCALE :- NTS																
QTY:- 01 No.		SHEET: 6 of 11		DRG NO :- A21082		REV:- 00										

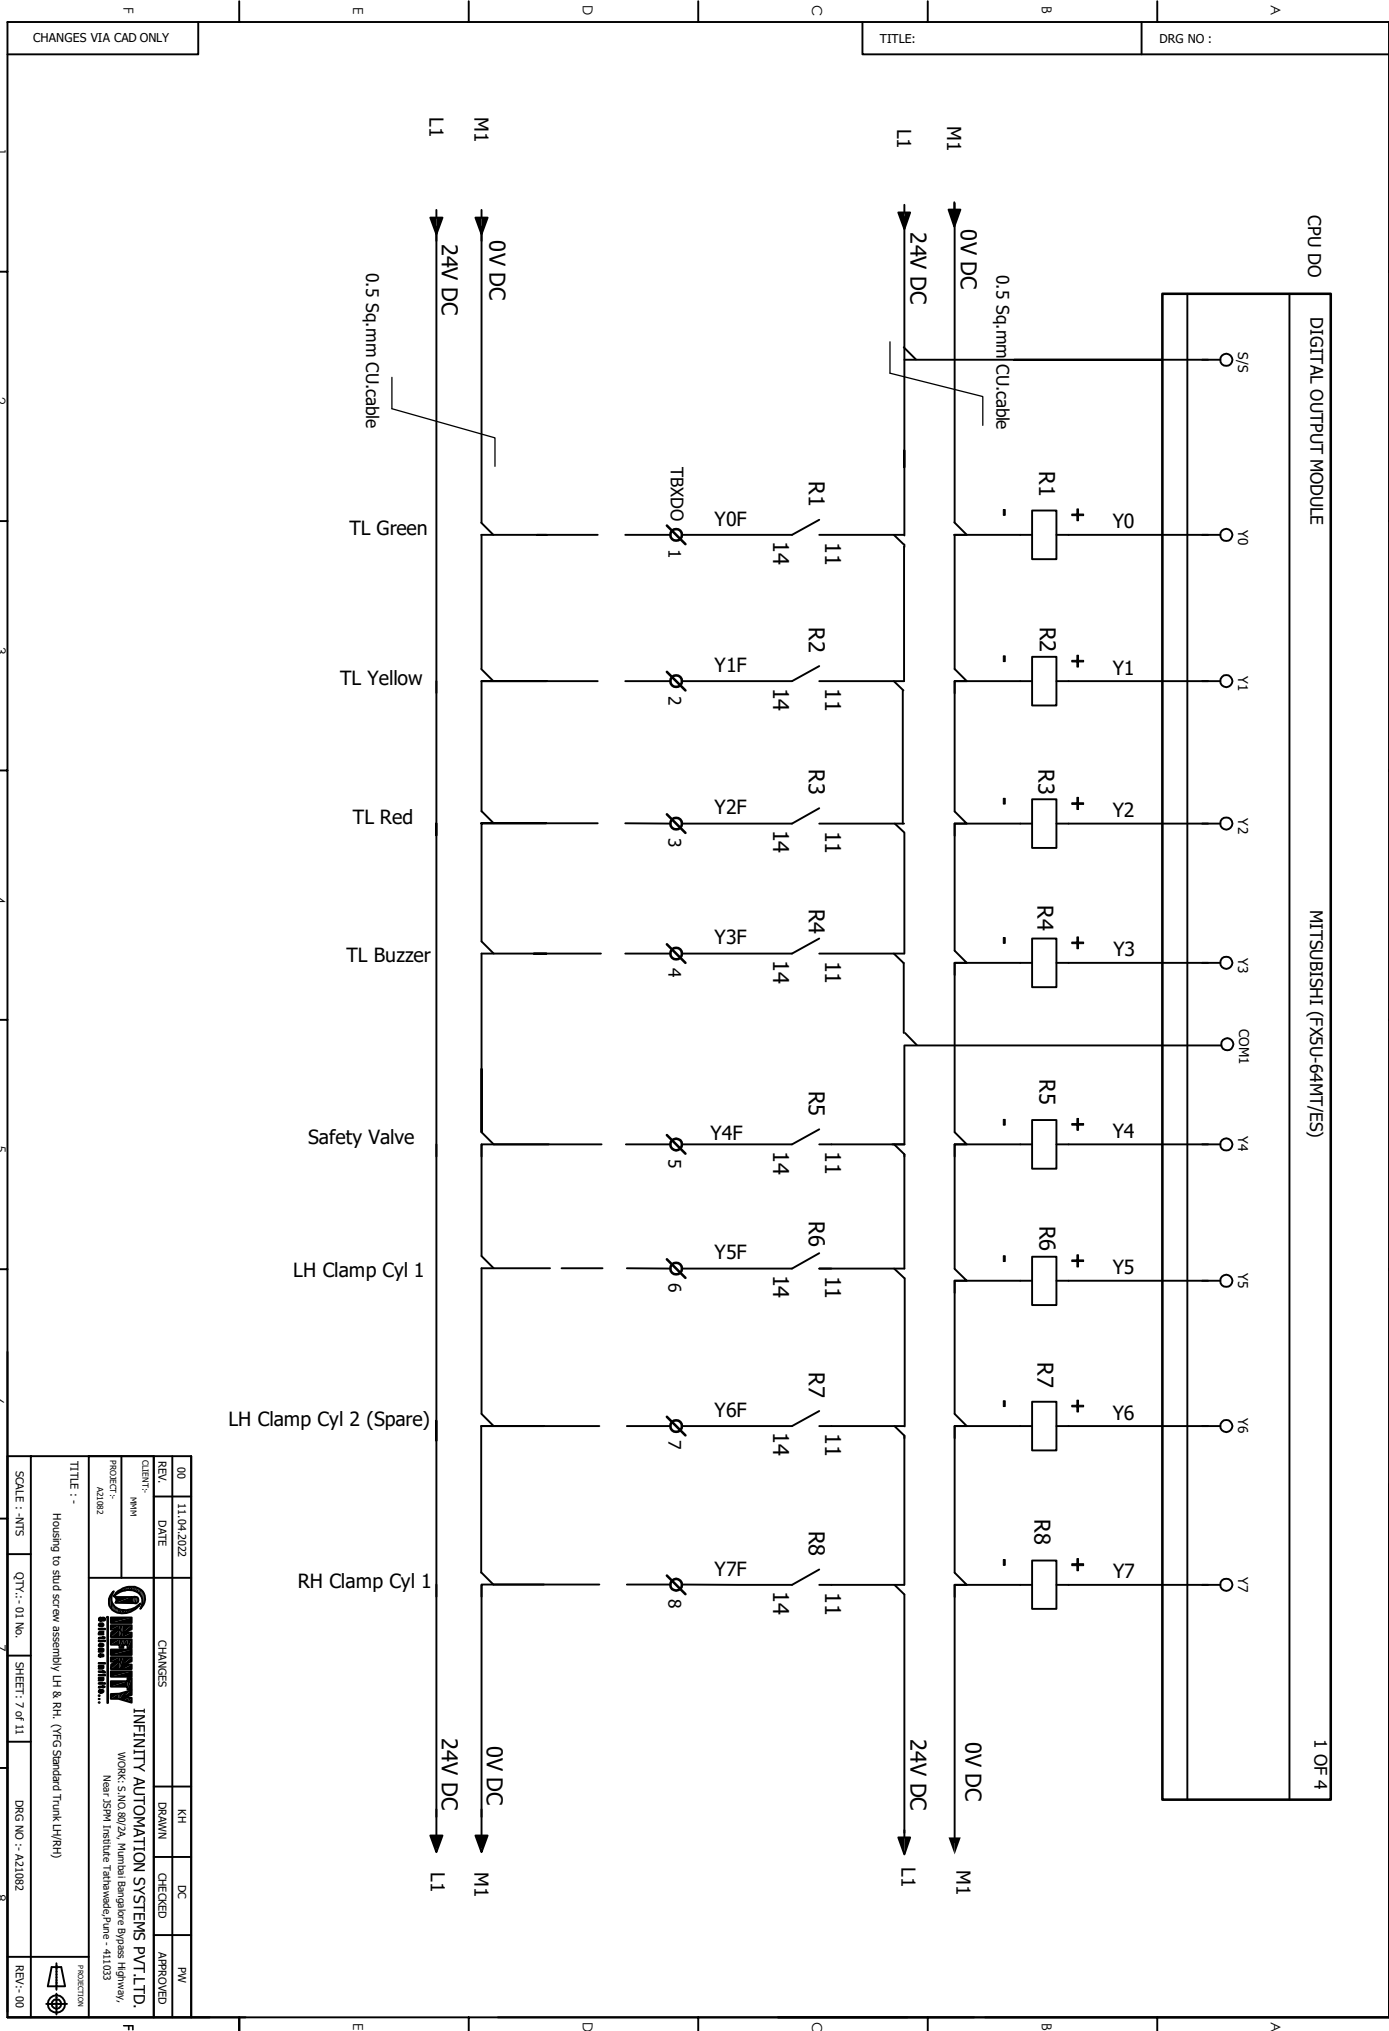

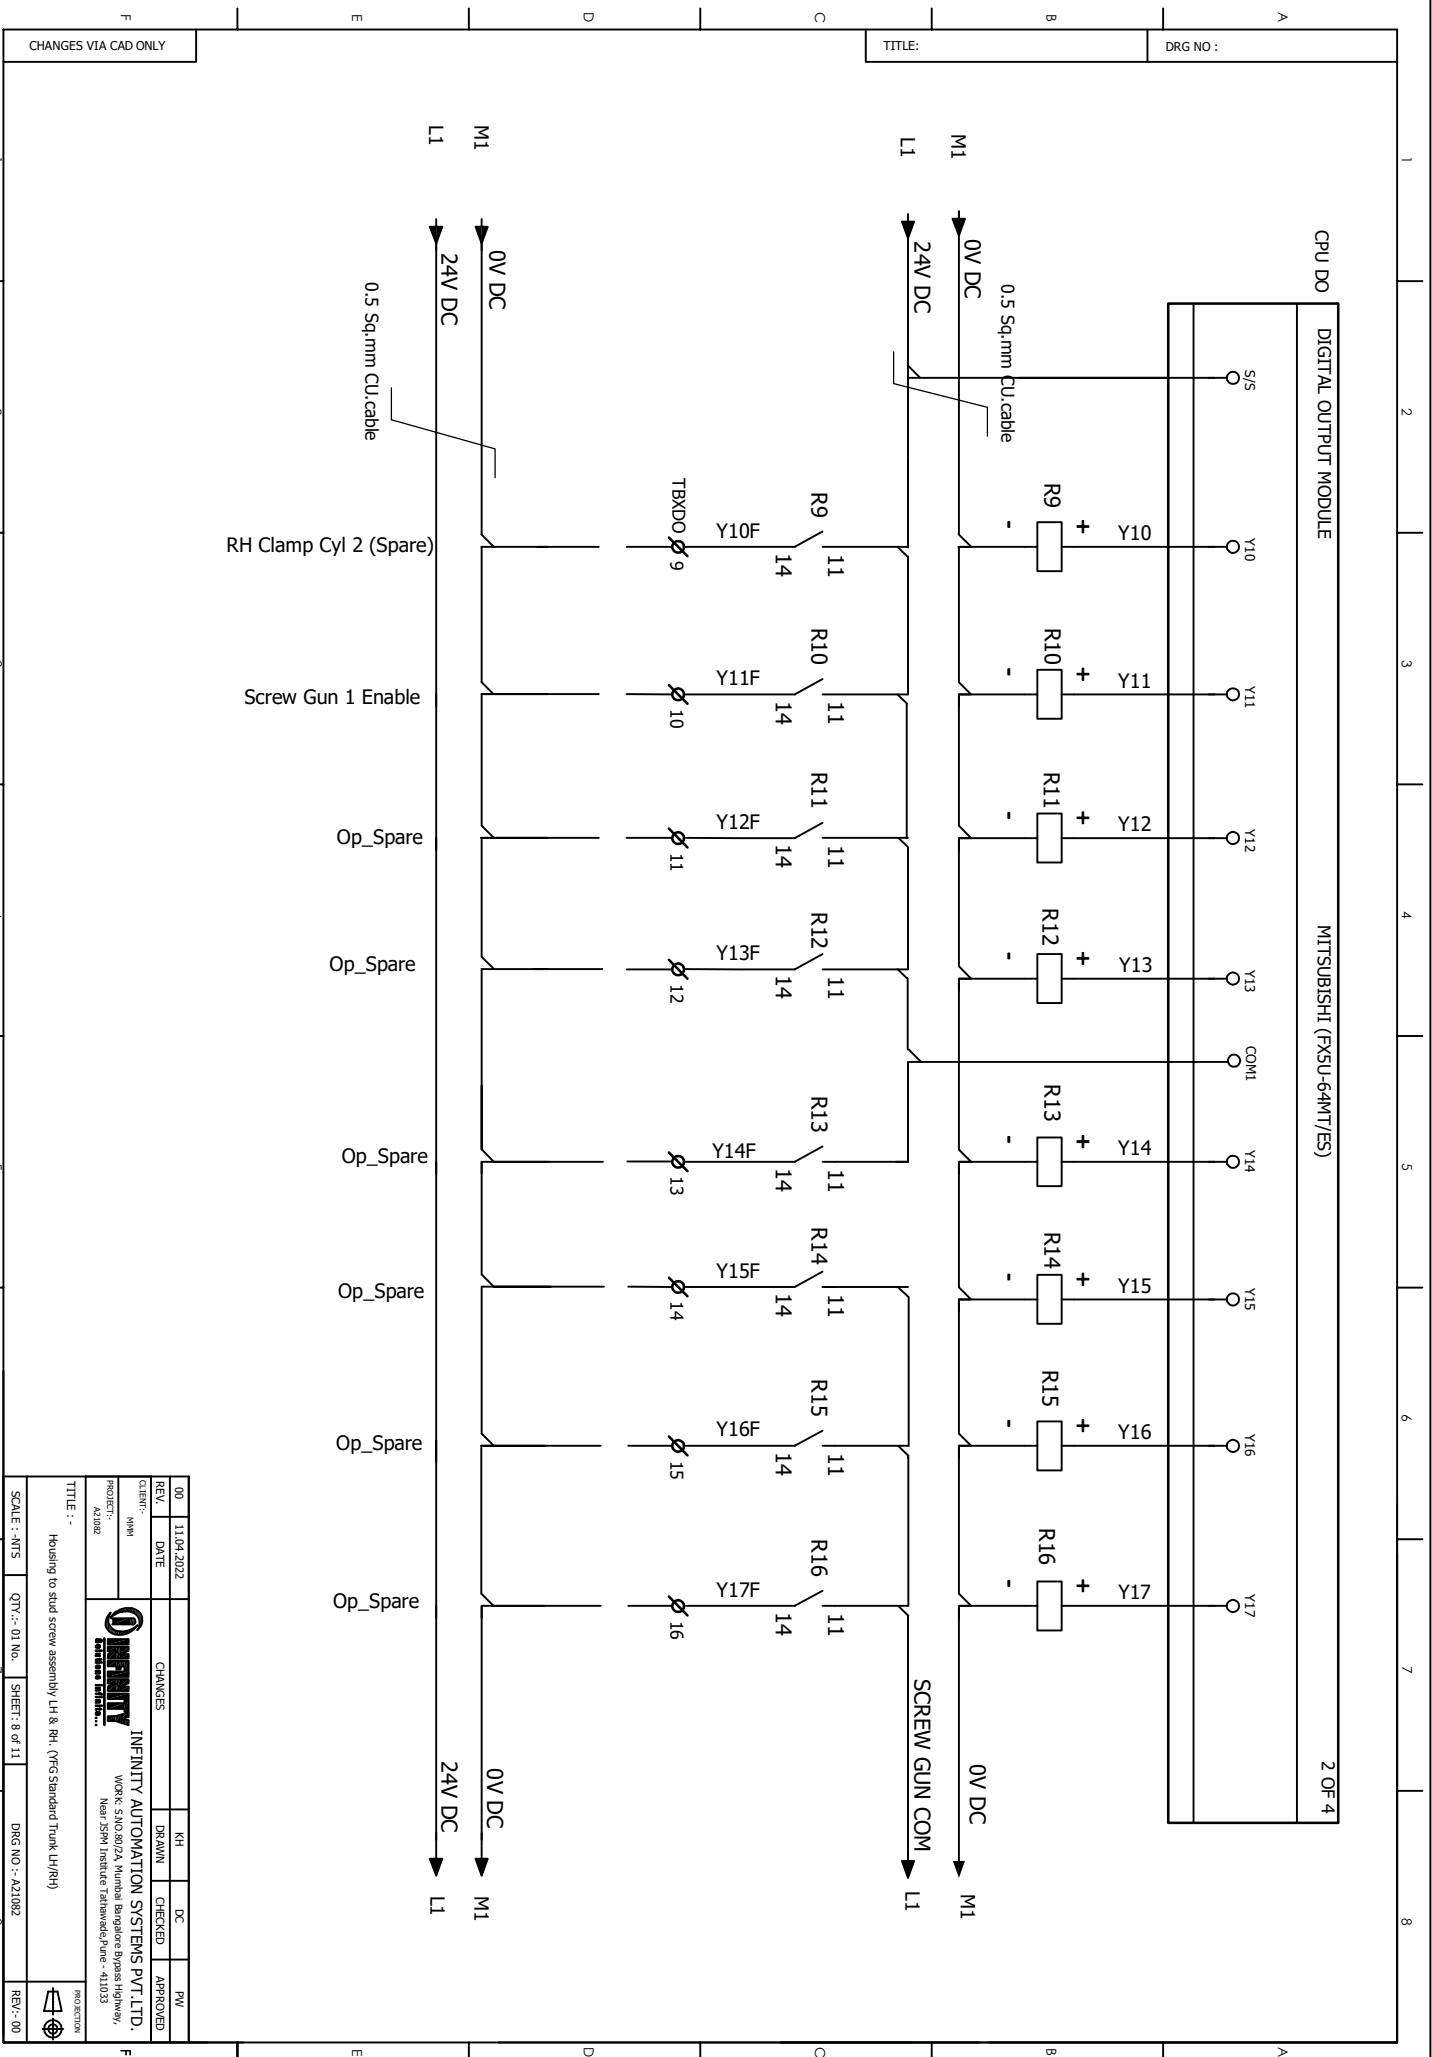

mitsubishi (FX5U-64MT/ES)

3 OF 4






00	11.04.2022						
REV.	DATE	CHANGES	HR	DC	APPROVED	PRV	
CLIENT:-	9944	 INFINITY PROJECTS PVT. LTD.					
PROJECT:-	A23882	WORKS : S.NO.80/2A, Mumbai Bangalore Bypass Highway, Near 5594 Institute Baramhoda Pune - 411003					
TITLE :-		 PROJECTION					
Housing to solid screw assembly LH & RH, (YFS Standard Trunk LH/RH)							
SCALE :-	NTS	QTY :-	01 No.	SHEET :-	9 of 11	DWG NO :-	A241082
						REV:-	00

DO1/1

DIGITAL OUTPUT MODULE

MITSUBISHI (FX5U-64MT/ES)

4 OF 4

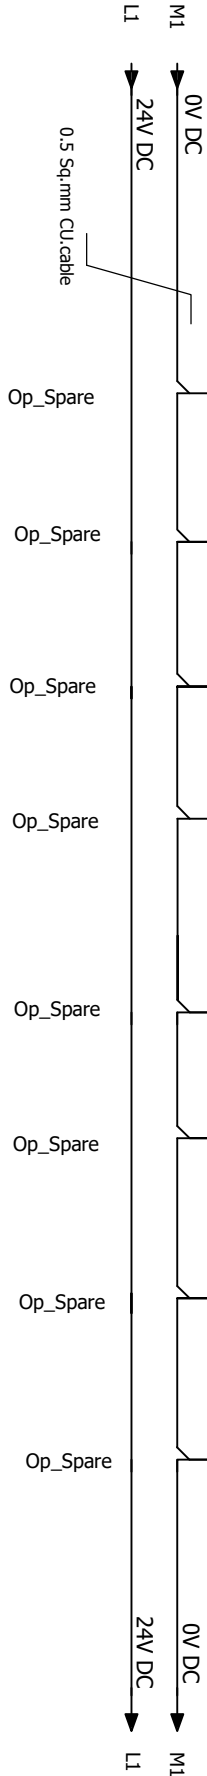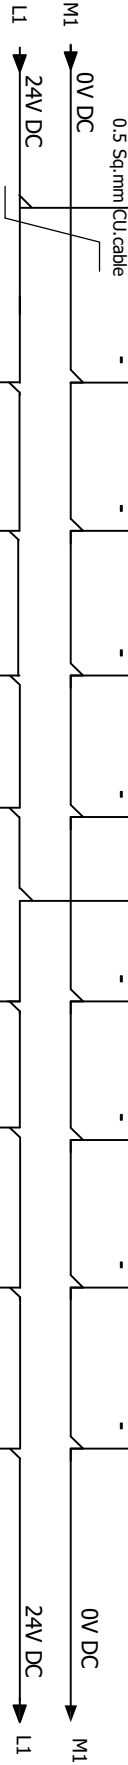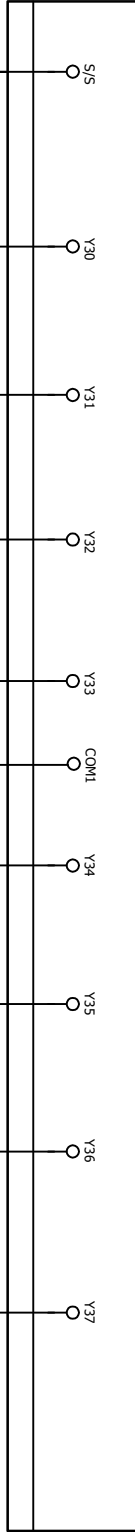

CHANGES VIA CAD ONLY

TITLE: DRG NO :

00	11.04.2022					
REV.	DATE	CHANGES	IN	DC	PW	
CLIENT:						
NAME						
PROJECT:						
A21002						
TITLE :- Housing to stud screw assembly LH & RH, (YFG Standard Truck LH/RH)						
SCALE :- MTS	QTY:- 01 No.	SHEET: 10 of 11	DRG NO :- A21002		REV:- 00	



INFINITY AUTOMATION SYSTEMS PVT. LTD.
WORK: S.NO.80/2A, Mumbai Bangalore Bypass Highway,
Near 75th Institute Tathawade,Pune - 411033



TERMINALS DETAILS- TERMINALS DETAILS - POWER/CONTROL TERMINALS

WIRE NO.	TERM. NO.	XPR
R	1	
Y	2	
B	3	
N	4	
PE	5	

TBXI	
WIRE NO.	TERM. NO.
R8	1
Y8	2
B8	3

TBX2	
WIRE NO.	TERM. NO.
R10	1
Y10	2

TBD1	
WIRE NO.	TERM. NO.
X1	1
X3	3
X5	5
X7	7
X11	9
X13	11
X15	13
X17	15
X21	17
X23	19
X25	21
X27	23
X31	25
X33	27
X35	29
X37	31

TERM. NO.		WIRE NO.
1	Y0F	
3	Y2F	
5	Y4F	
7	Y6F	
9	Y10F	
11	Y12F	
13	Y14F	
15	Y16F	
17	Y20F	
19	Y22F	
21	Y24F	
23	Y26F	
25	Y30F	
27	Y32F	
29	Y34F	
31	Y36F	

24V & 0V DC TBX			
TERM. NO.	1	3	5
WIRE NO.	L1	L1	L1
TERM. NO.	7	9	11
WIRE NO.	L1	L1	L1
TERM. NO.	13	15	17
WIRE NO.	L1	L1	L1
TERM. NO.	19	20	
WIRE NO.	L1		

NO	11.04.2022					
REV./	DATE	CHANGES	MM	DD	PP	
CLINT#			DRAWN	CHECKED	APPROVED	
0004						
PROJECT#		 INFINITY AUTOMATION SYSTEMS PVT. LTD. WORK : S NO.202/A, MIDHALL BANGLORE HIGHWAY, N/56 JSPHENGES COLLEGE, HATHANODE PUNE - 410303				
421082						
TITLE :-		Housing to stud screw assembly LH & RH, (YFS Standard Trunk LH/RH)				
SCALE : A/15	QTY : 01 No.	SHEET : 11 of 11	Dwg NO :- 421082		REV:- 00	