


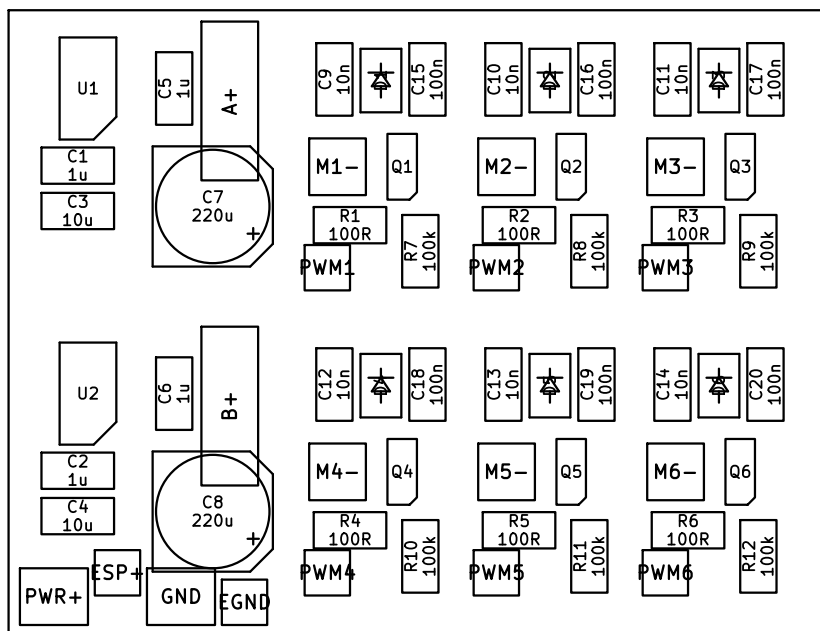

PWR+ = SWITCHED_SYSTEM+ from the external master switch (never raw BAT) GND = system ground
 ESP+ = ESP_SW_BAT+ switched battery to the XIAO BAT pad (NOT 3.3 V) EGND = ESP32 ground
 A+ = motors 1-3 positive (HAPTIC_3V3_A) B+ = motors 4-6 positive (HAPTIC_3V3_B) Mn- = motor n negative
 C7/C8: + pad marked D1-D6: cathode bar towards the 3.3 V rail R: 100R gate / 100k pulldown