
USER MANUAL PHONERLITE

CALL BETWEEN EXTENSIONS

Step 1: Enter the extension number you want to call in "Destination number".

Step 2: Press "Enter" or icon ____.

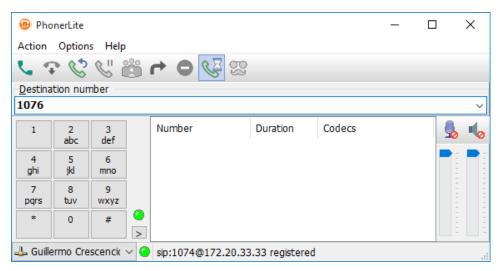


CALL EXTERNAL NUMBERS.

Step 1: Enter the extension number you want to call in "Destination number".



Step 3: Enter provided PIN followed by the # key.

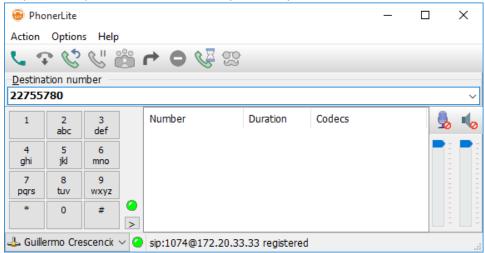


VOICEMAIL

Step 1: Enter *97 in "Destination number".


Step 2: Press "Enter" or icon -.

Step 3: Enter provided voicemail password followed by the # key.

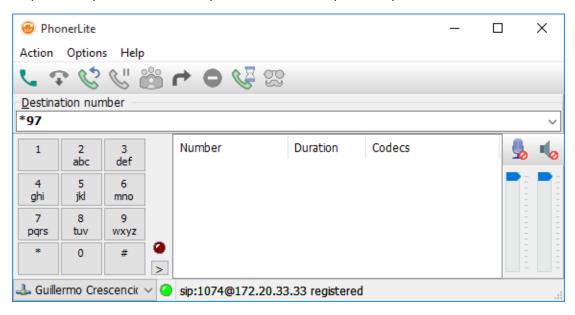

CALL ON HOLD

To place a call on hold or resume a previously set call on toggle press the icon ...

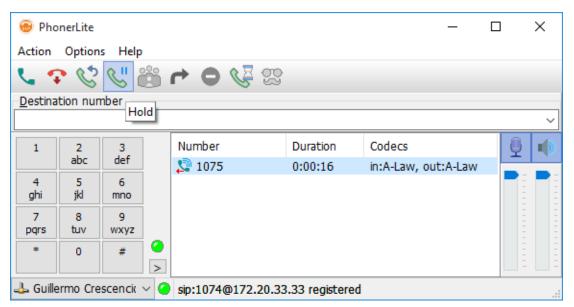


CALL TRANSFER.


To transfer a call to another extension or external telephone number:

Step 1: Enter the extension number or telephone number to which the call is transferred in "Destination number".

Step 2: Press "Enter" o icon .

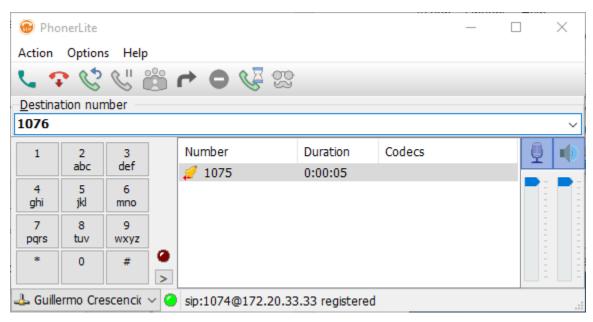

Step 3: Right click on the entered number and select the "Call Transfer" option.

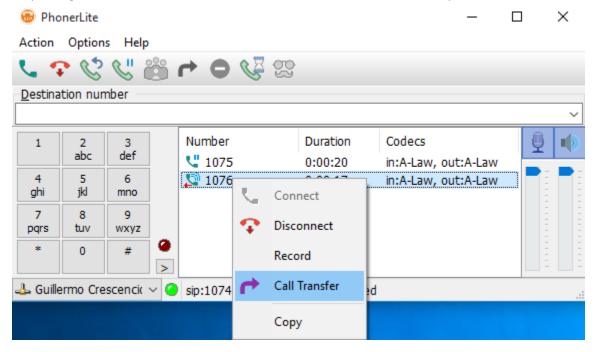


CONFERENCE

Step 1: Press the icon .

Step 2: Enter the extension number or telephone number to be added to the call in "Destination number".

Step 3: Press "Enter" or icon

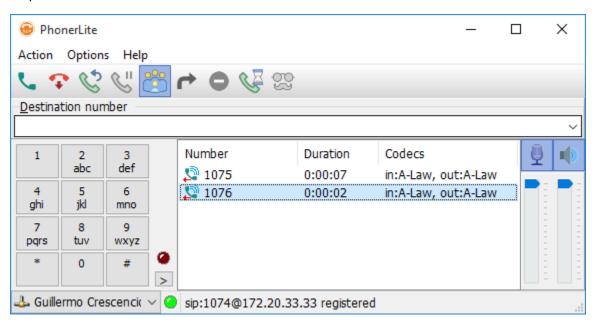

FORWARDING

Step 1: Press the icon



Step 2: Enter the number to which the calls are forwarded.

