# FTA-850 programmer: user manual

A programmer for the Yaesu FTA-850L, FTA-750L, FTA-550L and FTA-450L air band handhelds. It reads the radio's memory over USB, lets you edit the memory book, routes, weather channels and setup menus on screen, looks up airports and navaids to add, downloads the GPS log, and writes the result back. A command line tool does the same without a window.


1. Getting started
2. Putting the radio in CP mode
3. The window
4. Working with the image
5. The memory book
6. The station finder
7. Routes
8. Weather channels
9. Setup
10. GPS and the logger
11. The image page
12. Writing to the radio
13. The models
14. The command line tool
15. Keyboard reference
16. Files and folders
17. When something goes wrong
18. Index


## 1. Getting started

Build it with `make` in the project folder; it needs the AMI tool kit in `~/projects/amitk` (or `AMIDIR=...`). `make install` puts "FTA-850" and "FTA-850 (simulated)" in the application menu.

```
cd ~/projects/yaesu_FTA-850
make
./fta850              # find the radio on USB
./fta850 -p /dev/ttyACM1
./fta850 --sim        # no radio: a simulated FTA-850 with sample memories
./fta850 --sim 750    # a simulated FTA-750 (or 550, 450)
```

On Linux your account has to be in the `dialout` group to open the port; the status bar says so if it is not.

The window opens sized from the console font (`console_points` in `ami.cfg`, 11 points at the display's DPI unless set), and everything in it scales when you resize the window. Make

it bigger or smaller as you like; raise `console_points` to make it bigger from the start.

The simulator is a good way to learn the program: every page works on a made up radio, nothing you do reaches hardware, and the station finder works the same.

## 2. Putting the radio in CP mode

The radio only talks to the computer in its programming mode, which Yaesu calls CP mode:


1. Plug the USB cable into the DATA jack under the rubber cover on the right side.
2. Switch the radio off.
3. Hold a key and switch it on: **SQL** on an FTA-850, **MENU** on an FTA-750, 550 or 450. The radio beeps and its screen says CP MODE.

The panel's drawn radio shows what it sees. When the radio is on but in its normal mode the drawn screen says NOT IN CP MODE and the SQL key blinks; clicking that key shows the instructions for your model. When the session is up the screen says the model and firmware, for example "FTA-850, Firmware 02.02.00".

The program tells the models apart by reading a model code out of the radio at the start of the session, so there is nothing to choose. (All four report themselves the same way on USB, and an FTA-850 even calls itself an FTA-750 there, so the USB name cannot be trusted.)

When you are done, switch the radio off and on again to use it normally.

## 3. The window

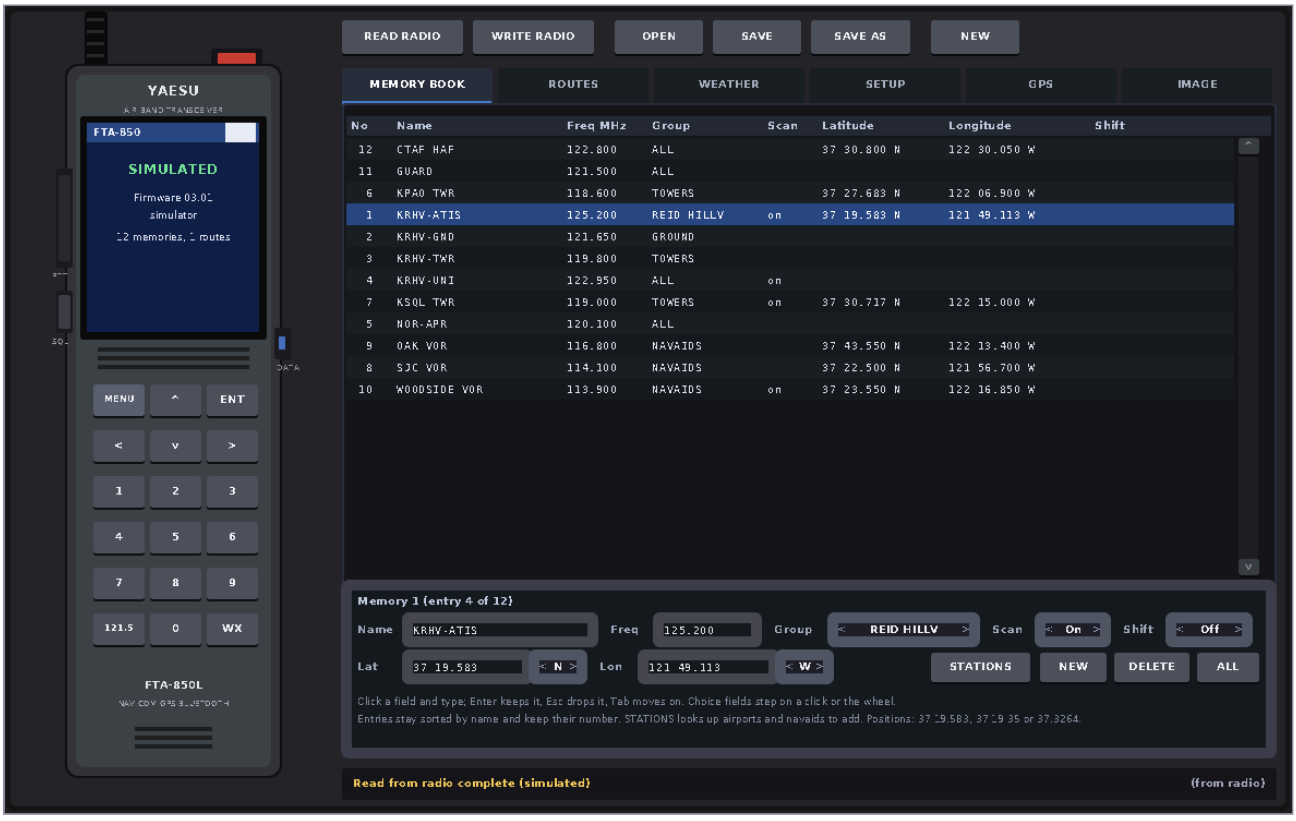

- **Left**: a drawing of the radio. Its screen is the link status: looking for the radio, not in CP mode, connected, or the progress of a transfer.
- **Top**: READ RADIO, WRITE RADIO, OPEN, SAVE, SAVE AS, NEW, and beside NEW the model a new image is for. CANCEL appears during a transfer.
- **Tabs**: MEMORY BOOK, ROUTES, WEATHER, SETUP, GPS, IMAGE. A tab a model does not have (ROUTES on the 750 family) is greyed.
- **Bottom**: the status bar. Left, the link status or the last message; right, the file the image came from, with `*` when it has unsaved changes, or "(from radio)".

Everything you edit lives in an *image*: a copy of the radio's whole configuration memory. READ RADIO fills it from the radio, OPEN from a file, NEW with factory defaults. The pages edit the copy. Nothing reaches the radio until WRITE RADIO.

Text fields: click one and type. Enter keeps the change, Esc drops it, Tab moves to the next field. Choice fields (the ones with `<` and `>`) step to the next value when clicked in their right half, the previous in their left half; the mouse wheel steps them too. Lists scroll with the wheel, the scroll bar, PageUp and PageDown, Home and End; Up and Down move the chosen row.

Buttons that do something hard to undo (WRITE RADIO, ERASE, ALL, FACTORY, and OPEN, NEW or READ RADIO when there are unsaved changes) ask to be pressed twice: the first press turns them red and says CONFIRM for four seconds.

## 4. Working with the image

| Button | What it does |
|---|---|
| READ RADIO | Fetches the radio's memory into the panel. 32 kB on an FTA-850 (about 30 s), 16 kB on the others. Replaces what was loaded. |
| WRITE RADIO | Programs the panel's image back. See Writing to the radio. |
| OPEN | Loads a `.dat` file: one saved here, or one from Yaesu's YCE46 or YCE01 software, which use the same format. The model comes from the file. |
| SAVE / SAVE AS | Writes the image to a `.dat` file. SAVE reuses the name it was opened from or asks for one. |
| NEW | A factory default image for the model shown beside the button: no memories, everything as delivered. The choice follows the connected radio once it is known; click it to make an image for another model. |
| CANCEL | Stops the transfer in progress. The image is then incomplete and should be read again. |

Always SAVE a copy of the first read from a radio before changing anything, so you can put it back.

## 5. The memory book

The radio's memories: 400 on the FTA-850, 200 on the others, each with:

- **Name**: 14 characters on the FTA-850, 15 on the others. Letters, digits, space and `* + , / & - [ ] .`.
- **Freq**: a COMM channel, 118.000 to 136.975 MHz, or on models with a NAV band a NAVI channel, 108.000 to 117.975 MHz, in 25 kHz steps. With the 8.33 kHz step switched on in SETUP, the 8.33 kHz channel numbers the radio shows (xxx.005, .010, .015, .030, .035, .040 ...) are accepted too. Type it as `121.5`, `121.500` or `121500`. An entry may have no frequency if it has a position: that makes it a waypoint.
- **Group**: ALL or one of the nine groups named on the SETUP page. On the 750 family group 1 is always FLAG.
- **Scan**: whether the memory is in the memory scan.
- **Shift**: the spurious shift the radio offers for a channel with interference.
- **Lat / Lon**: the position, for the radio's navigation functions and for routes. Enter degrees and minutes (`37 19.583`), degrees minutes seconds (`37 19 35`) or decimal degrees (`37.3264`); the hemisphere is the choice beside the field. Clear the field to remove the position. The FTA-450 keeps no positions.
- **RWY** (750 family only): the runway true course, `310` or `310.50`.


NEW adds an entry and puts you in its name; DELETE removes the chosen one; ALL, pressed twice, empties the whole book and the routes. STATIONS opens the station finder, below.

Entries stay sorted by name, as Yaesu's software keeps them, and each keeps its **memory number**, the number in the first column, which is what the radio shows and what routes refer to. A new entry gets the lowest free number. A memory a route uses cannot be deleted; change the route first.

An entry that is not complete (no name, no frequency and no position, a bad frequency) is explained in orange under the editor, and WRITE RADIO refuses an image that has one.

## 6. The station finder

STATIONS on the memory page, or the `f` key, opens a second window that looks up airports, heliports, seaplane bases and navaids with their frequencies and positions, from the OurAirports database (public domain, https://ourairports.com/data/, kept in the `data` folder; `make data` fetches fresh copies).

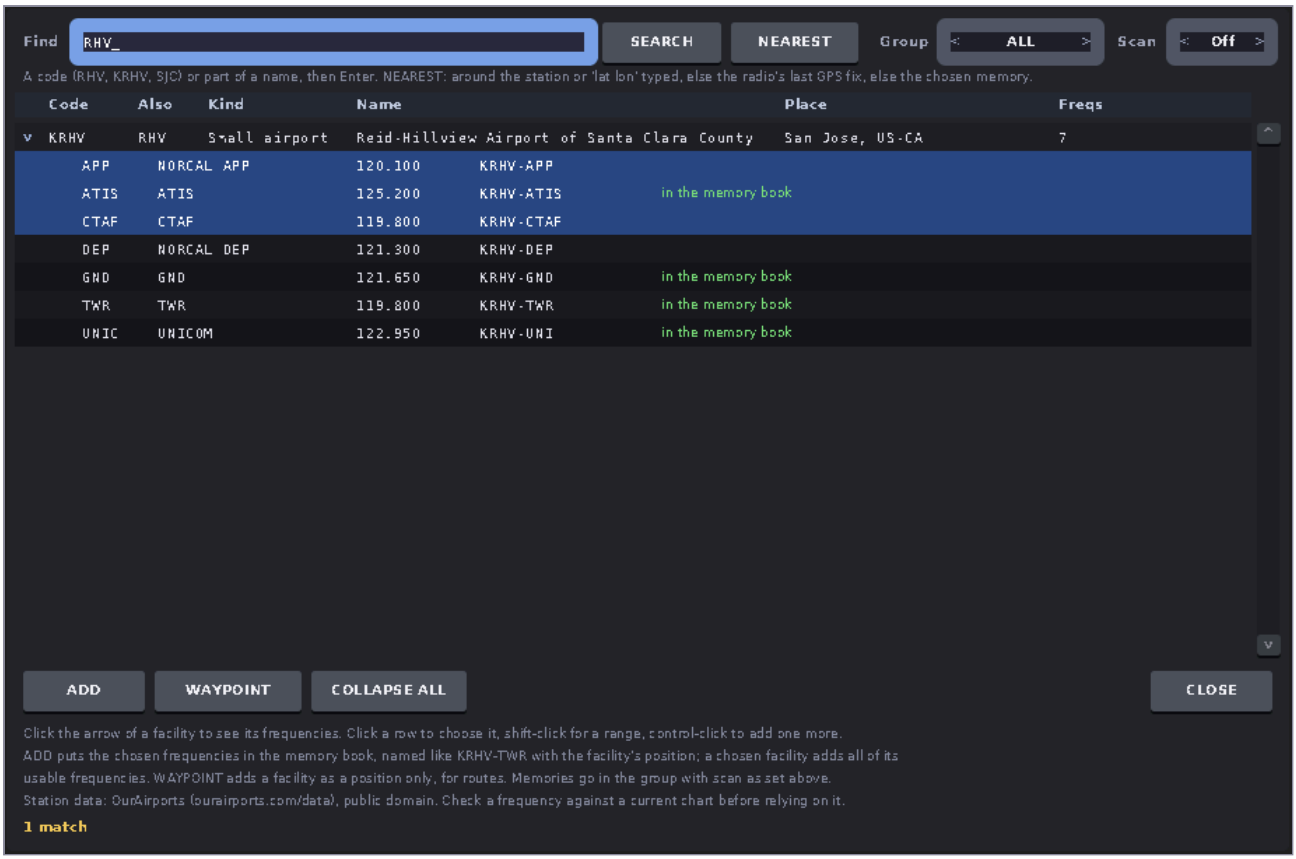


**Searching.** Type a code or a name in the Find field and press Enter (or SEARCH):


- A three or four letter code: `RHV`, `KRHV`, `SJC`. Exact matches come first and are opened to show their frequencies.
- Part of a name or a town, three letters or more: `reid`, `san jose`. Each facility shows closed; the `>` arrow in front of it (or Right with it chosen) opens it, EXPAND ALL opens everything.

The list is a tree: a facility row with its code, kind, name, place and how many frequencies it has, and under it one row per frequency with its type (TWR, GND, ATIS, CTAF, UNICOM, APP, DEP, AWOS ...), description, frequency, the memory name it would get, and a note when it is already in the memory book, outside the radio's bands, or needs the 8.33 kHz step.

**Nearest.** NEAREST lists the 400 closest stations with their distance in nautical miles, around the first of these it has:

1. a station code or a `lat lon` pair typed in the Find field;
2. the radio's last GPS fix, if a log has been read in this session (it reads the log from the radio for you when the radio is connected);
3. the position of the memory chosen on the memory page;
4. this computer's position, as the GPS page's LOCATE finds it (see below), marked approximate.

The status line at the bottom of the window says which one it used.

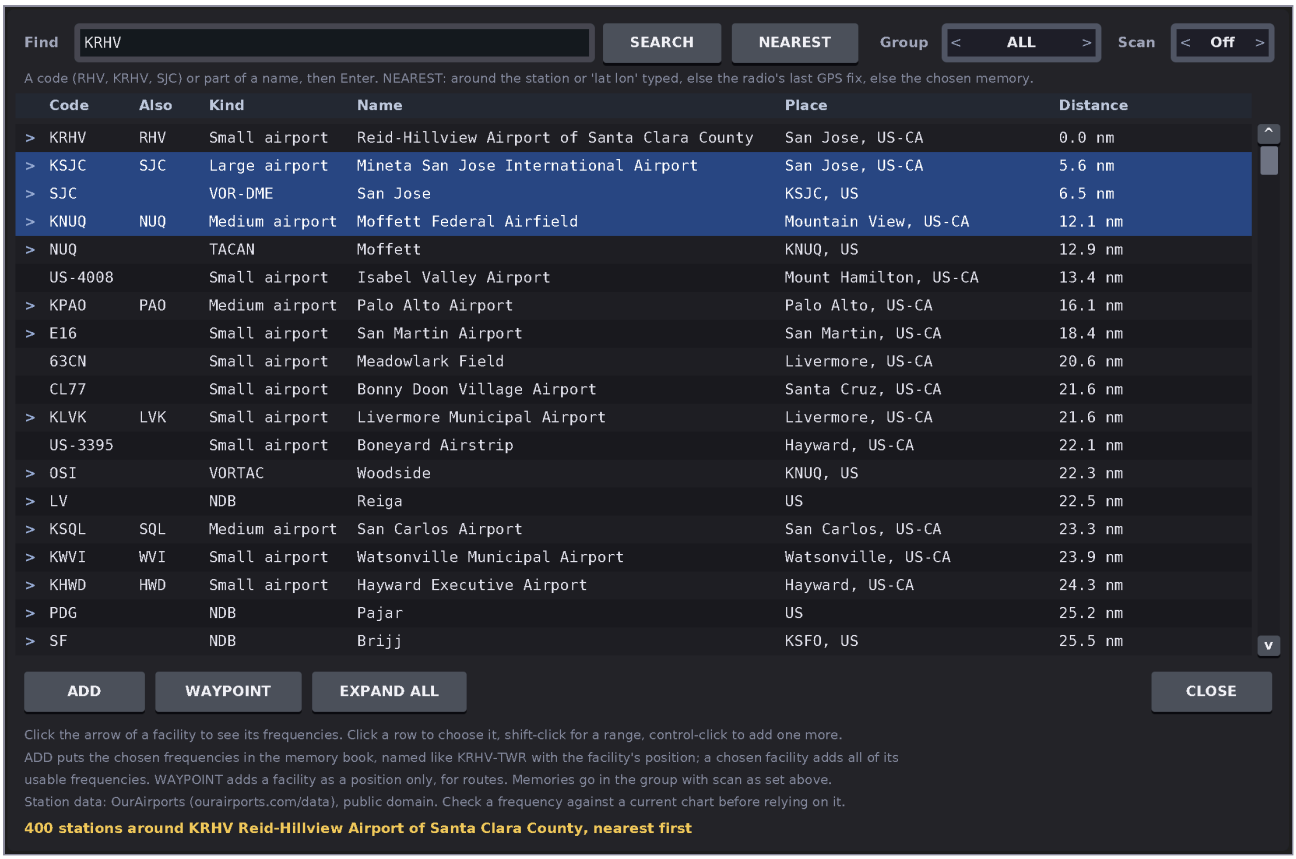


**Choosing and adding.** Click a row to choose it (it turns blue). The second mouse button adds to the choice: click another row with it and everything from the last click to that row is chosen as well; click a row that is already chosen on its own with it to unpick it. Up and Down move the choice. Then:


- **ADD** puts the chosen frequencies in the memory book, named after the facility and the type, `KRHV-TWR` style (`UNICOM` becomes `UNI`, `VOR-DME` and `VORTAC` become `VOR`), each with the facility's position. A chosen facility row adds all of its usable frequencies at once. What is already in the book, outside the bands, or an 8.33 kHz channel while that step is off is skipped, and the status line says what happened.
- **WAYPOINT** adds the chosen facility as a position only, no frequency, which routes can use.
- **Group** and **Scan** at the top set what the new memories get.

The main window needs an image loaded (READ RADIO, OPEN or NEW) before ADD lights; the status line says so otherwise. Esc or CLOSE shuts the finder.

The data is volunteer maintained. Check a frequency against a current chart or supplement before relying on it in the air.

## 7. Routes


FTA-850 only. Up to 40 routes, each a name, a group, a start memory, a destination memory and up to 30 via points, all memories that have a position.

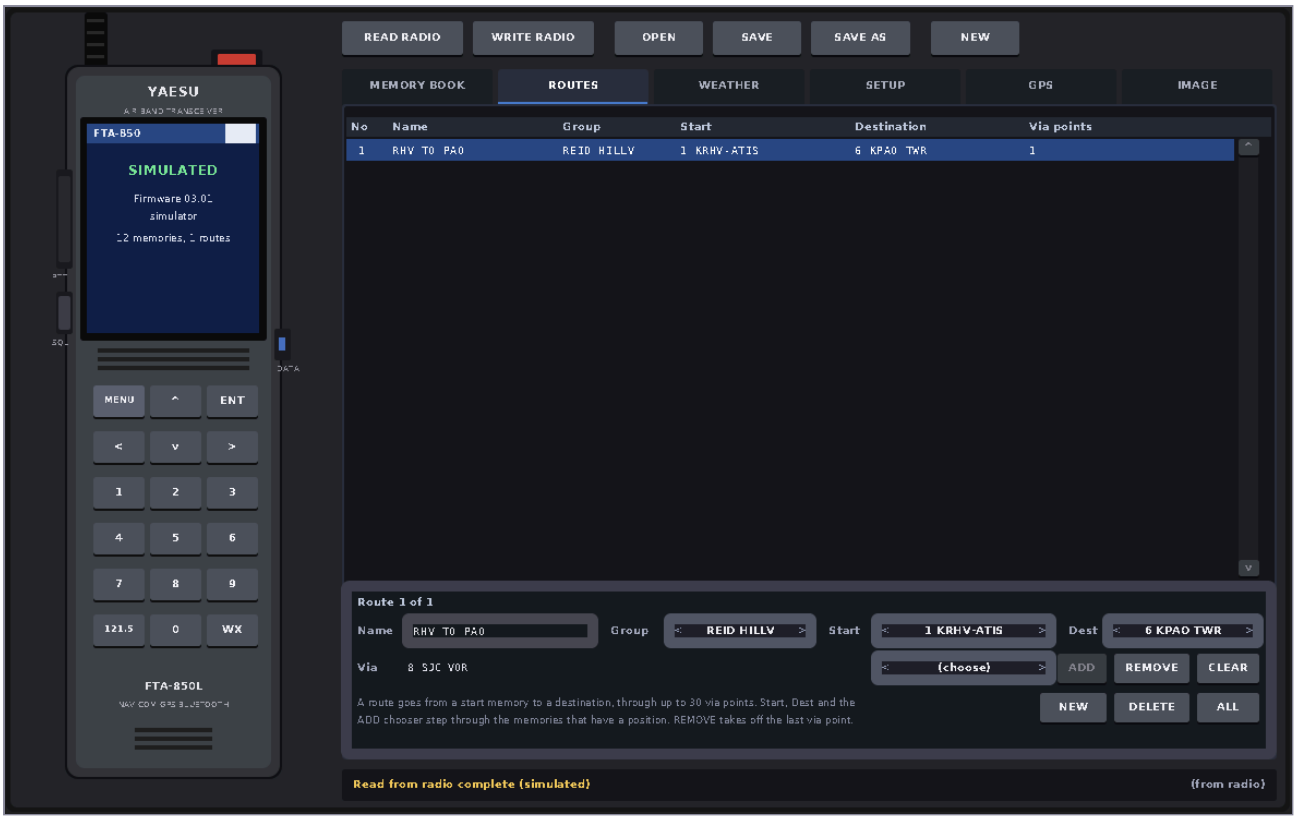


NEW adds a route; the Start and Dest choices step through the memories with positions; the ADD chooser beside them picks a via point and ADD appends it, REMOVE takes the last one off, CLEAR removes them all. DELETE removes the route, ALL (twice) every route. A route that is not complete is explained under the editor and blocks WRITE RADIO.

## 8. Weather channels

The ten NOAA weather channels have fixed frequencies; what you can change is each one's name and whether it is in the weather scan.

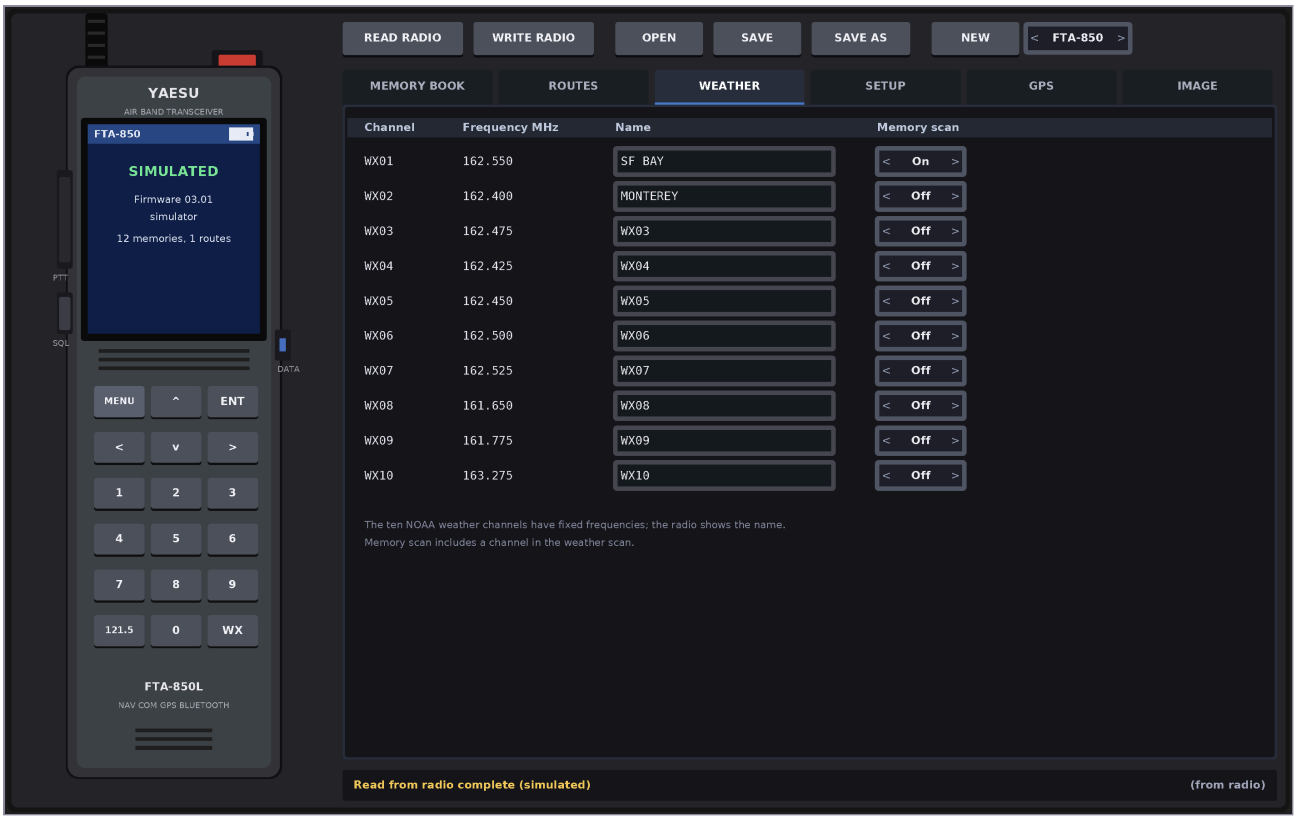


# 9. Setup

The Configuration and COMM Setup menus of the radio, the group names, and the resets.




The settings are the ones the radio's own menus offer, with the same names and values. Dual watch and split frequencies take a channel or nothing (clear the field) to switch them off. A setting a model lacks is not shown.

**Memory groups**: the nine group names, 10 characters each. On the 750 family group 1 is FLAG and cannot be renamed.

**Resets** put the factory values of one part of the image back: Function, Memory, COMM, GPS, Configuration, Factory on the FTA-850; the 750 family joins COMM and GPS. FACTORY must be pressed twice. A reset only changes the image; WRITE RADIO sends it, and a factory reset also writes the parts of the memory a normal write leaves alone (Bluetooth pairings on the FTA-850) and erases the GPS log.

## 10. GPS and the logger

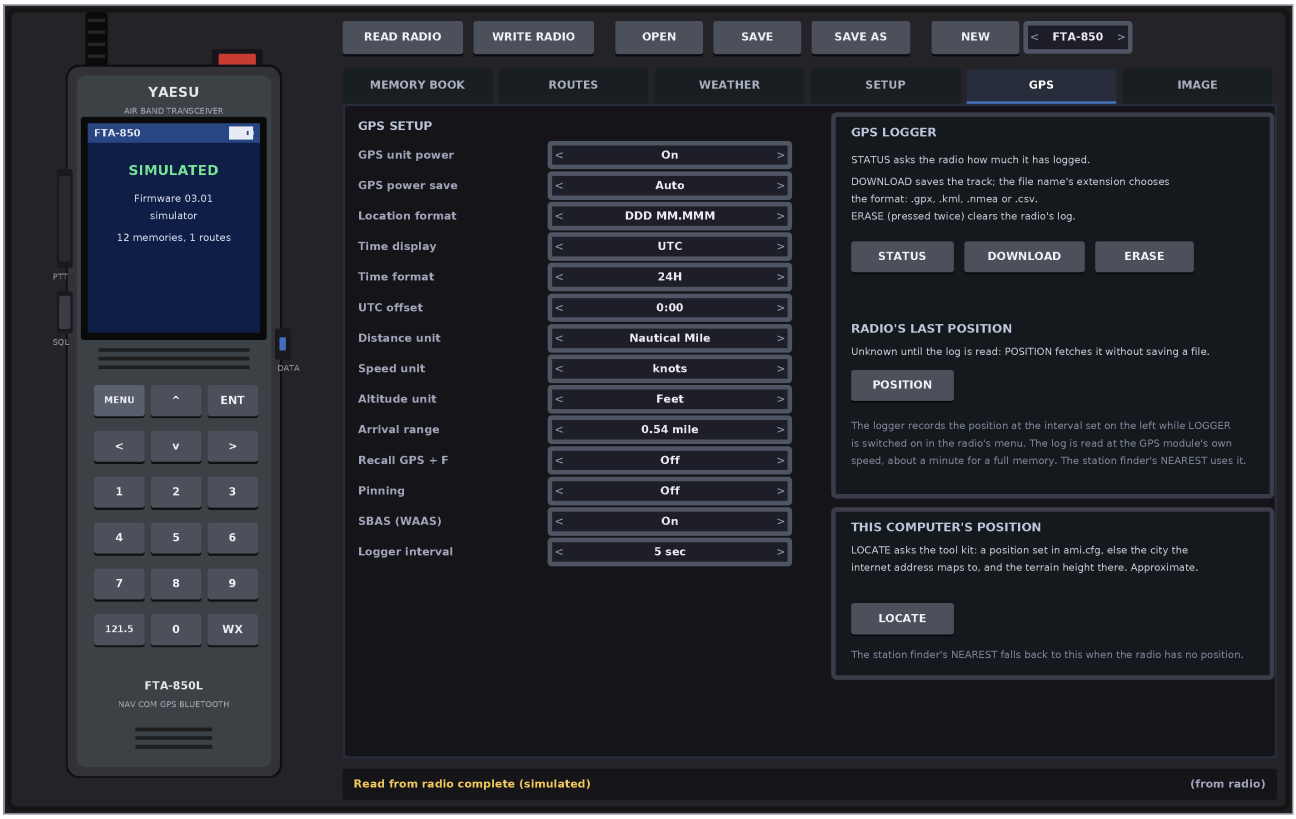



On the left, the GPS Setup menu (models with GPS). On the right:

**GPS LOGGER.** The radio records its position while LOGGER is switched on in its own GPS menu, at the interval set on the left. STATUS asks how many records it holds. DOWNLOAD saves the track to a file; the extension picks the format: `.gpx`, `.kml`, `.nmea` (as Yaesu's software writes) or `.csv`. ERASE, pressed twice, clears the log. The log is read at the GPS module's own pace, about a minute for a full memory.

**RADIO'S LAST POSITION.** The newest point of the log, with the time it was logged. POSITION reads the log from the radio without saving a file. The radio has no "where am I" command in CP mode, so this is the only source; a radio whose logger has never been on has none to give.

**THIS COMPUTER'S POSITION.** LOCATE asks the tool kit where the computer is: a position set in the services block of `ami.cfg` (`latitude`, `longitude`, `altitude`), or failing that the city its internet address maps to and the terrain height there, from public services, approximate and only on request. The figures are shown with where each came from; altitude is in feet. `location_lookup 0` in `ami.cfg` forbids the network. The station finder's NEAREST uses this when nothing better is known.

## 11. The image page

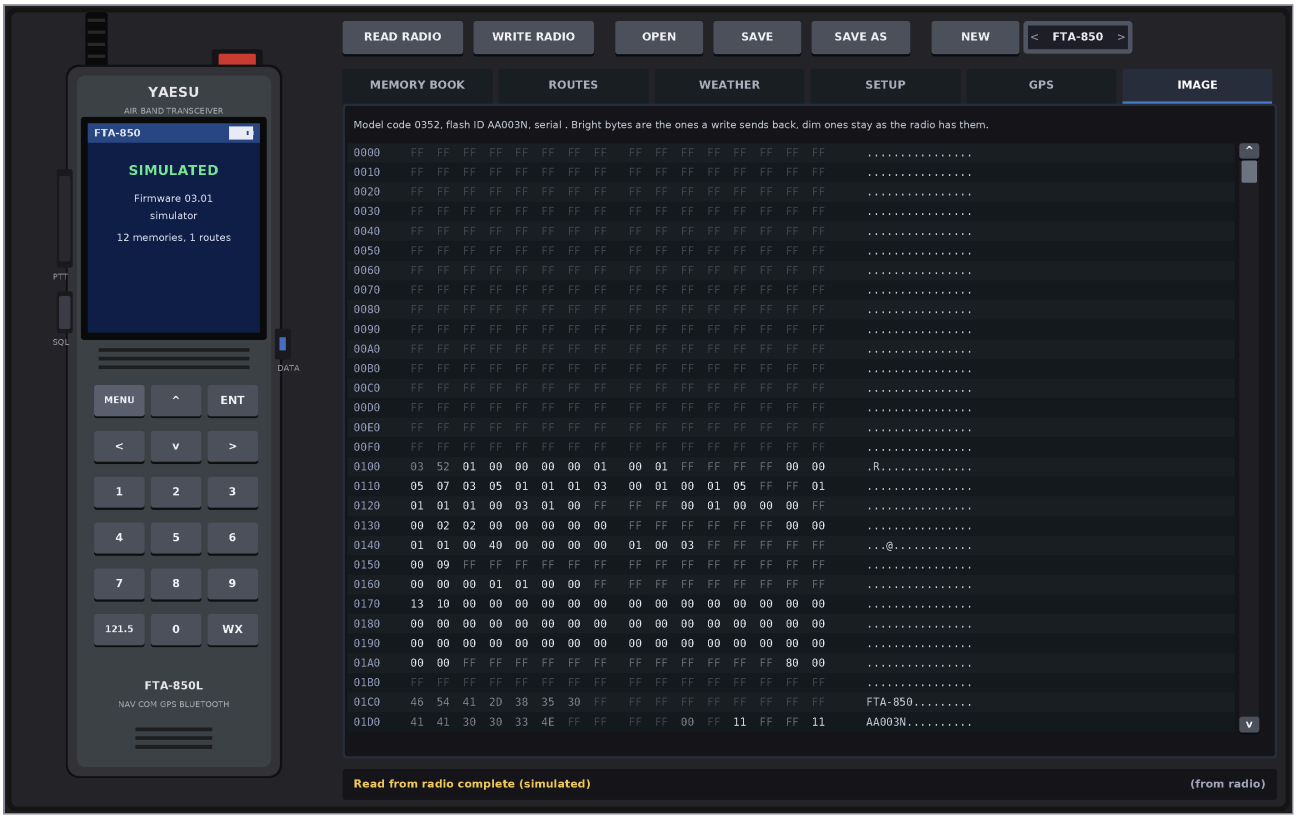


A hex dump of the whole image: address, bytes, and the printable characters, so names and the serial number can be read directly. Bright bytes are the ones WRITE RADIO sends; dim ones are left alone on a write (the radio's identity, calibration, Bluetooth pairings, unused parts). It is read only: use it to see what a read brought in, what a write will touch, or to compare two images.

## 12. Writing to the radio

WRITE RADIO, pressed twice, programs the image into the radio:

1. The image is checked: every memory and route complete, and the model the same as the radio's. An FTA-750 image is refused by an FTA-850 and the other way round, before anything is sent.
2. The radio's own model code is read and compared again.
3. The areas Yaesu's software writes are sent, 64 bytes at a time, with a status poll before each. The identity, calibration and (on the FTA-850) the Bluetooth pairings are never written, unless a factory reset is pending.


4. Switch the radio off and on again to use it.

If something goes wrong the status bar says what, and CANCEL stops a transfer. A radio left with a half written memory should be written again from a saved image.

On an FTA-850 the firmware has to be 2.01 or later to be programmed; the panel checks.

## 13. The models

| Model | Image | Memories | Names | Routes | GPS | NAV band | Positions | CP mode key |
|---|---|---|---|---|---|---|---|---|
| FTA-850L | 32 kB | 400 | 14 | 40 | yes | yes | yes | SQL |
| FTA-750L | 16 kB | 200 | 15 | no | yes | yes | yes, with a runway course | MENU |
| FTA-550L | 16 kB | 200 | 15 | no | no | yes | yes | MENU |
| FTA-450L | 16 kB | 200 | 15 | no | no | no | no | MENU |

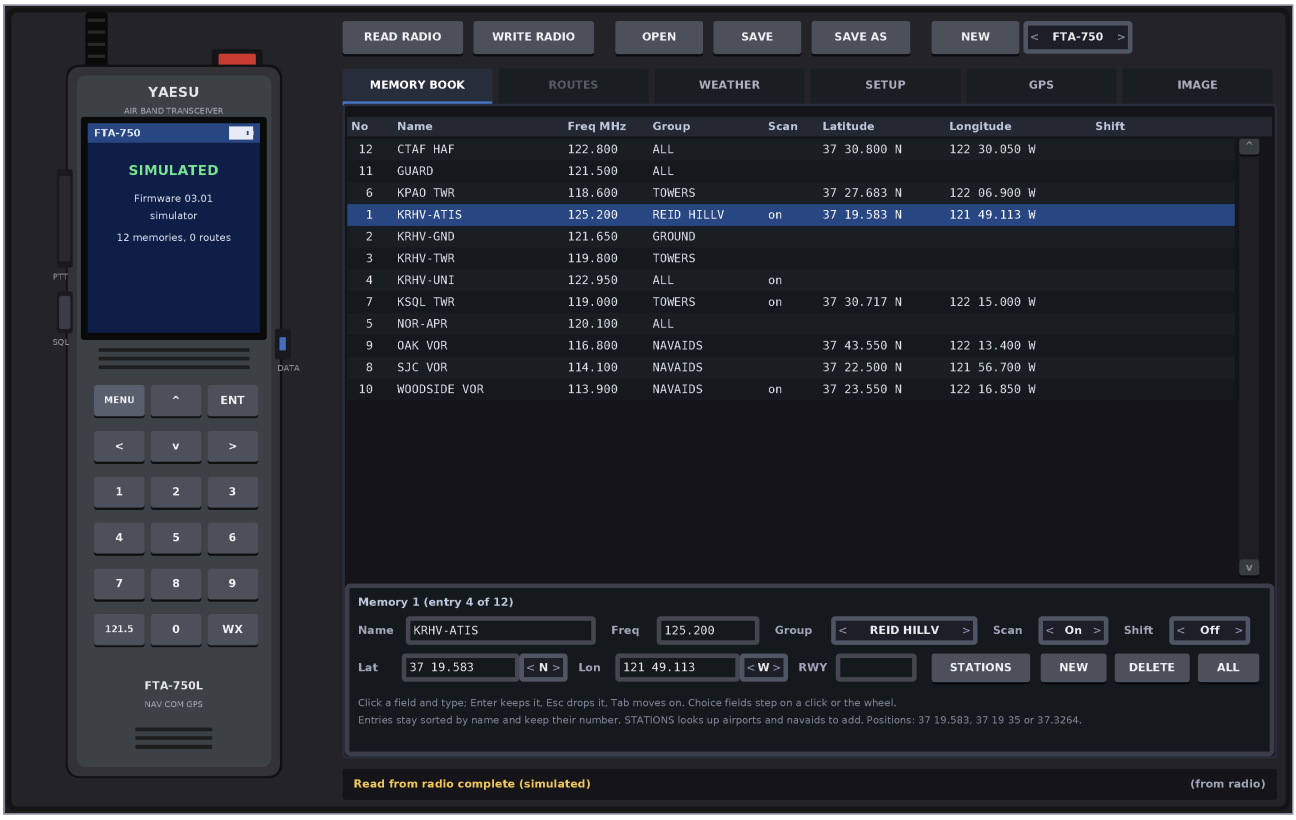


The FTA-850L has been read, edited and programmed on a real radio, and the logger worked on it too. The other three were built from Yaesu's YCE01 software and its default images and checked against the simulator only. On a real one: READ RADIO, SAVE the file, write it back unchanged, and only then edit.

Files from Yaesu's own programs open directly: YCE46's for the FTA-850, YCE01's for the others. Files saved here open in those programs too.

## 14. The command line tool

`fta850cli` works the link and the files without a window, for scripts and for checking a radio:

```
fta850cli info                      find the radio, show its model, mode and
firmware
fta850cli read radio.dat            read the radio into a file and list it
fta850cli write radio.dat           program the radio from a file
fta850cli show radio.dat            list a file: memories, routes, weather,
settings
fta850cli new radio.dat [750]       a factory default file (850 unless a model is
given)
fta850cli logstat                   how much the GPS logger holds
fta850cli log track.gpx             download the GPS log (.gpx .kml .nmea .csv)
fta850cli erase                     erase the GPS log
fta850cli search RHV                look up airports and navaids by code or name
fta850cli nearest KRHV              the stations around a station, "37.33
-121.82",
                                    or "here", this computer's position
fta850cli add radio.dat KRHV        add a station's usable frequencies to a file;
                                    "add radio.dat KSJC TWR,GND,ATIS -g 2 -scan"
                                    picks types, group and scan
```

`-p PORT` names the serial port, `--sim [850|750|550|450]` uses the simulator. Everything it prints about a radio comes from the same code the panel uses.

## 15. Keyboard reference

Main window:

| Key | Action |
|---|---|
| 1 to 6 | choose a page |
| r | READ RADIO |
| w | WRITE RADIO (twice) |
| o | OPEN |
| s | SAVE |
| n | NEW memory (memory page) or route (routes page) |
| f | the station finder |
| Delete | delete the chosen memory or route |
| Up, Down | move in the list |
| PageUp, PageDown, Home, End | scroll |
| Left, Right | change the chosen memory's group |
| Enter | edit the chosen memory's or route's name |
| Tab | next field while editing |
| Esc | drop the edit |

Station finder:

| Key | Action |
|---|---|
| typing, Enter | the query, search |
| Up, Down | move the choice |
| Left, Right | close or open the chosen facility |
| PageUp, PageDown, Home, End | scroll |
| Esc | drop a changed query, or close the window |

## 16. Files and folders

- `fta850`, `fta850cli`: the programs. `make install` adds menu entries that run `fta850` from this folder.
- `ami.cfg`: the tool kit's settings, with the window size (`console_points`) and the location keys described above.
- `data/`: the OurAirports station files and a note on their origin.
- `doc/`: this manual and the pictures.
- `.dat` files: images, 32 or 16 kB, the format Yaesu's software uses.

## 17. When something goes wrong

**"No radio found on USB."** The radio is off, not plugged into the DATA jack, or on a port the program does not look at (`-p PORT` names one). On Linux it appears as `/dev/ttyACM*` and `/dev/serial/by-id/usb-YAESU_...`.

**"No permission for /dev/ttyACM1."** Join the `dialout` group (`sudo usermod -aG dialout $USER`, then log in again).

**"Radio is on but not in CP mode."** See Putting the radio in CP mode. The status bar names the key.

**"Port open, radio not answering."** Another program may hold the port (a second copy of this panel, a terminal program, another panel that scans serial ports). Close it, or unplug and replug the radio.

**"Read from radio failed: no answer."** The same: something else is talking on the port, or the radio was switched off mid transfer.

**"The logger holds no data."** The radio's logger has never been switched on, or was erased. Switch LOGGER on in the radio's GPS menu, let it get a fix, and try again.

**ADD is greyed in the station finder.** Load an image first (READ RADIO, OPEN or NEW), then choose a row.

**"The radio is an FTA-850 and the image is for an FTA-750."** The file is from another model; NEW makes one for the right model.

**The window is tiny.** Raise `console_points` in `ami.cfg`, or just resize the window; everything scales.

## Index

The numbers are sections.


- 8.33 kHz step: 5, 9
- ADD (station finder): 6
- ALL (delete every memory): 5
- altitude, this computer's: 10
- AMI tool kit: 1
- ami.cfg: 1, 10, 16
- arrow keys: 15
- Bluetooth pairings: 9, 11, 12
- CANCEL: 4, 12
- choice fields: 3
- command line tool: 14
- CONFIRM, buttons pressed twice: 3
- console_points, window size: 1, 17
- CP mode: 2, 13, 17
- .csv log file: 10, 14
- .dat files: 4, 13, 16
- data folder, station files: 6, 16
- DELETE: 5, 7
- dialout group: 1, 17
- distance, nearest stations: 6
- dual watch frequency: 9
- ERASE (GPS log): 10

- EXPAND ALL: 6
- FACTORY reset: 9, 12
- firmware, version needed: 12
- FLAG group: 5, 9, 13
- frequency bands: 5, 13
- frequency types (TWR, GND, ATIS ...): 6
- frequency, entering: 5
- FTA-450L: 13
- FTA-550L: 13
- FTA-750L: 13
- FTA-850L: 13
- GPS log, downloading: 10, 14
- GPS position, the radio's: 10, 6
- .gpx log file: 10, 14
- group names: 9
- groups, memory: 5, 9
- hex dump: 11
- image: 3, 4, 11
- installing: 1
- keyboard: 15
- .kml log file: 10, 14
- LOCATE: 10, 6
- location_lookup: 10
- logger, GPS: 10
- memory book: 5
- memory number: 5, 7
- memory scan: 5
- MENU key (CP mode): 2, 13
- model, choosing for NEW: 4
- model, detecting the: 2, 13
- name, memory: 5
- NAV band: 5, 13
- NEAREST: 6
- NEW (image): 4
- NEW (memory, route): 5, 7
- .nmea log file: 10, 14
- OPEN: 4
- OurAirports: 6, 16
- port, serial: 1, 17
- POSITION (radio's last): 10
- positions, entering: 5
- READ RADIO: 4
- resets: 9
- routes: 7

- runway course (RWY): 5, 13
- SAVE, SAVE AS: 4
- scan, memory: 5
- scan, weather: 8
- SEARCH: 6
- second mouse button (choosing more): 6
- shift, spurious: 5
- simulator: 1, 14
- split frequency: 9
- SQL key (CP mode): 2, 13
- station finder: 6
- STATUS (logger): 10
- status bar: 3
- Tab key: 3, 15
- troubleshooting: 17
- USB: 2, 17
- via points: 7
- waypoint (memory without a frequency): 5, 6
- WAYPOINT: 6
- weather channels: 8
- window, resizing: 1
- WRITE RADIO: 4, 12
- YCE46, YCE01 (Yaesu software): 4, 13